


AX-330

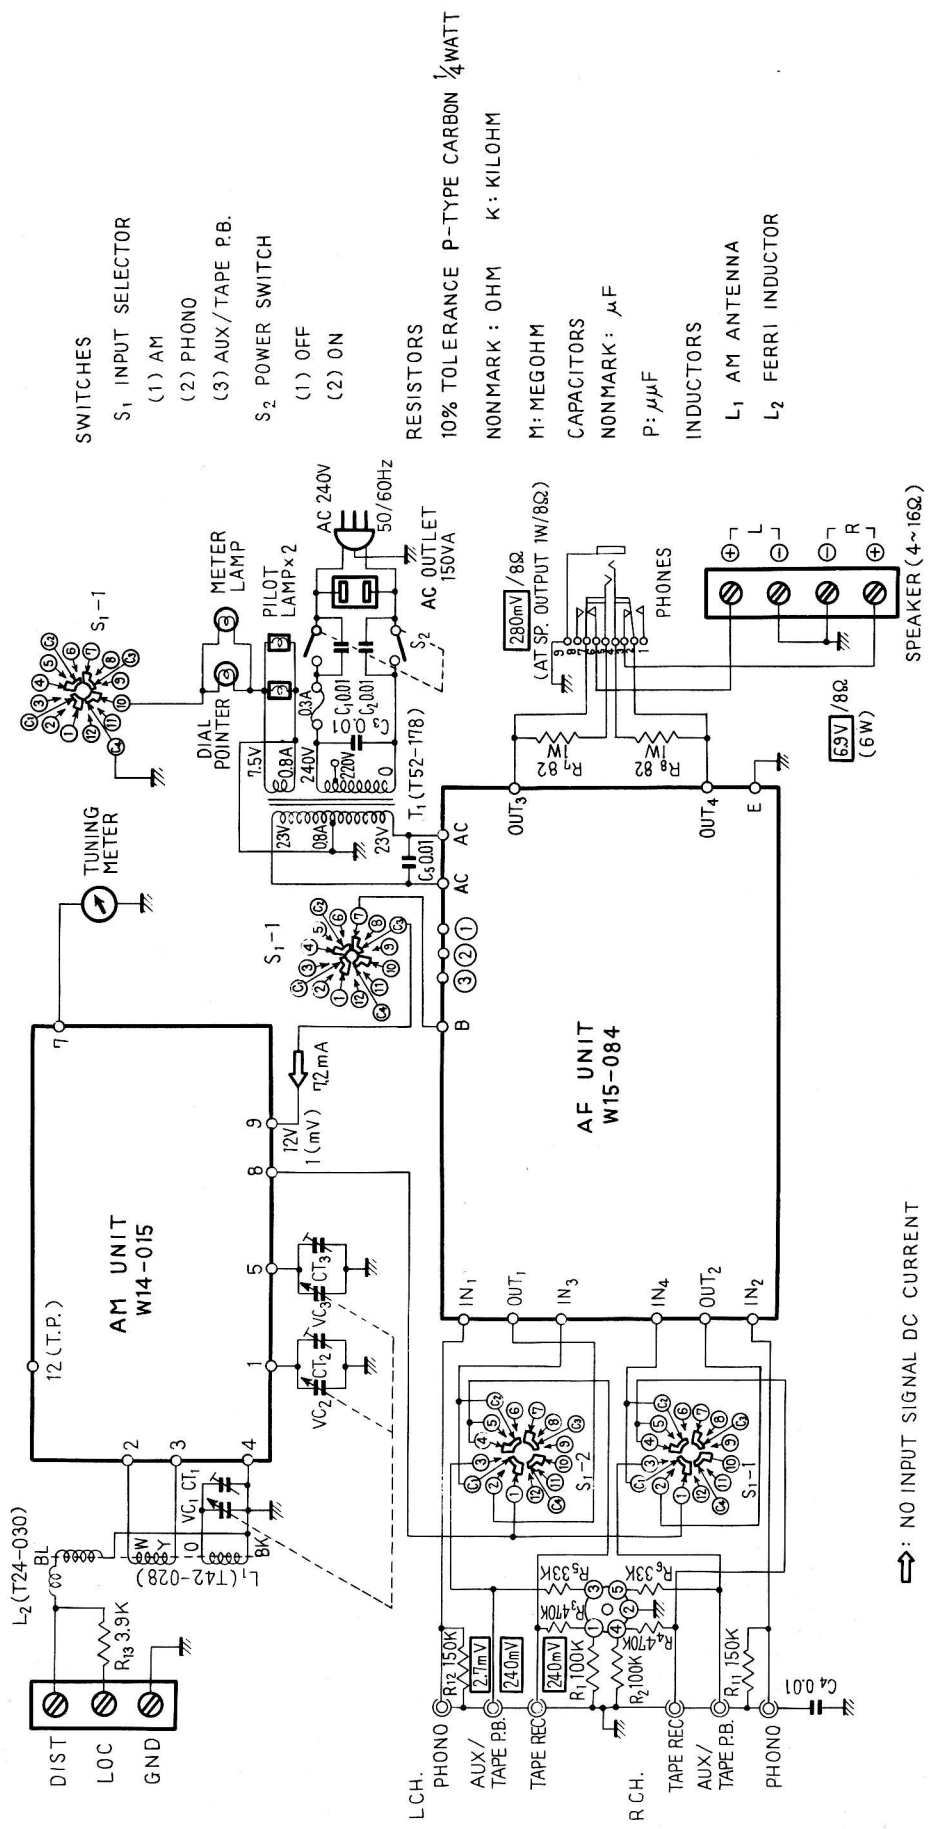

SWITCHES
 S₁ INPUT SELECTOR
 (1) AM
 (2) PHONO
 (3) AUX/TAPE P.B.

S₂ POWER SWITCH
 (1) OFF
 (2) ON

RESISTORS
 10% TOLERANCE P-TYPE CARBON 1/4WATT

NONMARK : OHM K : KILOHM

M : MEGOHM

CAPACITORS

NONMARK : μF

P : μμF

INDUCTORS

L₁ AM ANTENNA

L₂ FERRI INDUCTOR


⇨ : NO INPUT SIGNAL DC CURRENT

V : NO INPUT SIGNAL DC VOLTAGE

▭ : SIGNAL VOLTAGE AT 5W/8Ω (1KHz)


AM TUNER UNIT

W14-015

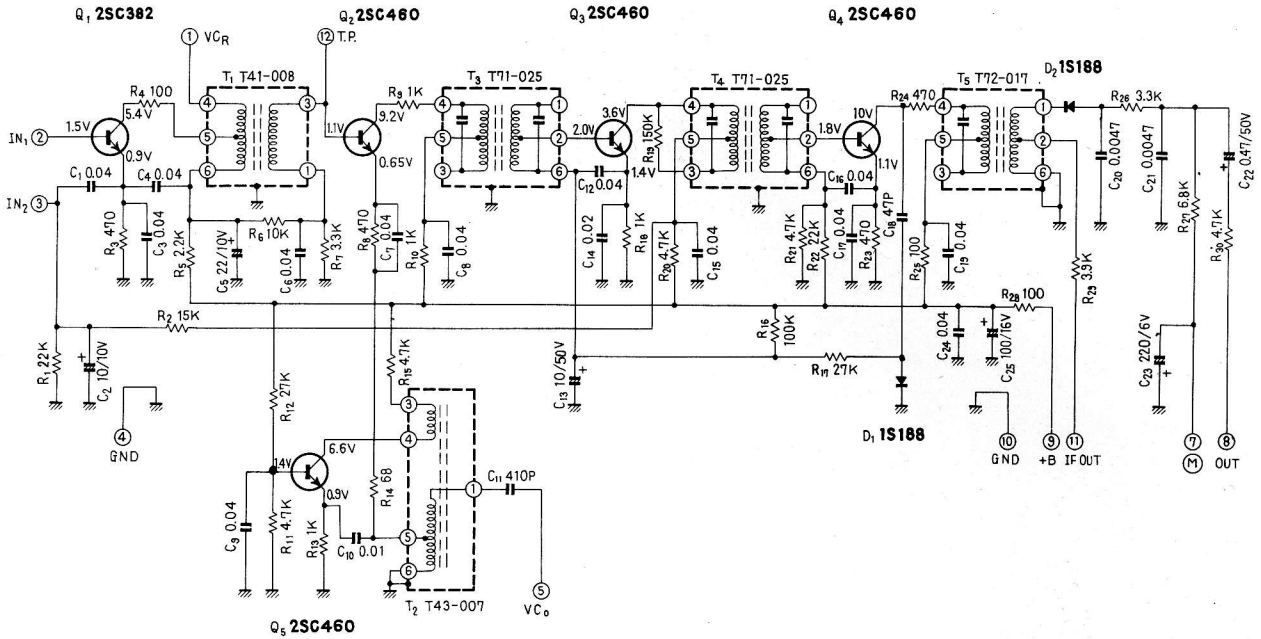

AF UNIT

W15-084

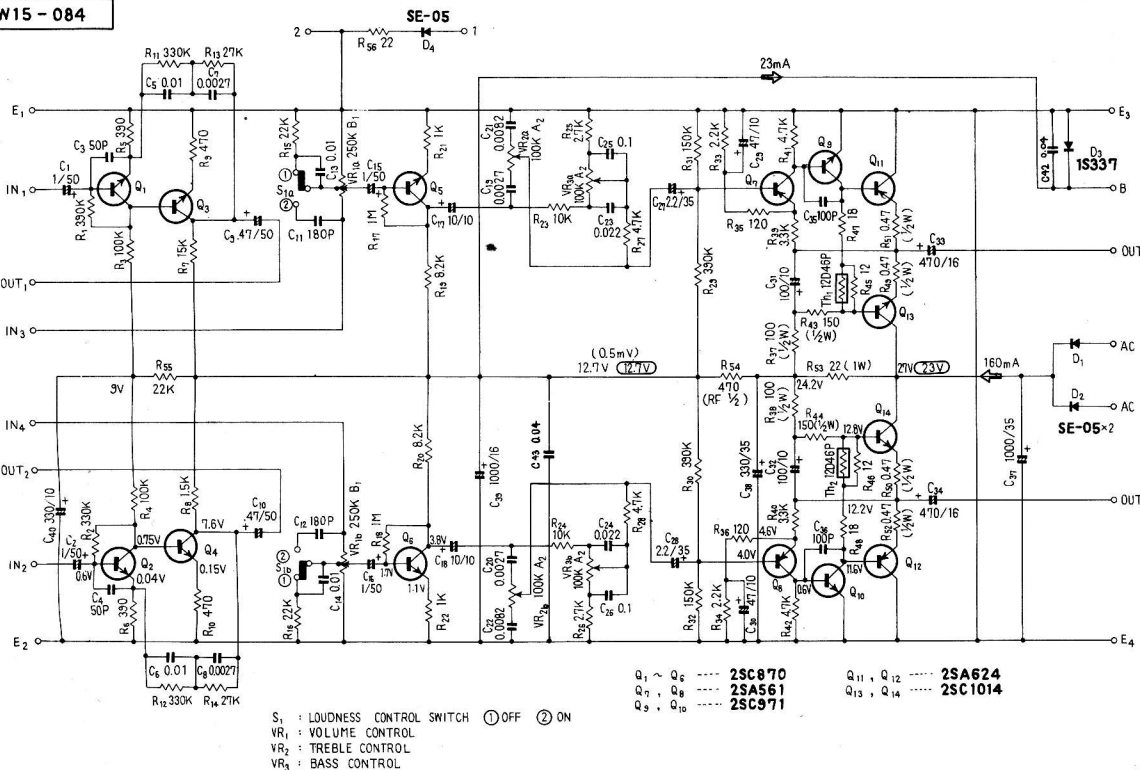

- Q₁, Q₂ 2SC870
- Q₃, Q₄ 2SA561
- Q₅, Q₆ 2SC971
- Q₁₁, Q₁₂ 2SA624
- Q₁₃, Q₁₄ 2SC1014

S₁ : LOUDNESS CONTROL SWITCH ① OFF ② ON
 VR₁ : VOLUME CONTROL
 VR₂ : TREBLE CONTROL
 VR₃ : BASS CONTROL