




CASSETTE TAPE DECK


CT-F6161


FV KCU


Sensing circuit ass'y RWR-025

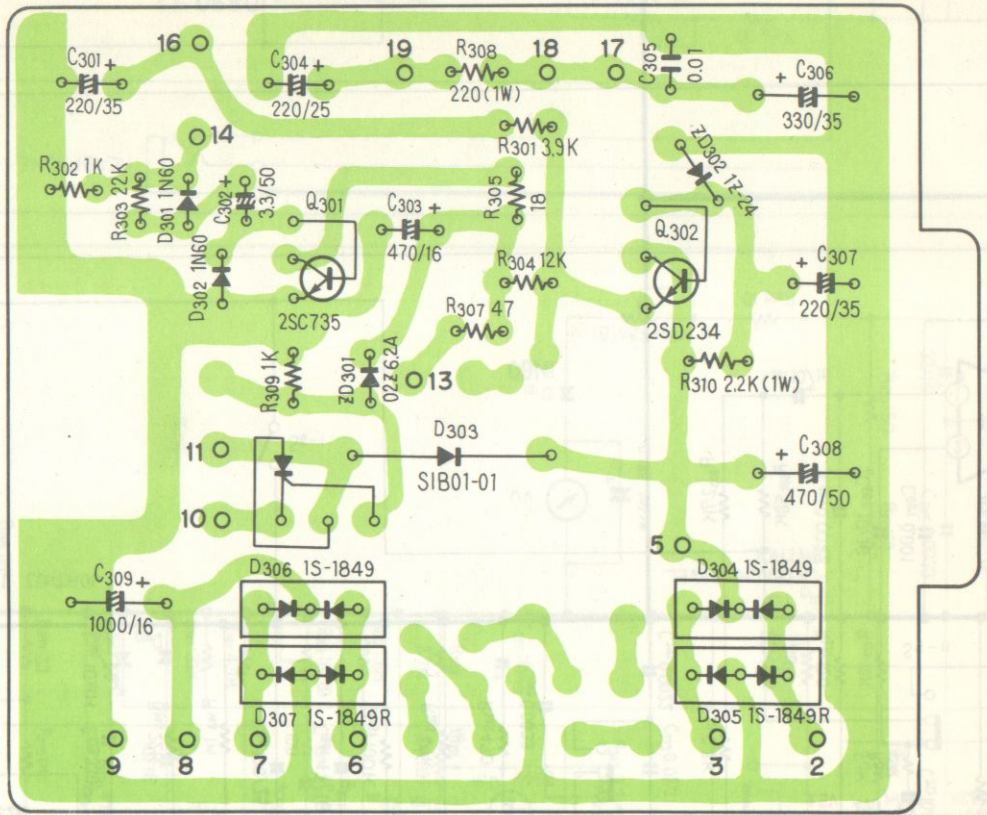


Switch ass'y RWS-023

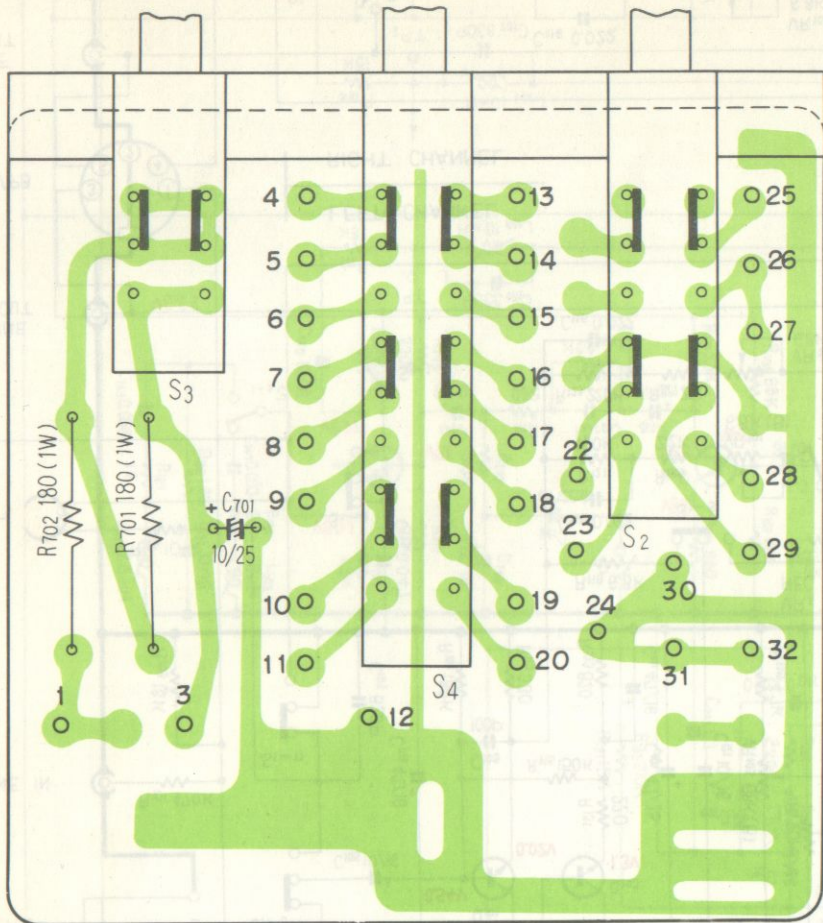

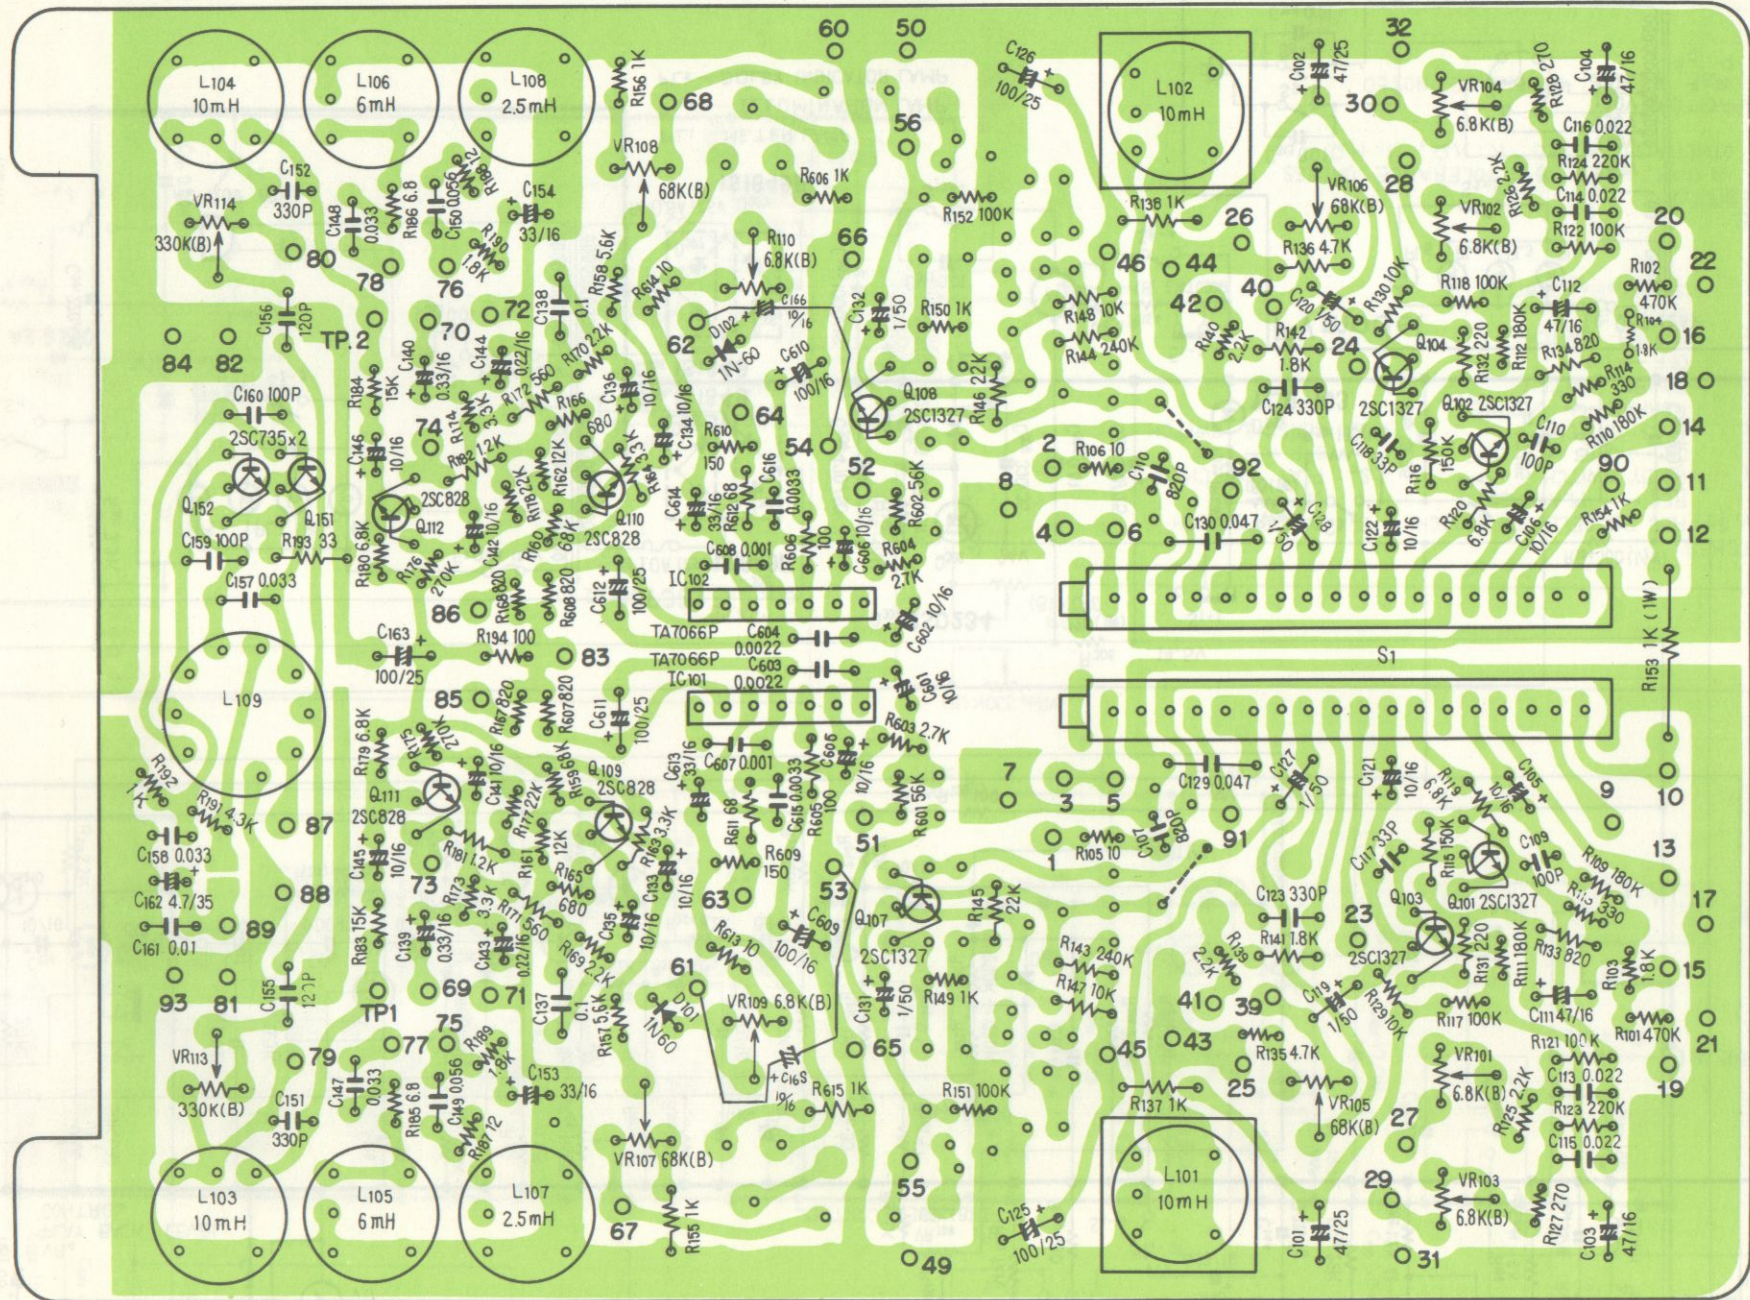

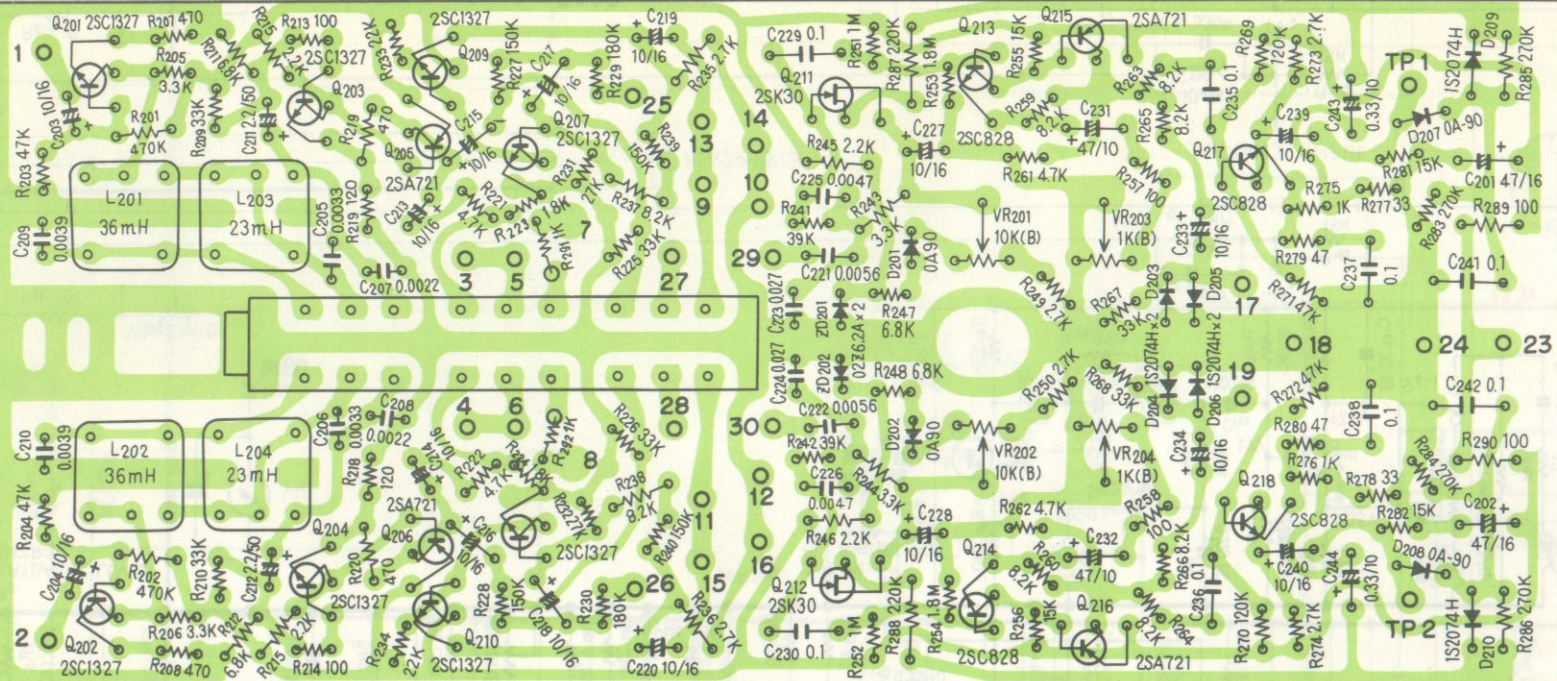


Q1-Q4, Q7, Q8 2SC1327 x 6
Q201-Q204 2SC1327 x 4
Q205, Q206 2SA721 x 2
Q207-Q210 2SC1327 x 4
Q211, Q212 2SK30 x 2
Q213, Q214 2SC828(H) x 2
Q215, Q216 2SA721 x 2
IC101, IC102 TA7066P x 2
Q217, Q218 2SC828(H) x 2
Q101-Q112 2SC828(H) x 4

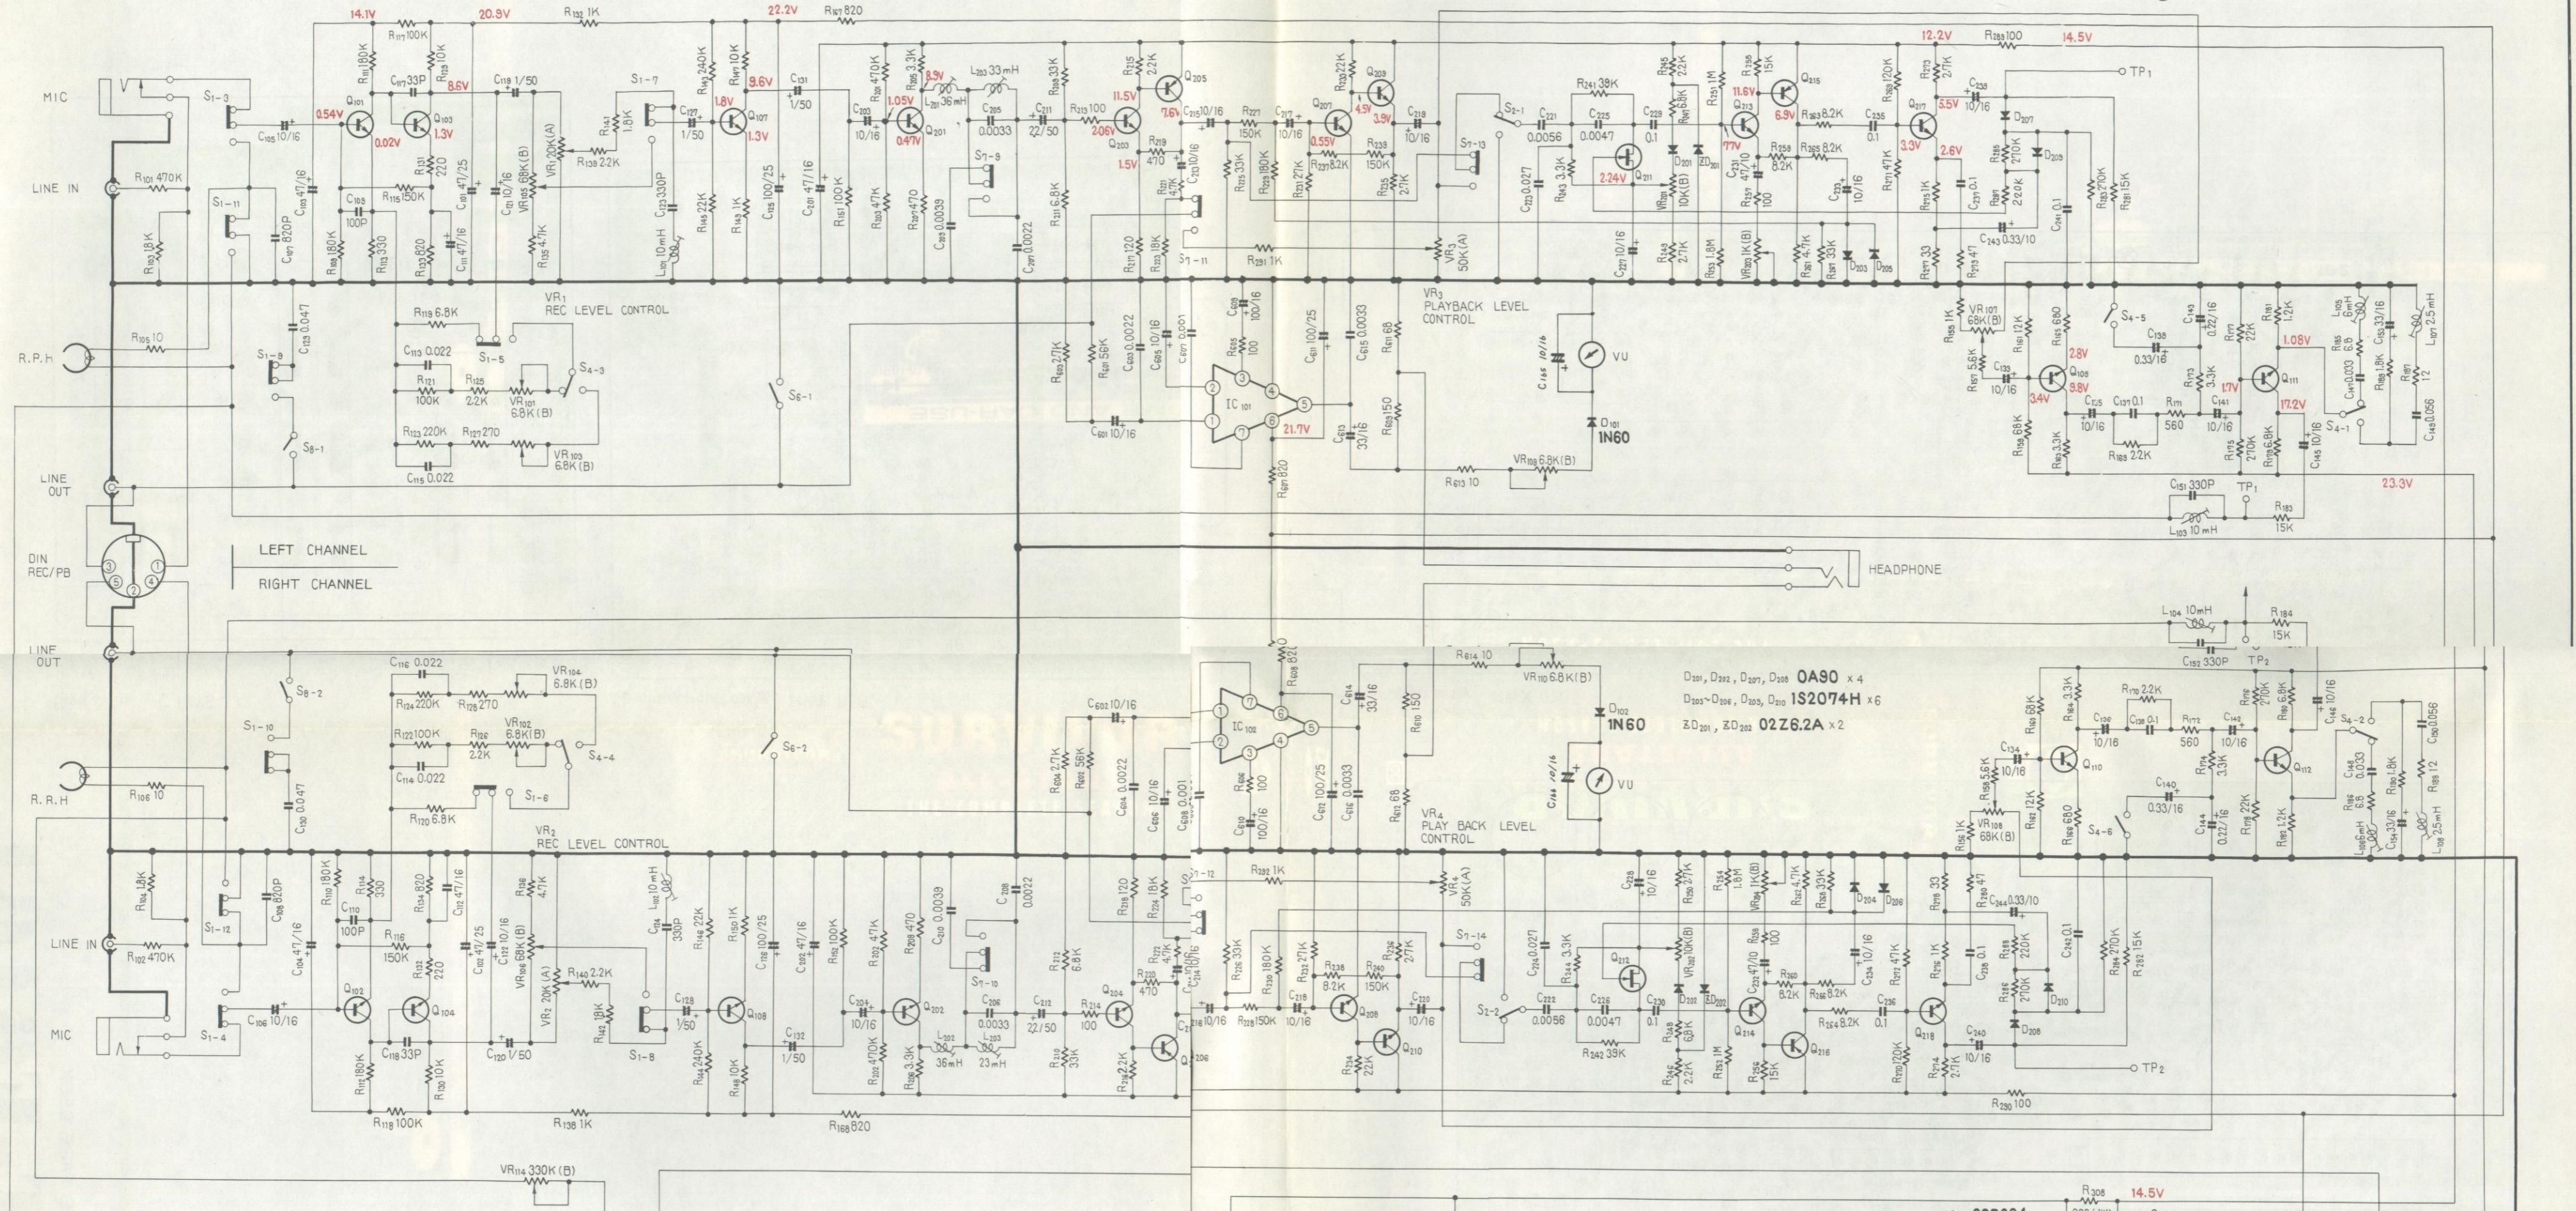

- SWITCHES:
- S1, S7: REC. P.B. SELECTOR SWITCH
OFF → ON
 - S2: DOLBY SWITCH
ON → OFF
 - S3: BIAS SWITCH
NORMAL → CHROME
 - S5: POWER SWITCH
OFF → ON
 - S6: MUTING SWITCH
OFF → ON
 - S8: SKIP (Cueing) SWITCH
 - S9: PAUSE SWITCH
OFF → ON
 - S10: PLAY SWITCH
OFF → ON
 - S11: SENSING SWITCH

NOTE:
RESISTOR
IN OHM, 1/4 W, ±5% TOLERANCE UNLESS
OTHERWISE NOTED K: KΩ, M: MΩ

CAPACITORS
IN μF UNLESS OTHERWISE NOTED
P: pF

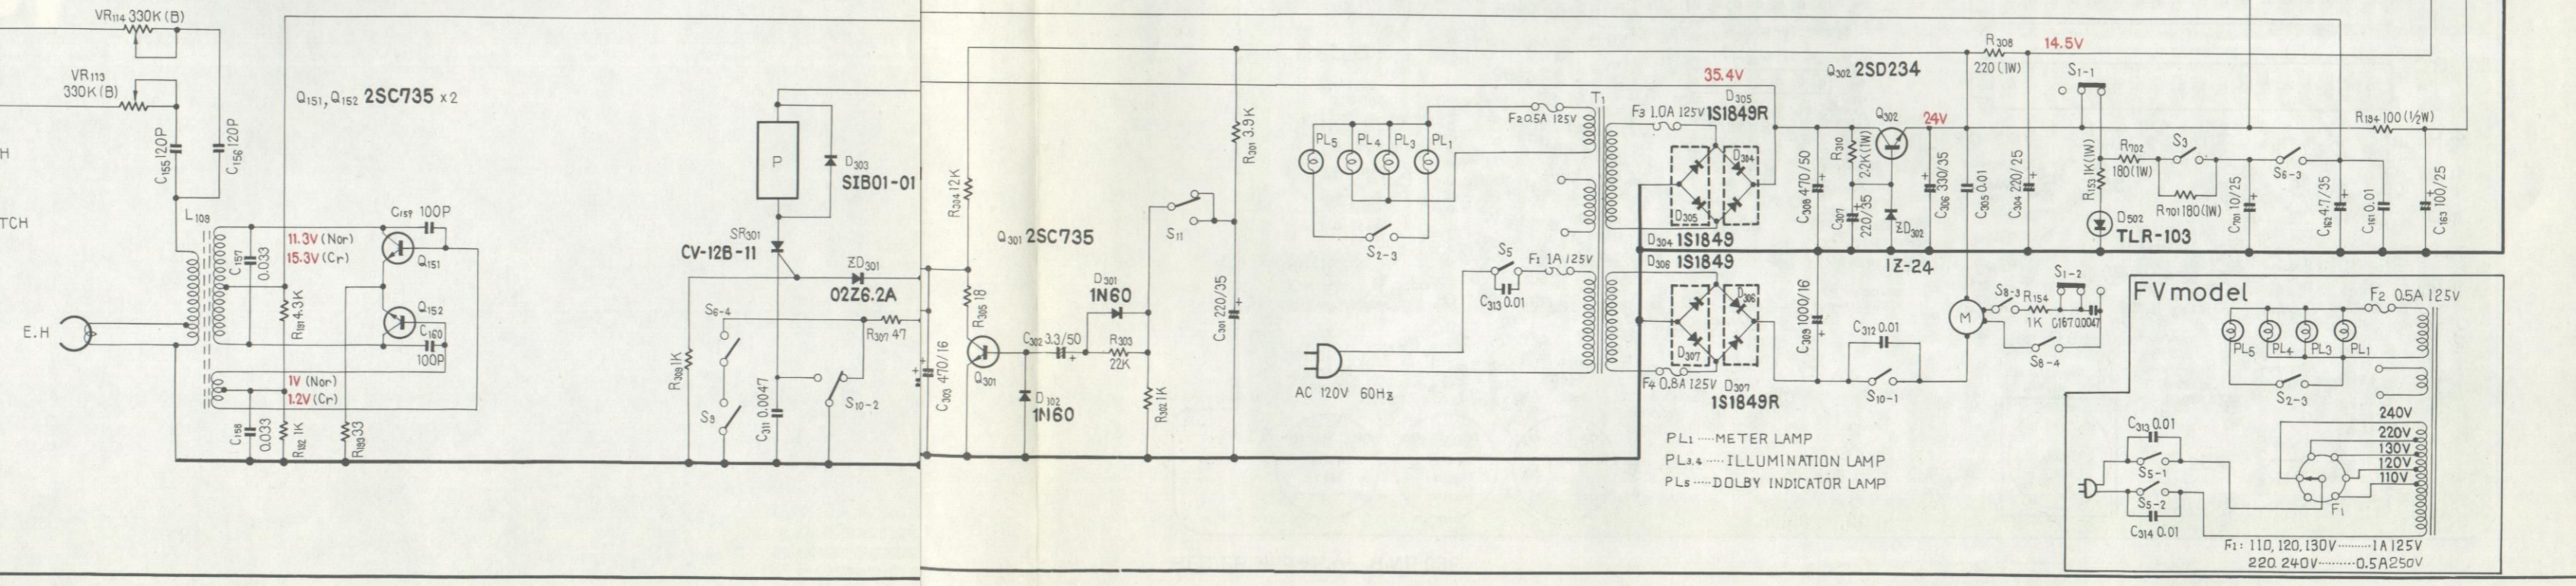

PL1: METER LAMP
PL2-4: ILLUMINATION LAMP
PL5: DOLBY INDICATOR LAMP

