




Service Manual

CASSETTE TAPE DECK

CT-F700

 **PIONEER®**

11.3 SCHEMATIC DIAGRAM

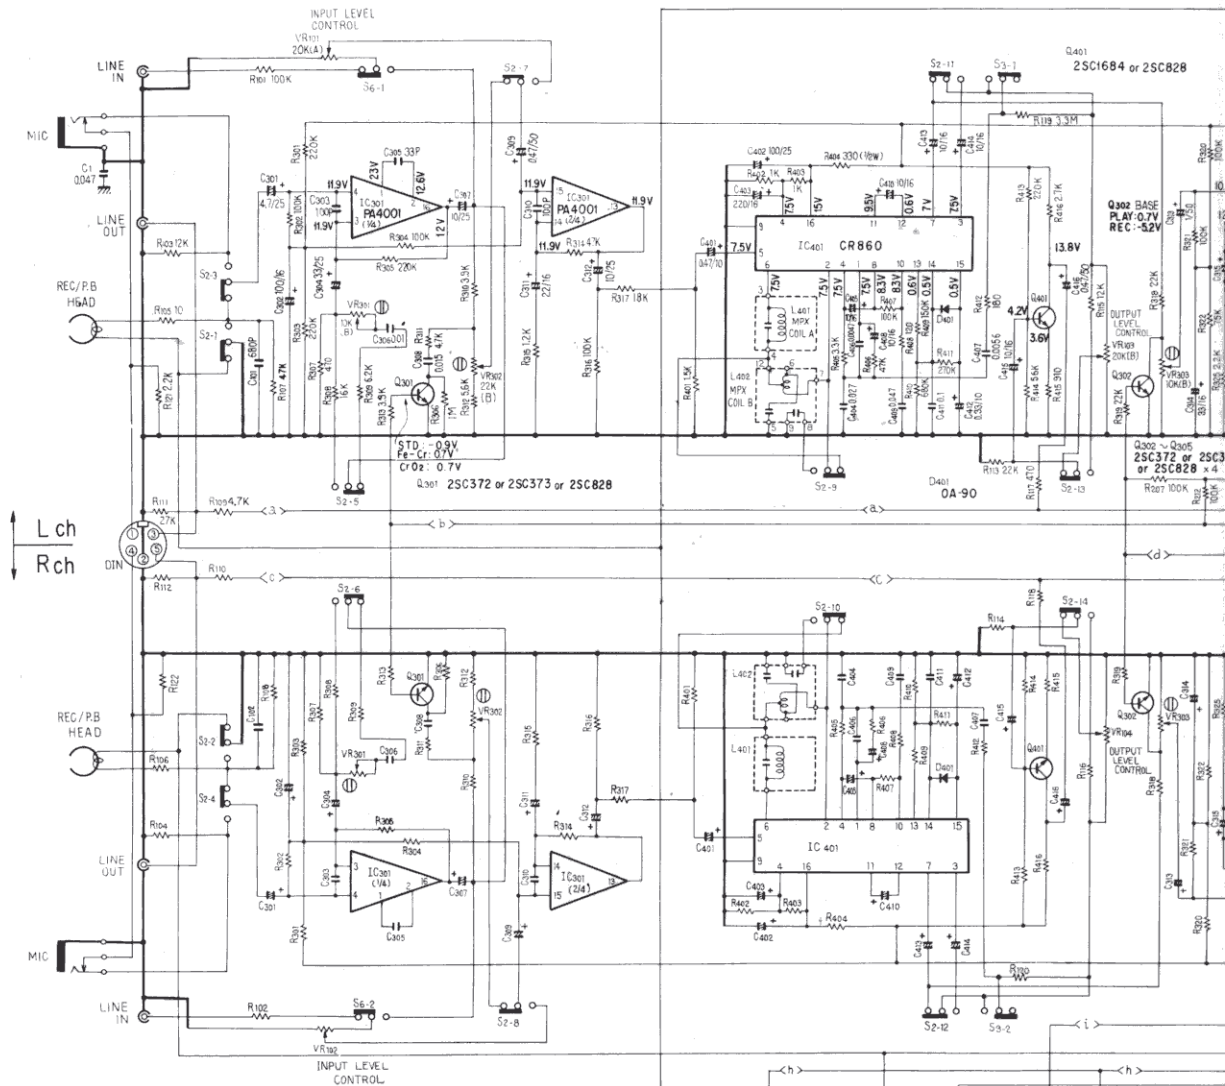

RESISTORS:
IN OHM, 1/4W, $\pm 5\%$ TOLERANCE
UNLESS OTHERWISE NOTED K=k Ω , M=M Ω

CAPACITORS:
IN μ F UNLESS OTHERWISE
NOTED P=pF

V: VOLTAGE AT NO INPUT SIGNAL

SWITCHES:

- S1 POWER OFF-ON
- S2 REC/PLAYBACK SELECTOR PLAYBACK-REC
- S3 DOLBY NR OFF-ON
- S4 EQ STD-Fe-Cr
- S5 CrO2 TAPE AUTOSELECTOR CrO2-STD/Fe-Cr
- S6 INPUT LINE-MIC
- S7 MUTING OFF-ON
- S8 MOTOR OFF-ON
- S9 PAUSE OFF-ON
- S10 THIRD METER DYNAMIC LEVEL-BIAS
- S11 REC OFF-ON
- S12 COUNTER OFF-ON
- S13 REW OFF-ON
- S14 MEMORY OFF-ON

Ⓜ: ADJUSTING MARK

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

Q401 2SD234

Q402 2SC372 or 2SC373

Q403 2SC1166 or 2SC1214 x2

Q404 2SC372 or 2SC373

D405 IS2473

D406 W03B or W03C or S1B01-02

D407 WZ-250

D408, D409 SIQB10 x2

