


 **PIONEER®**
The Art of Entertainment

Service Manual

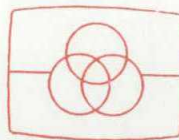

Free service manuals
Gratis schema's

Digitized by

ORDER NO.
ARP2431

STEREO CASSETTE DECK

www.freeservicemanuals.info

CT-S210

HEM, HB
HPW, SD

- Refer to the service manual ARP1980 for CT-337.
- This manual is applicable to CT-S210/HEM, HB, HPW and SD.

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan

PIONEER ELECTRONICS SERVICE INC. P.O. Box 1760, Long Beach, California 90801 U.S.A.

PIONEER ELECTRONICS OF CANADA, INC. 505 Cochrane Drive, Markham, Ontario L3R 8E3 Canada

PIONEER ELECTRONIC [EUROPE] N.V. Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium

PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL: [03] 580-9911

 
 
© **PIONEER ELECTRONIC CORPORATION 1992**

Published in Heiloo, Holland.






 
SN FEB. 1992 Printed in Japan

MEMO

CONTRAST OF MISCELLANEOUS PARTS

- NOTES:
- Parts without part number cannot be supplied.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Parts marked by “” are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

CT–S210/HEM, HB, HPW, SD and CT–337/HEM have the same construction except for the following:

Mark	Symbol & Description	Part No.					Remarks
		CT–337/ HEM type	CT–S210/ HEM type	CT–210/ HB type	CT–S210/ HPW type	CT–S210/ SD type	
   	Main unit	Non supply	Non supply	Non supply	Non supply	Non supply	for Eject knob
	Display unit	Non supply	Non supply	Non supply	Non supply	Non supply	
	AC power cord	PDG1003	PDG1003	PDG1036	PDG1006	PDG1013	
	Power transformer (AC220–230/230–240V)	RTT1087	RTT1204	RTT1204	RTT1087	
	Power transformer (AC110/120–127/220/240V)	RTT1088	
	Line voltage selector (AC110/120–127/220/240V)	PSB1002	
	Eject knob	RAC1344	RAC1367	RAC1367	RAC1367	RAC1367	
	Slide knob (A)	RAC1357	RAC1236	RAC1236	RAC1236	RAC1236	
	Operation knob	RAC1345	RAC1683	RAC1683	RAC1683	RAC1683	
	Tact knob	RAC1409	
	DOLBY name plate	RAH1655	RAH1458	RAH1458	RAH1458	RAH1458	for Eject knob
	Meter panel	RAH1637	
	Meter lens	RAH2004	RAH2004	RAH2005	RAH2005	
	Door panel	RAH1638	RAH1994	RAH1994	RAH2036	RAH2036	
	Latch spring	RBH1008	RBH1008	RBH1008	RBH1008	
	Control cord	RDE1018	
	Control cord (Mini)	PDE–319	PDE–319	
	Packing case	RHG1177	RHG1329	RHG1329	RHG1329	RHG1329	
	Bonnet	RXX1079	RXX1396	RXX1396	RXX1396	RXX1396	
	Front panel assembly	RXX1323	RXX1492	RXX1492	RXX1473	RXX1473	
	Leg assembly	REC–369	REC–369	for Eject knob
	Insulator	VNK1095	VNK1095	VNK1095	
	Stopper	VEC1061	VEC1061	VEC1061	
	Operating instructions (English)	RRB1063	RRB1108	RRB1108	RRB1108	
	Operating instructions (English/Spanish)	RRD1073	RRD1119	
	Operating instructions (English/French/ German/Italian/Dutch/Swedish/Spanish/ Portuguese)	RRE1055	

MAIN UNIT

Main unit of CT–S210/HEM, HB, HPW, SD and main unit of CT–337/HEM have the same construction except for the following:

Mark	Symbol & Description	Part No.			Remarks
		CT–337/ HEM type	CT–S210/HEM and HB types	CT–S210/HPW and SD types	
	IC301, 1001, 1601	M5218L	BA15218N	BA15218N	
	IC801	UPC1297CA	UPC1297CA	
	D801, 802	1SS252	1SS252	
	D1102–1104	1SS252	
	D1110–1112	1SS252	
	Q801, 802	2SA1309A	2SA1309A	
	Q803	DTC124ES	DTC124ES	
	Q1150	DTC124ES	
	L301, 302	RTF1102	RTF1004	RTF1004	
	L601	LRA121K	LFA121K	LFA121K	
	L602	RTD1039	RTD1039	RTD1017	
	L801, 802	RTD1030	RTD1030	
	C313, 314	CEAS4R7M50	CEANL4R7M25	CEANL4R7M25	
	C601, 602	CCCSL101K500	
	C801, 802	CGCYX103K25	CGCYX103K25	
	C803, 804	CKUYB821K50	CKUYB821K50	
	C805, 806	CFTXA223J50	CFTXA223J50	
	C807, 808	CGCYX473K25	CGCYX473K25	
	C809, 810	CCCSL101K500	CCCSL101K500	
	C811, 812	CKCYB471J500	CKCYB471J500	
	C813	CKPUYB101K50	CKPUYB101K50	
	C814	CEASR10M50	CEASR10M50	
	C816	CEAS4R7M50	CEAS4R7M50	
	C819, 815	CEAS100M50	CEAS100M50	
	C1110	CKCYF473Z50	
	C1105	CKCYF103Z50	
	C1111, 1113	CKCYF103Z50	
	C1112	CEAS010M50	
	R651	RD½LF331J	RD½LF331J	RD½LF201J	
	R652	RD½LF221J	RD½LF221J	RD½LF151J	
	R801, 802	RD ⅓ PM223J	RD ⅓ PM223J	
	R803,804	RD ⅓ PM184J	RD ⅓ PM184J	
	R805	RD ⅓ PM153J	RD ⅓ PM153J	
	R806	RD ⅓ PM223J	RD ⅓ PM223J	
	R807, 808	RD ⅓ PM472J	RD ⅓ PM472J	
	R809	RD ⅓ PM103J	RD ⅓ PM103J	
	R1003, 1004	RD ⅓ PM392J	RD ⅓ PM472J	RD ⅓ PM472J	
	R1150	RD ⅓ PM274J	RD ⅓ PM274J	
	VR601, 602	VRTB6VS104	
	VR801, 802 (22k)	RCP1035	RCP1035	
	CN112	BTMK05P–1R	BTMK04P–1R	BTMK04P–1R	
	CN113	BTMK11P–1R	BTMK10P–1R	BTMK10P–1R	
	J201	RDD1196	
	J202	KPC3	
	JA1101, 1102	RKN1004	
	JA1103	RKN1014	

4. OTHERS :
- ➡ : Signal route.
 - ⊗ : Adjusting point.
 - The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - ※ marked capacitors and resistors have parts numbers.
- This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

3. VOLTAGE CURRENT :
- : DC voltage (V) at no input signal.
 - Value in () is DC current at stop state.
 - ➡mA : DC current at no input signal.
2. CAPACITORS :
- Indicated in capacity (μF) /voltage (V) unless otherwise noted
 - p : pF. Indication without voltage is 50V except electrolytic capacitor.
1. RESISTORS :
- Indicated in Ω, 1/4W, 1/6W, 1/8W, ±5 % tolerance unless otherwise noted k:kΩ, M:MΩ, (F): ±1%, (G): ±2%, (K): ±10%, (M): ±20 % tolerance.


CT-S210

DISPLAY UNIT


Display unit of CT–S210/HEM, HB, HPW, SD and display unit of CT–337/HEM have the same construction except for the following:




Mark	Symbol & Description	Part No.			Remarks
		CT–337/ HEM type	CT–210/HEM and HB types	CT–210/HPW and SD types	
	Q2451	2SA1309A	
	Q2468	2SC3311A	
	D2401	SEL4310E	SEL4310E	SEL4914A	
	D2403–2412	SEL4310E	SEL4310E	SEL4914A	
	D2413, 2414	SEL4214S	SEL4310E	SEL4914A	
	D2419, 2420	SEL4310E	SEL4310E	SEL4914A	
	D2421, 2422	SEL4214S	SEL4214S	
	D2423	SEL4214S	
	D2431	1SS254	
	R2414, 2415	RD ⅓ PM331J	RD ⅓ PM331J	
	R2416	RD ⅓ PM331J	
	R2428	RD ⅓ PM332J	
	S2308	RSG–155	

• SCHEMATIC DIAGRAM

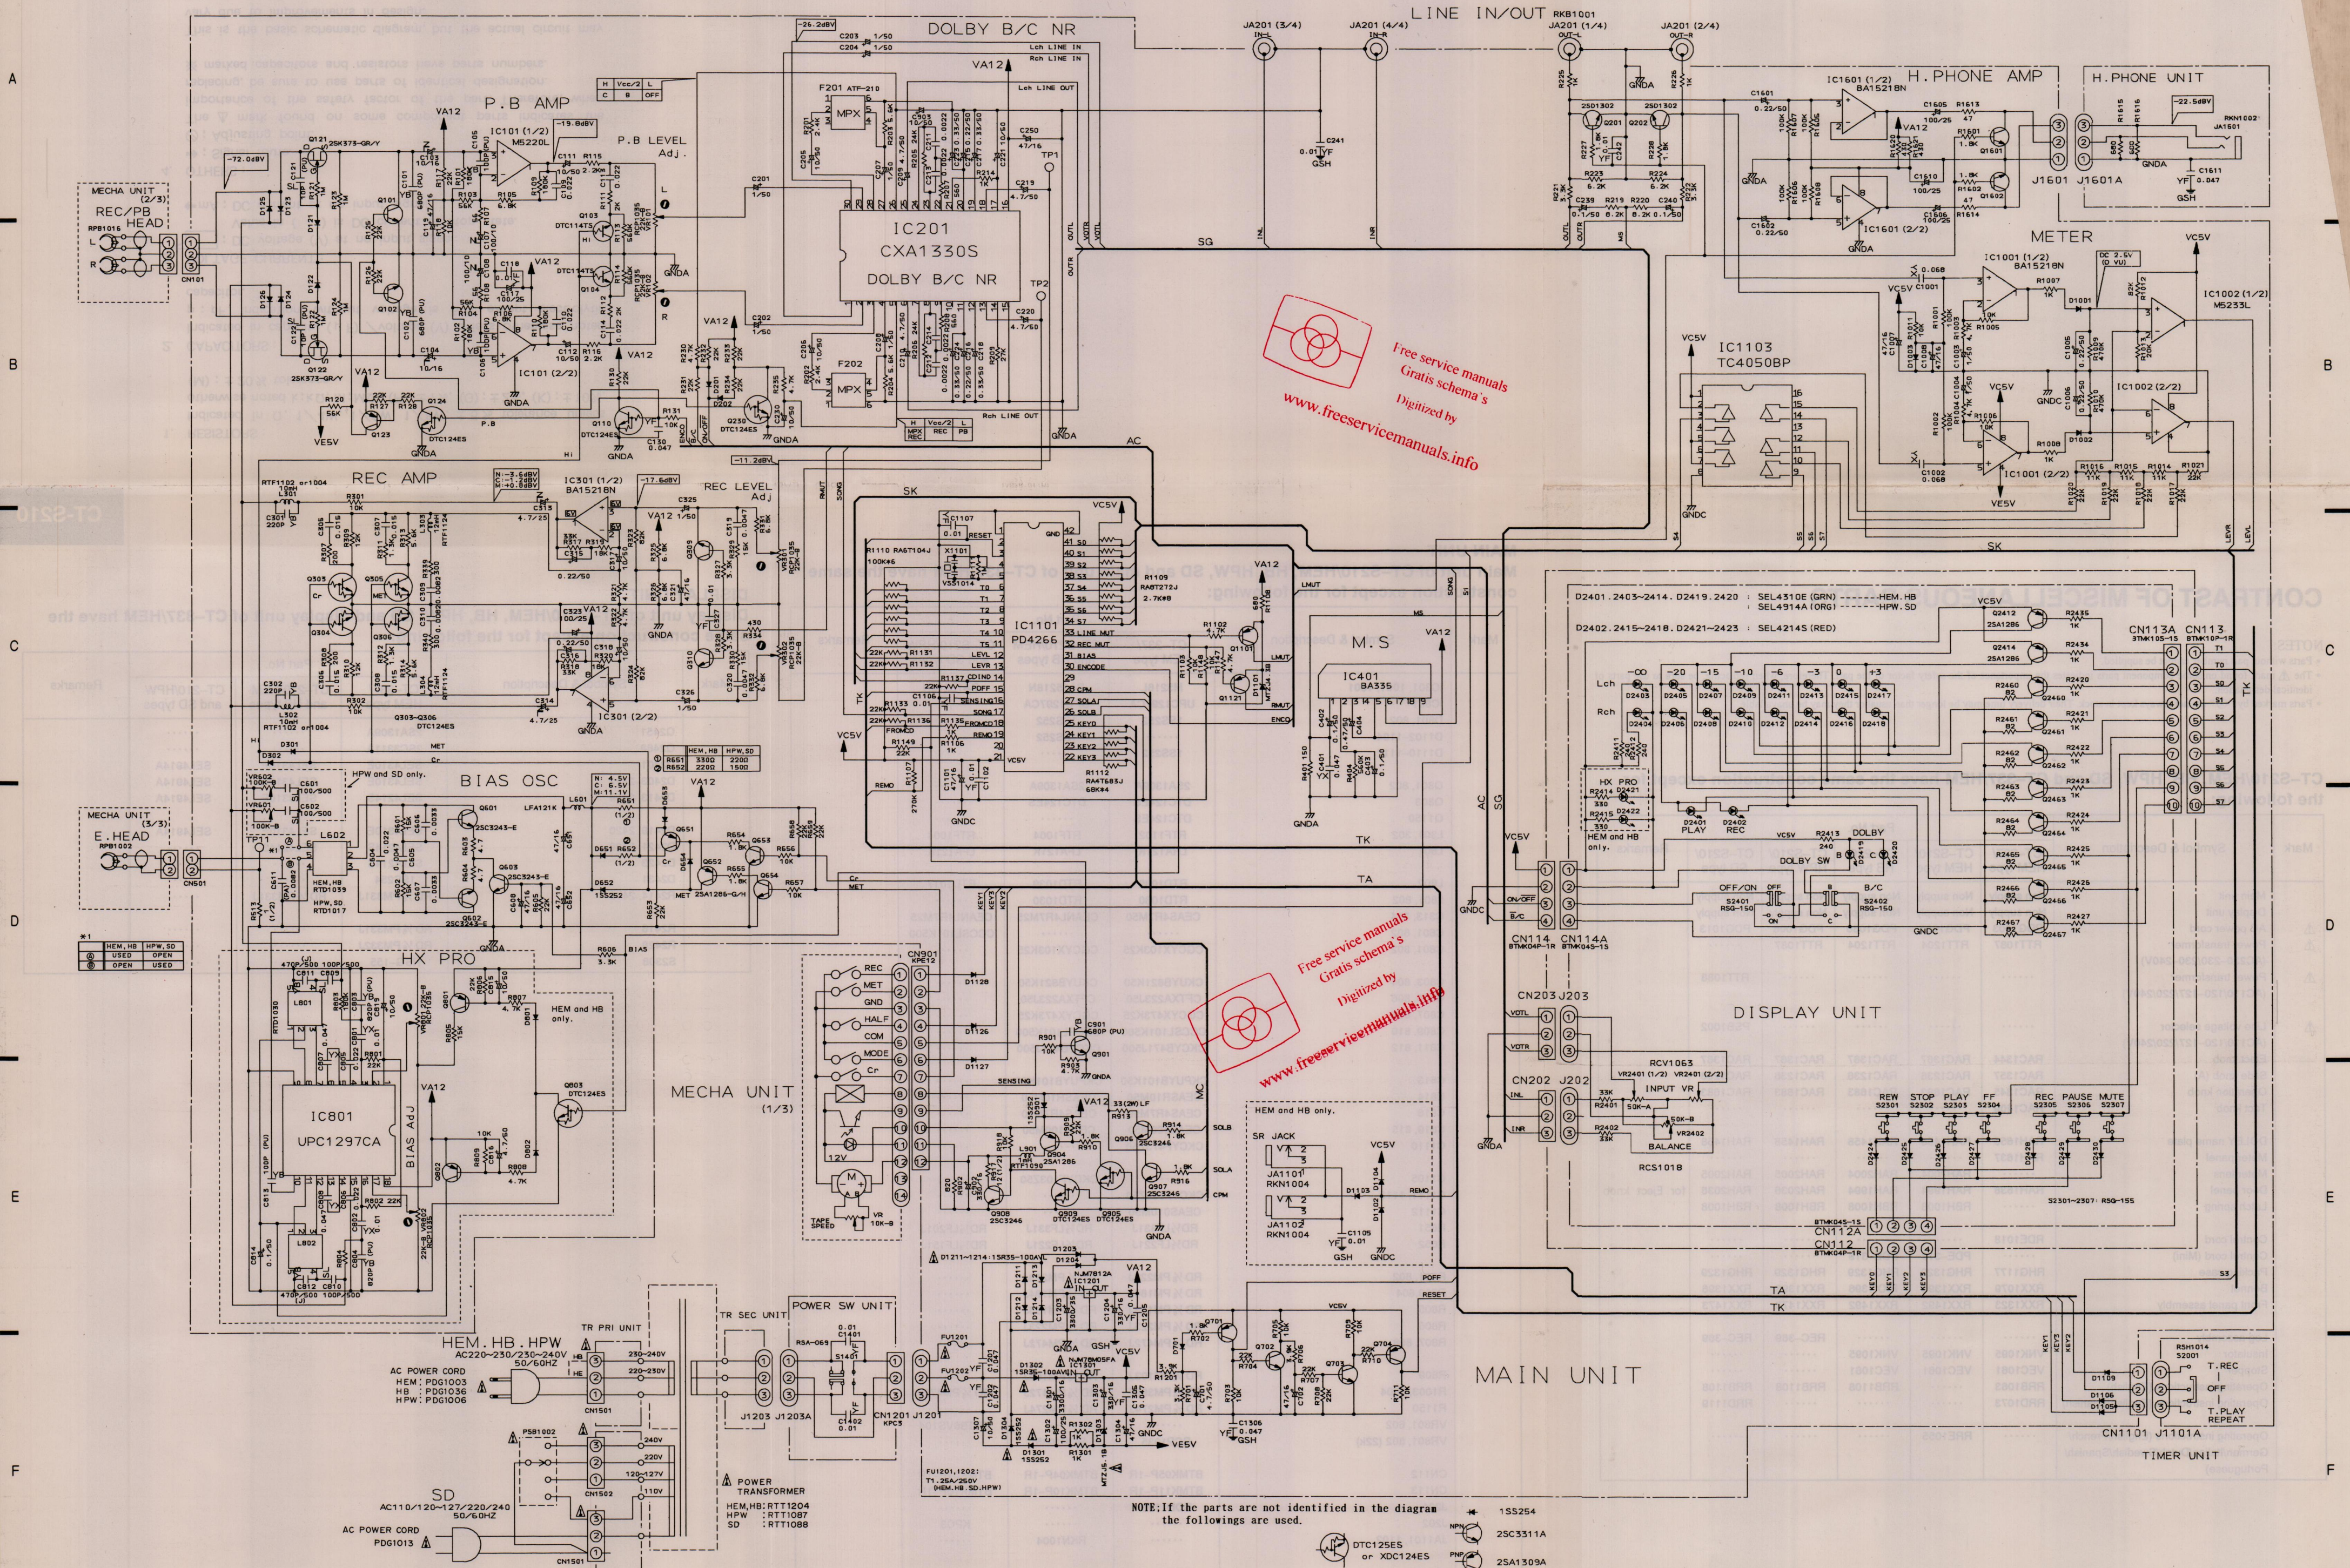

NOTE; If the parts are not identified in the diagram the followings are used.


DTC125ES
 or **XDC124ES**

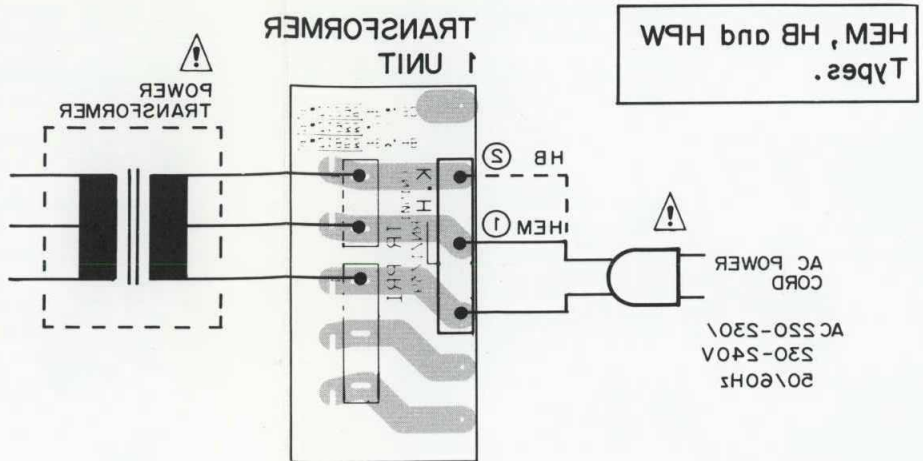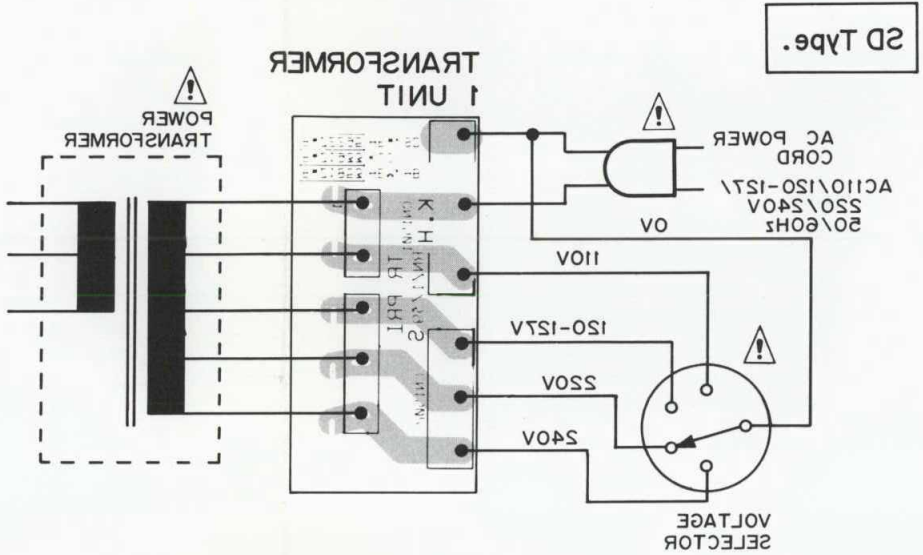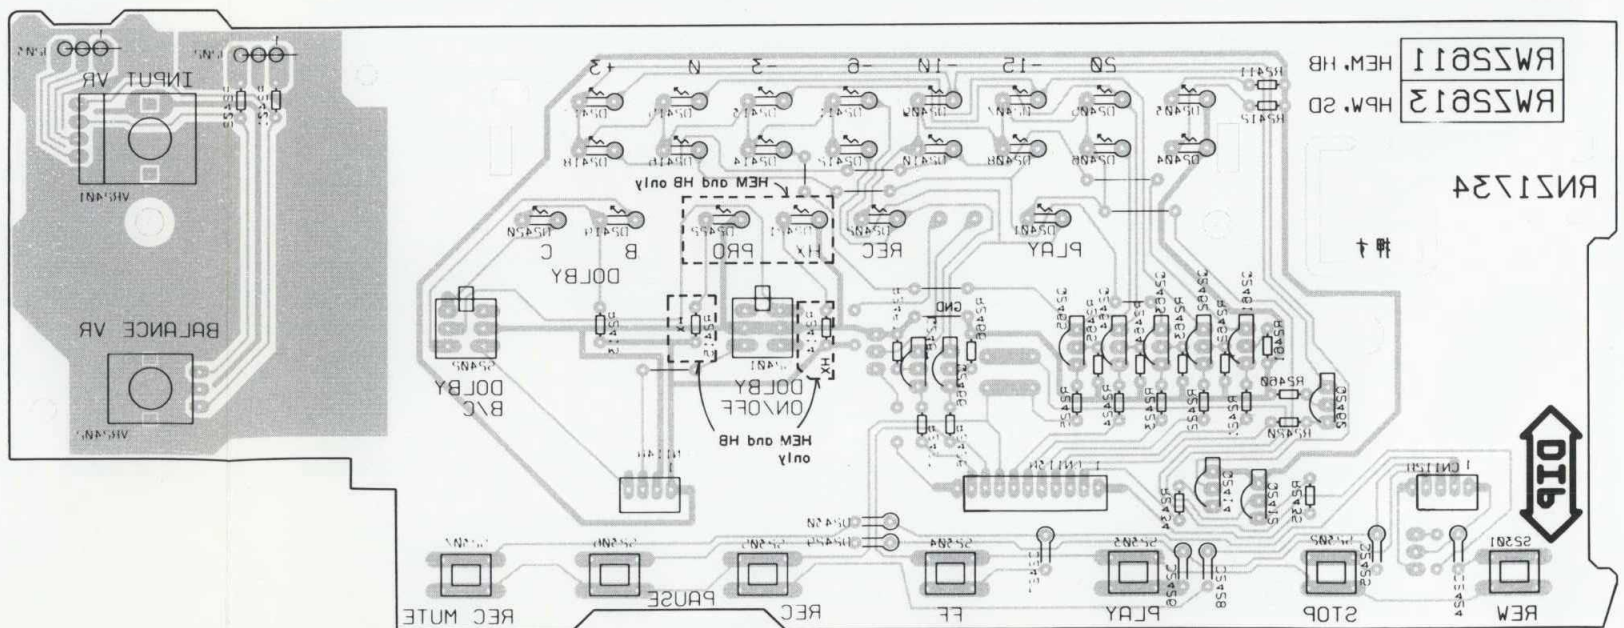


Parts No	Description
AA-X-193	220 V label
AA-X-192	240 V label

3. Change the connection of the TRANSFORMER 1 UNIT assembly primary pins.
2. Remove the Bonnet case.
1. Disconnect the AC power cord.

Line voltage can be changed with the following steps:

Line Voltage Selection

4. Stick the line voltage label on the rear panel.

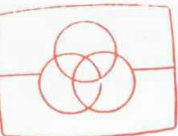

Free service manuals
Gratis schema's
Digitized by
www.freeservicemanuals.info

