

Pioneer

Service Manual

ORDER NO.
RRV4377

DJ MIXER

DJM-850-W

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
DJM-850-W	SYXJ8	AC 220 V to 240 V	
DJM-850-W	UXJCB	AC 120 V	
DJM-850-W	LXJ	AC 110 V to 120 V / 220 V to 240 V	
DJM-850-W	XJCN5	AC 220 V to 240 V	

This service manual should be used together with the following manual(s).

Model No.	Order No.	Remarks
DJM-850-K/SYXJ8	RRV4298	DJM-850-K/UXJCB, /LXJ, /XJCN5

Descriptions to be written in the Service Manual for the DJM-850-W

This product is the same as the DJM-850-K, except for the colors.

The major changes are as shown below.

Exterior panels (Front Panel, Fader Panel and Control Panel): Changed to white

When replacing the above-mentioned parts, be sure to use the parts described in this manual.

PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan

PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.

PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium

PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936

©PIONEER CORPORATION 2012

K-ZZZ SEPT. 2012 Printed in Japan

1. CONTRAST OF MISCELLANEOUS PARTS

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

● The Δ mark found on some component parts indicates the importance of the safety factor of the part.

Therefore, when replacing, be sure to use parts of identical designation.

● Screws adjacent to ∇ mark on product are used for disassembly.

● For the applying amount of lubricants or glue, follow the instructions in this manual.

(In the case of no amount instructions, apply as you think it appropriate.)

● Nos. indicate the pages and Nos. in the service manual for the base model.

● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω \rightarrow 56 x 10¹ \rightarrow 561 RD1/4PU561J
 47k Ω \rightarrow 47 x 10³ \rightarrow 473 RD1/4PU473J
 0.5 Ω \rightarrow R50 RN2HR50K
 1 Ω \rightarrow 1R0 RS1P1R0K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω \rightarrow 562 x 10¹ \rightarrow 5621 RN1/4PC5621F

CONTRAST TABLE

DJM-850-W/SYXJ8

DJM-850-K/SYXJ8 and DJM-850-W/SYXJ8 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-850-K/SYXJ8	DJM-850-W/SYXJ8	Remarks
NSP	PACKING SECTION				
	P89-4	Operating Instructions (En/Fr/De/It)	DRB1604	DRB1639	
	P89-5	Operating Instructions (Nl/Es/Ru)	DRB1605	DRB1640	
	P89-15	Packing Case	DHG3174	DHG3183	
	EXTERIOR SECTION				
	P91-27	Front Panel	DNK6063	DNK6175	
	P91-29	Label	DAL1219	DAL1229	
	P91-38	Screw (FE)	DBA1290	DBA1436	
	CONTROL PANEL SECTION (1/2)				
	P95-34	Fader Panel	DNB1196	DNB1207	
	P95-35	Control Panel	DNB1197	DNB1208	
	P95-42	Screw (FE)	DBA1290	DBA1436	

DJM-850-W/UXJCB

DJM-850-K/UXJCB and DJM-850-W/UXJCB are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-850-K/UXJCB	DJM-850-W/UXJCB	Remarks
NSP	PACKING SECTION				
	P89-6	Operating Instructions (En)	DRB1606	DRB1641	
	P89-15	Packing Case	DHG3094	DHG3184	
	EXTERIOR SECTION				
	P91-27	Front Panel	DNK6063	DNK6175	
	P91-29	Label	DAL1208	DAL1230	
	P91-38	Screw (FE)	DBA1290	DBA1436	
	CONTROL PANEL SECTION (1/2)				
	P95-34	Fader Panel	DNB1196	DNB1207	
	P95-35	Control Panel	DNB1197	DNB1208	
	P95-42	Screw (FE)	DBA1290	DBA1436	

DJM-850-W/LXJ

DJM-850-K/LXJ and DJM-850-W/LXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-850-K/LXJ	DJM-850-W/LXJ	Remarks
NSP	PACKING SECTION				
	P89-7	Operating Instructions (En/Es/Zhtw)	DRB1607	DRB1642	
	P89-15	Packing Case	DHG3095	DHG3185	
	EXTERIOR SECION				
	P91-27	Front Panel	DNK6063	DNK6175	
	P91-29	Label	DAL1209	DAL1231	
	P91-38	Screw (FE)	DBA1290	DBA1436	
	CONTROL PANEL SECTION (1/2)				
	P95-34	Fader Panel	DNB1196	DNB1207	
	P95-35	Control Panel	DNB1197	DNB1208	
	P95-42	Screw (FE)	DBA1290	DBA1436	

DJM-850-W/XJCN5

DJM-850-K/XJCN5 and DJM-850-W/XJCN5 are constructed the same except for the following:

Mark	No.	Symbol and Description	DJM-850-K/XJCN5	DJM-850-W/XJCN5	Remarks
NSP	PACKING SECTION				
	P89-9	Operating Instructions (En/Zhcn)	DRB1609	DRB1644	
	P89-15	Packing Case	DHG3097	DHG3187	
	EXTERIOR SECION				
	P91-27	Front Panel	DNK6063	DNK6175	
	P91-29	Label	DAL1211	DAL1233	
	P91-38	Screw (FE)	DBA1290	DBA1436	
	CONTROL PANEL SECTION (1/2)				
	P95-34	Fader Panel	DNB1196	DNB1207	
	P95-35	Control Panel	DNB1197	DNB1208	
	P95-42	Screw (FE)	DBA1290	DBA1436	