

## Service Manual

ORDER NO.  
RRV4495

DJ Controller

# DDJ-SX-N

## DDJ-SX-W

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

| Model    | Type   | Power Requirement | Remarks |
|----------|--------|-------------------|---------|
| DDJ-SX-N | UXECB  | AC 100 V to 240 V |         |
| DDJ-SX-N | SVYXE8 | AC 100 V to 240 V |         |
| DDJ-SX-N | FLPXE  | AC 100 V to 240 V |         |
| DDJ-SX-W | UXECB  | AC 100 V to 240 V |         |
| DDJ-SX-W | SVYXE8 | AC 100 V to 240 V |         |
| DDJ-SX-W | FLPXE  | AC 100 V to 240 V |         |
| DDJ-SX-W | AXE5   | AC 100 V to 240 V |         |

This service manual should be used together with the following manual(s).

| Model No.    | Order No. | Remarks |
|--------------|-----------|---------|
| DDJ-SX/UXECB | RRV4382   |         |

For SPECIFICATIONS and PANEL FACILITIES, refer to the operating instructions.

This product is a limited-production model derived from the DDJ-SX (base model) in a different color.

This product is the same as the DDJ-SX, except for the colors.



The major changes are as shown below.

Exterior panels: Changed to gold (DDJ-SX-N), white (DDJ-SX-W)

When replacing the above-mentioned parts, be sure to use the parts described in this manual.




 
 
# 1. CONTRAST OF MISCELLANEOUS PARTS

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to  mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.  
(In the case of no amount instructions, apply as you think it appropriate.)
- Nos. indicate the pages and Nos. in the service manual for the base model.

## CONTRAST TABLE DDJ-SX-N






DDJ-SX/UXECB, DDJ-SX-N/UXECB, DDJ-SX-N/SVYXE8 and DDJ-SX-N/FLPX are constructed the same except for the following:

| Mark   | No.     | Symbol and Description  | DDJ-SX/UXECB       | DDJ-SX-N/UXECB     | DDJ-SX-N/SVYXE8    | DDJ-SX-N/FLPX      | Remarks |
|--|---------|---|--------------------|--------------------|--------------------|--------------------|---------|
| <b>PACKING SECTION</b>   |         |   |                    |                    |                    |                    |         |
|  | P35-1   | AC Adapter  | 411-S1-878-HA      | 411-S1-878-HA      | 411-S1-879-HA      | 411-S1-880-HA      |         |
|  | P35-2   | Power Plug  | Not used           | Not used           | 420-DJM250-362-HA  | 420-DJM250-364-HA  |         |
|  | P35-3   | Power Plug  | Not used           | Not used           | Not used           | 420-DJM250-363-HA  |         |
|  | P35-4   | Power Plug  | Not used           | Not used           | Not used           | 420-DJM250-362-HA  |         |
|  | P35-5   | Power Plug  | Not used           | Not used           | Not used           | 420-DJM250-361-HA  |         |
|  | P35-7   | CD-ROM (Installation Disc)  | 429-S1-142A-HA     | 429-S1-142C-HA     | 429-S1-142C-HA     | 429-S1-142C-HA     |         |
|  | P35-8   | Read Before Use (Important)/<br>Quick Start Guide (En)                      | 502-DDSXA-3277A-HA | 502-DDSXA-3277C-HA | Not used           | Not used           |         |
|  | P35-8   | Read Before Use (Important)/<br>Quick Start Guide<br>(En/Fr/De/It/Es/Pt/Ru) | Not used           | Not used           | 502-DDSXB-3278C-HA | Not used           |         |
|  | P35-8   | Read Before Use (Important)/<br>Quick Start Guide (En)                      | Not used           | Not used           | Not used           | 502-DDSXF-3282B-HA |         |
|  | P35-16  | Gift Box  | 507-S1-3370A-HA    | 507-SXA2-3370-HA   | 507-SXB2-3370-HA   | 507-SXF2-3370-HA   |         |
| <b>EXTERIOR SECTION</b>  |         |   |                    |                    |                    |                    |         |
|  | P38-24  | PLAY SYNC Button  | 100-S1-2995-HA     | 100-SXN-2995-HA    | 100-SXN-2995-HA    | 100-SXN-2995-HA    |         |
|  | P38-30  | JW Ring   | 100-S1-3001-HA     | 100-SXN-3001-HA    | 100-SXN-3001-HA    | 100-SXN-3001-HA    |         |
|  | P38-63  | Front Panel   | 300-S1-2043-HA     | 300-SXN-2043-HA    | 300-SXN-2043-HA    | 300-SXN-2043-HA    |         |
|  | P38-82  | Front Panel   | 501-S1-2522-HA     | 501-SXN-2522-HA    | 501-SXN-2522-HA    | 501-SXN-2522-HA    |         |
|  | P38-127 | Wheel Assy  | 703-S1-1383-HA     | 703-SXN-1383-HA    | 703-SXN-1383-HA    | 703-SXN-1383-HA    |         |
|  |         | CF Panel & Cushion A  | NSP                | 703-SXN-1396-HA    | 703-SXN-1396-HA    | 703-SXN-1396-HA    | No. 128 |

Notes : The numbers in the remarks column correspond to the numbers on the “EXPLODED VIEWS”.

## DDJ-SX-W

DDJ-SX/UXECB, DDJ-SX-W/UXECB, DDJ-SX-W/SVYXE8, DDJ-SX-W/FLPX and DDJ-SX-W/AXE5 are constructed the same except for the following:

| Mark   | No.   | Symbol and Description  | DDJ-SX<br>/UXECB   | DDJ-SX-W<br>/UXECB | DDJ-SX-W<br>/SVYXE8 | DDJ-SX-W<br>/FLPX  | DDJ-SX-W<br>/AXE5  | Remarks |
|--|-------|---|--------------------|--------------------|---------------------|--------------------|--------------------|---------|
| <b>PACKING SECTION</b>   |       |   |                    |                    |                     |                    |                    |         |
|  | P35-1 | AC Adapter  | 411-S1-878-HA      | 411-S1-878-HA      | 411-S1-879-HA       | 411-S1-880-HA      | 411-S1-881-HA      |         |
|  | P35-2 | Power Plug  | Not used           | Not used           | 420-DJM250-362-HA   | 420-DJM250-364-HA  | Not used           |         |
|  | P35-3 | Power Plug  | Not used           | Not used           | Not used            | 420-DJM250-363-HA  | Not used           |         |
|  | P35-4 | Power Plug  | Not used           | Not used           | Not used            | 420-DJM250-362-HA  | Not used           |         |
|  | P35-5 | Power Plug  | Not used           | Not used           | Not used            | 420-DJM250-361-HA  | Not used           |         |
|  | P35-7 | CD-ROM (Installation Disc)  | 429-S1-142A-HA     | 429-S1-142C-HA     | 429-S1-142C-HA      | 429-S1-142C-HA     | 429-S1-142C-HA     |         |
|  | P35-8 | Read Before Use (Important)/<br>Quick Start Guide (En)                      | 502-DDSXA-3277A-HA | 502-DDSXA-3277C-HA | Not used            | Not used           | Not used           |         |
|  | P35-8 | Read Before Use (Important)/<br>Quick Start Guide<br>(En/Fr/De/It/Es/Pt/Ru) | Not used           | Not used           | 502-DDSXB-3278C-HA  | Not used           | Not used           |         |
|  | P35-8 | Read Before Use (Important)/<br>Quick Start Guide (En)                      | Not used           | Not used           | Not used            | 502-DDSXF-3282B-HA | Not used           |         |
|  | P35-8 | Read Before Use (Important)/<br>Quick Start Guide (Zhc)                     | Not used           | Not used           | Not used            | Not used           | 502-DDSXD-3280B-HA |         |

| Mark | No.     | Symbol and Description  | DDJ-SX /UXECB      | DDJ-SX-W /UXECB     | DDJ-SX-W /SVYXE8    | DDJ-SX-W /FLPXE     | DDJ-SX-W /AXE5      | Remarks |
|------|---------|-------------------------|--------------------|---------------------|---------------------|---------------------|---------------------|---------|
|      | P35-16  | Gift Box                | 507-S1-3370A-HA    | 507-SXA1-3370-HA    | 507-SXB1-3370A-HA   | 507-SXF1-3370-HA    | 507-SXD1-3370-HA    |         |
|      |         | <b>EXTERIOR SECTION</b> |                    |                     |                     |                     |                     |         |
|      | P38-34  | SPEED PUSH Button       | 100-S1-3005-HA     | 100-SXW-3005-HA     | 100-SXW-3005-HA     | 100-SXW-3005-HA     | 100-SXW-3005-HA     |         |
|      | P38-63  | Front Panel             | 300-S1-2043-HA     | 300-SXW-2097-HA     | 300-SXW-2097-HA     | 300-SXW-2097-HA     | 300-SXW-2097-HA     |         |
|      | P38-81  | Deck Panel              | 501-S1-2521-HA     | 501-SXW-2521-HA     | 501-SXW-2521-HA     | 501-SXW-2521-HA     | 501-SXW-2521-HA     |         |
|      | P38-82  | Front Panel             | 501-S1-2522-HA     | 501-SXW-2522-HA     | 501-SXW-2522-HA     | 501-SXW-2522-HA     | 501-SXW-2522-HA     |         |
|      | P38-83  | Search Panel            | 501-S1-2524-HA     | 501-SXW-2524-HA     | 501-SXW-2524-HA     | 501-SXW-2524-HA     | 501-SXW-2524-HA     |         |
|      | P38-113 | Screw                   | 602-HP1010K-182-HA | 602-PTF2508-714N-HA | 602-PTF2508-714N-HA | 602-PTF2508-714N-HA | 602-PTF2508-714N-HA |         |
|      | P38-115 | Screw                   | 602-MP3-324-HA     | 602-MP3-324N-HA     | 602-MP3-324N-HA     | 602-MP3-324N-HA     | 602-MP3-324N-HA     |         |
|      |         | CF Panel & Cushion A    | NSP                | 703-SXW-1397-HA     | 703-SXW-1397-HA     | 703-SXW-1397-HA     | 703-SXW-1397-HA     | No. 128 |
|      |         | Cushion                 | Not used           | 612-SXW-453-HA      | 612-SXW-453-HA      | 612-SXW-453-HA      | 612-SXW-453-HA      | No. 129 |

Notes : The numbers in the remarks column correspond to the numbers on the "EXPLODED VIEWS".

### EXPLODED VIEWS EXTERIOR SECTION

