

# 3. SCHEMATIC DIAGRAM


A

B

C




D



TUNER ASSEMBLY (AWE1069)

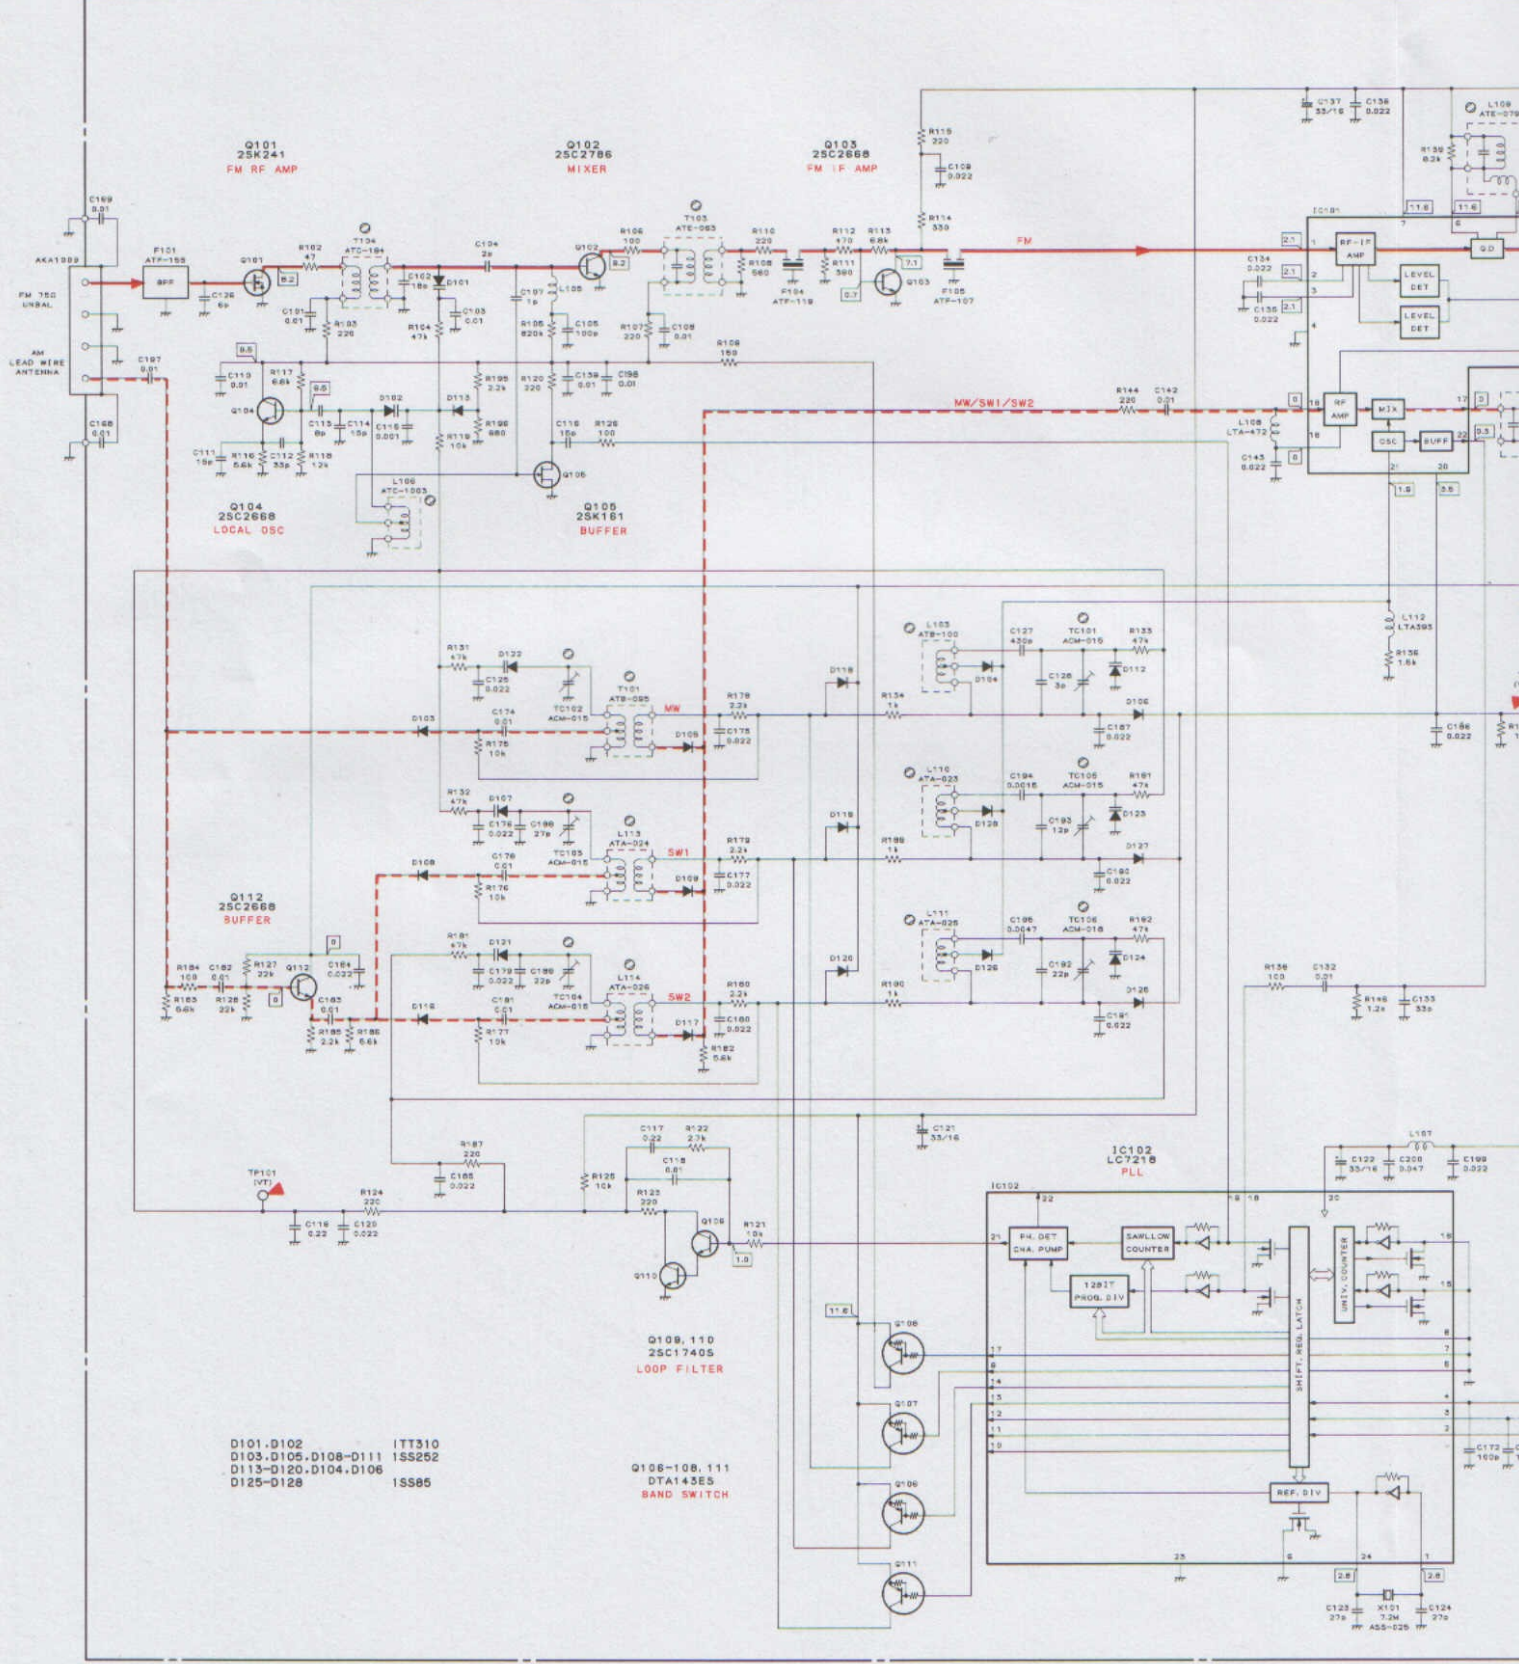


D101, D102    ITT310  
 D103, D105, D108-D111    1SS252  
 D113-D120, D104, D106  
 D125-D128    1SS85

Q108-108, 111  
 DTA145E5  
 BAND SWITCH

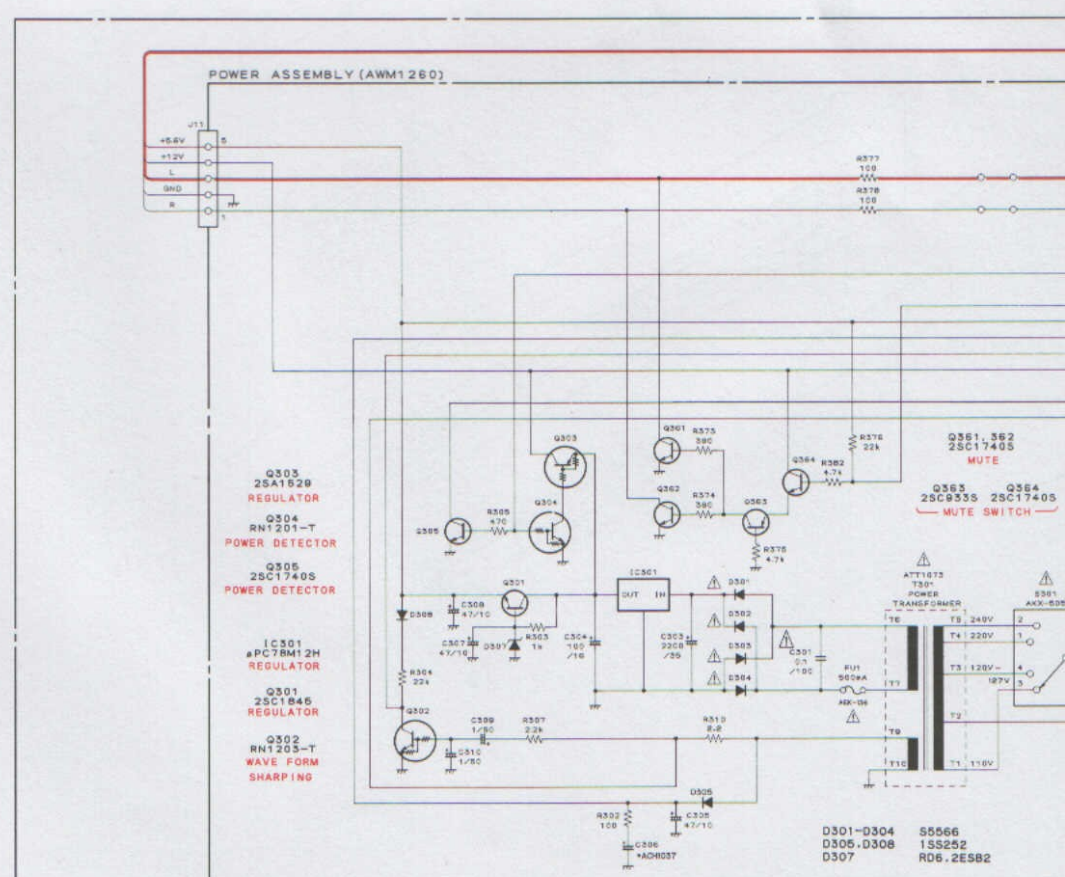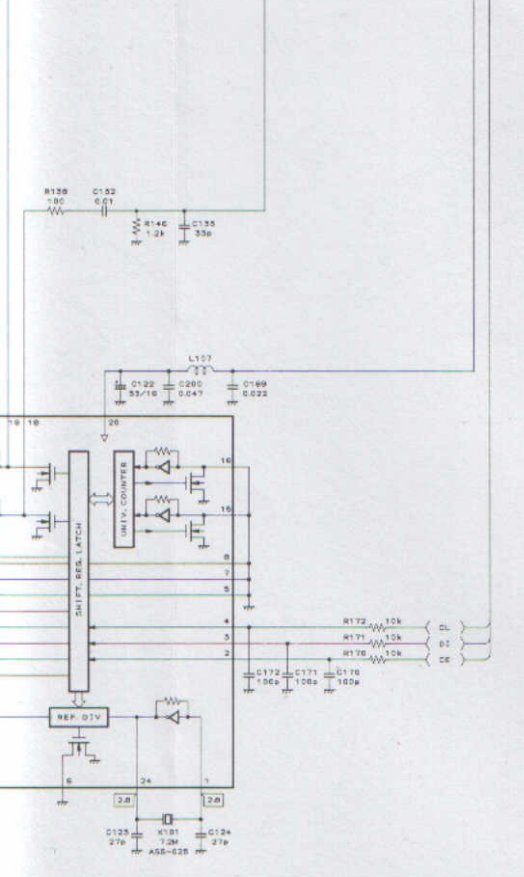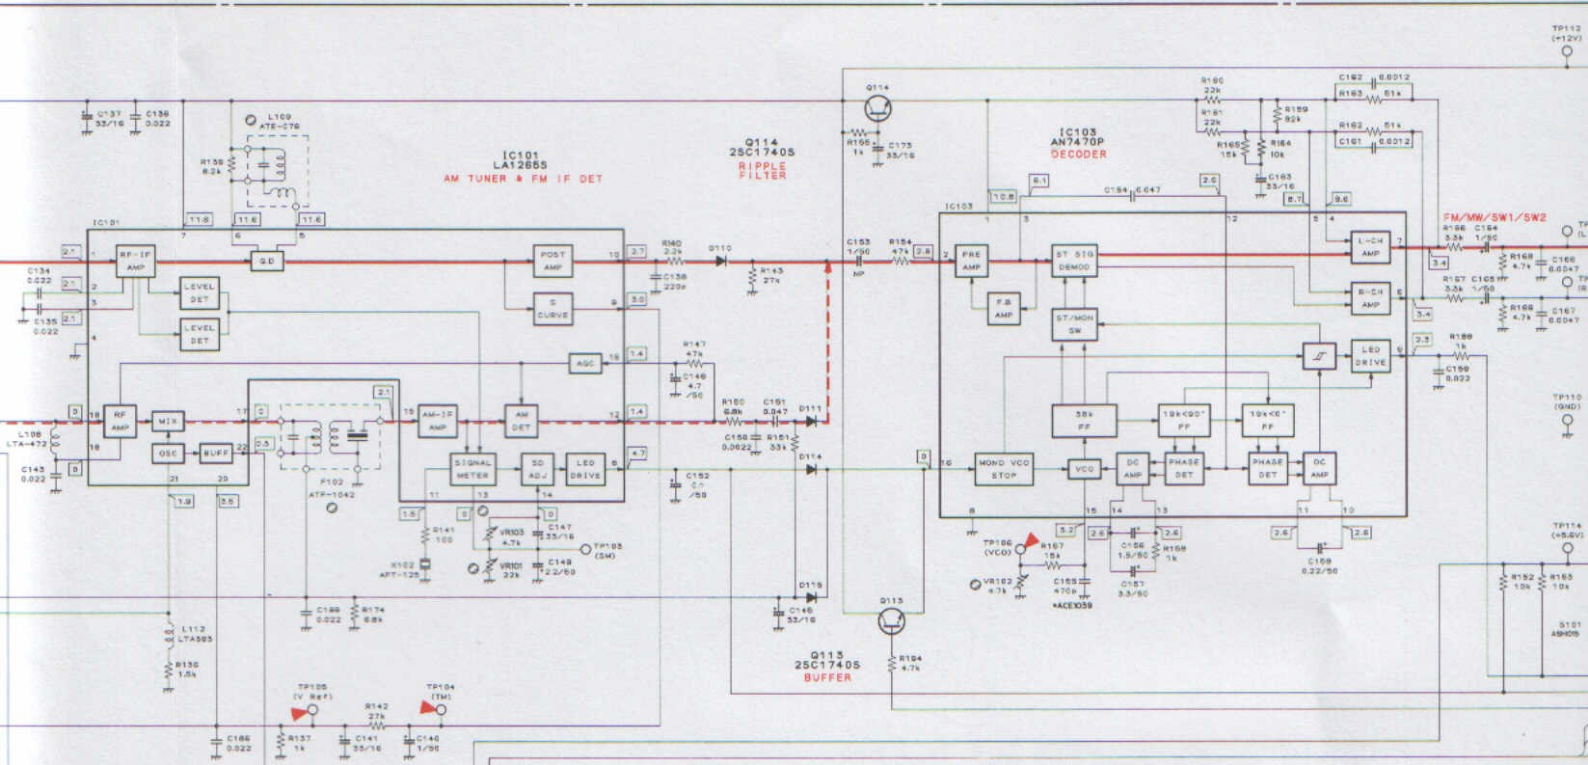


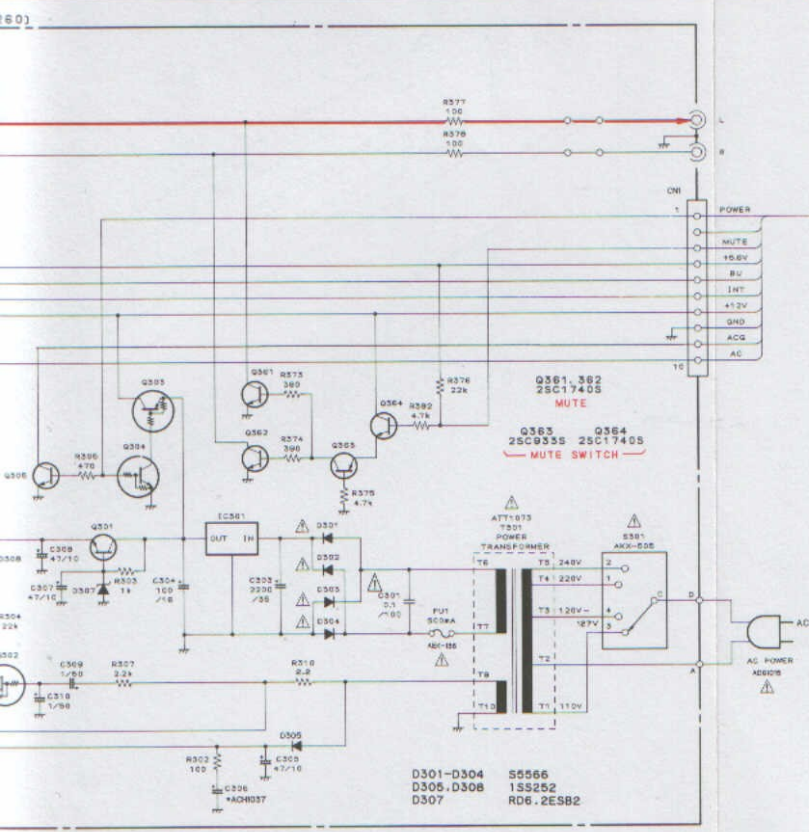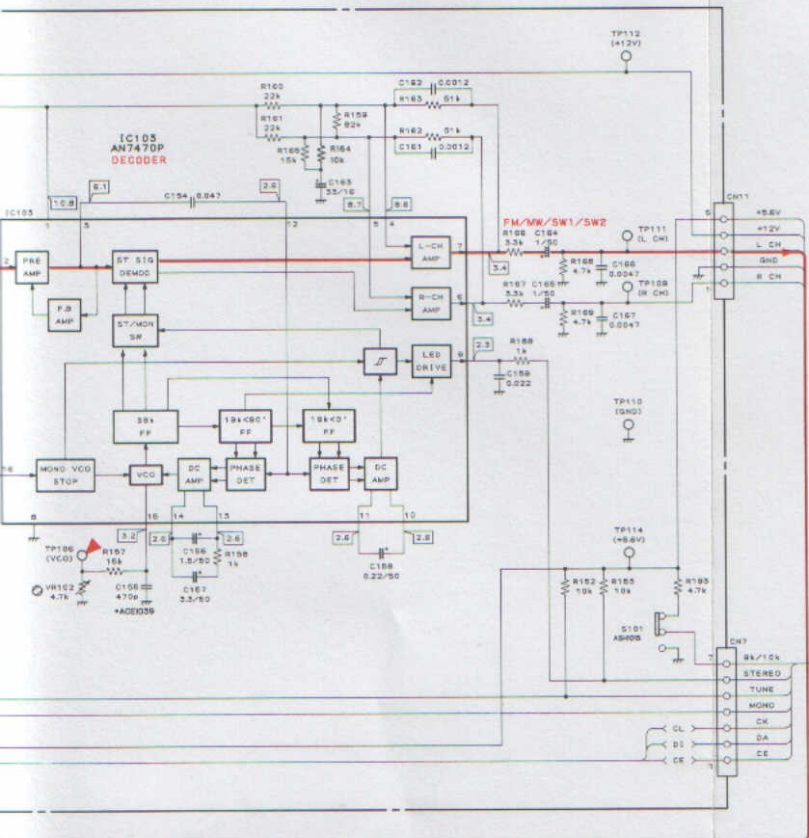

CONTROL ASSEMBLY (AWP1029)

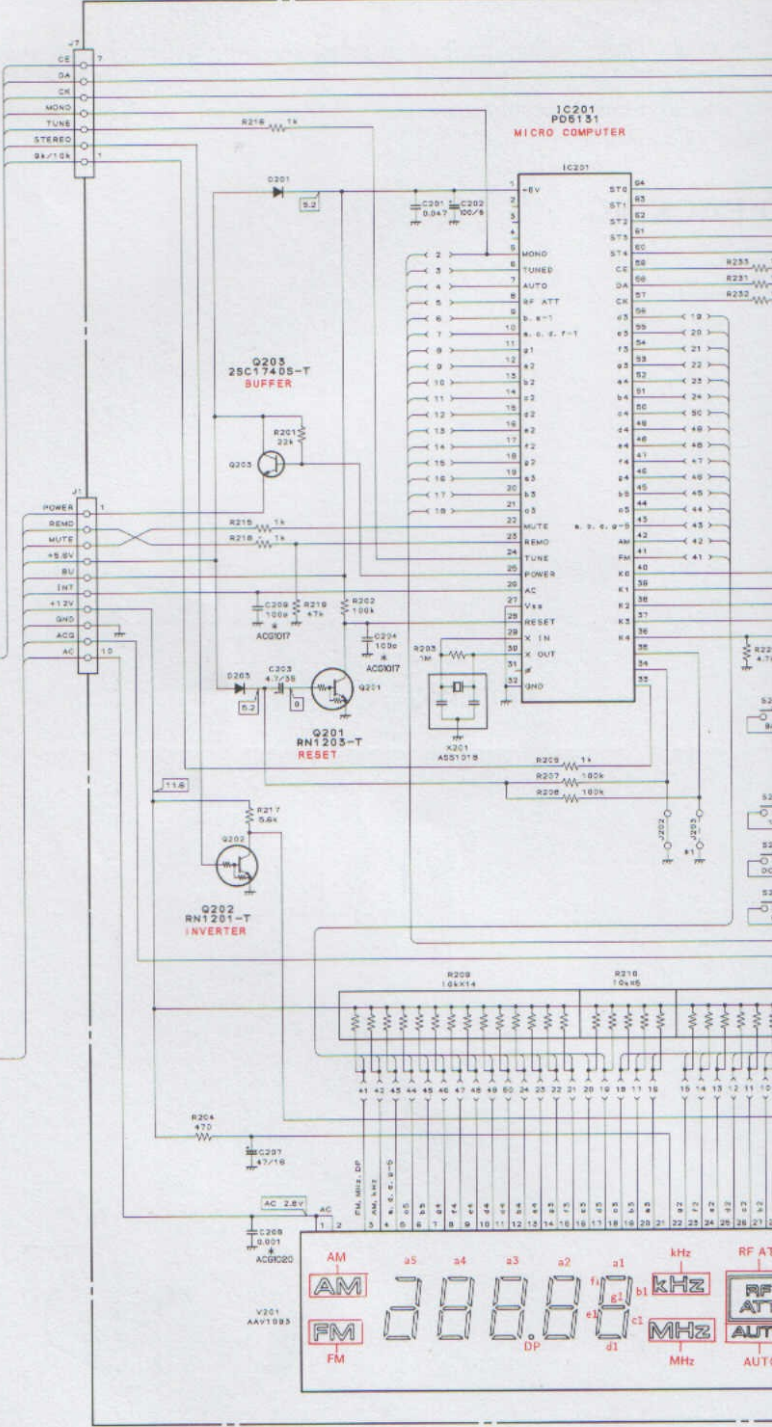

CONTROL ASSEMBLY (AWP1029)

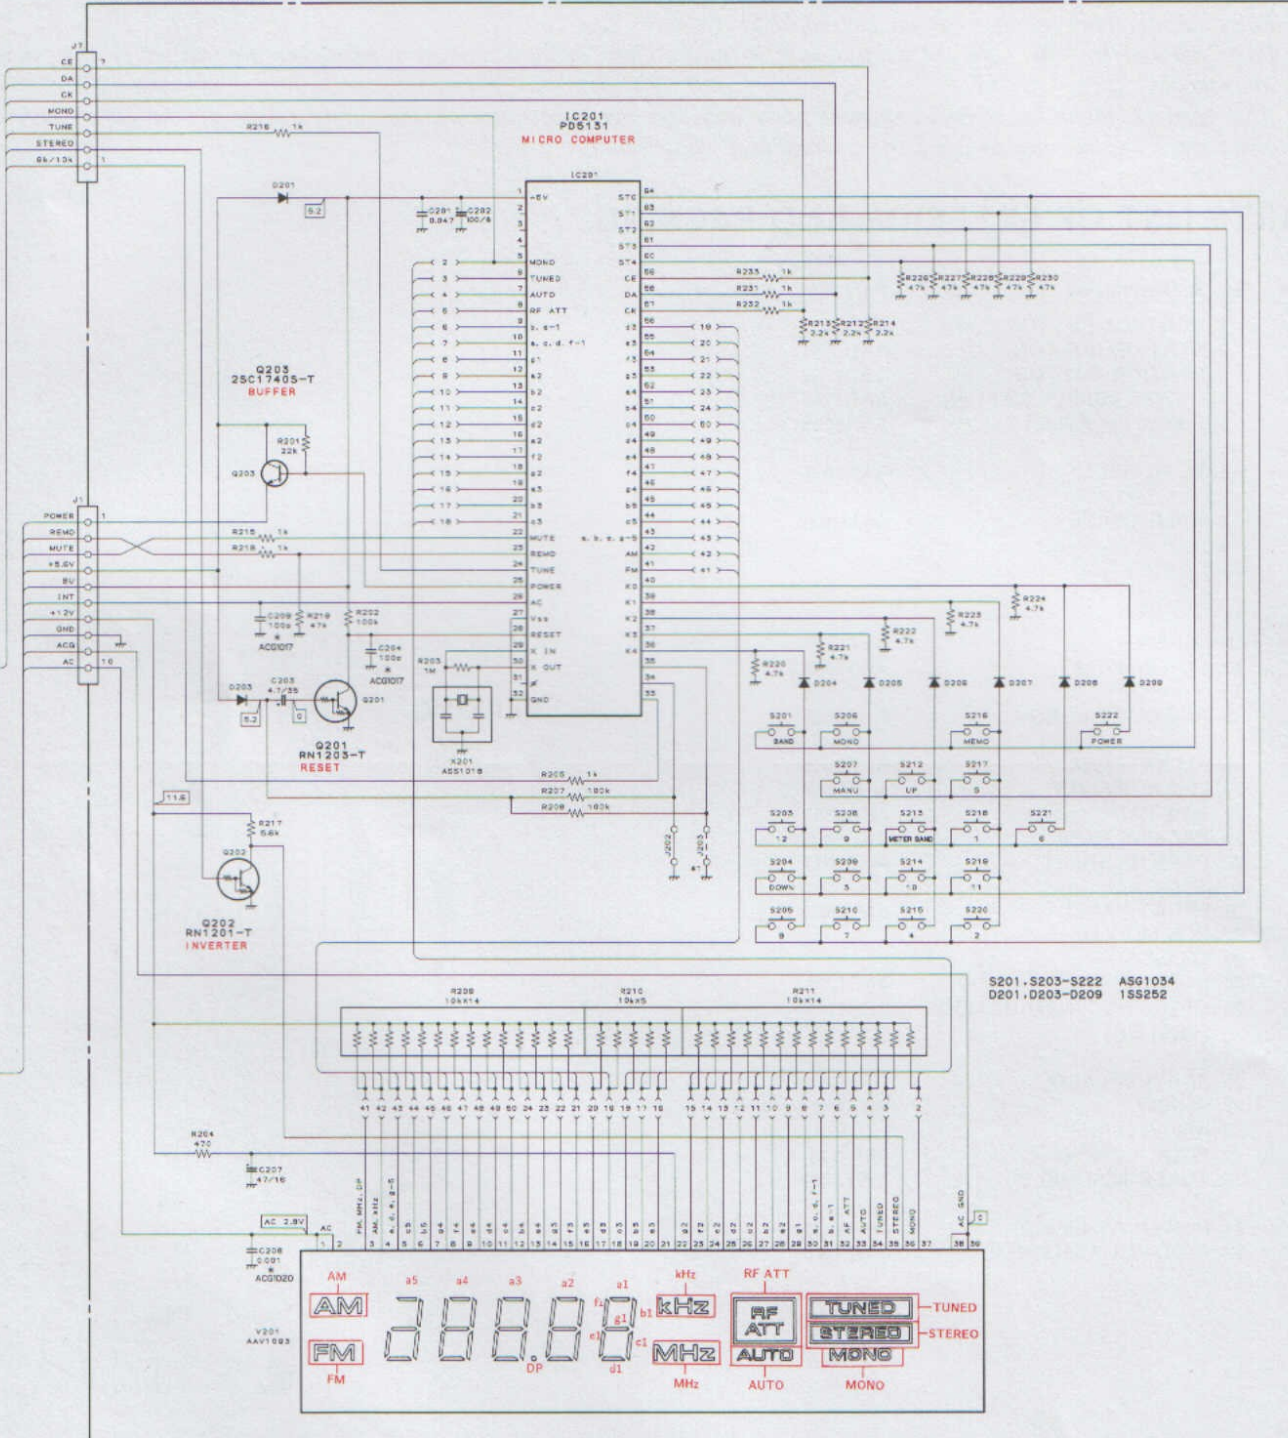

S201-S203-S222 A5G1034  
 D201-D203-D209 1S5252

\*1: Cut the jumper wire J201 when the control assembly of F-2275/SD is replaced.