 


QUADRALIZER AMPLIFIER

 
QL-6000A

FVW KLW


Input and output ass'y AWM-026

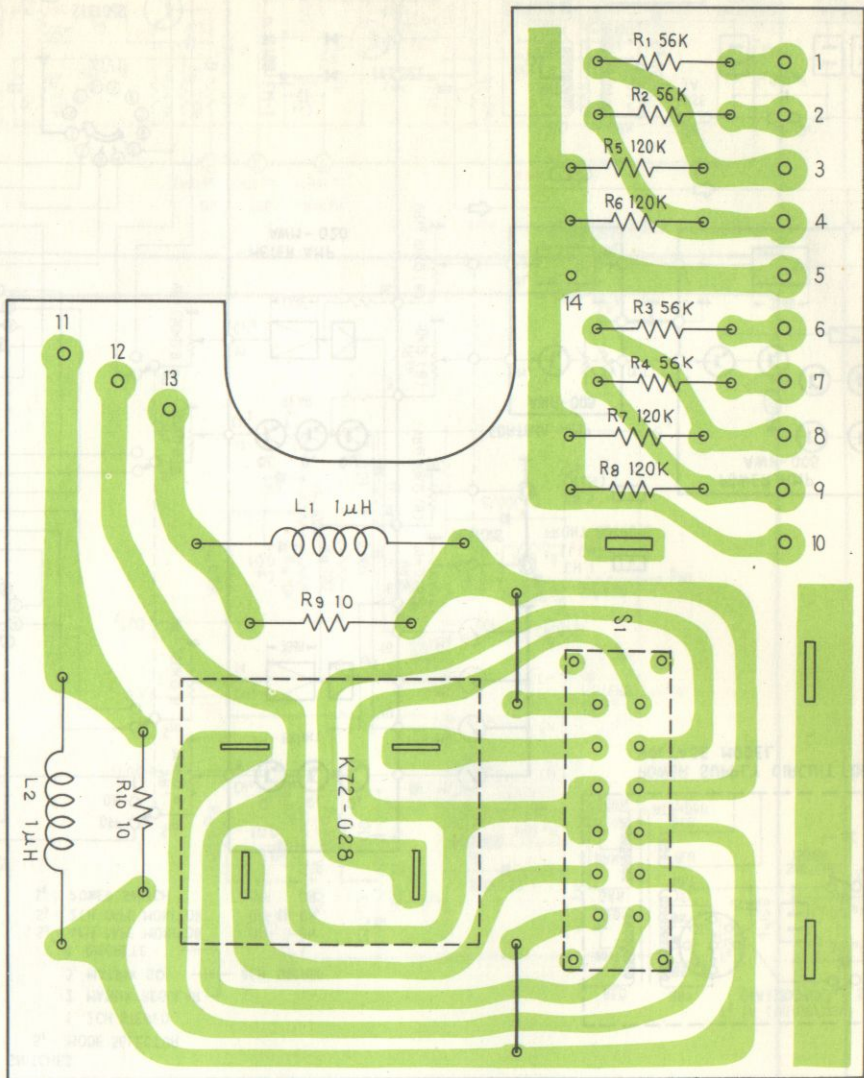


Power supply ass'y AWR-016

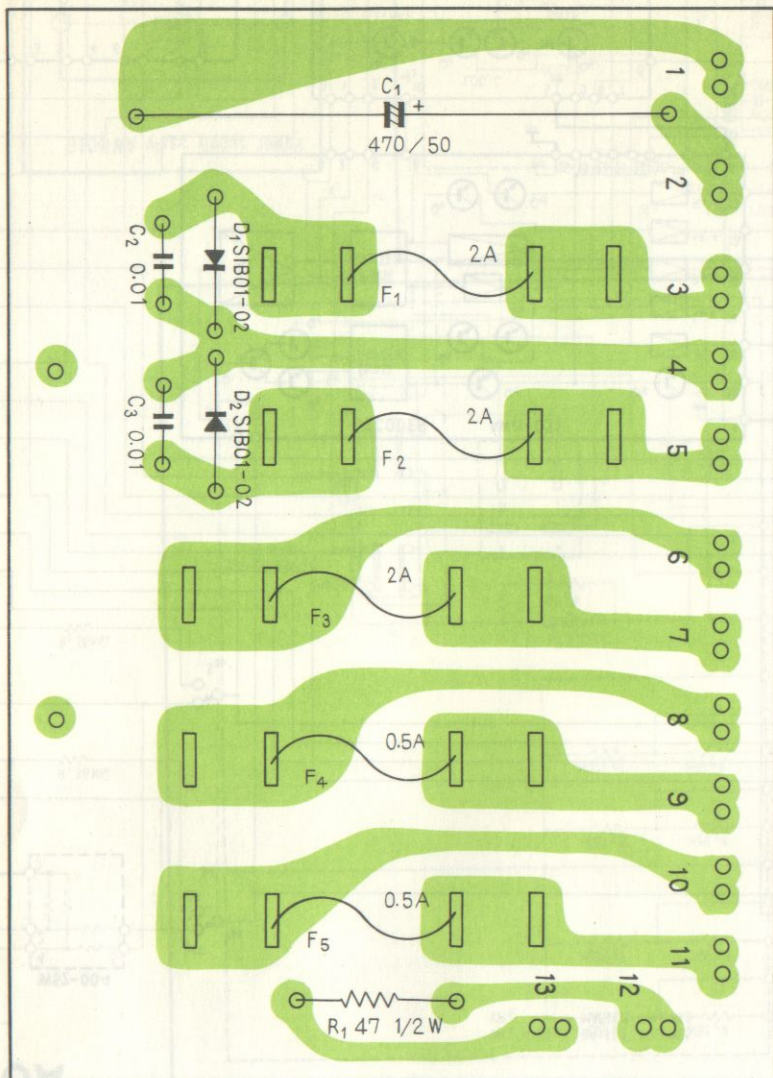


Control amp ass'y AWG-009

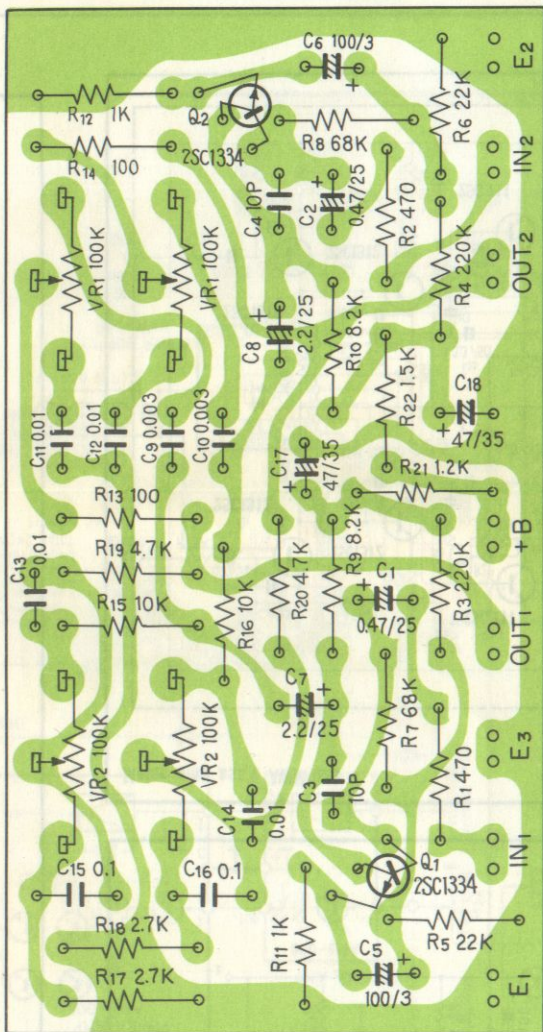 


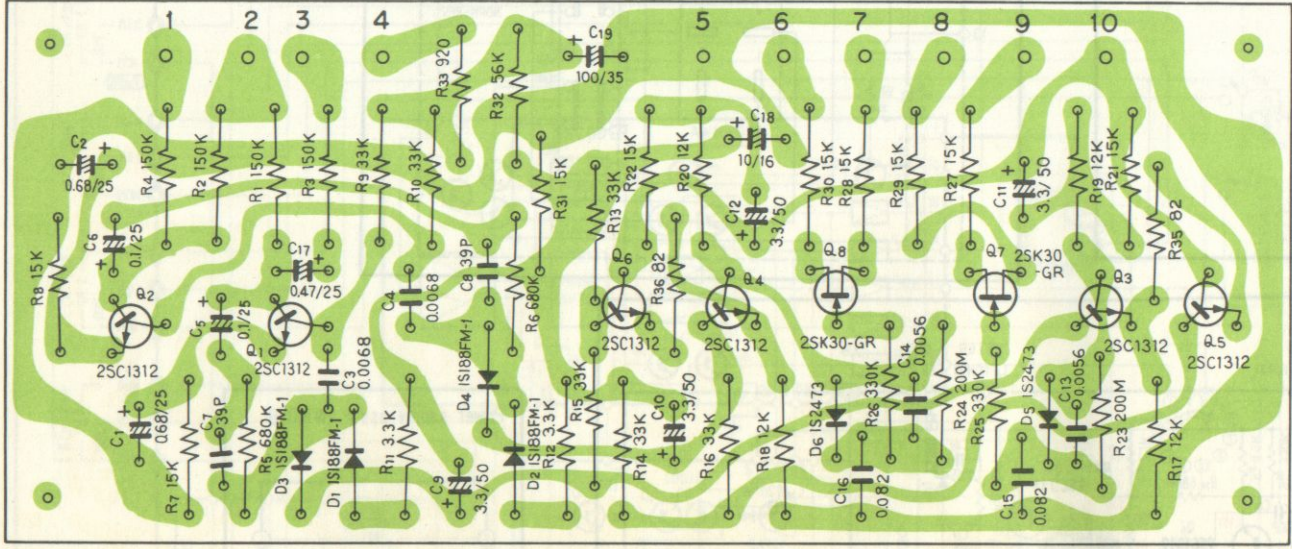 


Power amp ass'y AWH-005

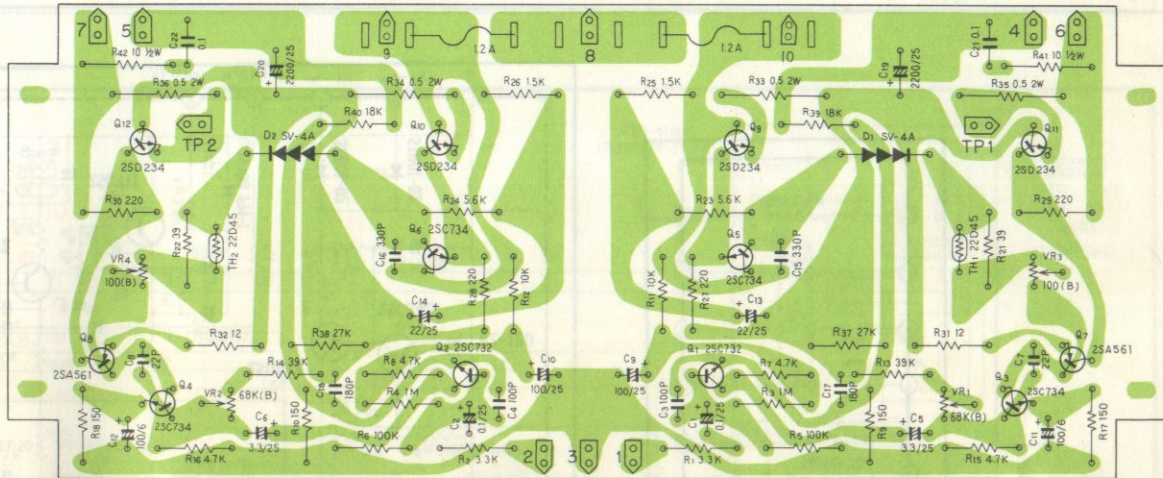 

Meter amp ass'y AWM-020

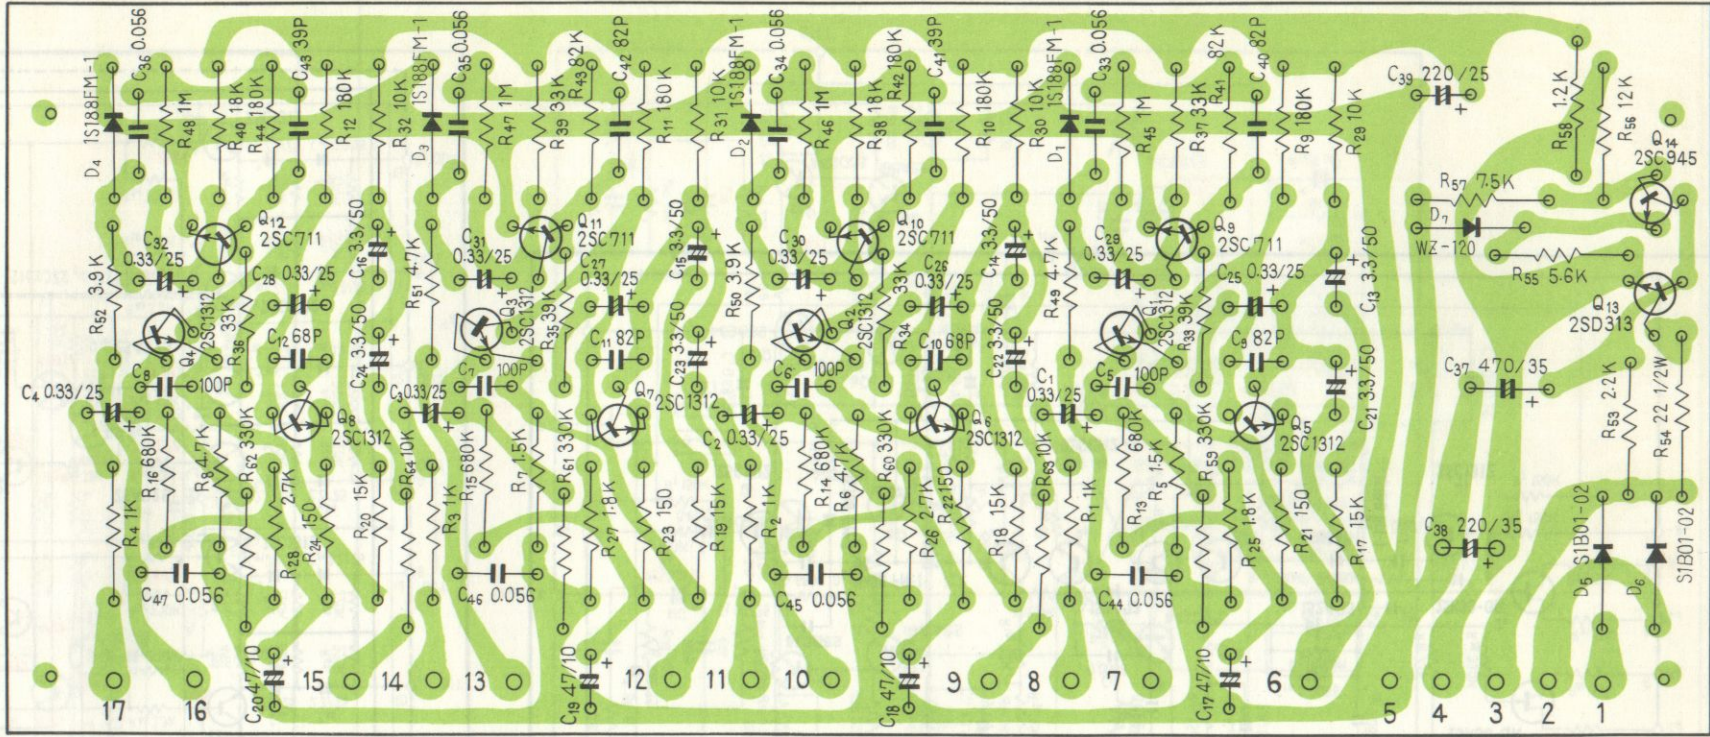 

Decoder ass'y AWM-031




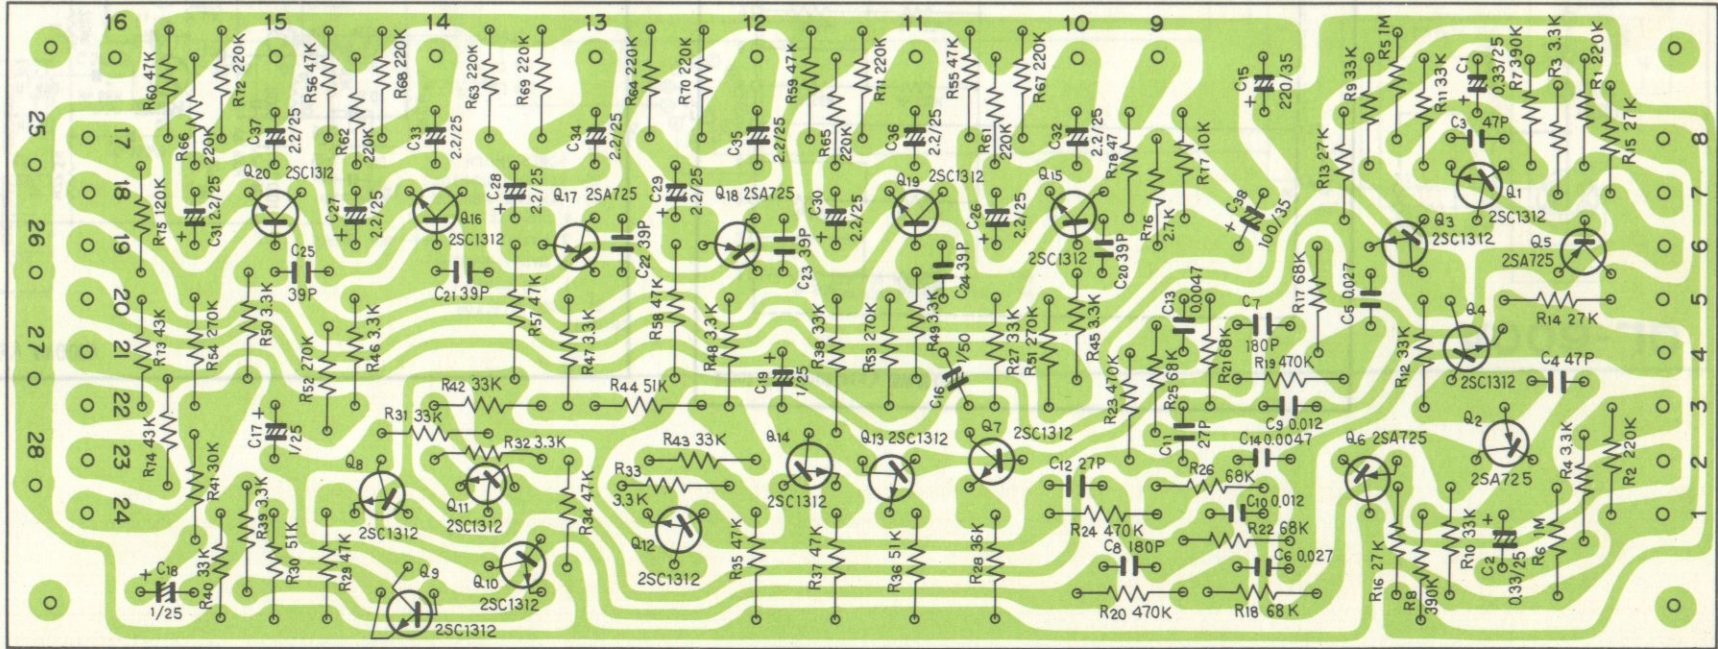 


QL-600A

VR₁ ~ VR₄ : PRISSET VOLUMES
 VR₅ : MASTER VOLUMES

SWITCHES

    - S₁ : MODE SELECTOR
 1. 2CH STEREO
 2. MATRIX REGULAR
 3. MATRIX SQ
 4. DISCRETE
- S₂ : 4CH TAPE MONITOR OFF ON
 S₃ : 2CH TAPE MONITOR OFF ON
 S₄ : POWER SWITCH OFF ON

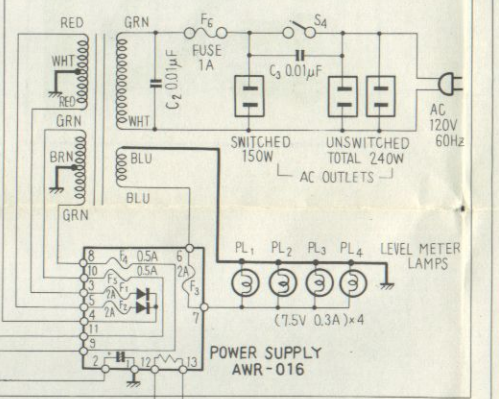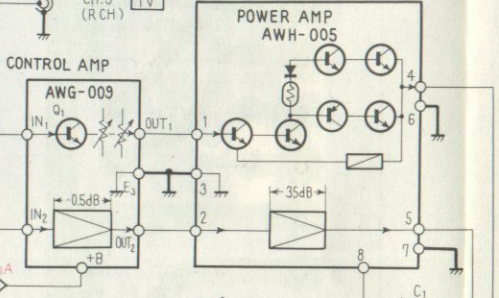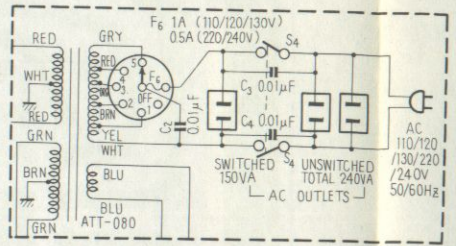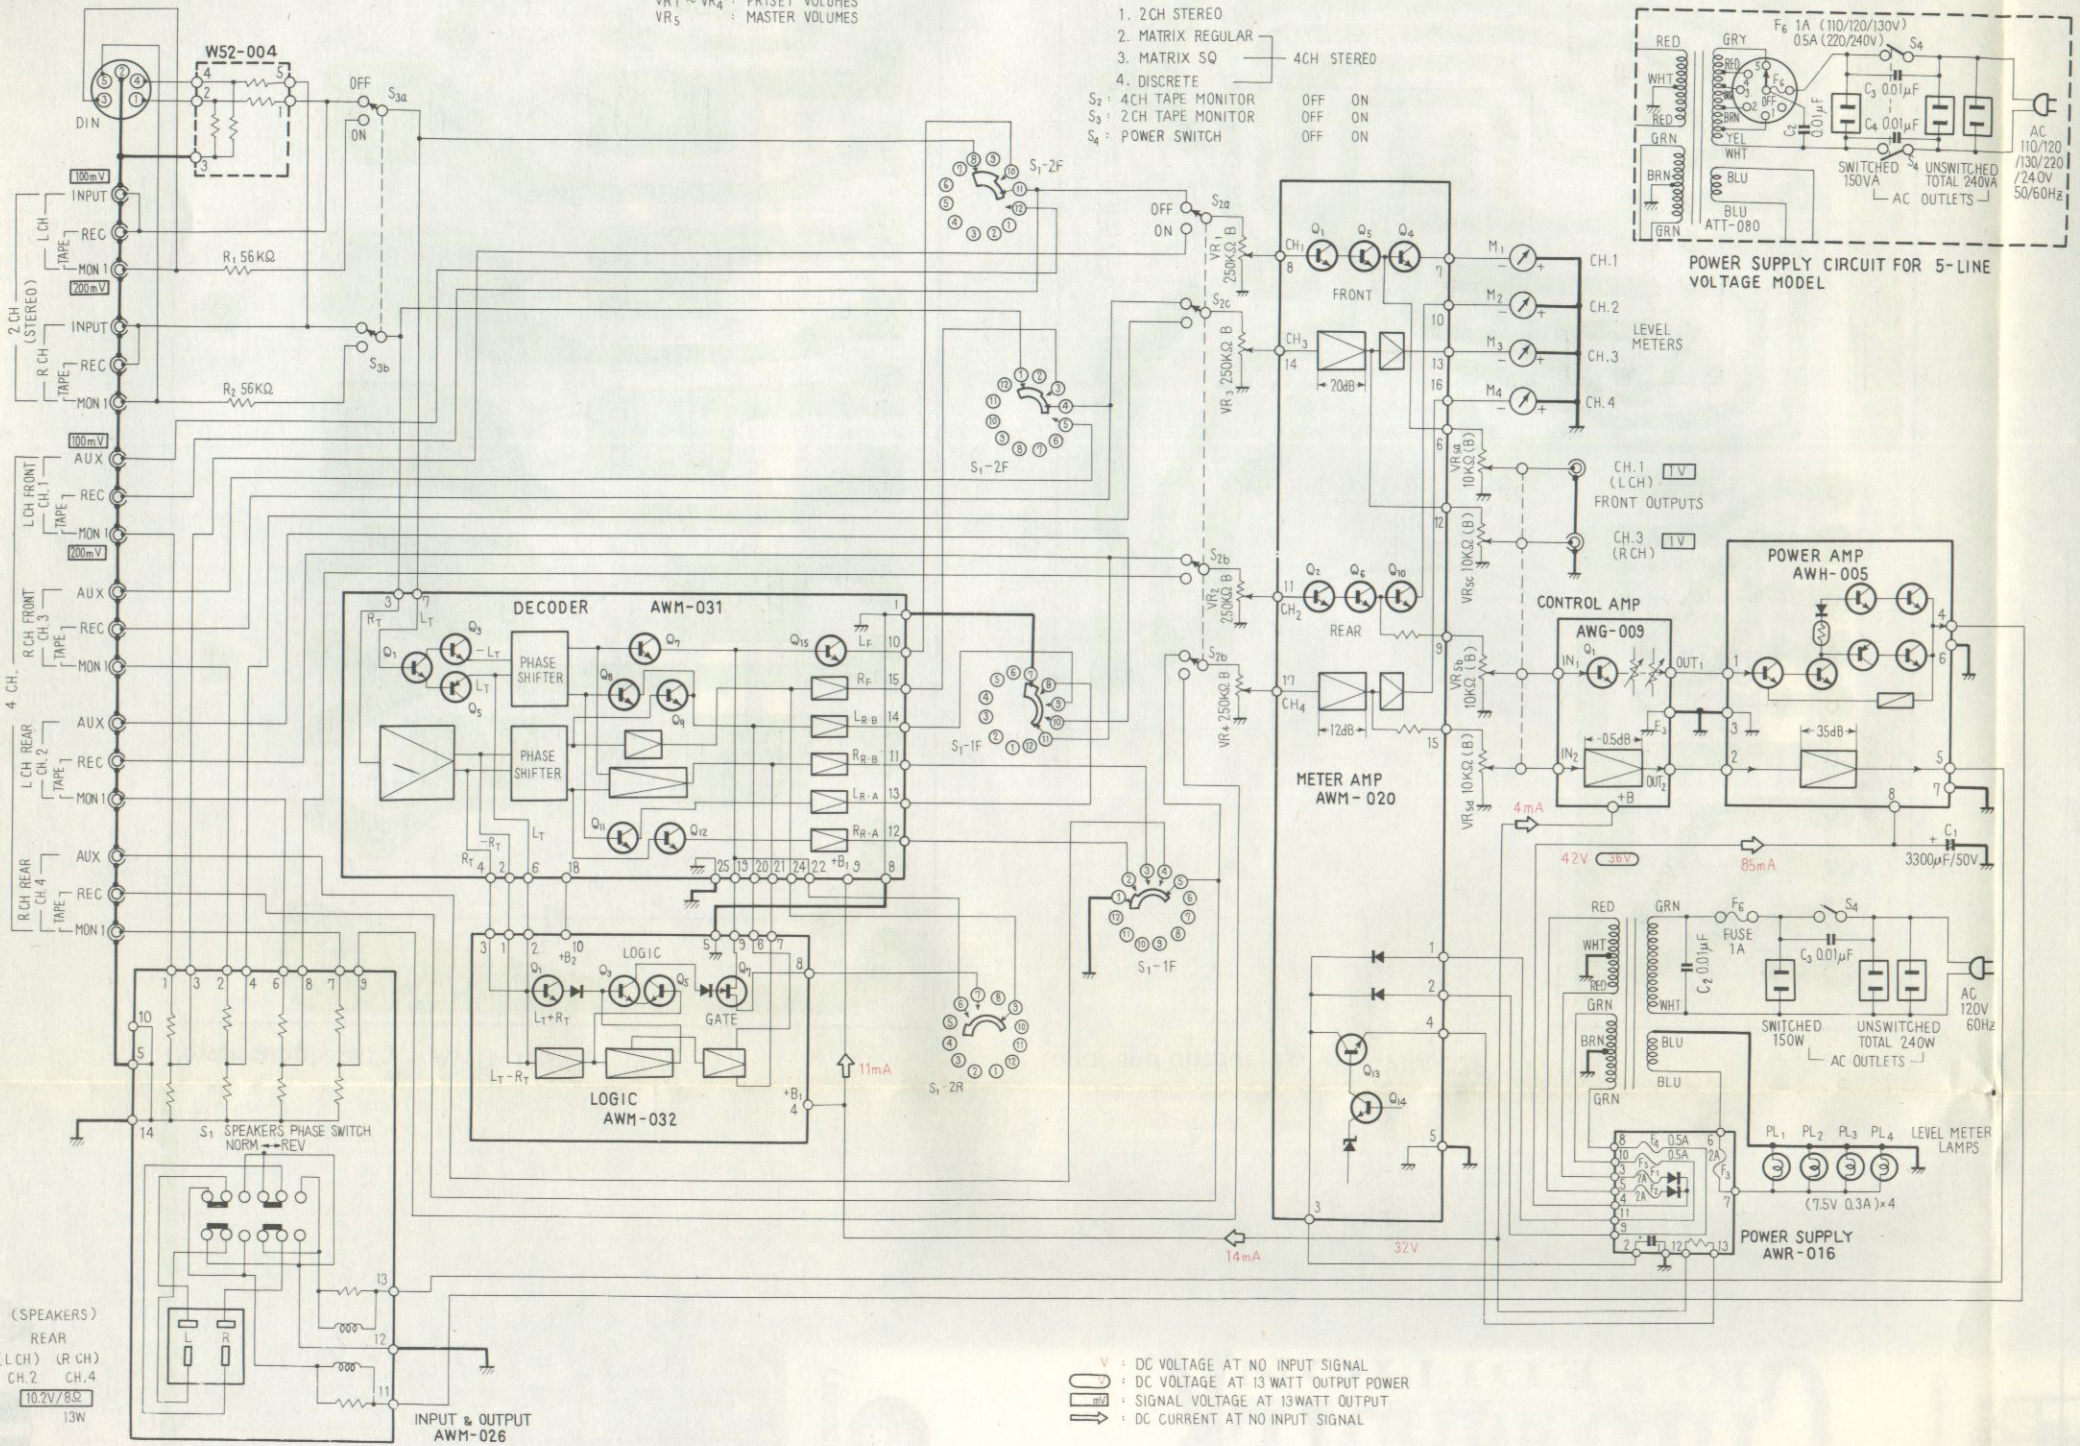


- V : DC VOLTAGE AT NO INPUT SIGNAL
- V : DC VOLTAGE AT 13 WATT OUTPUT POWER
- V : SIGNAL VOLTAGE AT 13 WATT OUTPUT
- A : DC CURRENT AT NO INPUT SIGNAL


(SPEAKERS)
 REAR
 (L CH) (R CH)
 CH. 2 CH. 4
 10.2V/8Ω
 13W

INPUT & OUTPUT
 AWM-026

 
Input & output ass'y AWM-026

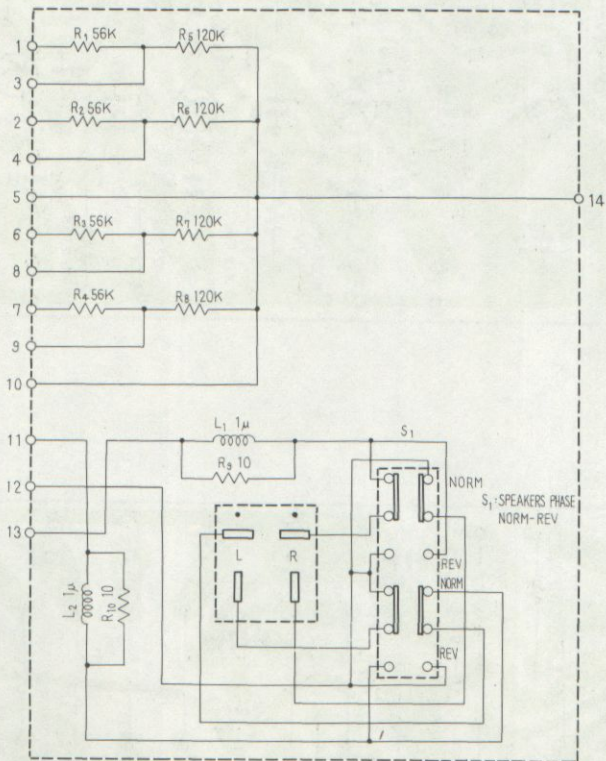


Meter amp ass'y AWM-020

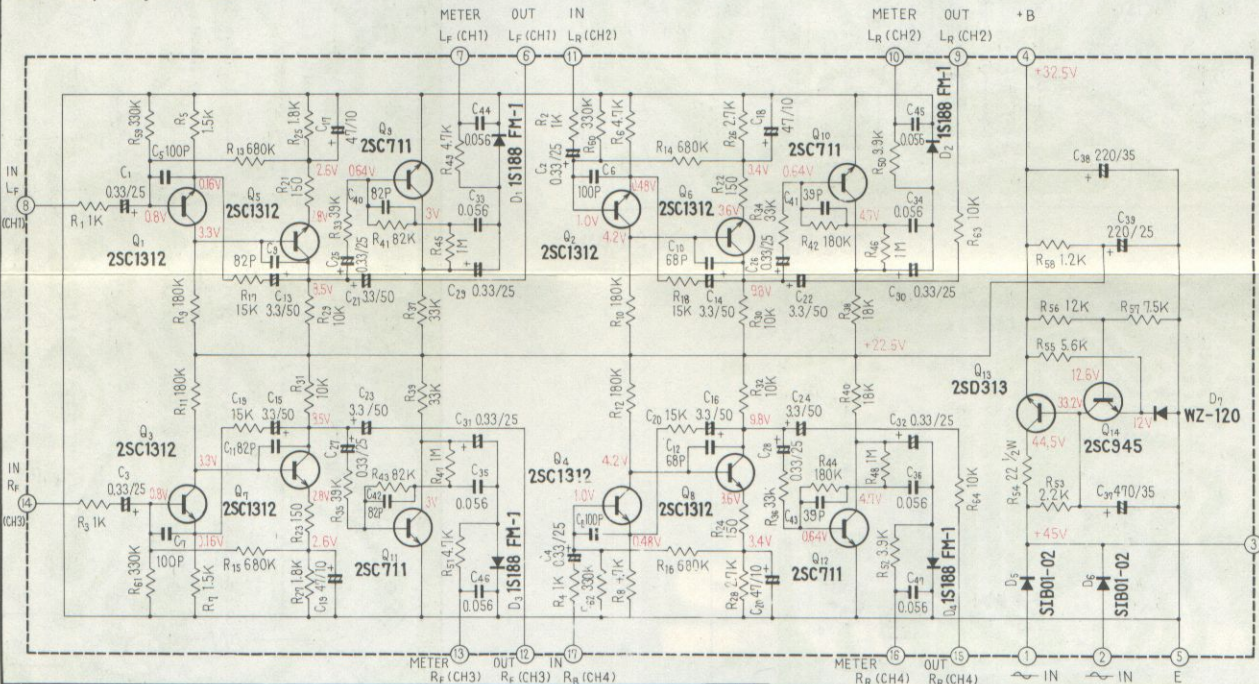 


Control amp ass'y AWG-009

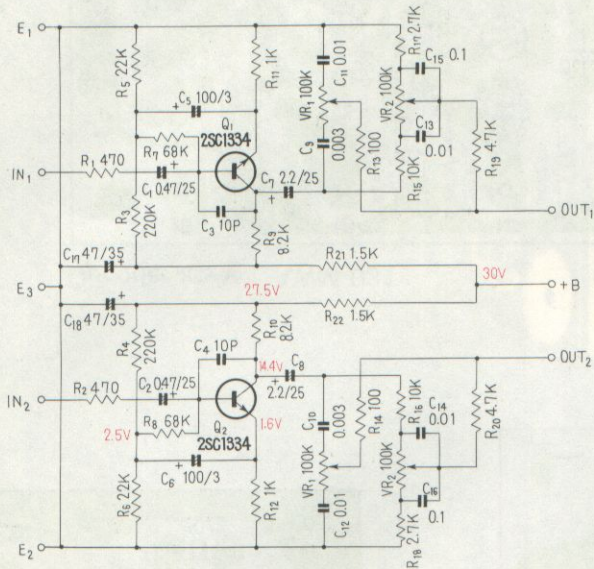 


Input & output ass'y AWM-026

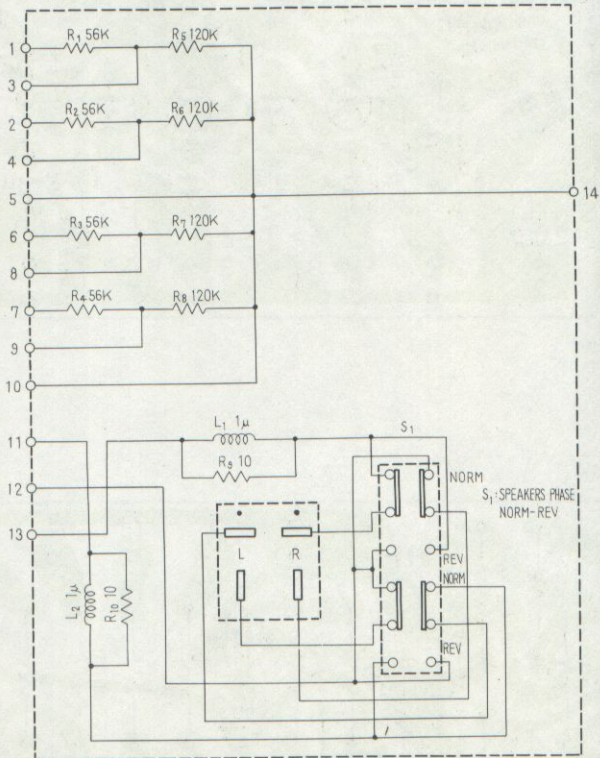 

Decoder ass'y AWM-031

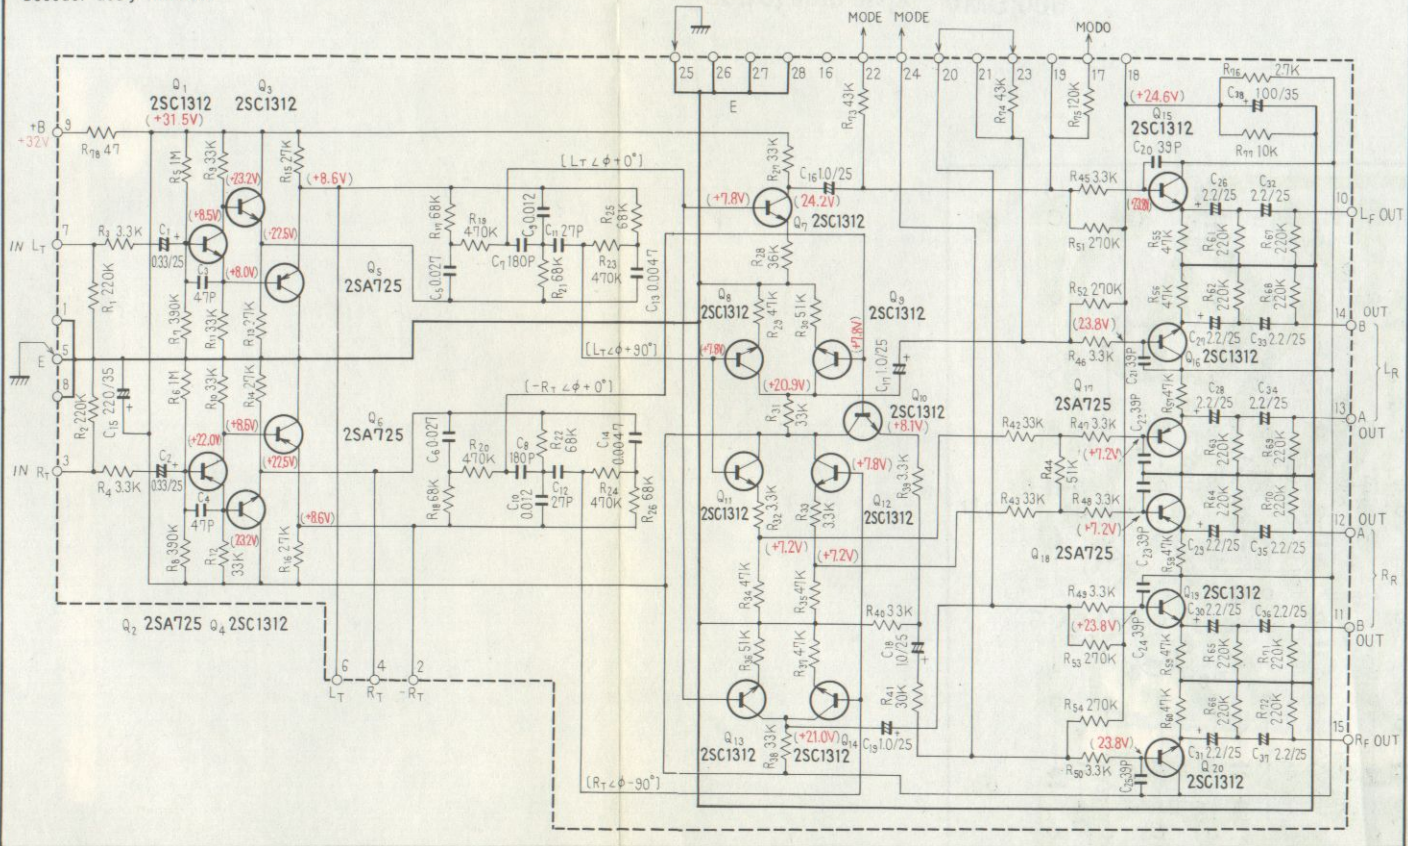 

Power amp ass'y AWH-005

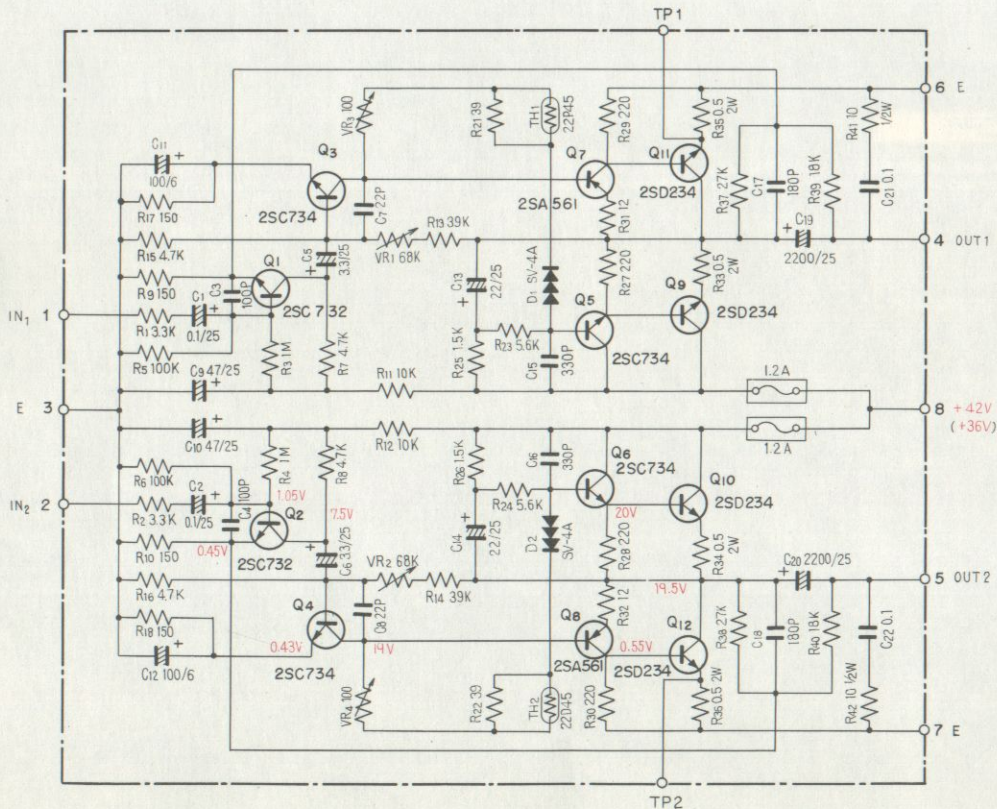 

Power supply ass'y AWR-016

