



- S_{1,1} FWD-REV SELECTOR SW. (FWD POSITION)
- S_{1,2} REC.-P.B. SELECTOR SW. (P.B. POSITION)
- S₂ EQUALIZER SELECTOR SW. (F.B. POSITION)
- MODE SW. (4 CHANNEL POSITION)
- MUTING SW. (PLAY POSITION)
- S₃ CONTACT POINT OFF SW. (PLAY/STOP POSITION)
- S₄ PLINGER SW.
- S₅ MOTOR SW.
- S₆ SHUT OFF SW.
- S₇ POWER SW.
- S₈ AUTO REVERSE SW.
- S₉ OSC. SW.
- RL₁ FWD-REV SELECTOR SW. (FWD POSITION)

- VR_{1,100} FWD-EQUALIZER ADJ.
- VR₂ REV-EQUALIZER ADJ.
- VR_{3,100} P.B. LEVEL
- VR_{4,100} REC. LEVEL
- VR_{5,100} REC. MASTER VR
- VR_{6,100} LEVEL METER
- VR_{7,100} FWD REC. LEVEL ADJ.
- VR_{8,100} REV. REC. LEVEL ADJ.
- VR₉ FWD LEFT BIAS ADJ.
- VR₁₀ REV LEFT BIAS ADJ.
- VR₁₁ FWD RIGHT BIAS ADJ.
- VR₁₂ REV RIGHT BIAS ADJ.
- VR₁₃ REAR LEFT BIAS ADJ.
- VR₁₄ REAR RIGHT BIAS ADJ.
- VR₁₅ OSC. INTENSITY