


# PIONEER SA-7300

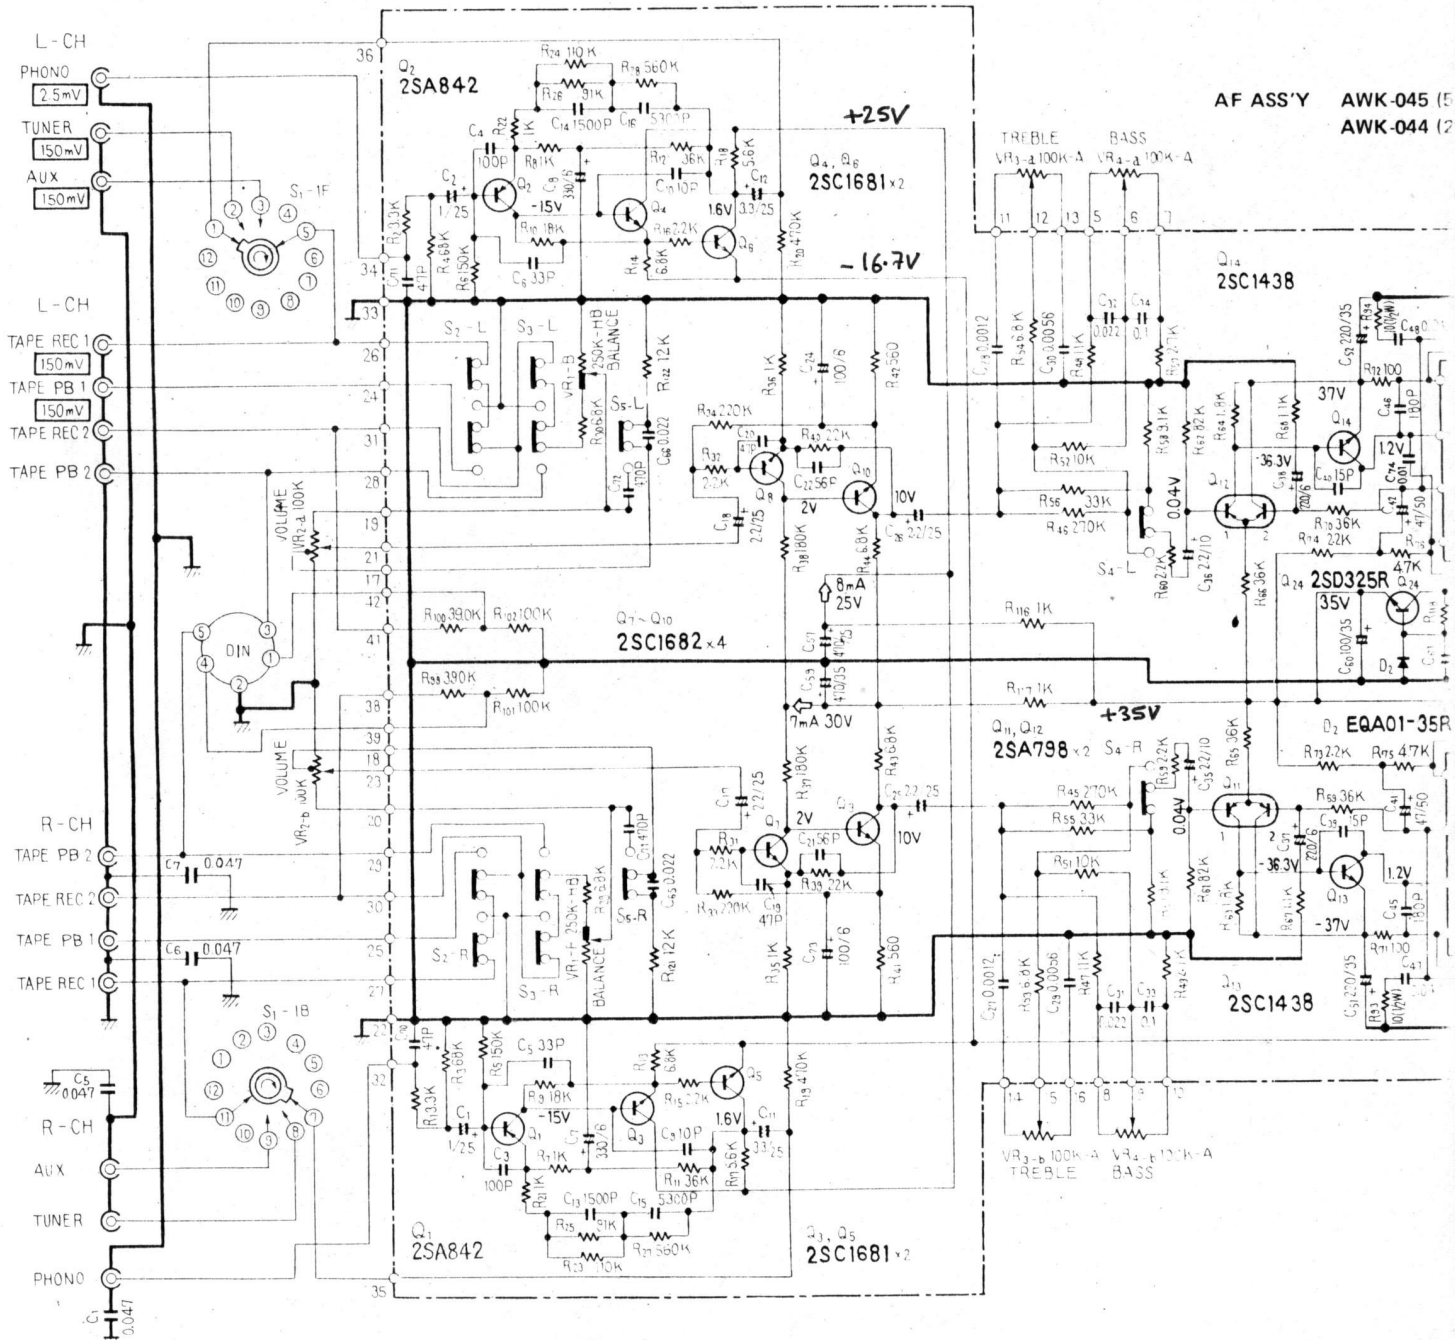

## SWITCHES

- S<sub>1</sub> : FUNCTION SWITCH
  - 1. PHONO
  - 2. TUNER
  - 3. AUX
- S<sub>2</sub> : TAPE MONITOR 1 SOURCE → TAPE P.B.
- S<sub>3</sub> : TAPE MONITOR 2 SOURCE → TAPE P.B.
- S<sub>4</sub> : TONE SWITCH
  - OFF → ON
- S<sub>5</sub> : LOUDNESS
  - OFF → ON
- S<sub>6</sub> : SPEAKER SELECTOR
  - 1. SP OFF
  - 2. SP A
  - 3. SP B
  - 4. SP A + B

- S<sub>7</sub> : POWER SWITCH
  - OFF → ON
- S<sub>8</sub> : RELAY
  - ON → OFF

## RESISTORS

IN OHM, 1/4W, ±5% TOLERANCE UNLESS OTHERWISE NOTED K:KΩ M: MΩ


## CAPACITORS

IN μF UNLESS OTHERWISE NOTED P: pF


## NOTES

- : SIGNAL VOLTAGE NECESSARY FOR 0dB 37W BΩ OUTPUT POWER (1KHZ)
- V : DC VOLTAGE AT NO INPUT SIGNAL.
- ( V ) : DC VOLTAGE AT 37 WATTS x 2 OUTPUTS
- ↖ A : DC CURRENT AT NO INPUT SIGNAL.


**AF ASS'Y AWK-045 (5-Voltage models)  
AWK-044 (220V models only)**

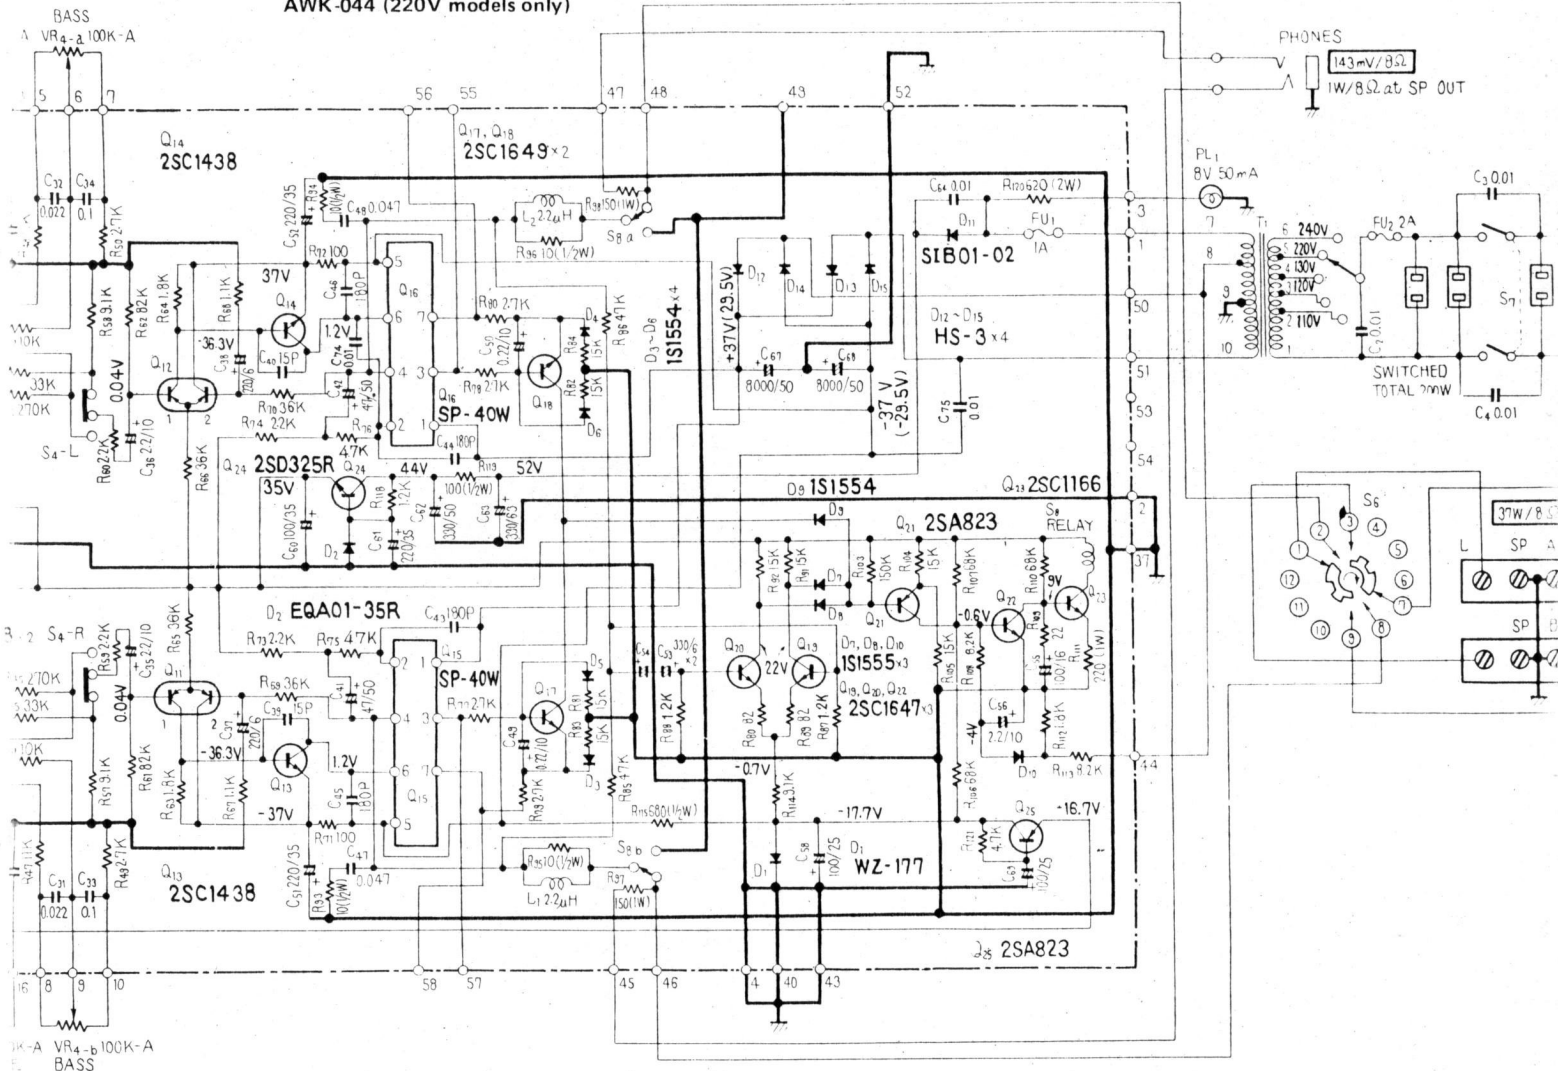

SIGNAL VOLTAGE NECESSARY FOR OBTAINING  
37W/8Ω OUTPUT POWER (1KHz).  
DC VOLTAGE AT NO INPUT SIGNAL.  
DC VOLTAGE AT 37 WATTS x2 OUTPUTS.  
DC CURRENT AT NO INPUT SIGNAL.

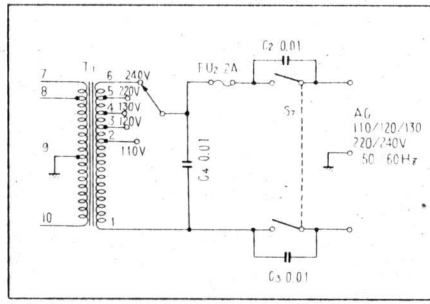

MANUFACTURED FOR ENGLAND

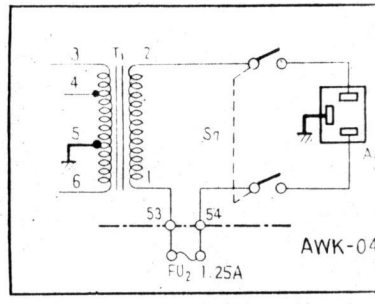

POWER SUPPLY (220V MODEL)