



STEREO PREAMPLIFIER

SC-700

UNIT \ ROUND LABEL	FV	KC	KL			
FM FRONT END						
FM IF UNIT						
MPX UNIT						
AM TUNER UNIT						
MUTING UNIT						
HEAD AMP UNIT	W15-049	W15-049	W15-049			
CONTROL AMP UNIT	W15-050	W15-050	W15-050			
MAIN AMP UNIT						
POWER SUPPLY UNIT	W16-014	W16-014	W16-014			
SWITCH UNIT	W18-021	W18-021	W18-021			
SWITCH UNIT						
SWITCH UNIT						
TONE COLOR UNIT						
CONTROL UNIT						
MIC AMP UNIT						
REVERBE AMP UNIT						
REVERBE UNIT						
HEAD PHONE UNIT	W15-051	W15-051	W15-051			



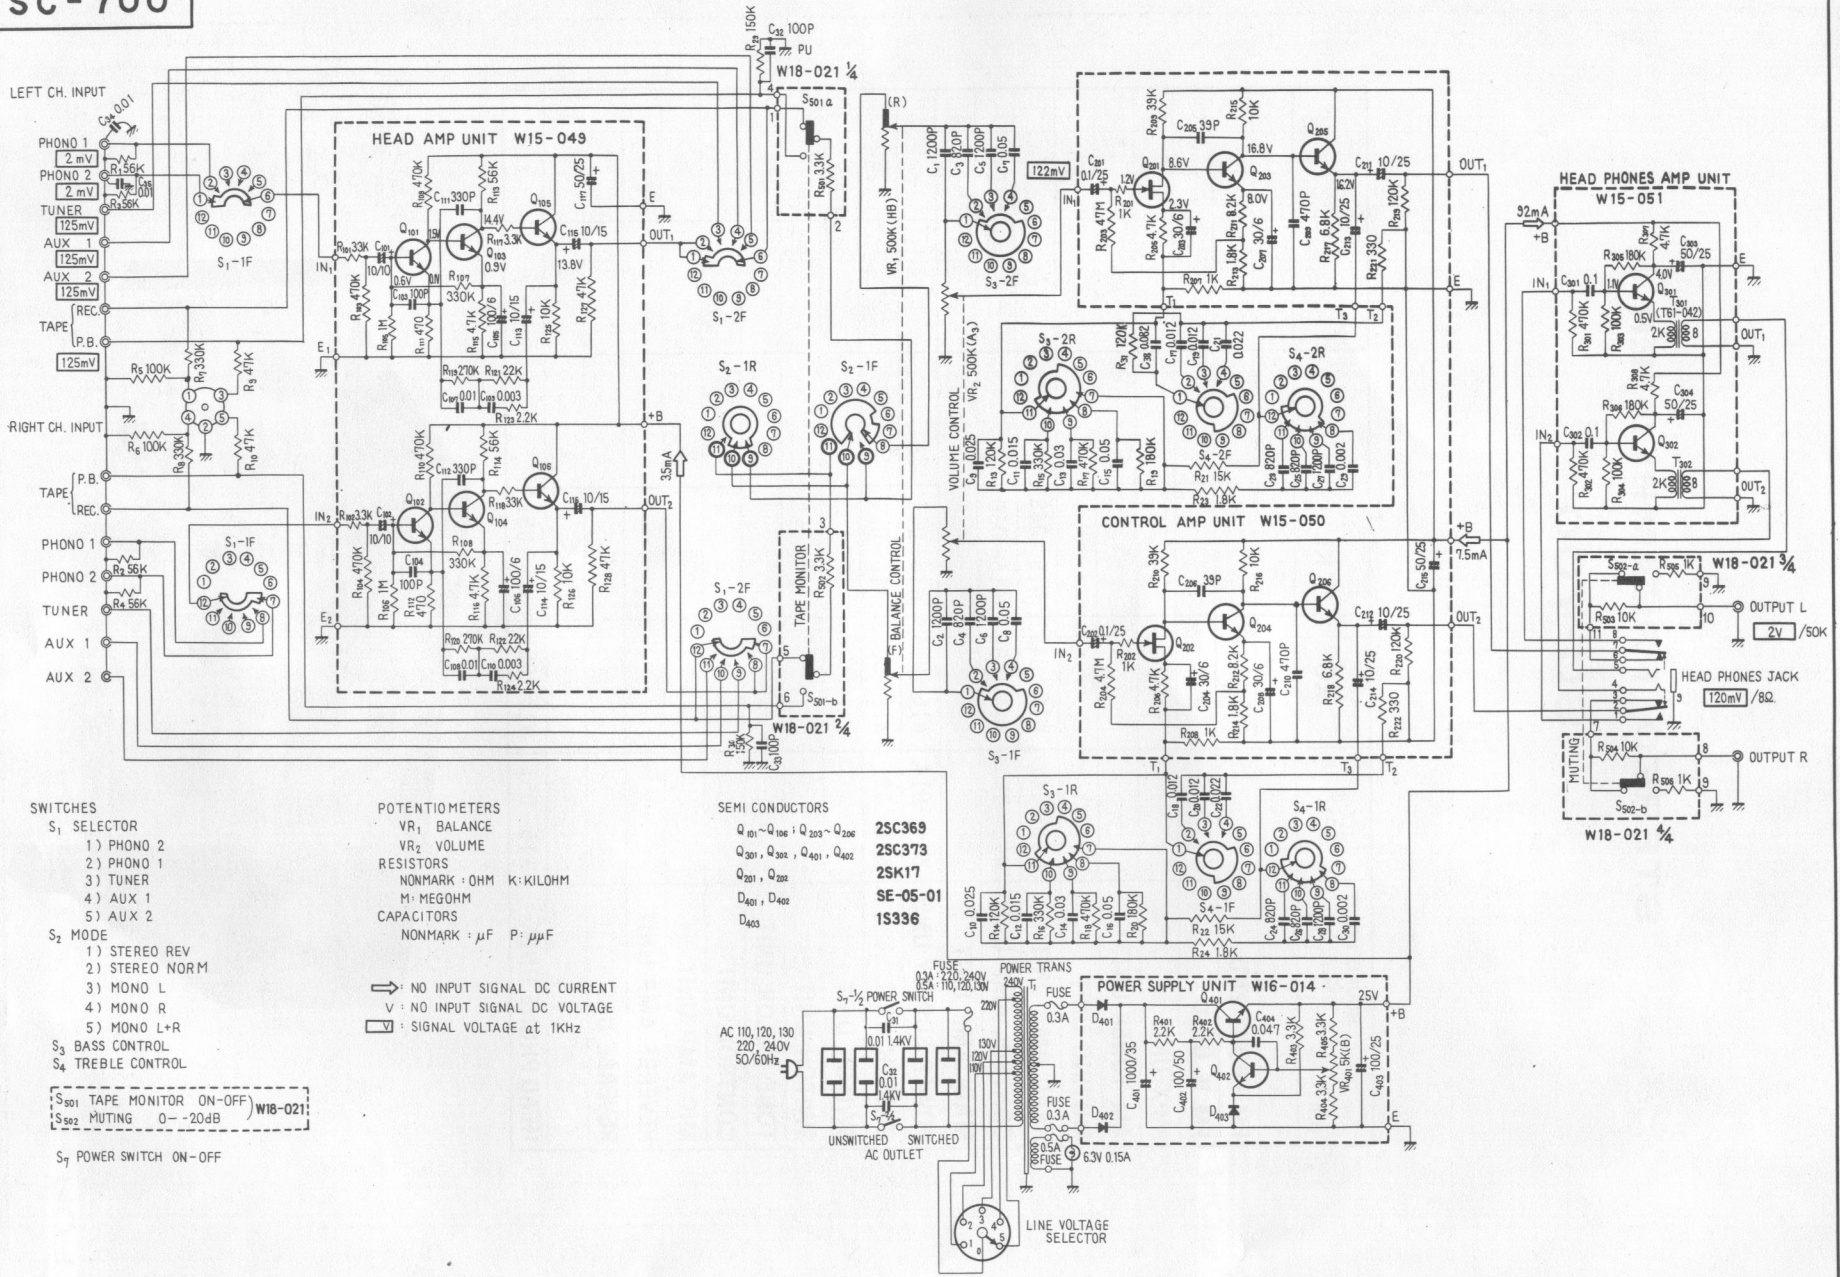

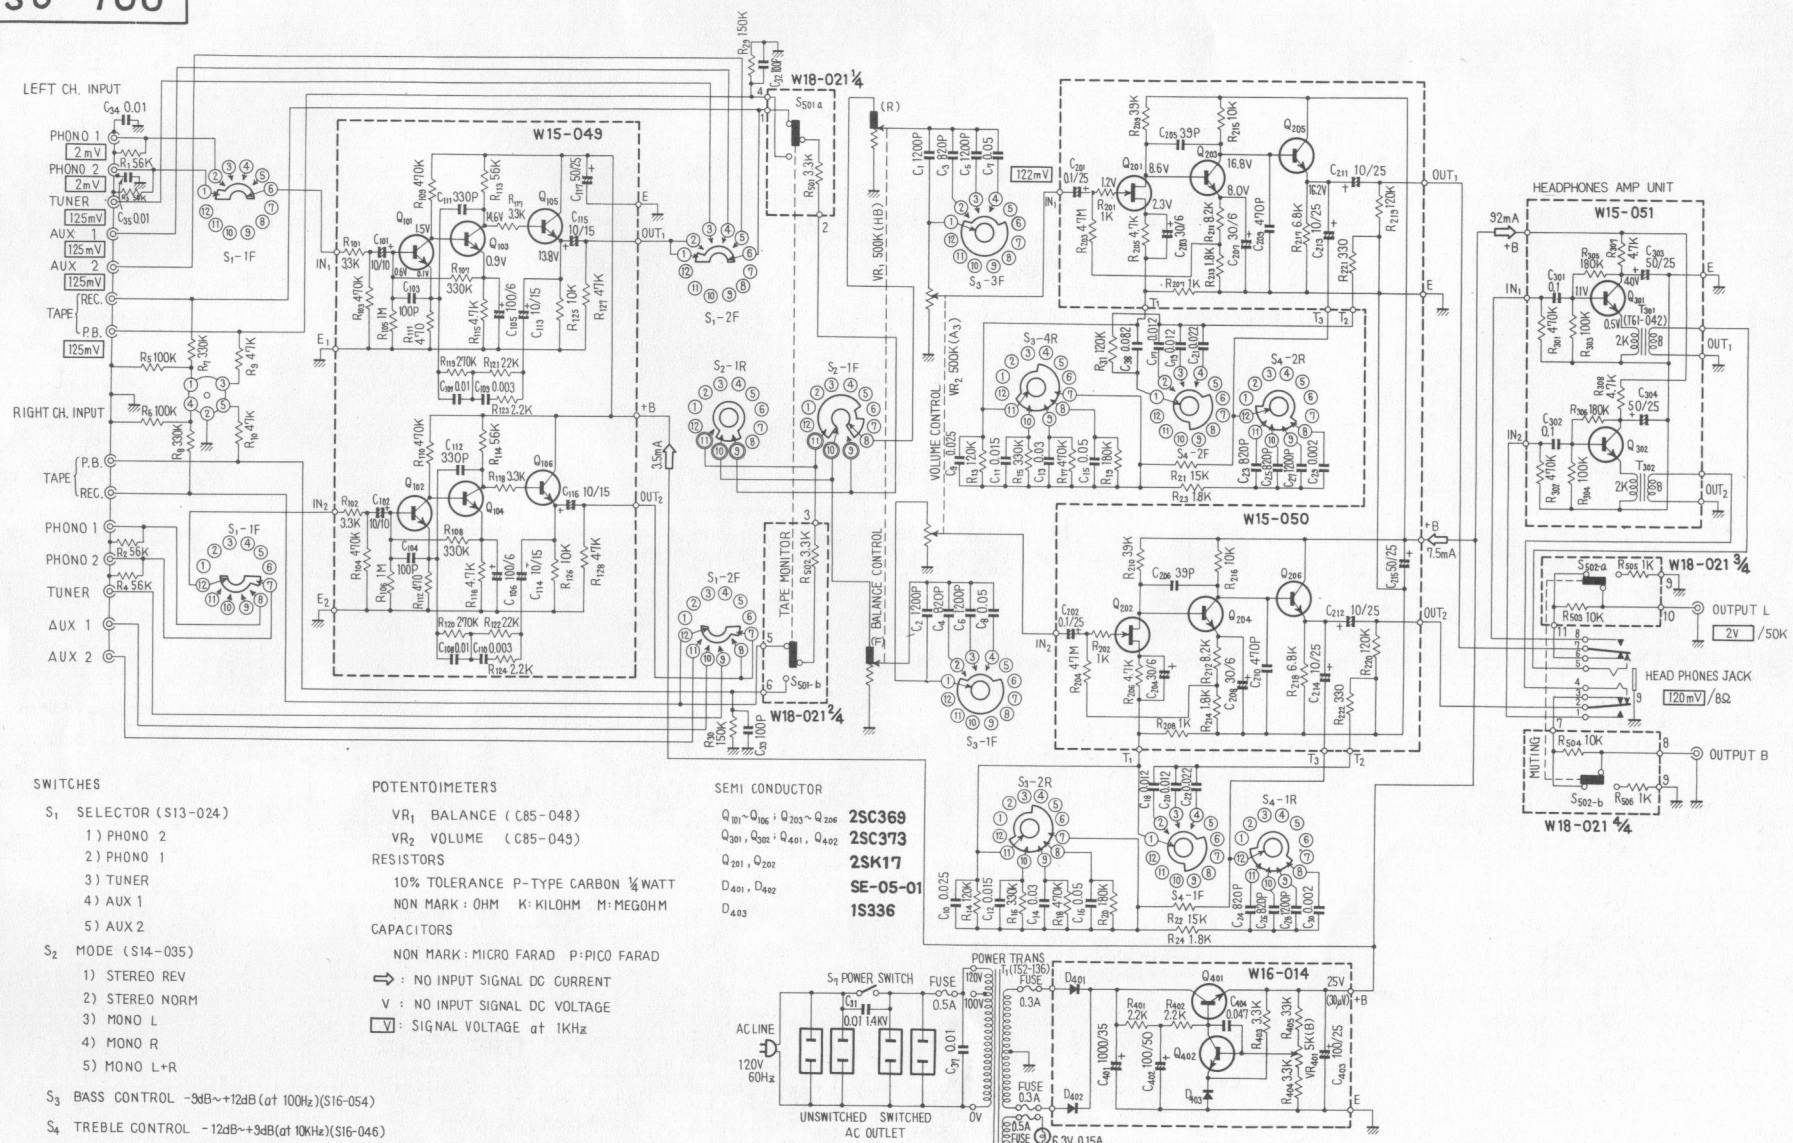

SWITCHES

- S₁ SELECTOR (S13-024)
 - 1) PHONO 2
 - 2) PHONO 1
 - 3) TUNER
 - 4) AUX 1
 - 5) AUX 2
- S₂ MODE (S14-035)
 - 1) STEREO REV
 - 2) STEREO MON
 - 3) MONO L
 - 4) MONO R
 - 5) MONO L+R
- S₃ BASS CONTROL -3dB~+12dB (at 100Hz) (S16-054)
- S₄ TREBLE CONTROL -12dB~+3dB (at 10KHz) (S16-046)
- S₅₀₁ TAPE MONITOR ON-OFF (S31-013) W18
- S₅₀₂ MUTING 0--20dB (S31-013) -021
- S₇ POWER SWITCH ON-OFF (S11-014)

POTENTIOMETERS

- VR₁ BALANCE (C85-048)
 - VR₂ VOLUME (C85-049)
- RESISTORS
10% TOLERANCE P-TYPE CARBON 1/4 WATT
NON MARK : ΩHM K: KILOHM M: MEGOHM
- CAPACITORS
NON MARK: MICRO FARAD P: PICO FARAD
↕ : NO INPUT SIGNAL DC CURRENT
V : NO INPUT SIGNAL DC VOLTAGE
∇ : SIGNAL VOLTAGE at 1kHz

SEMI CONDUCTOR

- Q₁₀₁~Q₁₀₆; Q₂₀₃~Q₂₀₆ **2SC369**
- Q₃₀₁, Q₃₀₂; Q₄₀₁, Q₄₀₂ **2SC373**
- Q₂₀₁, Q₂₀₂ **2SK17**
- D₄₀₁, D₄₀₂ **SE-05-01**
- D₄₀₃ **1S336**

