

Service Manual

 **PIONEER**
The Art of Entertainment

ORDER NO.
ARP2773

STEREO RECEIVER

SX-202R

HEWZ, HE, HB, YPW

SX-102

HEWZ, HE, HB

- Refer to the service manual ARP2556 for SX-221R and SX-121.
- This manual is applicable to the following : SX-202R/HEWZ, HE, HB and YPW ; SX-102/HEWZ, HE and HB.

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS SERVICE INC. P.O. Box 1760, Long Beach, California 90801 U.S.A.
PIONEER ELECTRONICS OF CANADA, INC. 300 Allstate Parkway Markham, Ontario L3R 0P2 Canada
PIONEER ELECTRONIC [EUROPE] N.V. Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL: [03] 580-9911
© PIONEER ELECTRONIC CORPORATION 1993

DFN MAY 1993 Printed in Japan

FOR SX-102/HEWZ, HE AND HB

SX-102/HEWZ, HE, HB and SX-121/HEWZ have the same construction except for the following :

Mark	Symbol & Description	Part No.				Remarks
		SX-121/ HEWZ	SX-102/ HEWZ	SX-102/ HE	SX-102/ HB	
● ● NSP	COMPLEX assembly	AWZ4091	AWZ4091	AWZ4095	AWZ4095	*2
	CONTROL assembly	AWZ4093	AWZ4093	AWZ4092	AWZ4092	*2
	SP SWITCH assembly	AWZ4094	AWZ4094	AWZ4096	AWZ4096	*2
⚠ ⚠	AC power cord	ADG1021	ADG1049	ADG1049	ADG1118	For AC power cord
	Strain relief		AEC-882	AEC-882	AEC-882	
NSP	Front panel	AMB1999	AMB2148	AMB2148	AMB2148	
	Display panel	AAK2310	AAK2453	AAK2453	AAK2453	
	FL filter	AAK2311	AAK2478	AAK2478	AAK2478	
	Sub panel	AAP1232	AAP1379	AAP1379	AAP1379	
	Name plate	PAM1407	PAM1608	PAM1608	PAM1608	
	Rotary knob S (BASS, TREBLE)	AAB1276	AAB1352	AAB1352	AAB1352	
	Button A	AAD2212	AAD2441	AAD2441	AAD2441	
	Packing case	AHD2265	AHD2580	AHD2580	AHD2581	
	Spacer				AHB1112	
	Operating instructions (German)	ARC1349	ARC1436			For packing
	Operating instructions (English)				ARB1446	
	Operating instructions (English, French, German, Italian, Dutch, Swedish, Spanish, Portuguese)			ARE1287		

*2 : AWZ4095, AWZ4092 and AWZ4096 are the same as those of SX-121/HE which is shown in the service manual ARP2556 for SX-121.

CONTRAST OF MISCELLANEOUS PARTS

NOTES :

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

FOR SX-202R/HEWZ, HE, HB AND YPW

SX-202R/HEWZ, HE, HB, YPW and SX-221R/HEWZ have the same construction except for the following :

Mark	Symbol & Description	Part No.					Remarks
		SX-221R/HEWZ	SX-202R/HEWZ	SX-202R/HE	SX-202R/HB	SX-202R/YPW	
●	COMPLEX assembly	AWZ4083	AWZ4088	AWZ4088	AWZ4088	AWZ4088	* 1
NSP	SP SWITCH assembly	AWZ4086	AWZ4089	AWZ4089	AWZ4089	AWZ4089	* 1
NSP	VR assembly	AWZ4087	AWZ4090	AWZ4090	AWZ4090	AWZ4090	* 1
$\triangle$	AC power cord	ADG1021	ADG1049	ADG1049	ADG1118	ADG1123	For AC power cord
$\triangle$	Strain relief		AEC-882	AEC-882	AEC-882	AEC-882	
NSP	Name plate	PAM1407	PAM1608	PAM1608	PAM1608	PAM1608	For Packing
	Front panel	AMB1998	AMB2147	AMB2147	AMB2147	AMB2147	
	Display panel	AAK2308	AAK2452	AAK2452	AAK2452	AAK2452	
	FL filter	AAK2309	AAK2478	AAK2478	AAK2478	AAK2478	
	Sub panel	AAP1232	AAP1379	AAP1379	AAP1379	AAP1379	
	Spacer				AHB1112	AHB1112	
	Button A	AAD2212	AAD2441	AAD2441	AAD2441	AAD2441	
	Rotary knob S (BASS, TREBLE)	AAB1276	AAB1352	AAB1352	AAB1352	AAB1352	
	Packing case	AHD2264	AHD2578	AHD2578	AHD2579	AHD2579	
	Operating instructions (German)	ARC1349	ARC1436				
	Operating instructions (English)				ARB1446	ARB1446	
	Operating instructions (English, French, German, Italian, Dutch, Swedish, Spanish, Portuguese)			ARE1287			

*1 : AWZ4088, AWZ4089 and AWZ4090 are the same as those of SX-221R/HE which is shown in the service manual ARP2556 for SX-221R.

1. EXPLODED VIEWS, PACKING AND PARTS LIST


NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.


Parts list of Exterior

Mark	No.	Description	Parts No.	Mark	No.	Description	Parts No.
	1	ROTARY KNOB S (BASS, TREBLE, BALANCE)	AAB1276	NSP	31	REAR PANEL (For SX-221R)	ANC1861
	2	ROTARY KNOB L (VOLUME)	AAB1277	NSP		REAR PANEL (For SX-121)	ANC1860
	3	POWER KNOB	AAD1984	●	32	CONTROL ASSEMBLY (For SX-221R)	AWZ4084
	4	BUTTON (SPEAKERS)	AAD2211	●		CONTROL ASSEMBLY (For SX-121)	AWZ4092
	5	BUTTON A (PLS)	AAD2212		33	BONNET CASE	ANE1334
	6	BUTTON B (PLS)	AAD2213	NSP	34	HEAT SINK	ANH1381
	7	DISPLAY PANEL (For SX-221R)	AAK2308		35	OPE. INSTRUCTIONS (German)	ARC1349
		DISPLAY PANEL (For SX-121)	AAK2310	NSP	36	TRANS ASSEMBLY	AWZ4085
	8	FL FILTER (For SX-221R)	AAK2309	NSP	37	SP SWITCH ASSEMBLY (For SX-221R/HEWZ)	AWZ4086
		FL FILTER (For SX-121)	AAK2311	NSP		SP SWITCH ASSEMBLY (For SX-121/HEWZ)	AWZ4094
●	9	COMPLEX ASSEMBLY (For SX-221R/HEWZ)	AWZ4083		38	REMOTE CONT'L UNIT (For SX-221R)	AXD1259
●		COMPLEX ASSEMBLY (For SX-121/HEWZ)	AWZ4091		39	BATTERY COVER (For SX-221R)	AZA1297
	10	SUB PANEL (PLS)	AAP1232		40	SCREW	BCZ30P080FZK
	11	SCREW (STEEL)	ABA-297		41	SCREW	BPZ26P080FMC
	12	SCREW	ABA-298		42	NUT	NK90FUC
	13	SCREW (STEEL)	ABA1009	NSP	43	VR ASSEMBLY (For SX-221R/HEWZ)	AWZ4087
	14	SCREW (STEEL)	ABA1011	Δ	44	FUSE (T1A/250V, FU1)	AEK-508
	15	SCREW	ABA1018		45	LOOP ANTENNA (L)	ATB1005
	16	SCREW	ABA1054	Δ	46	POWER TRANSISTOR (Q1)	2SC4688
Δ	17	AC POWER CORD	ADG1021	Δ	47	POWER TRANSISTOR (Q2)	2SC4688
	18	FM ANTENNA	ADH1002	Δ	48	POWER TRANSISTOR (Q3)	2SA1803
NSP	19	NYLON BINDER	AEC-093	Δ	49	POWER TRANSISTOR (Q4)	2SA1803
NSP	20	PURSE LOCK	AEC1325	Δ	50	POWER TRANSISTOR (Q5)	2SC4688
NSP	21	BINDER	AEP-215	Δ	51	POWER TRANSFORMER (T1)	ATS1412
NSP	22	BATTERY (R03, AAA) (For SX-221R)	AEX-021				
	23	SIDE PAD (PS)	AHA1482				
	24	PACKING CASE (For SX-221R)	AHD2264				
		PACKING CASE (For SX-121)	AHD2265				
	25	PACKING SHEET	AHG1016				
	26	FRONT PANEL (For SX-221R)	AMB1998				
		FRONT PANEL (For SX-121)	AMB1999				
NSP	27	PCB MOULD	AMR1525				
	28	INSULATOR ASSY	AMR2140				
	29	VOLUME HOLDER	AMR2408				
NSP	30	CHASSIS	ANA1163				


● EXTERIOR

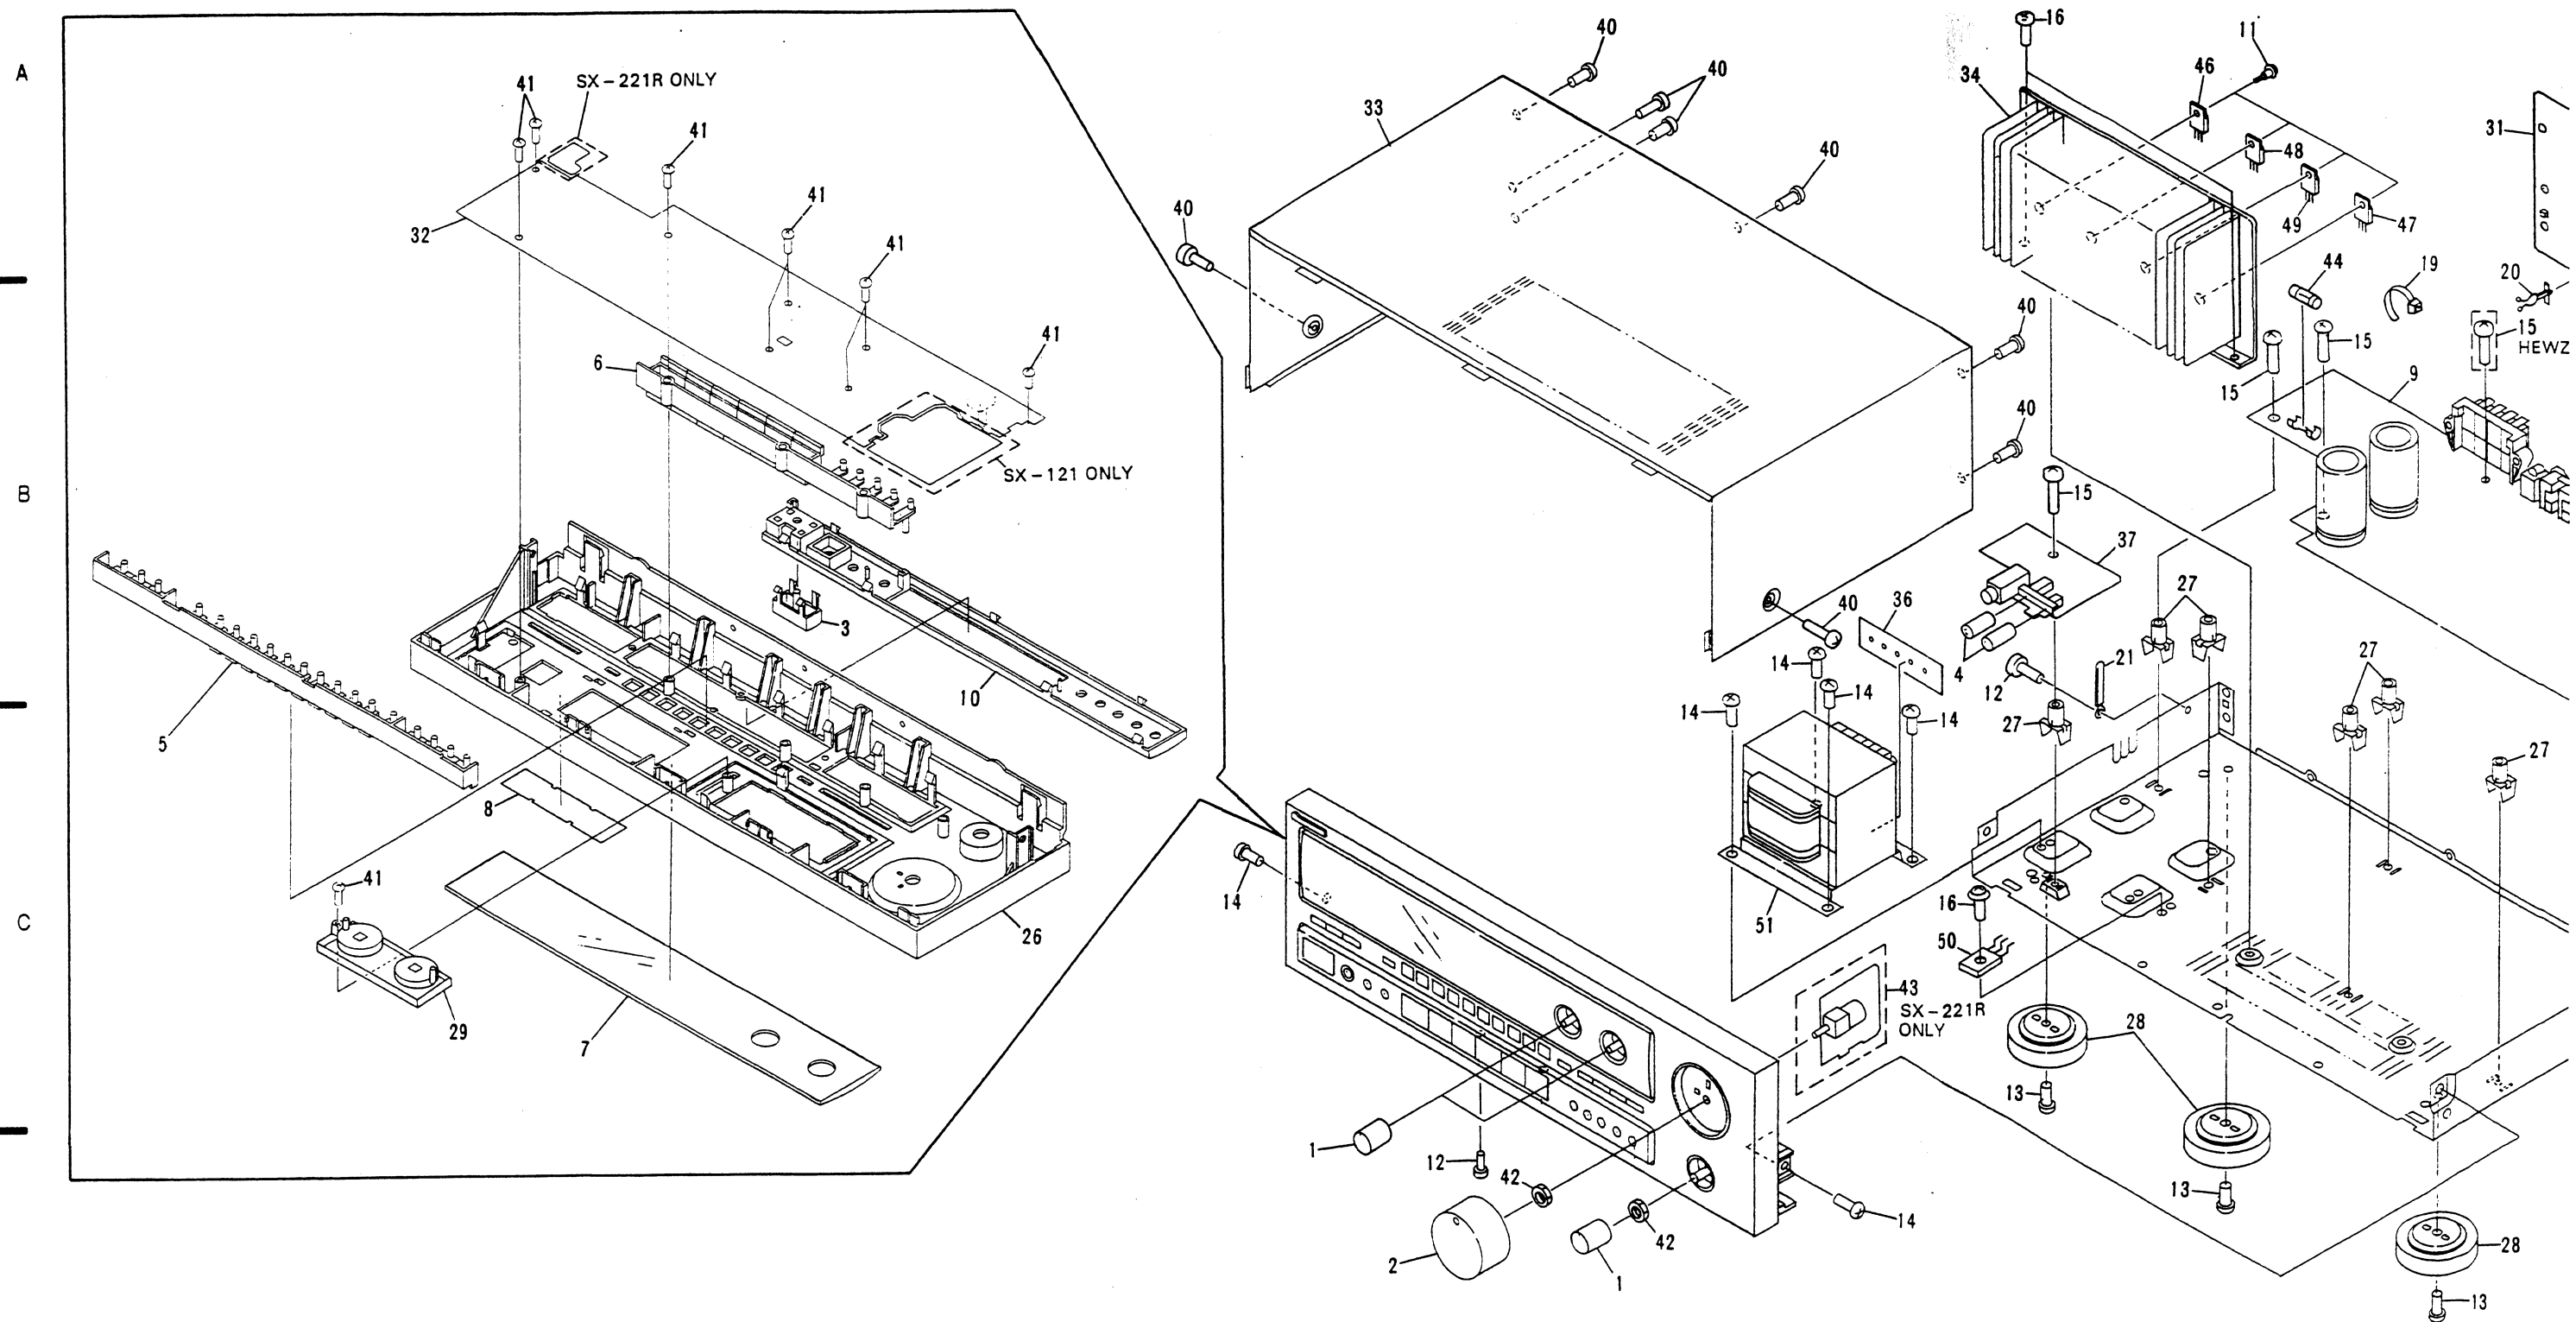

NOTE : Screws adjacent to ▼ mark on the product are used for disassembly.

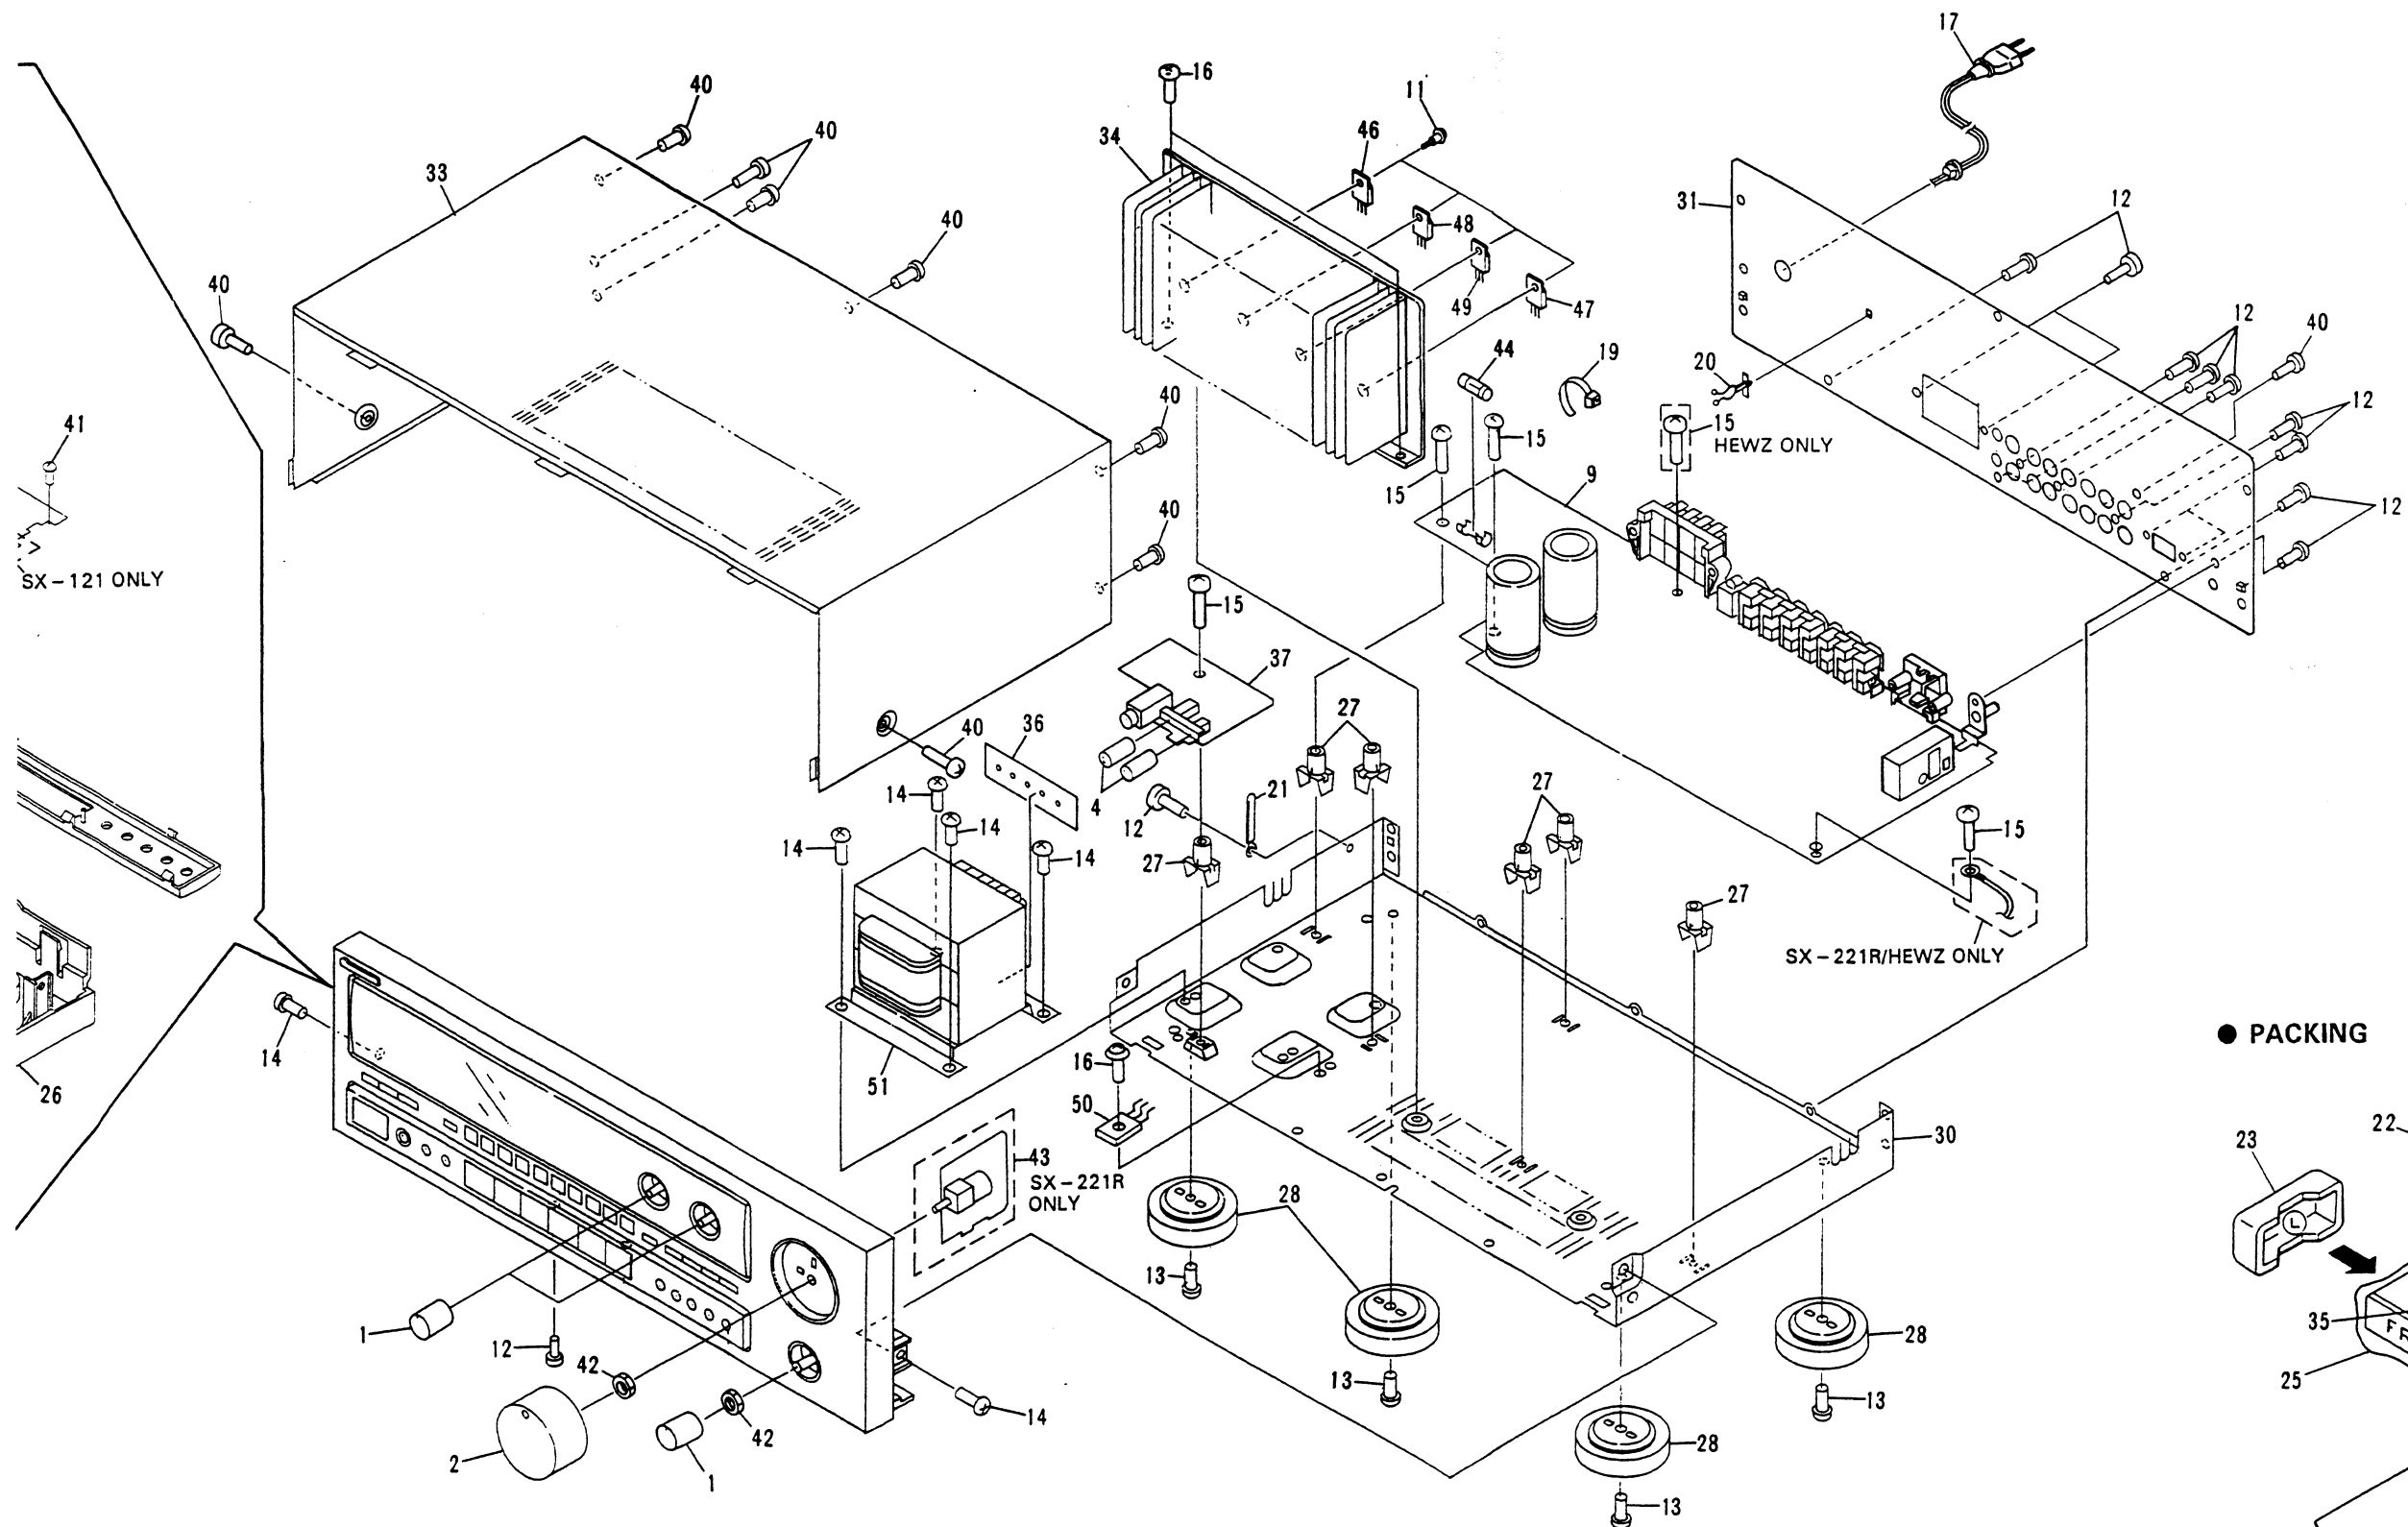

● PACKING

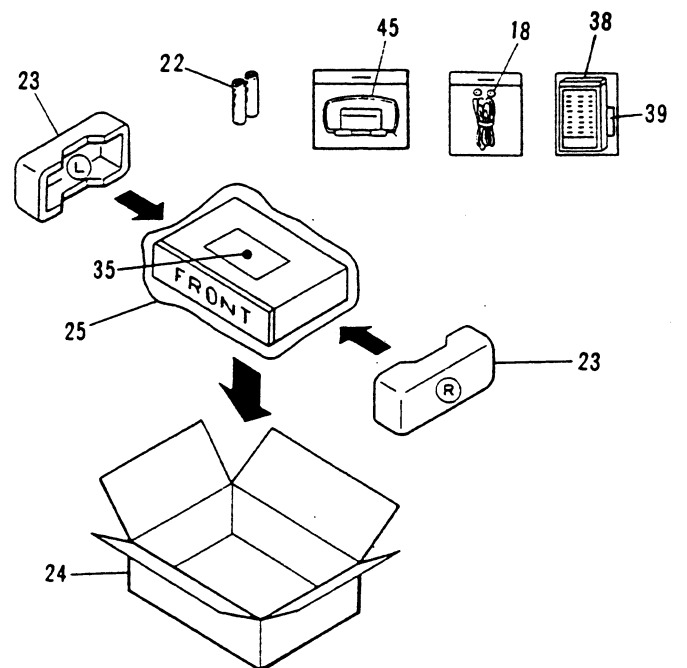

2. SPECIFICATIONS

Verstärkerteil
Fortlaufende Ausgangsleistung (Zweikanalbetrieb, DIN)*
1 kHz, T.H.D. 1 %, 4 Ω 55 W + 55 W
40 Hz — 20 kHz, T.H.D. 0,07 %, 8 Ω 45 W + 45 W
Dynamischer Leistungsausgang (Mit EIA-Testsignal)
4/8 Ω 85/65 W
Klirrfaktor*
40 Hz — 20 kHz, 45 W, 8 Ω 0,07 %
• Die oben aufgeführten Daten gelten bei 230 V.

Eingang (Empfindlichkeit/Impedanz)
PHONO 2,5 mV/47 kΩ
CD, VCR/LD, TAPE 1/DAT, TAPE 2 MONITOR 150 mV/47 kΩ
Plattenspieler-Überlastungspegel (T.H.D. 0,08 %, 1.000 Hz)
PHONO 130 mV
Ausgang (Pegel/Impedanz)
TAPE REC 150 mV/2,2 kΩ
Frequenzgang
PHONO (RIAA-Entzerrung) 20 Hz bis 20.000 Hz ±0,5 dB
CD, VCR/LD, TAPE 1/DAT, TAPE 2 MONITOR
..... 10 Hz bis 50.000 Hz ±0,5 dB
Rauschabstand (IHF, kurzgeschlossen, A Netzwerk)
PHONO 71 dB
CD, VCR/LD, TAPE 1/DAT, TAPE 2 MONITOR 96 dB
Rauschabstand (DIN, Dauerleistung/50 mW)
PHONO 67 dB/56 dB
CD, VCR/LD, TAPE 1/DAT, TAPE 2 MONITOR 82 dB/56 dB
Ton-Regelung
BASS ± 8 dB (100 Hz)
TREBLE ± 8 dB (10 kHz)

UKW-Tunerteil
Frequenzbereich 87,5 MHz bis 108 MHz
Nutzempfindlichkeit 14,2 dBf, IHF (1,4 µV/75 Ω)
• 50 dB Empfindlichkeitsschwelle
MONO 20,2 dBf (2,8 µV/75 Ω)
STEREO 41,2 dBf (31,6 µV/75 Ω)
Empfindlichkeit (DIN)
MONO 1,4 µV/75 Ω
STEREO 32 µV/75 Ω
Rauschabstand
MONO 75 dB (bei 85 dBf)
STEREO 71 dB (bei 85 dBf)
Rauschabstand (DIN)
MONO 68 dB
STEREO 64 dB
Verzerrung
STEREO 0,3 % (1 kHz)
Trennungsfähigkeit von dem dritten Kanal 67 dB (400 kHz)
Stereotrennung 35 dB (1 kHz)
Frequenzgang 30 Hz bis 15 kHz (± 1 dB)
Antennenausgang 75 Ω nicht balanciert

MW-Tunerteil
Frequenzbereich 531 kHz bis 1.602 kHz
Empfindlichkeit
IHF, Rahmen-Antenne 300 µV/m
Trennungsfähigkeit 25 dB
Rauschabstand 53 dB
Antenne MW-Rahmenantenne

Verschiedenes
Stromversorgung Wechselstrom 220 — 230 Volt, 50/60 Hz
Stromverbrauch
Modell SX-121 290 W
Modell SX-221R 290 W
Abmessungen 420 (B) x 140 (H) x 289 (T) mm
Gewicht (Ohne Verpackung)
Modell SX-121 5,3 kg
Modell SX-221R 5,5 kg


Zubehör
T-förmige UKW-Antenne 1
MW-Rahmenantenne 1
Bedienungsanleitung 1
[Nur bei SX-221R]
Fernbedienungsgerät 1
Trockenzelle-Batterie (Format "AAA" (IEC R03/UM-4)) 2

HINWEIS:
Änderung der technischen Daten und des Design ohne vorherige Bekanntgabe vorbehalten.

* Messungen durch Audio-Spektralanalysator.

3. SCHEMATIC AND PCB CONNECTIONS DIAGRAMS

3.1 OVERALL SCHEMATIC DIAGRAM

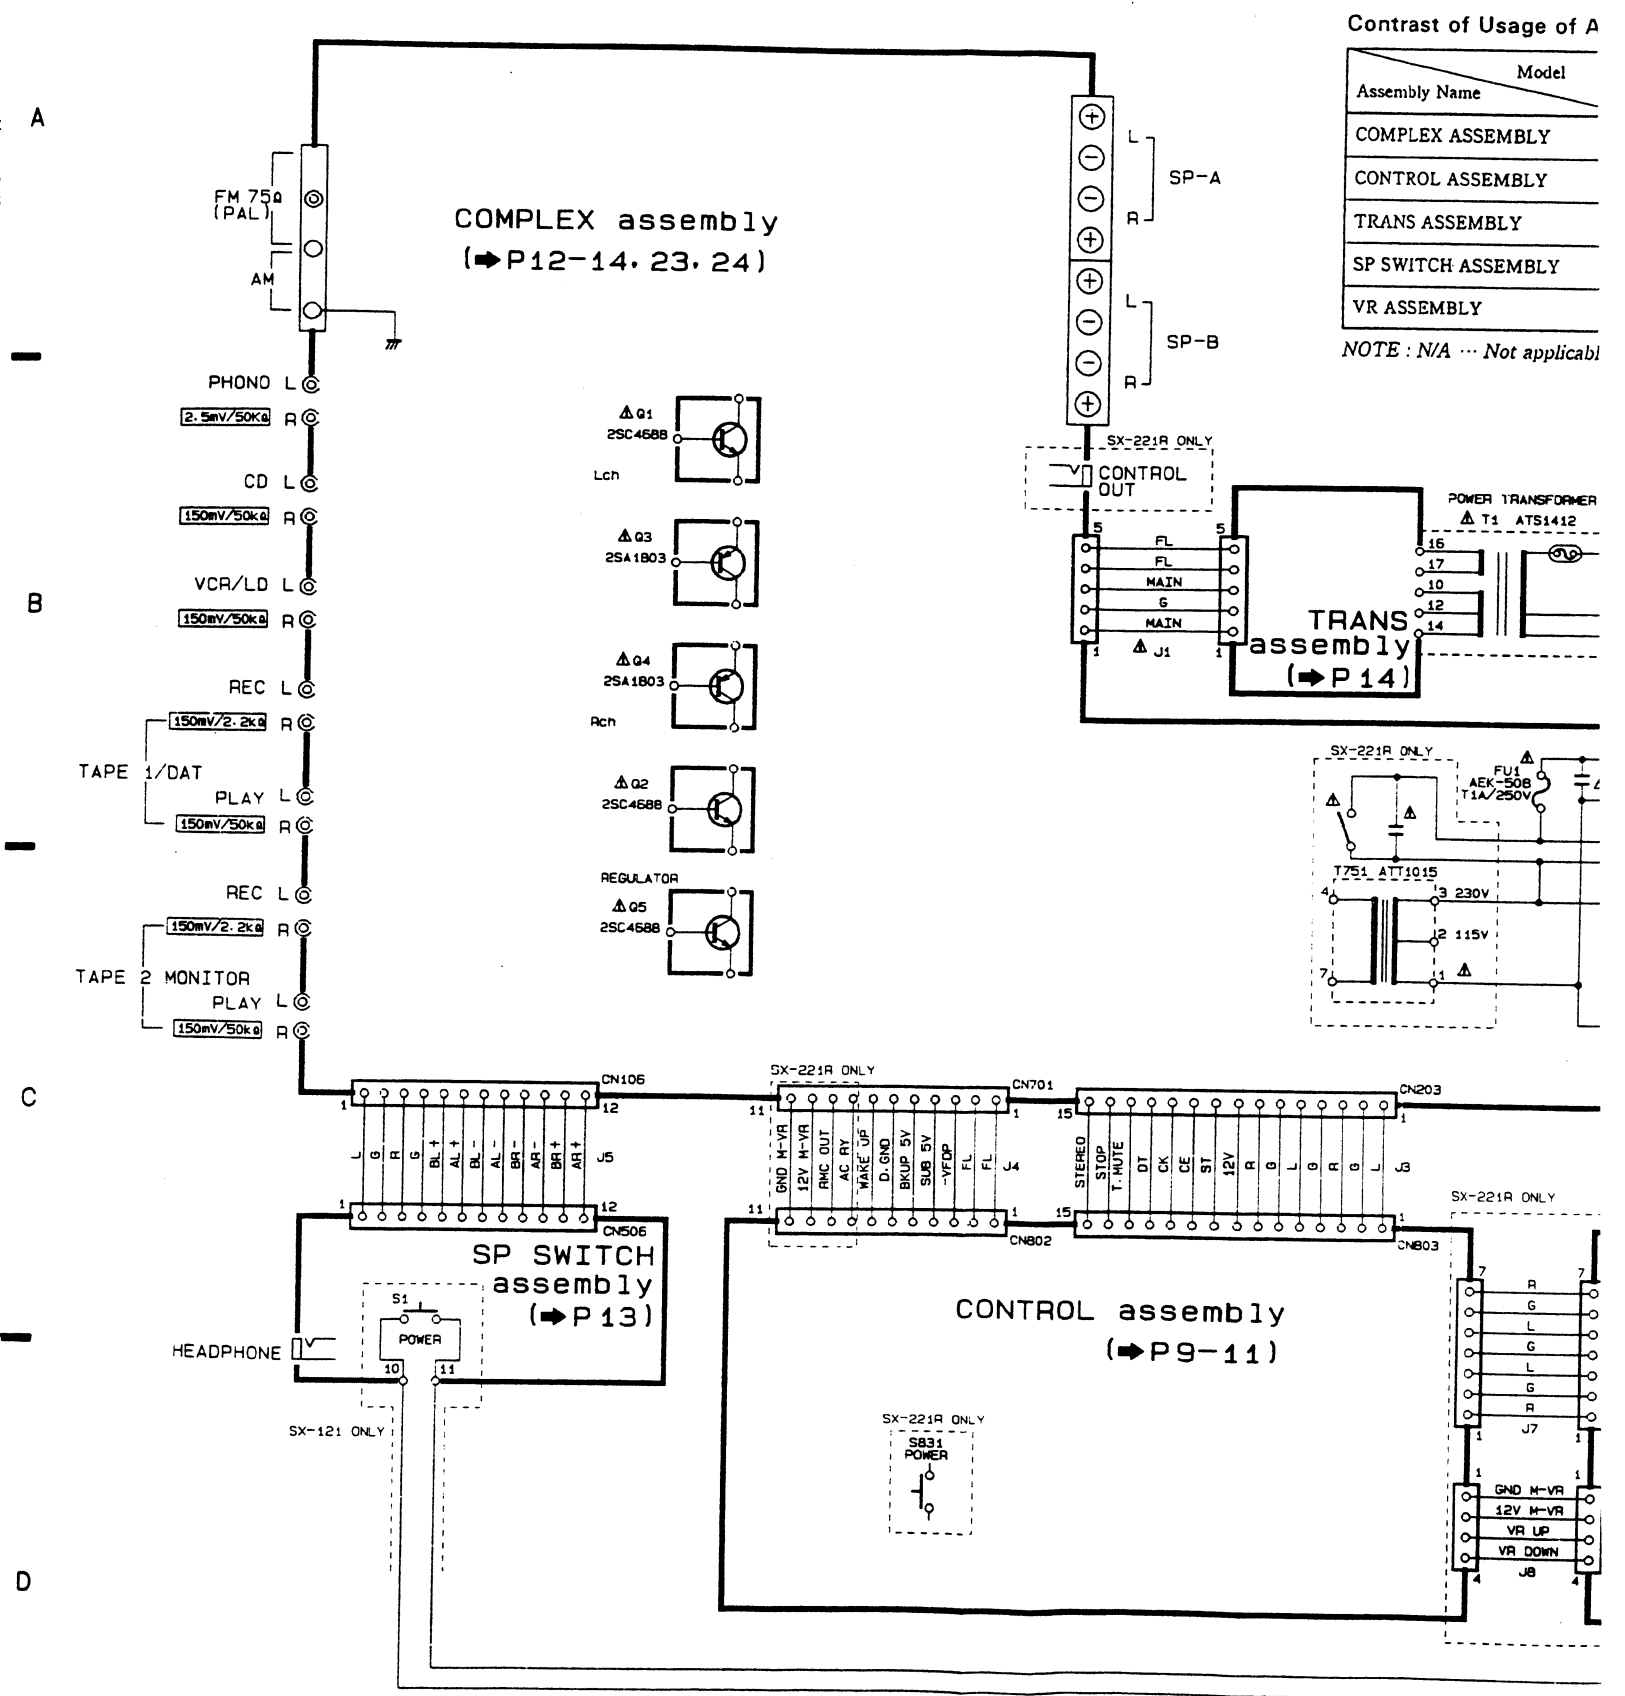

3. SCHEMATIC AND PCB CONNECTIONS DIAGRAMS

3.1 OVERALL SCHEMATIC DIAGRAM

Contrast of Usage of Assemblies

Assembly Name	Model	SX-221R/ HEWZ	SX-221R/ HE, HB, YPW	SX-121/ HEWZ	SX-121/ HE, HB
COMPLEX ASSEMBLY		AWZ4083	AWZ4088	AWZ4091	AWZ4095
CONTROL ASSEMBLY		AWZ4084	AWZ4084	AWZ4092	AWZ4092
TRANS ASSEMBLY		A	A	A	A
SP SWITCH ASSEMBLY		A	A	A	A
VR ASSEMBLY		A	A	N/A	N/A

NOTE: N/A ... Not applicable, A ... Applicable

Note:

(Type 3)

1. When ordering service parts, be sure to refer to "PARTS LIST of EXPLODED VIEWS" or "PCB PARTS LIST".

2. Since these are basic circuits, some parts of them or the values of some components may be changed for improvement.

3. RESISTORS:

Unit: k: k Ω , M: M Ω , or Ω unless otherwise noted.

Rated power: 1/4W, 1/6W, 1/8W, 1/10W unless otherwise noted.

Tolerance: (F): $\pm 1\%$, (G): $\pm 2\%$, (K): $\pm 10\%$, (M): $\pm 20\%$ or $\pm 5\%$ unless otherwise noted.

4. CAPACITORS:

Unit: p: pF or μ F unless otherwise noted.

Ratings: capacitor (μ F)/ voltage (V) unless otherwise noted.

Rated voltage: 50V except for electrolytic capacitors.

5. COILS:

Unit: m: mH or μ H unless otherwise noted.

6. VOLTAGE AND CURRENT:

mV : Signal voltage at FM 1kHz, 100% MOD.

DC voltage (V) at no input signal unless otherwise noted.
Value in () is DC voltage at rated power.

mA or - mA : DC current at no input signal unless otherwise noted.

7. OTHERS:

• : Signal route.

• : Adjusting point.

• (Red) : Measurement point.

The Δ mark found on some component parts indicates the importance of the safety factor of the parts. Therefore, when replacing, be sure to use parts of identical designation.

8. SWITCHES (Underline indicates switch position):

CONTROL assembly

SP SWITCH assembly

S801 TUNING +

S570 SP A/B

S802 TUNING -

S1 POWER

S803 2

(SX-121 ONLY)

S804 1

S805 BAND FM

S806 BAND AM

S807 MEMORY

S808 MEMORY SCAN

S809 POP

S810 ROCK

S811 OTHER

S812 HITS

S813 CD

S814 TUNER

S815 PHONO

S816 AUTO/MONO

S817 AUTO/MANUAL

S818 DIRECT ACCESS

S819 VCR/LD

S820 TAPE1/DAT

S821 TAPE2/MONITOR

S822 0

S823 9

S824 8

S825 RETURN

S826 7

S827 6


S828 5

S829 4


S830 3

S831 POWER

(SX-221R ONLY)

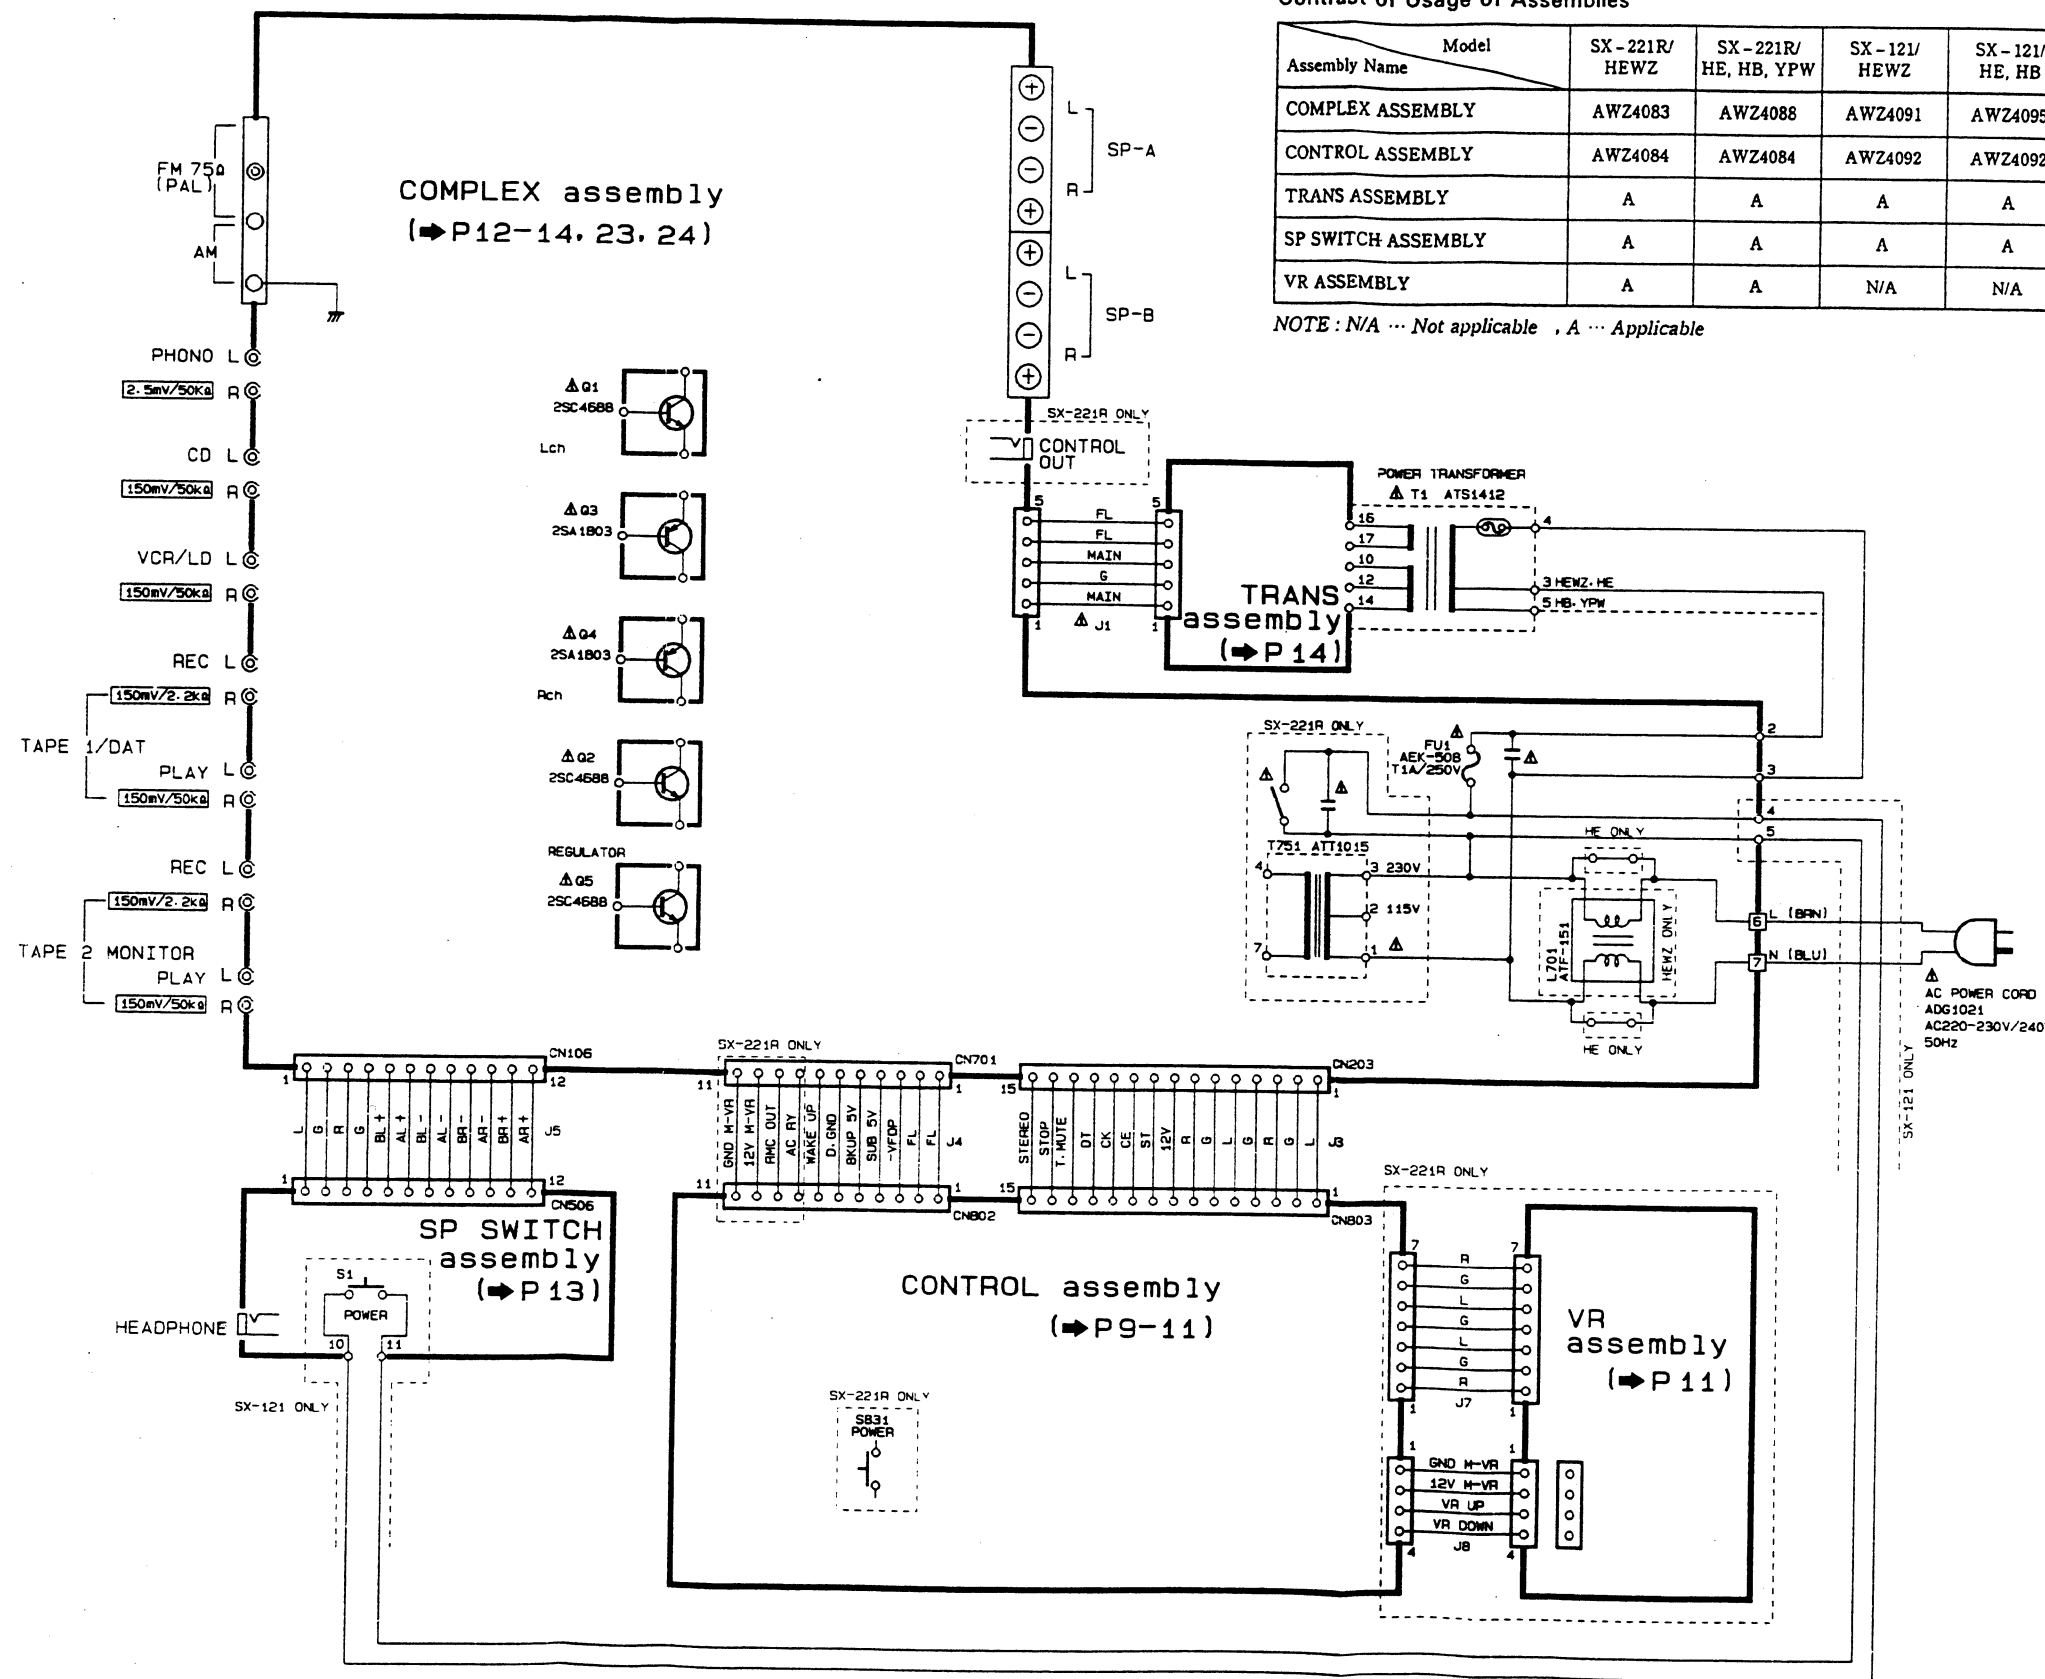


3.2 CONTROL ASSEMBLY AND VR ASSEMBLY

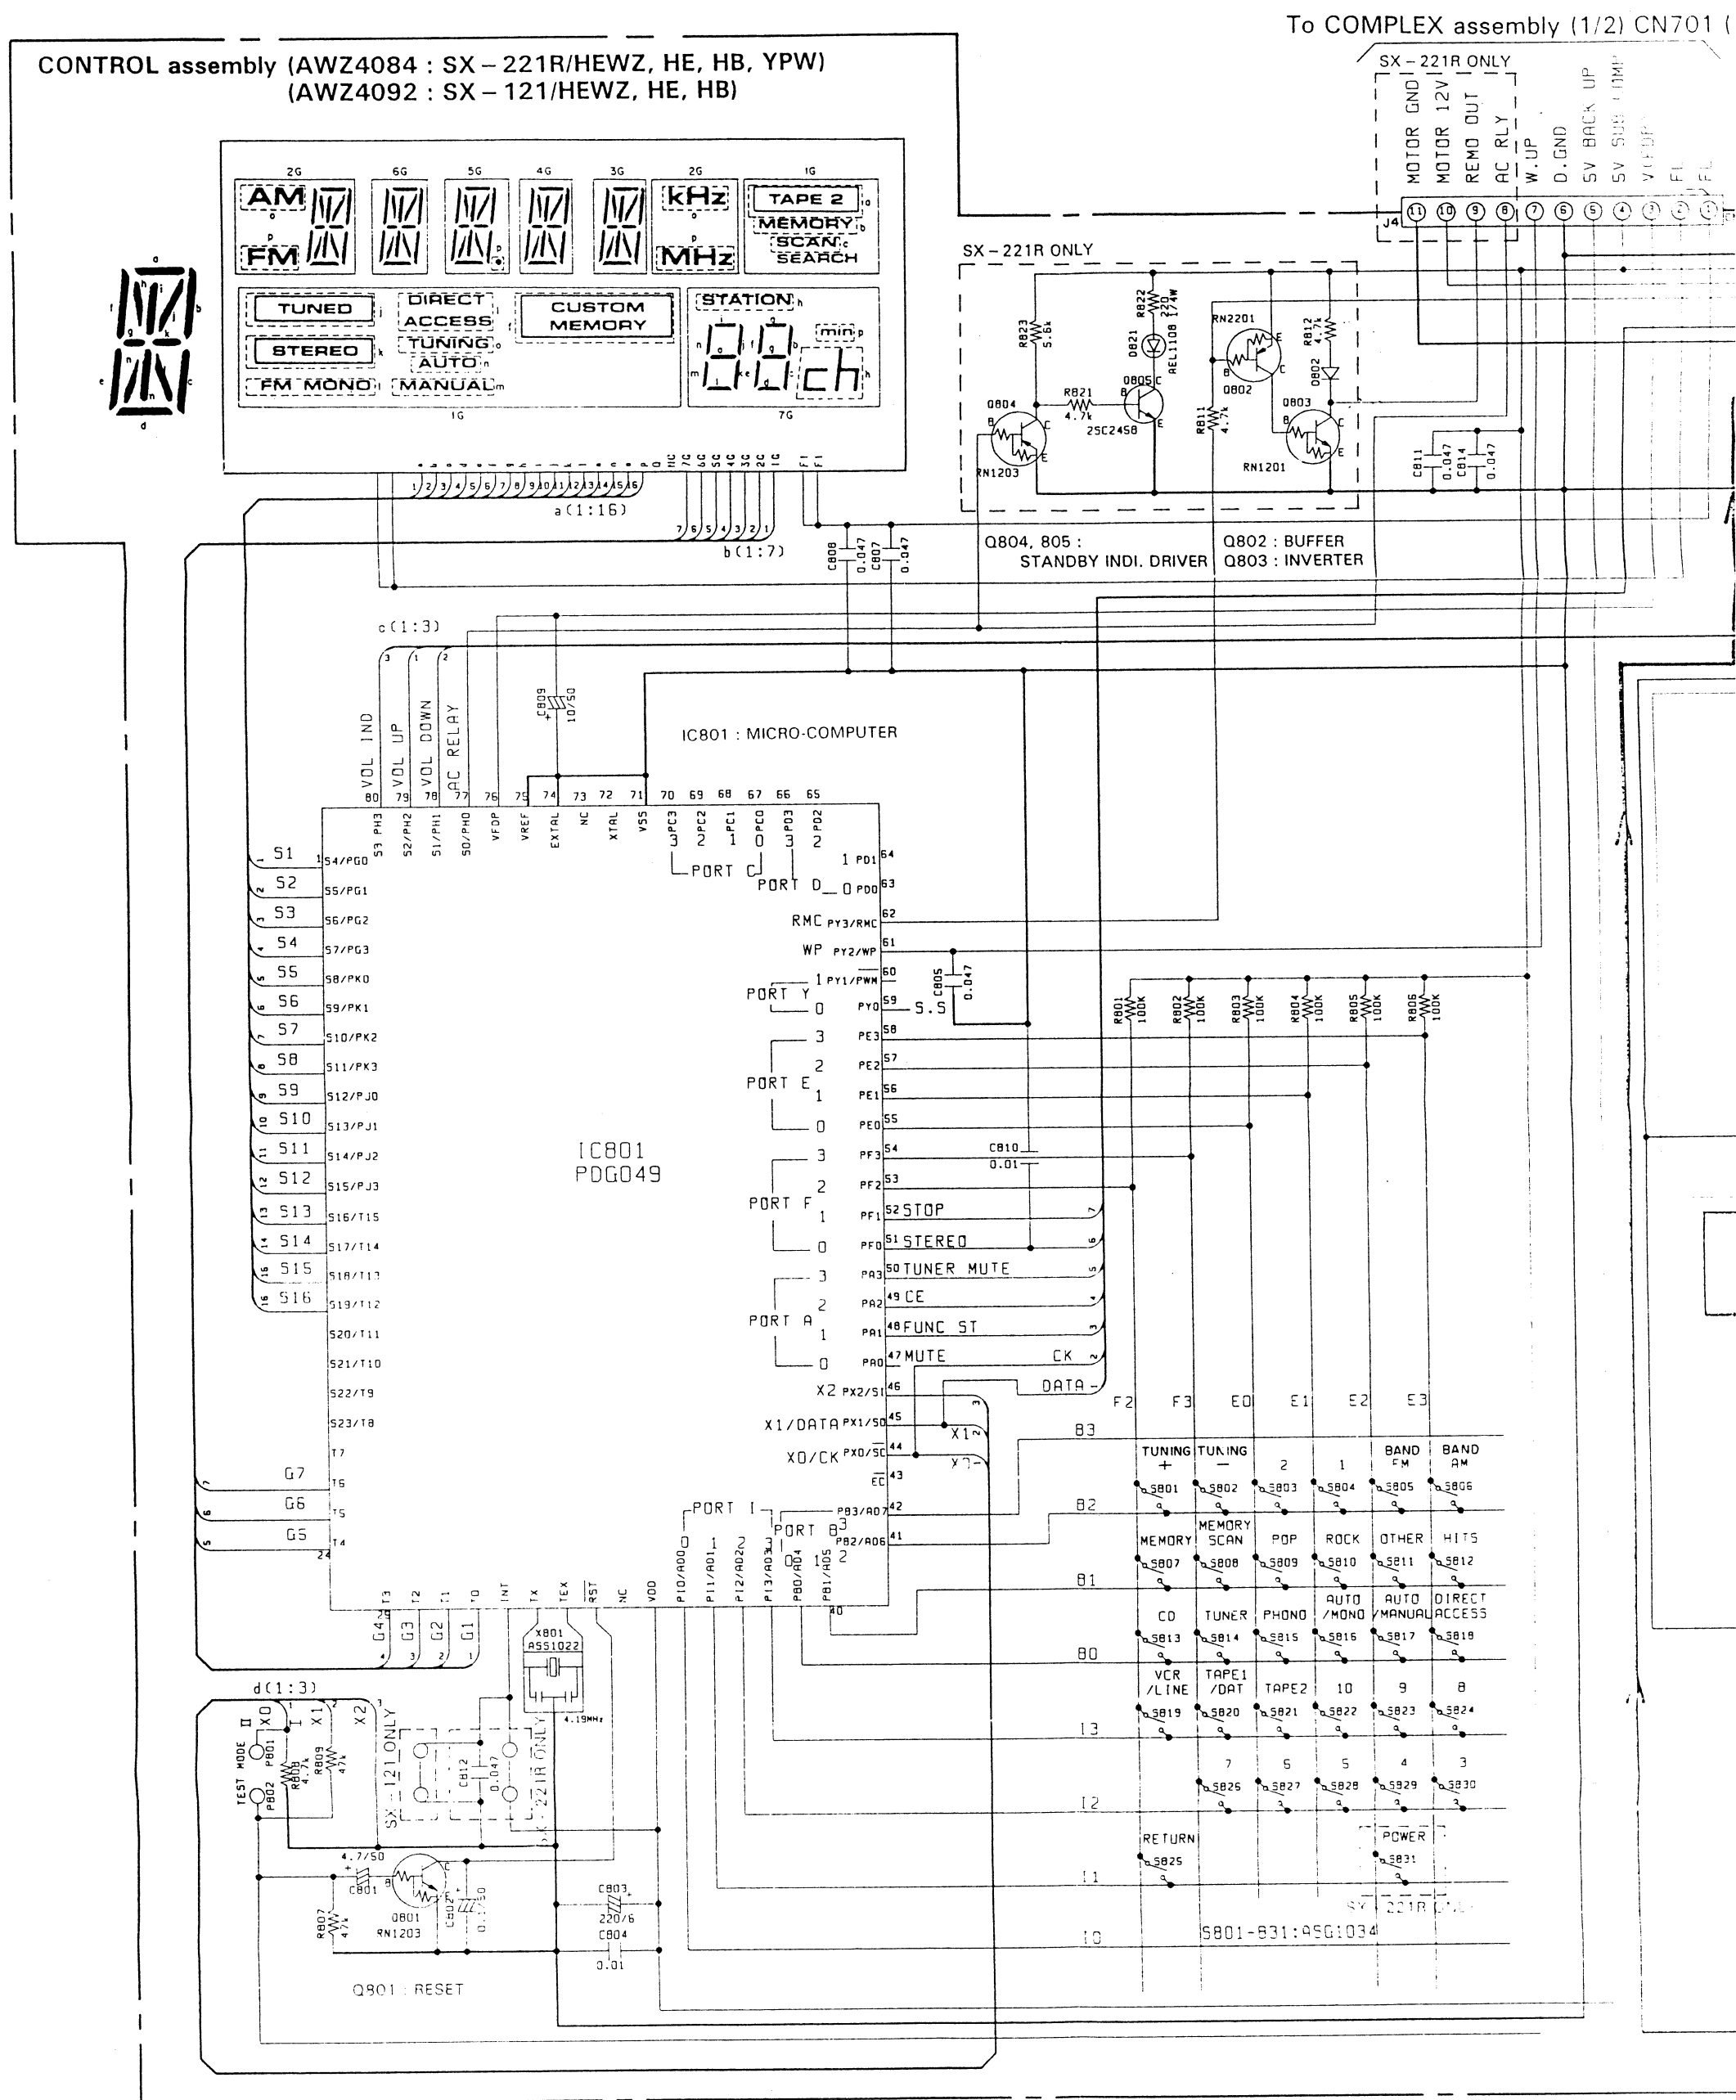


COMPLEX assembly (1/2) CN701 (➔ P14)

To COMPLEX assembly (1/2) CN801 (➔ P12)

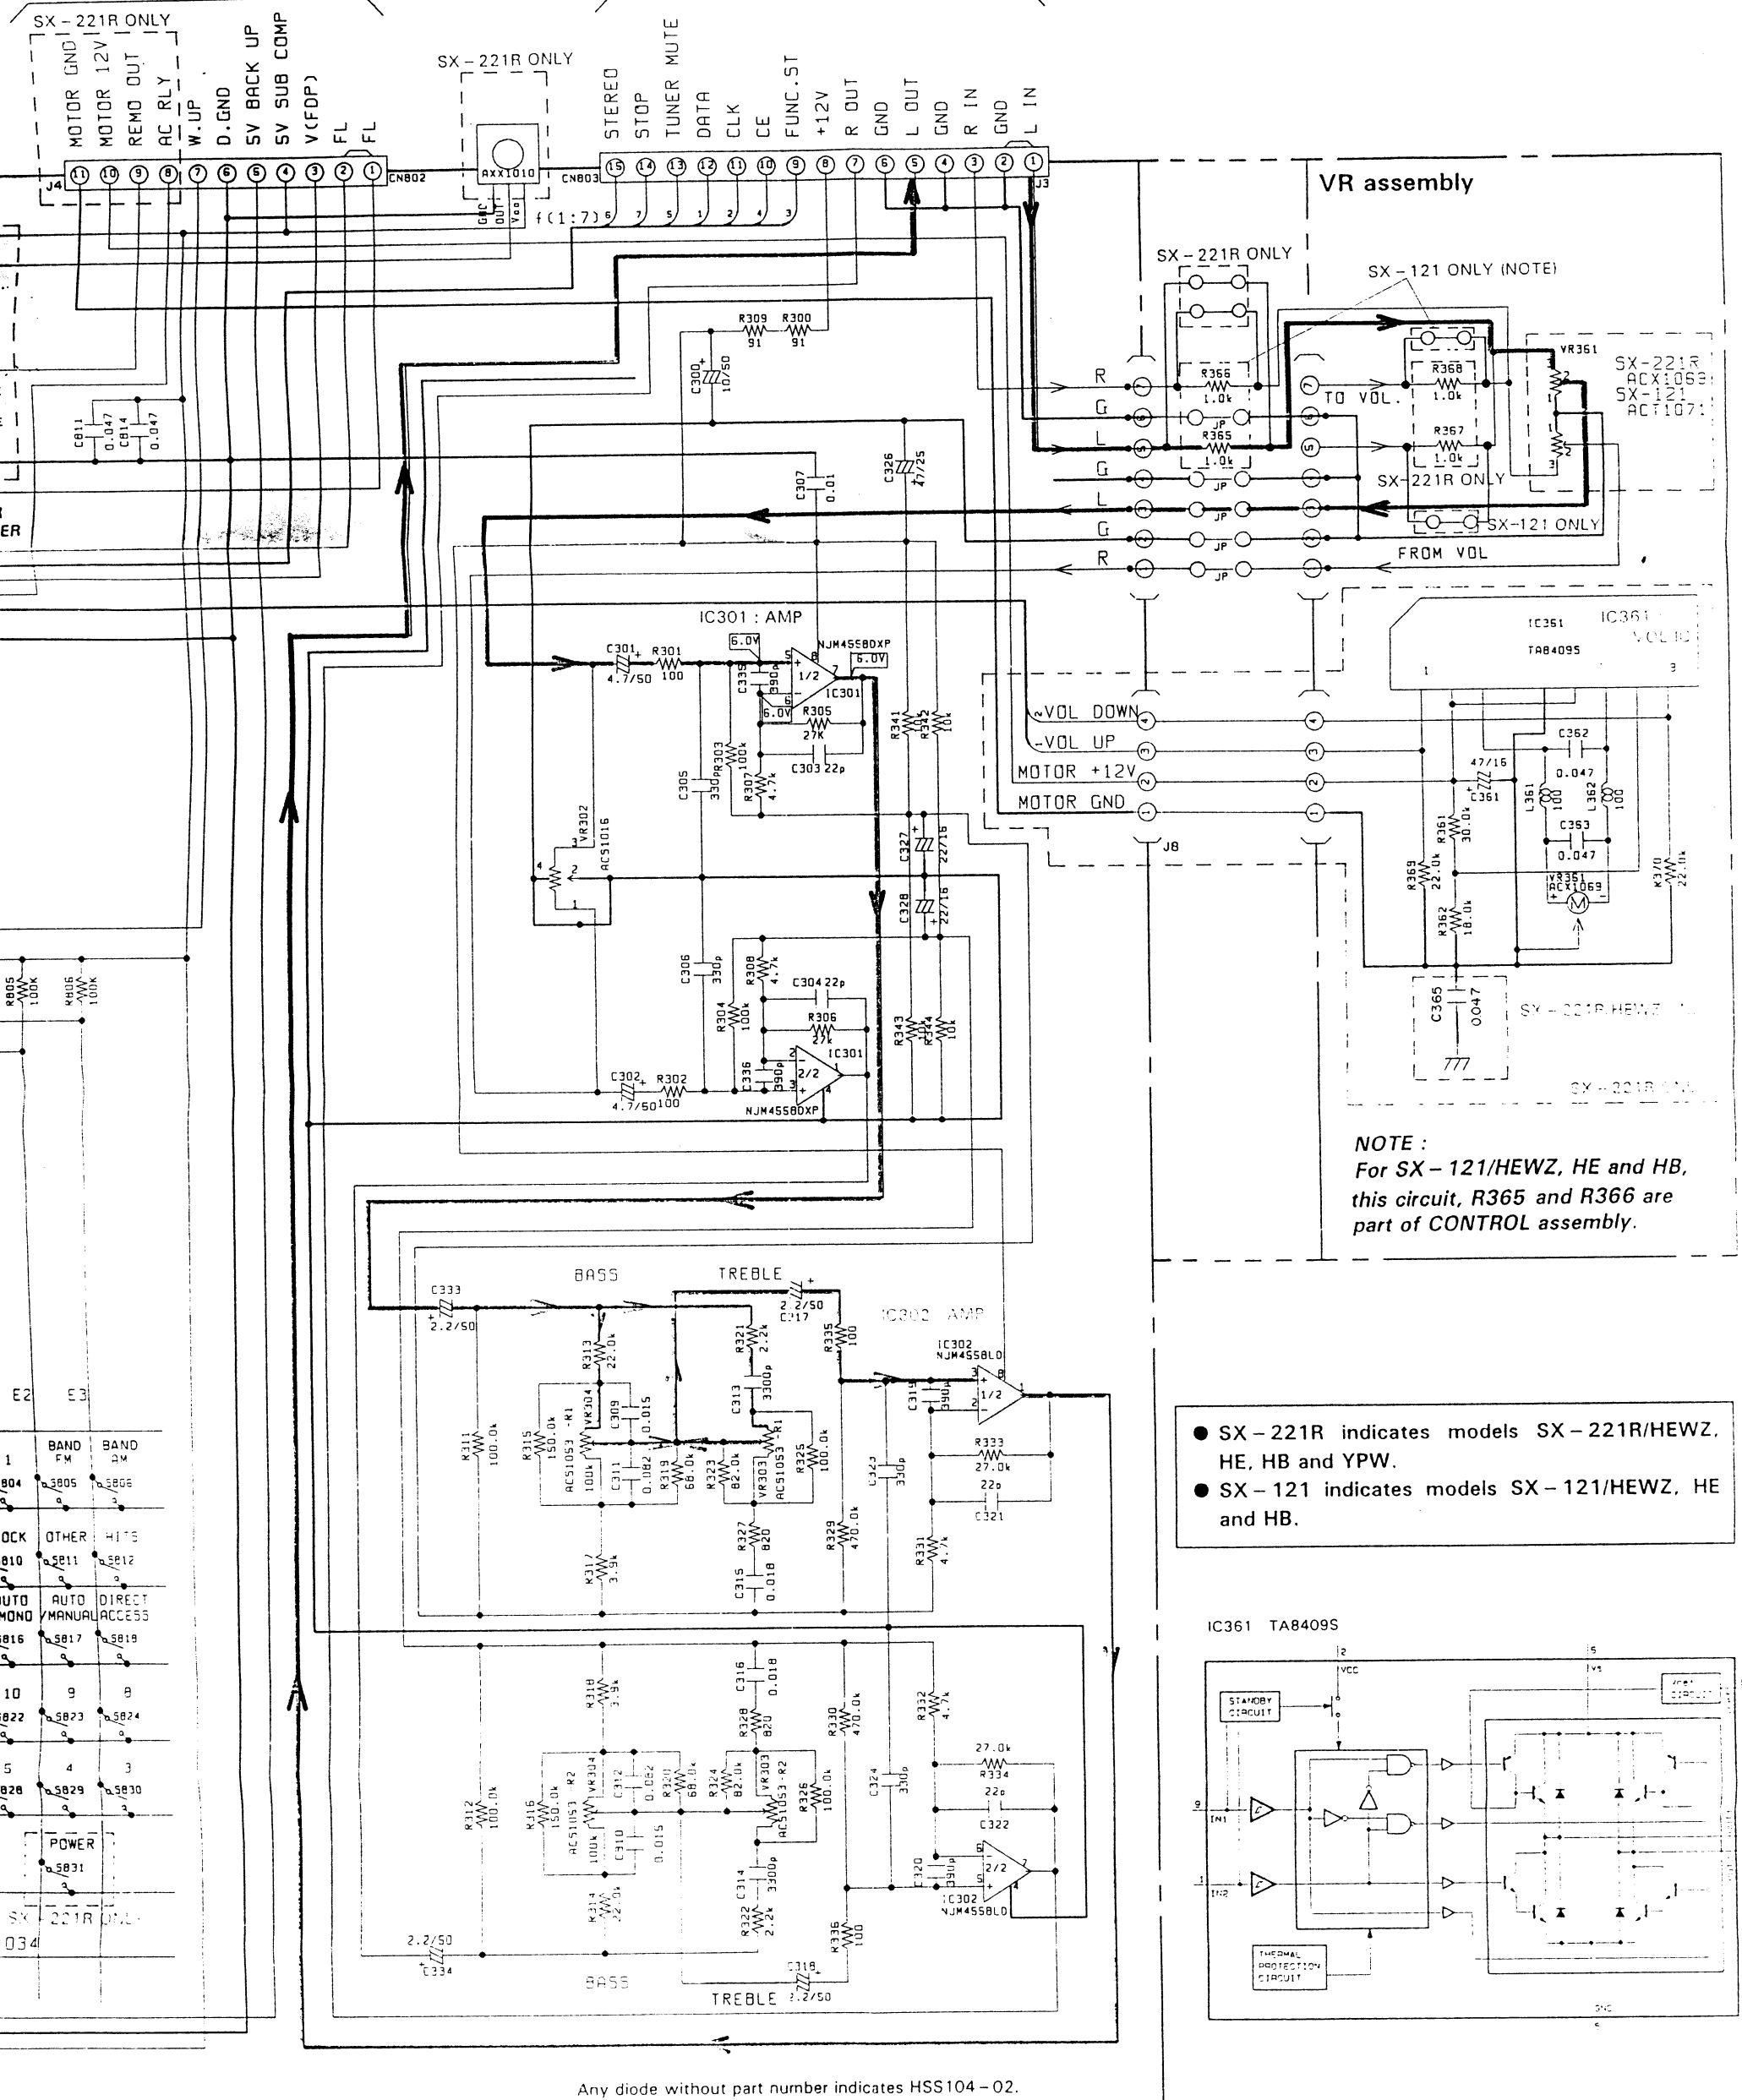

NOTE :
For SX-121/HEWZ, HE and HB,
this circuit, R365 and R366 are
part of CONTROL assembly.

- SX-221R indicates models SX-221R/HEWZ, HE, HB and YPW.
- SX-121 indicates models SX-121/HEWZ, HE and HB.

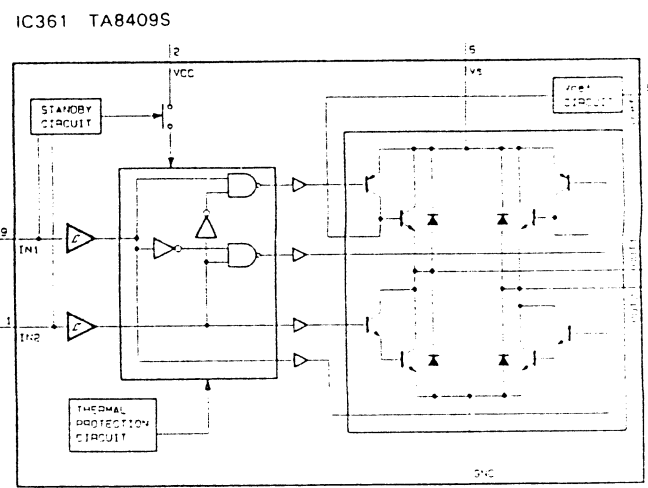

Any diode without part number indicates HSS104-02.

A



C


D

F


—

MPLEX assembly (1/2) CN701 (➔ P14)

To COMPLEX assembly (1/2) CN801 (➔ P12)

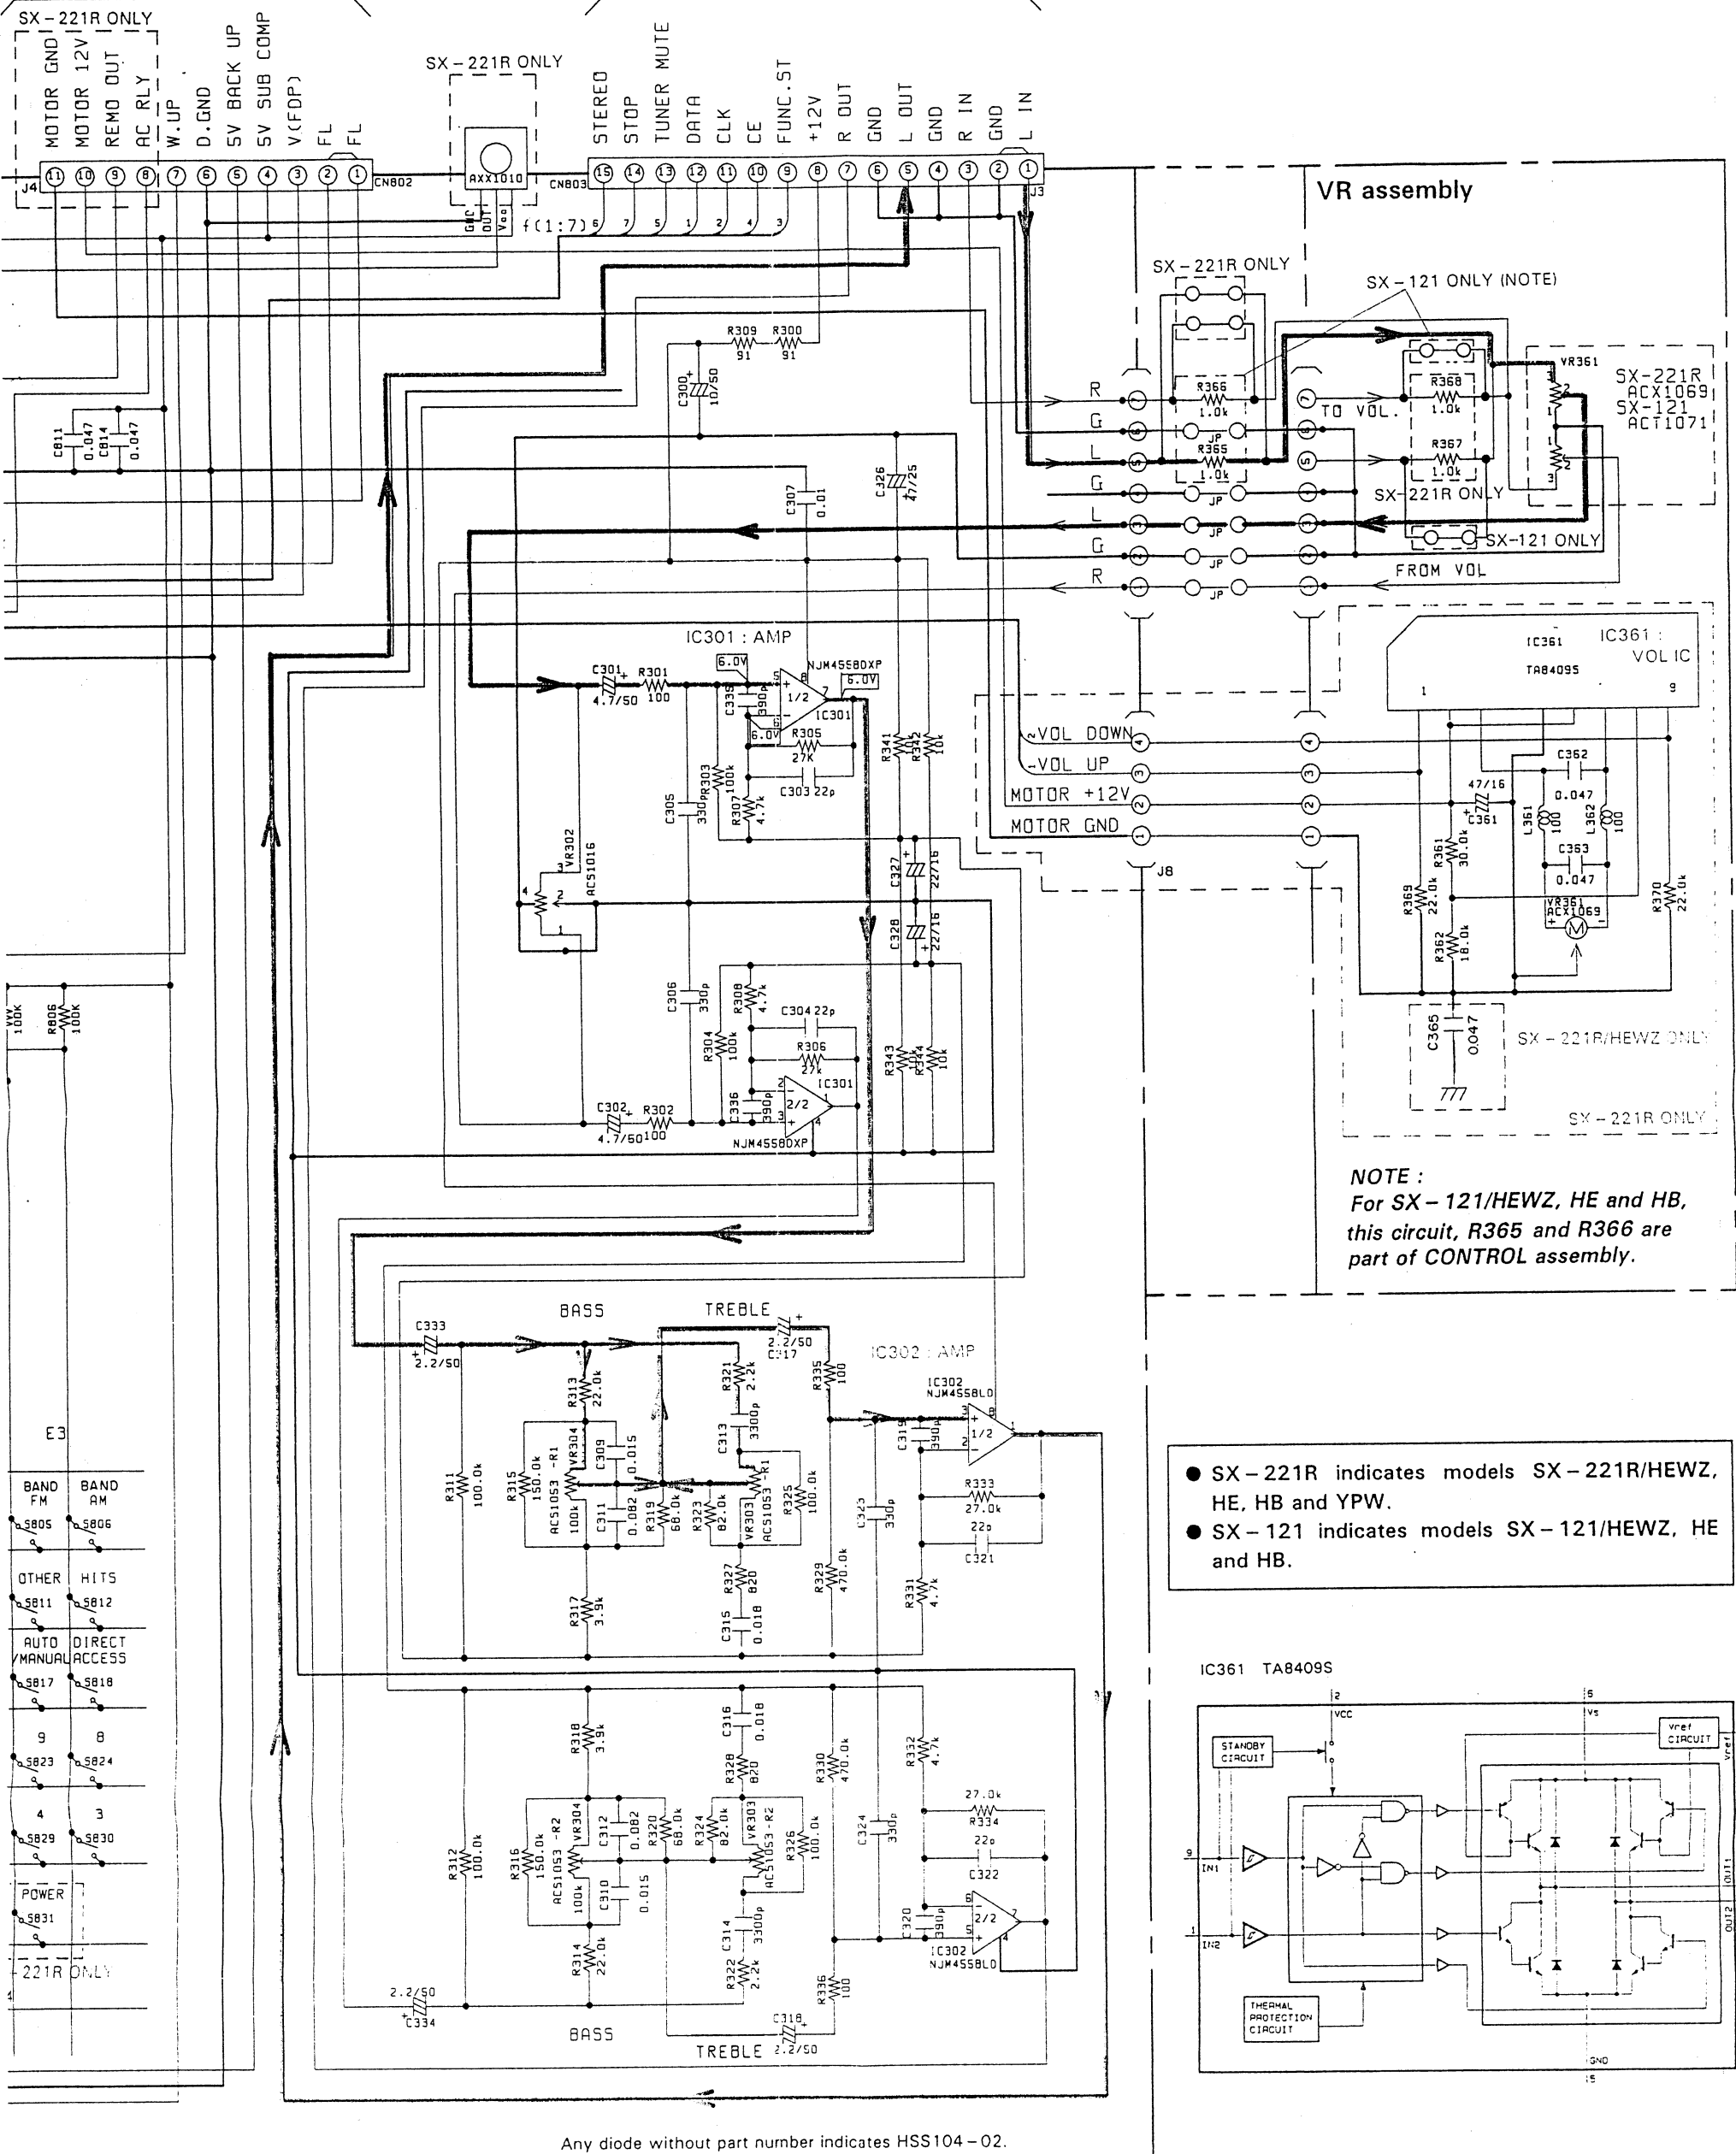

- SX-221R indicates models SX-221R/HEWZ, HE, HB and YPW.
- SX-121 indicates models SX-121/HEWZ, HE and HB.

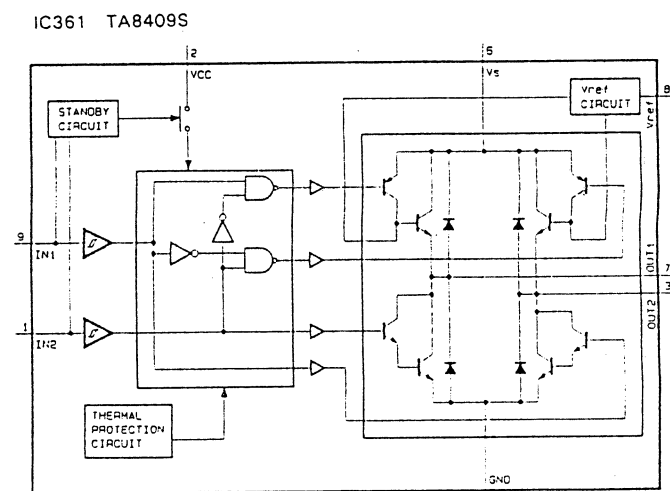


3.3 COMPLEX ASSEMBLY (1/2) AND SP SWITCH ASSEMBLY

● Parts marked with * have the following variations :


Mark	Symbol & Description	(Note) HEWZ	(Note) HE • HB • YPW
	L561, L562	ATH1009	ATH1004
	L701	ATF-151	JUMPER
	L981-L984	ATH-133	VACANT
	C203-C222	390p	VACANT
	C223, C224	820p	470p
	C225, C226	680p	VACANT
	C527, C528	220p	VACANT
	C531, C532	3900p	VACANT
	C561, C562	0.047	0.1
	C563, C564	JUMPER	0.1
	C983, C984, C987, C988	0.01	VACANT
	C981, C982, C985, C986	680p	VACANT
△	R573, R574	680 (1W)	VACANT
△	R981, R982, R985, R986	100 (1/2W)	JUMPER
△	R987, R988	10 (1/4W)	VACANT

Note :
HEWZ indicates SX-221R/HEWZ and SX-121/HEWZ.
HE • HB • YPW indicates SX-221R/HE, HB, YPW, SX-121/HE and HB.

COMPLEX assembly (1/2)(AWZ4083 : SX-221R/HEWZ)
(AWZ4088 : SX-221R/HE, HB, YPW)
(AWZ4091 : SX-121/HEWZ)
(AWZ4095 : SX-121/HE, HB)

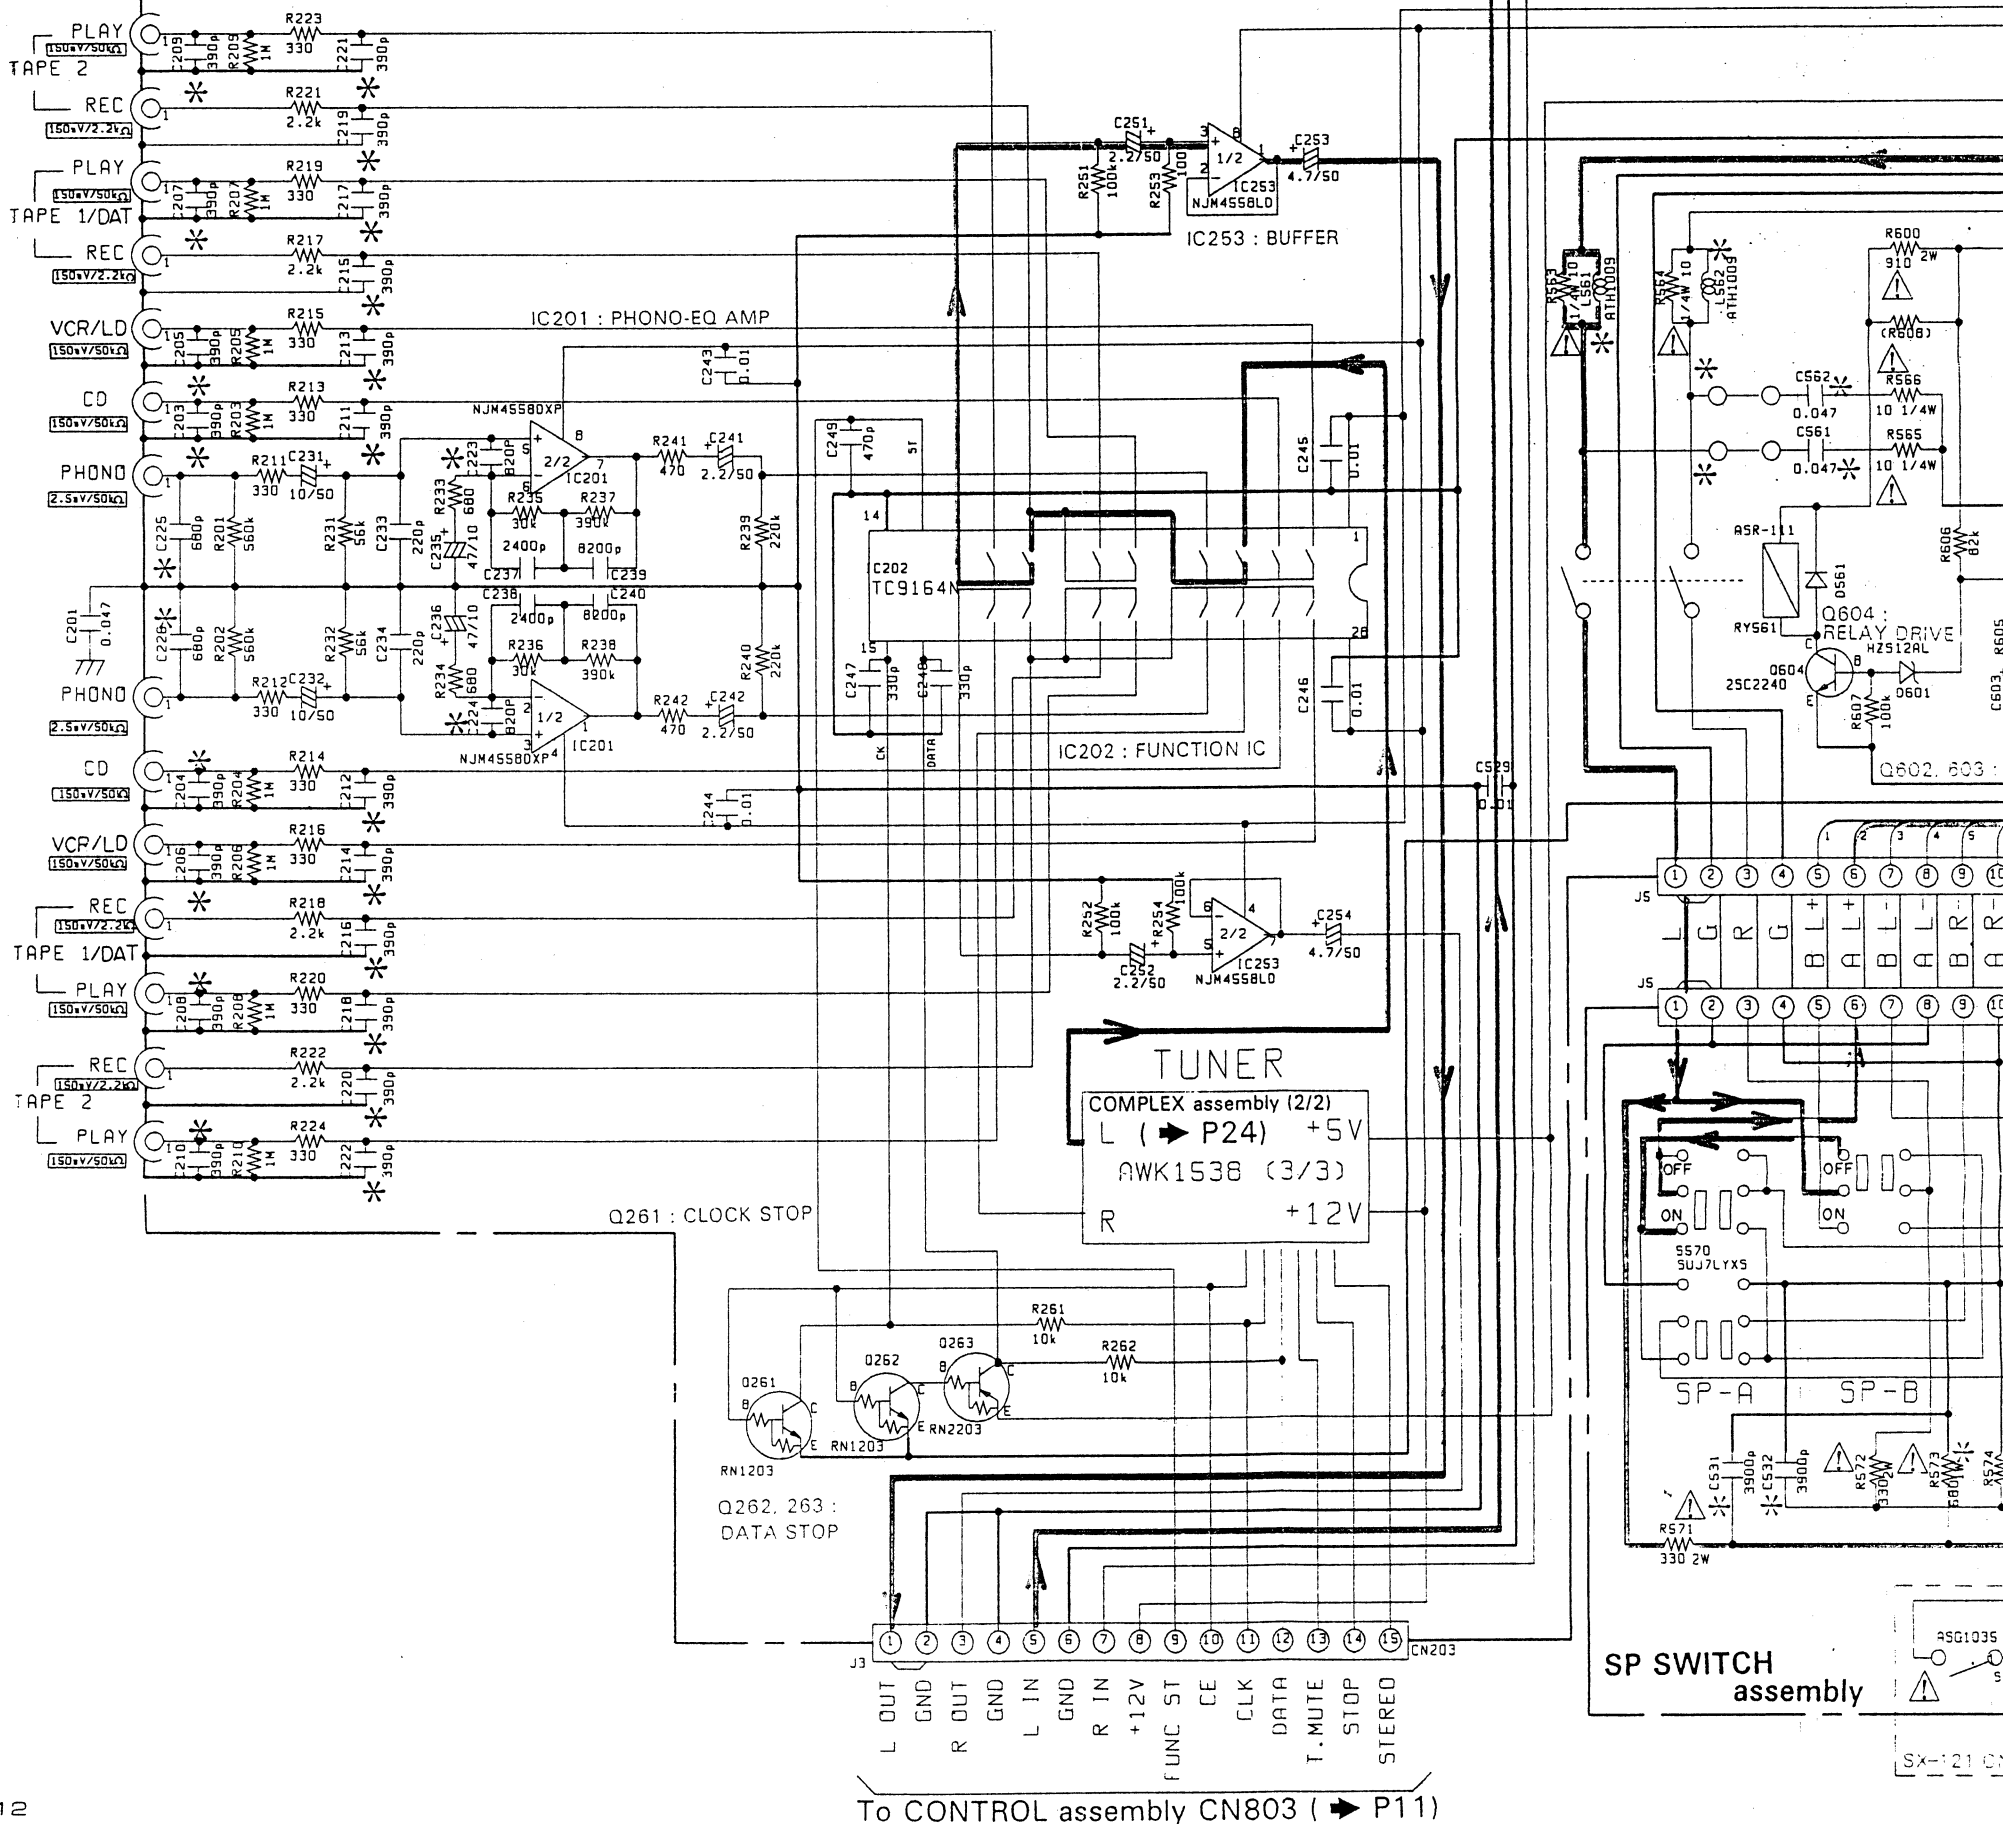













To CONTROL assembly CN803 (→ P11)

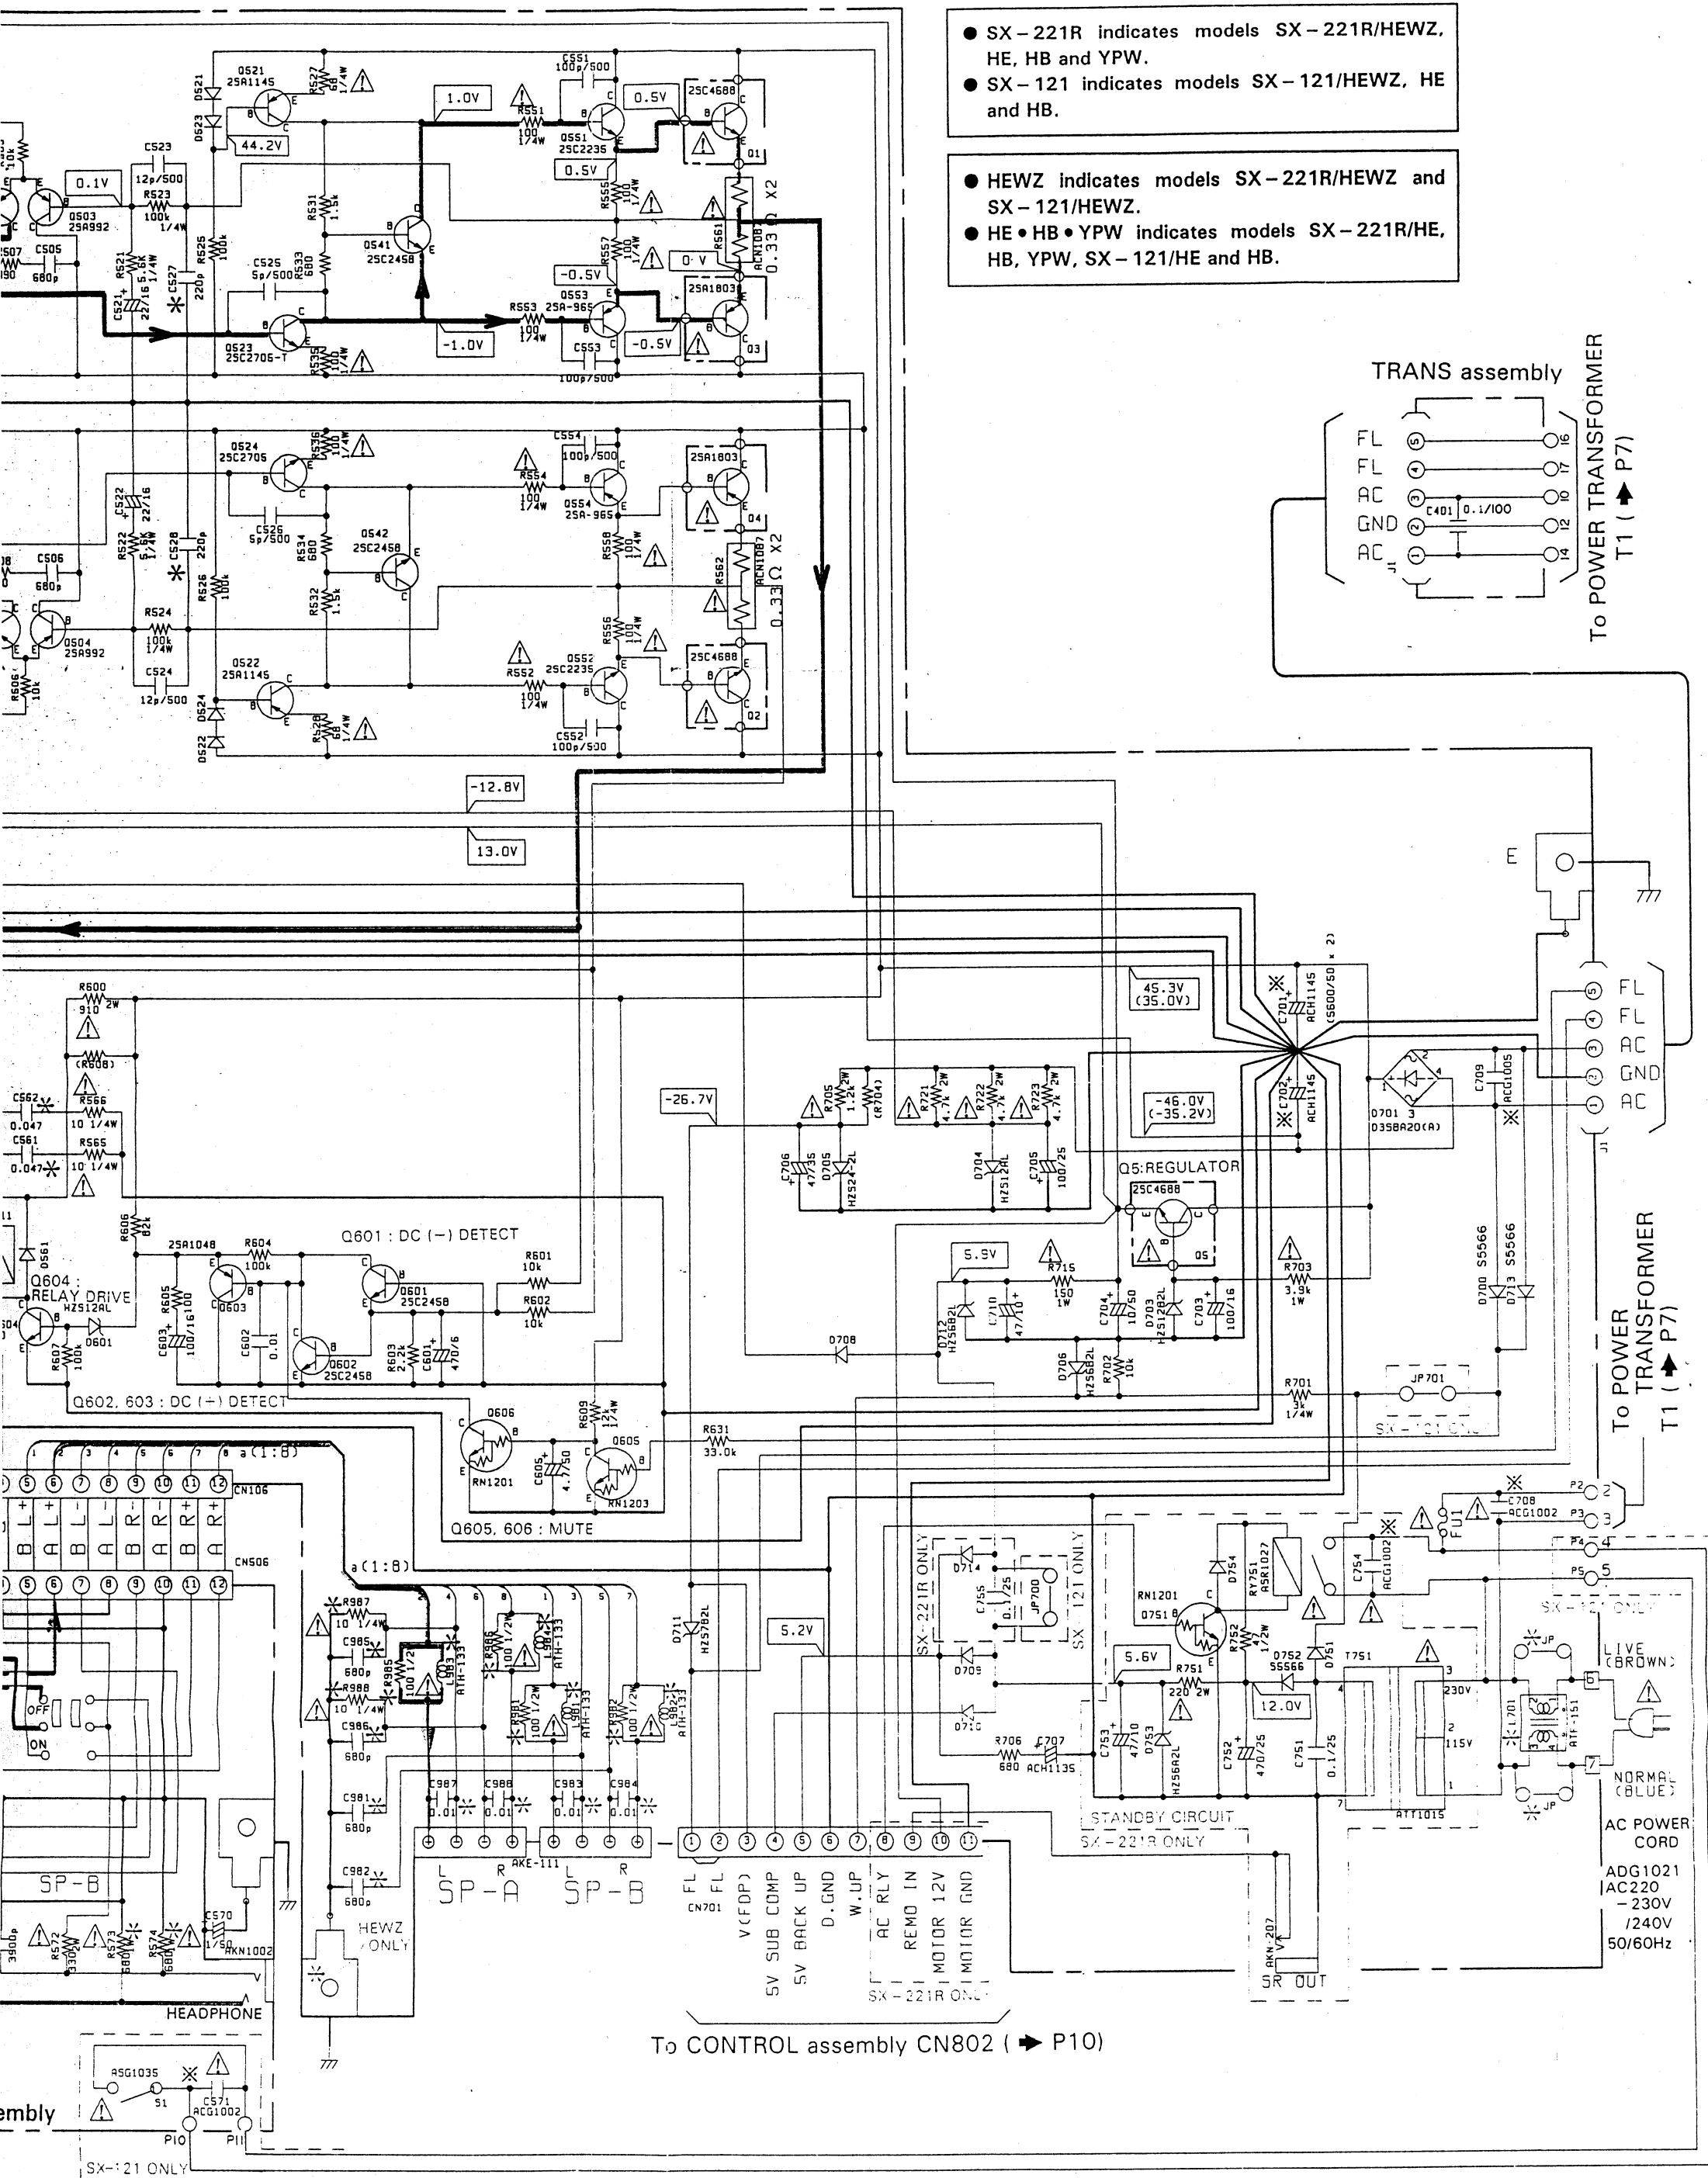

3.4 PCB CONNECTION DIAGRAM

NOTE

            1. This P.C.B. connection diagram is viewed from the parts mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the following Table.

P.C.B. pattern diagram indication	Corresponding part symbol	Part Name
		Transistor
		Radiator type transistor
		Diode
		Resistor
		Capacitor (Polarized)
		Capacitor (Non-polarized)

Others

P.C.B. pattern diagram indication	Part Name
IC	IC
S	Switch
RY	Relay
L	Coil
F	Filter
VR	Variable resistor or Semi-fixed resistor

3. The capacitor terminal marked with ⊕ (double circles) shows negative terminal.
4. The diode terminal marked with ⊕ (double circles) shows cathode side.
5. The transistor terminal to which E is affixed shows the emitter.

Line Voltage Selection

Line voltage can be changed with the following steps.

1. Disconnect the AC Power cord.
2. Remove the top cover.
3. Change the connection with the power transformer (T) primary taps.
4. Stick the line voltage label on the rear panel.

Part No.	Description
AAX-193	220V label
AAX-192	240V label


This P. C. B connection diagram is viewed from the parts mounted side.

AC POWER CORD
AC220-230V/240V
50Hz



L701 for HEWZ
JP for HE • HB • YPW

SX-121 ONLY

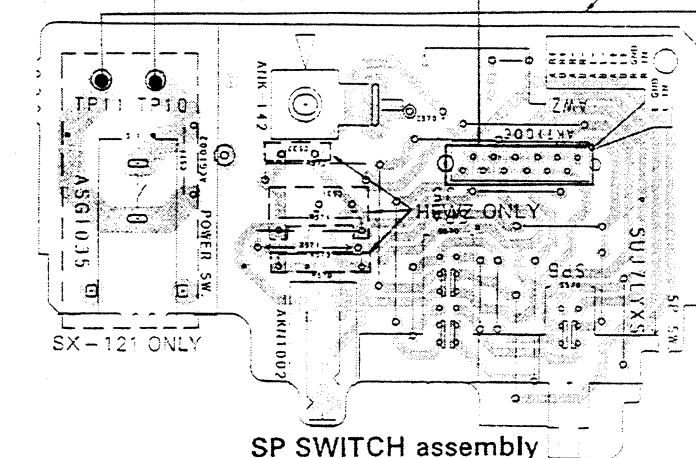


SP SWITCH assembly

HEWZ • HE 3

HE • YPW 5

CONTROL assembly (AWZ4084 : SX-221R/HEWZ, HE, HB, YPW)
(AWZ4092 : SX-121/HEWZ, HE, HB)

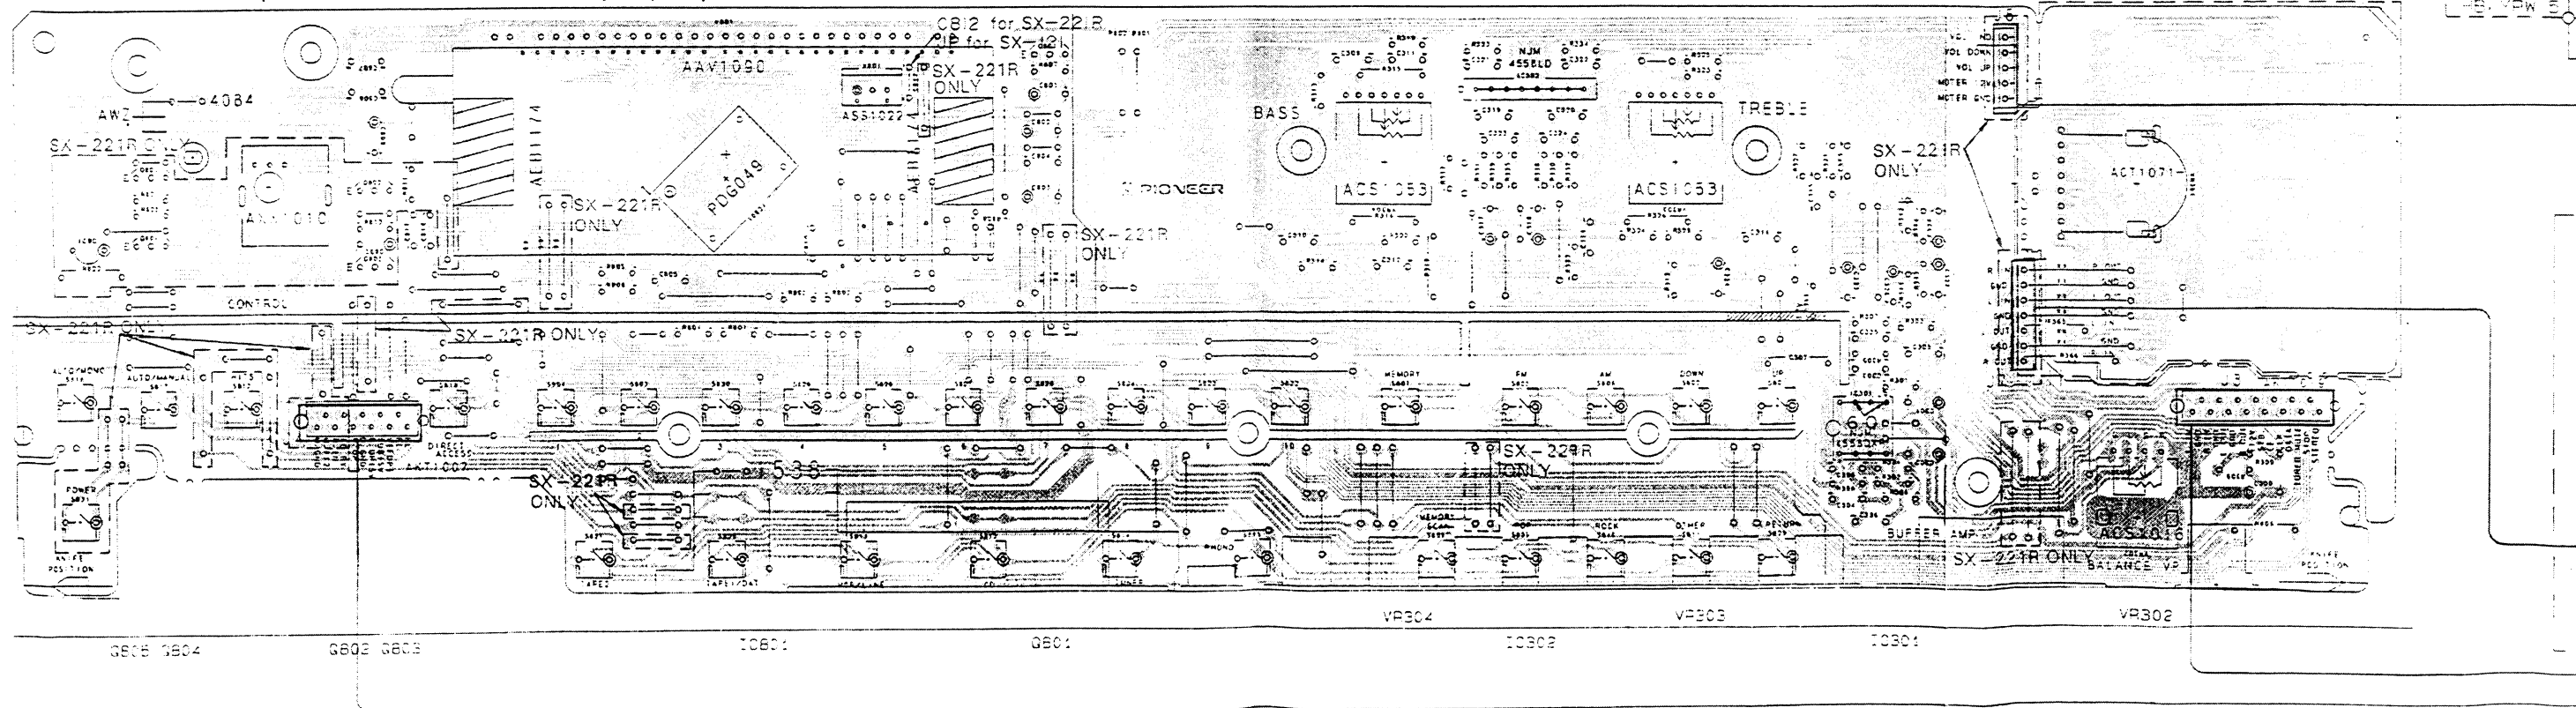

SX-121 ONLY

SX-221R ONLY

SX-221R ONLY

VR302

VR303

VR304

QB01

QB02

QB03

QB04

COMPLEX assembly
(AWZ4083 : SX - 221R/HEWZ)
(AWZ4088 : SX - 221R/HE, HB, YPW)
(AWZ4091 : SX - 121/HEWZ)
(AWZ4095 : SX - 121/HE, HB)

3751

Q605 Q606

Q601-Q603 Q604

10202

IC253 Q603

10201

Q504 Q502

Q110 Q107

IC101

Q101

Q102-Q104

IC102

Q261-Q263

Q109 Q108

SX-121 ONLY C755 for SX-221R

SX-221R ONLY

HE • HB • YPW ONLY

L701 for HEWZ
JP for HE • HB • YPW

SX-121 ONLY

FUT 114L250V

POWER TRANSFORMER

TRANS assembly

POWER SUPPLY

HEWZ ONLY

SX-221R ONLY

ANP1567-B

SX-221R ONLY

TAPE2 PLAY REC HEWZ ONLY

REC VCR HEWZ ONLY

CD PHONO HEWZ ONLY

AM HE • HB • YPW ONLY

FM HE • HB • YPW ONLY

HEWZ ONLY

HEWZ ONLY

HEWZ ONLY

HEWZ ONLY

HEWZ ONLY

HEWZ ONLY

HEWZ ONLY

HEWZ ONLY

HEWZ ONLY

SX-221R ONLY

VR assembly

YOL 100

YOL 100

YOL 100

YOL 100

YOL 100

YOL 100

YOL 100

YOL 100

YOL 100

YOL 100

YOL 100

YOL 100

YOL 100

YOL 100

YOL 100

YOL 100

YOL 100

YOL 100

YOL 100




YOL 100

YOL 100

YOL 100

- SX - 221R indicates models SX - 221R/HEWZ, HE, HB and YPW.
- SX - 121 indicates models SX - 121/HEWZ, HE and HB.
- HEWZ indicates models SX - 221R/HEWZ and SX - 121/HEWZ.
- HE • HB • YPW indicates models SX - 221R/HE, HB, YPW, SX - 121/HE and HB.

- HB, YPW, 2X - 121\HE and HB.
- HE • HB • YPW indicates models 2X - 221R\HE, 2X - 121\HEW2.
- HEW2 indicates models 2X - 221R\HEW2 and 2X - 121 and HB.
- 2X - 121 indicates models 2X - 121\HEW2, HE, HB and YPW.
- 2X - 221R indicates models 2X - 221R\HEW2.

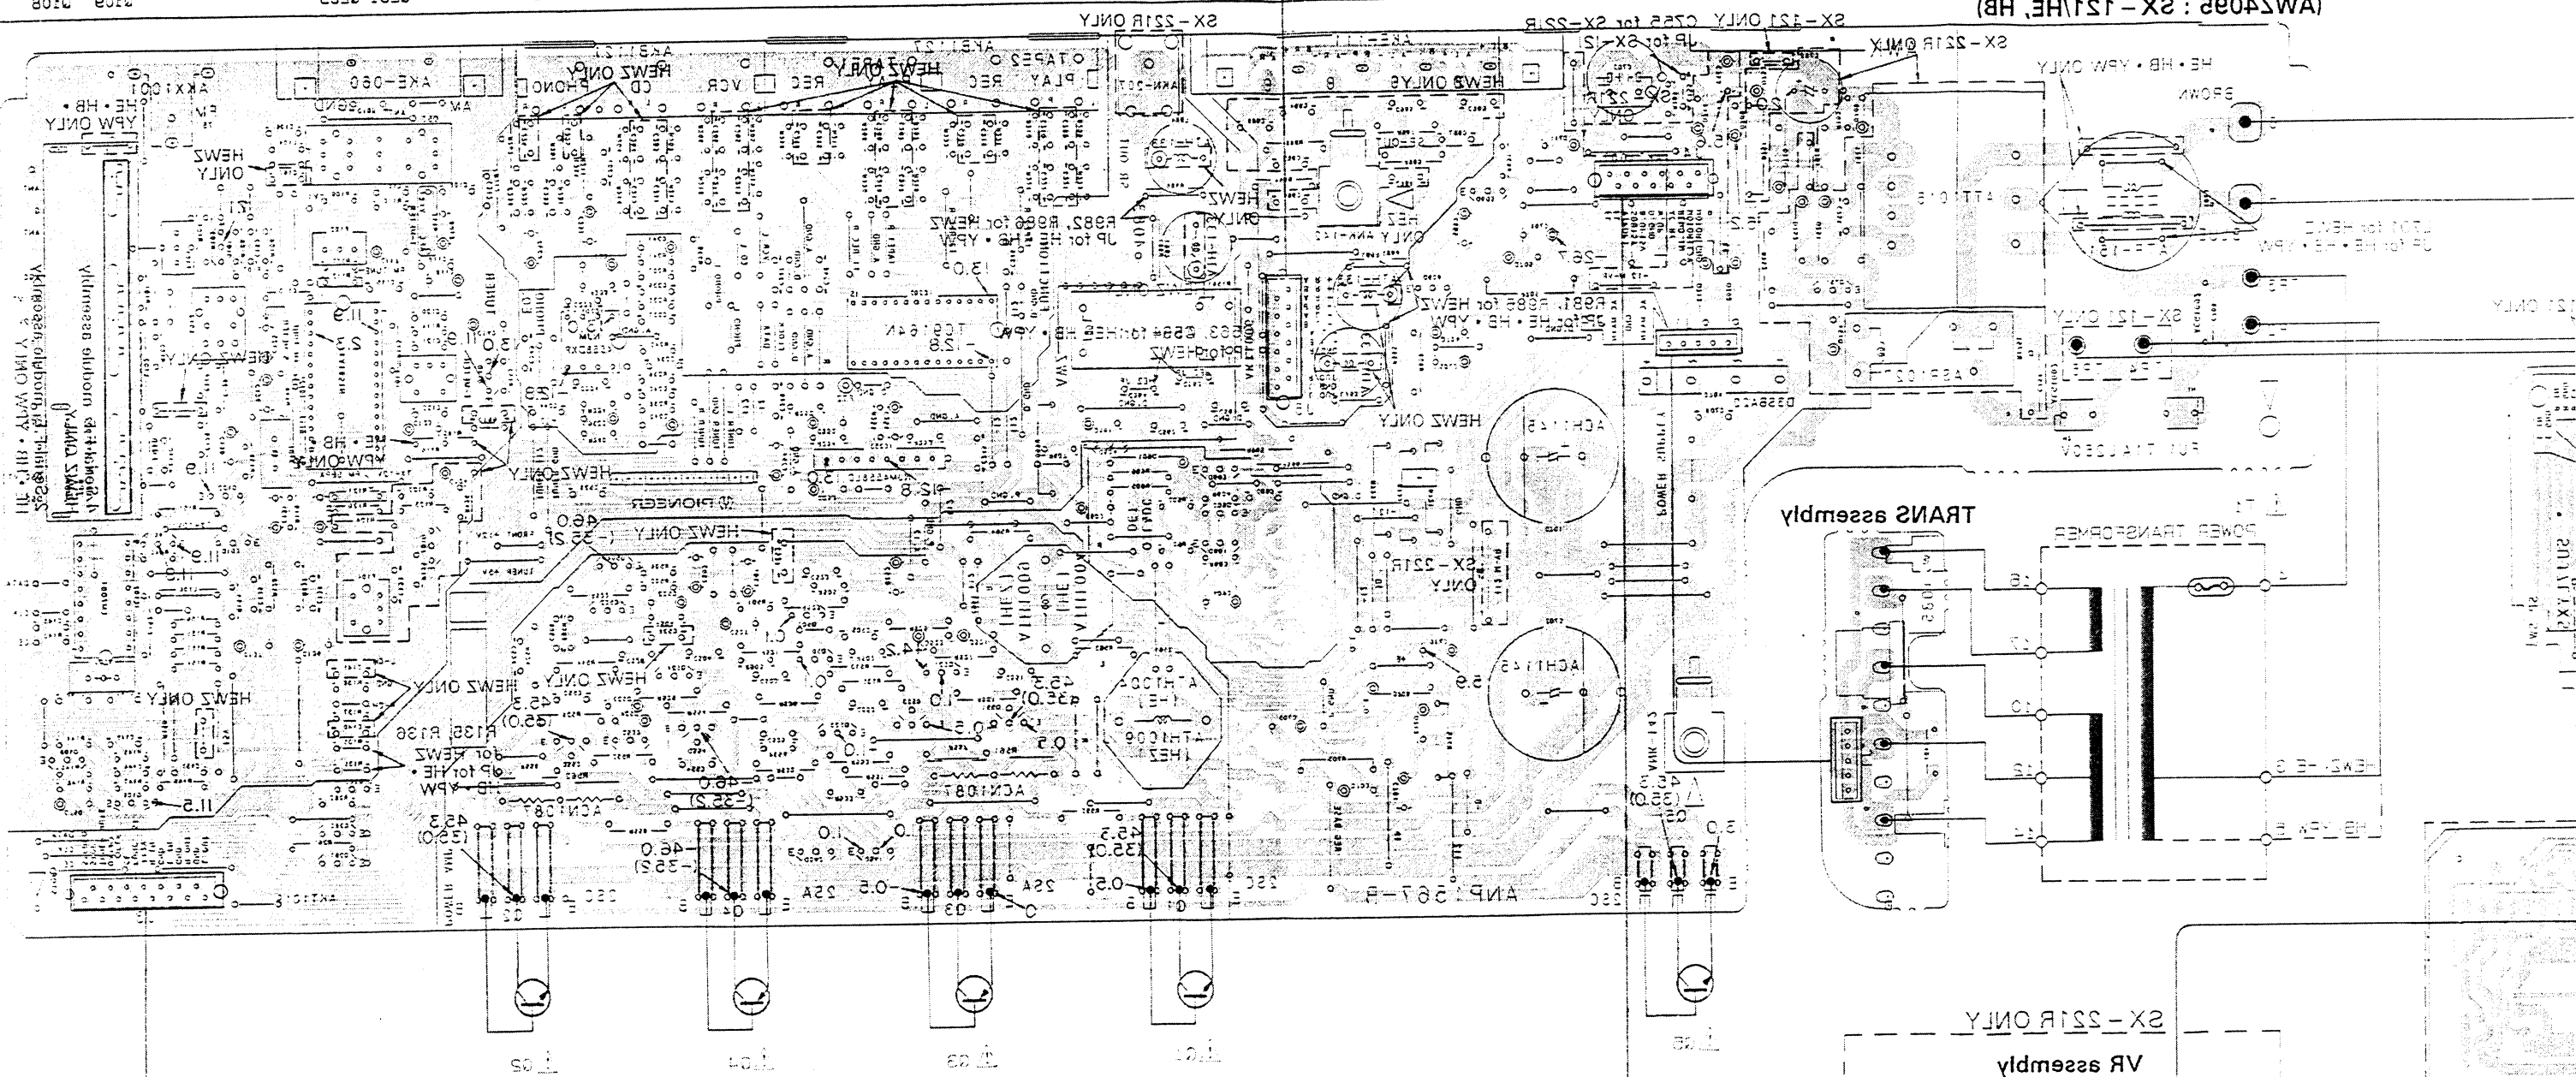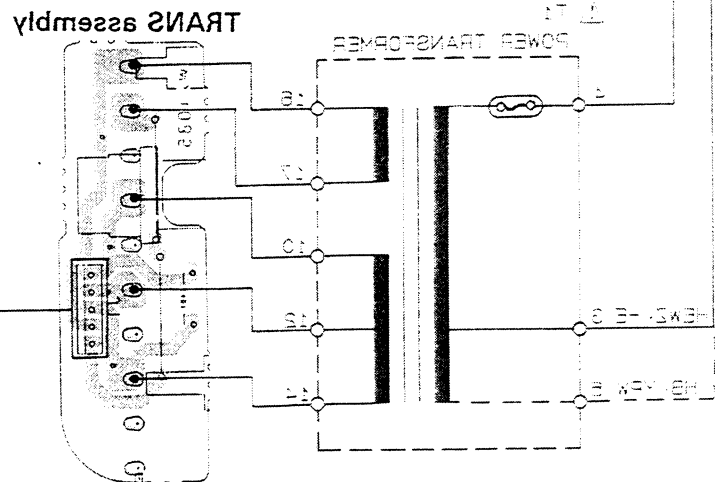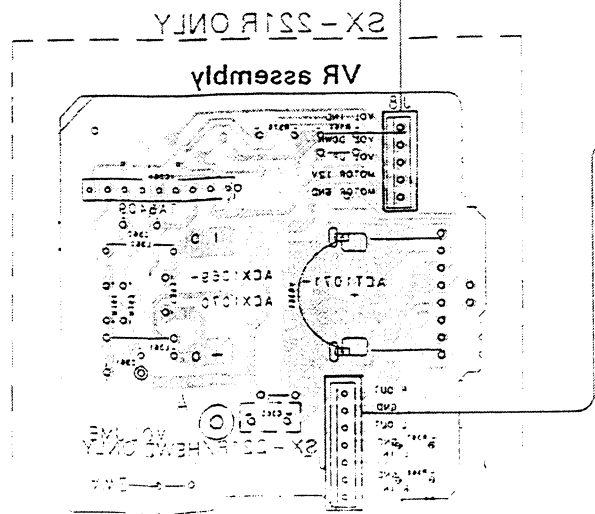

COMPLEX assembly

0201-0803 0204 0205 0206 0207 0208 0209 0210 0211 0212 0213 0214 0215 0216 0217 0218 0219 0220 0221 0222 0223 0224 0225 0226 0227 0228 0229 0230 0231 0232 0233 0234 0235 0236 0237 0238 0239 0240 0241 0242 0243 0244 0245 0246 0247 0248 0249 0250 0251 0252 0253 0254 0255 0256 0257 0258 0259 0260 0261 0262 0263 0264 0265 0266 0267 0268 0269 0270 0271 0272 0273 0274 0275 0276 0277 0278 0279 0280 0281 0282 0283 0284 0285 0286 0287 0288 0289 0290 0291 0292 0293 0294 0295 0296 0297 0298 0299 0300 0301 0302 0303 0304 0305 0306 0307 0308 0309 0310 0311 0312 0313 0314 0315 0316 0317 0318 0319 0320 0321 0322 0323 0324 0325 0326 0327 0328 0329 0330 0331 0332 0333 0334 0335 0336 0337 0338 0339 0340 0341 0342 0343 0344 0345 0346 0347 0348 0349 0350 0351 0352 0353 0354 0355 0356 0357 0358 0359 0360 0361 0362 0363 0364 0365 0366 0367 0368 0369 0370 0371 0372 0373 0374 0375 0376 0377 0378 0379 0380 0381 0382 0383 0384 0385 0386 0387 0388 0389 0390 0391 0392 0393 0394 0395 0396 0397 0398 0399 0400 0401 0402 0403 0404 0405 0406 0407 0408 0409 0410 0411 0412 0413 0414 0415 0416 0417 0418 0419 0420 0421 0422 0423 0424 0425 0426 0427 0428 0429 0430 0431 0432 0433 0434 0435 0436 0437 0438 0439 0440 0441 0442 0443 0444 0445 0446 0447 0448 0449 0450 0451 0452 0453 0454 0455 0456 0457 0458 0459 0460 0461 0462 0463 0464 0465 0466 0467 0468 0469 0470 0471 0472 0473 0474 0475 0476 0477 0478 0479 0480 0481 0482 0483 0484 0485 0486 0487 0488 0489 0490 0491 0492 0493 0494 0495 0496 0497 0498 0499 0500 0501 0502 0503 0504 0505 0506 0507 0508 0509 0510 0511 0512 0513 0514 0515 0516 0517 0518 0519 0520 0521 0522 0523 0524 0525 0526 0527 0528 0529 0530 0531 0532 0533 0534 0535 0536 0537 0538 0539 0540 0541 0542 0543 0544 0545 0546 0547 0548 0549 0550 0551 0552 0553 0554 0555 0556 0557 0558 0559 0560 0561 0562 0563 0564 0565 0566 0567 0568 0569 0570 0571 0572 0573 0574 0575 0576 0577 0578 0579 0580 0581 0582 0583 0584 0585 0586 0587 0588 0589 0590 0591 0592 0593 0594 0595 0596 0597 0598 0599 0600 0601 0602 0603 0604 0605 0606 0607 0608 0609 0610 0611 0612 0613 0614 0615 0616 0617 0618 0619 0620 0621 0622 0623 0624 0625 0626 0627 0628 0629 0630 0631 0632 0633 0634 0635 0636 0637 0638 0639 0640 0641 0642 0643 0644 0645 0646 0647 0648 0649 0650 0651 0652 0653 0654 0655 0656 0657 0658 0659 0660 0661 0662 0663 0664 0665 0666 0667 0668 0669 0670 0671 0672 0673 0674 0675 0676 0677 0678 0679 0680 0681 0682 0683 0684 0685 0686 0687 0688 0689 0690 0691 0692 0693 0694 0695 0696 0697 0698 0699 0700 0701 0702 0703 0704 0705 0706 0707 0708 0709 0710 0711 0712 0713 0714 0715 0716 0717 0718 0719 0720 0721 0722 0723 0724 0725 0726 0727 0728 0729 0730 0731 0732 0733 0734 0735 0736 0737 0738 0739 0740 0741 0742 0743 0744 0745 0746 0747 0748 0749 0750 0751 0752 0753 0754 0755 0756 0757 0758 0759 0760 0761 0762 0763 0764 0765 0766 0767 0768 0769 0770 0771 0772 0773 0774 0775 0776 0777 0778 0779 0780 0781 0782 0783 0784 0785 0786 0787 0788 0789 0790 0791 0792 0793 0794 0795 0796 0797 0798 0799 0800 0801 0802 0803 0804 0805 0806 0807 0808 0809 0810 0811 0812 0813 0814 0815 0816 0817 0818 0819 0820 0821 0822 0823 0824 0825 0826 0827 0828 0829 0830 0831 0832 0833 0834 0835 0836 0837 0838 0839 0840 0841 0842 0843 0844 0845 0846 0847 0848 0849 0850 0851 0852 0853 0854 0855 0856 0857 0858 0859 0860 0861 0862 0863 0864 0865 0866 0867 0868 0869 0870 0871 0872 0873 0874 0875 0876 0877 0878 0879 0880 0881 0882 0883 0884 0885 0886 0887 0888 0889 0890 0891 0892 0893 0894 0895 0896 0897 0898 0899 0900 0901 0902 0903 0904 0905 0906 0907 0908 0909 0910 0911 0912 0913 0914 0915 0916 0917 0918 0919 0920 0921 0922 0923 0924 0925 0926 0927 0928 0929 0930 0931 0932 0933 0934 0935 0936 0937 0938 0939 0940 0941 0942 0943 0944 0945 0946 0947 0948 0949 0950 0951 0952 0953 0954 0955 0956 0957 0958 0959 0960 0961 0962 0963 0964 0965 0966 0967 0968 0969 0970 0971 0972 0973 0974 0975 0976 0977 0978 0979 0980 0981 0982 0983 0984 0985 0986 0987 0988 0989 0990 0991 0992 0993 0994 0995 0996 0997 0998 0999 1000 1001 1002 1003 1004 1005 1006 1007 1008 1009 1010 1011 1012 1013 1014 1015 1016 1017 1018 1019 1020

2X-251R. 2X-151



A

m

Q

COMPL
(A W 54)
(A W 54)
(A W 54)
(A W 54)

Part No.	Description
AXA - 183	250V 1800W
AXA - 182	250V 1800W

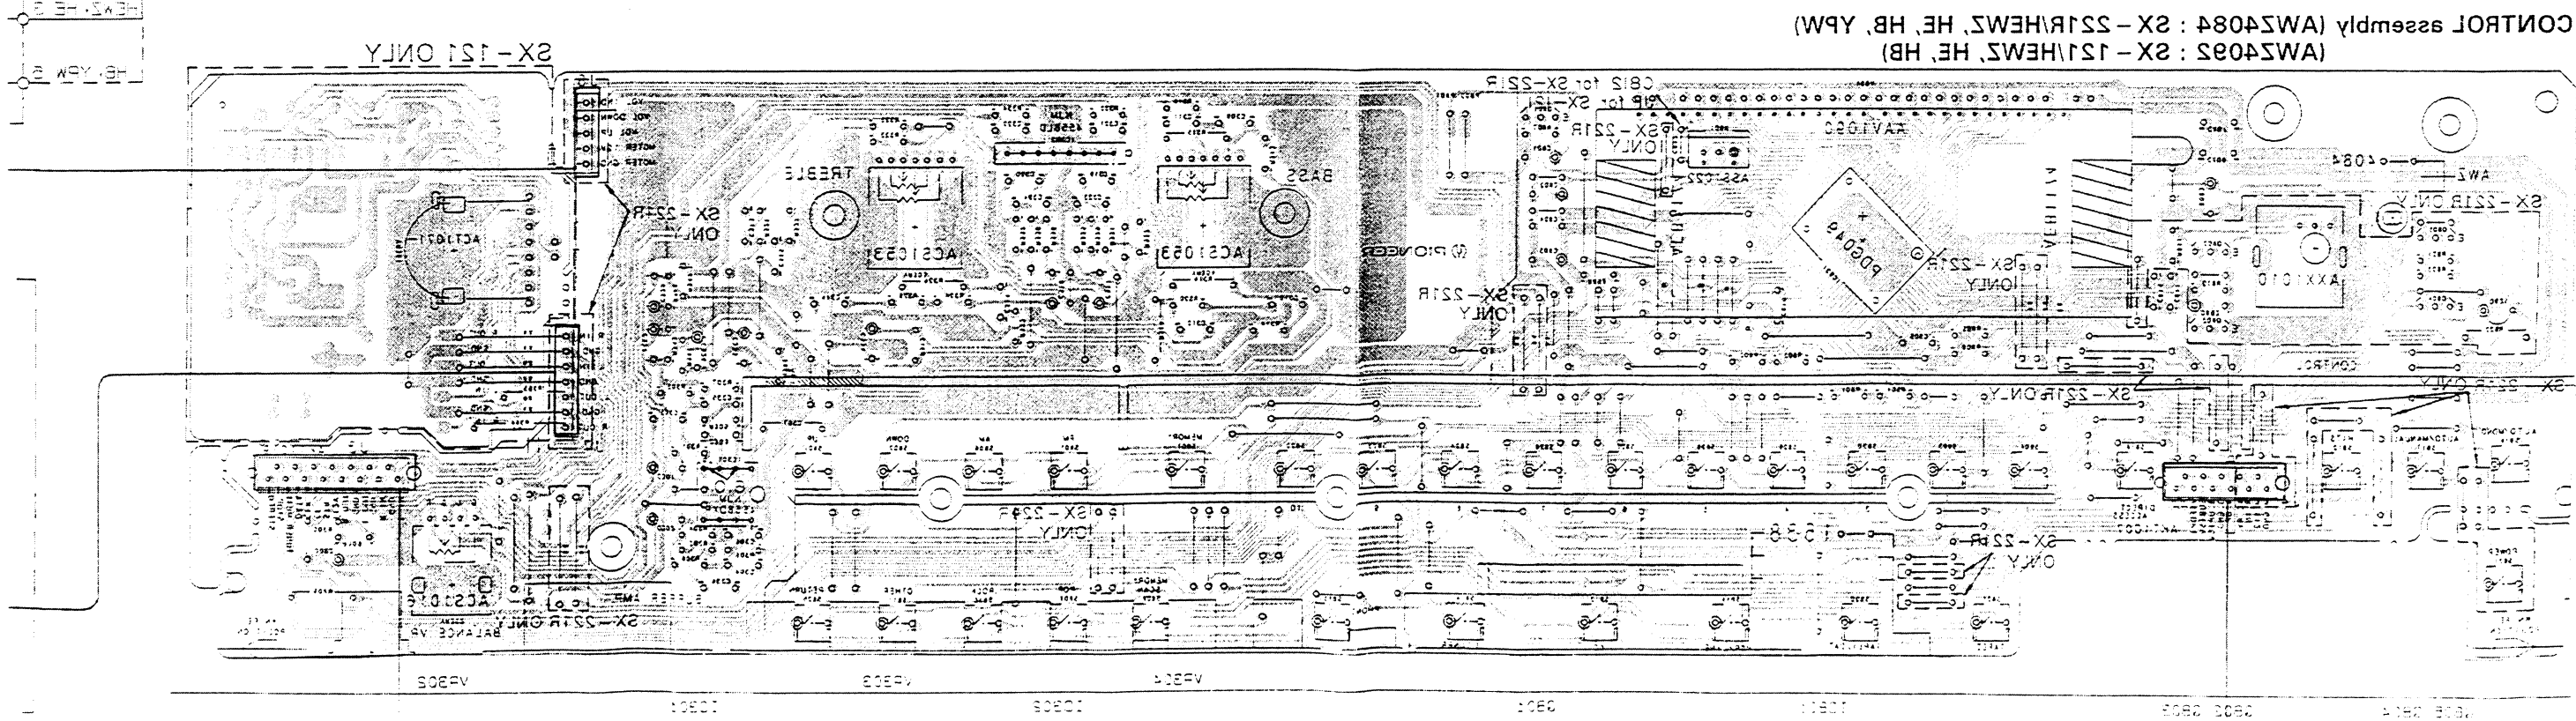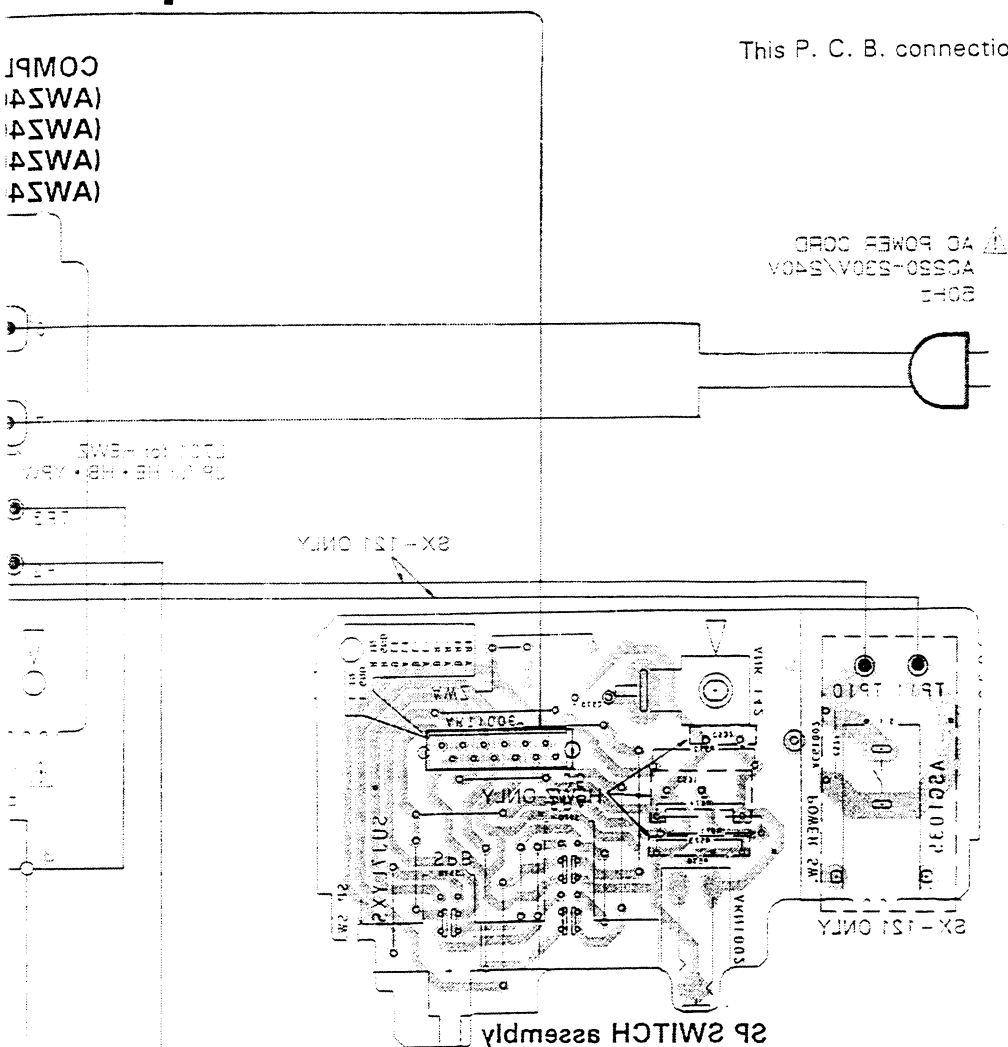

3.5 COMPLEX ASSEMBLY (2/2)(TUNER SECTION)

● Parts marked with * have the following variations :


Mark	Symbol & Description	(Note) HEWZ	(Note) HE • HB • YPW
C123		2.2/50	1.0/50
C134, C135		2700p	8200p
C140, C141		2200p	VACANT
C197		33p	VACANT
C198		390p	VACANT
R114		56k	43k
R115		8.2k	4.7k
R116		VACANT	15k
R127, R128		15k	10k
R135, R136		1k	JUMPER
FM FRONT END	AXQ1004	AXQ1002	

Note:
HEWZ indicates SX-221R/HEWZ and SX-121/HEWZ.
HE • HB • YPW indicates SX-221R/HE, HB, YPW, SX-121/HE and HB.

- HEWZ indicates models SX-221R/HEWZ and SX-121/HEWZ.
- HE • HB • YPW indicates models SX-221R/HE, HB, YPW, SX-121/HE and HB.

— FM & FM/AM SIGNAL
--- AM SIGNAL

To COMPLEX assembly (1/2) (▲ P12)

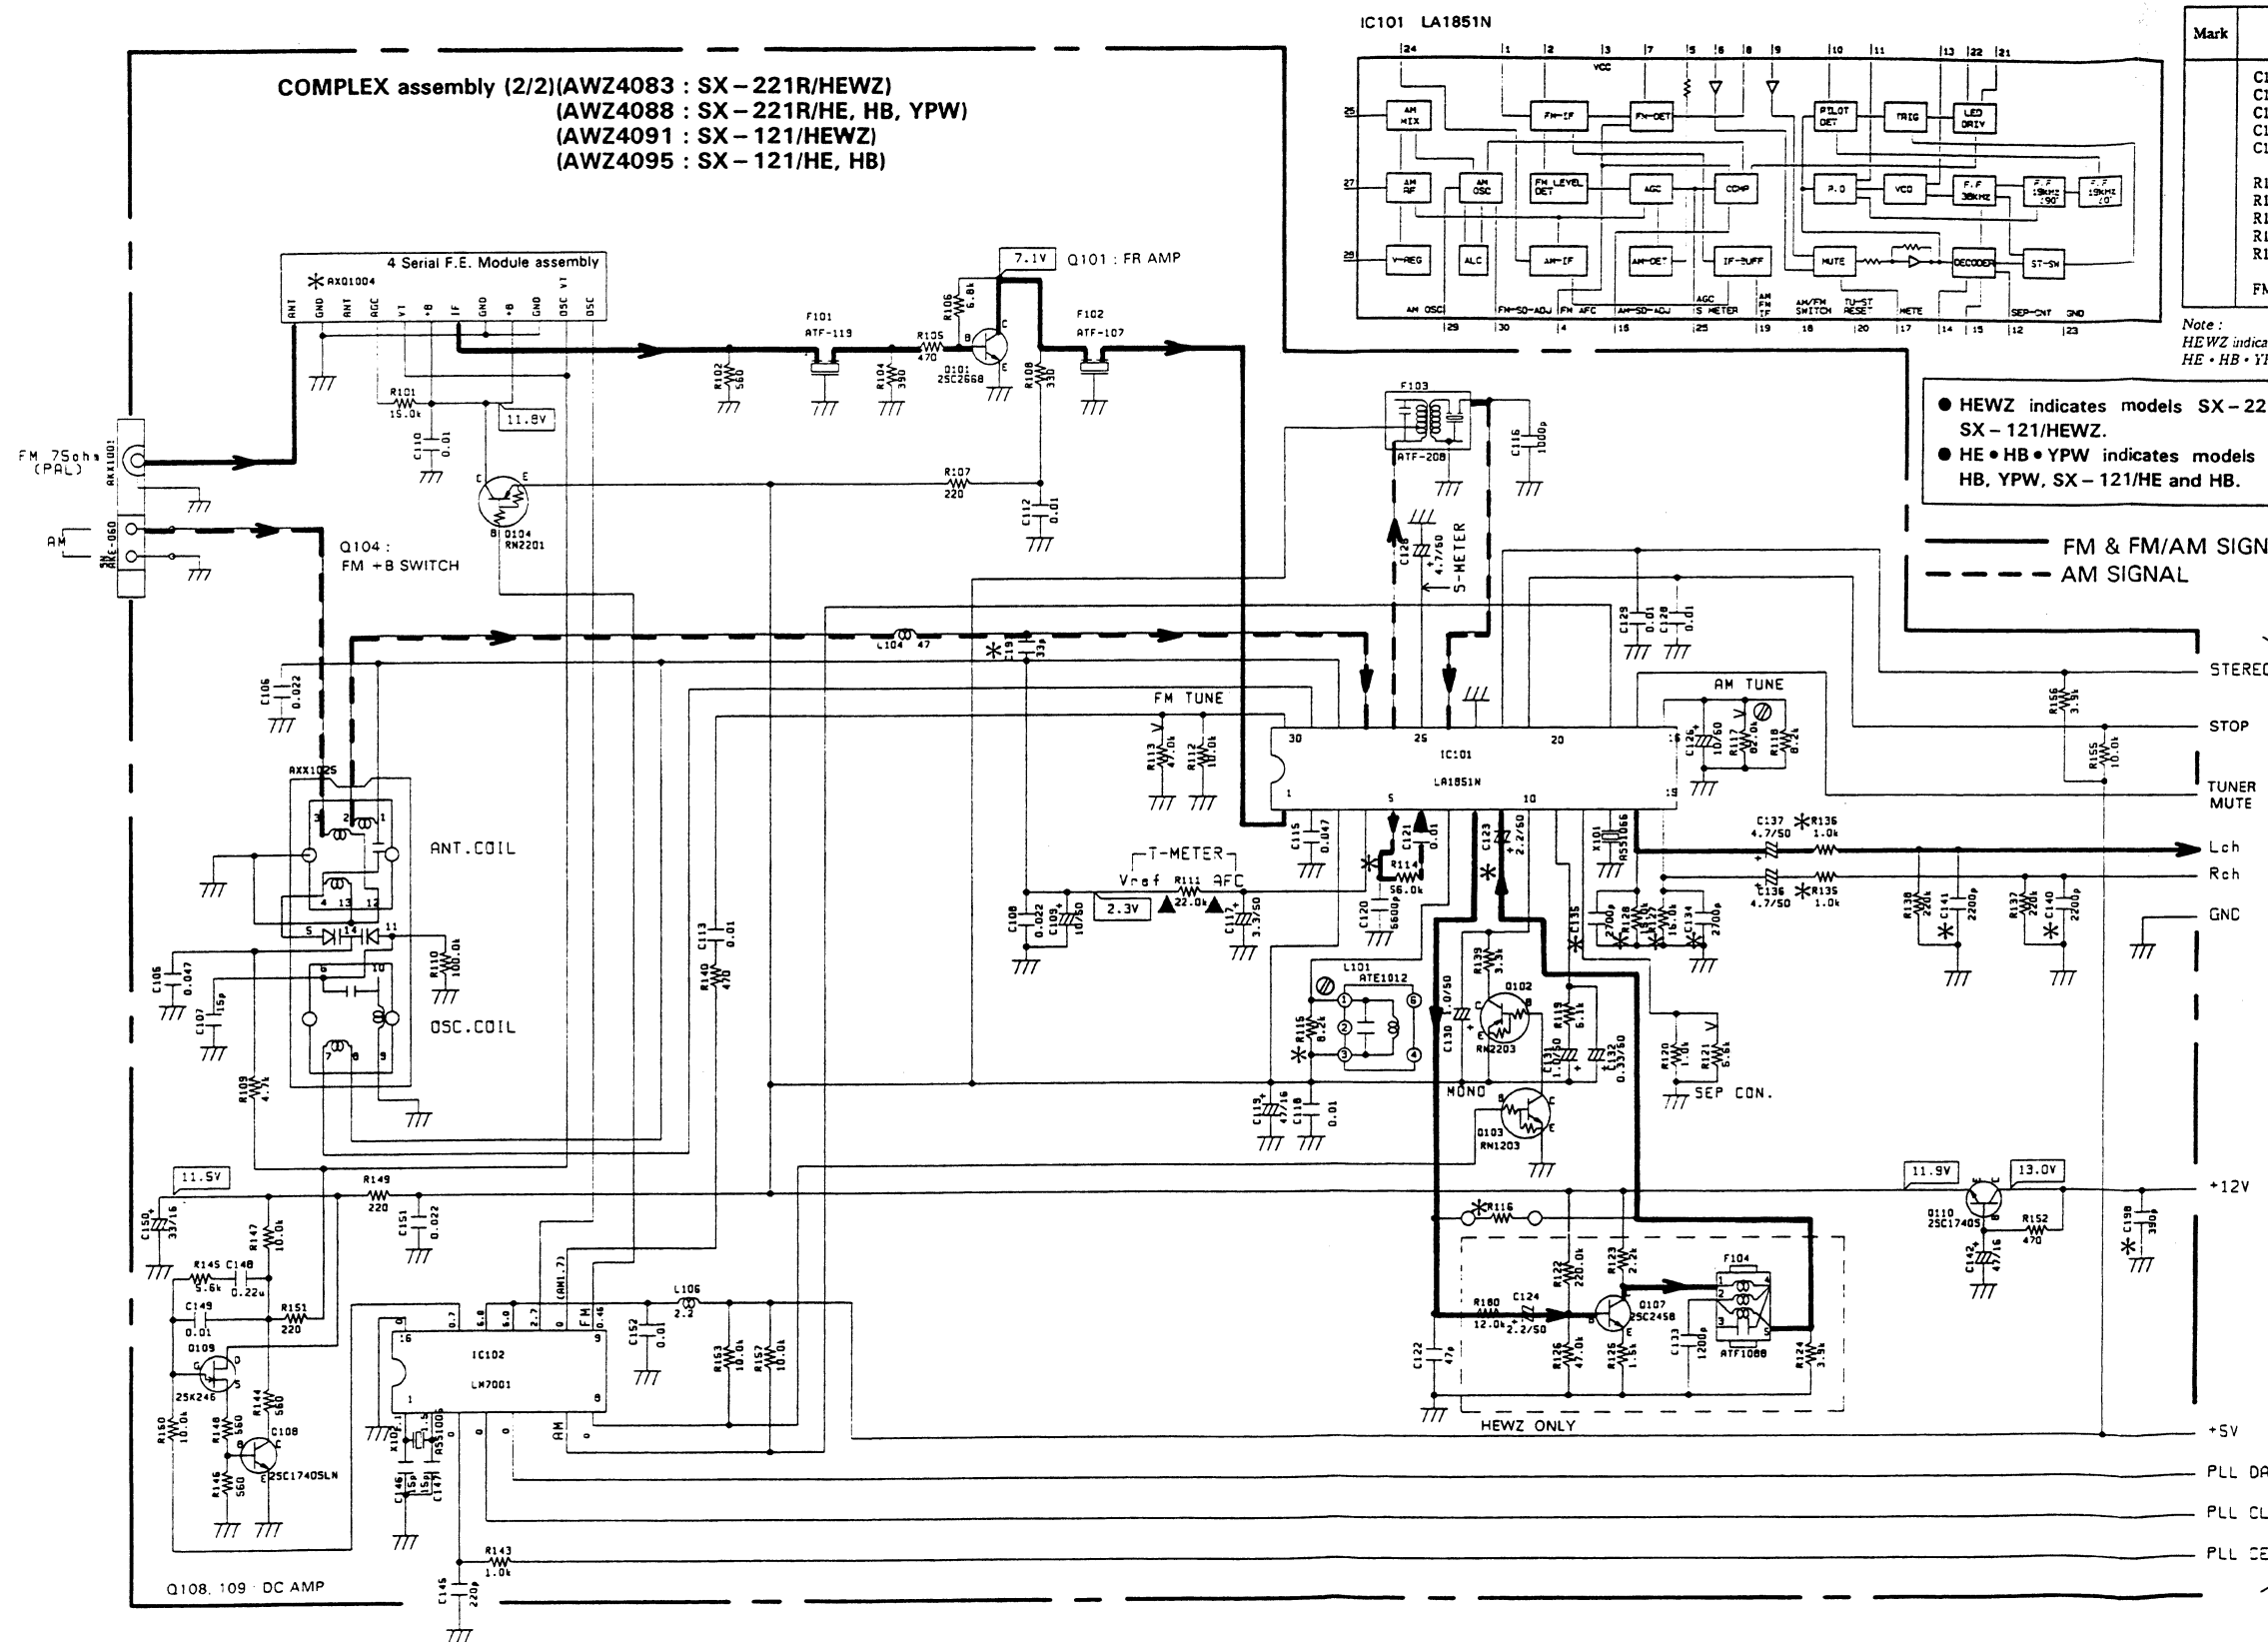

4. PCB PARTS LIST

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω $\rightarrow$ 56 $\times$ 10¹ $\rightarrow$ 561.....RD1/8PM $\square$ $\square$ J

47k Ω $\rightarrow$ 47 $\times$ 10³ $\rightarrow$ 473.....RD1/4PS $\square$ $\square$ J

0.5 Ω $\rightarrow$ 0R5.....RN2H $\square$ $\square$ K

1 Ω $\rightarrow$ 010.....RS1P $\square$ $\square$ K

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω $\rightarrow$ 562 $\times$ 10¹ $\rightarrow$ 5621.....RN1/4PC $\square$ $\square$ F

4.1 FOR SX-221R/HEWZ

Mark No.	Description	Parts No.	Mark No.	Description	Parts No.
LIST OF ASSEMBLIES					
●	COMPLEX ASSEMBLY	AWZ4083	D521-524	DIODE	HSS104-02
●	CONTROL ASSEMBLY	AWZ4084	D561	DIODE	HSS104-02
NSP	TRANS ASSEMBLY	AWZ4085	D601	ZENER DIODE	HZS12AL
NSP	SP SWITCH ASSEMBLY	AWZ4086	D700, 713	DIODE	S5566
NSP	VR ASSEMBLY	AWZ4087	D701	DIODE	D3SBA20 (A)
COMPLEX ASSEMBLY					
SEMICONDUCTORS					
IC101	AM/FM IC	LA1851N	D703	ZENER DIODE	HZS12B2L
IC102	PLL IC	LM7001	D704	ZENER DIODE	HZS12AL
IC201	OP-AMP IC	NJM4558DXP	D705	ZENER DIODE	HZS24-2L
IC202	E-SW IC	TC9164N	D706	ZENER DIODE	HZS6B2L
IC253	OP-AMP IC	NJM4558LD	D708-710	DIODE	HSS104-02
Q101	TRANSISTOR	2SC2668	D711	ZENER DIODE	HZS7B2L
Q102	TRANSISTOR	RN2203	D712	ZENER DIODE	HZS6B2L
Q103	TRANSISTOR	RN1203	D714	DIODE	HSS104-02
Q104	TRANSISTOR	RN2201	D751	DIODE	HSS104-02
Q107	TRANSISTOR	2SC2458	D752	DIODE	S5566
Q108	TRANSISTOR	2SC1740SLN	D753	ZENER DIODE	HZS6A2L
Q109	N-FET	2SK246	D754	DIODE	HSS104-02
Q110	TRANSISTOR	2SC1740S	RELAYS		
Q261, 262	TRANSISTOR	RN1203	RY561	RELAY	ASR-111
Q263	TRANSISTOR	RN2203	Δ RY751	RELAY	ASR1027
Q501-504	TRANSISTOR	2SA992	COILS & TRANSFORMER		
Q521, 522	TRANSISTOR	2SA1145	F101	CERAMIC FILTER	ATF-119
Q523, 524	TRANSISTOR	2SC2705	F102	CERAMIC FILTER	ATF-107
Q541, 542	TRANSISTOR	2SC2458	F103	CERAMIC FILTER	ATF-208
Q551, 552	TRANSISTOR	2SC2235	F104	FILTER	ATF1088
Q553, 554	TRANSISTOR	2SA965	L101	COIL	ATE1012
Q601, 602	TRANSISTOR	2SC2458	L104	AXIAL INDUCTOR	LAU470K
Q603	TRANSISTOR	2SA1048	L106	AXIAL INDUCTOR	LAU2R2M
Q604	TRANSISTOR	2SC2240	L561, 562	COIL	ATH1009
Q605	TRANSISTOR	RN1203	L701	FILTER	ATF-151
Q606, 751	TRANSISTOR	RN1201	L981-984	COIL	ATH-133
			Δ T751	POWER TRANSFORMER	ATT1015

Mark No.	Description	Parts No.	Mark No.	Description	Parts No.
CAPACITORS					
C105	CERAMIC CAPACITOR	CKCYX473M16	C501, 502	ELECT. CAPACITOR	CEAS2R2M50
C106	AXIAL CERAMIC C.	CKPUYF223Z25	C503, 504	CERAMIC CAPACITOR	CKCYB102K50
C107	AXIAL CERAMIC C.	CCPUCH150J50	C505, 506	CERAMIC CAPACITOR	CKCYB681K50
C108	AXIAL CERAMIC C.	CKPUYF223Z25	C520	ELECT. CAPACITOR	CEAS101M16
C109	ELECT. CAPACITOR	CEAS100M50	C521, 522	ELECT. CAPACITOR	CEAS220M16
C110	CERAMIC CAPACITOR	CKPUYY103N16	C523, 524	CERAMIC CAPACITOR	CCCSL120K500
C112 113	CERAMIC CAPACITOR	CKPUYY103N16	C525, 526	CERAMIC CAPACITOR	CCCSL050C500
C115	CERAMIC CAPACITOR	CKDYX473M25	C527, 528	CERAMIC CAPACITOR	CKMYB221K50
C116	CERAMIC CAPACITOR	CKPUYB102K50	C529	CERAMIC CAPACITOR	CKCYF103Z50
C117	ELECT. CAPACITOR	CEAS3R3M50	C551-554	CERAMIC CAPACITOR	CCCSL101K500
C118	CERAMIC CAPACITOR	CKPUYY103N16	C561, 562	AUDIO FILM CAPACITOR	CFTXA473J50
C119	ELECT. CAPACITOR	CEAS470M16	C601	ELECT. CAPACITOR	CEAS471M6
C120	CERAMIC CAPACITOR	CKPUYX562M16	C602	AXIAL CERAMIC C.	CKPUYF103Z25
C121	CERAMIC CAPACITOR	CKPUYY103N16	C603	ELECT. CAPACITOR	CEAS101M16
C122	AXIAL CAPACITOR	CCPUSL470J50	C605	ELECT. CAPACITOR	CEAS4R7M50
C123, 124	ELECT. CAPACITOR	CEAS2R2M50	C701, 702	ELECT. CAPACITOR (5600/DC50V)	ACH1145
C125	ELECT. CAPACITOR	CEAS4R7M50	C703	ELECT. CAPACITOR	CEAS101M16
C126	ELECT. CAPACITOR	CEAS100M50	C704	ELECT. CAPACITOR	CEHAQ100M50
C128, 129	CERAMIC CAPACITOR	CKPUYY103N16	C705	ELECT. CAPACITOR	CEAS101M25
C130, 131	ELECT. CAPACITOR	CEAS010M50	C706	ELECT. CAPACITOR	CEHAQ470M35
C132	ELECT. CAPACITOR	CEASR33M50	C707	CAPACITOR (0.047/5.5)	ACH1135
C133	CERAMIC CAPACITOR	CKCYB122K50	Δ C708	CKA (0.01/AC400V)	ACG1002
C134, 135	CERAMIC CAPACITOR	CKCYB272K50	C709	CKA (0.01/AC250V)	ACG1005
C136, 137	ELECT. CAPACITOR	CEAS4R7M50	C710	ELECT. CAPACITOR	CEHAQ470M10
C140, 141	CERAMIC CAPACITOR	CKCYB222K50	C751	CERAMIC CAPACITOR	CKCYX104M25
C142	ELECT. CAPACITOR	CEAS470M16	C752	ELECT. CAPACITOR	CEAS471M25
C145	CERAMIC CAPACITOR	CKPUYB221K50	C753	ELECT. CAPACITOR	CEAS470M10
C146, 147	AXIAL CERAMIC C.	CCPUCH150J50	Δ C754	CKA (0.01/AC400V)	ACG1002
C148	AUDIO FILM CAPACITOR	CFTXA224J50	C755	CERAMIC CAPACITOR	CKCYX104M25
C149	AUDIO FILM CAPACITOR	CFTXA103J50	C981, 982	CERAMIC CAPACITOR	CKMYB681K50
C150	ELECT. CAPACITOR	CEAS330M16	C983, 984	CERAMIC CAPACITOR	CKCYF103Z50
C151	AXIAL CERAMIC C.	CKPUYF223Z25	C985, 986	CERAMIC CAPACITOR	CKMYB681K50
C152	CERAMIC CAPACITOR	CKPUYY103N16	C987, 988	CERAMIC CAPACITOR	CKCYF103Z50
C197	AXIAL CAPACITOR	CCPUSL330J50	RESISTORS		
C198	CERAMIC CAPACITOR	CKMYB391K50	R521, 522	CARBON FILM RESISTOR	RD1/4PM562J
C201	CERAMIC CAPACITOR	CKCYF473Z50	R523, 524	CARBON FILM RESISTOR	RD1/4PM104J
C203-222	CERAMIC CAPACITOR	CKMYB391K50	Δ R527, 528	CARBON FILM RESISTOR	RD1/4PMF680J
C223, 224	CERAMIC CAPACITOR	CKMYB821K50	Δ R535, 536	FUSIBLE RESISTOR	RFA1/4PS101J
C225, 226	CERAMIC CAPACITOR	CKMYB681K50	Δ R551-554	FUSIBLE RESISTOR	RFA1/4PS101J
C231, 232	ELECT. CAPACITOR	CEAS100M50	Δ R555-558	CARBON FILM RESISTOR	RD1/4PMF101J
C233, 234	CERAMIC CAPACITOR	CCCSL221J50	Δ R561, 562	RESISTOR (0.33, 5W)	ACN1087
C235, 236	ELECT. CAPACITOR	CEAS470M10	Δ R563-566	CARBON FILM RESISTOR	RD1/4PMF100J
C237, 238	MYLAR FILM CAPACITOR	CQMA242J50	Δ R600	METAL OXIDE RESISTOR	RS2LMF911J
C239, 240	MYLAR FILM CAPACITOR	CQMA822K50	R609	CARBON FILM RESISTOR	RD1/4PM123J
C241, 242	ELECT. CAPACITOR	CEAS2R2M50	R701	CARBON FILM RESISTOR	RD1/4PM302J
C243-246	AXIAL CERAMIC C.	CKPUYF103Z25			
C247, 248	CERAMIC CAPACITOR	CKCYB331K50			
C249	CERAMIC CAPACITOR	CKCYB471K50			
C251, 252	ELECT. CAPACITOR	CEAS2R2M50			
C253, 254	ELECT. CAPACITOR	CEAS4R7M50			

4. PCB PARTS LIST

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.
- When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).

560Ω → 56 × 10¹ → 561 RD1/8PM $\square$ $\square$ $\square$ J

47kΩ → 47 × 10³ → 473 RD1/4PS $\square$ $\square$ $\square$ J

0.5Ω → 0R5 RN2H $\square$ $\square$ $\square$ K

1Ω → 010 RS1P $\square$ $\square$ $\square$ K

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62kΩ → 562 × 10¹ → 5621 RN1/4PC $\square$ $\square$ $\square$ F

4.1 FOR SX-221R/HEWZ

Mark No.	Description	Parts No.	Mark No.	Description	Parts No.
LIST OF ASSEMBLIES					
●	COMPLEX ASSEMBLY	AWZ4083	D521-524	DIODE	HSS104-02
●	CONTROL ASSEMBLY	AWZ4084	D561	DIODE	HSS104-02
NSP	TRANS ASSEMBLY	AWZ4085	D601	ZENER DIODE	HSS12AL
NSP	SP SWITCH ASSEMBLY	AWZ4086	D700, 713	DIODE	S5566
NSP	VR ASSEMBLY	AWZ4087	D701	DIODE	D3SBA20 (A)
COMPLEX ASSEMBLY					
SEMICONDUCTORS					
IC101	AM/FM IC	LA1851N	D703	ZENER DIODE	HZS12B2L
IC102	PLL IC	LM7001	D704	ZENER DIODE	HZS12AL
IC201	OP-AMP IC	NJM4558DXP	D705	ZENER DIODE	HZS24-2L
IC202	E-SW IC	TC9164N	D706	ZENER DIODE	HZS6B2L
IC253	OP-AMP IC	NJM4558LD	D708-710	DIODE	HSS104-02
Q101	TRANSISTOR	2SC2668	D711	ZENER DIODE	HZS7B2L
Q102	TRANSISTOR	RN2203	D712	ZENER DIODE	HZS6B2L
Q103	TRANSISTOR	RN1203	D714	DIODE	HSS104-02
Q104	TRANSISTOR	RN2201	D751	DIODE	HSS104-02
Q107	TRANSISTOR	2SC2458	D752	DIODE	S5566
Q108	TRANSISTOR	2SC1740SLN	D753	ZENER DIODE	HZS6A2L
Q109	N-FET	2SK246	D754	DIODE	HSS104-02
Q110	TRANSISTOR	2SC1740S	RELAYS		
Q261, 262	TRANSISTOR	RN1203	RY561	RELAY	ASR-111
Q263	TRANSISTOR	RN2203	Δ RY751	RELAY	ASR1027
Q501-504	TRANSISTOR	2SA992	COILS & TRANSFORMER		
Q521, 522	TRANSISTOR	2SA1145	F101	CERAMIC FILTER	ATF-119
Q523, 524	TRANSISTOR	2SC2705	F102	CERAMIC FILTER	ATF-107
Q541, 542	TRANSISTOR	2SC2458	F103	CERAMIC FILTER	ATF-208
Q551, 552	TRANSISTOR	2SC2235	F104	FILTER	ATF108S
Q553, 554	TRANSISTOR	2SA965	L101	COIL	ATE1012
Q601, 602	TRANSISTOR	2SC2458	L104	AXIAL INDUCTOR	LAU470K
Q603	TRANSISTOR	2SA1048	L106	AXIAL INDUCTOR	LAU2R2M
Q604	TRANSISTOR	2SC2240	L561, 562	COIL	ATH1009
Q605	TRANSISTOR	RN1203	L701	FILTER	ATF-151
Q606, 751	TRANSISTOR	RN1201	L981-984	COIL	ATH-133
			Δ T751	POWER TRANSFORMER	ATT1015

Mark No.	Description	Parts No.	Mark No.	Description	Parts No.
CAPACITORS					
C105	CERAMIC CAPACITOR	CKCYX473M16	C501, 502	ELECT. CAPACITOR	CEAS2R2M50
C106	AXIAL CERAMIC C.	CKPUYF223Z25	C503, 504	CERAMIC CAPACITOR	CKCYB102K50
C107	AXIAL CERAMIC C.	CCPUCH150J50	C505, 506	CERAMIC CAPACITOR	CKCYB681K50
C108	AXIAL CERAMIC C.	CKPUYF223Z25	C520	ELECT. CAPACITOR	CEAS101M16
C109	ELECT. CAPACITOR	CEAS100M50	C521, 522	ELECT. CAPACITOR	CEAS220M16
C110	CERAMIC CAPACITOR	CKPUYY103N16	C523, 524	CERAMIC CAPACITOR	CCCSL120K500
C112 113	CERAMIC CAPACITOR	CKPUYY103N16	C525, 526	CERAMIC CAPACITOR	CCCSL050C500
C115	CERAMIC CAPACITOR	CKDYX473M25	C527, 528	CERAMIC CAPACITOR	CKMYB221K50
C116	CERAMIC CAPACITOR	CKPUYB102K50	C529	CERAMIC CAPACITOR	CKCYF103Z50
C117	ELECT. CAPACITOR	CEAS3R3M50	C551-554	CERAMIC CAPACITOR	CCCSL101K500
C118	CERAMIC CAPACITOR	CKPUYY103N16	C561, 562	AUDIO FILM CAPACITOR	CFTXA473J50
C119	ELECT. CAPACITOR	CEAS470M16	C601	ELECT. CAPACITOR	CEAS471M6
C120	CERAMIC CAPACITOR	CKPUYX562M16	C602	AXIAL CERAMIC C.	CKPUYF103Z25
C121	CERAMIC CAPACITOR	CKPUYY103N16	C603	ELECT. CAPACITOR	CEAS101M16
C122	AXIAL CAPACITOR	CCPUSL470J50	C605	ELECT. CAPACITOR	CEAS4R7M50
C123, 124	ELECT. CAPACITOR	CEAS2R2M50	C701, 702	ELECT. CAPACITOR (5600/DC50V)	ACH1145
C125	ELECT. CAPACITOR	CEAS4R7M50	C703	ELECT. CAPACITOR	CEAS101M16
C126	ELECT. CAPACITOR	CEAS100M50	C704	ELECT. CAPACITOR	CEHAQ100M50
C128, 129	CERAMIC CAPACITOR	CKPUYY103N16	C705	ELECT. CAPACITOR	CEAS101M25
C130, 131	ELECT. CAPACITOR	CEAS010M50	C706	ELECT. CAPACITOR	CEHAQ470M35
C132	ELECT. CAPACITOR	CEASR33M50	C707	CAPACITOR (0.047/5.5)	ACH1135
C133	CERAMIC CAPACITOR	CKCYB122K50	Δ C708	CKA (0.01/AC400V)	ACG1002
C134, 135	CERAMIC CAPACITOR	CKCYB272K50	C709	CKA (0.01/AC250V)	ACG1005
C136, 137	ELECT. CAPACITOR	CEAS4R7M50	C710	ELECT. CAPACITOR	CEHAQ470M10
C140, 141	CERAMIC CAPACITOR	CKCYB222K50	C751	CERAMIC CAPACITOR	CKCYX104M25
C142	ELECT. CAPACITOR	CEAS470M16	C752	ELECT. CAPACITOR	CEAS471M25
C145	CERAMIC CAPACITOR	CKPUYB221K50	C753	ELECT. CAPACITOR	CEAS470M10
C146, 147	AXIAL CERAMIC C.	CCPUCH150J50	Δ C754	CKA (0.01/AC400V)	ACG1002
C148	AUDIO FILM CAPACITOR	CFTXA224J50	C755	CERAMIC CAPACITOR	CKCYX104M25
C149	AUDIO FILM CAPACITOR	CFTXA103J50	C981, 982	CERAMIC CAPACITOR	CKMYB681K50
C150	ELECT. CAPACITOR	CEAS330M16	C983, 984	CERAMIC CAPACITOR	CKCYF103Z50
C151	AXIAL CERAMIC C.	CKPUYF223Z25	C985, 986	CERAMIC CAPACITOR	CKMYB681K50
C152	CERAMIC CAPACITOR	CKPUYY103N16	C987, 988	CERAMIC CAPACITOR	CKCYF103Z50
C197	AXIAL CAPACITOR	CCPUSL330J50	RESISTORS		
C198	CERAMIC CAPACITOR	CKMYB391K50	R521, 522	CARBON FILM RESISTOR	RD1/4PM562J
C201	CERAMIC CAPACITOR	CKCYF473Z50	R523, 524	CARBON FILM RESISTOR	RD1/4PM104J
C203-222	CERAMIC CAPACITOR	CKMYB391K50	Δ R527, 528	CARBON FILM RESISTOR	RD1/4PMF680J
C223, 224	CERAMIC CAPACITOR	CKMYB821K50	Δ R535, 536	FUSIBLE RESISTOR	RFA1/4PS101J
C225, 226	CERAMIC CAPACITOR	CKMYB681K50	Δ R551-554	FUSIBLE RESISTOR	RFA1/4PS101J
C231, 232	ELECT. CAPACITOR	CEAS100M50	Δ R555-558	CARBON FILM RESISTOR	RD1/4PMF101J
C233, 234	CERAMIC CAPACITOR	CCCSL221J50	Δ R561, 562	RESISTOR (0.33, 5W)	ACN1087
C235, 236	ELECT. CAPACITOR	CEAS470M10	Δ R563-566	CARBON FILM RESISTOR	RD1/4PMF100J
C237, 238	MYLAR FILM CAPACITOR	CQMA242J50	Δ R600	METAL OXIDE RESISTOR	RS2LMF911J
C239, 240	MYLAR FILM CAPACITOR	CQMA322K50	R609	CARBON FILM RESISTOR	RD1/4PM123J
C241, 242	ELECT. CAPACITOR	CEAS2R2M50	R701	CARBON FILM RESISTOR	RD1/4PM302J
C243-246	AXIAL CERAMIC C.	CKPUYF103Z25			
C247, 248	CERAMIC CAPACITOR	CKCYB331K50			
C249	CERAMIC CAPACITOR	CKCYB471K50			
C251, 252	ELECT. CAPACITOR	CEAS2R2M50			
C253, 254	ELECT. CAPACITOR	CEAS4R7M50			

Mark No.	Description	Parts No.	Mark No.	Description	Parts No.
△ R703	METAL OXIDE RESISTOR	RS1LMF392J	SWITCHES		
△ R705	METAL OXIDE RESISTOR	RS2LMF122J	S801-831	SWITCH	ASG1034
△ R715	METAL OXIDE RESISTOR	RS1LMF151J	CAPACITORS		
△ R721-723	METAL OXIDE RESISTOR	RS2LMF472J	C300	ELECT. CAPACITOR	CEJA100M50
△ R751	METAL OXIDE RESISTOR	RS2LMF221J	C301, 302	ELECT. CAPACITOR	CEAS4R7M50
R752	CARBON FILM RESISTOR	RD1/2PMF470J	C303, 304	CERAMIC CAPACITOR	CCCSL220J50
△ R981, 982	CARBON FILM RESISTOR	RD1/2PMF101J	C305, 306	CERAMIC CAPACITOR	CKCYB331K50
△ R985, 986	CARBON FILM RESISTOR	RD1/2PMF101J	C307	AXIAL CERAMIC C.	CKPUYF103Z25
△ R987, 988	CARBON FILM RESISTOR	RD1/4PMF100J	C309, 310	AUDIO FILM CAPACITOR	CFTXA153J50
	Other resistors	RD1/8PM□□□□	C311, 312	AUDIO FILM CAPACITOR	CFTXA823J50
OTHERS			C313, 314	MYLAR FILM CAPACITOR	CQMA332K50
	PIN JACK 6P (PHONO, CD, VCR/LD)	AKB1121	C315, 316	AUDIO FILM CAPACITOR	CFTXA183J50
	PIN JACK 8P (TAPE1/DAT, TAPE2 MONITOR)	AKB1127	C317	ELECT. CAPACITOR	CEJA2R2M50
	TERMINAL 2-P (ANTENNA)	AKE-060	C318	ELECT. CAPACITOR	CEAS2R2M50
	SPEAKER TERMINAL 8-P	AKE-111	C319, 320	CERAMIC CAPACITOR	CKCYB391K50
	JACK (CONTROL)	AKN-207	C321, 322	CERAMIC CAPACITOR	CCCSL220J50
X101	CRYSTAL RESONATOR (456kHz)	ASS1066	C323, 324	CERAMIC CAPACITOR	CKCYB331K50
X102	CRYSTAL RESONATOR (7.2MHz)	ASS1005	C326	ELECT. CAPACITOR	CEAS470M25
	CONNECTOR (PAL SOCKET)	AKX1001	C327, 328	ELECT. CAPACITOR	CEAS220M16
	AM RF TUNING BLOCK 4 SERIAL F.E. MODULE ASSEMBLY	AXX1025 AXQ1004	C333	ELECT. CAPACITOR	CEJA2R2M50
			C334	ELECT. CAPACITOR	CEAS2R2M50
			C335, 336	CERAMIC CAPACITOR	CKCYB391K50
			C801	ELECT. CAPACITOR	CEJA4R7M50
			C802	ELECT. CAPACITOR	CEJA0R1M50
			C803	ELECT. CAPACITOR	CEJA221M6
			C804	AXIAL CERAMIC C.	CKPUYF103Z25
			C805	AXIAL CERAMIC C.	CKPUYF473Z16
			C807, 808	CERAMIC CAPACITOR	CKCYX473M25
			C809	ELECT. CAPACITOR	CEJA100M50
			C810	AXIAL CERAMIC C.	CKPUYF103Z25
			C811, 812	AXIAL CERAMIC C.	CKPUYF473Z16
			C814	AXIAL CERAMIC C.	CKPUYF473Z16
NOTE :			RESISTORS		
4 Serial F.E. module assembly has no service parts.			VR302	VR (500k - × 1)	ACS1016
			VR303, 304	VR (100k)	ACS1053
CONTROL ASSEMBLY			R822	CARBON FILM RESISTOR	RD1/4PM221J
SEMICONDUCTORS				Other resistors	RD1/8PM□□□□
IC301	OP-AMP IC	NJM4558DXP	OTHERS		
IC302	OP-AMP IC	NJM4558LD		FL SPACER	AEB1174
IC801	RECEIVER CONTROL	PDG049-B		REMOTE RECEIVER UNIT	AXX1010
Q801	TRANSISTOR	RN1203	V801	FL TUBE	AAV1090
Q802	TRANSISTOR	RN2201	X801	CERAMIC OSCILLATOR (4.19MHz)	ASS1022
Q803	TRANSISTOR	RN1201			
Q804	TRANSISTOR	RN1203			
Q805	TRANSISTOR	2SC2458			
D802	DIODE	HSS104-02			
D821	LED (RED)	AEL1108			

Mark No.	Description	Parts No.
D711	ZENER DIODE	HZS7B2L
D712	ZENER DIODE	HZS6B2L
D713	DIODE	S5566
RELAY		
RY561	RELAY	ASR-111
COILS		
F101	CERAMIC FILTER	ATF-119
F132	CERAMIC FILTER	ATF-107
F133	CERAMIC FILTER	ATF-208
F134	FILTER	ATF1088
L101	COIL	ATE1012
L104	AXIAL INDUCTOR	LAU470K
L106	AXIAL INDUCTOR	LAU2R2M
L561, 562	COIL	ATH1009
L701	FILTER	ATF-151
L981-984	COIL	ATH-133
CAPACITORS		
C105	CERAMIC CAPACITOR	CKCYX473M16
C106	AXIAL CERAMIC C.	CKPUYF223Z25
C107	AXIAL CERAMIC C.	CCPUCH150J50
C108	AXIAL CERAMIC C.	CKPUYF223Z25
C109	ELECT. CAPACITOR	CEAS100M50
C110	CERAMIC CAPACITOR	CKPUYY103N16
C112, 113	CERAMIC CAPACITOR	CKPUYY103N16
C115	CERAMIC CAPACITOR	CKDYX473M25
C116	CERAMIC CAPACITOR	CKPUYB102K50
C117	ELECT. CAPACITOR	CEAS3R3M50
C118	CERAMIC CAPACITOR	CKPUYY103N16
C119	ELECT. CAPACITOR	CEAS470M16
C120	CERAMIC CAPACITOR	CKPUYX562M16
C121	CERAMIC CAPACITOR	CKPUYY103N16
C122	AXIAL CAPACITOR	CCPUSL470J50
C123, 124	ELECT. CAPACITOR	CEAS2R2M50
C125	ELECT. CAPACITOR	CEAS4R7M50
C126	ELECT. CAPACITOR	CEAS100M50
C128, 129	CERAMIC CAPACITOR	CKPUYY103N16
C130, 131	ELECT. CAPACITOR	CEAS010M50
C132	ELECT. CAPACITOR	CEASR33M50
C133	CERAMIC CAPACITOR	CKCYB122K50
C134, 135	CERAMIC CAPACITOR	CKCYB272K50
C136, 137	ELECT. CAPACITOR	CEAS4R7M50
C140, 141	CERAMIC CAPACITOR	CKCYB222K50
C142	ELECT. CAPACITOR	CEAS470M16
C145	CERAMIC CAPACITOR	CKPUYB221K50
C146, 147	AXIAL CERAMIC C.	CCPUCH150J50
C148	AUDIO FILM CAPACITOR	CFTXA224J50
C149	AUDIO FILM CAPACITOR	CFTXA103J50
C150	ELECT. CAPACITOR	CEAS330M16
C151	AXIAL CERAMIC C.	CKPUYF223Z25
C152	CERAMIC CAPACITOR	CKPUYY103N16

Mark No.	Description	Parts No.
C197	AXIAL CAPACITOR	CCPUSL330J50
C198	CERAMIC CAPACITOR	CKMYB391K50
C201	CERAMIC CAPACITOR	CKCYF473Z50
C203-222	CERAMIC CAPACITOR	CKMYB391K50
C223, 224	CERAMIC CAPACITOR	CKMYB821K50
C225, 226	CERAMIC CAPACITOR	CKMYB681K50
C231, 232	ELECT. CAPACITOR	CEAS100M50
C233, 234	CERAMIC CAPACITOR	CCCSL221J50
C235, 236	ELECT. CAPACITOR	CEAS470M10
C237, 238	MYLAR FILM CAPACITOR	CQMA242J50
C239, 240	MYLAR FILM CAPACITOR	CQMA822K50
C241, 242	ELECT. CAPACITOR	CEAS2R2M50
C243-246	AXIAL CERAMIC C.	CKPUYF103Z25
C247, 248	CERAMIC CAPACITOR	CKCYB331K50
C249	CERAMIC CAPACITOR	CKCYB471K50
C251, 252	ELECT. CAPACITOR	CEAS2R2M50
C253, 254	ELECT. CAPACITOR	CEAS4R7M50
C501, 502	ELECT. CAPACITOR	CEAS2R2M50
C503, 504	CERAMIC CAPACITOR	CKCYB102K50
C505, 506	CERAMIC CAPACITOR	CKCYB681K50
C520	ELECT. CAPACITOR	CEAS101M16
C521, 522	ELECT. CAPACITOR	CEAS220M16
C523, 524	CERAMIC CAPACITOR	CCCSL120K500
C525, 526	CERAMIC CAPACITOR	CCCSL050C500
C527, 528	CERAMIC CAPACITOR	CKMYB221K50
C529	CERAMIC CAPACITOR	CKCYF103Z50
C551-554	CERAMIC CAPACITOR	CCCSL101K500
C561, 562	AUDIO FILM CAPACITOR	CFTXA473J50
C601	ELECT. CAPACITOR	CEAS471M6
C602	AXIAL CERAMIC C.	CKPUYF103Z25
C603	ELECT. CAPACITOR	CEAS101M16
C605	ELECT. CAPACITOR	CEAS4R7M50
C701, 702	ELECT. CAPACITOR (5600/DC50V)	ACH1145
C703	ELECT. CAPACITOR	CEAS101M16
C704	ELECT. CAPACITOR	CEHAQ100M50
C705	ELECT. CAPACITOR	CEAS101M25
C706	ELECT. CAPACITOR	CEHAQ470M35
C707	CAPACITOR (0.047/5.5)	ACH1135
C708	CKA (0.01/AC400V)	ACG1002
C709	CKA (0.01/AC250V)	ACG1005
C710	ELECT. CAPACITOR	CEHAQ470M10
C981, 982	CERAMIC CAPACITOR	CKMYB681K50
C983, 984	CERAMIC CAPACITOR	CKCYF103Z50
C985, 986	CERAMIC CAPACITOR	CKMYB681K50
C987, 988	CERAMIC CAPACITOR	CKCYF103Z50
RESISTORS		
R521, 522	CARBON FILM RESISTOR	RD1/4PM562J
R523, 524	CARBON FILM RESISTOR	RD1/4PM104J

Mark No.	Description	Parts No.
TRANS ASSEMBLY		
CAPACITORS		
C401	CAPACITOR	CQMXA104J100
SP SWITCH ASSEMBLY		
SWITCH		
S570	PUSH SWITCH	SUJ7LYXS
CAPACITORS		
C531, 532	CERAMIC CAPACITOR	CKCYB392K50
C570	ELECT. CAPACITOR	CEAS010M50
RESISTORS		
△ R571, 572	METAL OXIDE RESISTOR	RS2LMF331J
△ R573, 574	METAL OXIDE RESISTOR	RS1PMF681J
OTHERS		
	JACK (HEADPHONE)	AKN1002
VR ASSEMBLY		
SEMICONDUCTOR		
IC361	MECHANISM DRIVER IC	TA8409S
COILS		
L361, 362	AXIAL INDUCTOR	LAU101K
CAPACITORS		
C361	ELECT. CAPACITOR	CEAS470M16
C362, 363	CERAMIC CAPACITOR	CKCYF473Z50
C365	CERAMIC CAPACITOR	CKCYF473Z50
RESISTORS		
VR361	VARIABLE RESISTOR	ACX1069
	Other resistors	RD1/8PM□□□J

4.2 FOR SX-121/HEWZ

Mark No.	Description	Parts No.
LIST OF ASSEMBLIES		
NSP	TRANS ASSEMBLY	AWZ4085
●	COMPLEX ASSEMBLY	AWZ4091
◎	CONTROL ASSEMBLY	AWZ4092
NSP	SP SWITCH ASSEMBLY	AWZ4094
TRANS ASSEMBLY		
CAPACITOR		
C401	CAPACITOR	CQMXA104J100
COMPLEX ASSEMBLY		
SEMICONDUCTORS		
IC101	AM/FM IC	LA1851N
IC102	PLL IC	LM7001
IC201	OP-AMP IC	NJM4558DXP
IC202	E-SW IC	TC9164N
IC253	OP-AMP IC	NJM4558LD
Q101	TRANSISTOR	2SC2668
Q102	TRANSISTOR	RN2203
Q103	TRANSISTOR	RN1203
Q104	TRANSISTOR	RN2201
Q107	TRANSISTOR	2SC2458
Q108	TRANSISTOR	2SC1740SLN
Q109	N-FET	2SK246
Q110	TRANSISTOR	2SC1740S
Q261, 262	TRANSISTOR	RN1203
Q263	TRANSISTOR	RN2203
Q501-504	TRANSISTOR	2SA992
Q521, 522	TRANSISTOR	2SA1145
Q523, 524	TRANSISTOR	2SC2705
Q541, 542	TRANSISTOR	2SC2458
Q551, 552	TRANSISTOR	2SC2235
Q553, 554	TRANSISTOR	2SA965
Q601, 602	TRANSISTOR	2SC2458
Q603	TRANSISTOR	2SA1048
Q604	TRANSISTOR	2SC2240
Q605	TRANSISTOR	RN1203
Q606	TRANSISTOR	RN1201
D521-524	DIODE	HSS104-02
D561	DIODE	HSS104-02
D601	ZENER DIODE	HZS12AL
D700	DIODE	S5566
D701	DIODE	D3SBA20 (A)
D703	ZENER DIODE	HZS12B2L
D704	ZENER DIODE	HZS12AL
D705	ZENER DIODE	HZS24-2L
D706	ZENER DIODE	HZS6B2L
D708-710	DIODE	HSS104-02

Mark No.	Description	Parts No.
SP SWITCH ASSEMBLY		
SWITCHES		
△ S1 S570	PUSH SWITCH PUSH SWITCH	ASG1035 SUJ7LYXS
CAPACITORS		
C531, 532	CERAMIC CAPACITOR	CKCYB392K50
C570	ELECT. CAPACITOR	CEAS010M50
△ C571	CKA (0.01/AC400V)	ACG1002
RESISTORS		
△ R571, 572	METAL OXIDE RESISTOR	RS2LMF331J
△ R573, 574	METAL OXIDE RESISTOR	RS1PMF681J
OTHERS		
	JACK (HEADPHONE)	AKN1002

Mark No.	Description	Parts No.
△ R527, 528	CARBON FILM RESISTOR	RD1/4PMF680J
△ R535, 536	FUSIBLE RESISTOR	RFA1/4PS101J
△ R551-554	FUSIBLE RESISTOR	RFA1/4PS101J
△ R555-558	CARBON FILM RESISTOR	RD1/4PMF101J
△ R561, 562	RESISTOR (0.33, 5W)	ACN1087
△ R563-566	CARBON FILM RESISTOR	RD1/4PMF100J
△ R600	METAL OXIDE RESISTOR	RS2LMF911J
R609	CARBON FILM RESISTOR	RD1/4PM123J
R701	CARBON FILM RESISTOR	RD1/4PM302J
△ R703	METAL OXIDE RESISTOR	RS1LMF392J
△ R705	METAL OXIDE RESISTOR	RS2LMF122J
△ R715	METAL OXIDE RESISTOR	RS1LMF151J
△ R721-723	METAL OXIDE RESISTOR	RS2LMF472J
△ R981, 982	CARBON FILM RESISTOR	RD1/2PMF101J
△ R985, 986	CARBON FILM RESISTOR	RD1/2PMF101J
△ R987, 988	CARBON FILM RESISTOR	RD1/4PMF100J
	Other resistors	RD1/8PM□□□J
OTHERS		
	PIN JACK 6P (PHONO, CD, VCR/LD)	AKB1121
	PIN JACK 8P (TAPE1/DAT, TAPE2 MONITOR)	AKB1127
	TERMINAL 2-P (ANTENNA)	AKE-060
	SPEAKER TERMINAL 8-P	AKE-111
	CONNECTOR (PAL SOCKET)	AKX1001
X101	CRYSTAL RESONATOR (456kHz)	ASS1066
X102	CRYSTAL RESONATOR (7.2MHz)	ASS1005
	AM RF TUNING BLOCK	AXX1025
	4 SERIAL F.E. MODULE ASSEMBLY	AXQ1004

NOTE :

4 Serial F.E. module assembly has no service parts.

Mark No.	Description	Parts No.
CONTROL ASSEMBLY		
SEMICONDUCTORS		
IC301	OP-AMP IC	NJM4558DXP
IC302	OP-AMP IC	NJM4558LD
IC801	RECEIVER CONTROL	PDG049-B
Q801	TRANSISTOR	RN1203
SWITCHES		
S801-830	SWITCH	ASG1034
CAPACITORS		
C300	ELECT. CAPACITOR	CEJA100M50
C301, 302	ELECT. CAPACITOR	CEAS4R7M50
C303, 304	CERAMIC CAPACITOR	CCCSL220J50
C305, 306	CERAMIC CAPACITOR	CKCYB331K50
C307	AXIAL CERAMIC C.	CKPUYF103Z25
C309, 310	AUDIO FILM CAPACITOR	CFTXA153J50
C311, 312	AUDIO FILM CAPACITOR	CFTXA823J50
C313, 314	MYLAR FILM CAPACITOR	CQMA332K50
C315, 316	AUDIO FILM CAPACITOR	CFTXA183J50
C317	ELECT. CAPACITOR	CEJA2R2M50
C318	ELECT. CAPACITOR	CEAS2R2M50
C319, 320	CERAMIC CAPACITOR	CKCYB391K50
C321, 322	CERAMIC CAPACITOR	CCCSL220J50
C323, 324	CERAMIC CAPACITOR	CKCYB331K50
C326	ELECT. CAPACITOR	CEAS470M25
C327, 328	ELECT. CAPACITOR	CEAS220M16
C333	ELECT. CAPACITOR	CEJA2R2M50
C334	ELECT. CAPACITOR	CEAS2R2M50
C335, 336	CERAMIC CAPACITOR	CKCYB391K50
C801	ELECT. CAPACITOR	CEJA4R7M50
C802	ELECT. CAPACITOR	CEJA0R1M50
C803	ELECT. CAPACITOR	CEJA221M6
C804	AXIAL CERAMIC C.	CKPUYF103Z25
C805	AXIAL CERAMIC C.	CKPUYF473Z16
C807, 808	CERAMIC CAPACITOR	CKCYX473M25
C809	ELECT. CAPACITOR	CEJA100M50
C810	AXIAL CERAMIC C.	CKPUYF103Z25
C811, 814	AXIAL CERAMIC C.	CKPUYF473Z16
RESISTORS		
VR302	VR (500k - × 1)	ACS1016
VR303, 304	VR (100k)	ACS1053
VR361	VR (100k - A5 × 2)	ACT1071
	Other resistors	RD1/SPM□□□J
OTHERS		
	FL SPACER	AEB1174
V801	FL TUBE	AAV1090
X801	CERAMIC OSCILLATOR (4.19MHz)	ASS1022

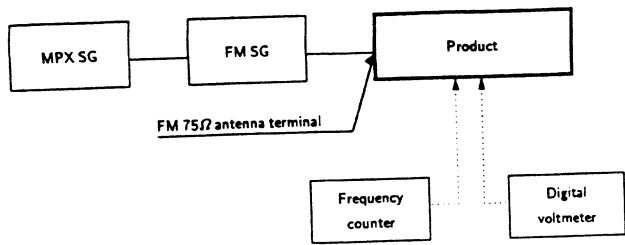


Fig. 5-2 FM Adjustment Connection Diagram

5. ADJUSTMENTS

• For connections and points to be adjusted, refer to Fig. 5-1, Fig. 5-2 and Fig. 5-3.

5.1 AM TUNER ADJUSTMENT

• Set the BAND selector "AM".

Step No.	Adjustment Title	AM SG (400Hz 30% Mod.)		Reception Frequency Display	Adjustment Location	Specifications
		Frequency (kHz)	Level (dBμV)			
1	TUNED indicator sensitivity check	999	—	999kHz	R117	Check that the indicator lights up when the level is less than 64dBμV/m. *1

*1. Remove R117 if the indicator does not light up.

5.2 FM TUNER ADJUSTMENT

- Set the BAND selector to "FM".
- Perform VCO adjustment two minutes or more after turning the power ON.

Note :
Stereo modulation : Main 1kHz L+R ±68.25kHz dev.
Pilot 19kHz ±6.75kHz dev.

Step No.	Adjustment Title	FM SG (1kHz ±75kHz dev.)		Reception Frequency Display	Adjustment Location	Specifications
		Frequency (MHz)	Level (dBμV)			
1	Detector coil T-meter adjustment	98.0	60	98.0MHz	L101	Adjust so that the DC voltage between both sides of R111 is 0±50mV.

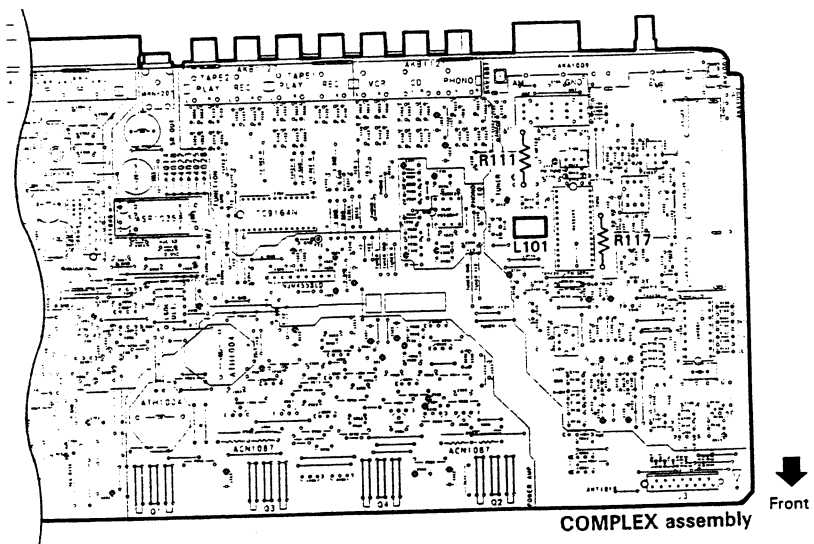


Fig. 5-3 Adjustment Points

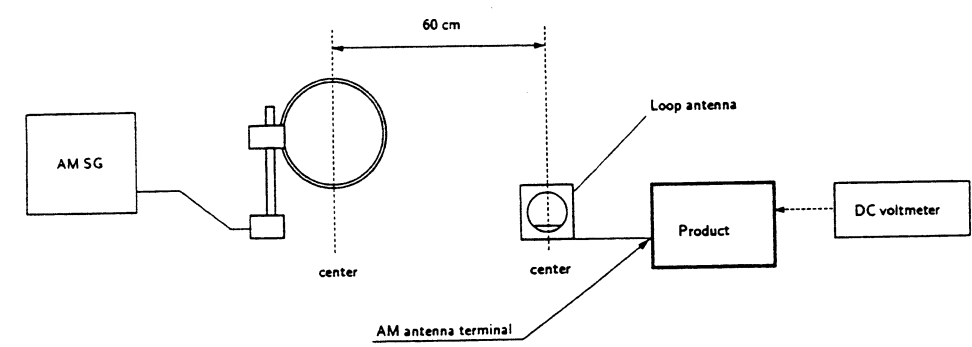


Fig. 5-1 AM Adjustment Connection Diagram

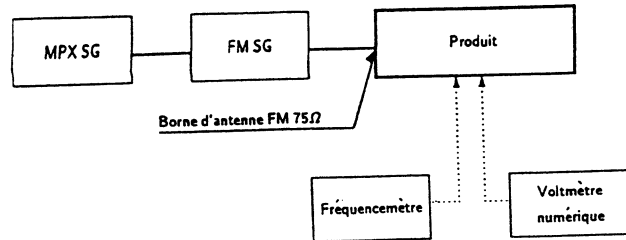


Fig. 5-2 Schéma de connexion de réglage FM

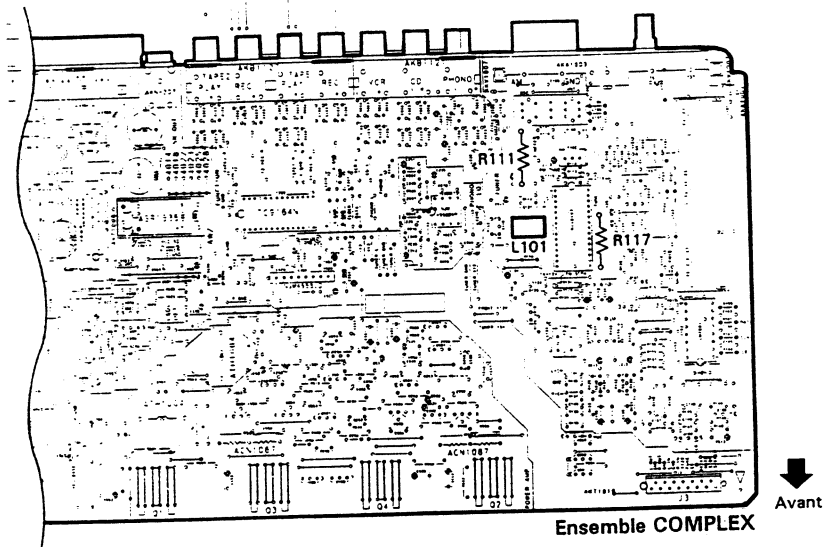


Fig. 5-3 Enplacements de réglage

5. REGLAGES

● Les raccordements et les points de réglages sont représentés à la Fig. 5-1, Fig. 5-2 et Fig. 5-3.

5.1 REGLAGE DU SYNTONISEUR AM

● Placer le sélecteur BAND sur la position "AM".

Etape No.	Items de réglage	AM SG (400Hz 30% Mod.)		Affichage de fréquence de réception	Lia de réglage	Caractéristiques
		Fréquence (kHz)	Niveau (dBμV)			
1	Contrôle de sensibilité de l'indicateur TUNED.	999	—	999kHz	R117	Vérifier que l'indicateur s'allume lorsque le niveau est inférieur à 64dBμV/m. *1

*1 Déposer R117 si l'indicateur ne s'allume pas.

5.2 REGLAGE DU SYNTONISEUR FM

● Placer le sélecteur BAND sur la position "FM".

● Régler le VCO après deux minutes (ou plus) de mise sous tension.

Note :

Modulation stéréo : Principal 1kHz L + R $\pm$ 68,25kHz dev.
Pilote 19kHz $\pm$ 6,75kHz dev.

Etape No.	Items de réglage	FM SG (1kHz $\pm$ 75kHz dev.)		Affichage de fréquence de réception	Lia de réglage	Caractéristiques
		Fréquence (MHz)	Niveau (dBμV)			
1	Régler de la bobine de détection	98,0	60	98,0MHz	L101	Régler de manière que la tension CC appliquée entre les deux côtés de R111 soit 0 $\pm$ 50mV.

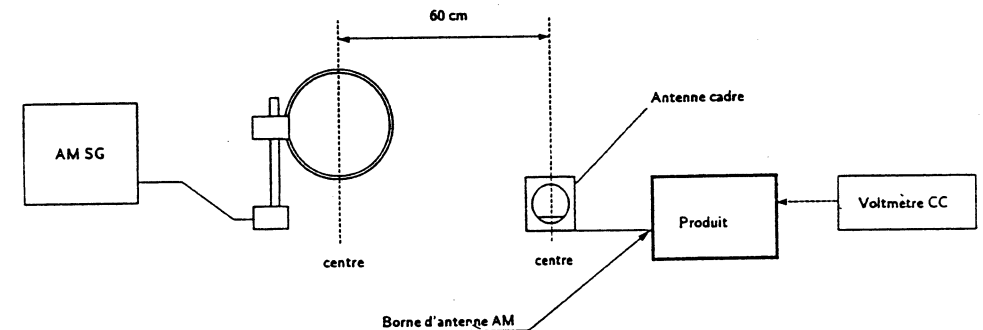


Fig. 5-1 Schéma de connexion de réglage AM

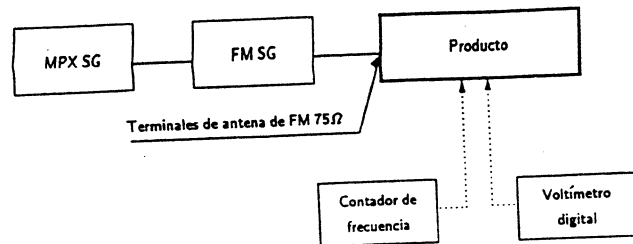


Fig. 5-2 Diagrama de conexiones para el ajuste de FM

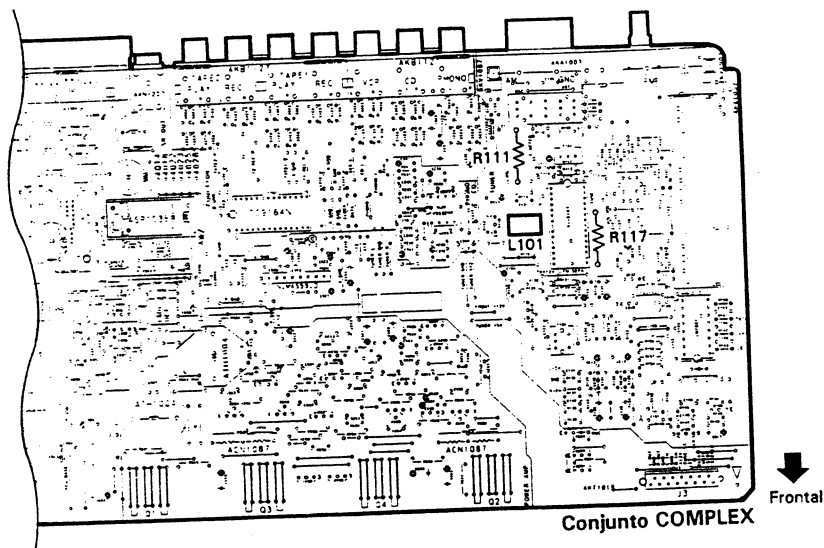


Fig. 5-3 Puntos de ajuste

5. AJUSTES

- Para las conexiones y puntos de ajuste, refiérase a la Fig. 5-1, Fig. 5-2 y Fig. 5-3.

5.1 AJUSTE DE LA SECCION DEL SINTONIZADOR DE AM

- Ajuste el selector BAND a la posición "AM".

N° de paso	Items de ajuste	AM SG (400Hz 30% Mod.)		Frecuenci metro de recepción	Lugar de Ajuste	Especificaciones
		Frecuencia (kHz)	Nivel (dBμV/m)			
1	Comprobación de la sensibilidad del indicador TUNED.	999	—	999kHz	R117	Compruebe que se encienda el indicador cuando el nivel es de menos de 64dBμV/m. *1

*1 Extraiga el R117 si no se enciende el indicador.

5.2 AJUSTE DE LA SECCION DEL SINTONIZADOR DE FM

- Ajuste el selector BAND a la posición "FM".
- Realice el ajuste VCO dos minutos o más después de conectar la alimentación.

Nota :

Modulación estéreo : Principal 1kHz L+R ±68,25kHz dev.
Pilot 19kHz ±6,75kHz dev.

N° de paso	Items de ajuste	FM SG (1kHz±75kHz dev.)		Frecuenci metro de recepción	Lugar de Ajuste	Especificaciones
		Frecuencia (MHz)	Nivel (dBμV)			
1	Ajuste del medidor T de la bobina detectora	98,0	60	98,0MHz	L101	Ajuste de modo que la tensión de CC entre ambos lados de R111 sea de 0±50mV.

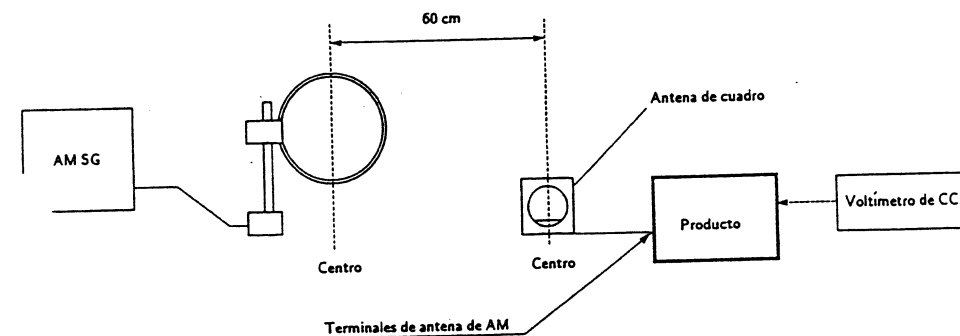


Fig. 5-1 Diagrama de conexiones para el ajuste de AM

COMPLEX ASSEMBLY

COMPLEX assembly (AWZ4088) and COMPLEX assembly (AWZ4083) have the same construction except for the following :

Mark	Symbol & Description	Part No.		Remarks
		AWZ4083	AWZ4088	
	Q107	2SC2458		
	F104	ATF1088		
	L561, L562	ATH1009	ATH1004	
	L701	ATF - 151		
	L981 - L984	ATH - 133		
	C123	CEAS2R2M50	CEAS010M50	
	C124	CEAS2R2M50		
	C133	CKCYB122K50		
	C134, C135	CKCYB272K50	CKCYB822K50	
	C140, C141	CKCYB222K50		
	C197	CCPUSL330J50		
	C198, C203 - C222	CKMYB391K50		
	C223, C224	CKMYB821K50	CKMYB471K50	
	C225, C226, C981, C982, C985	CKMYB681K50		
	C986	CKMYB681K50		
	C527, C528	CKMYB221K50		
	C561, C562	CFTXA473J50	CFTXA104J50	
	C563, C564		CFTXA104J50	
	C983, C984, C987, C988	CKCYF103Z50		
	R114	RD1/8PM563J	RD1/8PM433J	
	R115	RD1/8PM822J	RD1/8PM472J	
	R116		RD1/8PM153J	
	R122	RD1/8PM224J		
	R123	RD1/8PM222J		
	R124	RD1/8PM392J		
	R125	RD1/8PM152J		
	R126	RD1/8PM473J		
	R127, R128	RD1/8PM153J	RD1/8PM103J	
	R135, R136	RD1/8PM102J		
	R180	RD1/8PM123J		
Δ	R981, R982, R985, R986	RD1/2PMF101J		
Δ	R987, R988	RD1/4PMF100J		
	4 Serial F.E. module assembly	AXQ1004		*1
	2 Serial F.E. module assembly		AXQ1002	*1

*1 All of these assemblies has no service parts.

6. FOR SX - 221R/HE, HB, YPW, SX - 121/HE AND HB TYPES

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by "●" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

6.1 FOR SX - 221R/HE, HB AND YPW

Contrast of Miscellaneous Parts

SX - 221R/HE, HB, YPW and SX - 221R/HEWZ have the same construction except for the following :

Mark	Symbol & Description	Part No.				Remarks
		SX - 221R/ HEWZ	SX - 221R/ HE	SX - 221R/ HB	SX - 221R/ YPW	
●	COMPLEX assembly	AWZ4083	AWZ4088	AWZ4088	AWZ4088	
NSP	SP SWITCH assembly	AWZ4086	AWZ4089	AWZ4089	AWZ4089	
NSP	VR assembly	AWZ4087	AWZ4090	AWZ4090	AWZ4090	
Δ	AC Power cord	ADG1021	ADG1021	ADG1085	ADG-064	
	FL Filter	AAK2309	AAK2309	AAK2309	AAK2329	
	Operating instructions (German)	ARC1349				
	Operating instructions (English, French, German, Italian, Dutch, Swedish, Spanish, Portuguese)		ARE1239			
	Operating instructions (English)			ARB1369	ARB1369	

SP SWITCH ASSEMBLY

SP SWITCH assembly (AWZ4089) and SP SWITCH assembly (AWZ4086) have the same construction except for the following :

Mark	Symbol & Description	Part No.		Remarks
		AWZ4086	AWZ4089	
Δ	C531, C532 R573, R574	CKCYB392K50 RS1PMF681J		

VR ASSEMBLY

VR assembly (AWZ4090) and VR assembly (AWZ4087) have the same construction except for the following :

Mark	Symbol & Description	Part No.		Remarks
		AWZ4087	AWZ4090	
	C365	CKCYF473Z50		

Mark	Symbol & Description	Part No.		Remarks
		AWZ4091	AWZ4095	
	C223, C224 C225, C226, C981, C982, C985, C986 C527, C528 C561, C562	CKMYB821K50 CKMYB681K50 CKMYB221K50 CFTXA473J50	CKMYB471K50 CFTXA104J50	
	C563, C564 C983, C984, C987, C988	 CKCYF103Z50	CFTXA104J50	
	R114 R115 R116 R122 R123	RD1/8PM563J RD1/8PM822J RD1/8PM224J RD1/8PM222J	RD1/8PM433J RD1/8PM472J RD1/8PM153J	
	R124 R125 R126 R127, R128 R135, R136	RD1/8PM392J RD1/8PM152J RD1/8PM473J RD1/8PM153J RD1/8PM102J	 RD1/8PM103J	
Δ	R180	RD1/8PM123J		
Δ	R981, R982, R985, R986 R987, R988	RD1/2PMF101J RD1/4PMF100J		
	4 Serial F.E. module assembly 2 Serial F.E. module assembly	AXQ1004	 AXQ1002	*1 *1

*1 All of these assemblies has no service parts.

6.2 FOR SX - 121/HE AND HB

Contrast of Miscellaneous Parts

SX - 121/HE, HB and SX - 121/HEWZ have the same construction except for the following :

Mark	Symbol & Description	Part No.			Remarks
		SX - 121/HEWZ	SX - 121/HE	SX - 121/HB	
⊙ NSP	COMPLEX assembly SP SWITCH assembly	AWZ4091 AWZ4094	AWZ4095 AWZ4096	AWZ4095 AWZ4096	
Δ	AC Power cord	ADG1021	ADG1021	ADG1085	
	Operating instructions (German)	ARC1349			
	Operating instructions (English, French, German, Italian, Dutch, Swedish, Spanish, Portuguese)		ARE1239		
	Operating instructions (English)			ARB1369	

SP SWITCH ASSEMBLY

SP SWITCH assembly (AWZ4096) and SP SWITCH assembly (AWZ4094) have the same construction except for the following :

Mark	Symbol & Description	Part No.		Remarks
		AWZ4094	AWZ4096	
Δ	C531, C532 R573, R574	CKCYB392K50 RS1PMF681J		

COMPLEX ASSEMBLY

COMPLEX assembly (AWZ4095) and COMPLEX assembly (AWZ4091) have the same construction except for the following :

Mark	Symbol & Description	Part No.		Remarks
		AWZ4091	AWZ4095	
	Q107	2SC2458		
	F104	ATF1088		
	L561, L562	ATH1009	ATH1004	
	L701	ATF - 151		
	L981 - L984	ATH - 133		
	C123	CEAS2R2M50	CEAS010M50	
	C124	CEAS2R2M50		
	C133	CKCYB122K50		
	C134, C135	CKCYB272K50	CKCYB822K50	
	C140, C141	CKCYB222K50		
	C197	CCPUSL330J50		
	C198, C203 - C222	CKMYB391K50		

9 CUSTOM MEMORY buttons

Stations can be assigned to STATION CALL buttons according to the genre of material broadcast (POP, ROCK, OTHER). You can recall a particular genre, and scan all the stations of that genre with Memory Scan until you reach the desired one.

10 RETURN button

This is helpful during troubleshooting or when no sound is output. Pressing this button returns the receiver to the following settings, the sound level being controlled by VOLUME control.

- TAPE 2 MONITOR OFF
- FUNCTION TUNER
- BAND FM*

* The last FM broadcast you were listening to will be received. When reception is not possible, search begins for a frequency that can be received.

NOTE:

If no sound is output after the RETURN button is pressed make sure that SPEAKERS switches are turned ON.

11 BALANCE control

Should normally be left in the center position. Adjust balance if the sound is louder from one of the speakers. If the right side is louder, turn toward the L position and if the left side is louder, turn toward the R position.

12 VOLUME control

Use to adjust volume level.

13 TUNING buttons (+ -)

+: The FM or AM band is scanned in the direction of increasing frequency.
-: The opposite operation to that of the + button takes place.

14 BAND buttons

These buttons are used to select either FM or AM reception.
FM: Push this button for FM reception.
AM: Push this button for AM reception.

15 TREBLE tone control

Use to adjust high-frequency tone. The center position is the flat (normal) position. When turned to the right, high-frequency tones are emphasized; when turned to the left, high-frequency tones are de-emphasized.

16 BASS tone control

Use to adjust the low-frequency tone. The center position is the flat (normal) position. When turned to the right, low-frequency tones are emphasized; when turned to the left, low-frequency tones are de-emphasized.


17 STATION CALL buttons

These buttons are used to preset and recall desired broadcasting stations.

18 OPERATION DISPLAY panel

(a) Indicates the function or frequency by the function switches.

- (b) TUNED indicator
- (c) FM STEREO indicator
- (d) FM MONO indicator
- (e) TUNING AUTO/MANUAL indicator
- (f) DIRECT ACCESS tuning indicator
- (g) CUSTOM MEMORY indicator
- (h) Indicates channel, STATION CALL number or sleep time.
- (i) SEARCH indicator
- (j) SCAN indicator
- (k) MEMORY indicator
- (l) TAPE 2 monitor indicator.

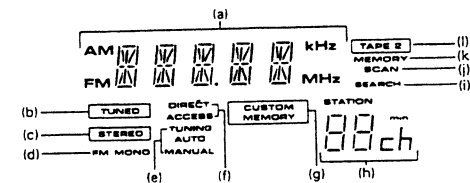

19 HITS (Hyper Intelligent Tuning System) button

Press this button to automatically search for and tune in broadcasts that can be received.

20 FM TUNING AUTO/MANU button

Works during FM reception.
Use this button to select either the AUTO mode or the MANUAL mode. When the "AUTO" indicator is lit, the receiver is in the AUTO mode.

21 Remote sensor window (SX-221R only)

22 FM MODE AUTO/MONO selector button

Use to select the auto stereo mode or monaural mode when listening to FM broadcasts. The monaural mode has been selected when the FM MONO indicator is lit.

Auto stereo mode:

Normally leave in this mode for reception. When a stereo FM broadcast is received, it will be automatically reproduced in stereo sound.

Monaural mode:


When receiving distant stations or stations with weak broadcast signals, the input signal may be weak, thus resulting in increased noise during FM stereo broadcasts. In this event, setting the receiver to the monaural mode will reduce the noise, however, FM stereo broadcasts will be then reproduced in monaural sound.

NOTE:

This button has no effect on reception of AM broadcasts.

7. PANEL FACILITIES

* Illustration shows model SX-221R.

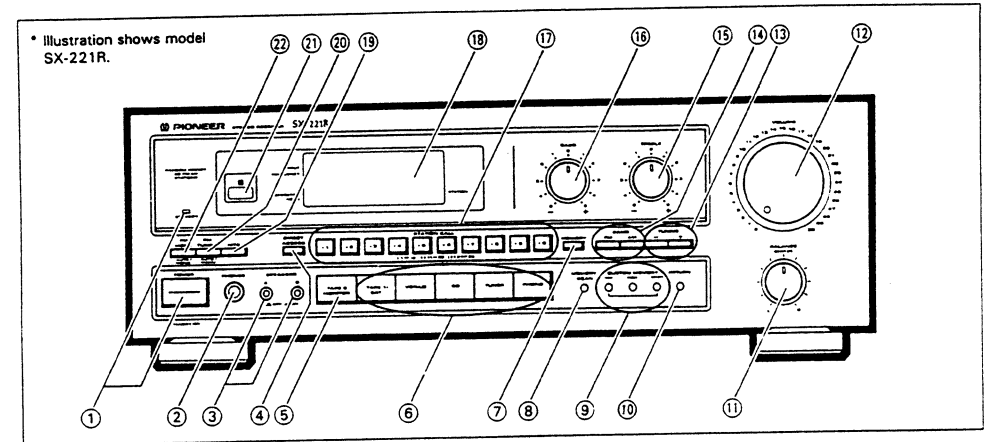

[SX-221R]

1 POWER (STANDBY/ON) switch/STANDBY indicator

This is the switch for electric power.
ON: When set to the ON position, power is supplied and the unit becomes operational.

STANDBY: When set to the STANDBY position, the main power flow is cut and the unit is no longer fully operational. A minute flow of power feeds the unit to maintain operation readiness.
When the STANDBY indicator lights, the unit is in STANDBY and goes out during ON.

* When not using the unit for a long period, disconnect the power cord.

[SX-121]

1 POWER switch

When this switch is pressed, power is supplied to the unit. Press the switch again to turn power OFF.

[Timer ON/OFF possible]

When the unit is switched ON, ON/OFF control can be performed by means of the optional timer.

NOTE (SX-121, SX-221R):

When the power is initially turned ON, muting will be applied to prevent sound from being output for about 5 seconds.

2 PHONES jack

Connect the plug on your headphones to this jack. To listen to a program only through the headphones, set both SPEAKERS A and B buttons to the OFF position.

3 SPEAKERS buttons (OFF, ON)

These are used to select the speaker through which you wish to listen.
A: When the speakers connected to A terminals are in use.
B: When the speakers connected to B terminals are in use.
* Turn both A and B speakers to the OFF position when only headphones are in use.

NOTE:

No sound will be heard through the speakers when both A and B buttons are depressed if only one set of speakers has been connected to either A or B SPEAKERS terminals.

4 DIRECT ACCESS tuning button

When this button is pressed, the STATION CALL buttons function as 10-key number buttons for direct input of the desired reception frequency. Press again to cancel this mode.
If the input station falls outside of the receiver's tuning range, the display section will display a message: "UPPER" if the frequency is too high and "LOWER" if it is too low.

5 TAPE 2 MONITOR button

Switch on when using a cassette deck connected to the TAPE 2 MONITOR jacks.

6 Input selector buttons

Use to select playback source.
[TAPE 1/DAT] — Press when listening to tape playback with the cassette deck 1 or digital audio tape deck.
[VCR/LD] — Press when listening to programs from a component connected to the VCR/LD terminals.
[CD] — Press when listening to compact disc playback on a CD player.
[TUNER] — Press when listening to AM or FM broadcasts.
[PHONO] — Press when listening to record playback on a turntable.


7 MEMORY button

When the unit is in the frequency display mode, pressing this button will result in the memorization of the current broadcast band, reception frequency, and FM AUTO/MONO mode.
This button is also used to input custom memory names.

8 MEMORY SCAN button

This button is used for station memory scan and custom memory scan.

* Illustration shows model SX-221R.

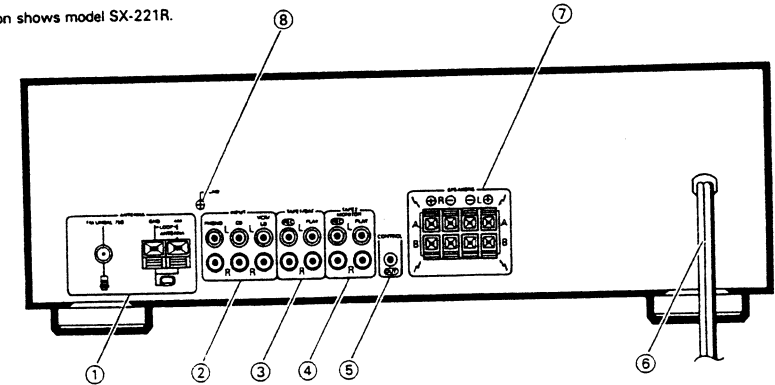

① FM/AM ANTENNA terminals

Use these antenna terminals for receiving FM and AM broadcasts.

② INPUT jacks

PHONO Connect to the output cables from a turntable.

CD Connect to the output jacks of a compact disc player.

VCR/LD Connect to the output jacks of a video cassette recorder or Laser Disc player.

③ TAPE 1/DAT jacks

Connect these jacks to the cassette deck or digital audio tape deck.

④ TAPE 2 MONITOR jacks

Connect these jacks to the cassette deck.

⑤ CONTROL OUT jack (SX-221R only)

Connect this jack to other Pioneer components bearing the  mark when using the remote control of this unit to control the other components.

⑥ Power cord

⑦ SPEAKERS terminals

A: Connect to a first set of speakers.

B: Connect to a second set of speakers.

NOTE:

No sound will be heard through the speakers when both A and B buttons are depressed if only one set of speakers has been connected to either A or B SPEAKERS terminals.

⑧ GND terminal

Connect to the ground lead of a turntable.

Use a screwdriver to connect with the ground terminal.

