



- NOTES
- S<sub>1</sub>, S<sub>15</sub> FWD-REV SELECTOR SW (FWD POSITION)
  - S<sub>2</sub>, S<sub>5</sub> REC-RB. SELECTOR SW (RB. POSITION)
  - EQUALIZER SELECTOR SW (7½IPS POSITION)
  - S<sub>4</sub> REC. MODE SW (ST. POSITION)
  - S<sub>6</sub> MUTING SW (PLAY POSITION)
  - S<sub>7</sub> CONTACT POINT OFF SW (PLAY/STOP POSITION)
  - S<sub>8</sub> PRE SET SW
  - S<sub>9</sub> PLUNGER SW
  - S<sub>10</sub> MOTOR SW
  - S<sub>11</sub> SHUT OFF SW
  - S<sub>12</sub> POWER SW
  - S<sub>14</sub> AUTO REVERSE SW
  - S<sub>16</sub> FWD-REV SELECTOR SW (FWD POSITION)
  - S<sub>18</sub> OSC SW

- VR<sub>1</sub> FWD-EQUALIZER ADJ
- VR<sub>2</sub> REV-EQUALIZER ADJ
- VR<sub>3</sub> RB. LEVEL ADJ
- VR<sub>4</sub> REC. LEVEL ADJ
- VR<sub>5</sub> VU LEVEL ADJ
- VR<sub>6</sub> FWD REC LEVEL ADJ
- VR<sub>7</sub> REV REC LEVEL ADJ
- VR<sub>8</sub> FWD L (ch) BIAS ADJ
- VR<sub>9</sub> REV L (ch) BIAS ADJ
- VR<sub>10</sub> FWD R (ch) BIAS ADJ
- VR<sub>11</sub> REV R (ch) BIAS ADJ
- VR<sub>12</sub> EH DUMMY ADJ