

VSX-AX4ASi / VSX-AX2AS VSX-AX4AVi / VSX-AX2AV

Resetting the system

Use this procedure to reset all the receiver's settings to the factory default. Use the front panel controls to do this.

1 Switch the receiver into standby.

2 While holding down the front panel AV PARAMETER button, press and hold STANDBY/ON for about three seconds.

The display shows
RESET?

3 Press the front panel ENTER button.

The display shows **RESET OK?**

4 Press SETUP to confirm.

OK appears in the display to indicate that the receiver has been reset to the factory default settings.

- Note that all settings will be saved, even if the receiver is unplugged.

VSA-AX10Ai

Resetting the system

Use this feature to reset the system to its factory default Settings

1 Switch the amplifier into standby.

2 While holding down the front panel DIGITAL NR button, press and hold STANDBY/ON for about three seconds.
The display shows **RESET?**

3 Press the front panel OPTION + button. The display shows **OK?**

4 Within 5 seconds, press OPTION –. The amplifier should now be reset.

Note

- This doesn't affect the presets that you have programmed into the remote control (see *Using the remote control with other components* on page 61). See *Resetting the remote control* on page 10 to do this.



VSX-LX50 / VSX-1017AV / VSX-917V / VSX-817 / VSX-417 /
VSX-2016AV / VSX-1016V / VSX-916 / VSX-516 / VSX-416 /
VSX-1015 / VSX-915 / VSX-815 / VSX-515 / VSX-415
VSX-2014i / VSX-1014

Resetting the system

Use this procedure to reset all the receiver's settings to the factory default. Use the front panel controls to do this.

1 Switch the receiver into standby.

2 While holding down the front panel TONE button, press and hold STANDBY/ON for about three seconds.

The display shows

RESET?

3 Press the front panel ENTER button.

The display shows **RESET OK?**

4 Press SYSTEM SETUP to confirm.

OK appears in the display to indicate that the receiver has been reset to the factory default settings.

- Note that all settings will be saved, even if the receiver is unplugged.

VSX-D814 / VSX-D714 / VSX-D514

Resetting the system

Use this procedure to reset all the receiver's settings to the factory default. Use the front panel controls to do this.

1 Switch the receiver ON.

2 While holding down the front panel TONE button, press and hold STANDBY/ON for about three seconds.

The display shows
RESET?

3 Press the front panel TONE button.

The display shows **OK?**

4 Press TONE once more to confirm.

OK appears in the display to indicate that the receiver has been reset to the factory default settings.

VSA-AX10i / VSA-AX10 / VSX-AX5Ai / VSX-AX5i

Resetting the system

Use this feature to reset the system to its factory default Settings

1 Switch the amplifier into standby.

2 While holding down the front panel DIGITAL NR button, press and hold STANDBY/ON for about three seconds.

The display shows **RESET?**.

3 Press the front panel TONE – button. The display shows **OK?**.

4 Within 5 seconds, press TONE +. The amplifier should now be reset.

Notes from VSX-AX5Ai

- Make sure the multi-room feature is switched off when doing this.
- If the receiver is unplugged from the AC outlet for a month or more, it resets to the default settings.

VSX-C502

Resetting the system

Use this feature to reset the system to its factory default settings.

Use the remote control buttons

1. Press **RECEIVER**.
2. In standby, press **MCACC SETUP** and **SYSTEM SETUP** at the same time.
The display prompts you to confirm.
3. Within 5 seconds, press the “**ARROW DOWN**”
The display shows **OK?**
4. Within 5 seconds, press the “**ARROW UP**”
The receiver should now be reset.

Note

- If the receiver is disconnected from the power outlet for more than a month it will reset to the default settings.
- The above reset doesn't affect the presets that you have programmed into the remote control (see 'Using the remote control with other components' on page 41).

VSX-C402

Resetting the system

Use this feature to reset the system to its factory default settings.

Use the remote control buttons

1. Press **RECEIVER**.
2. In standby, press **ROOM SETUP** and **SYSTEM SETUP** at the same time.
The display prompts you to confirm.
3. Within 5 seconds, press the “**ARROW DOWN**”
The display shows **OK?**
4. Within 5 seconds, press the “**ARROW UP**”
The receiver should now be reset.

Note

- If the receiver is disconnected from the power outlet for more than a month it will reset to the default settings.
- The above reset doesn't affect the presets that you have programmed into the remote control (see Using the remote control with other components on page 41).

Pioneer *sound.vision.soul*

VSX-C300

Resetting the system

Use this feature to reset the system to its factory default settings.

1. Press the TV/SAT button and the FRONT button at the same time for five seconds to return all settings to their default mode.

Note

- If the receiver is disconnected from the power outlet for more than a month it will reset to the default settings.
- The above reset doesn't affect the presets that you have programmed into the remote control (see Using the remote control with other components on page 42).

VSX-LX60 / VSX-70

Resetting the system

1. Switch the receiver into standby.
2. While holding down the SETUP button on the front panel, press STANDBY/ON.
The display shows **RESET NO.**
3. Press the ENTER button on the front panel.
4. Select RESET using ← / →, then press the ENTER button on the front panel.
The display shows **RESET? OK**
5. Press ENTER to confirm.
OK appears in the display to indicate that the receiver has been reset to the factory default settings.

Note that all settings will be saved, even if the receiver is unplugged.