

Service Manual

ORDER NO. RRV2046

XR-A660 XR-A330

Refer to the service manual RRV2006 for XR-A660/DLXJ/NC.

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Туре	Model		Power Requirement	The voltage can be converted by	
	XR-A660	XR-A330	- Fower Keyanement	the following method.	
DLXJN/NC	0	0	AC110-127V/220-230V/240V	With the voltage selector	



1. CONTRAST OF MISCELLANEOUS PARTS

 ${\it NOTES:}\,ullet$ Parts marked by "NSP" and \otimes can not be supplied.

- The △ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ▼ mark on the product are used for disassembly.
- Reference Nos. indicate the pages and Nos. in the service manual for the base model.

■ CONTRAST TABLE

XR-A660/DLXJN/NC and XR-A660/DLXJ/NC are constructed the same except for the following :

			Part No.		
Ref. No.	Mark	Symbol and Description	XR-A660 /DLXJ/NC	XR-A660 /DLXJN/NC	Remarks
		PACKING SECTION			
P3-2		Operating Instructions	XRE3009	Not used	
		(English/Russian/Chinese)			
P3-2		Operating Instructions (Thai)	Not used	XRC3008	
P3-10		Packing Case	XHD3032	XHD3040	
		EXTERIOR (1/2) SECTION			
P5-8		Bonnet Case	XZN3039	XZN3062	

XR-A330/DLXJN/NC and XR-A330/DLXJ/NC are constructed the same except for the following:

			Part No.		
Ref. No.	Mark	Symbol and Description	XR-A330 /DLXJ/NC	XR-A330 /DLXJN/NC	Remarks
		PACKING SECTION			
P3-2		Operating Instructions (English/Russian/Chinese)	XRE3009	Not used	
P3-2		Operating Instructions (Thai)	Not used	XRC3008	
P3-10		Packing Case	XHD3035	XHD3057	
		EXTERIOR (1/2) SECTION			
P5-8		Bonnet Case	XZN3045	XZN3064	