

Service Manual

ORDER NO. RRV2053

XR-VS99

Refer to the service manual RRV2036 for XR-VS99/DBDXJ.

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Type	Model	Power Requirement	The voltage can be converted by the following method.	
Type	XR-VS99	rower Kequirement		
DAMXJ	0	AC110-127V/220-230V/240V	With the voltage selector	

1. CONTRAST OF MISCELLANEOUS PARTS

 ${\it NOTES:}\,ullet$ Parts marked by "NSP" and \otimes can not be supplied.

- The
 \(\Delta\) mark found on some component parts indicates the importance of the safety factor of the part.

 Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ▼ mark on the product are used for disassembly.
- Reference Nos. indicate the pages and Nos. in the service manual for the base model.

■ CONTRAST TABLE

XR-VS99/DAMXJ and XR-VS99/DBDXJ are constructed the same except for the following:

			Part No.		
Ref. No.	Mark	Symbol and Description	XR-VS99 /DBDXJ	XR-VS99 /DAMXJ	Remarks
		PACKING SECTION			
P3-10		Packing Case	XHD3055	XHD3067	
P3-13	⚠	Power Cord	ADG1158	ADG7018	
		Label	Not used	ARW7038	No.1
	NSP	Warranty Card	Not used	ARY7028	
		EXTERIOR (2/2) SECTION			
P7-26	NSP	Name Label	XAL3015	XAL3016	
		Label	Not used	PRW1499	No.2

Notes: • The numbers in the remarks column correspond to the numbers on "EXPLOEDED VIEWS".

■ EXPLODED VIEWS

PACKING SECTION

Packing Case

• EXTERIOR (2/2) SECTION

