



Notes: 1. Resistance values are indicated in chms unless otherwise specified (K = 1,000, M = 1,000,000).

2. Capacitance values are shown in microfarads unless otherwise noted (P = micro-micro farads).

3. Switch is shown in TAPE position.

CAUTION: Safety precautions to be followed during servicing.

1) Since those parts marked with \triangle are

critical parts for safety, use the one described in parts list!

Before returning the receiver to the customer

2) Before returning the receiver to the customer make appropriate leakage current or resistance measurements to determine that exposed parts are properly insulated from the supply circuit.