
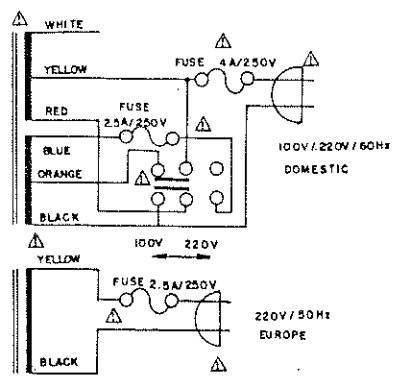
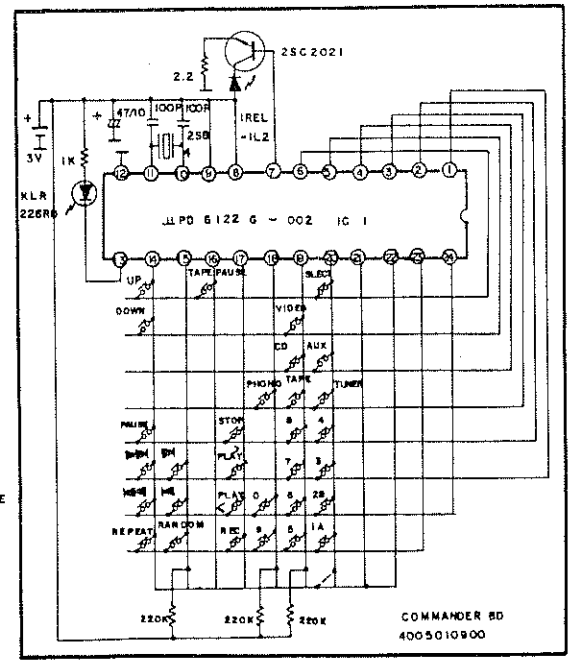
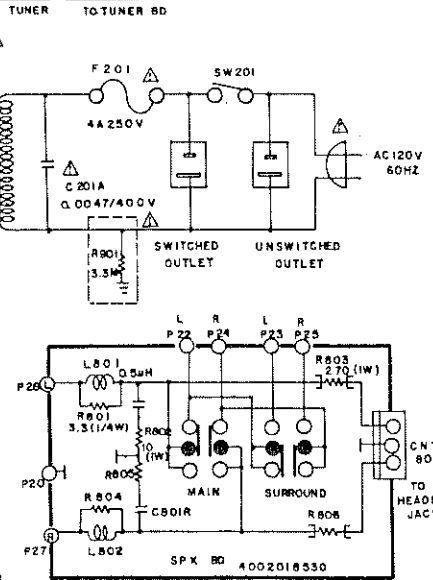
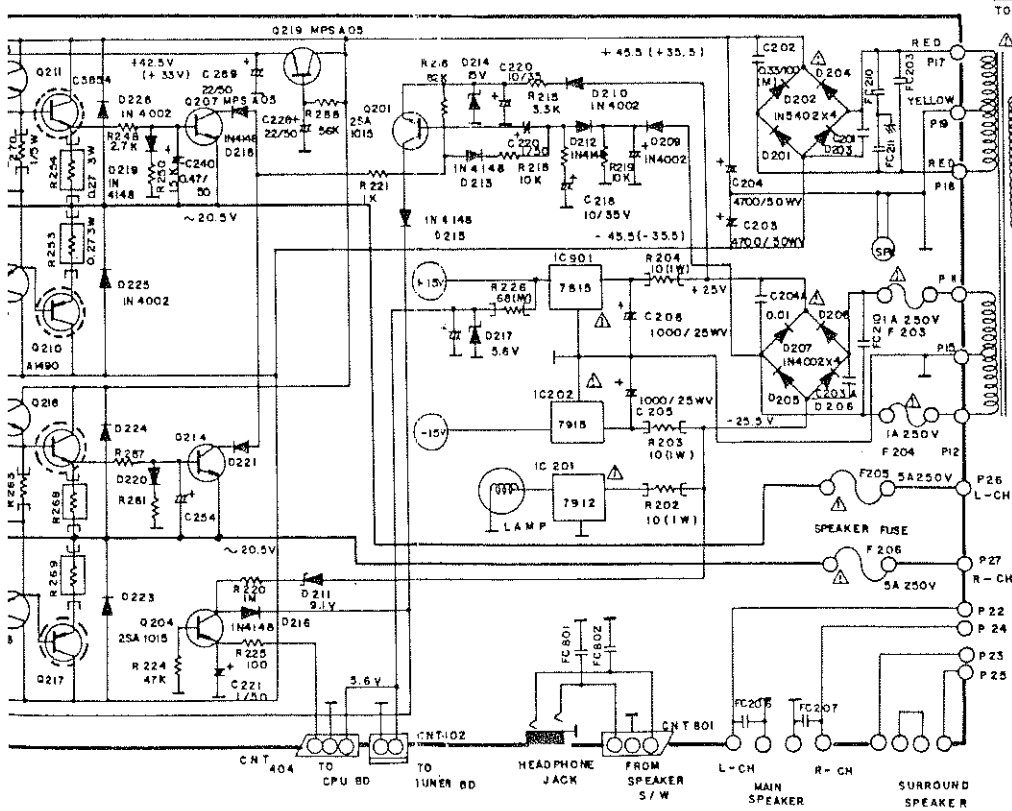
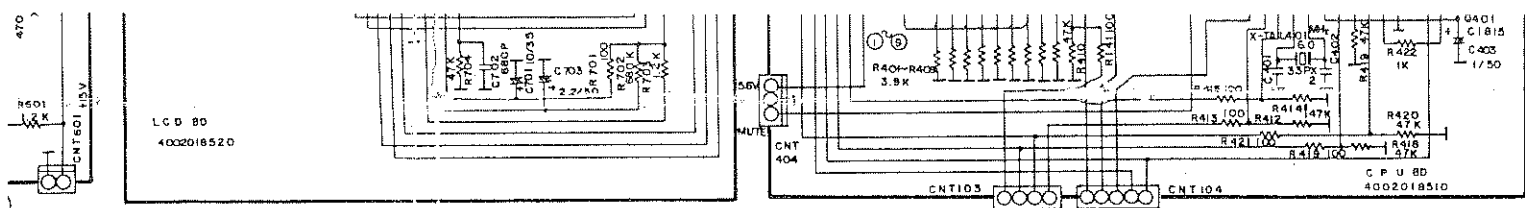


3

4

5

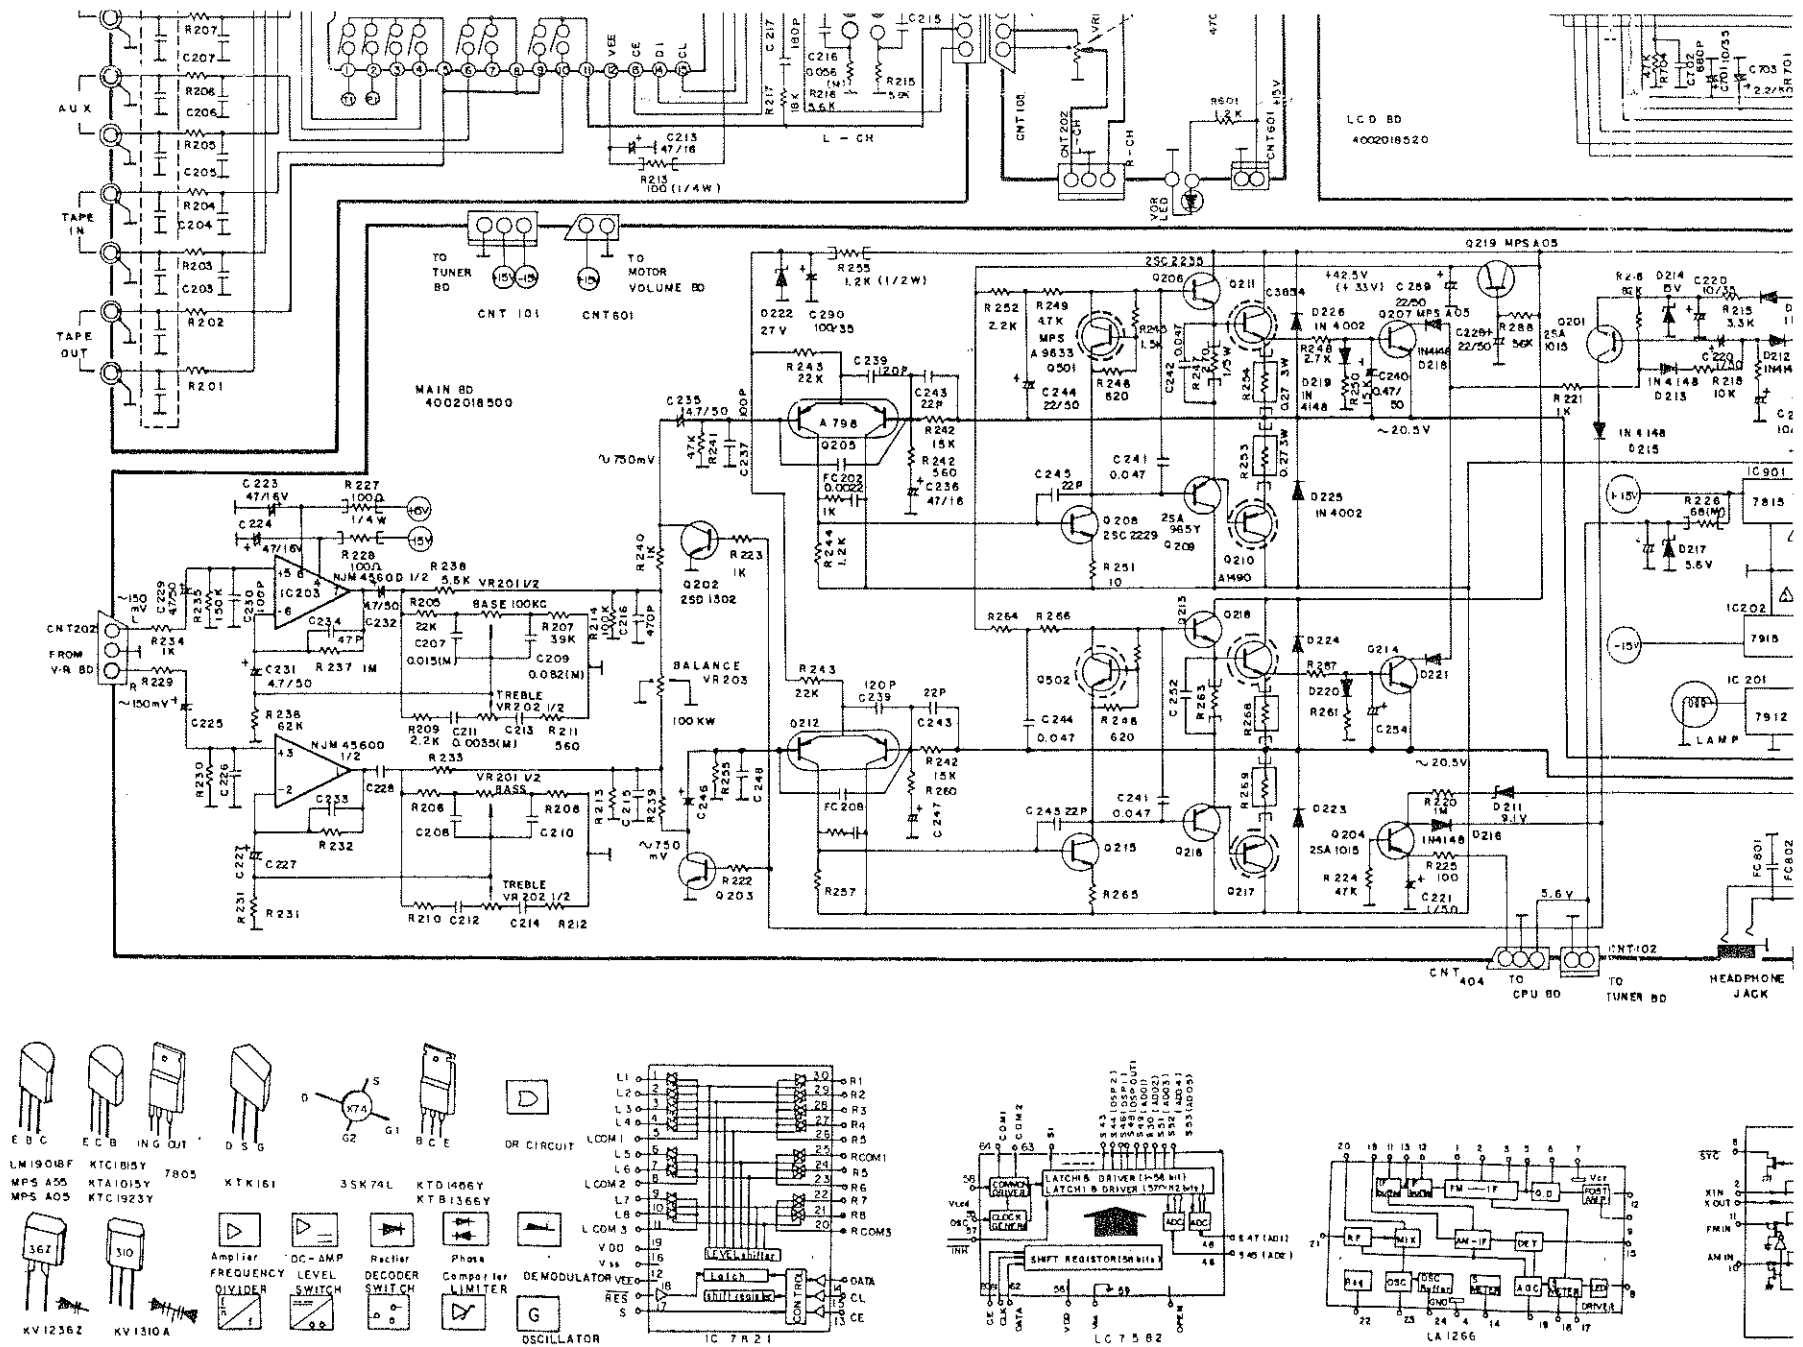

C

D

E


F

G

Schematic Diagram RA-1145R

SERVICE INFORMATION

1. RESISTANCE VALUES ARE INDICATED IN OHMS UNLESS OTHERWISE SPECIFIED. (K=1000, M=1000000)
2. CAPACITANCE VALUES ARE INDICATED IN MICROFARADS UNLESS OTHERWISE SPECIFIED. (P=PICO-MICROFARAD)
3. ALL VOLTAGES ARE MEASURED WITH GROUND DC VALUE WITH NO SIGNAL
R.M.S. (AT 1KHz 75KHz DEVIATION)
4. THE Δ MARKED RESISTORS ARE MOUNTED ABOVE THE P.C.B. ON SLEEVES.
5. PRECAUTION
 - A) ALL COVERS, SHIELDS AND INSULATING SPACERS MUST BE REPLACED BEFORE RETURNING APPLIANCE TO CUSTOMER.
 - B) A DAMAGED POWER SUPPLY CORD MUST BE REPLACED BEFORE RETURNING APPLIANCE TO CUSTOMER.
 - C) DIELECTRIC TEST SHOULD BE DONE BEFORE RETURNING APPLIANCE TO CUSTOMER.
 - D) SINCE THOSE PARTS MARKED WITH Δ ARE CRITICAL PARTS FOR SAFETY, USE THE ONE DESCRIBED IN PARTS LIST.

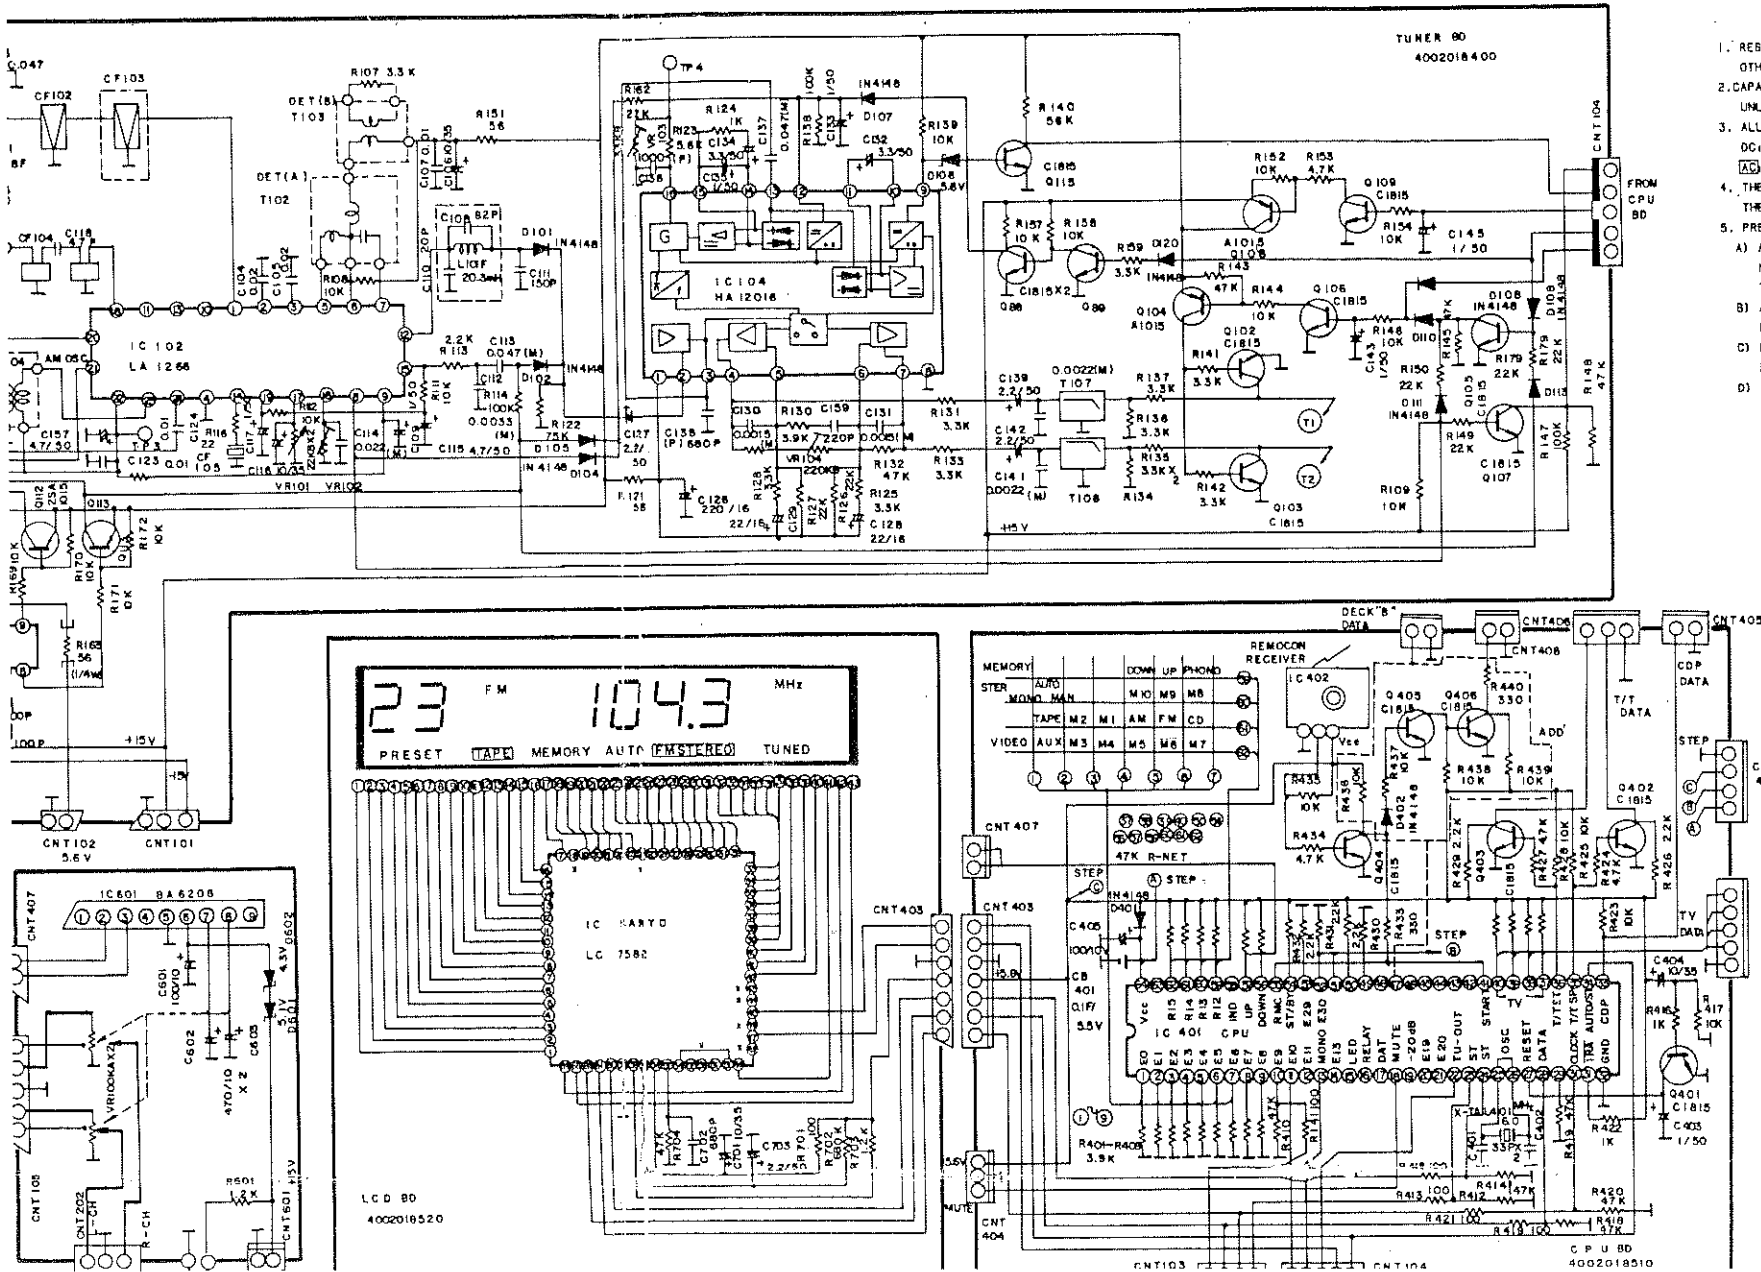

A

B

C

D

Schematic Diagram RA-1145R

