


SERVICE MANUAL

SKANTIC

LUXOR

8012

TYPE 120 5003

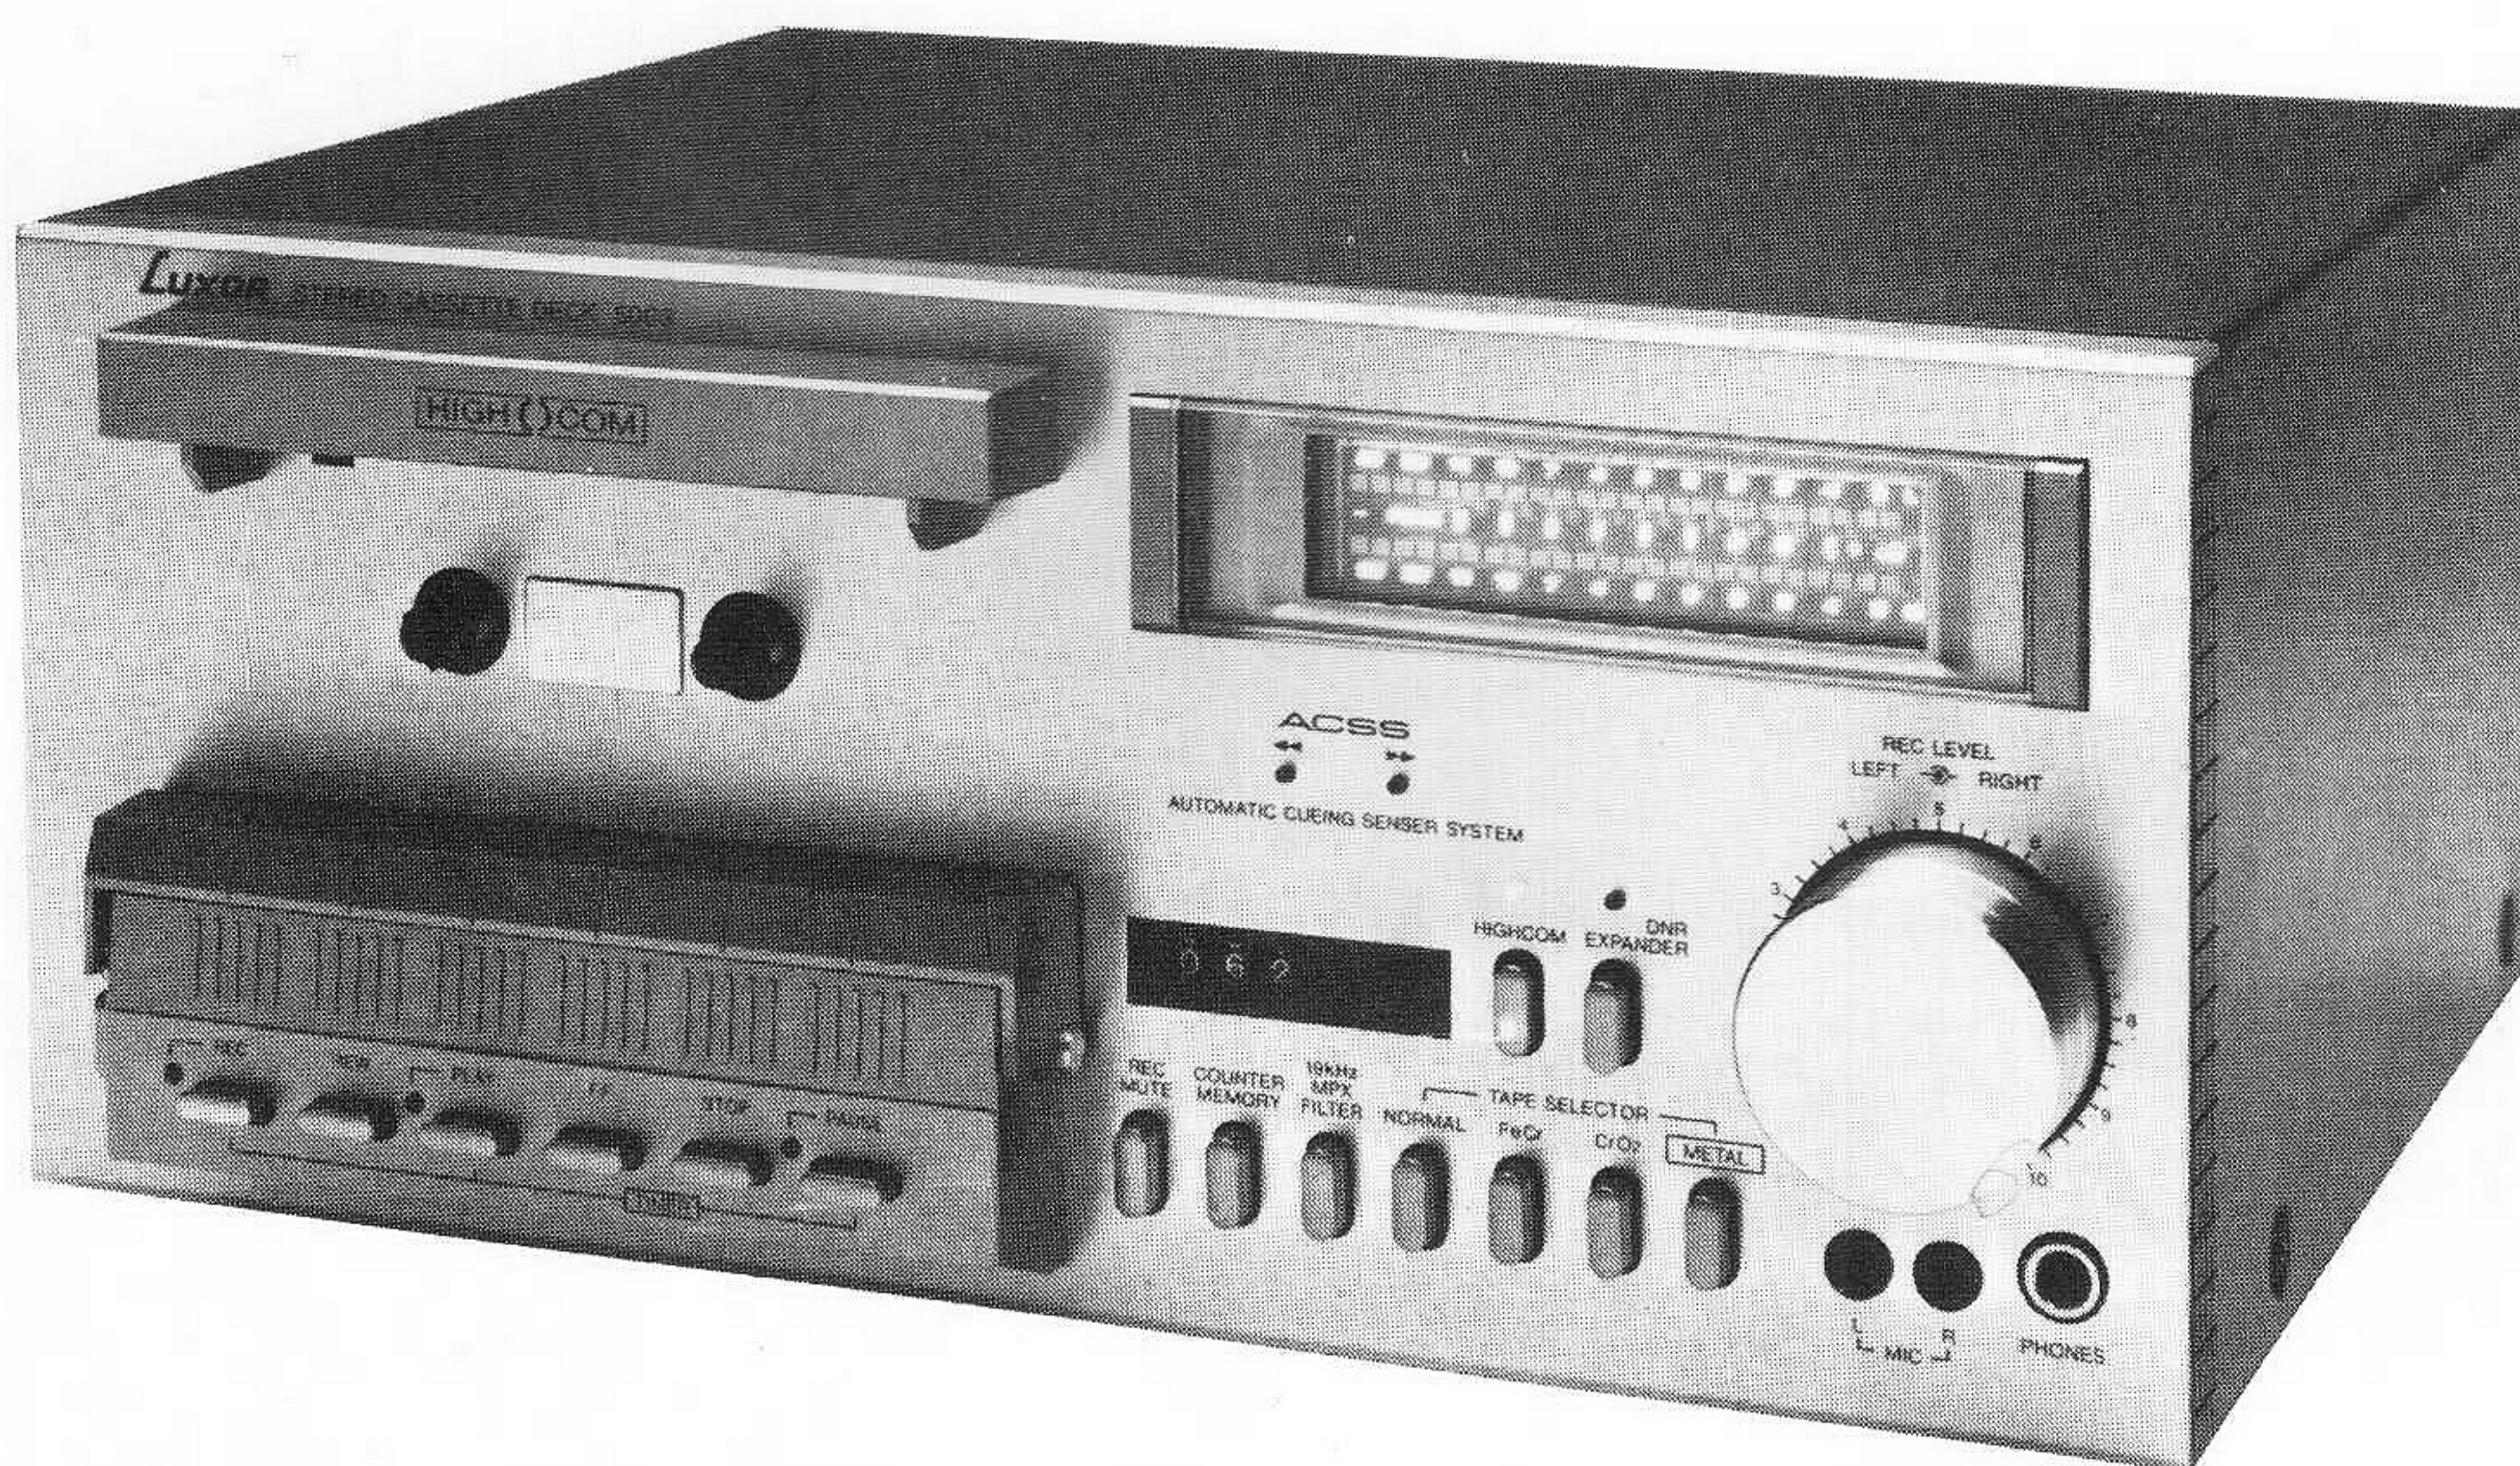

Frekvensområde
Frequency range

Standard	25 - 15 000 Hz
CrO ₂	25 - 15 000 Hz
FeCr	25 - 16 000 Hz
Metal	25 - 17 000 Hz

Dynamik (DIN)
Dynamics

Standard	70 dB
CrO ₂	71 dB
FeCr	71 dB
Metal	72 dB

Svaj (DIN)
Wow and flutter


± 15 %

Ingångar
Inputs

DIN	0.5 mV/ 5 kΩ
Line	100 mV/47 kΩ
Mic	0.5 mV/ 5 kΩ

Utgångar
Outputs

Amp1.	500 mV/0.2 kΩ
-------	---------------

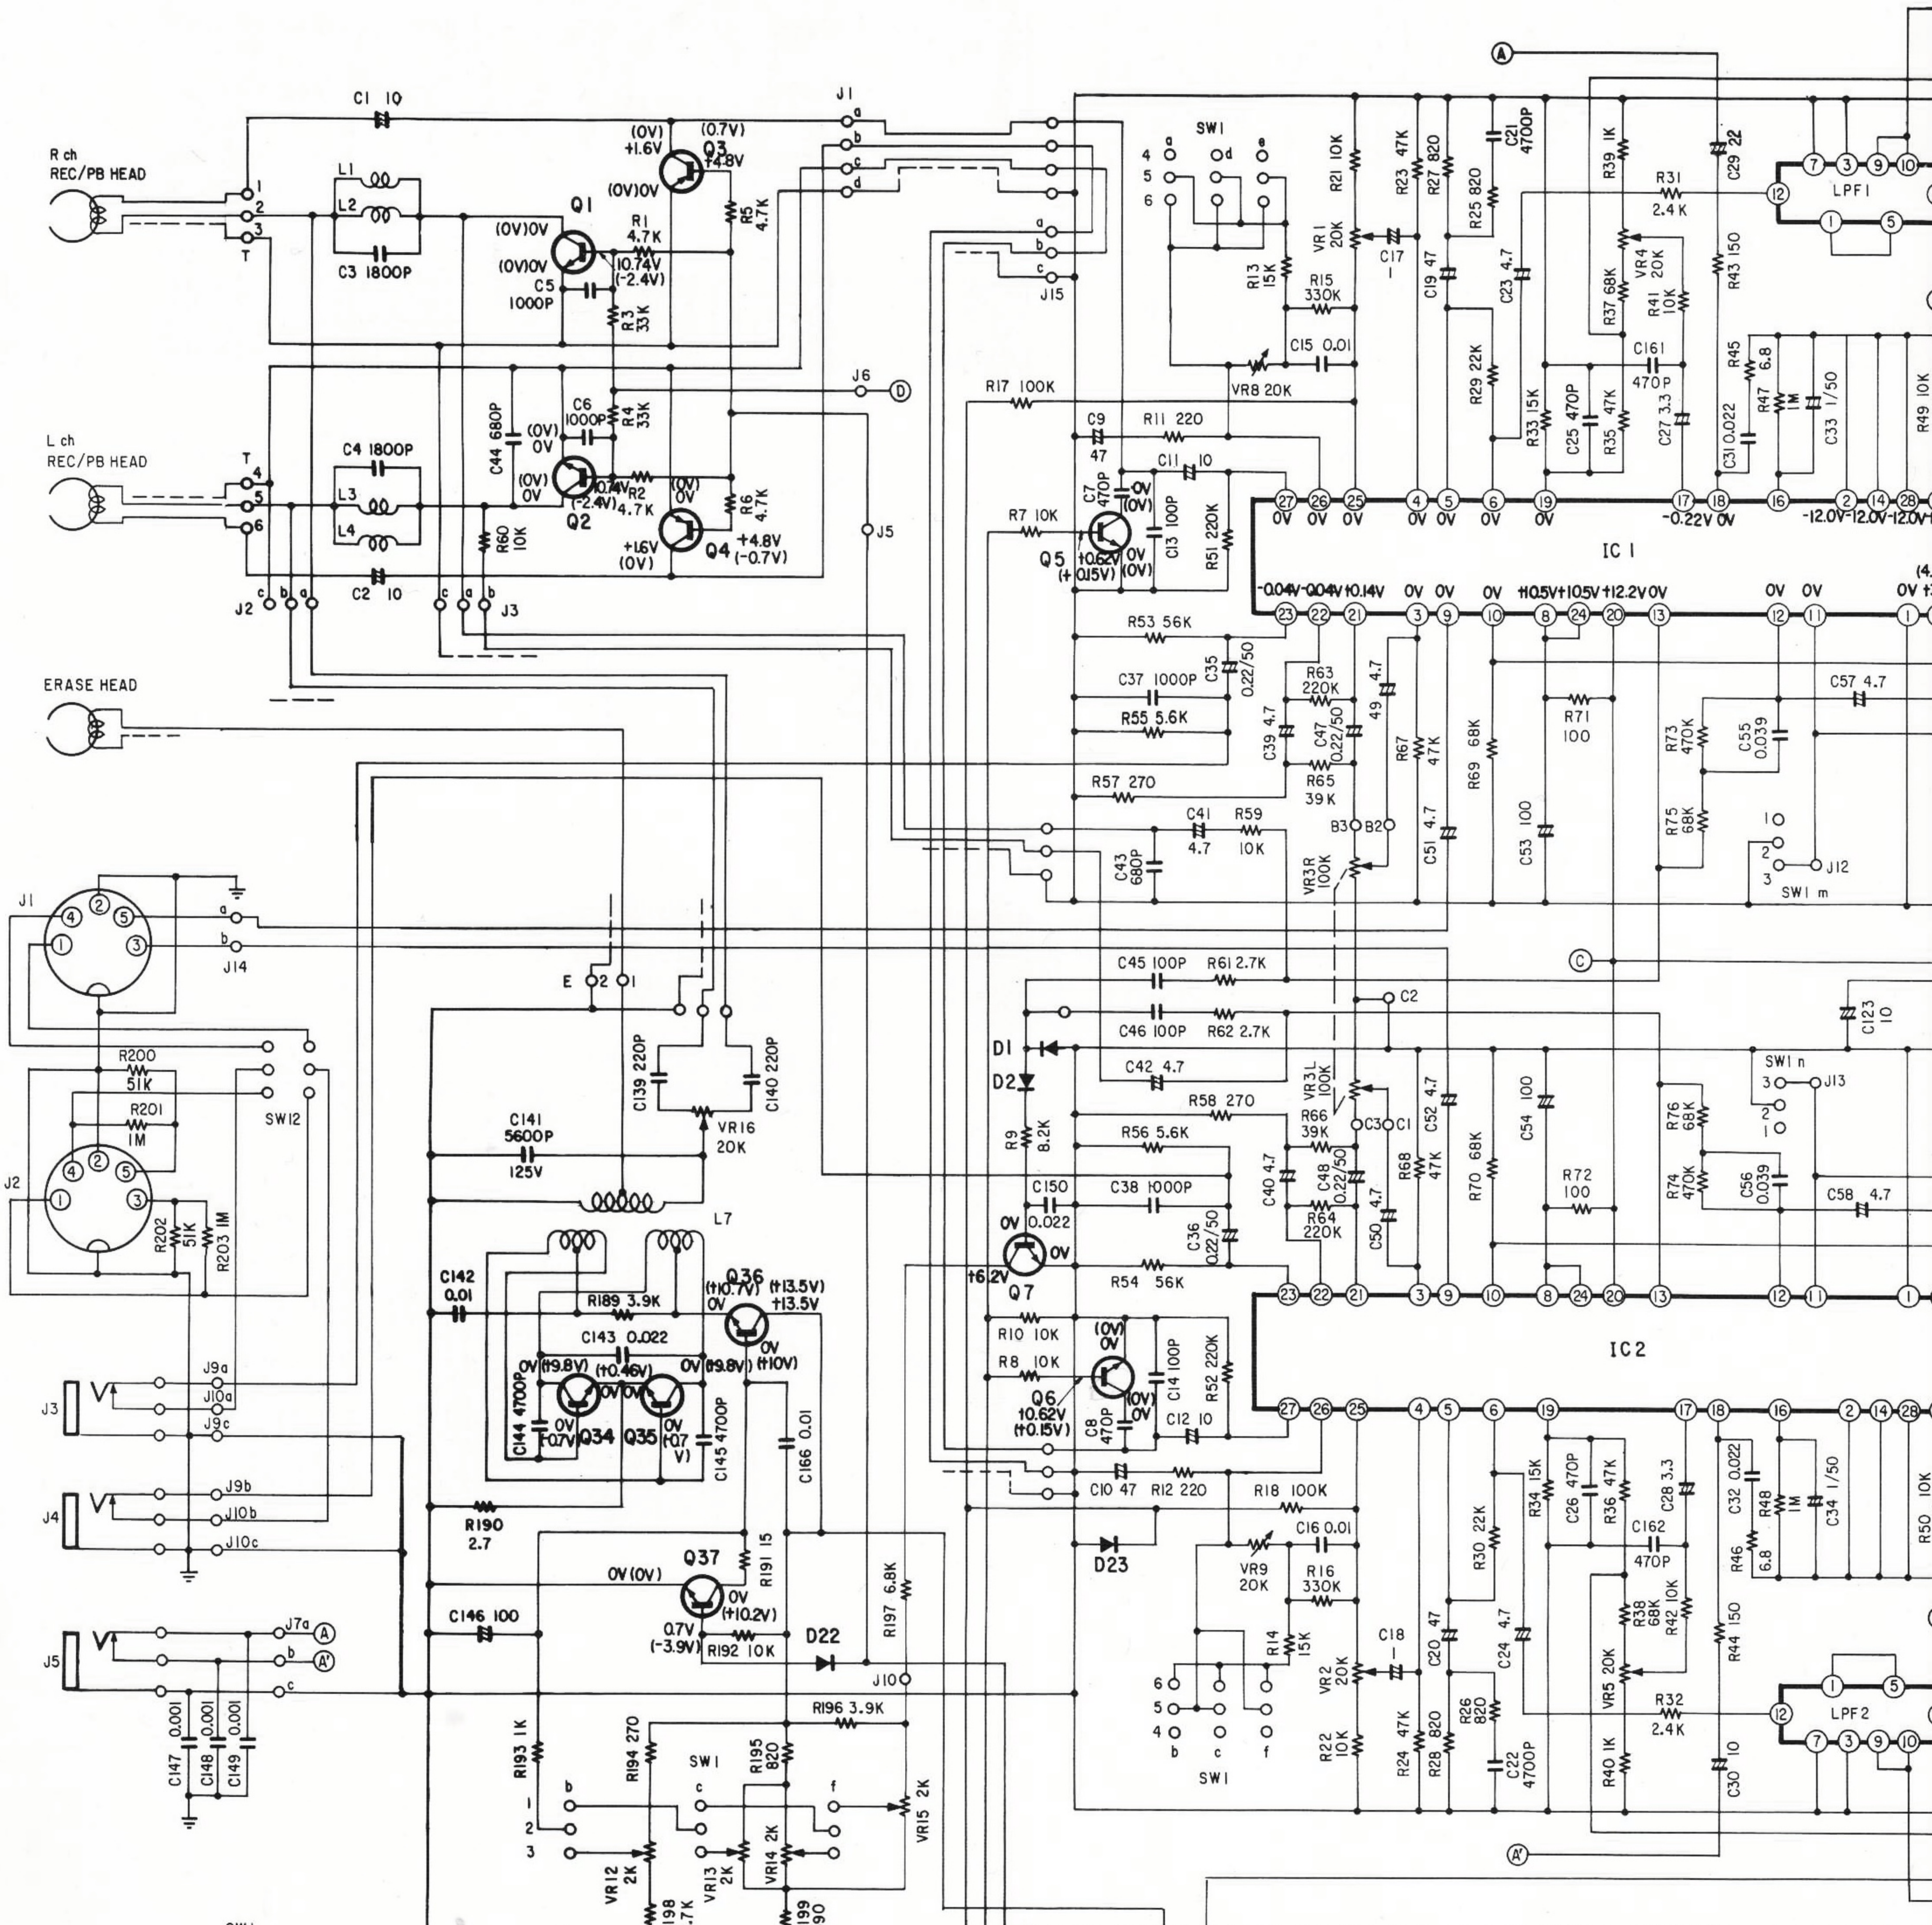

- | | | | | | | |
|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| METAL | CrO | FeCr | NORMAL | MPX FILTER | COUNTER MEMORY | MUTE |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
-
- | | |
|----------------------|-----------------|
| Q1,2,5~9,12~23,27~29 | : 2SC1815GR |
| Q3,4 | : 2SA1015GR |
| Q10,11 | : 2SK246 |
| Q24 | : 2SB774R |
| Q25,26 | : 2SD893AQ |
| Q30~33 | : 2SD899R |
| Q34,35,37 | : 2SC2120Y |
| Q36,38 | : 2SC1846R or S |
| Q39 | : 2SA885R or S |
| D1~4,8~22,27 | : 1S2076 |
| D5,6,23 | : UZ4.7 |
| D7 | : MA26W |
| D24,25 | : UZ15BL |
| D26 | : SVB10-100 |
| D28 | : 1K60R |
-
- | | |
|------------|-------------|
| LED1,4 | : LN36BP |
| LED2,3,6,7 | : LN322GP |
| LED5 | : LN26RP |
| IC1,2 | : TA7617AP |
| IC3,4 | : U401B |
| IC5,6,9 | : HD14066BP |
| IC7,8 | : HA12010 |
| FIP | : 24CW16YS |
| PC | : ON1215 |

- | | |
|--------|-----------------------------|
| SW2a,b | : DNR EXPANDER |
| SW2c,d | : HIGHCOM |
| SW3 | : MUTING, SKELE TONE SWITCH |
| SW4 | : REC/PLAYBACK |
| SW5 | : PLAY, REAF SWITCH |
| SW6 | : F.F |
| SW7 | : REW |
| SW8 | : PAUSE |
| SW9 | : COUNTER |
| SW11 | : POWER ON-OFF |
| SW12 | : REC/PB, LINE IN |
| J1 | : REC/PB, DIN TYPE |
| J2 | : LINE IN |
| J3,4 | : MIC |
| J5 | : HEADPHONE |

