

CDP-C27/C37

SERVICE MANUAL

US Model

- The CDP-C27/C37 is almost same as the CDP-C215/C315 and differs only in the following parts.

Refer to the CDP-C215/C315 SERVICE MANUAL for the other information.

- EXPLODED VIEWS

Page	No.	Part No.	Description
21	2	X-4942-288-1	PANEL ASSY, FRONT (C37)
	2	X-4942-289-1	PANEL ASSY, FRONT (C27)
23	122	* 4-943-681-81	PANEL, BACK (C37)
	122	* 4-943-681-91	PANEL, BACK (C27)

- ACCESSORY & PACKING MATERIAL

30	--	1-465-733-11	REMOTE COMMANDER (RM-D315) (C37)
	--	3-754-791-21	MANUAL INSTRUCTION (ENGLISH)
	--	* 4-951-743-01	INDIVIDUAL CARTON (C37)
	--	* 4-951-743-11	INDIVIDUAL CARTON (C27)

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

COMPACT DISC PLAYER
SONY[®]