
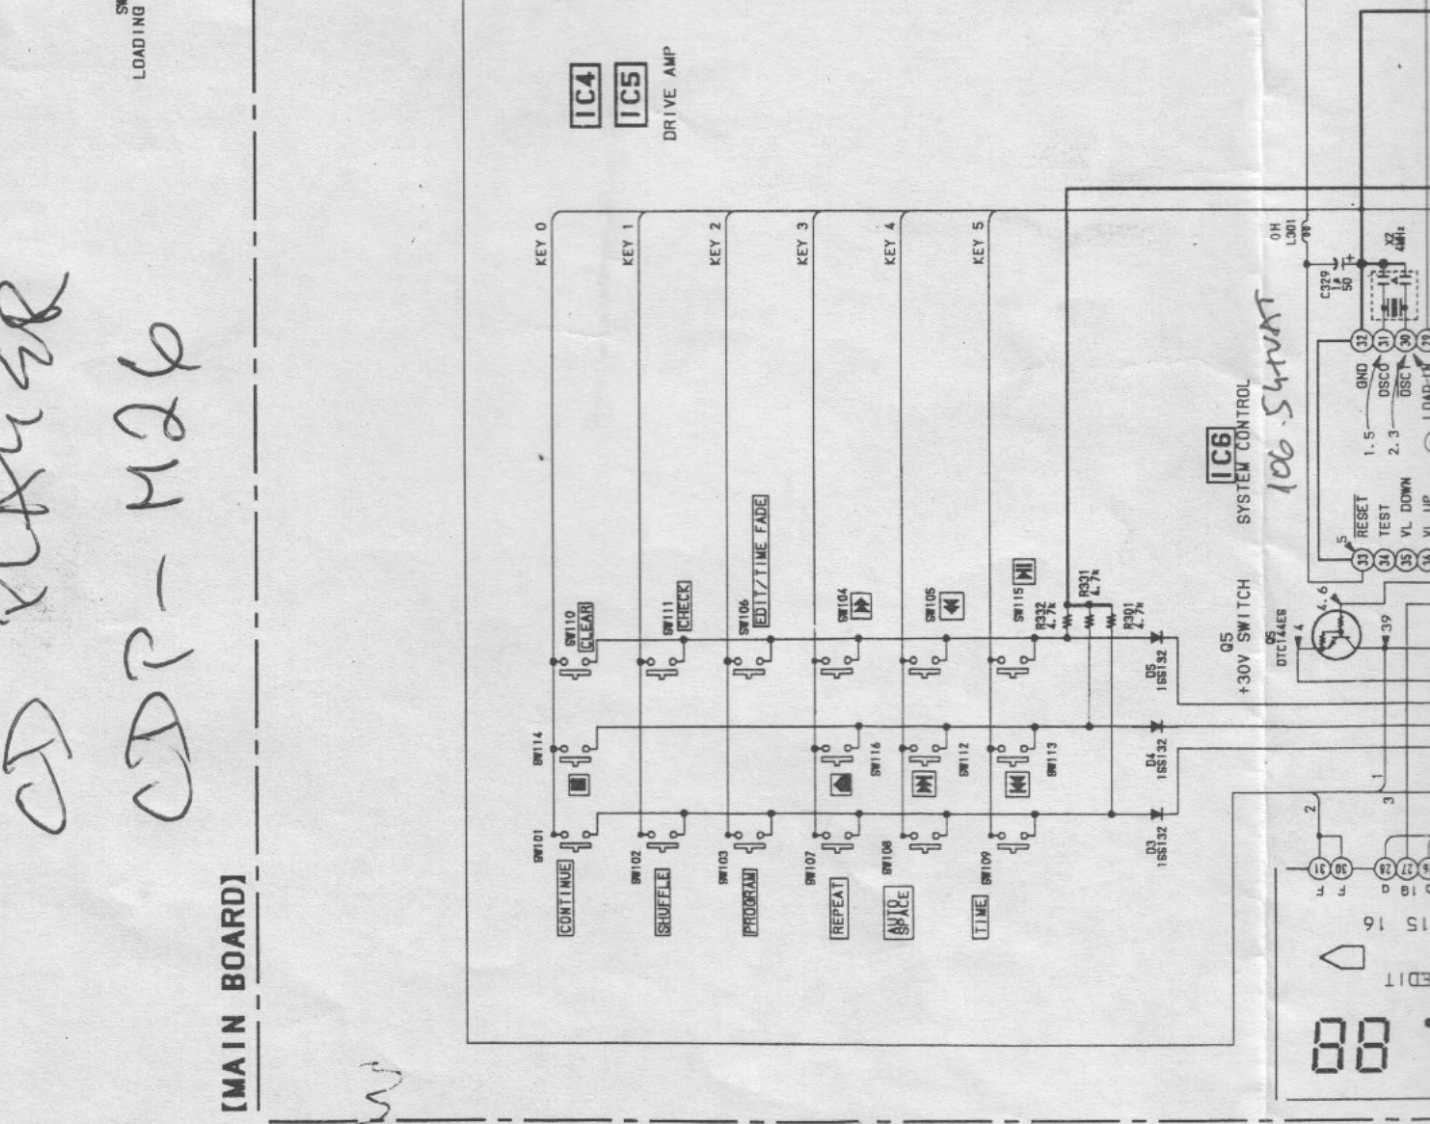


SONY
CD PLAYER
CDP-M26

[MAIN BOARD]

[LOADING MOTOR BOARD]

[SL/SP MOTOR BOARD]

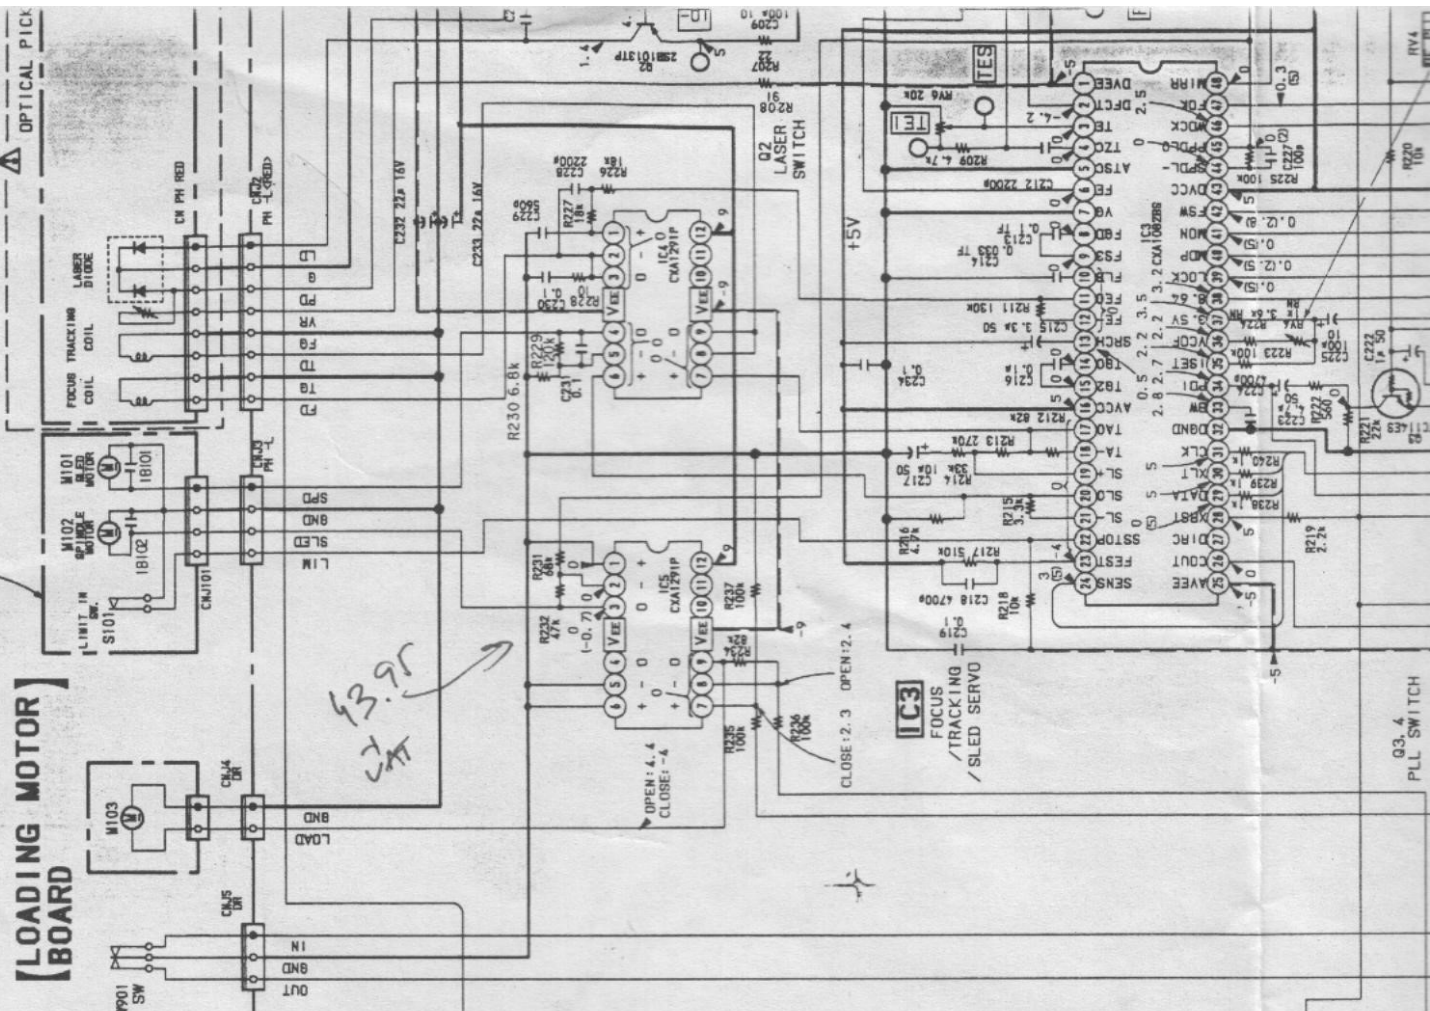


88

106.54V


00 00 - 00.00

PGM SHUFFLE SPACE FADE REPEAT 1 A-B EDIT

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

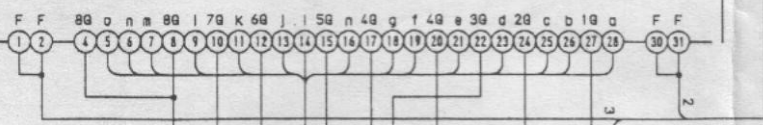


SENSOR BOARD


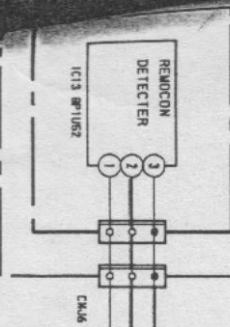



SYSTEM CONTROL


100-54447

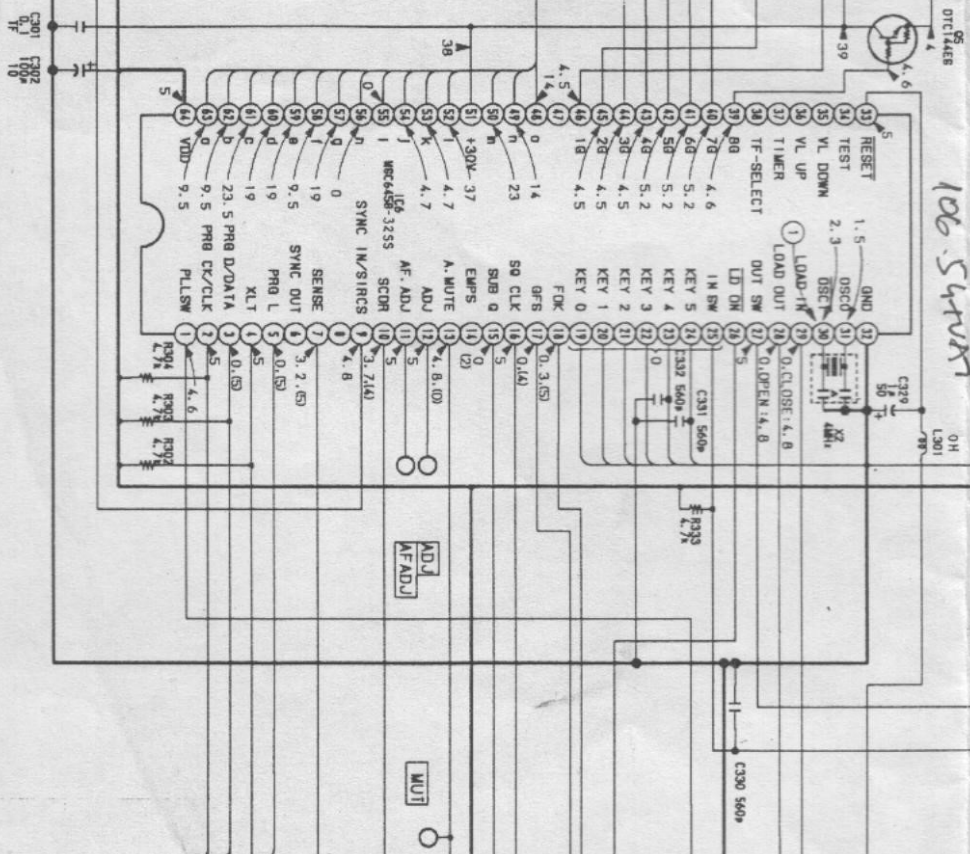

PHONE LEVEL

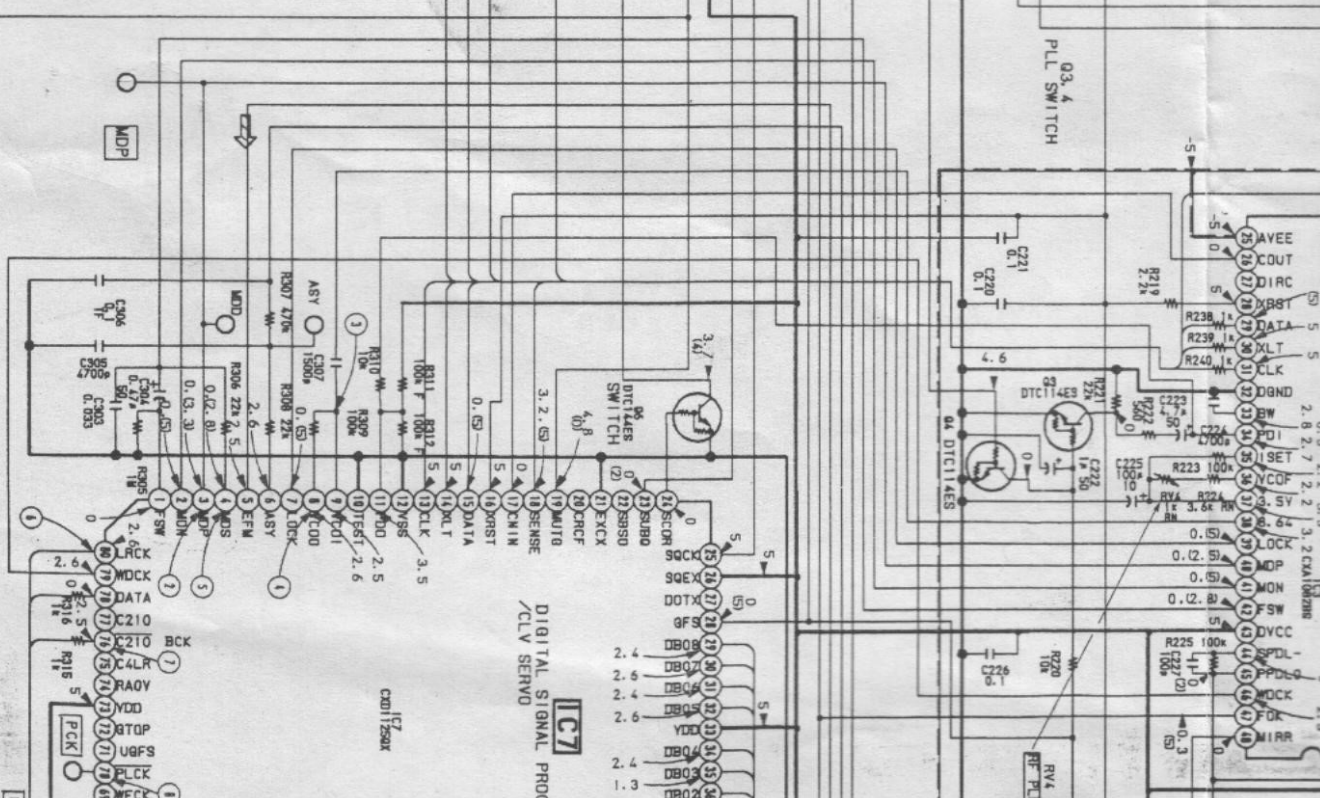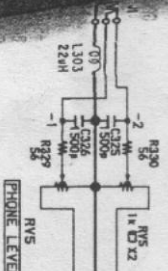

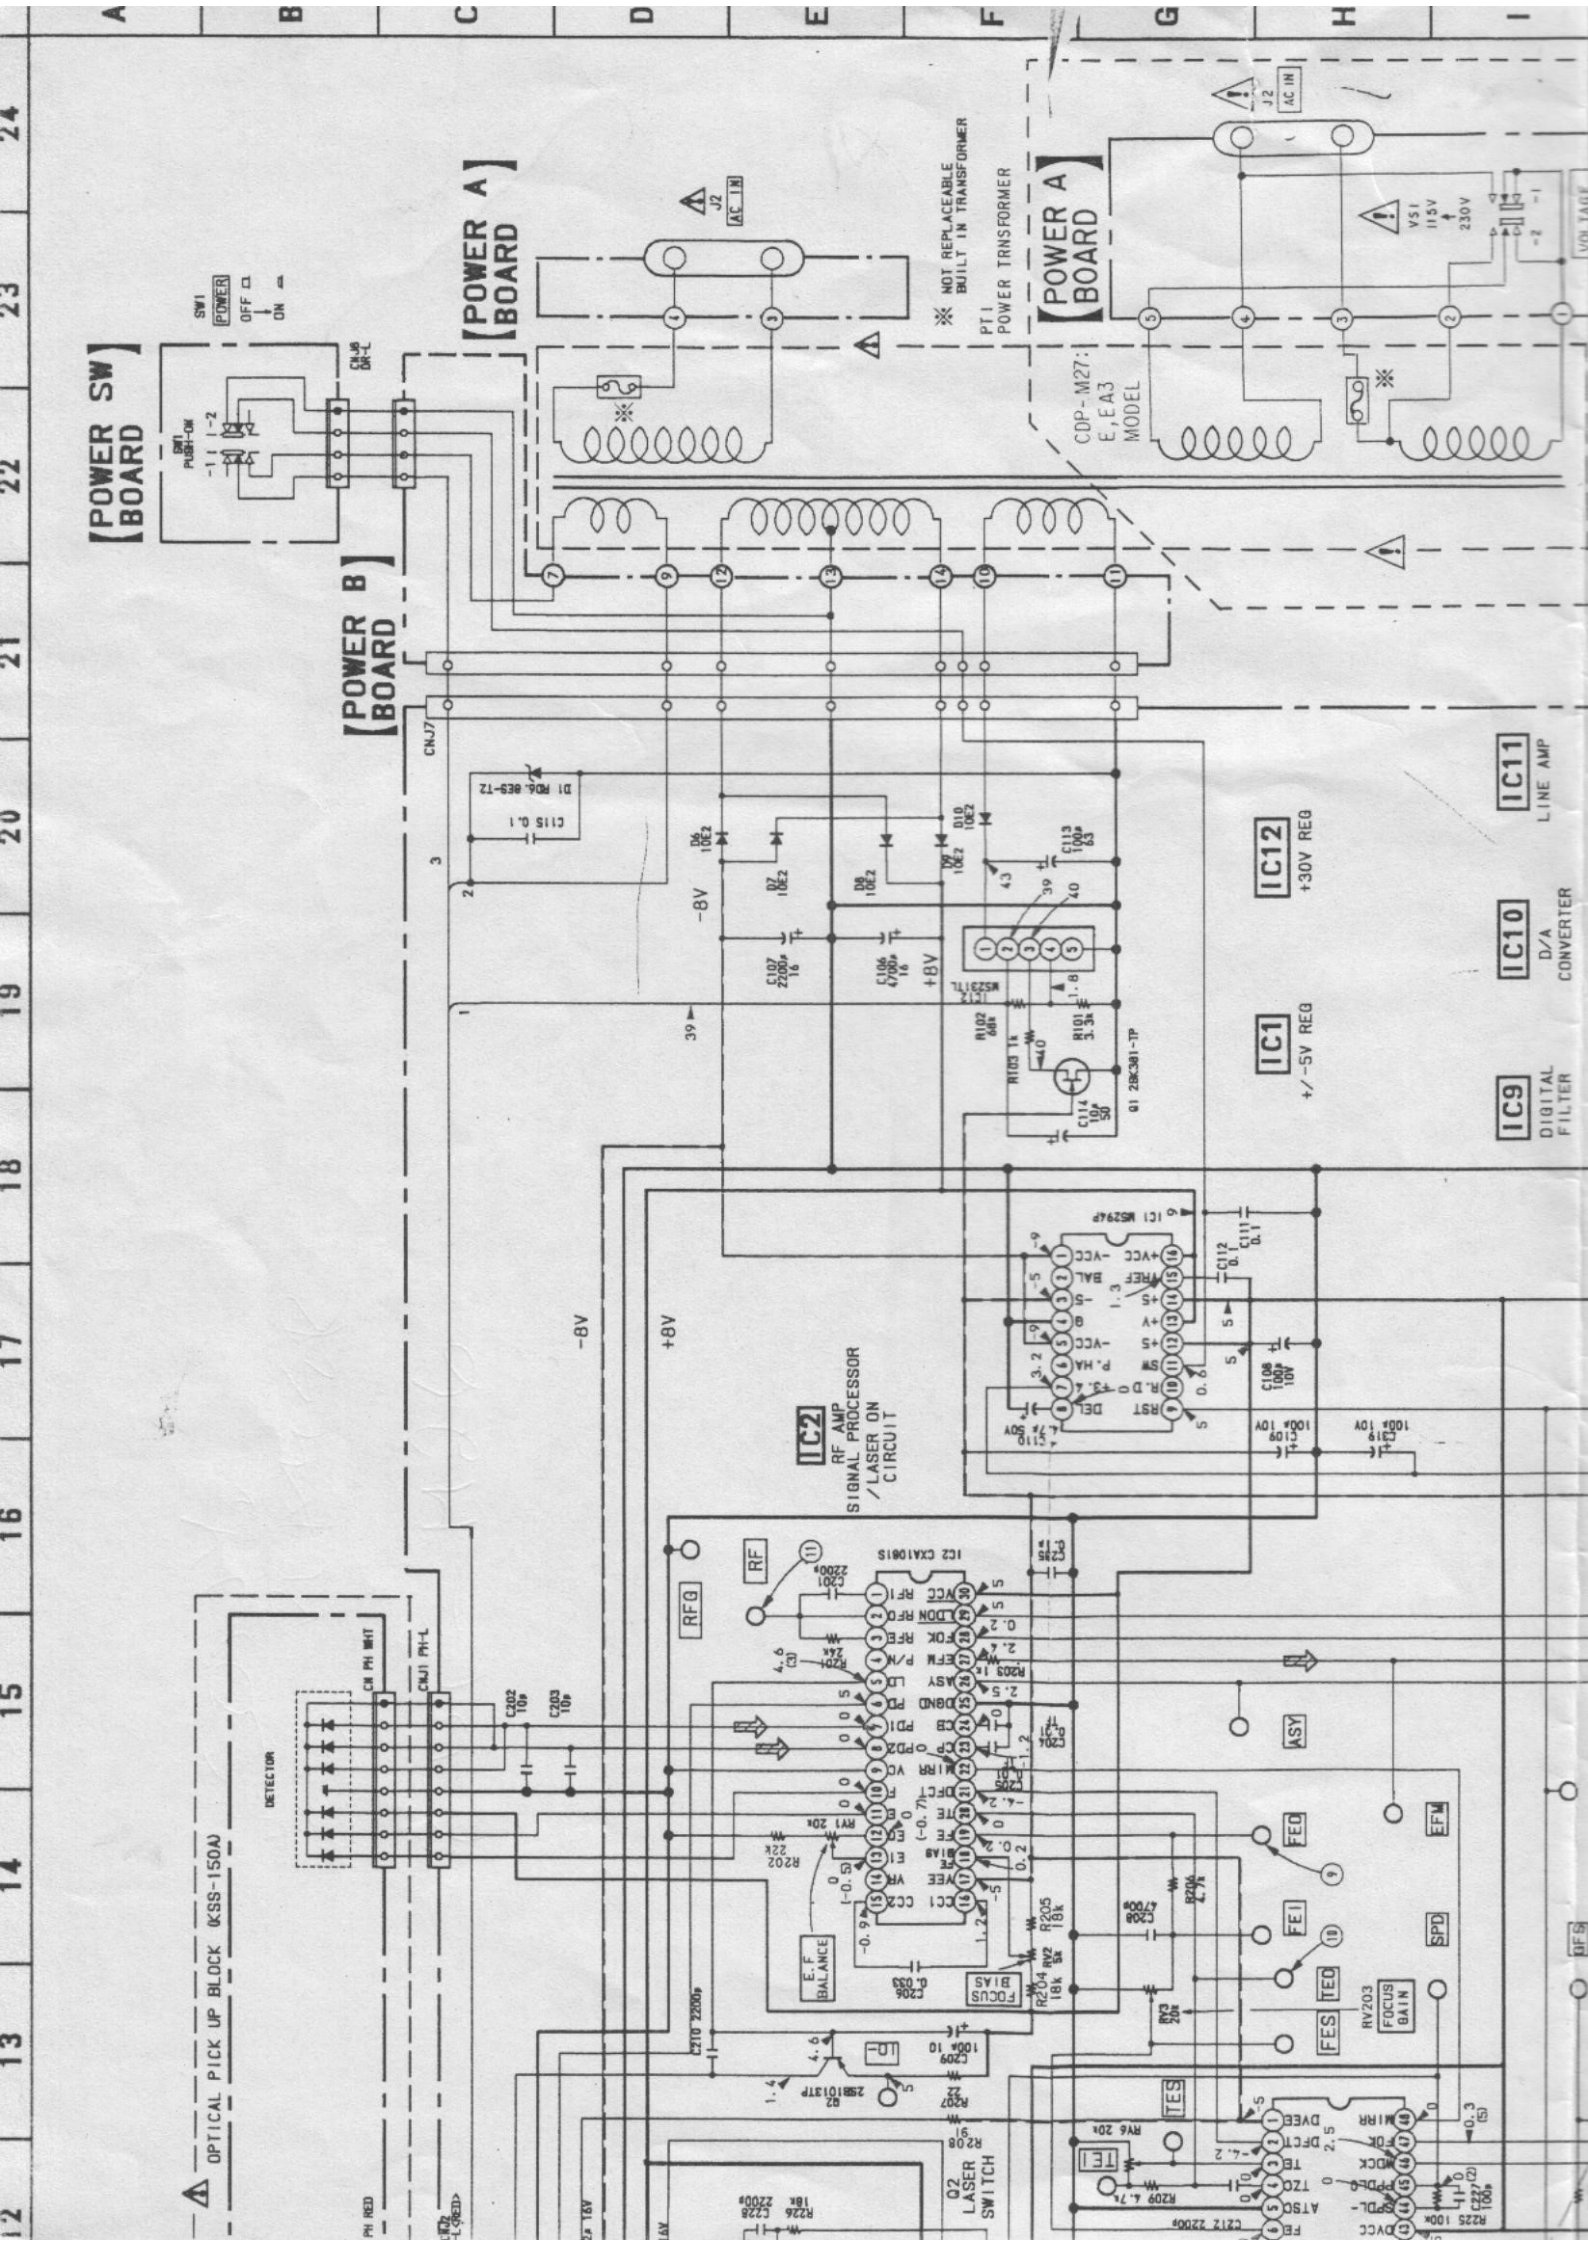

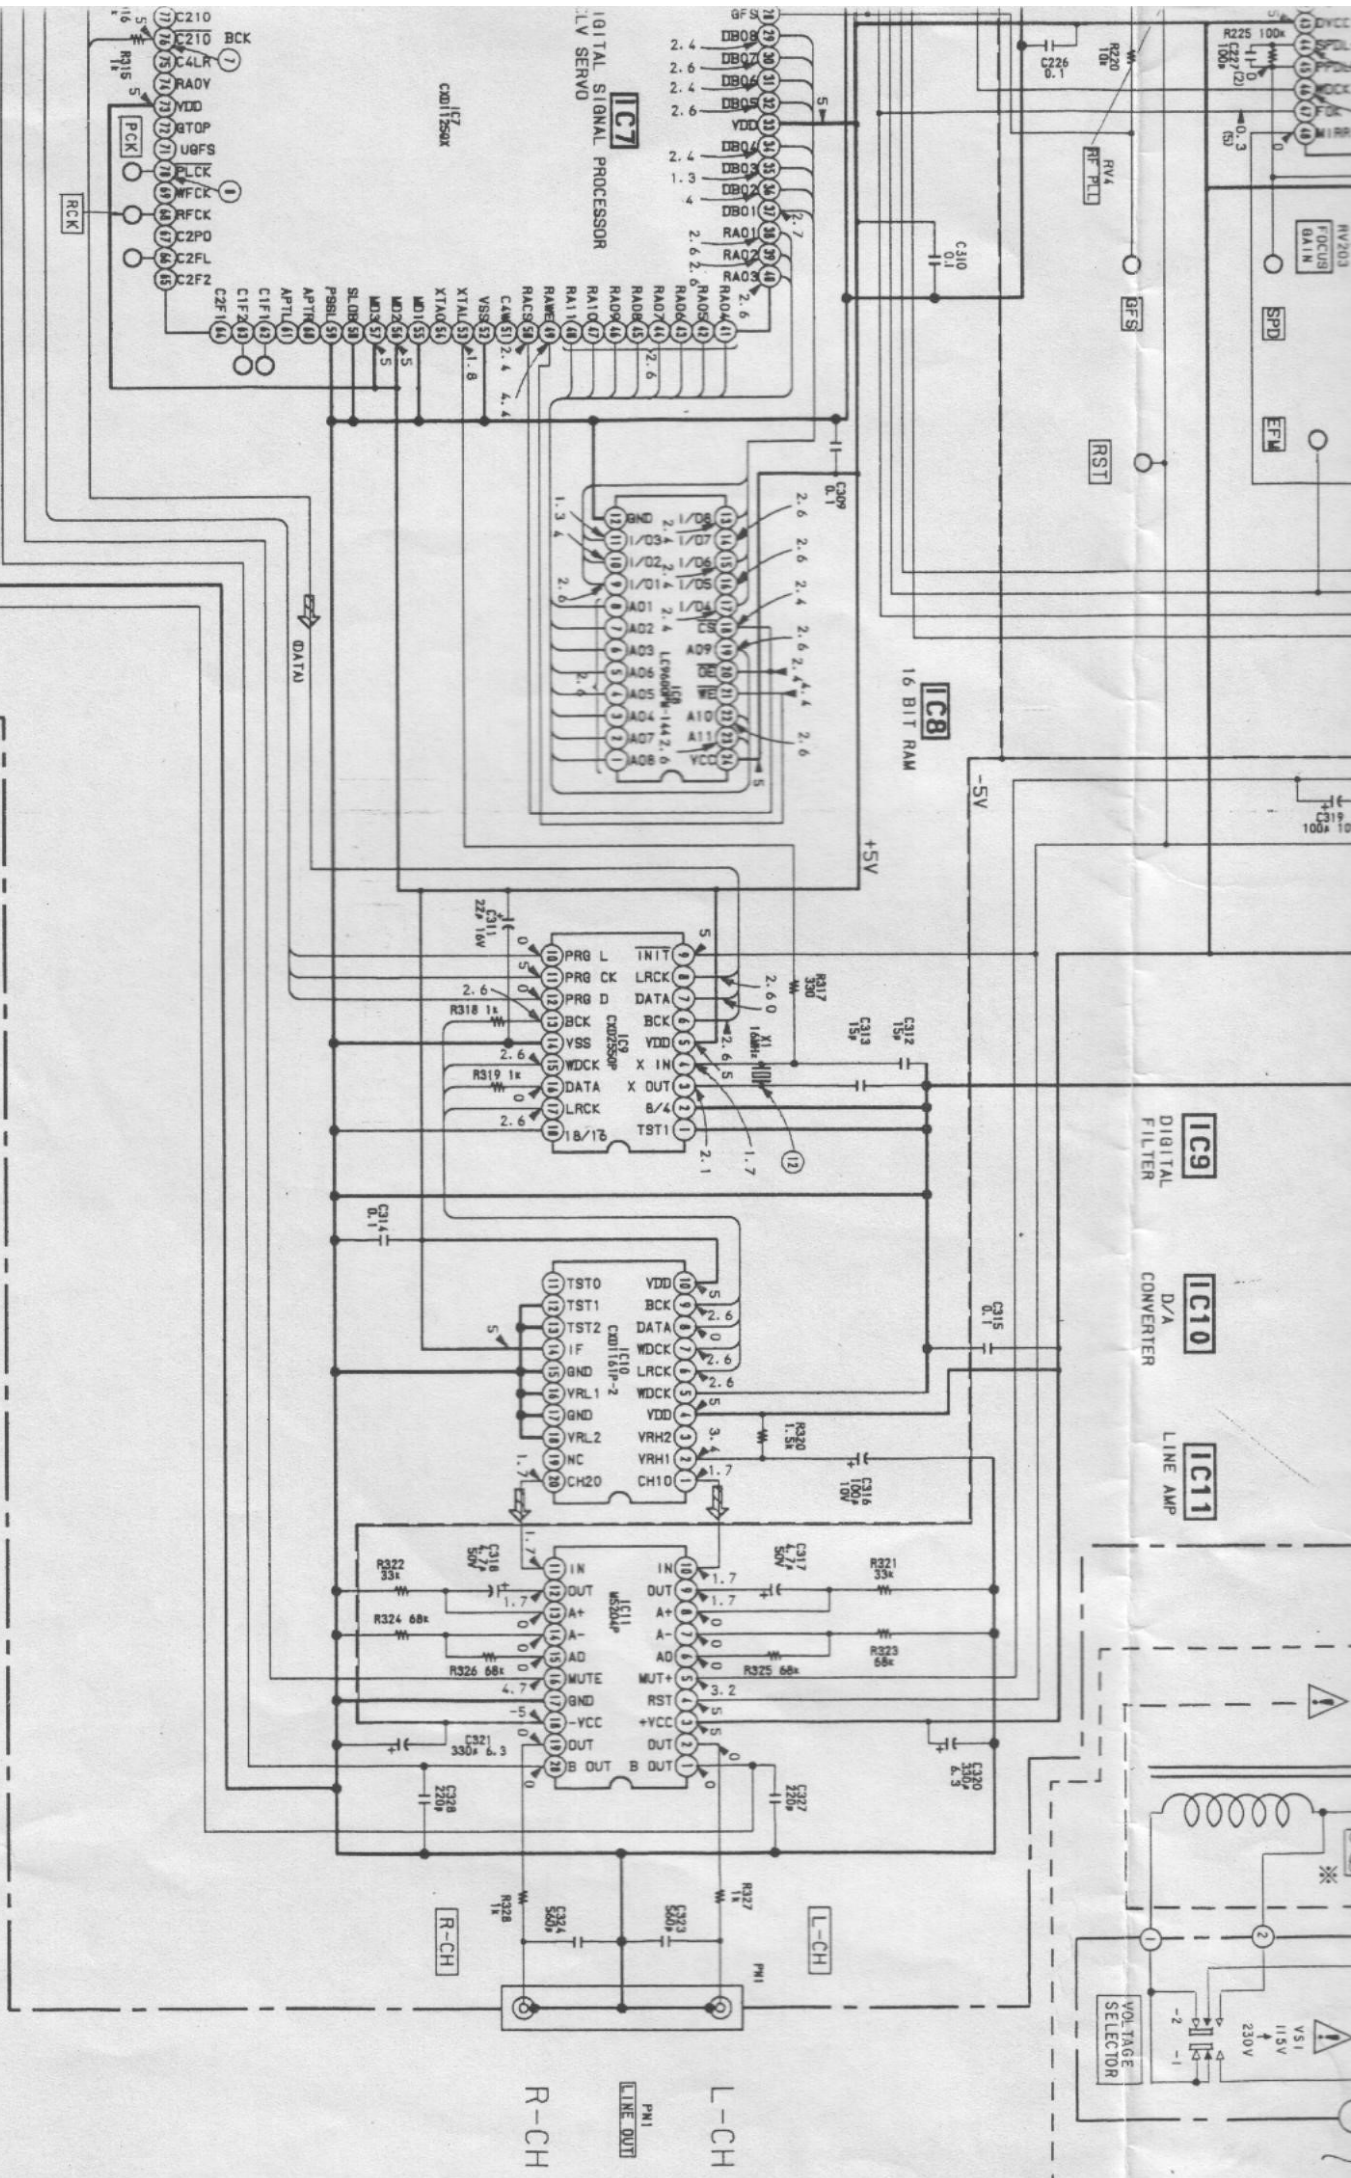

L-CH
R-CH
LINE OUT
PNI

