

PS-LX120

SERVICE MANUAL

US Model

- This set is almost the same as model PS-LX100 previously produced. Therefore, see the service manual for the information not contained in this manual.

PARTS LIST (The difference between PS-LX100 and PS-LX120)

PS-LX100			PS-LX120	
Page	No.	Part No.	Part No.	Description
6	6	_____	4-895-830-01	SPINDLE ASSY
	34	4-895-493-01	_____	SPINDLE
	10	4-896-353-01	4-896-543-01	CABINET, MAIN
8		3-750-147-21	3-751-545-21	MANUAL, INSTRUCTION
		*4-896-354-01	*4-928-272-01	INDIVIDUAL CARTON
		*4-896-541-01	*4-896-310-01	CUSHION (LEFT)
		*4-896-542-01	*4-896-309-01	CUSHION (RIGHT)

NOTE:

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

STEREO TURNTABLE SYSTEM
SONY®