

PS-LX120D

SERVICE MANUAL

US Model

- PS-LX120D is similar to the earlier PS-LX100 (US model).
- Refer to the PS-LX100/LX285 service manual for information not contained in this service manual.

PARTS LIST (The difference between PS-LX100 and PS-LX120D)

PS-LX100			PS-LX120D	
Page	No.	Part No.	Part No.	Description
	6	_____	4-895-830-01	SPINDLE ASSY
	34	4-895-493-01	_____	SPINDLE
6, 7	10	4-896-353-01	4-896-543-01	CABINET, MAIN
	17	_____	X-4895-412-1	COVER ASSY, DUST
	26	_____	4-896-321-01	HINGE ASSY
	27	_____	4-896-322-01	STOPPER, DUST COVER
		3-786-002-21	3-753-171-21	MANUAL, INSTRUCTION
		*4-896-319-11	*4-944-580-01	INDIVIDUAL CARTON
8		*4-896-309-01	*4-896-307-01	CUSHION(R)
		*4-896-310-01	*4-896-308-01	CUSHION(L)

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

STEREO TURNTABLE SYSTEM
SONY[®]