

PS-LX66

SERVICE MANUAL

*US Model
Canadian Model
AEP Model
UK Model
E Model
Australian Model*

Model PS-LX66 is almost same as PS-LX56.
This manual contains only the points which differ from PS-LX56 (BLACK model).
For the informations not contained in this manual, please refer to PS-LX56/LX56P
service manual (9-959-216-XX) previously issued.

• DIFFERENT PARTS LIST

NOTE:

•Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

Page	PS-LX56 (BLACK)			PS-LX66		
	Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
7	6	4-964-177-01	KNOB SPEED	6	4-229-887-01	BUTTON, SPEED
	7	4-964-178-01	KNOB REJECT	7	4-229-886-01	BUTTON, REJECT
	8	4-964-184-01	KNOB POWER (LX56)	8	4-229-888-01	BUTTON, POWER
	26	A-4660-578-A	FRONT PANEL (G) ASSY (LX56:BLACK)	26	A-4412-390-A	PANEL ASSY, FRONT
	* 27	4-950-487-01	MAIN CABINET (B)	27	4-229-882-01	CABINET, MAIN

STEREO TURNTABLE SYSTEM

SONY®