


STR-414L

AEP Model

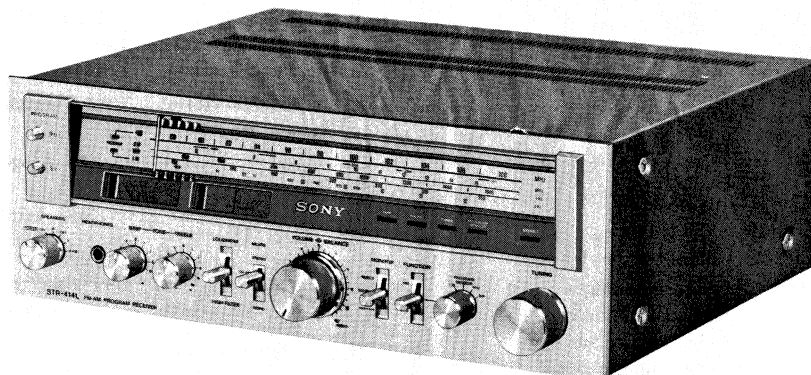

FM-AM PROGRAM RECEIVER

SPECIFICATIONS

GENERAL

Power Requirements:	120 V, 220 V or 240 V ac adjustable, 50 Hz
Power Consumption:	250 W
Dimensions:	Approx. 410 (w) x 145 (h) x 375 (d) mm 16 (w) x 5 3/4 (h) x 14 3/4 (d) inches including projecting parts and controls
Weight:	Approx. 9.1 kg, 20 lb 1 oz (net) Approx. 11.2 kg, 24 lb 12 oz (in shipping carton)


FM SECTION

Frequency Range:	87.5 – 108 MHz
Antenna:	300 Ω balanced 75 Ω unbalanced
Intermediate Frequency:	10.7 MHz
Sensitivity at 50dB Quieting:	3.5 μ V (10.7 dB) (MONO) 45 μ V (33 dB) (STEREO)
Sensitivity at 46dB Quieting:	4 μ V (12 dB) (MONO) 50 μ V (34 dB) (STEREO)

Usable Sensitivity:	1.8 μ V (5 dB), IHF (at 40 kHz deviation) 1.6 μ V (4 dB), S/N=26 dB
S/N Ratio:	75 dB (MONO) 70 dB (STEREO)
Harmonic Distortion:	At 100 Hz 0.15 % (MONO) 0.3 % (STEREO) At 1 kHz 0.15 % (MONO) 0.3 % (STEREO) At 10 kHz 0.2 % (MONO) 0.5 % (STEREO)
IM Distortion:	0.15 % (MONO) 0.3 % (STEREO)
Separation:	35 dB at 100 Hz 45 dB at 1 kHz 35 dB at 10 kHz
Frequency Response:	40 – 12,500 Hz +0.5 dB -1.0 dB 30 – 15,000 Hz +0.5 dB -2.0 dB

– Continued on page 2 –

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SONY

SERVICE MANUAL

www.manualscenter.com

STR-414L

Selectivity: 60 dB (400 kHz)
40 dB (300 kHz, S/N=26 dB, 40 kHz deviation)

Capture Ratio: 1.0 dB

AM Suppression Ratio: 54 dB

Image Response Ratio: 45 dB

IF Response Ratio: 90 dB

Spurious Response Ratio: 75 dB

RF Intermodulation: 60 dB

Muting Threshold: Approx. 5 μ V

SW/MW/LW SECTION

Frequency Range: SW: 5.8 – 15.8 MHz
MW: 530 – 1,605 kHz
LW: 150 – 350 kHz

Antenna: SW/MW: External antenna terminal
Attached antenna wire
LW: Built-in Ferrite-rod antenna
External antenna terminal

Intermediate Frequency: 468 kHz

Usable Sensitivity: SW: 30 μ V (29.5 dB),
external antenna (10 MHz)
MW: 100 μ V (40 dB),
external antenna (1,000 kHz)
LW: 500 μ V/m (53.8 dB/m),
built-in antenna (250 kHz)
100 μ V (40 dB),
external antenna (250 kHz)

S/N Ratio: SW/MW: 52 dB (5 mV)
LW: 52 dB (50 mV/m)

Harmonic Distortion: SW/MW: 0.3 % (5 mV, 400 Hz)
LW: 0.3 % (50 mV/m, 400 Hz)

Selectivity: 28 dB (9 kHz)
30 dB (10 kHz)

AUDIO AMPLIFIER SECTION**Continuous RMS**

Power Output: Less than 0.3 % THD, both channels driven simultaneously

At 20 – 20,000 Hz
40 W + 40 W (8 Ω)

At 1 kHz
45 W + 45 W (8 Ω)

According to DIN 45500
40 W + 40 W (8 Ω)
40 W + 40 W (4 Ω)

Dynamic Power Output: IHF constant power supply method
130 W (8 Ω)

Power Bandwidth: 10 – 40,000 Hz, IHF

Damping Factor: 30 at 1 kHz (8 Ω)

Harmonic Distortion: Less than 0.3 % at rated output (8 Ω)
Less than 0.7 % at rated output (4 Ω)
Less than 0.1 % at 1 W output

IM Distortion: Less than 0.3 % at rated output
(60 Hz : 7 kHz = 4 : 1) Less than 0.1 % at 1 W output

Residual Noise: Less than 0.08 μ V (at 8 Ω)

Frequency Response: PHONO:
RIAA equalization curve \pm 0.5 dB
TAPE:
10 – 50,000 Hz +1 dB
–3 dB

Inputs:

	Sensitivity	Impedance	S/N	Weighting network
PHONO	2.5 mV (–50 dB)	50 k Ω	80 dB	A
TAPE 1, 2	150 mV (–14.5 dB)	100 k Ω	95 dB	A

Measured with rated output power into 8 Ω loads (both channels driven simultaneously) at 1 kHz.

Outputs:

(with rated input)

	Voltage	Impedance
REC OUT 1, 2	150 mV (–14.5 dB)	10 k Ω

Headphones: Accepts all low or high impedance headphones

Speaker: 4 – 16 Ω speakers are suitable.

Tone Controls: BASS: \pm 9 dB at 100 Hz
TREBLE: \pm 7 dB at 10 kHz

Loudness Control: +8 dB at 100 Hz
(att. 30 dB) +3 dB at 10 kHz

High Filter: 6 dB/oct. above 7.5 kHz

SECTION 1 OUTLINE

1-1. CIRCUIT DESCRIPTION (See Fig. 1)

Program Sensor

The FM or LW band can be changed automatically through the optical detection by the following procedures;

- 1 Set the FUNCTION switch (S1) to band selector position (center position).
- 2 Then, Set the band selector switch (S3) to PROGRAM SENSOR position.
- 3 Match the dial pointer to the desired station marker. (See Fig. 2)
- 4 The FM or LW band changes automatically.

1) When the pointer matches only with the FM station marker:

- a) The light of IC301 (Photo Interrupter) is intercepted by the marker, bias voltage is applied to the base of Q303 through R305, and Q303 is turned on.
- b) The collector voltage of Q303 reduces and D203 is turned on.
- c) D203 is conducted, B+ voltage through R217 is decreased.
- d) D201 is opened, B+ voltage is not supplied to the terminal ②③ of IC201.
- e) FM circuit operates (The terminal ②③ of IC201 serves as a switch).

Note: When B+ voltage is applied to the terminal ②③ of IC201 through R217, R216 and D201, the receiver is in LW mode.

- f) At the same time, PL905 (FM indicator lamp) lights because of Q304 operating.

2) When the pointer matches only with the LW station marker:

- a) As the light of IC301 is not intercepted, Q303 and D203 are turned off. As a result, B+ voltage is applied to the terminal ②③ of IC201 through R217 and R216. On the other hand, the light

of IC302 is intercepted by the LW station marker.

- b) Q306 and Q305 are turned on.
- c) B+ voltage is applied to L208 (LW oscillator coil).
- d) LW circuit operates. When Q305 is on, PL906 (LW indicator lamp) simultaneously lights.

3) When the pointer matches simultaneously with both the FM and LW station markers:

- a) Q303 and Q304 are turned on by intercepting the light of IC301. On the other hand, the light of IC302 is also intercepted and the bias voltage is applied to the base of Q306, but because the collector voltage of Q304 is high, D304 is turned off. The emitter voltage of Q306 rises and B+ voltage is not applied to L208 (LW oscillator coil) and PL906. Consequently, only the FM station signal is received.

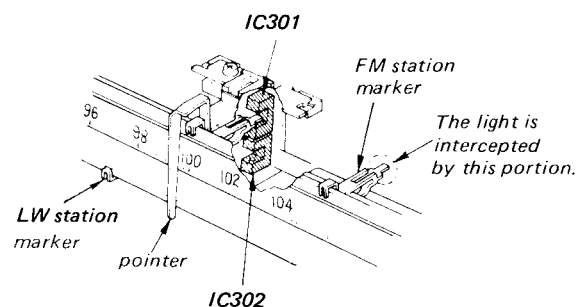


Fig. 2

Q302 and 301

Q302 operates to improve the rise time of PL905 (FM indicator lamp) or PL906 (LW indicator lamp) when tuning the receiver, and at the same time Q302 switches Q301. Q301 serves as a high-speed-muting switch which is turned on or off as soon as the station signal is tuned or detuned.

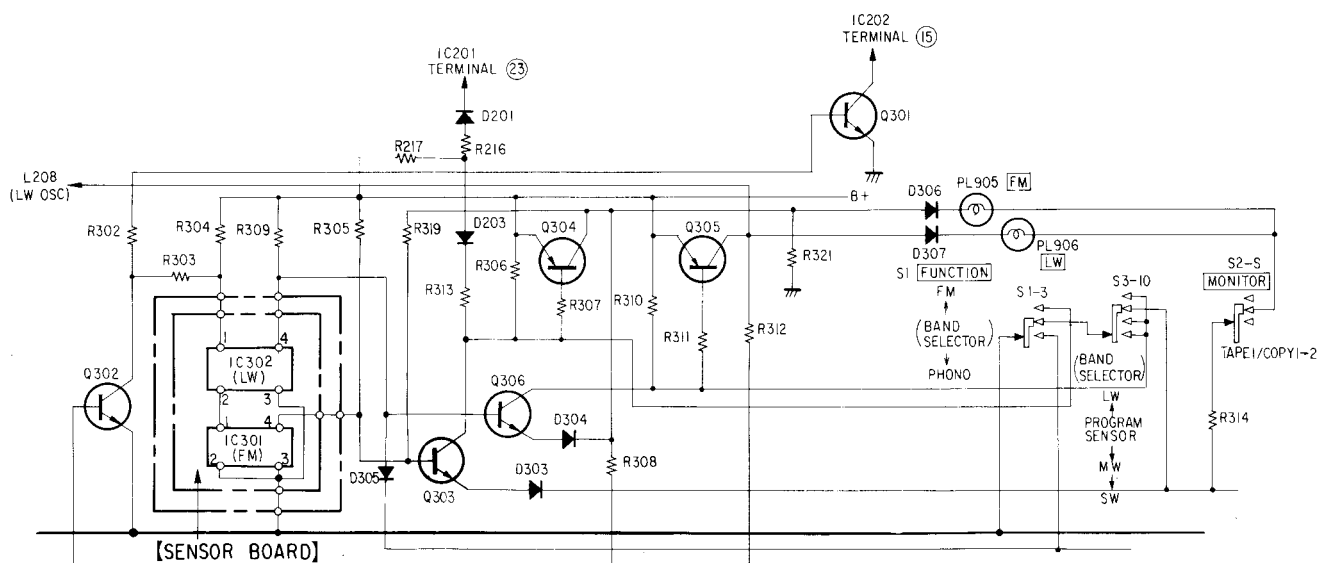


Fig. 1

IC201 (CX168), IC202 (CX178)

These two ICs form a system. Both of them are bipolar-linear-ICs. CX168 integrates 343 elements and CX178 integrates 260 elements. They include many functions and are improved upon the degree of integration now available as a linear-ICs for tuner use. They have high performance in FM reception and form a muting system having an FM muting attenuation of 90dB. In addition, because a muting circuit is newly employed in the AM circuit not only is there high performance in FM reception but AM station signal can be received with fine tone quality and sensitivity as with FM broadcasting station. As an additional function, they operate for FM/AM continuous station selection, FM/AM signal-strength meter output, FM/AM muting output switching and enforced AGC at FM reception.

CX168 Main Function

<FM>

- IF Amplifier
- Quadrature detector
- Signal-strength Meter Output
- Muting Signal Output
- AFC Output for Converter
- Multipath Signal Output
- Bandpass Control Circuit

<AM>

- RF Attenuator
- Mixer
- Oscillator
- IF Amplifier and AGC
- AM Detector
- Signal-Strength Meter Output
- Signal Generator for AM Muting

<General>

- Regulator
- FM/AM Switching
- Regulator Output

CX178 Main Function

<FM Stereo Demodulator>

- FM Stereo Demodulator
- Phase Detector
- Stereo Indicating Circuit
- VCO
- VCO ON/OFF Circuit


<General>

- Muting Gate
- Regulator
- Muting Canceler Circuit
- Pop-noise Canceler
- Hysteresis Circuit


Photo Interrupter (IC301, 302)

The terminals (1) and (2) of the photo interrupter operate as the light emitting diode. On the other hand, the terminals (3) and (4) operate as the photo detector. When the photo detector receives the light as shown in Fig. 3, the terminal between terminals (3) and (4) is a low-impedance. When light is intercepted by the marker, as shown in Fig. 4, it becomes high-impedance.

When the photo detector receives the light When light is intercepted

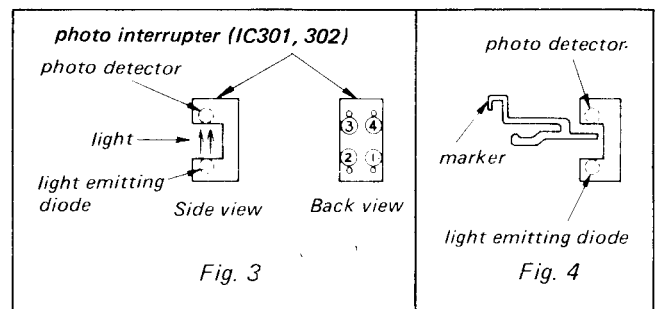






1-2. BLOCK DIAGRAM

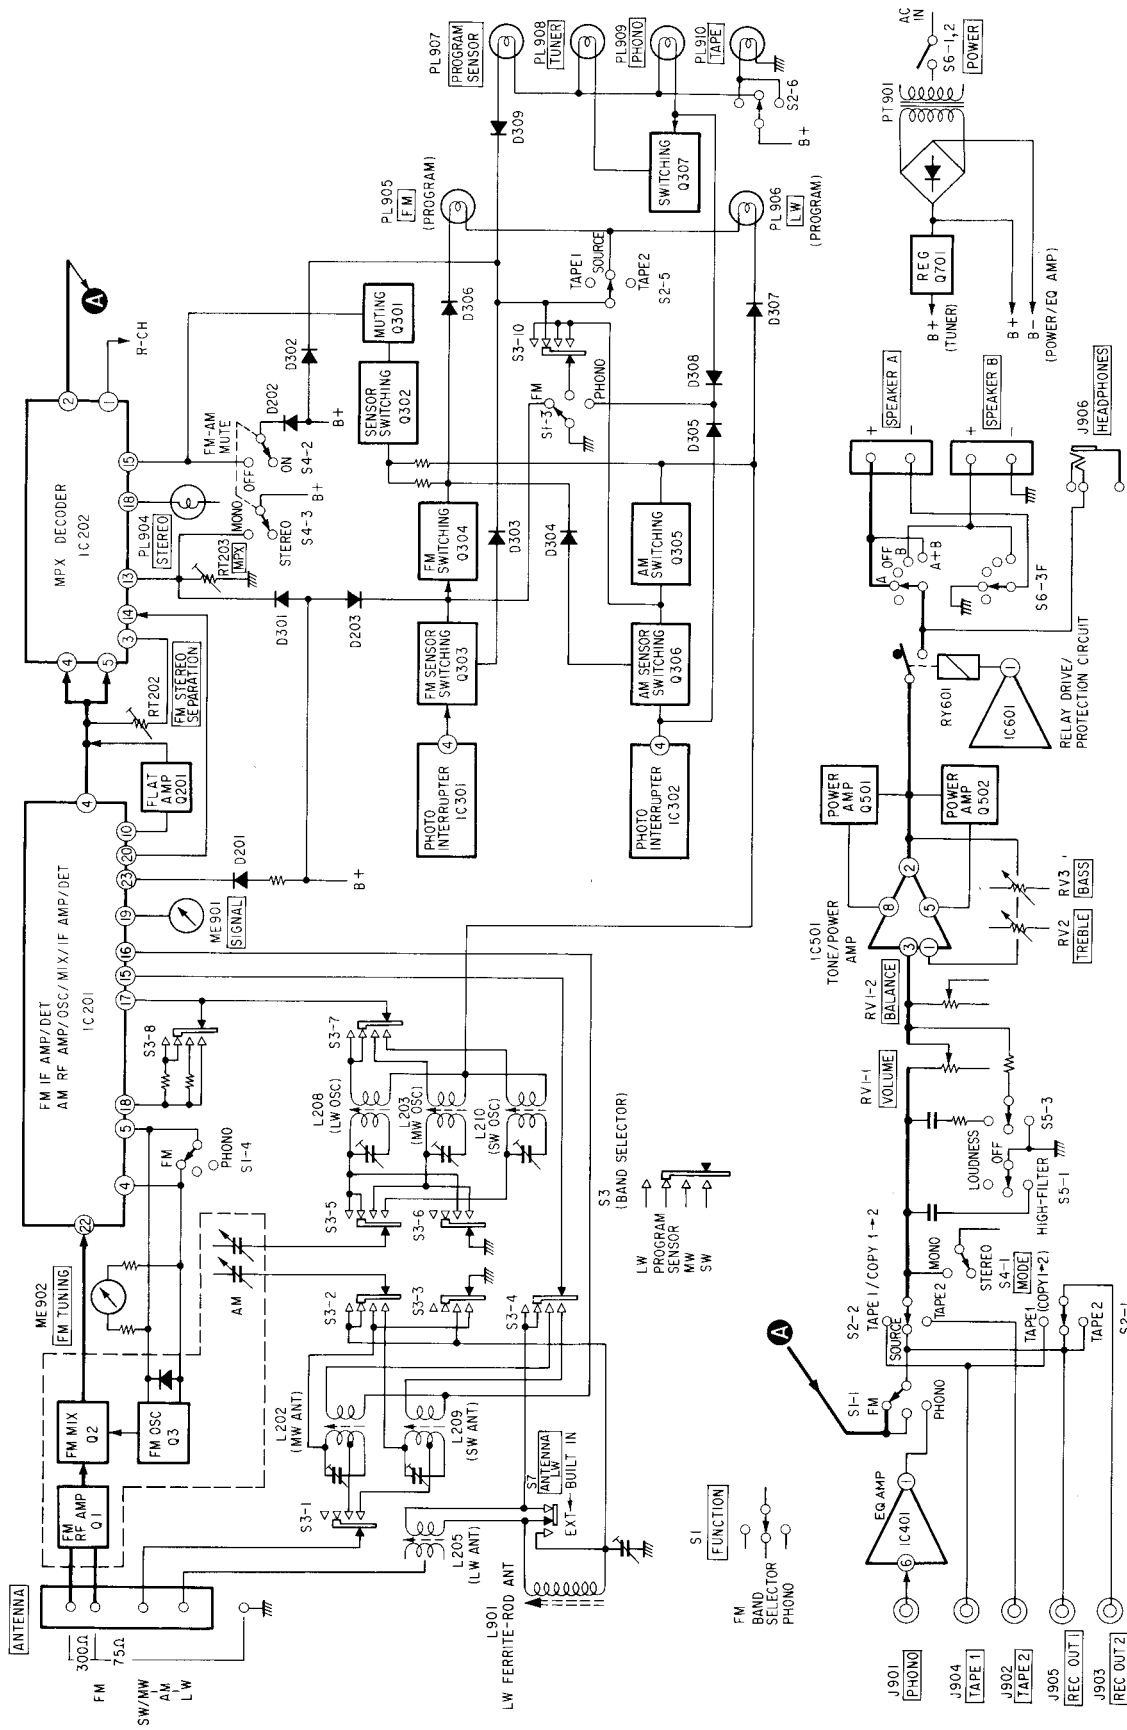


— R-CH SAME AS L-CH. —

SECTION 2 DISASSEMBLY

 
- Follow the disassembly procedure in the numerical order given.

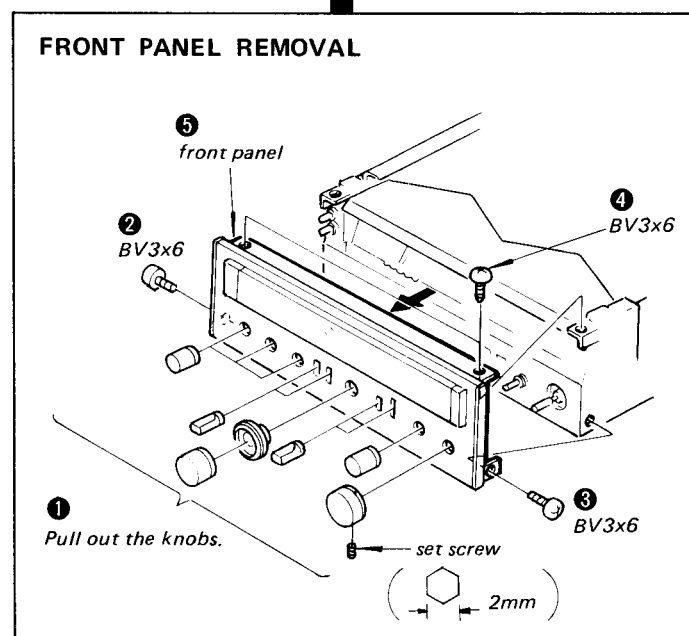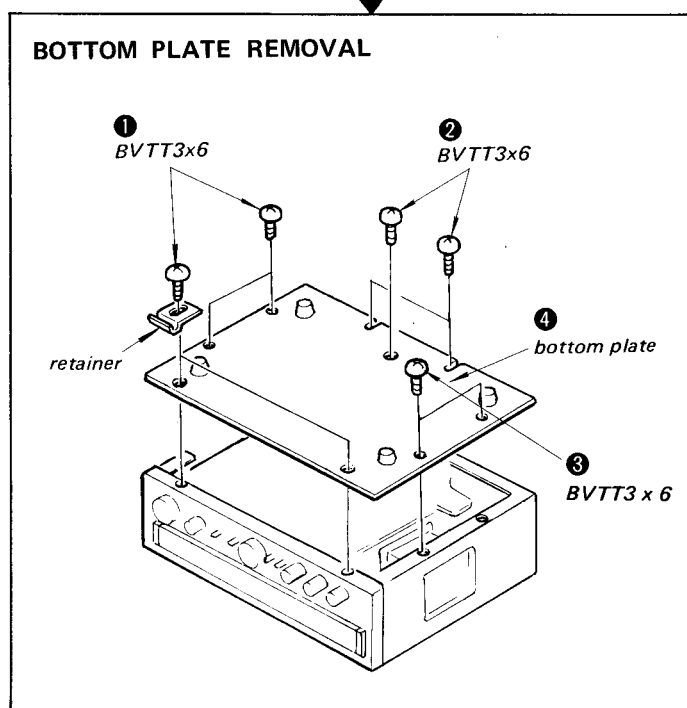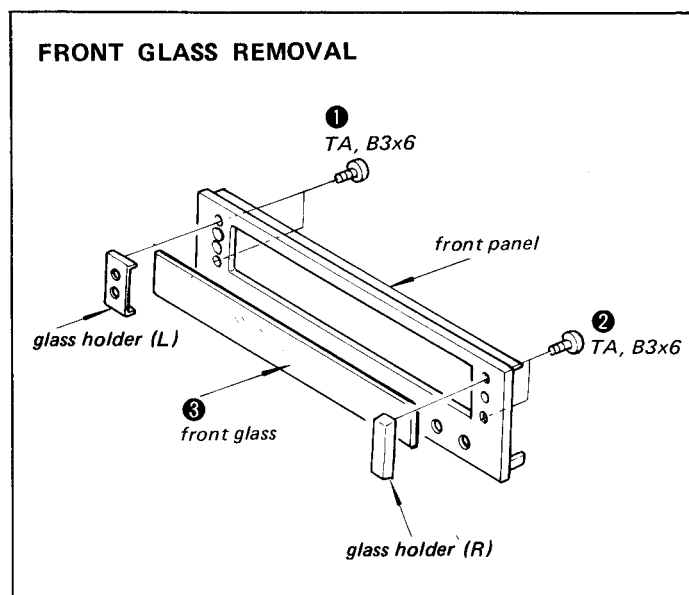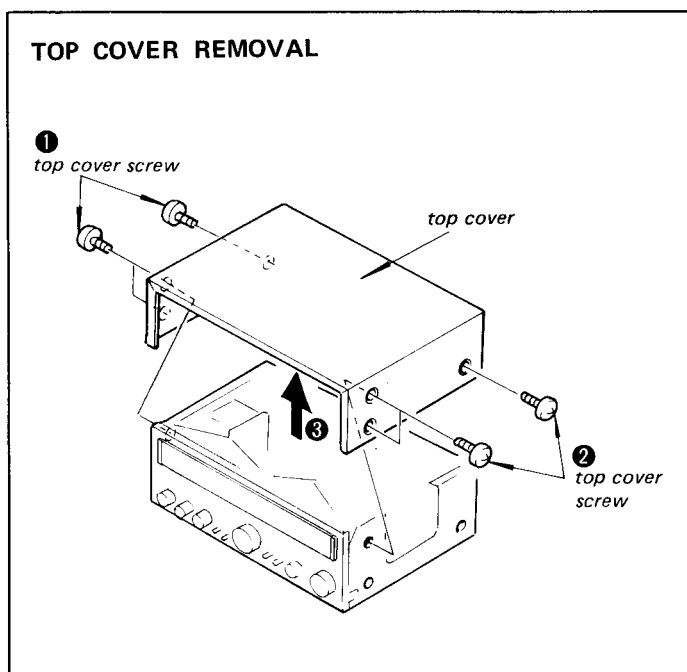


POWER TRANSISTOR (Q501, 502, 551, 552) REPLACEMENT (1)

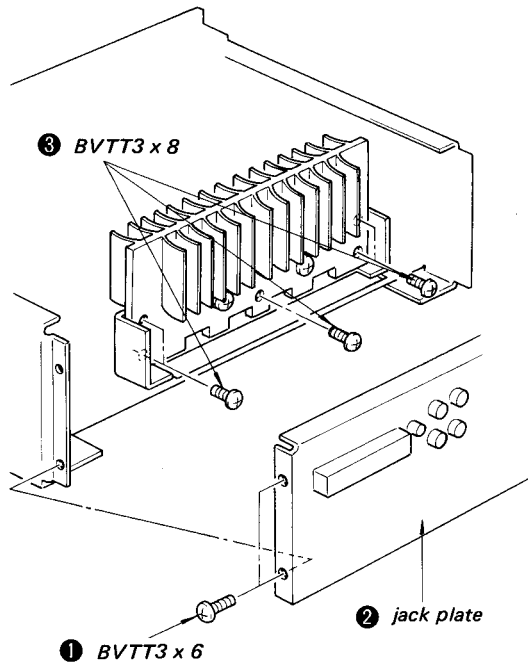

POWER TRANSISTOR (Q501, 502, 551, 552) REPLACEMENT (2)

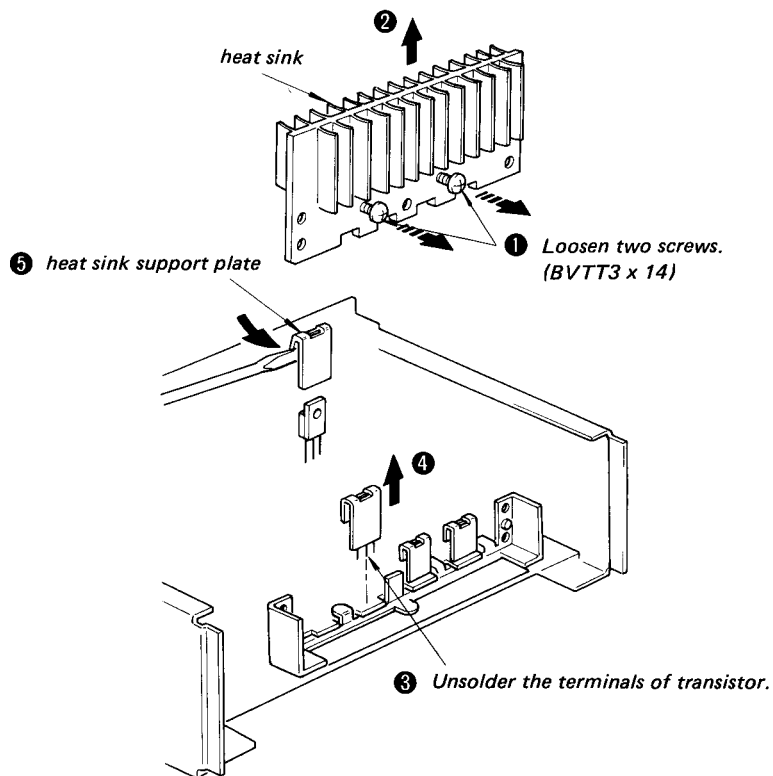


STR-414L

 


DIAL CORD STRINGING

1) Preparation

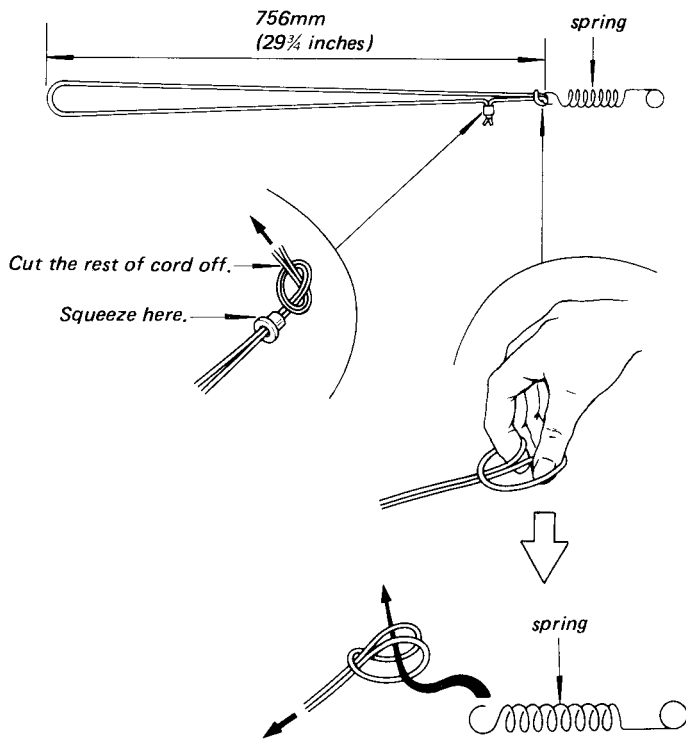


2) Stringing

Turn the tuning capacitor shaft fully clockwise and set the dial drum so that the slot is positioned as shown below.

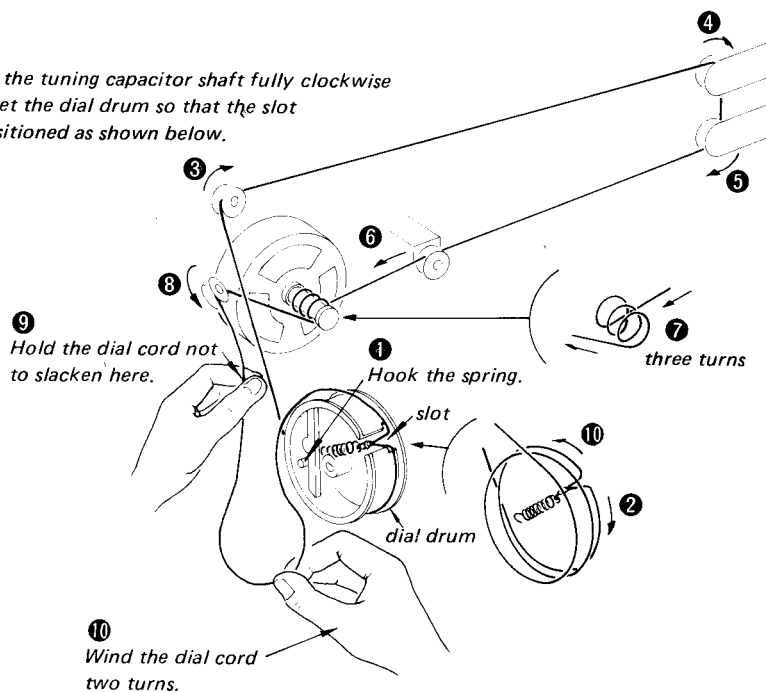

3) Dial Pointer Installation

Perform the mechanical-dial calibration by utilizing off-the-air local signals.

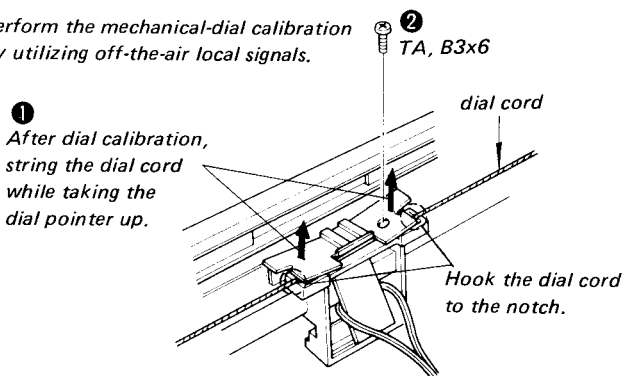

SECTION 3 ELECTRICAL ADJUSTMENTS


DC BIAS ADJUSTMENT

Setup:

1. Detune the set.
2. Perform this adjustment one minute or more after turning the power switch on.

Procedure:



1. Adjust RT501 (L-CH) and RT551 (R-CH) for a 9mV dc on the VOM.

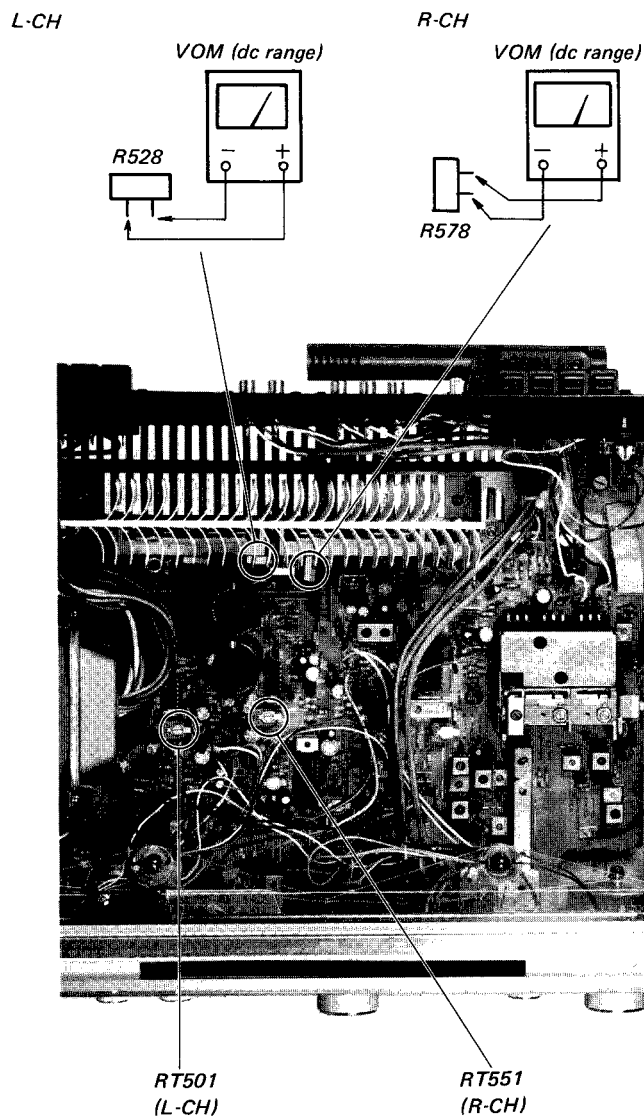


SW, MW SECTION

Setting: FUNCTION switch: (Band Selector)
 (Band Selector) : SW, MW

MW, SW

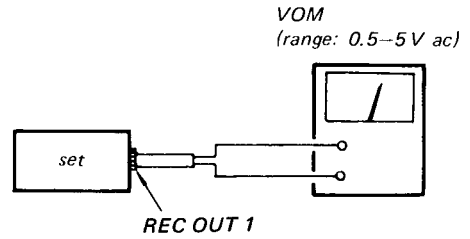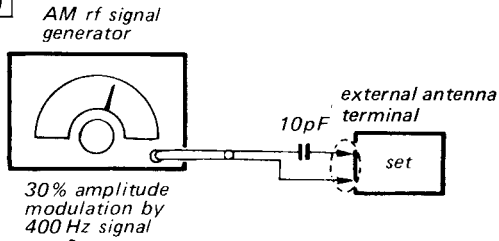

- Repeat the procedures in each adjustment several times, and the frequency coverage and tracking adjustments should be finally done by the trimmer capacitors.

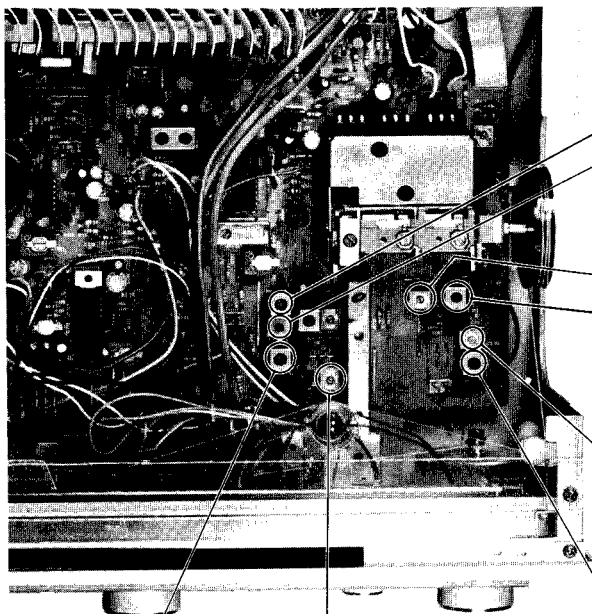

MW FREQUENCY COVERAGE ADJUSTMENT	
Adjust for a maximum reading on VOM.	
<i>L203</i>	520 kHz
<i>CT204</i>	1680 kHz



MW TRACKING ADJUSTMENT	
Adjust for a maximum reading on VOM.	
<i>CT203</i>	1400 kHz
<i>L202</i>	600 kHz

<i>L210</i>	<i>CT206</i>
5.5 MHz	16.1 MHz
Adjust for a maximum reading on VOM.	
SW FREQUENCY COVERAGE ADJUSTMENT	

<i>L209</i>	<i>CT205</i>
6 MHz	15 MHz
Adjust for a maximum reading on VOM.	
SW TRACKING ADJUSTMENT	

LW SECTION

Setting: FUNCTION switch: (Band Selector)
 (Band Selector): LW
 ANTENNA LW switch: BUILT IN

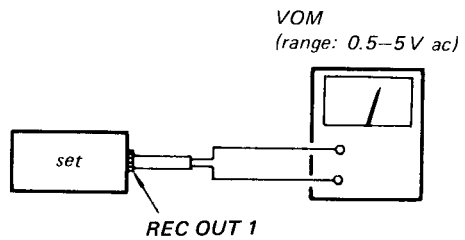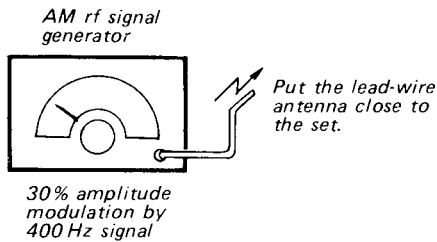

- Repeat the procedures in each adjustment several times, and the frequency coverage and tracking adjustments should be finally done by the trimmer capacitors.

LW EXT ANTENNA COIL ADJUSTMENT

AM rf signal generator

LW dummy antenna

30Ω

125pF

20μH

320Ω

400pF

Carrier frequency: 170 kHz
30% amplitude modulation by 400 Hz signal


external antenna terminal

set

VOM

REC OUT 1

1. Set the ANTENNA LW switch to EXT position.
2. Tune the set to 170 kHz and adjust L205 for a maximum reading on VOM.


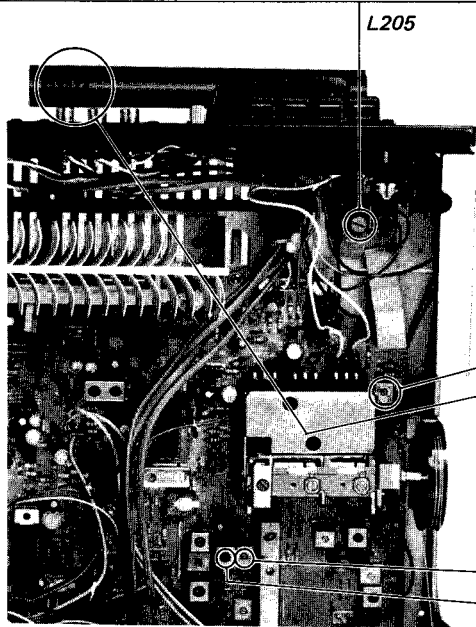


LW TRACKING ADJUSTMENT	
Adjust for a maximum reading on VOM.	
CT201	310 kHz
L901	170 kHz

LW FREQUENCY COVERAGE ADJUSTMENT	
Adjust for a maximum reading on VOM.	
CT202	365 kHz
L208	145 kHz

FM SECTION


Setting: FUNCTION switch: FM

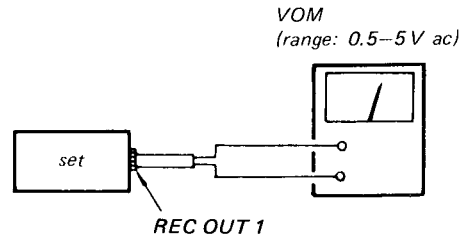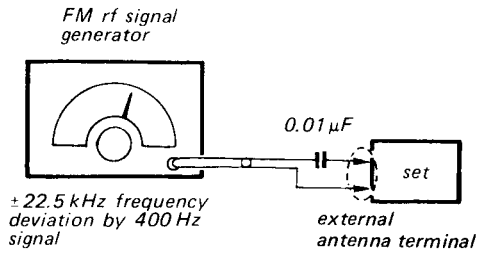

- Repeat the procedures in each adjustment several times, and the frequency coverage and tracking adjustments should be finally done by the trimmer capacitors.

FM FREQUENCY COVERAGE ADJUSTMENT	
Adjust for a maximum reading on VOM.	
87.1 MHz (87.5 MHz)	L3
108.5 MHz (108 MHz)	CT3

() : in West Germany

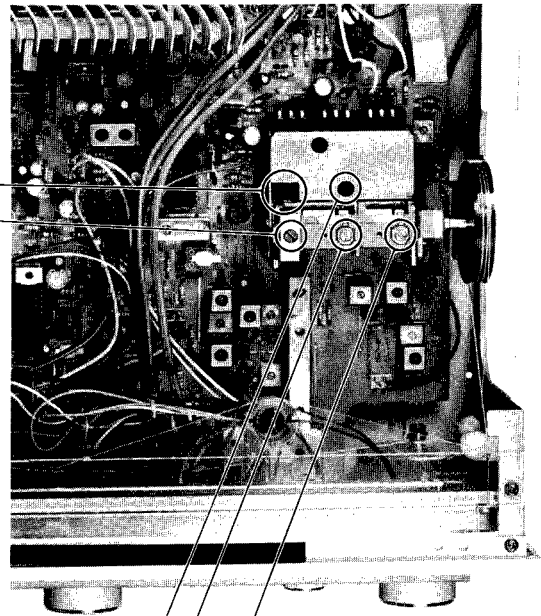


87.1 MHz (87.5 MHz)	L2
108.5 MHz (108 MHz)	CT2
	CT1
Adjust for a maximum reading on VOM.	
FM TRACKING ADJUSTMENT	

() : in West Germany

STR-414L STR-414L

FM DISCRIMINATOR ALIGNMENT 2

Procedure:

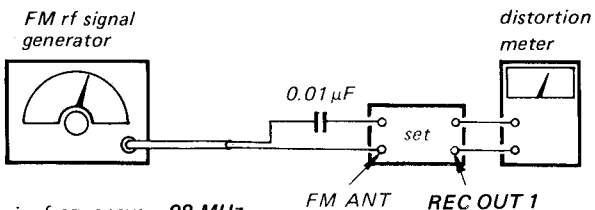

Carrier frequency: 98 MHz
 Output level: 1mV (60 dB)
 Modulation: 400 Hz, 75 kHz deviation (100%)


1. Set MODE switch to MONO.
2. Turn the core (secondary side) of IFT201 for a minimum distortion reading on the distortion meter.

IFT201
 (secondary side: black)

FM DISCRIMINATOR ALIGNMENT 1


Procedure:

1. Detune the set.
2. Turn the core (primary side) of IFT201 for null-point reading on the FM TUNING meter.

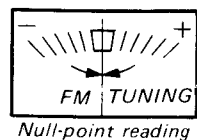

IFT201
 (primary side: blue)

FM IF ALIGNMENT

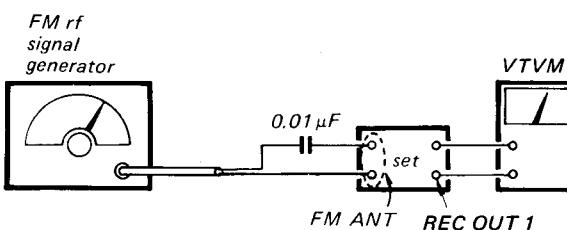

FM Signal Generator Setting:

Carrier frequency: 98 MHz
 Modulation: 400 Hz, 75 kHz deviation (100%)
 Output level: 12 μV (21.5dB)


Procedure:

Tune the set to 98 MHz and adjust IFT1 for a maximum reading on the VTVM.

IFT1

FM STEREO SEPARATION ADJUSTMENT

Procedure:

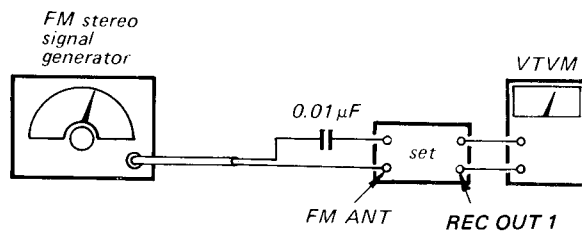

Carrier frequency: 98 MHz
 Output level: 1 mV (60 dB)
 Mode: Stereo
 Modulation:
 Audio (400 Hz): 67.5 kHz deviation (90%)
 Pilot (19 kHz): 7.5 kHz deviation (10%)

MODE switch: STEREO


FM stereo signal generator output channel	VTVM connection	VTVM reading
L-CH	L-CH	(A)
R-CH	L-CH	(B) Adjust RT202 for minimum reading.
R-CH	R-CH	(C)
L-CH	R-CH	(D) Adjust RT202 for minimum reading.

L-CH Stereo separation: (A) - (B)
 R-CH Stereo separation: (C) - (D)

The separations of both channels should be equal.

RT202


RT203

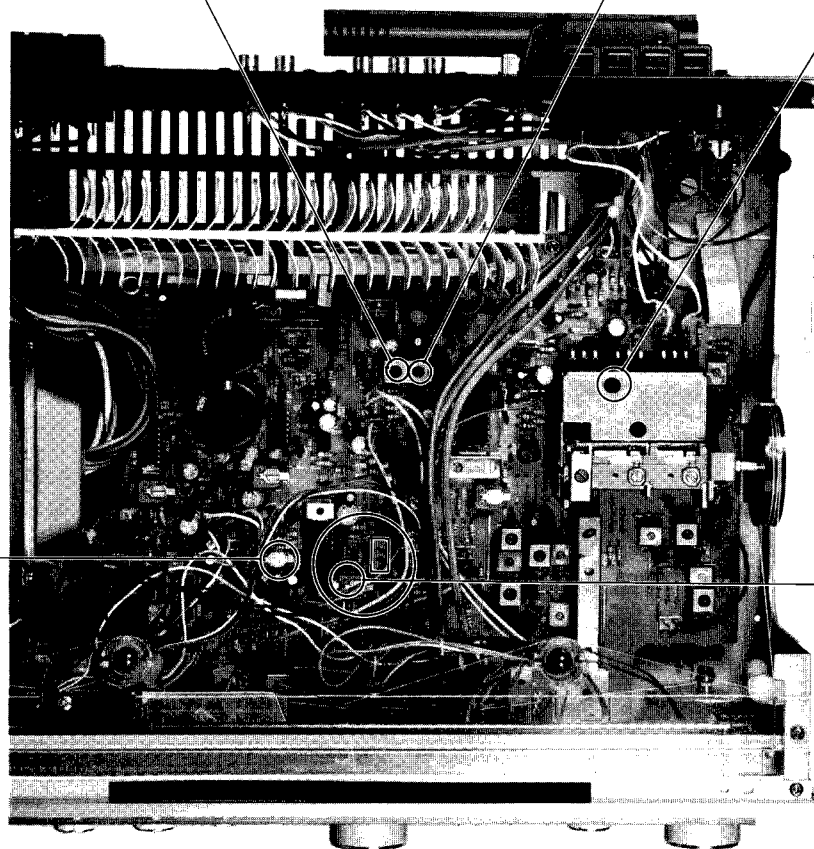

MPX ADJUSTMENT

A) Regular Method

Procedure:


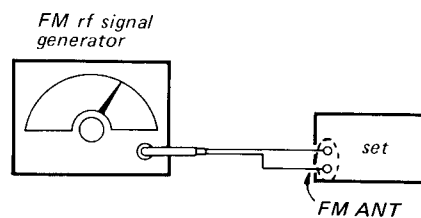


Carrier frequency: 98 MHz
 Modulation: no modulation
 Output level: 1 mV (60 dB)

B) Simple Method

Procedure:

1. Tune the set to the FM stereo broadcasting signal.
2. Turn RT203 clockwise or counterclockwise and memorize the lighting-up range of STEREO lamp.
3. Secure RT203 at the center in lighting-up range of both turns as shown below.

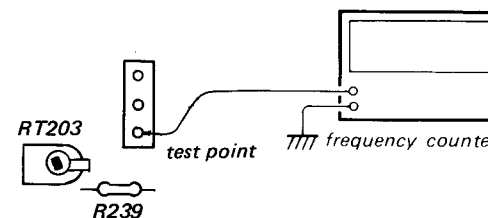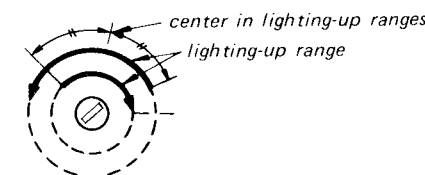


1. Tune the set to 98 MHz.
2. Adjust RT203 for 76 kHz ±100Hz on the counter.

FM DISCRIMINATOR ALIGNMENT 1


Procedure:

1. Detune the set.
2. Turn the core (primary side) of IFT201 for null-point reading on the FM TUNING meter.

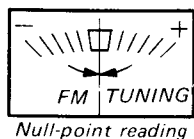

IFT201
(primary side: blue)

FM IF ALIGNMENT

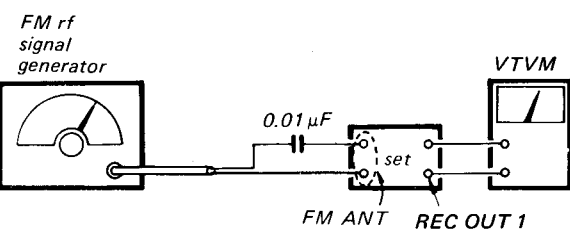

FM Signal Generator Setting:

- Carrier frequency: 98 MHz
- Modulation: 400 Hz, 75 kHz deviation (100%)
- Output level: 12 μV (21.5dB)


Procedure:

Tune the set to 98 MHz and adjust IFT1 for a maximum reading on the VTVM.

MPX ADJUSTMENT

A) Regular Method

Procedure:


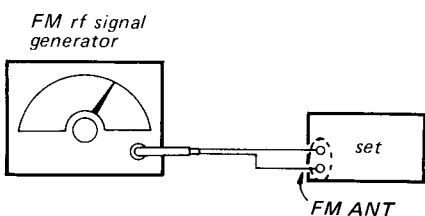


- Carrier frequency: 98 MHz
- Modulation: no modulation
- Output level: 1 mV (60 dB)

B) Simple Method



Procedure:

1. Tune the set to the FM stereo broadcasting signal.
2. Turn RT203 clockwise or counterclockwise and memorize the lighting-up range of STEREO lamp.
3. Secure RT203 at the center in lighting-up range of both turns as shown below.

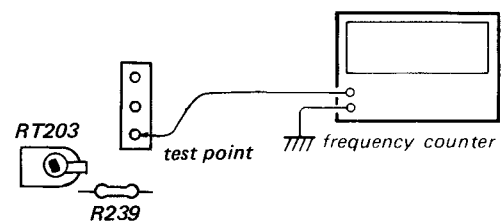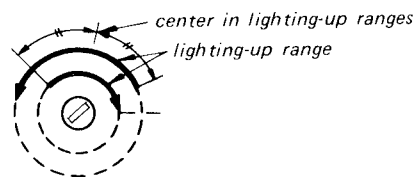


1. Tune the set to 98 MHz.
2. Adjust RT203 for 76 kHz ±100Hz on the counter.


• **IC Block Diagrams**

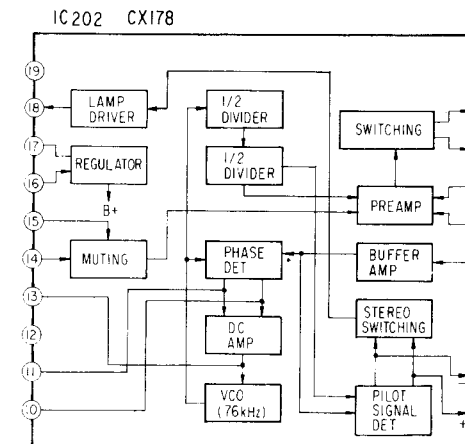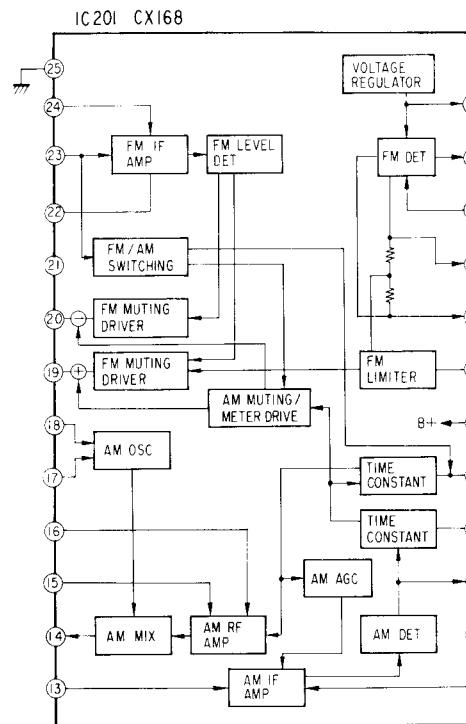



IC601 HAI2002

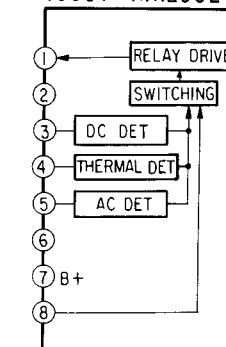

IC401, 451 HAI457

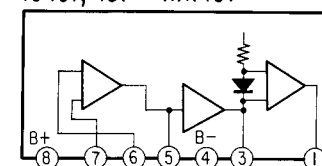

IC501, 551 CX171

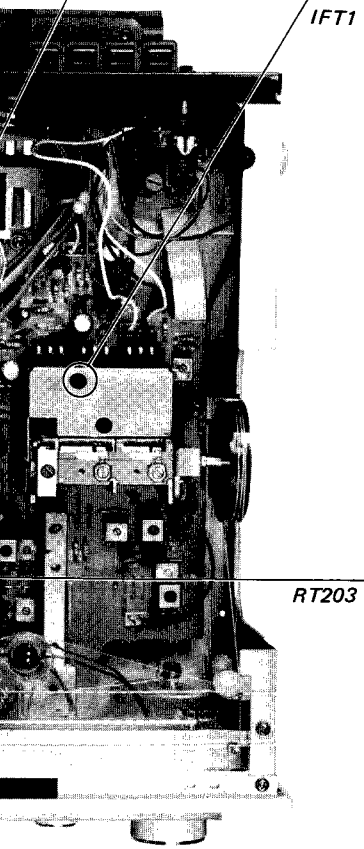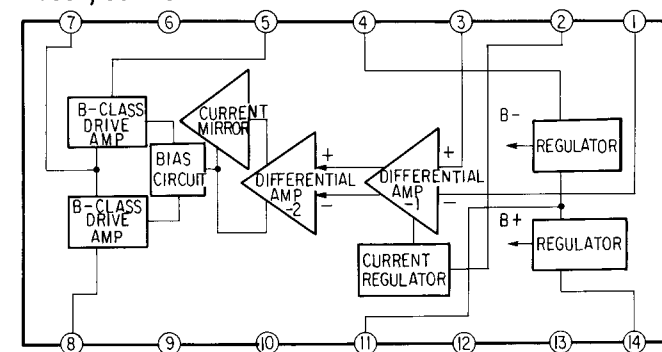


SECTION 4 DIAGRAMS

4-1. MOUNTING DIAGRAM — Conductor Side —


- IC Block Diagram: See page 15.
- Replacement Semiconductors
For replacement, use semiconductors except in ().

IC201: CX168

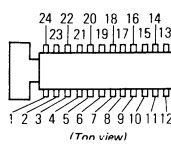


Q201

Q301-303 : 2SC1364 (2SC945)
Q306, 307

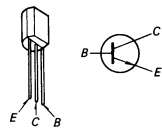


D201-203

 D301-309 : 1S1555
D502, 504, 506-511
D552, 554, 556-561
D602 : 1T22AM (1T22A)
D501, 551 : 1S2076A
D503, 505 : 1S2076A
D553, 555




IC202: CX178

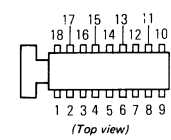


Q304, 305: 2SA678


(2SA844)

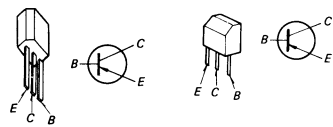

IC301, 302: SPI201

 


Q501, 551: 2SA771

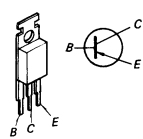


D601: 10E2

(RA12)

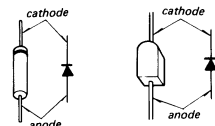


D701-704: 10E2

(SIB01-02)

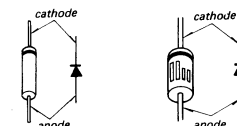


IC401, 451: HA1457

 IC601: HA12002



Q502, 552: 2SC1986C (2SC1986)

Q701: 2SC1173

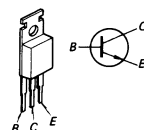


D705, 706: EQB01-22 (EQA01-22R)

D707: EQB01-16 (EQA01-16R)




IC501, 551: CX171

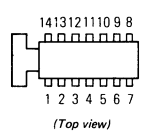

Note:


- [Symbol] : indicates side identified with part number.
- [Symbol] : part mounted on the conductor side.
- Color code of sleeving over the end of the jacket.

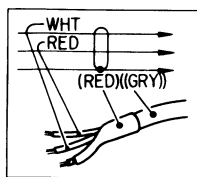


- [Symbol] : B+ pattern.
- [Symbol] : B- pattern.
- Signal Path
---> : L-CH
---> : R-CH

TERMINAL No.	FM no mark	FM STEREO ()	FM MUTING ON ()	AM MUTING ON ()	TERMINAL No.	FM no mark	FM STEREO ()	FM MUTING ON ()	AM MUTING ON ()
1	7.8V	7.8V	7.8V	7.8V	10	2.8V	2.8V	2.8V	2.8V
2	7.7V	7.7V	7.7V	7.7V	11	2.8V	2.8V	2.8V	2.8V
3	4V	4V	4V	4V	12	0V	0V	0V	0V
4	4V	4V	4V	4V	13	4.8V	2.6V	2.6V	6.8V
5	4V	4V	4V	4V	14	0.05V	5V	1V	0.05V
6	0V	0V	0V	0V	15	13V	2.1V	0.04V	0.04V
7	0V	0V	0V	0V	16	12.5V	12.5V	13.5V	13.5V
8	2.8V	2.75V	2.8V	2.8V	17	4V	4V	4V	4V
9	2.8V	2.75V	2.8V	2.8V	18	15.5V	0.25V	15.5V	15.5V


Q, IC	D
552, 551	
502, 501	
IC451, IC401	705
702, 701	
704, 703	
707	
706	
701	602
561, 560	
IC201	552
556, 555	
553	
511, 510	
506, 502	
505, 503	
IC551	551
IC501	201
559	
201	509
203	
IC202	501
301	
554	
504	
507	
557	
558, 508	
601	
302, 303	
306, 305	
301	
304	
303	
306, 307	
305	
302	
IC601	202
IC301	309
IC302	309
307	

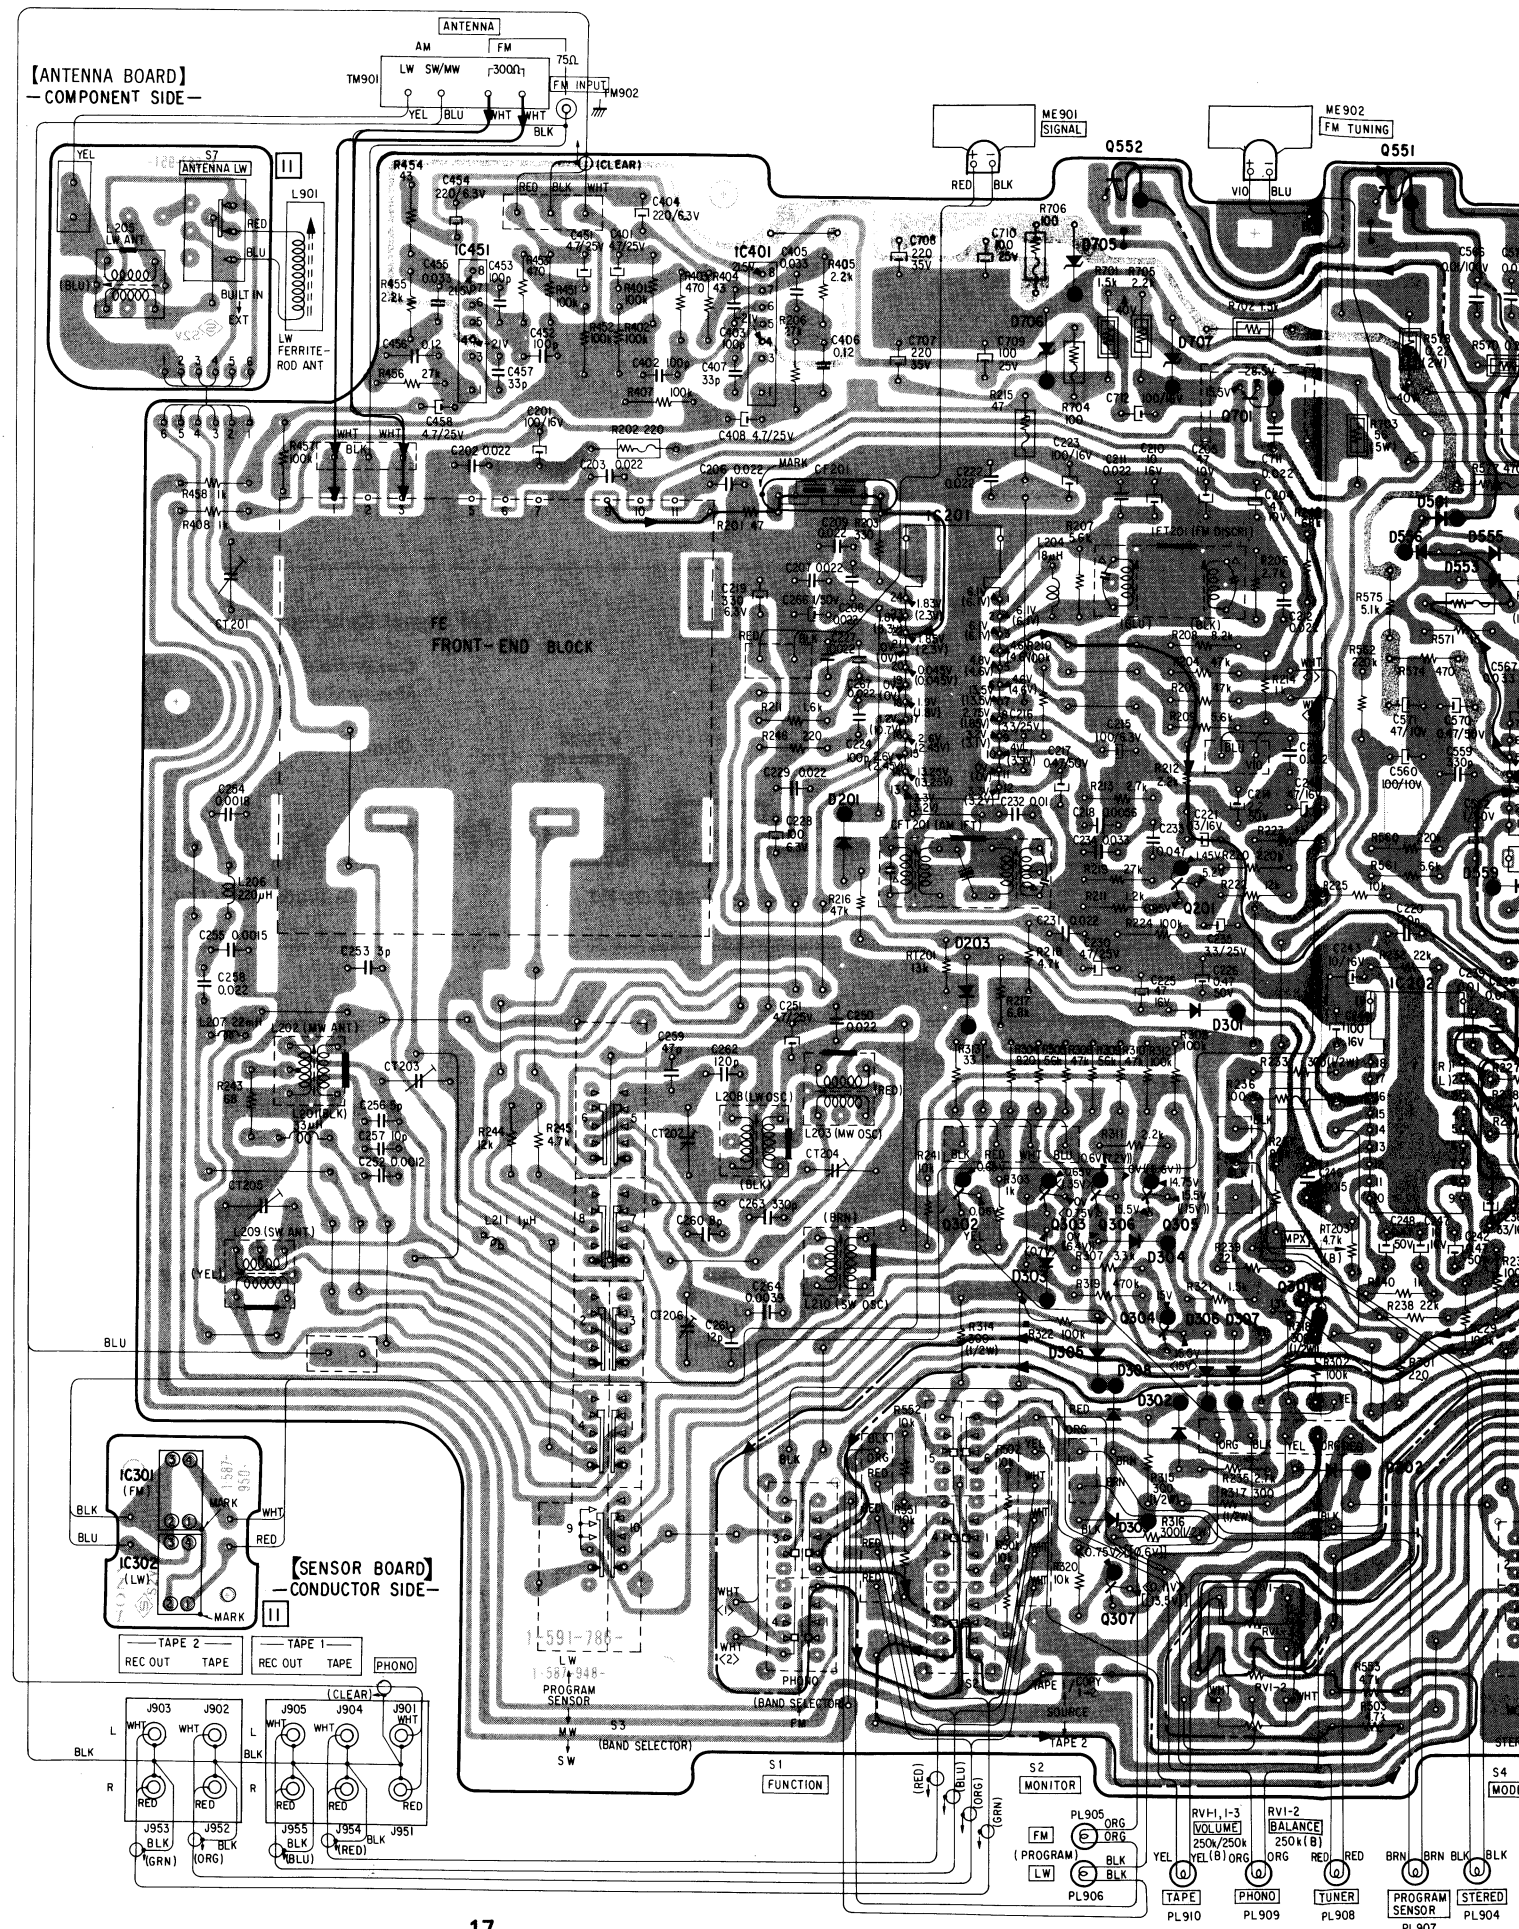


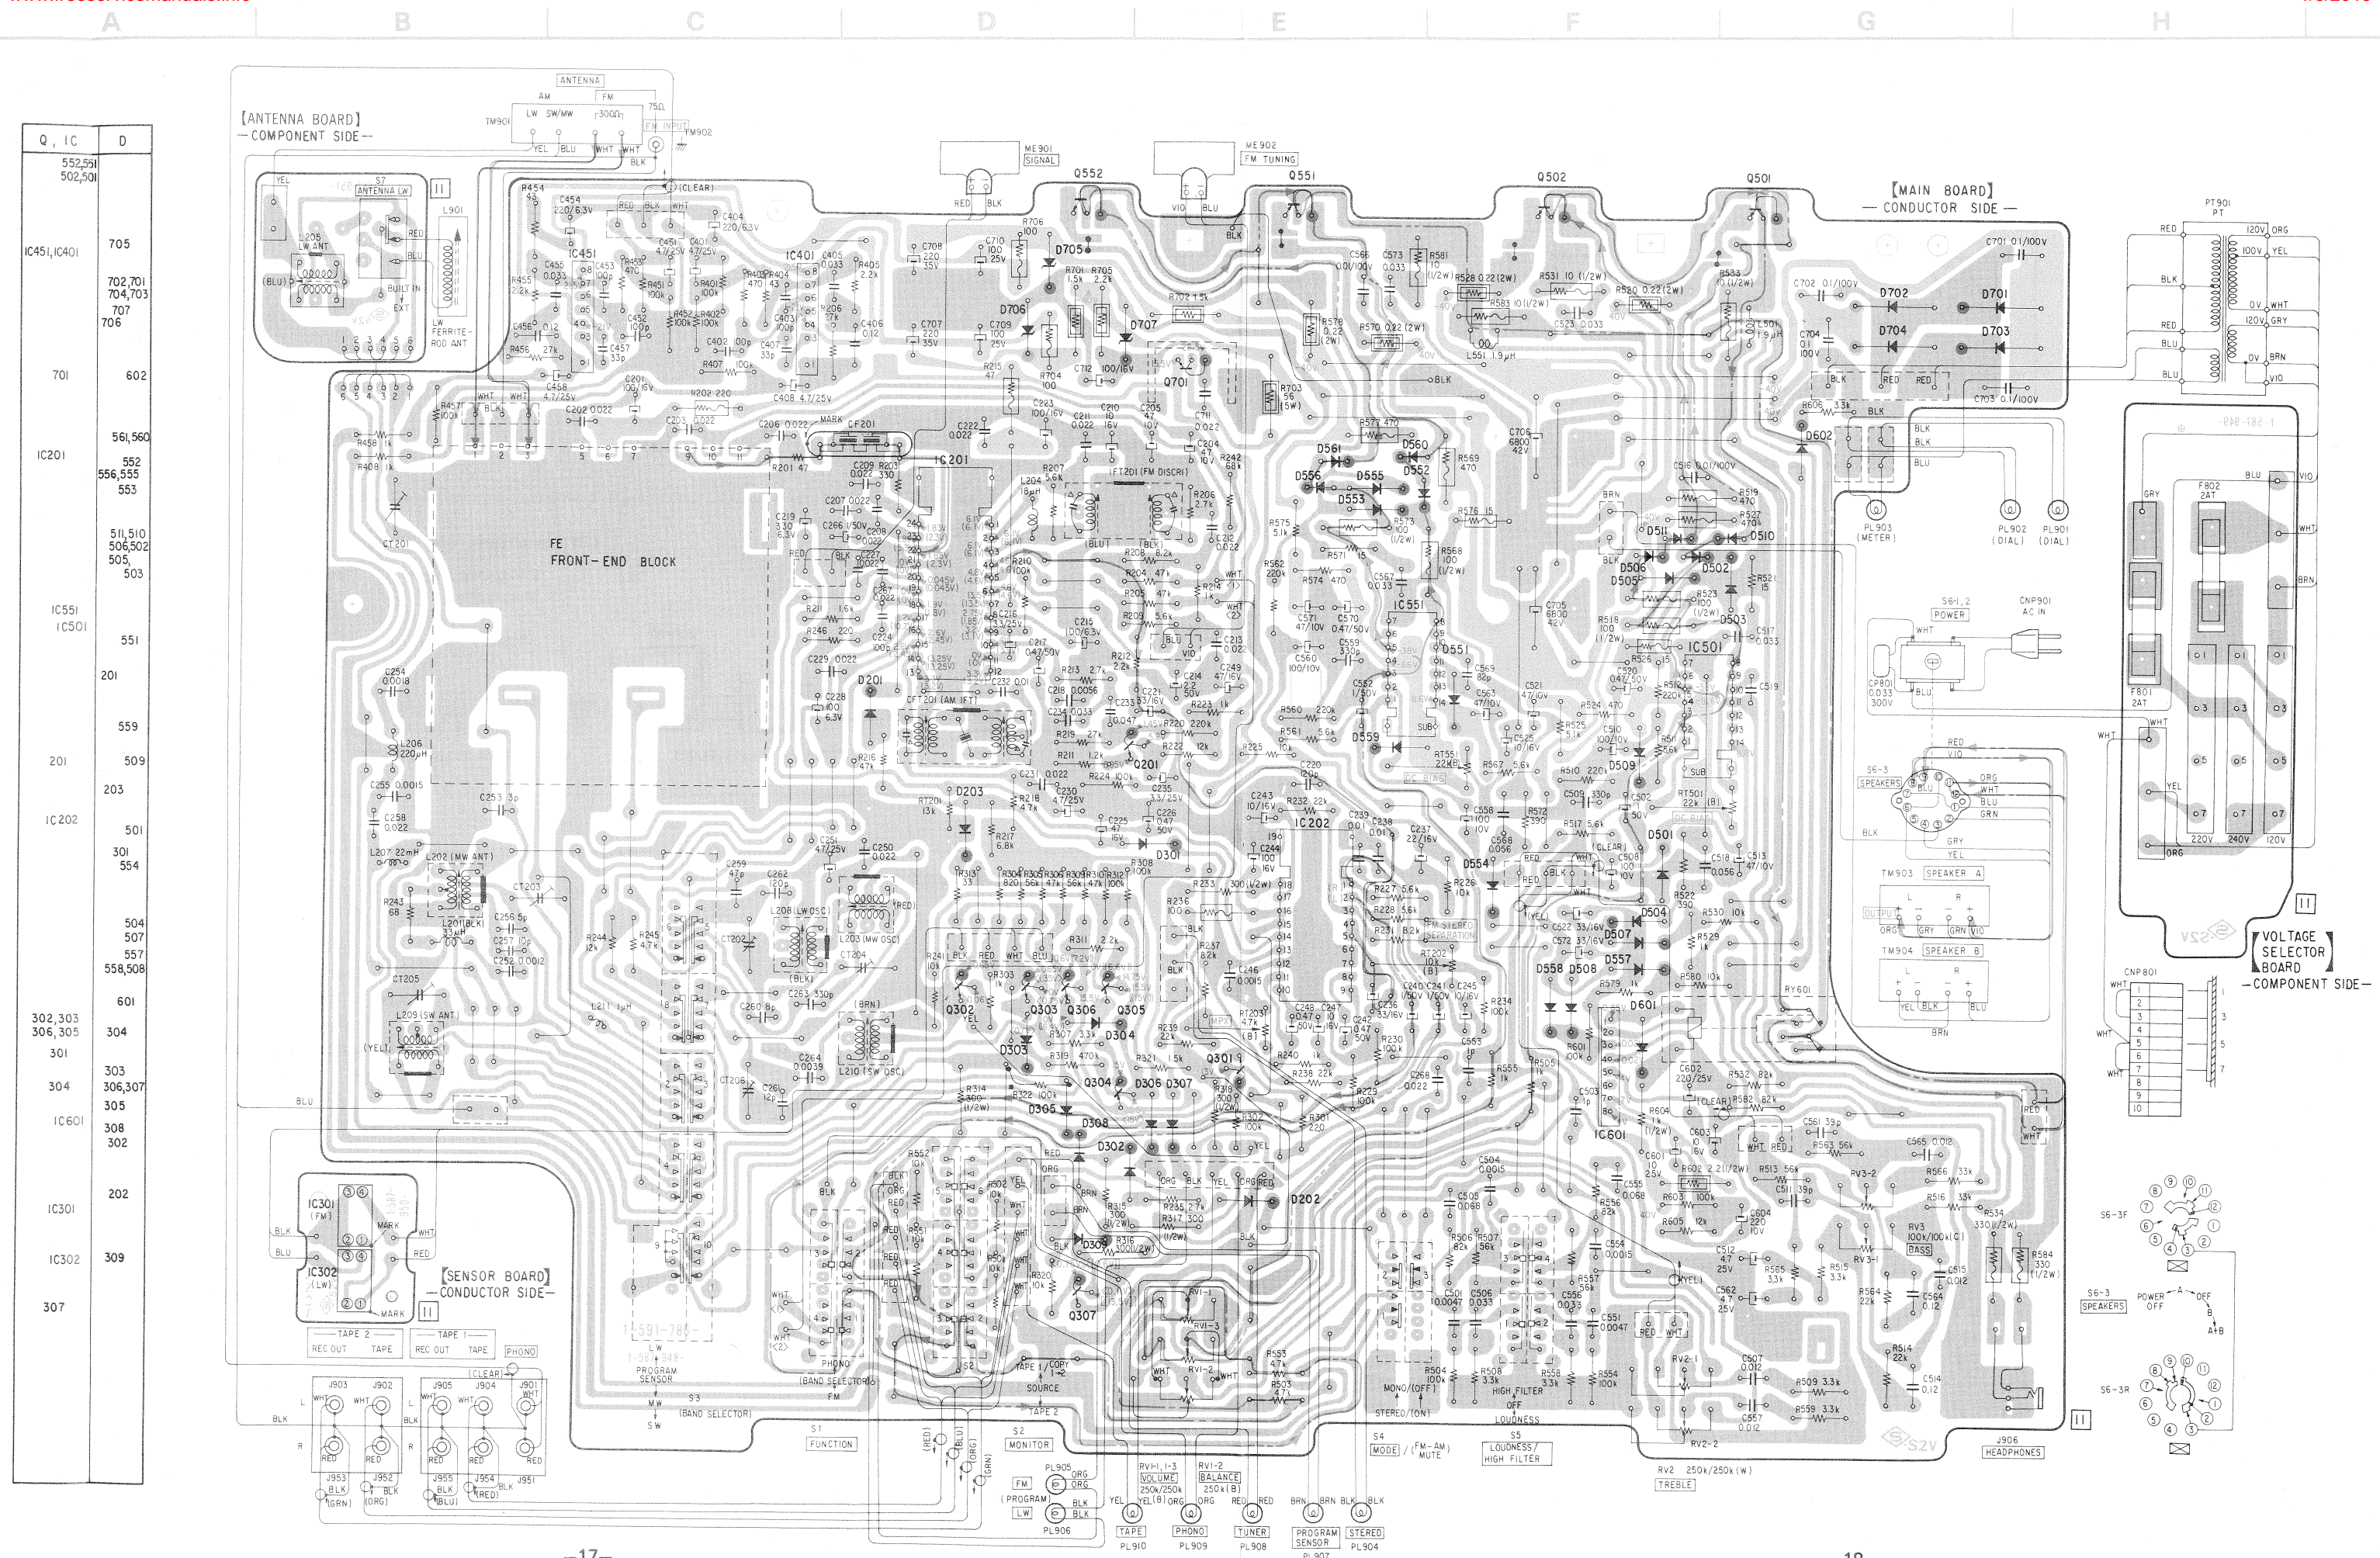

Q, IC	D
552,551 502,501	705
IC451, IC401	702,701 704,703 706
701	602
561,560	IC201
552 556,555 553	551
511,510 506,502 505, 503	IC501
IC501	IC501
201	201
559	201
201	203
IC202	501
301 554	301 554
504 507 557 558,508	504 507 557 558,508
601	601
302,303 306,305	304
301	303
304	306,307
305	305
IC601	308 302
IC301	202
IC302	309
307	307

4-2. SCHEMATIC DIAGRAM

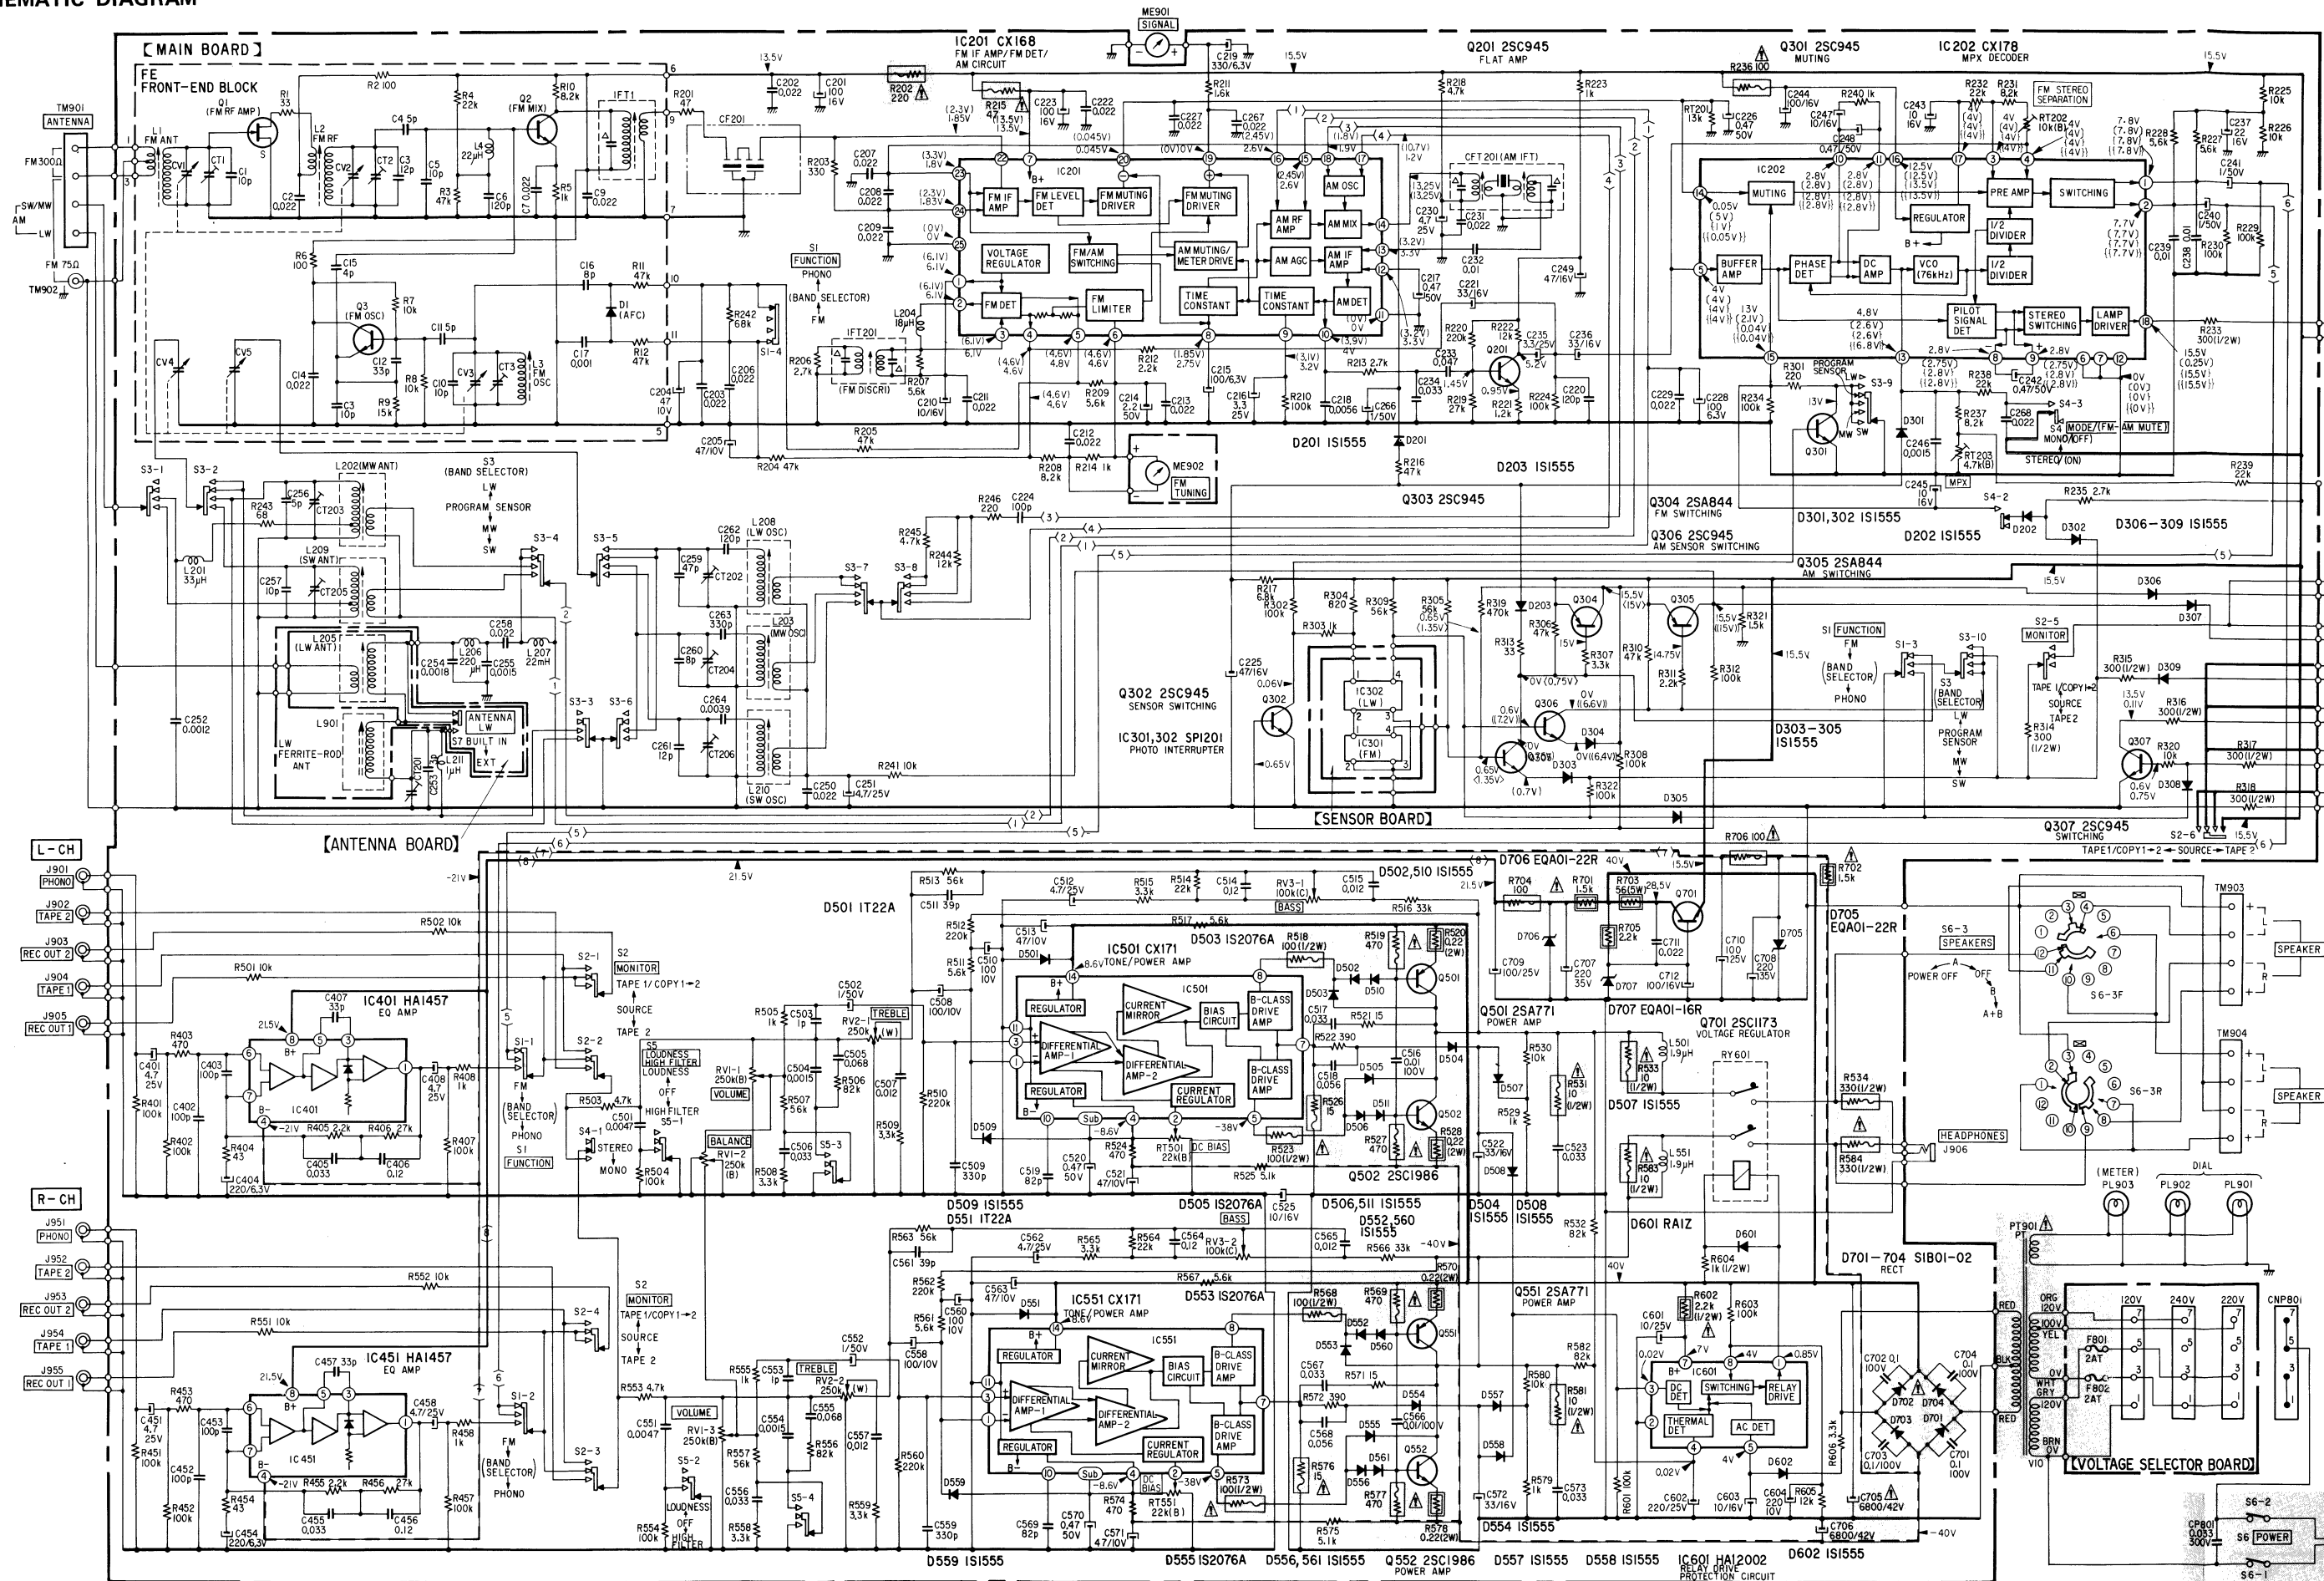

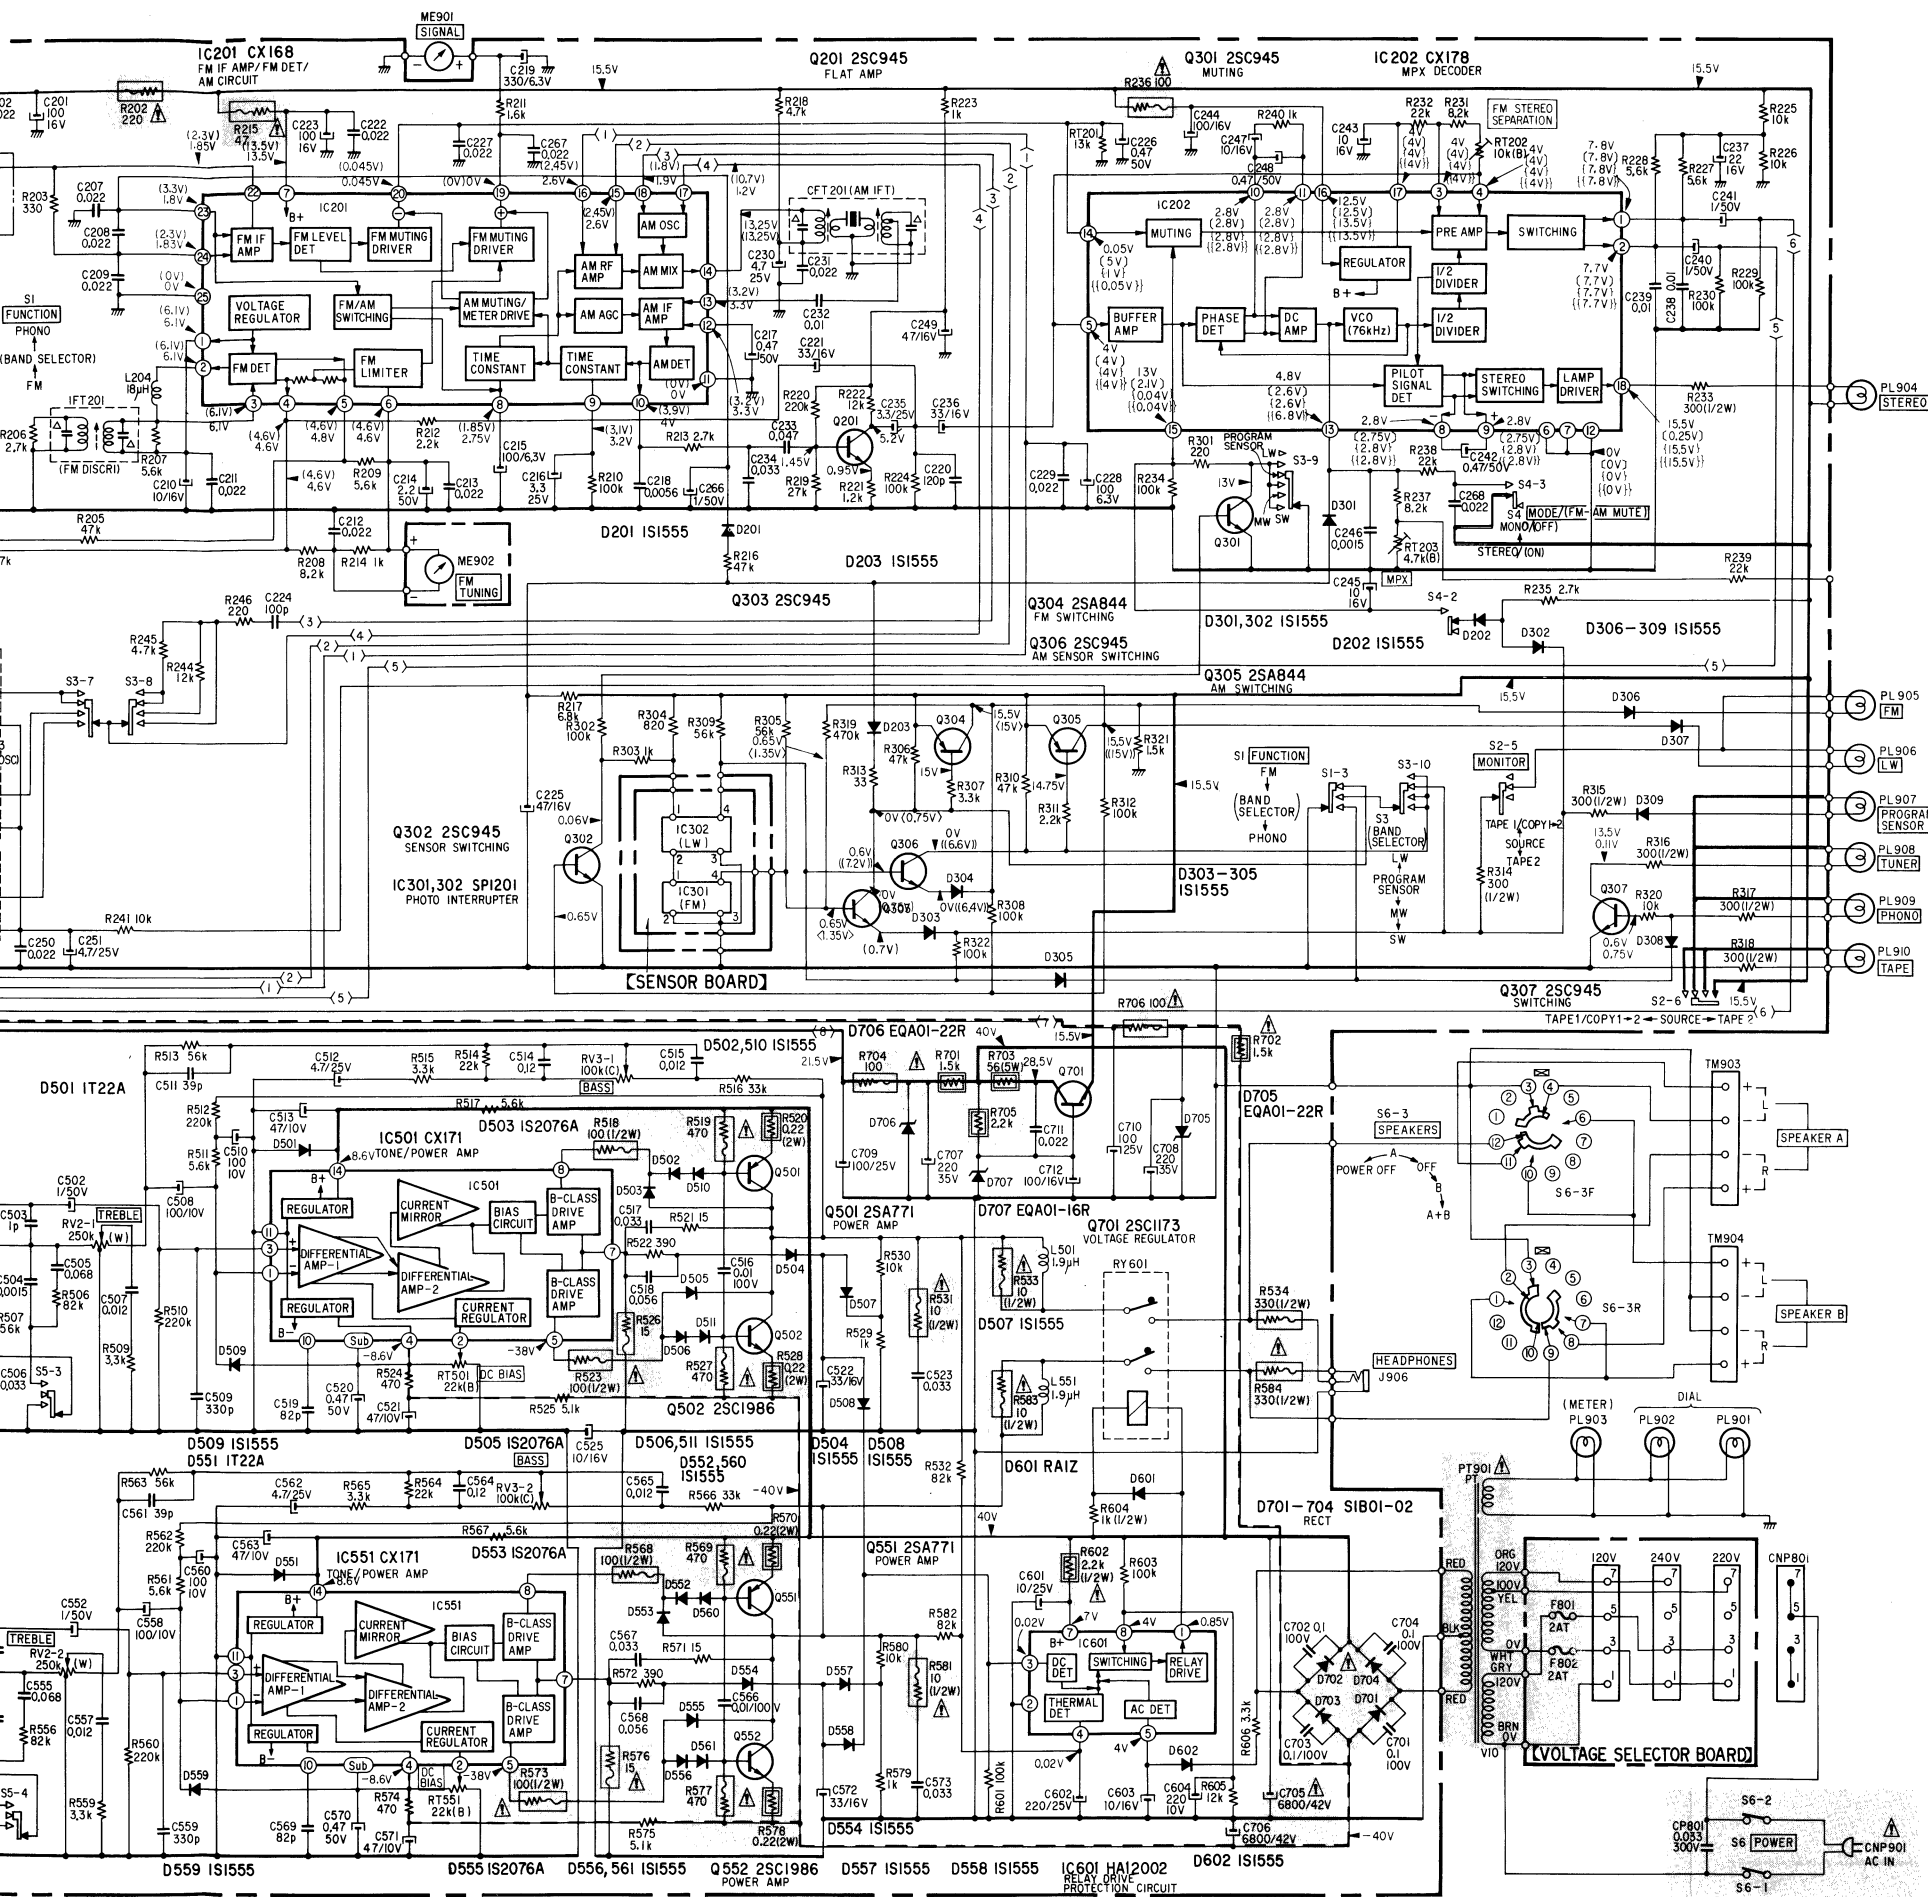

Note:

- All capacitors are in μF unless otherwise noted. $\text{pF} : \mu\text{F}$ 50WV or less are not indicated except for electrolytics.
- All resistors are in ohms, $\frac{1}{4}\text{W}$ unless otherwise noted. $\text{k}\Omega : 1000\Omega$; $\text{M}\Omega : 1000\text{k}\Omega$
- : fusible resistor.
- : nonflammable resistor.
- : B+ bus.
- : B- bus.
- : panel designation.
- : adjustment for repair.
- Voltages are dc with respect to ground unless otherwise noted.
- Readings are taken under no-signal (detuned) conditions with a VOM (20 $\text{k}\Omega/\text{V}$).
- () : AM << >> : TUNER PROGRAM
- [] : FM STEREO (()) : TAPE, PHONO
- < > : PROGRAM FM { } : FM MUTING ON
- (()) : PROGRAM LW {{ }} : AM MUTING ON
- no mark: FM MONO
- Voltage variations may be noted due to normal production tolerances.
- Switch

Ref. No.	Switch	Position
S1	FUNCTION	BAND SELECTOR
S2	MONITOR	SOURCE
S3	Band Selector	PROGRAM SENSOR
S4	MODE/(FM-AM MUTE)	STEREO/(ON)
S5	LOUDNESS/HIGH FILTER	OFF
S6	POWER/SPEAKERS	(ON)/A
S7	ANTENNA LW	BUILT IN

Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.

E

D

C

B

A

1


2

3

4

Note:


- Items with no part number and/or no description are not stocked because they are seldom required for routine service.
- All screws are Phillips (cross recess) type unless otherwise noted.
- (□□□) shows the number of coils in spring.
- Circled letters (A to Z) are applicable to European models only.

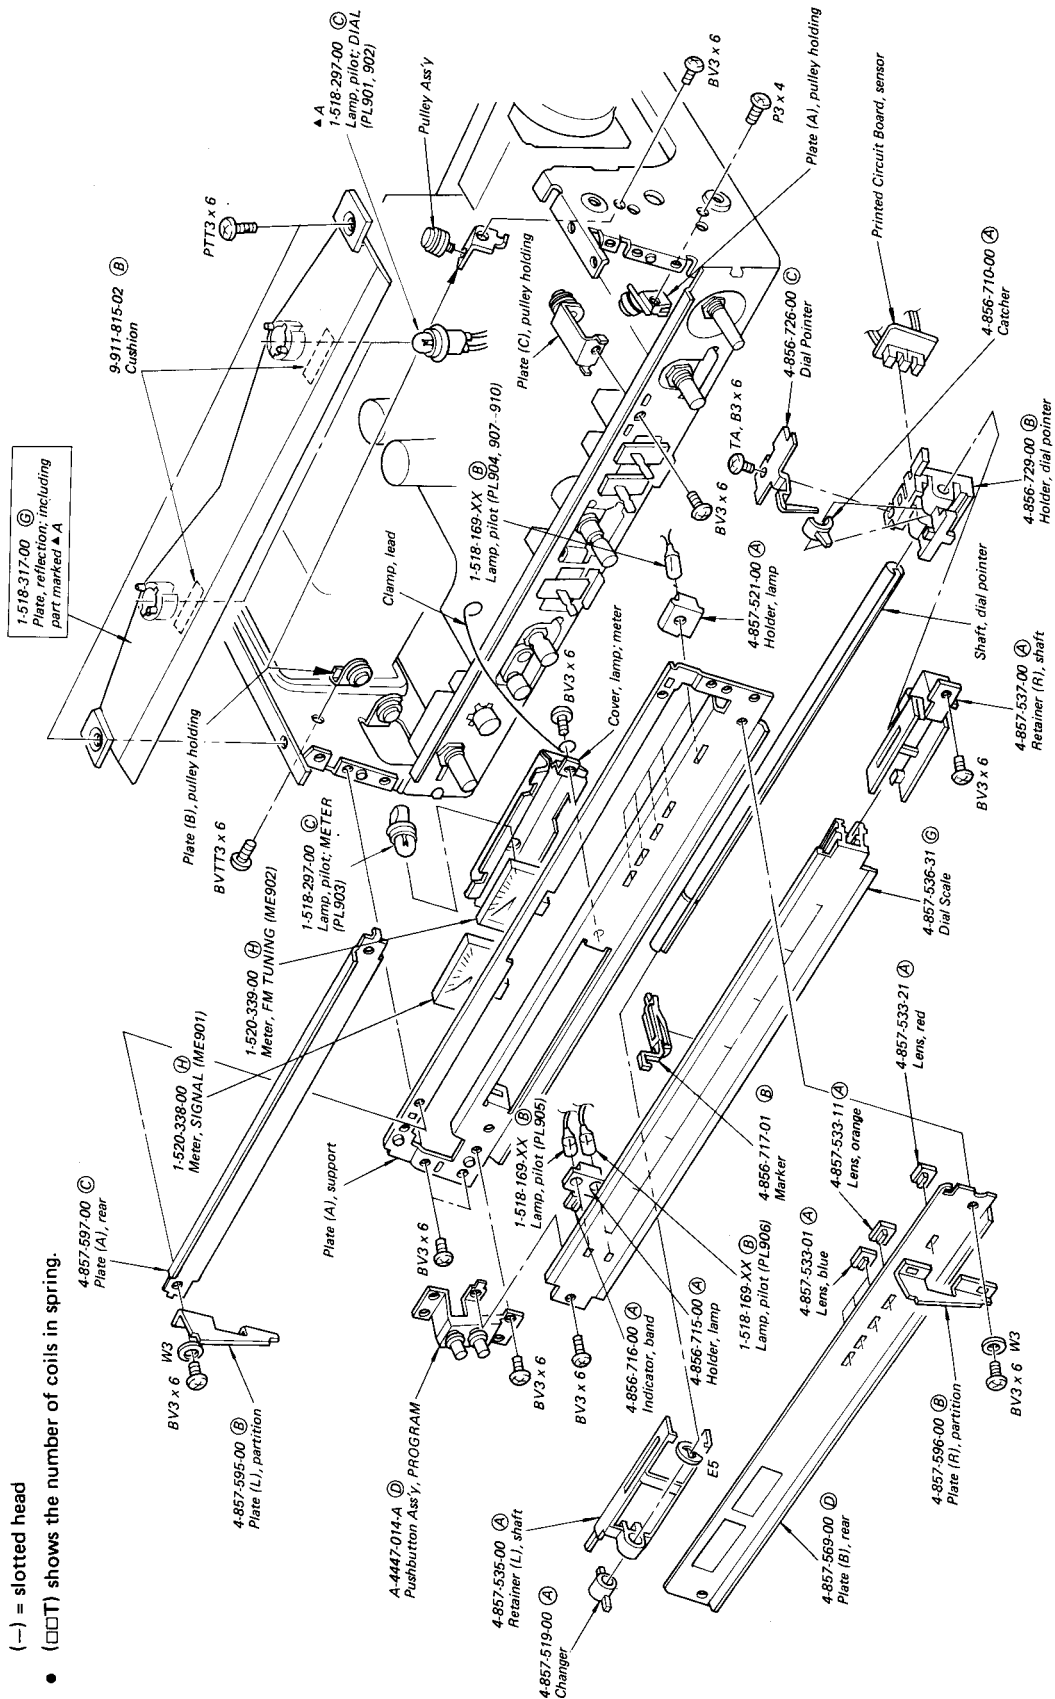

STR-414L

A B C D E

Note: The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

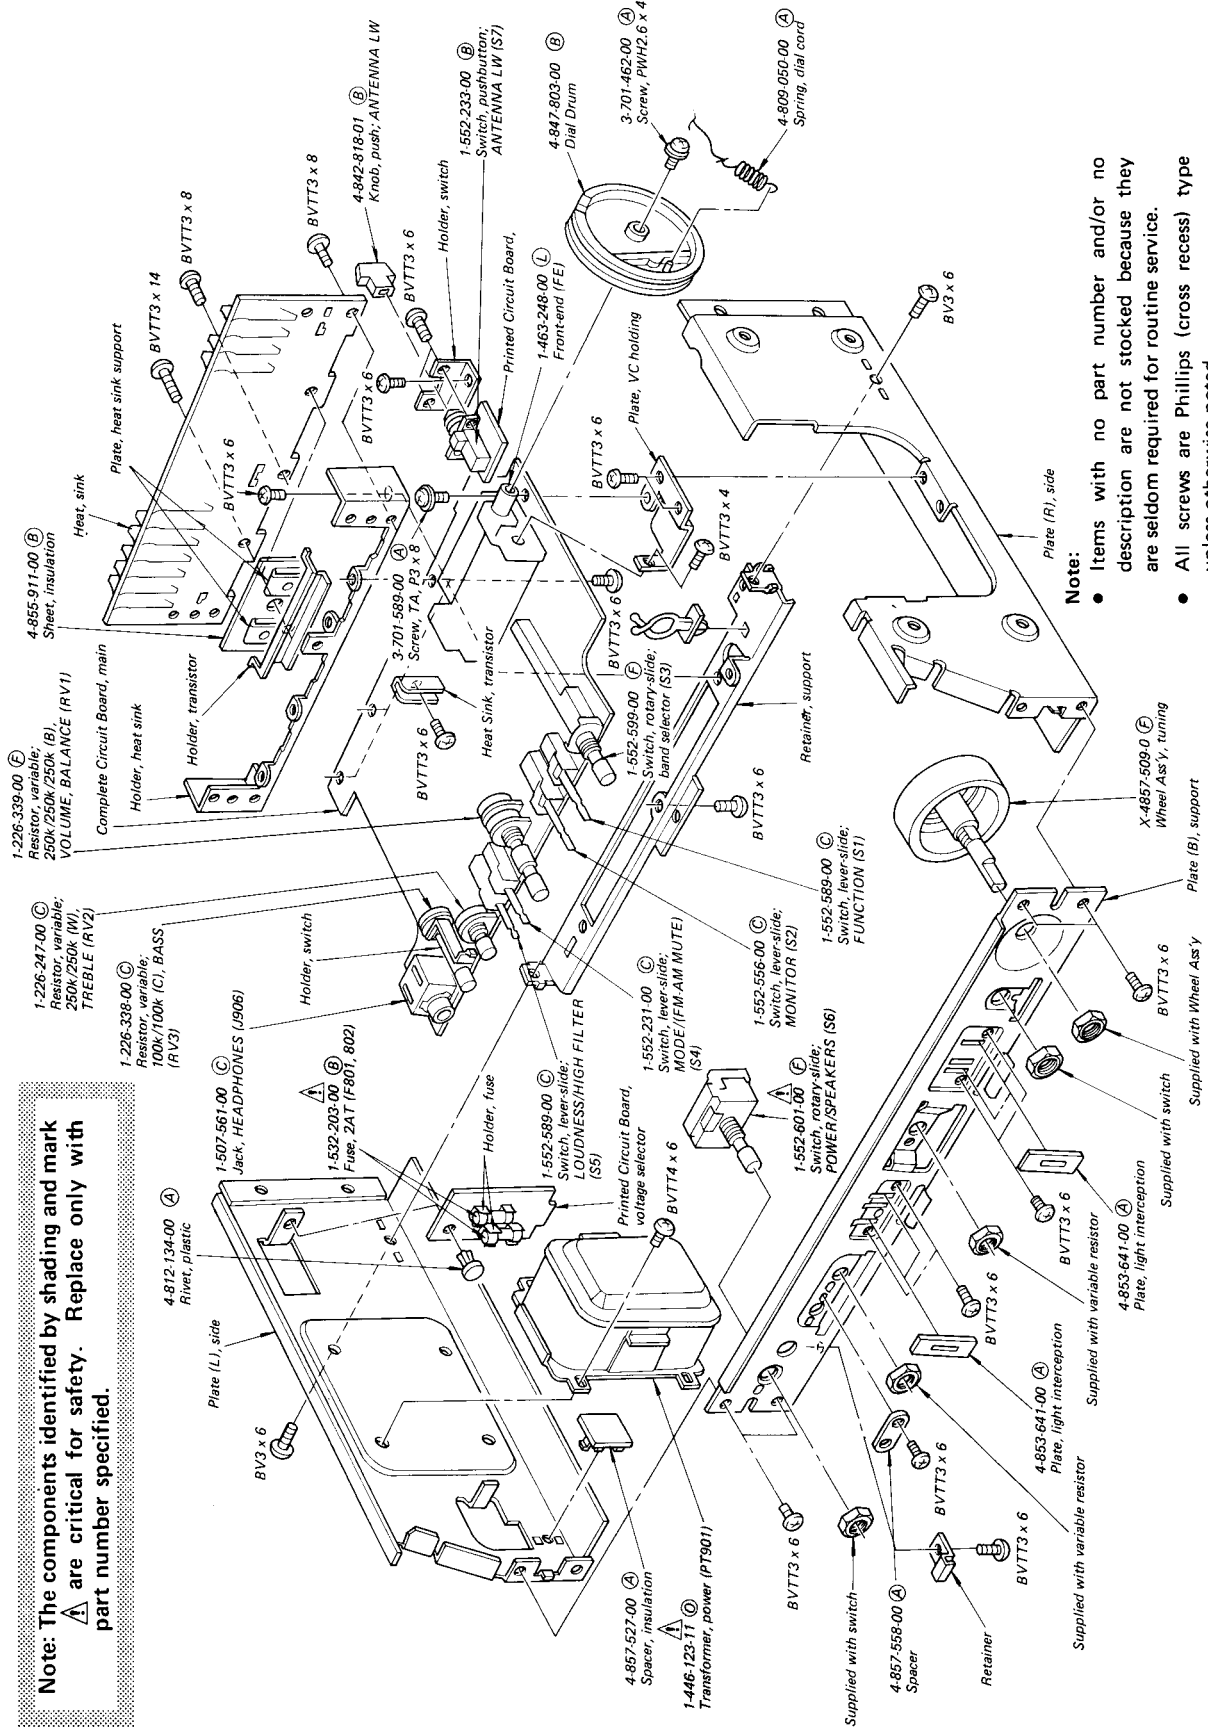

- Note:**
- Items with no part number and/or no description are not stocked because they are seldom required for routine service.
 - All screws are Phillips (cross recess) type unless otherwise noted.
 - (□□T) shows the number of coils in spring.
 - Circled letters (A) to (Z) are applicable to European models only.

STR-414L

SECTION 6 ELECTRICAL PARTS LIST

- Circled letters (**A** to **Z**) are applicable to European models only.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
SEMICONDUCTORS		
Transistors		
⇒ Q201	8-729-663-47	B 2SC1364
⇒ Q301-303 ⇒ Q306, 307 ⇒ Q304, 305	8-729-663-47	B 2SC1364
	8-727-788-00	B 2SA678
Q501, 551	8-729-377-12	E 2SA771
⇒ Q502, 552	8-729-308-62	E 2SC1986C
Q701	8-729-217-33	C 2SC1173
ICs		
IC201	8-751-680-01	I CX168
IC202	8-751-780-00	G CX178
IC301, 302	8-719-902-01	B SPI201
IC401, 451	8-759-314-57	C HA1457
IC501, 551	8-751-710-00	G CX171
IC601	8-759-320-02	D HA12002
Diodes		
D201-203 D301-309	8-719-815-55	B 1S1555
⇒ D501, 551	8-719-422-21	B 1T22AM
D502, 504 D506-511	8-719-815-55	B 1S1555
D552, 554 D556-561	8-719-815-55	B 1S1555
D503, 505 D553, 555	8-719-923-76	B 1S2076A
⇒ D601	8-719-200-02	B 10E2
D602	8-719-815-55	B 1S1555
⇒ D701-704	8-719-200-02	B 10E2
⇒ D705, 706	8-719-931-22	B EQB01-22
⇒ D707	8-719-931-16	B EQB01-16

- ⇒: Due to standardization, interchangeable replacements may be substituted for parts specified in the diagrams.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
COILS		
L202	1-401-728-00	B Antenna, MW
L203	1-405-797-00	B Osc, MW
L204	1-407-741-00	B Microinductor, 18 μ H
L205	1-401-709-00	C Antenna, LW
L207	1-407-210-XX	A Microinductor, 22mH
L208	1-405-813-00	B Osc, LW
L209	1-401-741-00	B Antenna, SW
L210	1-405-812-00	B Osc, SW
L211	1-407-178-XX	A Microinductor, 1 μ H
L901	1-401-747-00	C Antenna, ferrite-rod; LW
TRANSFORMERS AND FILTER		
CF201	1-527-277-91	G Filter, ceramic
CFT201	1-404-087-00	D AM IFT
IFT201	1-404-011-00	C FM Discriminator
PT901	A 1-446-123-11	C Power

CAPACITORS

All capacitors are in μ F and ceramic unless otherwise noted.
50WV or less are not indicated except for electrolytics.
pF : μ μ F, elect : electrolytic

C201	1-121-415-00	A 100	16V	elect
C202, 203	1-101-924-00	A 0.022		
C204, 205	1-123-192-00	A 47	10V	elect
C206-209	1-101-924-00	A 0.022		
C210	1-121-651-00	A 10	16V	elect
C211-213	1-101-924-00	A 0.022		
C214	1-121-450-00	A 2.2	50V	elect
C215	1-121-413-00	A 100	6.3V	elect
C216	1-121-392-00	A 3.3	25V	elect
C217	1-121-726-00	A 0.47	50V	elect

Note: The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.

● Circled letters (**A** to **Z**) are applicable to European models only.

<i>Ref. No.</i>	<i>Part No.</i>	<i>Description</i>		
C218	1-108-355-00	A 0.0056	mylar	
C219	1-121-751-00	A 330	6.3V	elect
C220	1-102-816-00	A 120p		
C221	1-121-403-00	A 33	16V	elect
C222	1-101-924-00	A 0.022		
C223	1-121-415-00	A 100	16V	elect
C224	1-102-973-00	A 100p		
C225	1-121-409-00	A 47	16V	elect
C226	1-121-726-00	A 0.47	50V	elect
C227	1-101-924-00	A 0.022		
C228	1-121-413-00	A 100	6.3V	elect
C229	1-101-924-00	A 0.022		
C230	1-121-395-00	A 4.7	25V	elect
C231	1-101-924-00	A 0.022		
C232	1-101-923-00	A 0.01		
C233	1-108-246-00	A 0.047		mylar
C234	1-108-244-00	A 0.033		mylar
C235	1-121-392-00	A 3.3	25V	elect
C236	1-121-403-00	A 33	16V	elect
C237	1-121-479-00	A 22	16V	elect
C238, 239	1-108-579-00	A 0.01		mylar
C240, 241	1-121-391-00	A 1	50V	elect
C242	1-121-726-00	A 0.47	50V	elect
C243	1-121-651-00	A 10	16V	elect
C244	1-121-415-00	A 100	16V	elect
C245	1-121-651-00	A 10	16V	elect
C246	1-104-081-00	A 0.0015		polyethylene
C247	1-121-651-00	A 10	16V	elect
C248	1-121-726-00	A 0.47	50V	elect
C249	1-121-409-00	A 47	16V	elect
C250	1-101-924-00	A 0.022		
C251	1-121-395-00	A 4.7	25V	elect
C252	1-108-351-00	A 0.0012		mylar
C253	1-102-936-00	A 3p		
C254	1-108-352-00	B 0.0018		mylar
C255	1-108-228-00	A 0.0015		mylar
C256	1-102-807-00	A 5p		
C257	1-102-947-00	A 10p		
C258	1-101-924-00	A 0.022		
C259	1-101-880-00	A 47p		
C260	1-102-282-00	A 8p		

<i>Ref. No.</i>	<i>Part No.</i>	<i>Description</i>		
C261	1-102-262-00	A 12p		
C262	1-104-055-00	A 120p		polyethylene
C263	1-104-065-00	A 330p		polyethylene
C264	1-104-091-11	A 0.0039		polyethylene
C266	1-121-391-00	A 1	50V	elect
C267, 268	1-101-924-00	A 0.022		
C401	1-121-915-00	A 4.7	25V	elect
C402, 403	1-102-973-00	A 100p		
C404	1-121-419-00	B 220	6.3V	elect
C405	1-108-591-00	A 0.033		mylar
C406	1-108-605-00	B 0.12		mylar
C407	1-102-963-00	A 33p		
C408, 451	1-121-915-00	B 4.7	25V	elect
C452, 453	1-102-973-00	A 100p		
C454	1-121-419-00	B 220	6.3V	elect
C455	1-108-591-00	A 0.033		mylar
C456	1-108-605-00	B 0.12		mylar
C457	1-102-963-00	A 33p		
C458	1-121-915-00	B 4.7	25V	elect
C501, 551	1-108-234-00	A 0.0047		mylar
C502, 552	1-121-391-00	A 1	50V	elect
C503, 553	1-102-938-00	A 1p		
C504, 554	1-108-228-00	A 0.0015		mylar
C505, 555	1-108-249-00	A 0.068		mylar
C506, 556	1-108-244-00	A 0.033		mylar
C507, 557	1-108-357-00	A 0.012		mylar
C508, 558	1-121-414-00	A 100	10V	elect
C509, 559	1-102-820-00	A 330p		
C510, 560	1-121-414-00	A 100	10V	elect
C511, 561	1-102-965-00	A 39p		
C512, 562	1-121-395-00	A 4.7	25V	elect
C513, 563	1-123-192-00	A 47	10V	elect
C514, 564	1-108-363-00	A 0.12		mylar
C515, 565	1-108-357-00	A 0.012		mylar
C516, 566	1-108-377-00	A 0.01	100V	mylar
C517, 567	1-108-244-00	A 0.033		mylar
C518, 568	1-108-361-00	A 0.056		mylar
C519, 569	1-102-971-00	A 82p		
C520, 570	1-121-726-00	A 0.47	50V	elect
C521, 571	1-123-192-00	A 47	10V	elect

STR-414L

Note: The components identified by shading and mark **▲** are critical for safety. Replace only with part number specified.

• Circled letters (**Ⓐ** to **Ⓔ**) are applicable to European models only.

Ref. No.	Part No.	Description	
JACKS			
J901, 904 J905, 951 J954, 955	1-507-430-XX	Ⓓ Pin Jack, 6P; PHONO, TAPE 1, REC OUT 1	
J902, 903 J952, 953		1-507-532-00	Ⓒ Pin Jack, 4P; TAPE 2, REC OUT 2
J906		1-507-561-00	Ⓒ Jack, HEADPHONES

Ref. No.	Part No.	Description
RY601	1-515-303-00	Ⓕ Relay
TM901,903 TM904	1-536-524-00	Ⓒ Terminal Board, 4P; ANTENNA, SPEAKER A, B
		1-518-317-00
PL901,902	1-518-297-00	Ⓒ Lamp, pilot; 8V 300mA, DIAL

MISCELLANEOUS

CNP901	▲ 1-534-817-XX	Ⓓ Cord, power
F801, 802	▲ 1-532-203-00	Ⓑ Fuse, 2AT
FE	1-463-248-00	⒴ Front-end
ME901	1-520-338-00	Ⓗ Meter, SIGNAL
ME902	1-520-339-00	Ⓗ Meter, FM TUNING
PL901,902	1-518-297-00	Ⓒ Lamp, pilot; 8V 300mA, DIAL
PL903	1-518-297-00	Ⓒ Lamp, pilot; 8V 300mA, METER
PL904 PL910	1-518-169-XX	Ⓑ Lamp, pilot; 4.5V 40mA

PACKING MATERIALS AND ACCESSORIES

Part No.	Description
1-501-184-00	Ⓒ Antenna, feeder
1-501-193-00	Ⓑ Antenna
3-701-630-00	Ⓐ Bag, polyethylene
3-770-599-11	Ⓓ Manual, instruction
4-809-251-00	Ⓐ Bag, polyethylene
4-847-802-11	Ⓐ Screw, case stopper
4-857-591-00	Ⓓ Carton
4-857-593-00	Ⓑ Cushion, upper
4-857-594-00	Ⓑ Cushion, lower

1/4 WATT CARBON RESISTORS **Ⓐ**

Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.
1.0	1-246-401-00	10	1-246-425-00	100	1-246-449-00	1.0k	1-246-473-00	10k	1-246-497-00	100k	1-246-521-00	1.0M	1-246-545-00
1.1	1-246-402-00	11	1-246-426-00	110	1-246-450-00	1.1k	1-246-474-00	11k	1-246-498-00	110k	1-246-522-00	1.1M	1-210-814-00
1.2	1-246-403-00	12	1-246-427-00	120	1-246-451-00	1.2k	1-246-475-00	12k	1-246-499-00	120k	1-246-523-00	1.2M	1-210-815-00
1.3	1-246-404-00	13	1-246-428-00	130	1-246-452-00	1.3k	1-246-476-00	13k	1-246-500-00	130k	1-246-524-00	1.3M	1-210-816-00
1.5	1-246-405-00	15	1-246-429-00	150	1-246-453-00	1.5k	1-246-477-00	15k	1-246-501-00	150k	1-246-525-00	1.5M	1-210-817-00
1.6	1-246-406-00	16	1-246-430-00	160	1-246-454-00	1.6k	1-246-478-00	16k	1-246-502-00	160k	1-246-526-00	1.6M	1-210-818-00
1.8	1-246-407-00	18	1-246-431-00	180	1-246-455-00	1.8k	1-246-479-00	18k	1-246-503-00	180k	1-246-527-00	1.8M	1-210-819-00
2.0	1-246-408-00	20	1-246-432-00	200	1-246-456-00	2.0k	1-246-480-00	20k	1-246-504-00	200k	1-246-528-00	2.0M	1-210-820-00
2.2	1-246-409-00	22	1-246-433-00	220	1-246-457-00	2.2k	1-246-481-00	22k	1-246-505-00	220k	1-246-529-00	2.2M	1-210-821-00
2.4	1-246-410-00	24	1-246-434-00	240	1-246-458-00	2.4k	1-246-482-00	24k	1-246-506-00	240k	1-246-530-00	2.4M	1-244-754-00
2.7	1-246-411-00	27	1-246-435-00	270	1-246-459-00	2.7k	1-246-483-00	27k	1-246-507-00	270k	1-246-531-00	2.7M	1-244-755-00
3.0	1-246-412-00	30	1-246-436-00	300	1-246-460-00	3.0k	1-246-484-00	30k	1-246-508-00	300k	1-246-532-00	3.0M	1-244-756-00
3.3	1-246-413-00	33	1-246-437-00	330	1-246-461-00	3.3k	1-246-485-00	33k	1-246-509-00	330k	1-246-533-00	3.3M	1-244-757-00
3.6	1-246-414-00	36	1-246-438-00	360	1-246-462-00	3.6k	1-246-486-00	36k	1-246-510-00	360k	1-246-534-00	3.6M	1-244-758-00
3.9	1-246-415-00	39	1-246-439-00	390	1-246-463-00	3.9k	1-246-487-00	39k	1-246-511-00	390k	1-246-535-00	3.9M	1-244-759-00
4.3	1-246-416-00	43	1-246-440-00	430	1-246-464-00	4.3k	1-246-488-00	43k	1-246-512-00	430k	1-246-536-00	4.3M	1-244-760-00
4.7	1-246-417-00	47	1-246-441-00	470	1-246-465-00	4.7k	1-246-489-00	47k	1-246-513-00	470k	1-246-537-00	4.7M	1-244-761-00
5.1	1-246-418-00	51	1-246-442-00	510	1-246-466-00	5.1k	1-246-490-00	51k	1-246-514-00	510k	1-246-538-00	5.1M	1-244-762-00
5.6	1-246-419-00	56	1-246-443-00	560	1-246-467-00	5.6k	1-246-491-00	56k	1-246-515-00	560k	1-246-539-00		
6.2	1-246-420-00	62	1-246-444-00	620	1-246-468-00	6.2k	1-246-492-00	62k	1-246-516-00	620k	1-246-540-00		
6.8	1-246-421-00	68	1-246-445-00	680	1-246-469-00	6.8k	1-246-493-00	68k	1-246-517-00	680k	1-246-541-00		
7.5	1-246-422-00	75	1-246-446-00	750	1-246-470-00	7.5k	1-246-494-00	75k	1-246-518-00	750k	1-246-542-00		
8.2	1-246-423-00	82	1-246-447-00	820	1-246-471-00	8.2k	1-246-495-00	82k	1-246-519-00	820k	1-246-543-00		
9.1	1-246-424-00	91	1-246-448-00	910	1-246-472-00	9.1k	1-246-496-00	91k	1-246-520-00	910k	1-246-544-00		

Sony Corporation

9-958-560-01

© 1978

78J0445-1

-28-

Printed in Japan

- Circled letters (**A** to **Z**) are applicable to European models only.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>		
C522, 572	1-121-403-00	A 33	16V	elect
C523, 573	1-108-244-00	A 0.033		mylar
C525	1-121-651-00	A 10	16V	elect
C601	1-121-398-00	A 10	25V	elect
C602	1-121-422-00	B 220	25V	elect
C603	1-121-651-00	A 10	16V	elect
C604	1-121-420-00	B 220	10V	elect
C701-704	1-108-389-00	B 0.1	100V	mylar
C705, 706	A 1-125-157-00	D 6800	42V	elect
C707, 708	1-121-261-00	B 220	35V	elect
C709, 710	1-121-417-00	B 100	25V	elect
C711	1-101-005-00	A 0.022		
C712	1-121-415-00	A 100	16V	elect
CP801	A 1-108-750-00	B 0.033	300V	mylar
CT201-206	1-141-171-00	B Trimmer		

RESISTORS

All resistors are in ohms. Common ¼W carbon resistors are omitted. Refer to the list on the last page for their part numbers.

R202	A 1-212-889-00	A 220	¼W	fusible (nonflammable)
R215	A 1-217-395-00	B 47	¼W	fusible (nonflammable)
R233	1-244-860-00	A 300	½W	carbon
R236	A 1-217-399-00	B 100	¼W	fusible (nonflammable)
R314-318	1-244-860-00	A 300	½W	carbon
R518, 568	A 1-212-982-00	A 100	½W	fusible (nonflammable)
R519, 569	A 1-212-897-00	A 470	¼W	fusible (nonflammable)
R520, 570	A 1-217-151-00	B 0.22	2W	wirewound
R523, 573	A 1-212-982-00	A 100	½W	fusible (nonflammable)
R526, 576	A 1-212-861-00	A 15	¼W	fusible (nonflammable)
R527, 577	A 1-212-897-00	A 470	¼W	fusible (nonflammable)
R528, 578	A 1-217-151-00	B 0.22	2W	wirewound (nonflammable)

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>		
R531, 581	A 1-212-958-00	A 10	½W	fusible (nonflammable)
R533, 583	A 1-211-626-00	B 330	½W	fusible (nonflammable)
R602	A 1-211-646-00	B 2.2k	½W	carbon (nonflammable)
R604	1-244-873-00	A 1k	½W	carbon
R701, 702	A 1-211-548-00	B 1.5k	¼W	carbon (nonflammable)
R703	A 1-217-307-00	B 56	5W	wirewound (nonflammable)
R704	A 1-217-399-00	B 100	¼W	fusible (nonflammable)
R705	A 1-211-945-00	C 2.2k	¼W	carbon (nonflammable)
R706	A 1-217-399-00	B 100	¼W	fusible (nonflammable)
RT202	1-224-645-XX	A Adjustable, 10k (B);	FM STEREO SEPARATION	
RT203	1-224-644-XX	A Adjustable, 4.7k (B);	MPX	
RT501,551	1-224-646-XX	A Adjustable, 22k (B);	DC BIAS	
RV1	1-226-339-00	F Variable, 250k/250k/250k (B);	VOLUME, BALANCE	
RV2	1-226-247-00	C Variable, 250k/250k (W);	TREBLE	
RV3	1-226-338-00	C Variable, 100k/100k (C);	BASS	

SWITCHES

S1	1-552-589-00	C Lever-slide, FUNCTION
S2	1-552-556-00	C Lever-slide, MONITOR
S3	1-552-599-00	F Rotary-slide, band selector
S4	1-552-231-00	C Lever-slide, MODE/(FM-AM MUTE)
S5	1-552-589-00	C Lever-slide, LOUDNESS/HIGH FILTER
S6	A 1-552-601-00	F Rotary-slide, POWER/SPEAKERS
S7	1-552-233-00	B Pushbutton, ANTENNA LW

Note: The components identified by shading and mark **A** are critical for safety. Replace only with part number specified.