

# STR-AV23/AV270X/AV370X/AV570X

## SERVICE MANUAL

US Model

STR-AV23/AV270X/AV570X

Canadian Model

STR-AV370X/AV570X



Photo: STR-AV570X

### SPECIFICATIONS

#### Audio Power Specifications

**POWER OUTPUT AND TOTAL HARMONIC DISTORTION**  
With 8-ohm load, both channels driven, from 40-20 kHz,  
rated 60 watts (STR-AV570X) or 40 watts (STR-AV23/  
AV270X/AV370X) per channel minimum RMS power, with  
less than 0.8% total harmonic distortion from 250  
milliwatts to rated output.

#### Other Specifications

##### Amplifier section

Continuous RMS power output (8 ohms, at 1 kHz less than 0.8%  
total harmonic distortion)

|                              |         |
|------------------------------|---------|
| STR-AV570X                   | 60W+60W |
| STR-AV23<br>AV270X<br>AV370X | 40W+40W |

##### Dynamic power (at 1 kHz IHF)

|                              |         |
|------------------------------|---------|
|                              | 8 ohms  |
| STR-AV570X                   | 75W+75W |
| STR-AV23<br>AV270X<br>AV370X | 55W+55W |

##### Harmonic distortion

Less than 0.8% at rated output

##### Frequency response

PHONO: RIAA equalization curve  $\pm 0.5$  dB

CD

VIDEO  $10 \text{ Hz} - 50 \text{ kHz}$ , dB

TAPE

##### Inputs

|                     | Sensitivity | Impedance  | S/N (weighting network, input level) |
|---------------------|-------------|------------|--------------------------------------|
| PHONO               | 2.5 mV      | 50 kilohms | 74 dB<br>72 dB* (A, 2.5 mV)          |
| CD<br>VIDEO<br>TAPE | 150 mV      | 50 kilohms | 95dB<br>80 dB* (A, 150 mV)           |

\*'78 IHF

##### Outputs

|                               |  |
|-------------------------------|--|
| REC OUT, VIDEO<br>(AUDIO) OUT | Voltage 150 mV<br>Impedance 10 kilohms       |
| SPEAKER A, B                  | Accepts speakers of<br>8 – 16 ohms           |
| HEADPHONES                    | Accepts low and high<br>impedance headphones |

##### Tone controls

BASS:  $\pm 10$  dB at 100 Hz

TREBLE:  $\pm 10$  dB at 10 Hz

##### Muting

- 20 dB

##### DBFB

+12 dB at 70 Hz

##### Tuner section

|                                     | FM tuner section  | AM tuner section                            |
|-------------------------------------|---|---|
| Tuning range                        | 87.5 – 108 MHz  | 530 – 1710 kHz                              |
| Antenna terminals                   | 300 ohms, balanced<br>75 ohms, unbalanced                           | External antenna terminal                   |
| Sensitivity at<br>50 dB<br>quieting | 18.3 dBf, 4.5 $\mu$ V<br>(mono)<br>38.3 dBf, 45 $\mu$ V<br>(stereo) | —   |
| Usable sensitivity                  | 11.2 dBf, 2 $\mu$ V (IHF)   | Loop antenna:<br>500 $\mu$ V (at 1,000 kHz) |
| Signal-to-noise ratio               | 76 dB (mono)<br>70 dB (stereo)                                      | 54 dB (at 50 mV/m)                          |
| Harmonic distortion                 | 0.3% (mono), 0.5%<br>(stereo) at 1 kHz                              | 0.5% (at 50 mV/m,<br>400Hz)                 |
| Selectivity                         | 60 dB at 400 kHz  | 40 dB at 10 kHz                             |
| Separation                          | 45 dB at 1 kHz  | —   |
| Frequency response                  | 30 Hz – 15 kHz $\pm 0.5$ dB   | —   |

FM STEREO FM-AM RECEIVER  
**SONY®**



**General System**

Tuner section:PLL quartz-locked digital synthesizer system  
 Preamplifier section:low-noise NF type equalizer amp  
 Power amplifier section:quasi-complementary SEPP

**Power requirements**  
120V AC, 60 Hz**Power consumption**

|                 | US model | Canadian model |
|-----------------|----------|----------------|
| STR-AV570X      | 105W     | 185W           |
| STR-AV370X      | —        | 155W           |
| STR-AV23 AV270X | 90W      | —              |

STR-AV570X/AV23: In standby condition: 5W

**AC outlets**

One switched (120 W/1A Max)

**Dimensions**

Approx. 430 × 122.5 × 300mm (w/h/d)  
 (17 1/4 × 4 7/8 × 11 7/8 inches)  
 including projecting parts and controls

**Weight**

|                        |                             |
|------------------------|-----------------------------|
| STR-AV570X             | Approx. 6.5 kg (14 lb 5 oz) |
| STR-AV23 AV270X AV370X | Approx. 6 kg (13 lb 4 oz)   |

**Accessories supplied**

FM wire antenna (1)

AM loop antenna (1)

Remote Commander RM-S103 (1) (STR-AV23/AV370X/AV570X)

Sony batteries SUM 3 (NS) (2) (STR-AV23/AV370X/AV570X)

Design and specifications subject to change without notice.

**TABLE OF CONTENTS**

| <u>Section</u>                                     | <u>Title</u> | <u>Page</u> |
|--|--------------|-------------|
| <b>1. GENERAL</b>                                  |              |             |
| Location and Function of Controls .....            | 3            |             |
| Receiving FM/AM Broadcasts .....                   | 4            |             |
| <b>2. ELECTRICAL ADJUSTMENTS .....</b>             | <b>6</b>     |             |
| <b>3. DIAGRAMS</b>                                 |              |             |
| 3-1. Block Diagram .....                           | 7            |             |
| 3-2. Printed Wiring Boards — Main Section — .....  | 11           |             |
| 3-3. Schematic Diagram — Main Section — .....      | 15           |             |
| 3-4. Printed Wiring Boards — Tuner Section — ..... | 19           |             |
| 3-5. Schematic Diagram — Tuner Section — .....     | 20           |             |
| 3-6. Explanation of IC301 ( $\mu$ PD75206) .....   | 23           |             |
| <b>4. EXPLODED VIEWS .....</b>                     | <b>25</b>    |             |
| <b>5. ELECTRICAL PARTS LIST .....</b>              | <b>27</b>    |             |

**SAFETY CHECK-OUT**

After correcting the original service problem, perform the following safety check before releasing the set to the customer:

Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

**LEAKAGE TEST**

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)


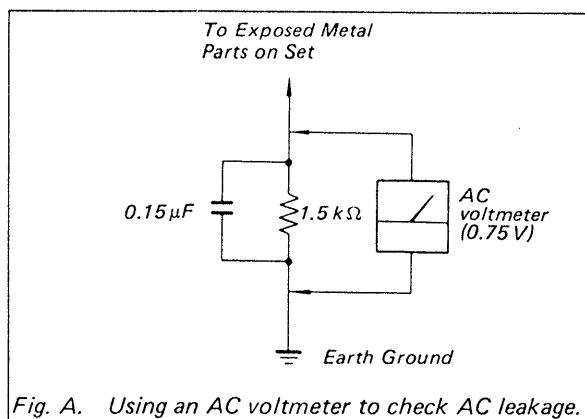


Fig. A. Using an AC voltmeter to check AC leakage.

## SECTION 1


## GENERAL

## Location and Function of Controls

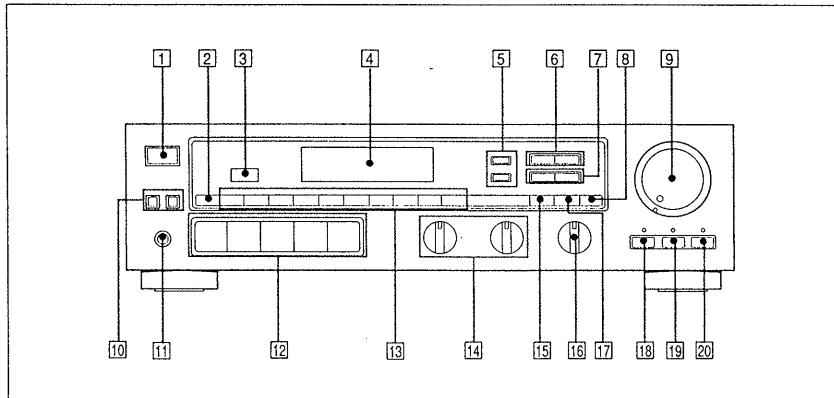

- |   |   |
|---|---|
| <b>①</b> POWER switch   | <b>⑫</b> Function selectors   |
| <b>②</b> SHIFT button   | <b>⑬</b> Numeric buttons  |
| <b>③</b> Remote sensor (STR-AV23/AV370X/AV570X)   | <b>⑭</b> TONE controls<br>Turn the TREBLE control to adjust the high frequency sound. Turn BASS control to adjust the low frequency sound.  |
| <b>④</b> Display window   |   |
| <b>⑤</b> BAND selectors   | <b>⑮</b> MEMORY button  |
| <b>⑥</b> TUNING +/- buttons   | <b>⑯</b> BALANCE control<br>Adjust to correct stereo imaging, when the speaker position is not symmetrical.   |
| <b>⑦</b> PRESET +/- buttons   | <b>⑰</b> DIRECT TUNING button   |
| <b>⑧</b> FM MODE button<br>When an FM stereo program is noisy or hard to receive, press this button. The STEREO indicator goes out (the sound is heard in monaural, but the reception will be improved). To return to the stereo mode, press again or change the frequency. | <b>⑱</b> DBFB (Dynamic Bass Feed Back) button and indicator<br>To reinforce the bass frequency sound, press this button.  |
| <b>⑨</b> VOLUME control and indicator<br>(STR-AV23/AV370X/AV570X)   | <b>⑲</b> MUTING button and indicator (STR-AV23/AV370X/AV570X)<br>Press to attenuate the sound level immediately (-20 dB attenuation). Pressing this button makes the indicator be lighted. To restore the sound level, press again. |
| <b>⑩</b> SPEAKERS selectors<br>Depress to select which speaker system to drive. For both speaker systems, depress A and B.  | <b>⑳</b> SURROUND button and indicator<br>To obtain the surround effect, press this button.   |
| <b>⑪</b> HEADPHONES jack (stereo phone jack)<br>Connect the headphones to this jack for private listening.  |   |

## Remote Commander RM-S103 (STR-AV23/AV370X/AV570X)

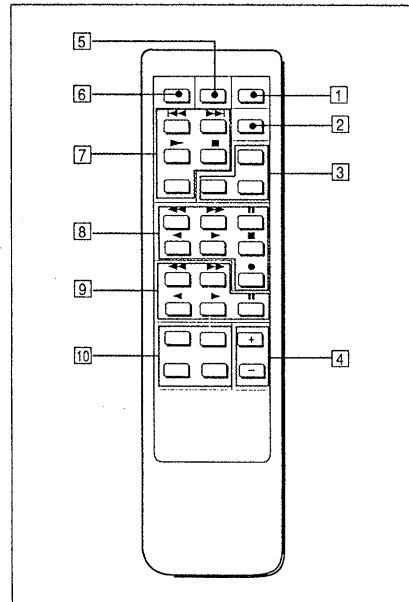


- |  |
|--|
| <b>①</b> POWER button  |
| <b>②</b> DBFB button   |
| <b>③</b> TUNER PRESET +/- and SHIFT buttons  |
| <b>④</b> VOLUME +/- buttons  |
| <b>⑤</b> SURROUND button   |
| <b>⑥</b> MUTING button   |
| <b>⑦</b> CD player operation buttons<br>D. (disc) SKIP: When your CD player is equipped with a multi-disc changer, use this button to select loaded disc.<br>CD ▶: Selects the CD function and starts CD playback. |
| <b>⑧</b> DECK B operation buttons (also for single tape deck)<br>DECK B ▶/▶: Select tape function and start tape playback on deck B.   |
| <b>⑨</b> DECK A operation buttons<br>DECK A ▶/▶: Select tape function and start tape playback on deck A.   |
| <b>⑩</b> Function select buttons   |
- Notes on the remote commander**  
For the functions other than the receiver's own ones, the remote commander is effective only with Sony components having a remote sensor with a mark.

## Receiving FM/AM Broadcasts

### How to receive a broadcast

|                                    |   |
|------------------------------------|---|
| When you know the frequency        | See "Direct Access Tuning".                             |
| When you do not know the frequency | FM: See "Automatic Tuning".<br>AM: See "Manual Tuning". |
| Tuning in a preset frequency       | See "Preset Tuning".                                    |

### Automatic Tuning (for FM reception)

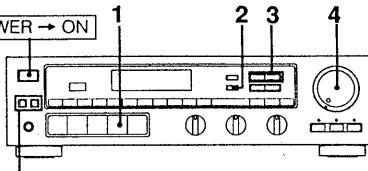

Select SPEAKERS  
A or B.


- 1 Press TUNER.
- 2 Select FM.
- 3 Press + or - TUNING.

When a station is received, automatic tuning stops automatically. To change the station, press + or - again.


- 4 Adjust the volume.

**When sweeping does not stop at the desired station**  
The signal strength is weak. Tune in the station as described in "Direct Access Tuning".


### Direct Access Tuning

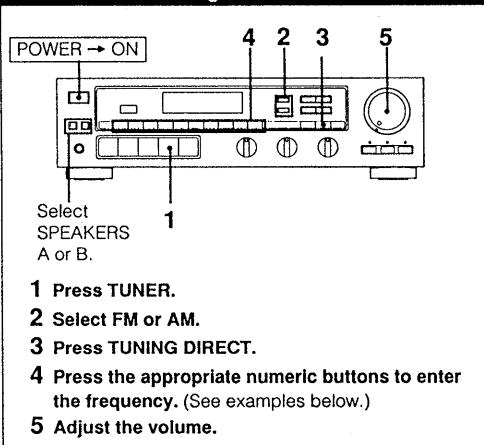

Example 1: FM 108.00 MHz

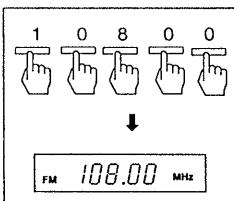

Example 2: AM 1350 kHz

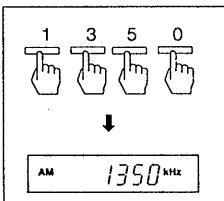

#### For entering AM frequencies


You do not need to enter the last '0'.

#### Correcting the entered frequency

Repeat the above steps from the beginning.

#### If the frequency figures flash in the display window

The entered number is outside the receiver's frequency range (FM 87.5 to 108 MHz; AM 530 to 1710 kHz). Enter the correct frequency.

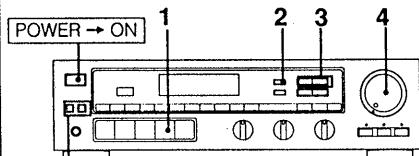**Manual Tuning (for AM reception)**

Select SPEAKERS A or B.

- 1** Press TUNER.
- 2** Select AM.
- 3** Press + or - TUNING.


Each time + or - is pressed, the frequency will change by 10 kHz. To change the frequency continuously, keep the button pressed.

- 4** Adjust the volume.


**Quickly tuning in a roughly known frequency**

Proceed as the following example.

Example: The station between AM 700 and AM 800 kHz.

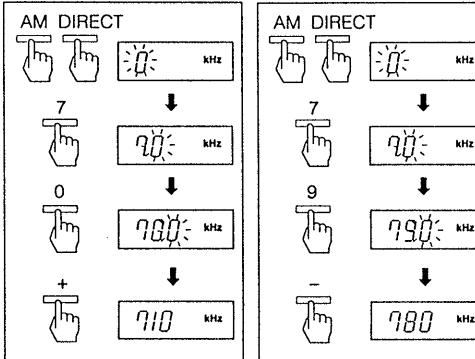**Preset Tuning**

A total of 30 FM/AM stations can be memorized in any desired sequence.

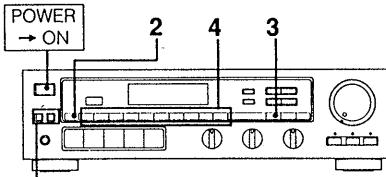**Memorizing a Station**

Select SPEAKERS A or B.

- 1** Tune in the desired station. (See "Automatic Tuning", "Manual Tuning" or "Direct Access Tuning".)
  - 2** Press SHIFT to select the memory page (A, B or C).
  - 3** Press MEMORY.
- Memory indicator appears for a few seconds.
- 4** Press the desired numeric button (1 to 0), while the MEMORY indicator is displayed.

Repeat above steps for presetting other desired stations.

**Use of memory pages**

The memory pages (A, B and C) can be used to classify stations according to the music category, station band, etc.

**Replacing a preset station**

Preset another station on the number of the station to be replaced. The previously preset station will be erased.

**Tuning In a Preset Station****Method A: Direct**


- 1** Press TUNER.
- 2** Press SHIFT to select memory page (A, B or C).
- 3** Press the preset numeric button.
- 4** Adjust the volume.

**Method B: Scan**

- 1** Press TUNER.

- 2** Press + or - PRESET.

Each time you press + or -, the preset station of the next higher or lower number is tuned in.

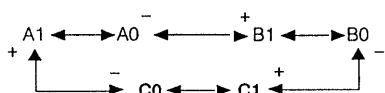

- If you keep pressing + or -, preset stations are successively tuned in. Release the button when the desired preset station is tuned in.


- 3** Adjust the volume.

## SECTION 2


### ELECTRICAL ADJUSTMENTS

**FM SECTION****• FM Discriminator (NULL) Adjustment**

Setting :

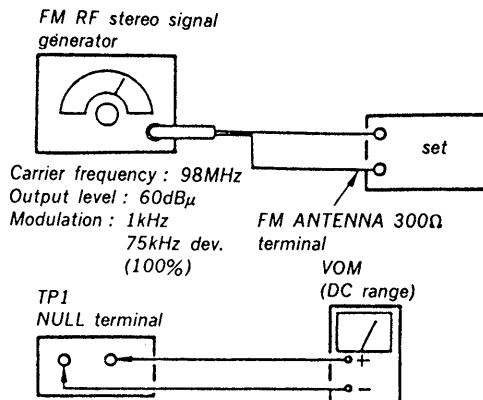**• FM Stereo Separation Adjustment**

Setting :

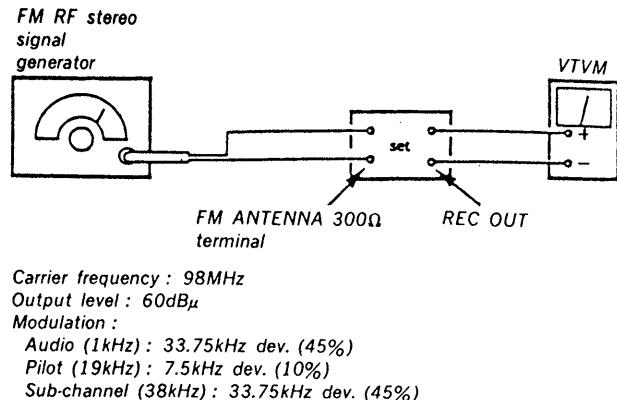
**Procedure :**

1. Tune the set to 98MHz.
2. Adjust T21 for 0V reading on the VOM.

**Note :** FM Tuning Level adjustment should be made after FM discriminator adjustment.

**• FM Stereo Operation Level Adjustment**

Setting :

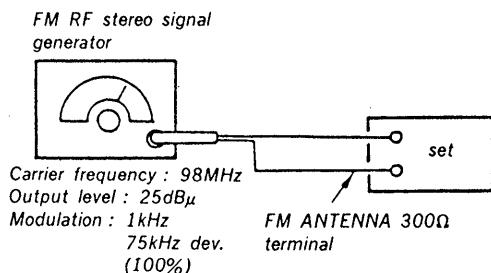**Procedure :**

Tune the set to 98MHz.

| FM stereo signal generator output channel | VTVM connection | VTVM reading (dB) |
|---|-----------------|-------------------|
| L-CH                                      | L-CH            | Ⓐ                 |
| R-CH                                      | L-CH            | Ⓑ                 |
| R-CH                                      | R-CH            | Ⓒ                 |
| L-CH                                      | R-CH            | Ⓓ                 |

L-CH Stereo separation : Ⓐ - Ⓑ  
R-CH Stereo separation : Ⓒ - Ⓓ


**Procedure :**

1. Tune the set to 98MHz.
2. Adjust RV24 so that the STEREO LED goes on.

The separations of both channels should be equal.

**Note on Ceramic Filter (CF1, 2) Replacement.**

This set employs two ceramic filters (CF1, 2) which should have the same color marking to identify their center frequency. Therefore FM IF offset adjustment by (\* A, \* B) connection is necessary to match the center frequency of the ceramic filters used with FM intermediate frequency.


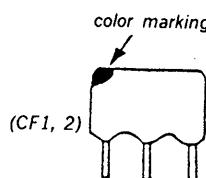


○ : short  
× : open


| Color mark | Center frequency (MHz) | Ceramic filter |            | Connection | FM intermediate frequency (MHz) |
|------------|------------------------|----------------|------------|------------|---------------------------------|
|            |                        | * A (D326)     | * B (D327) |            |                                 |
| White      | 10.750                 | ×              | ○          |            | 10.750                          |
| Red        | 10.700                 | ×              | ×          |            | 10.700                          |
| Black      | 10.650                 | ○              | ○          |            | 10.650                          |

## SECTION 3 DIAGRAMS

### 3-1. BLOCK DIAGRAM

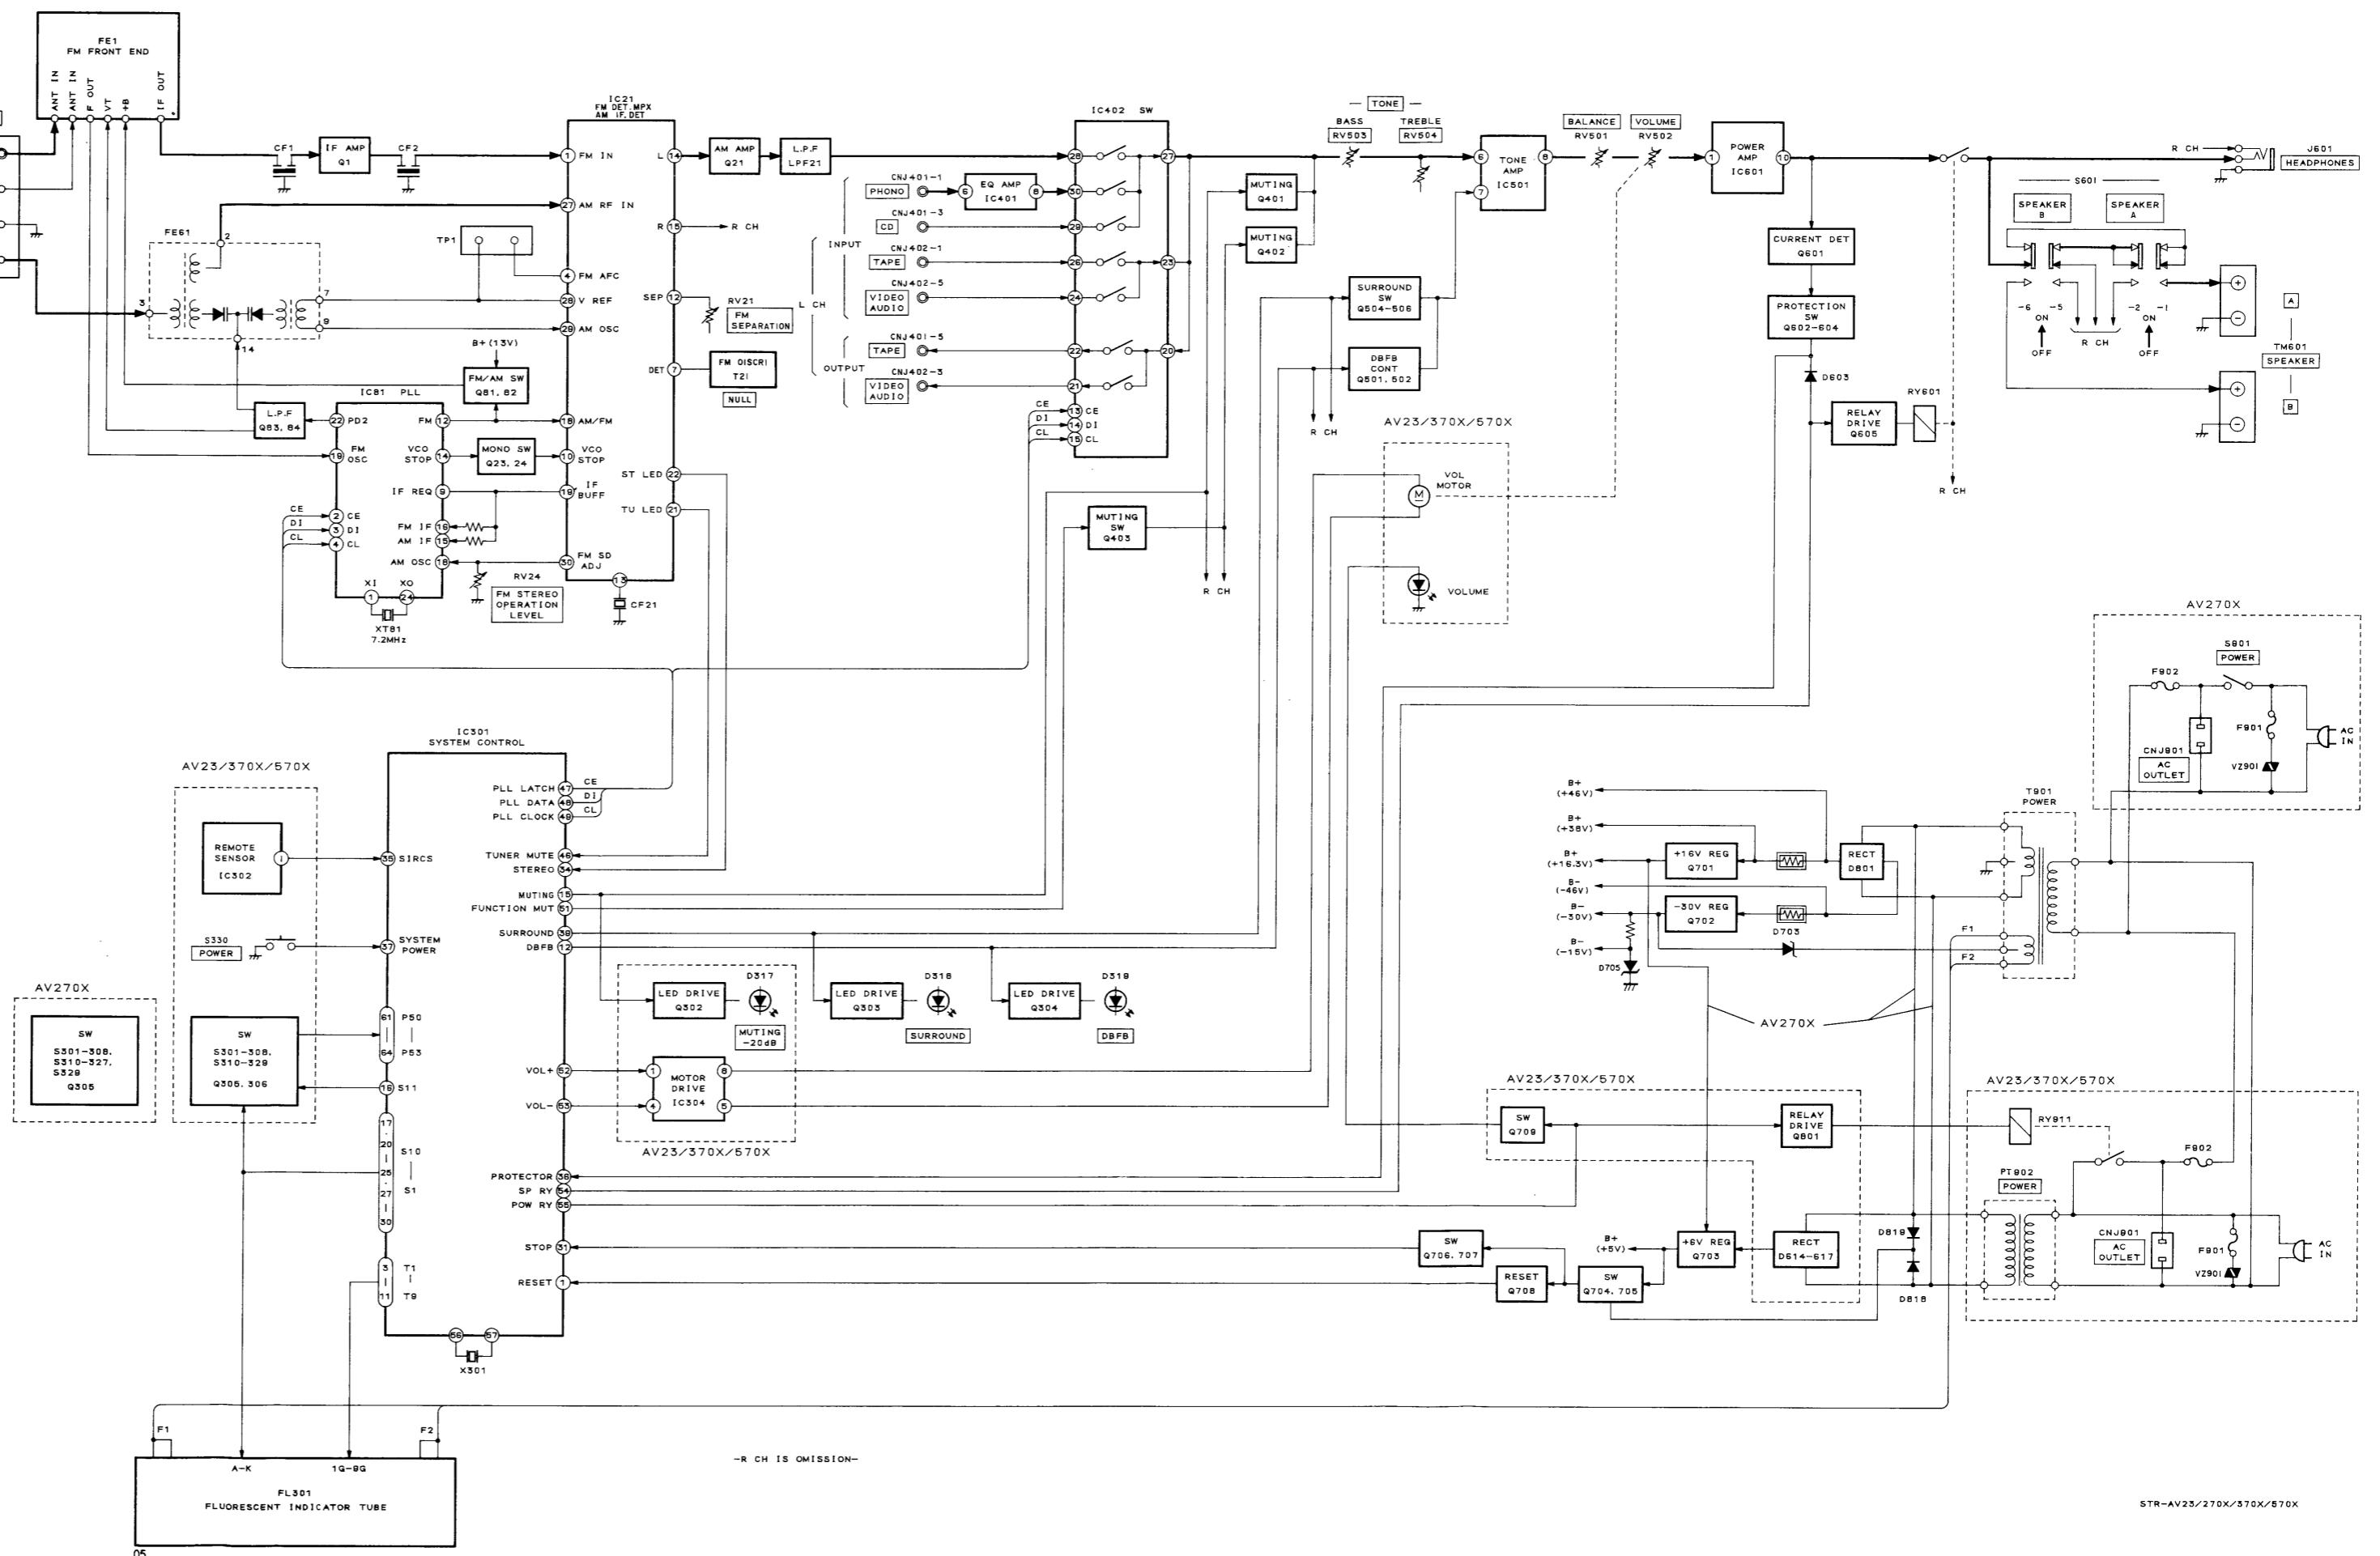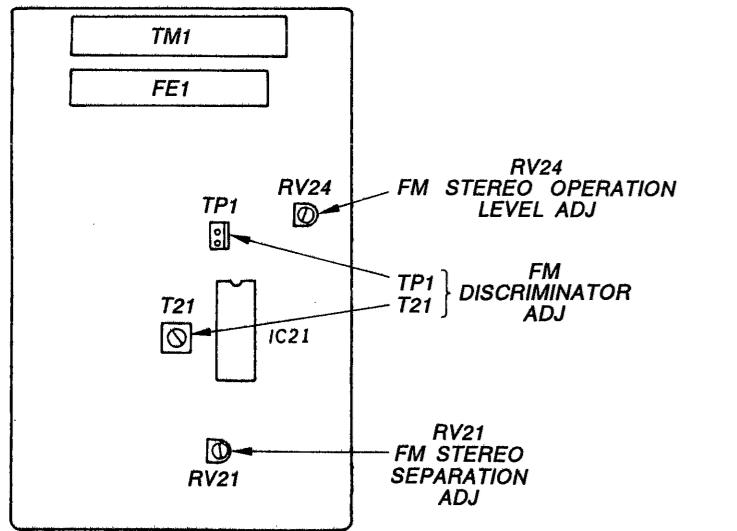


• CIRCUIT BOARDS LOCATION

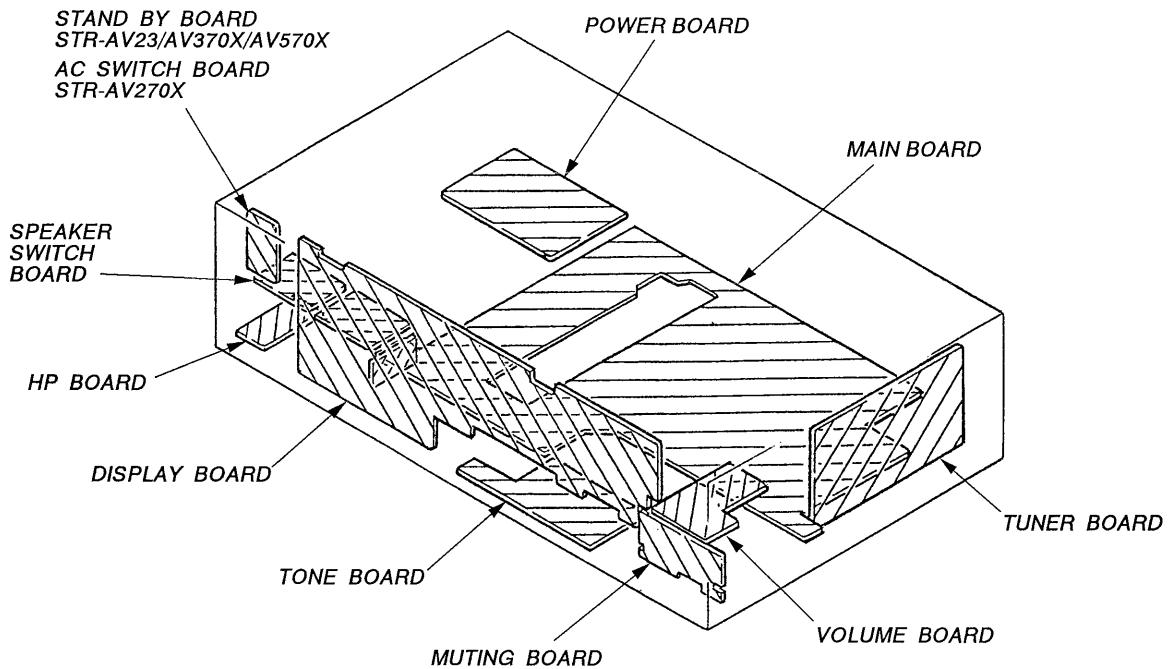

• Semiconductor Lead Layouts


**STK4162MK2  
STK4192MK2**

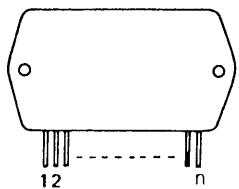


**DTA114ES  
DTA124ES  
DTC114ES  
DTC124ES  
2SC2603-EF  
2SC2669-OY  
2SC3623A-LK**




**2SB734-34**

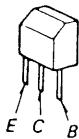


**2SD2012**

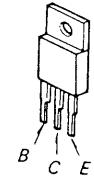


**RBA-402**

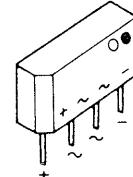


**$\mu$ PC4570HA-1**

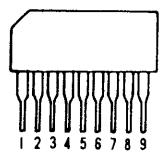


**2SA988-F**

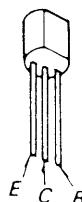


**2SC3113-AB**

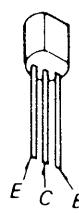


**2SK246-GR3**

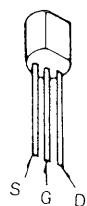


**SEL2810A-C**

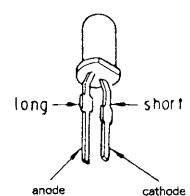


**$\mu$ PD75206G-557-1B**

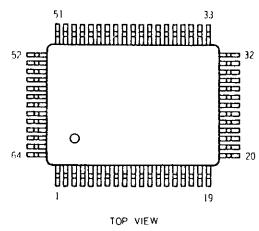


**2SA1175-HFE  
2SC2785-HFE**

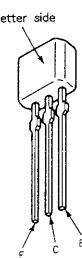

**2SD809-K**

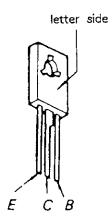

**HZS4ALL  
HZS6C3L  
RD27ESB2  
UZ-4.3BSB  
UZ-6.2BSC  
UZ-15BSB  
UZ-16BSB  
1N4148M  
11ES2**

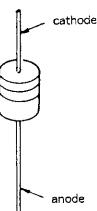



**3-2. PRINTED WIRING BOARDS**  
- MAIN SECTION -

**• Semiconductor Location**

| Ref. No. | Location | Ref. No. | Location |
|----------|----------|----------|----------|
| D301     | D-3      | IC301    | E-8      |
| D302     | D-3      | IC302    | E-3      |
| D303     | D-3      | IC304    | E-13     |
| D304     | D-3      | IC401    | C-17     |
| D305     | D-3      | IC402    | C-18     |
| D306     | D-3      | IC501    | I-6      |
| D307     | D-3      | IC601    | G-22     |
| D308     | D-3      |          |          |
| D309     | D-4      | Q302     | B-10     |
| D311     | F-13     | Q303     | B-11     |
| D312     | F-12     | Q304     | B-10     |
| D313     | F-7      | Q305     | D-11     |
| D314     | F-11     | Q306     | D-11     |
| D315     | F-11     | Q307     | D-11     |
| D317     | B-10     | Q401     | C-20     |
| D318     | B-11     | Q402     | D-20     |
| D319     | B-9      | Q403     | C-20     |
| D323     | D-4      | Q451     | C-20     |
| D324     | D-4      | Q452     | D-20     |
| D325     | D-4      | Q501     | I-7      |
| D326     | D-12     | Q502     | J-7      |
| D327     | D-11     | Q504     | I-7      |
| D328     | F-11     | Q505     | J-7      |
| D401     | C-22     | Q506     | J-7      |
| D402     | C-22     | Q551     | I-7      |
| D403     | H-19     | Q552     | I-8      |
| D502     | J-6      | Q601     | G-20     |
| D601     | G-20     | Q602     | G-20     |
| D602     | K-22     | Q603     | H-20     |
| D603     | H-20     | Q604     | H-20     |
| D604     | H-19     | Q605     | H-21     |
| D605     | G-16     | Q651     | G-20     |
| D651     | G-20     | Q701     | F-17     |
| D702     | E-17     | Q702     | E-18     |
| D703     | G-17     | Q703     | B-23     |
| D704     | E-19     | Q704     | B-23     |
| D705     | E-18     | Q705     | B-23     |
| D706     | B-23     | Q706     | B-22     |
| D707     | B-23     | Q707     | B-22     |
| D708     | B-23     | Q708     | B-21     |
| D709     | B-22     | Q709     | B-22     |
| D801     | D-22     | Q801     | C-22     |
| D803     | C-23     |          |          |
| D814     | C-23     |          |          |
| D815     | C-23     |          |          |
| D816     | C-22     |          |          |
| D817     | C-23     |          |          |
| D818     | C-23     |          |          |
| D819     | C-23     |          |          |

**Note:**  
 • : parts extracted from the component side.  
 • : parts mounted on the conductor side.  
 • : indicates side identified with part number.  
 • \*, \*A, \*B: See page 6 for Note on Ceramic Filter (CF1, 2) Replacement.

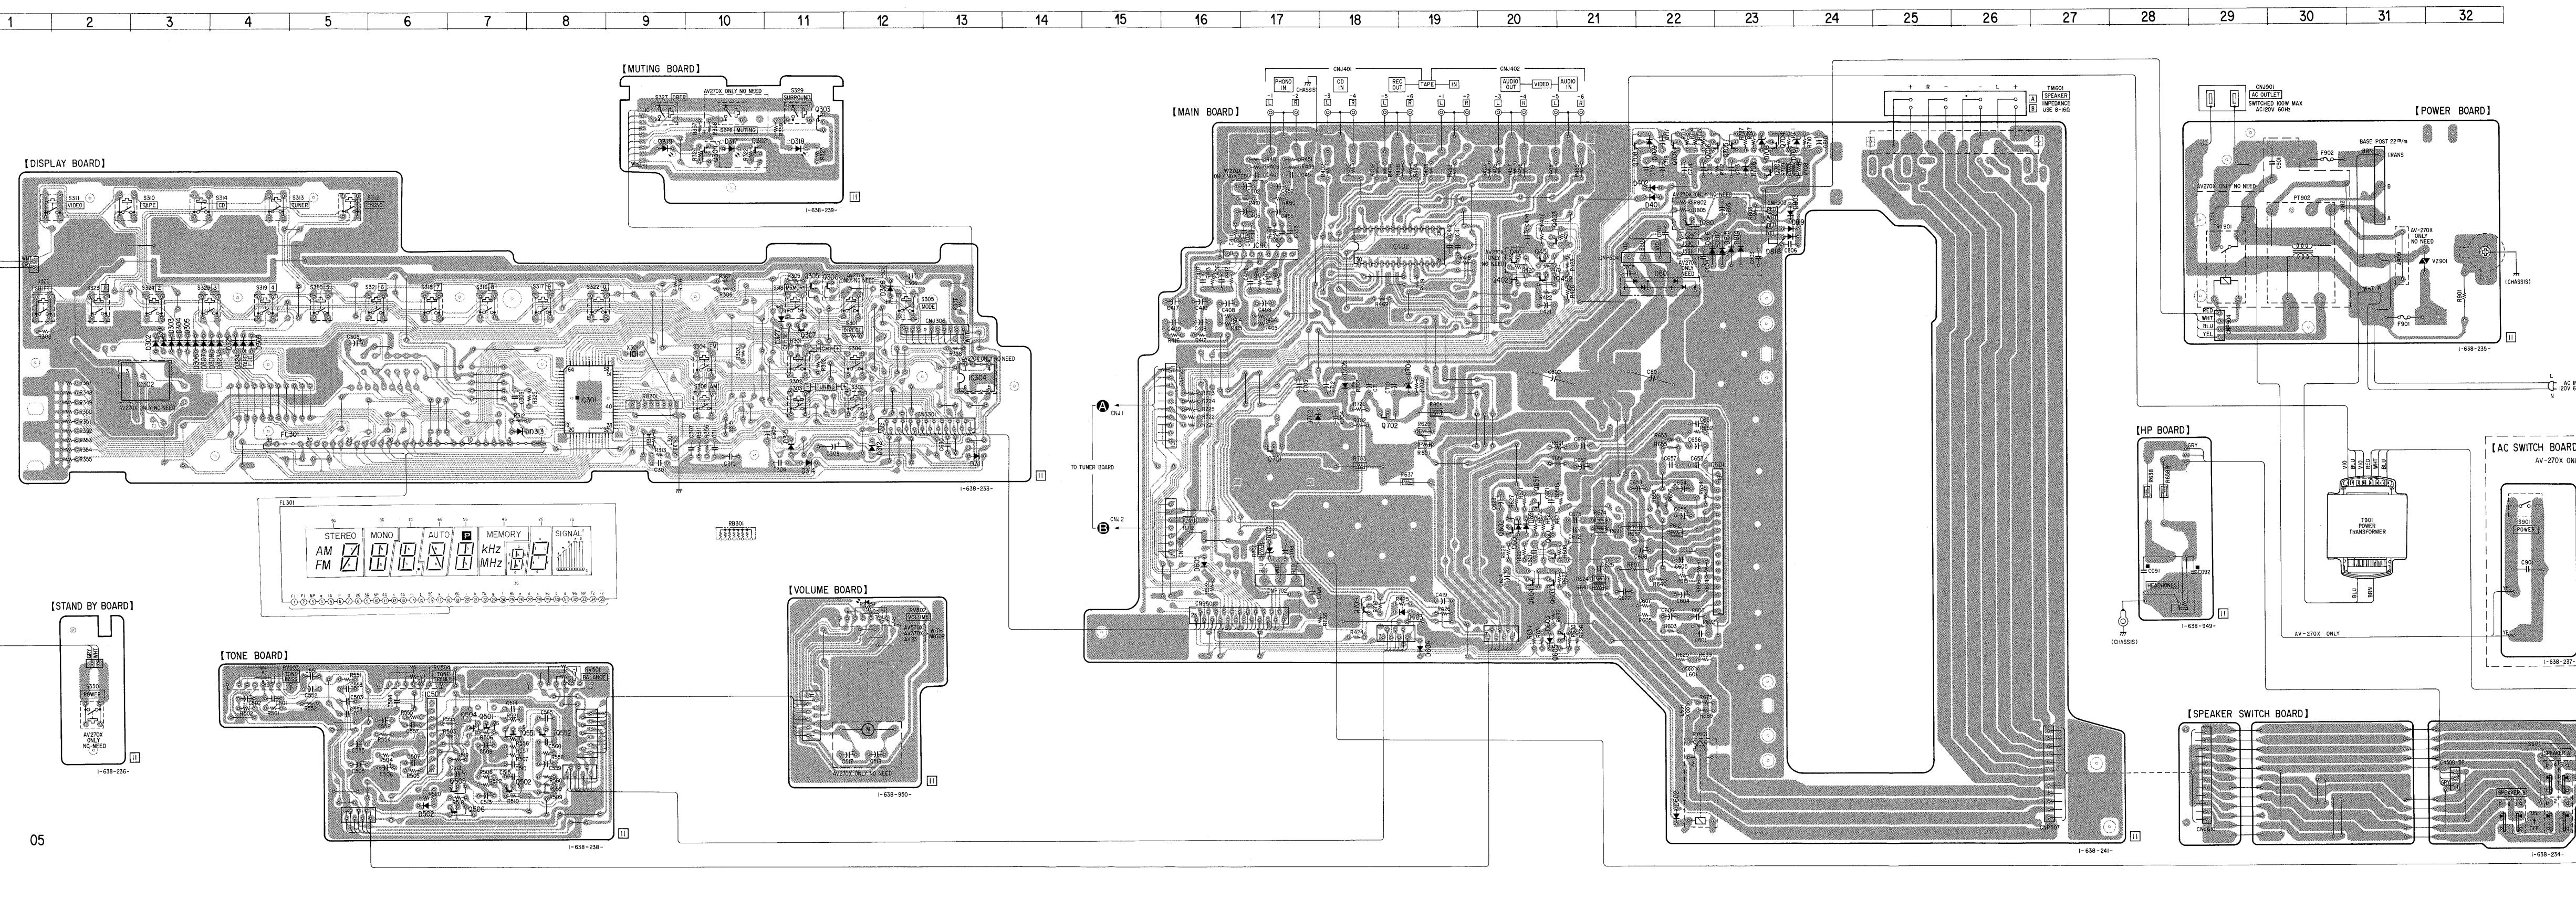

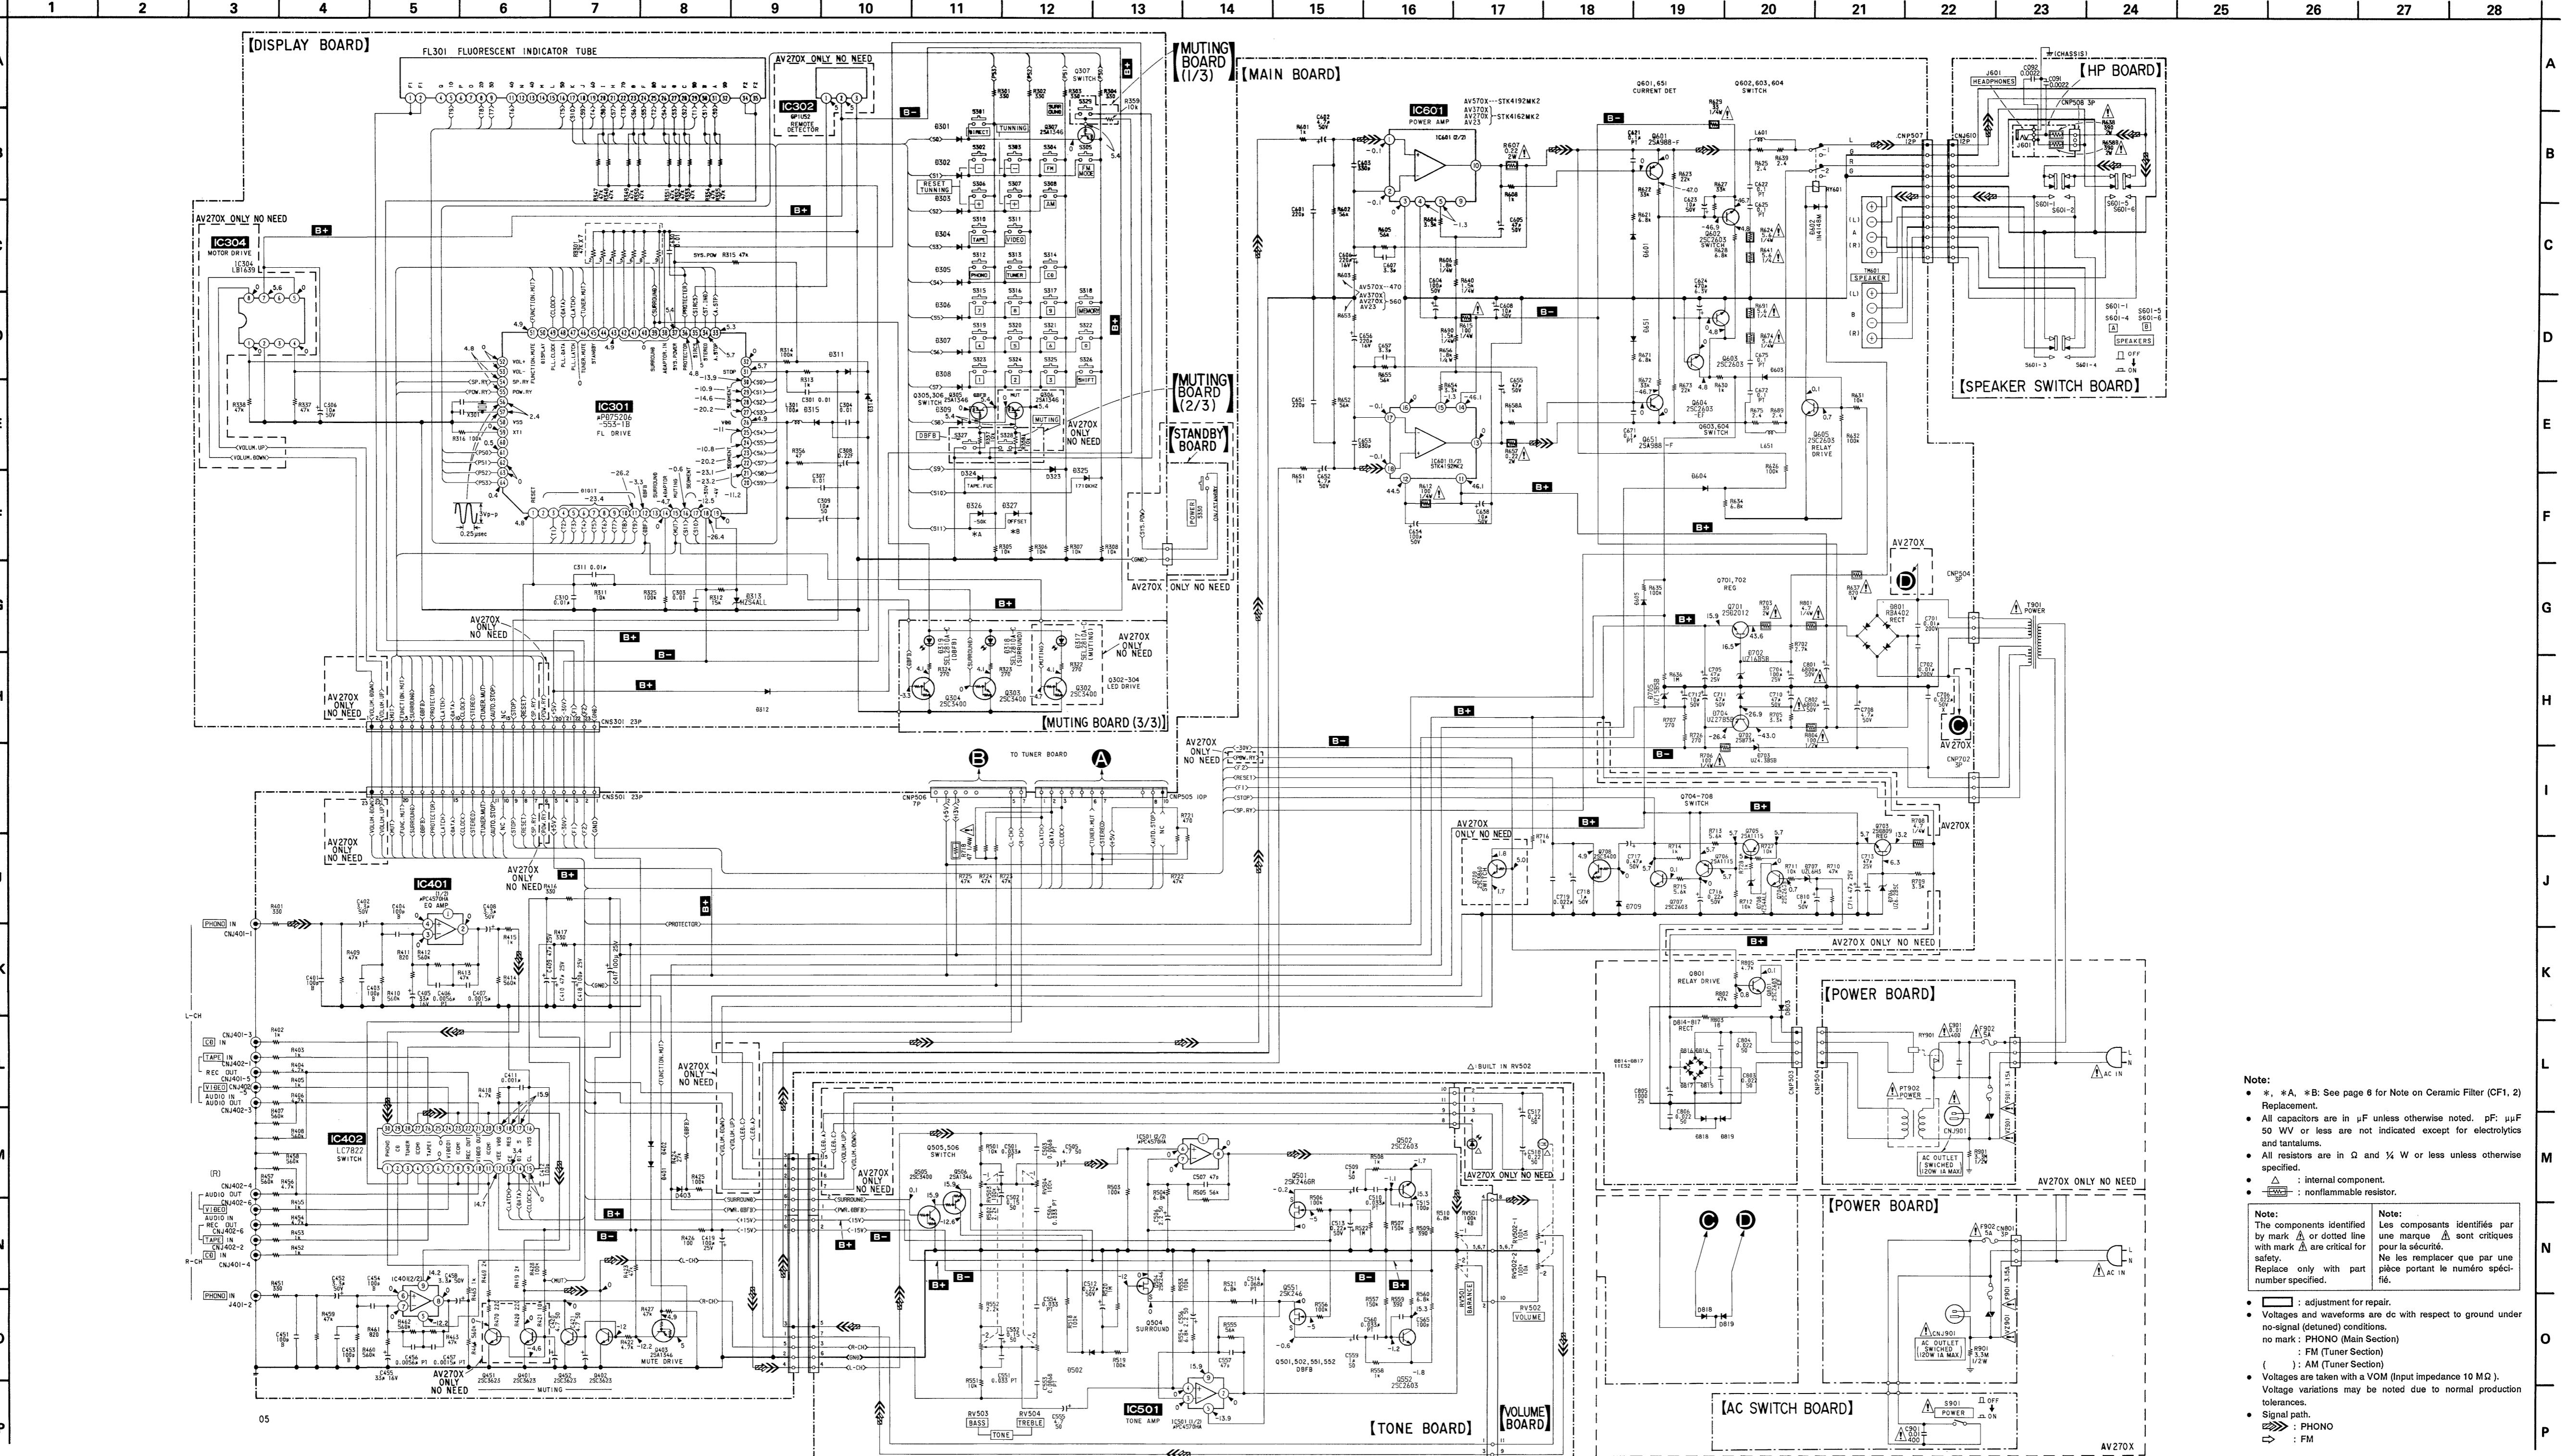

Note:  
• \*, \*A, \*B: See page 6 for Note on Ceramic Filter (CF1, 2).  
Replacement.

• All capacitors are in  $\mu\text{F}$  unless otherwise noted. pF:  $\mu\text{F}$   
50 WV or less are not indicated except for electrolytics and tantalums.

• All resistors are in  $\Omega$  and  $1/4$  W or less unless otherwise specified.

•  $\triangle$ : internal component.  
 $\square$ : nonflammable resistor.

**Note:**  
The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety.  
Replace only with part number specified.

**Note:**  
Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

**Note:**  
Les composants identifiés par une ligne pointillée avec une marque  $\triangle$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

•  $\square$ : adjustment for repair.  
• Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.

no mark: PHONO (Main Section)  
: FM (Tuner Section)

( ) : AM (Tuner Section)



• Voltages are taken with a VOM (Input impedance 10  $\Omega$ ).  
Voltage variations may be noted due to normal production tolerances.

• Signal path.  
 $\Rightarrow$ : PHONO  
 $\Leftrightarrow$ : FM

3-4. PRINTED WIRING BOARDS - TUNER SECTION - • See page 11 for Note.


• Semiconductor Location

| Ref. No. | Location | Ref. No. | Location |
|----------|----------|----------|----------|
| IC21     | I-3      | Q23      | I-5      |
| IC81     | F-7      | Q24      | I-5      |
| Q1       | F-5      | Q81      | H-6      |
| Q21      | M-6      | Q82      | H-6      |
| Q22      | M-6      | Q83      | H-6      |
|          |          | Q84      | F-6      |

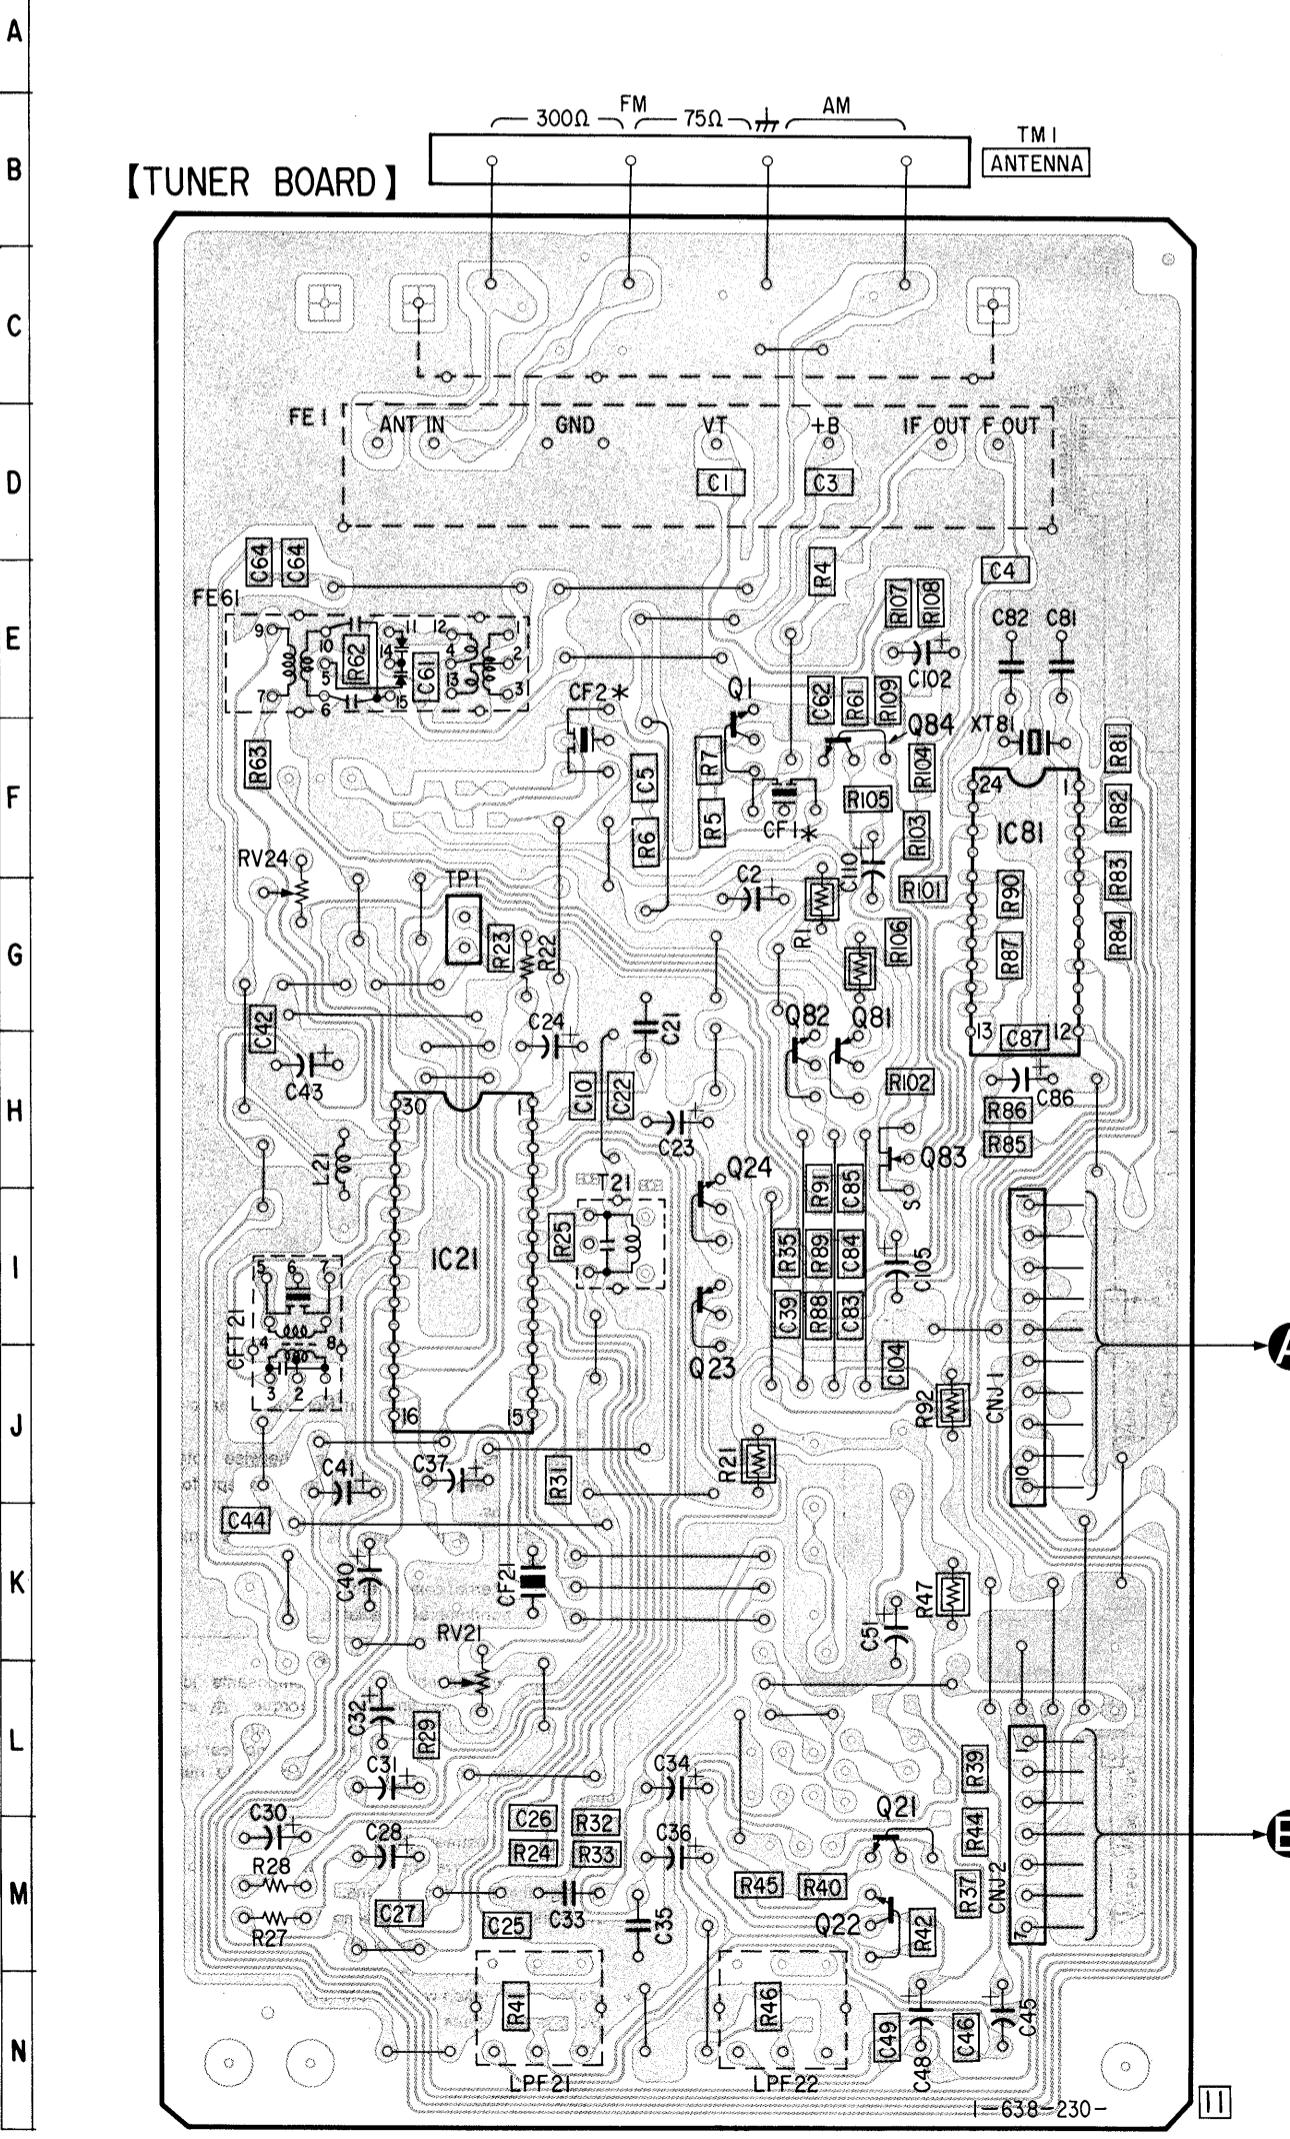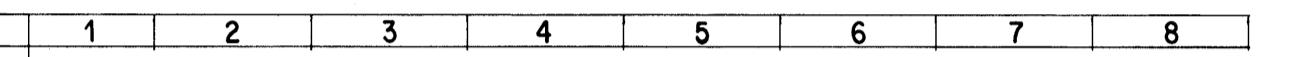


• IC BLOCK DIAGRAMS


IC21 LA1851N

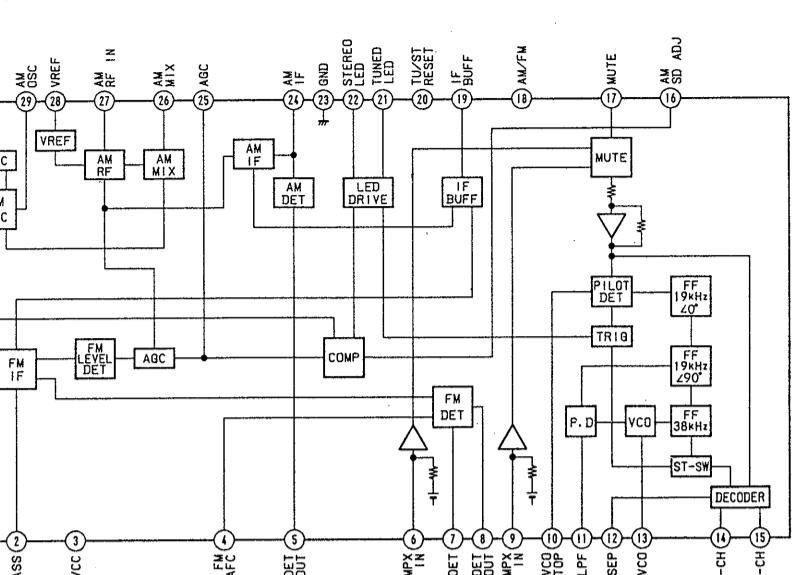


IC81 LC7218

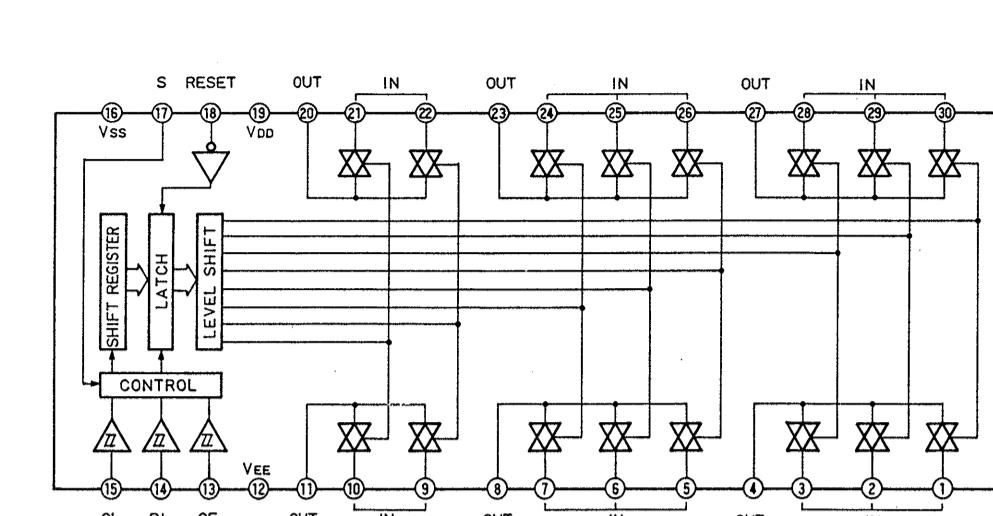


IC402 LC7822

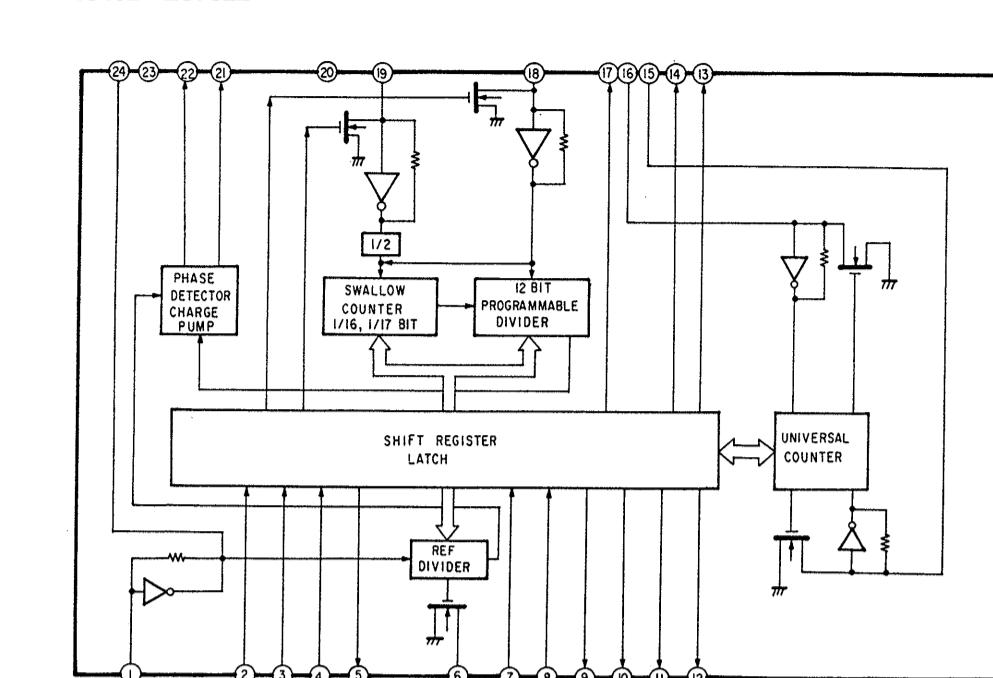


IC304 LB1639

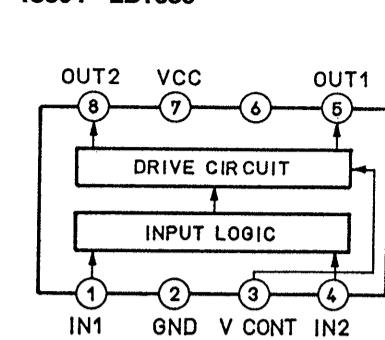


3-5. SCHEMATIC DIAGRAM - TUNER SECTION - • See page 18 for Note.

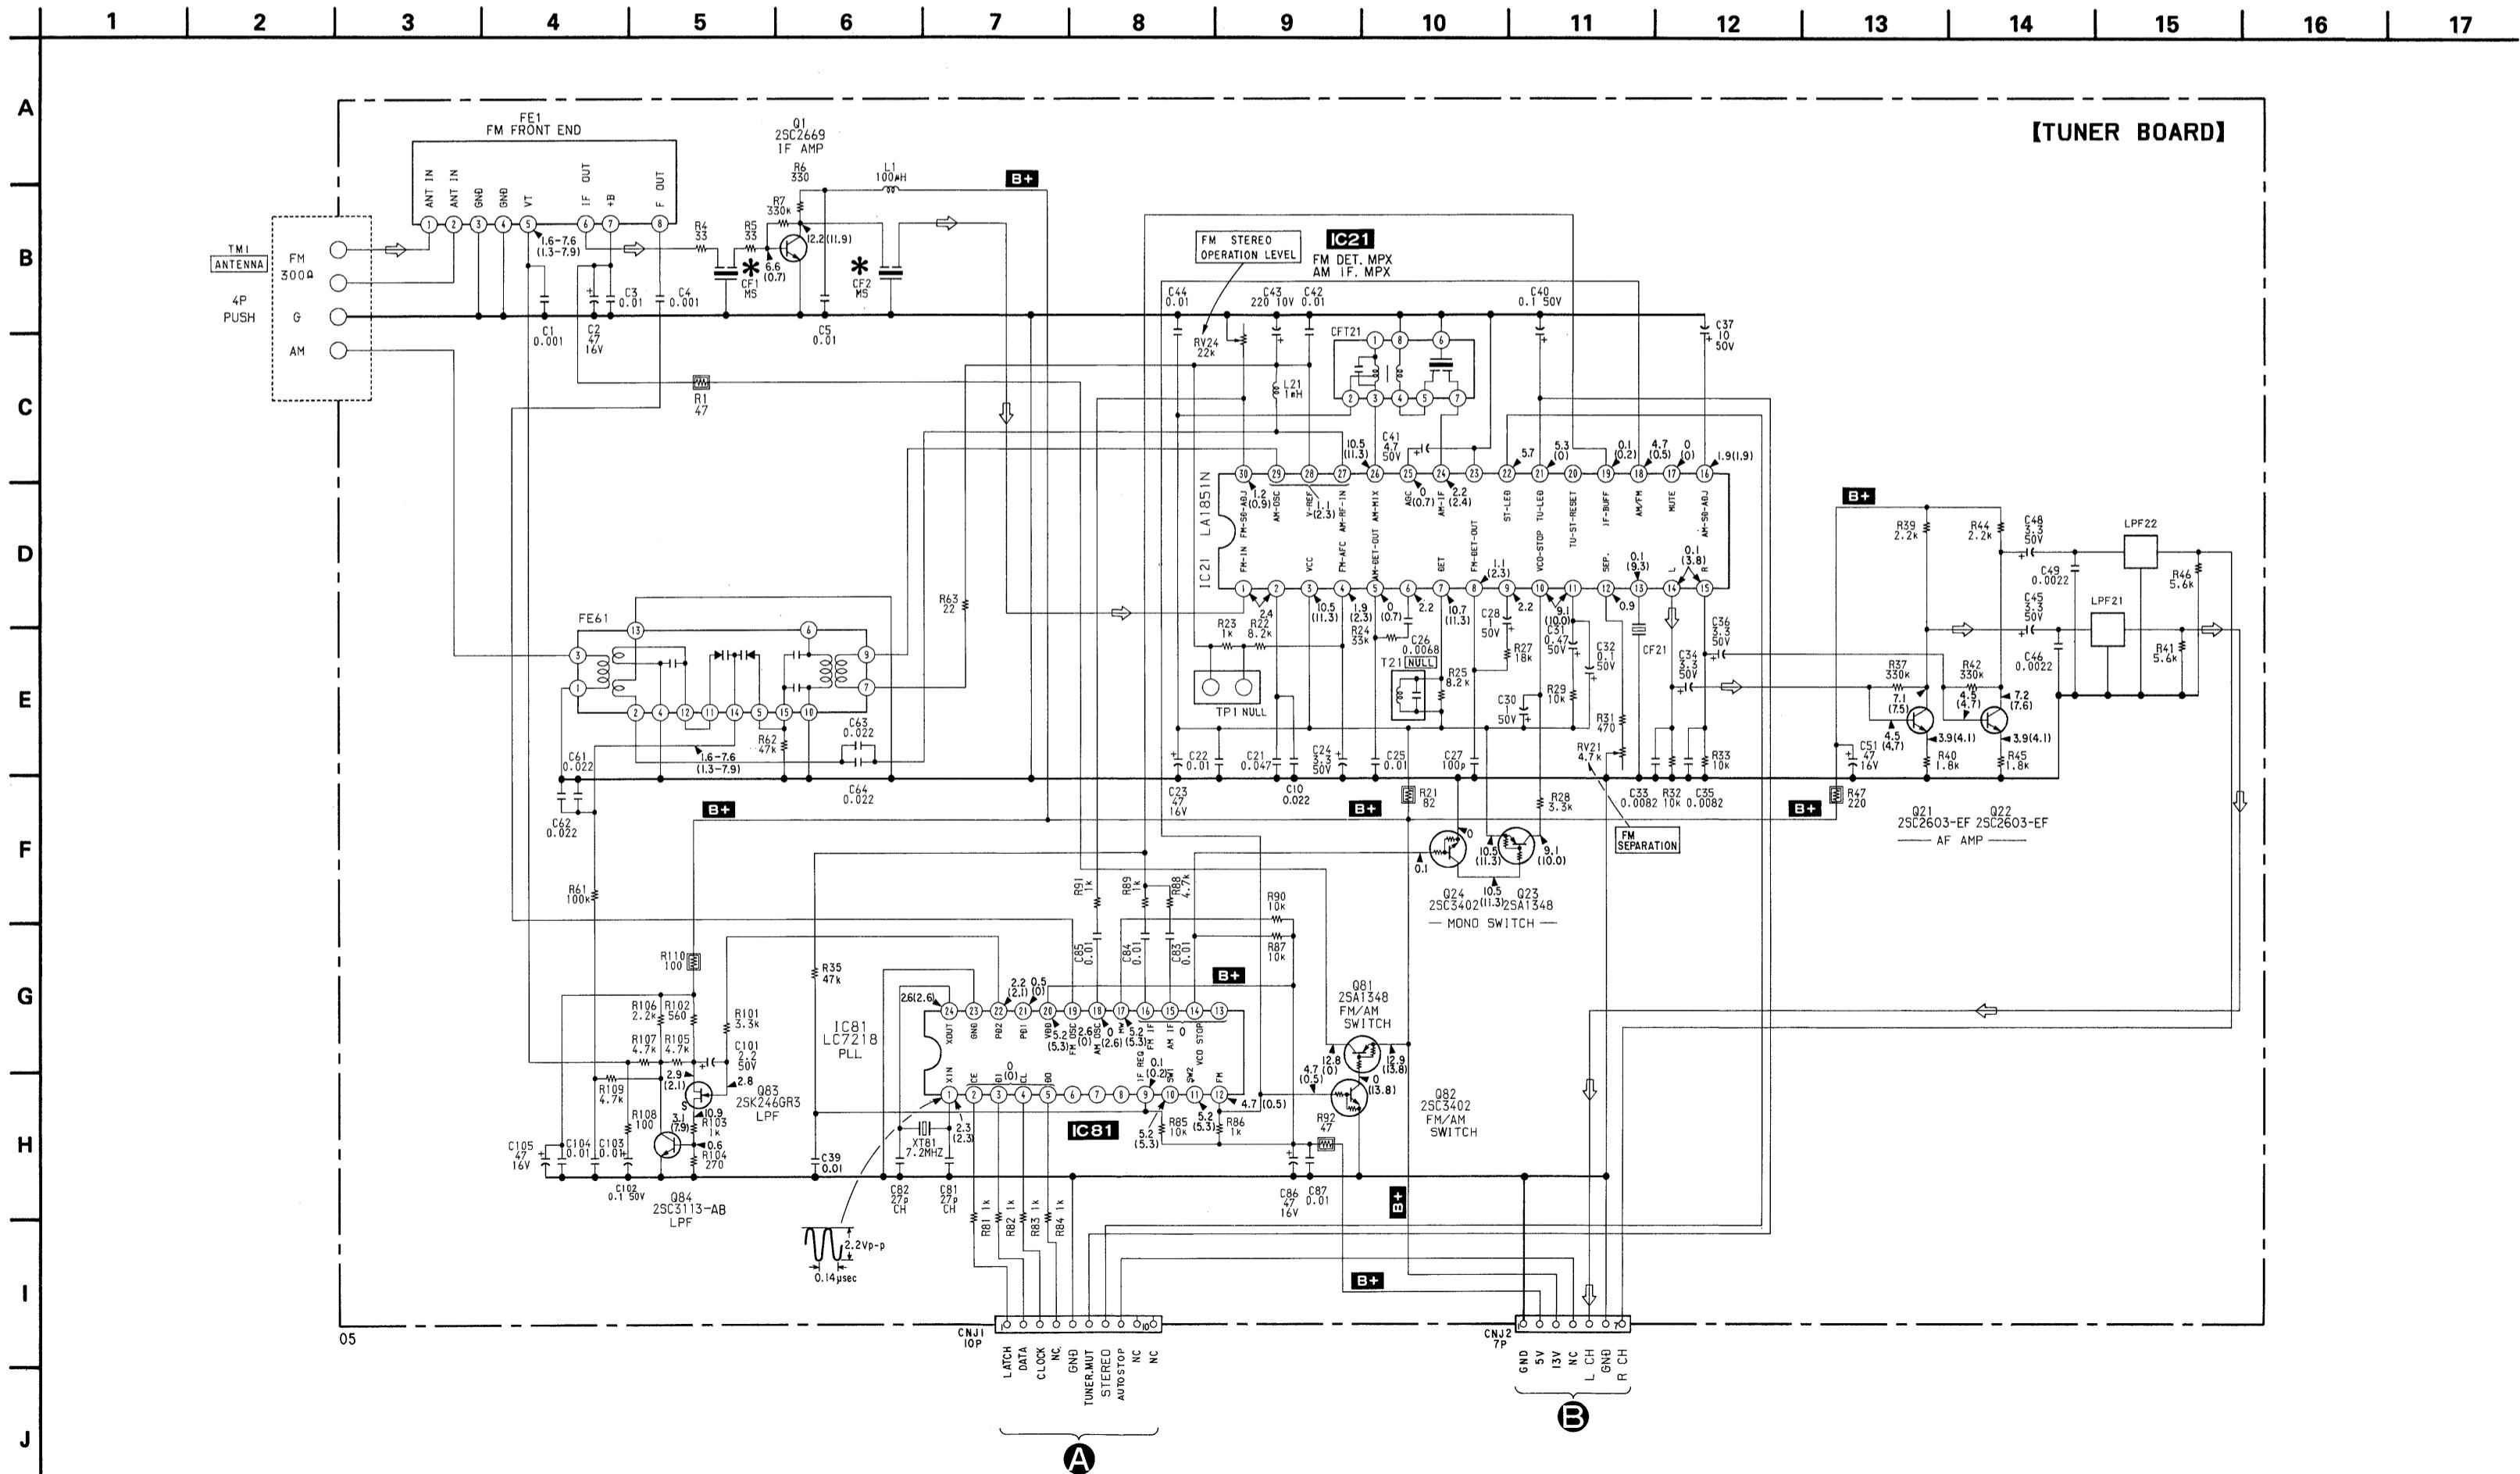

IC601 STR4162MK2 (AV370X/AV270X/AV23)  
STK4192MK2 (AV570X)

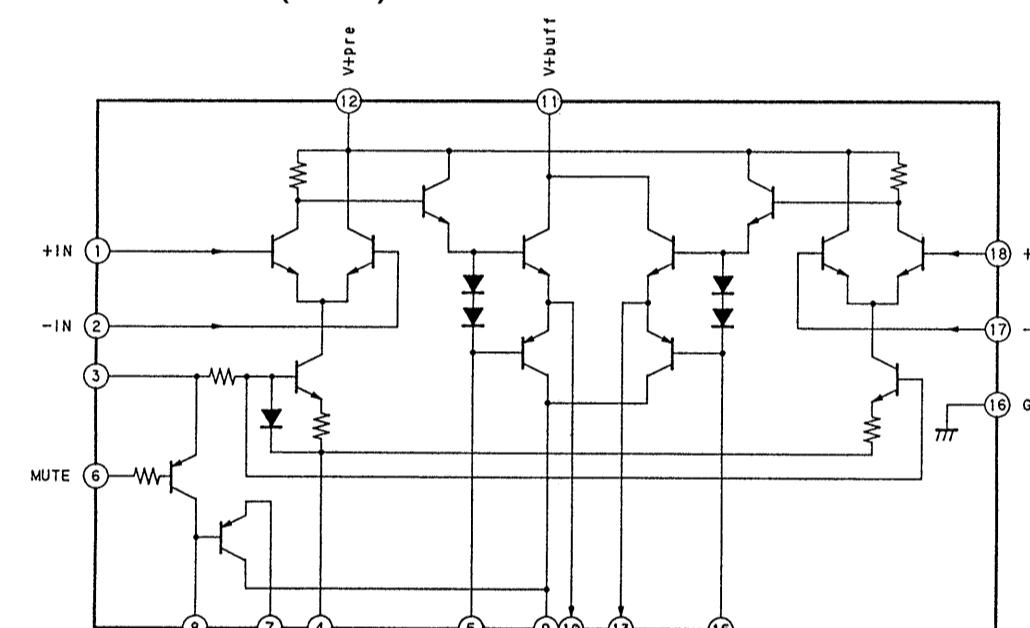

IC401, IC501 μPC4570HA

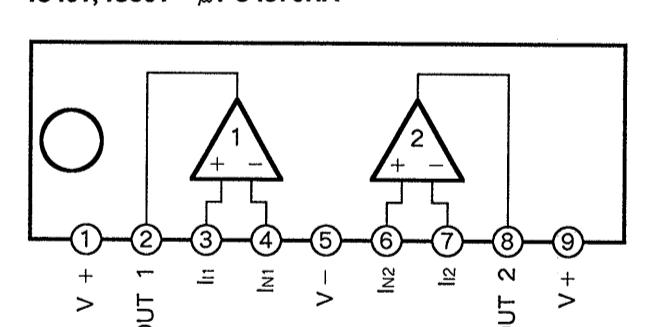

**3-6. EXPLANATION OF IC301 ( $\mu$ PD75206)**

| PIN No. | SIGNAL NAME | FUNCTION                                   | I/O     | ACTIVE |   |
|---------|-------------|--|---------|--------|---|
| 1       | RESET       | Micro Computer RESET                       | I       | L      |   |
| 2       | T0          | FL tube indication (invalid) digit         | O       | H      |   |
| 3       | T1          | FL tube indication digit                   | T1      | O      | H |
| 4       | T2          | FL tube indication digit                   | T2      | O      | H |
| 5       | T3          | FL tube indication digit                   | T3      | O      | H |
| 6       | T4          | FL tube indication digit                   | T4      | O      | H |
| 7       | T5          | FL tube indication digit                   | T5      | O      | H |
| 8       | T6          | FL tube indication digit                   | T6      | O      | H |
| 9       | T7          | FL tube indication digit                   | T7      | O      | H |
| 10      | T8          | FL tube indication digit                   | T8      | O      | H |
| 11      | T9          | FL tube SIGNAL indication digit            | T9      | O      | H |
| 12      | T10/PH3     | DBFB Output                                | O       | H      |   |
| 13      | T11/PH2     | IF WIDE/NARROW Output                      | O       | H      |   |
| 14      | T12/PH1     | Adapter Output                             | O       | H      |   |
| 15      | T13/PH0     | -20dB Muting Output                        | O       | H      |   |
| 16      | T14/S11     | FL tube indication Segment/Diode           | S11     | O      | H |
| 17      | T15/S10     | FL tube indication Segment/Diode           | S10     | O      | H |
| 18      | V road      | FL tube pulldown power supply              | -       | -      |   |
| 19      | V pre       | FL tube driver power supply                | -       | -      |   |
| 20      | S9          | FL tube indication Segment/Diode           | S9      | O      | H |
| 21      | S8          | FL tube indication Segment/Key Scan        | S8      | O      | H |
| 22      | S7          | FL tube indication Segment/Key Scan        | S7      | O      | H |
| 23      | S6          | FL tube indication Segment/Key Scan        | S6      | O      | H |
| 24      | S5          | FL tube indication Segment/Key Scan        | S5      | O      | H |
| 25      | S4          | FL tube indication Segment/Key Scan        | S4      | O      | H |
| 26      | Vdd         | Micro Computer power supply                | -       | -      |   |
| 27      | S3          | FL tube indication Segment/Key Scan        | S3      | O      | H |
| 28      | S2          | FL tube indication Segment/Key Scan        | S2      | O      | H |
| 29      | S1          | FL tube indication Segment/Key Scan        | S1      | O      | H |
| 30      | S0          | FL tube indication Segment/Key Scan        | S0      | O      | H |
| 31      | P00/INT4    | Signal to cut power supply                 | STOP    | I      | L |
| 32      | P01/SCK     | Serial latch for electrical adjustment use | SI. LAT | I      | L |

| PIN No. | SIGNAL NAME | FUNCTION                        | I/O            | ACTIVE |
|---------|-------------|---------------------------------|----------------|--------|
| 33      | P02/S0      | Tuner Auto Stop input           | ASTP           | I L    |
| 34      | P03/S1      | Tuner Stereo input              | STEREO         | I L    |
| 35      | P10/INT0    | Remote Control Signal input     | SIRCS          | I L    |
| 36      | P11/INT1    | Protector input                 | PROTECT        | I L    |
| 37      | P12/INT2    | System Power Key input          | PKEY           | I L    |
| 38      | P13/TI0     | Adapter Mechanical Switch input | AKEY           | I H    |
| 39      | P20         | Surround output                 | SURROUND       | O H    |
| 40      | P21         | Video Control A                 | VCRA           | O H    |
| 41      | P22         | Video Control B                 | VCRB           | O H    |
| 42      | P23/BUZ     | Video Inhibit                   | VCRI           | O H    |
| 43      | P30         | Protector Muting                | PMUT           | O L    |
| 44      | P31         | Source Direct Output            |                | O H    |
| 45      | P32         | Standby LED Output              | STANBY         | O H    |
| 46      | P33         | Tuner Muting                    | TMUTE          | O H    |
| 47      | P60         | PLL/7822 Latch                  | PLAT           | O H    |
| 48      | P61         | PLL/7822/SI Data                | DATA           | I/O H  |
| 49      | P62         | PLL/7822/SI Clock               | CLOK           | I/O H  |
| 50      | P63         | IF WIDE/NARROW Display output   |                | O H    |
| 51      | P40         | Function Muting                 | FMUTE          | O L    |
| 52      | P41         | Motor Volume UP                 | VOL+           | O H    |
| 53      | P42         | Motor Volume DOWN               | VOL-           | O H    |
| 54      | P43         | Speaker Relay                   | SP. RY         | O H    |
| 55      | PP0         | Power Relay                     | POW. RY        | O H    |
| 56      | X1          | Ceramic Oscillator              |                | - -    |
| 57      | X2          | Ceramic Oscillator              |                | - -    |
| 58      | Vss         | Micro Computer GND              |                | - -    |
| 59      | XT1         | -                               |                | - -    |
| 60      | XT2         | -                               |                | - -    |
| 61      | P50         | P50                             | Key Scan Input | I H    |
| 62      | P51         | P51                             | Key Scan Input | I H    |
| 63      | P52         | P52                             | Key Scan Input | I H    |
| 64      | P53         | P53                             | Key Scan Input | I H    |

## SECTION 4

### EXPLODED VIEWS


**NOTE:**

- -XX and -X mean standardized parts, so they may have some differences from the original one.
- Color Indication of Appearance Parts Example:  
KNOB, BALANCE (WHITE) . . . (RED)  
 ↑                      ↑  
 Parts Color   Cabinet's Color

- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list is given in the last of this parts list.


The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

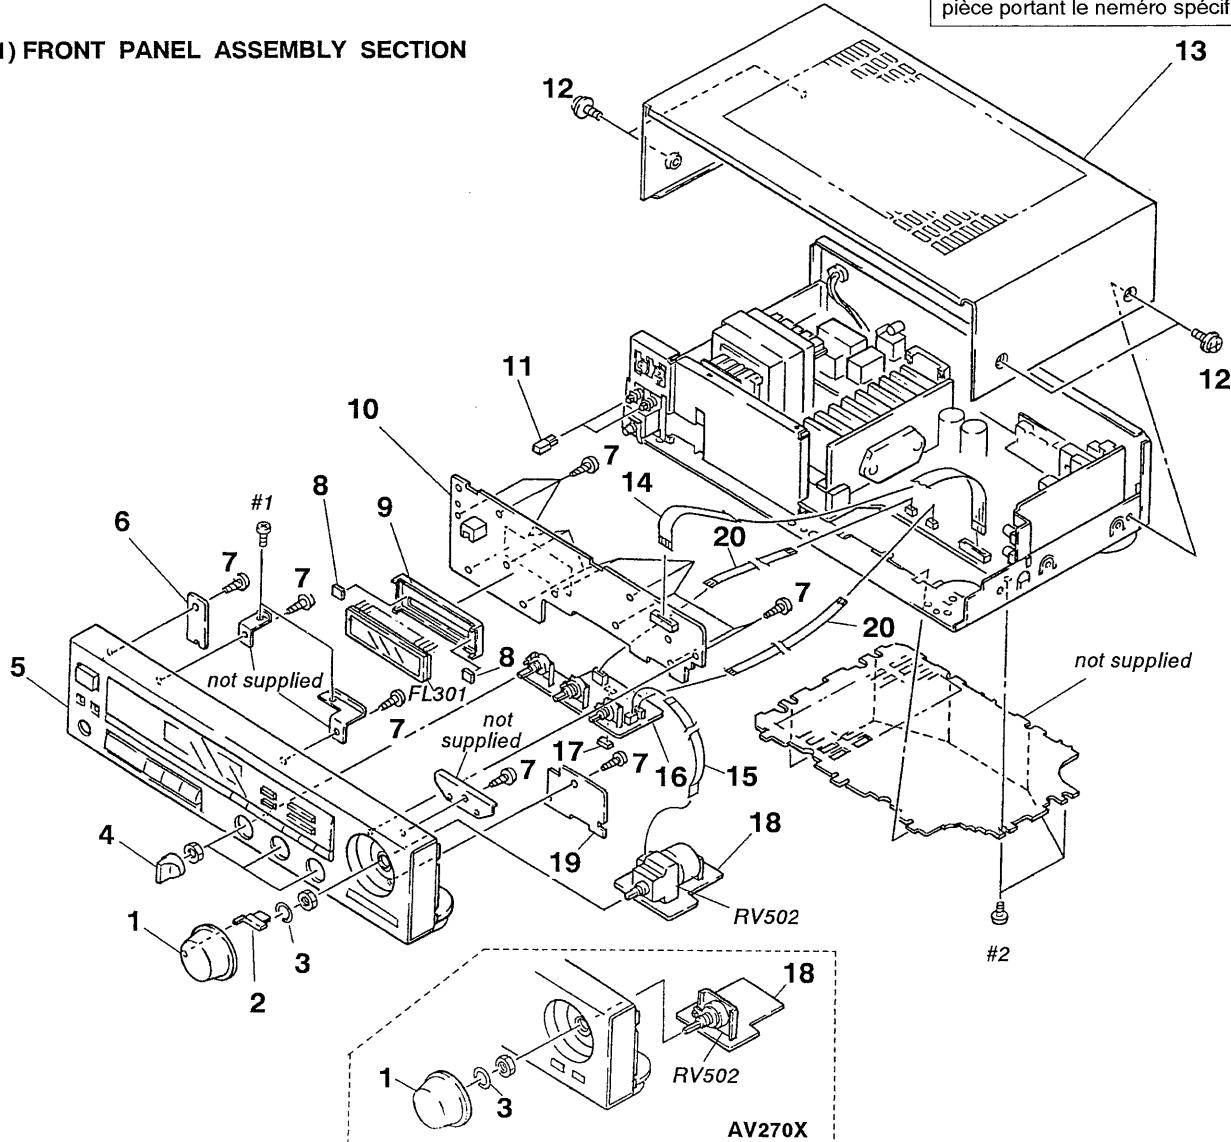**(1) FRONT PANEL ASSEMBLY SECTION**


| Ref. No. | Part No.       | Description                                   | Remark | Ref. No. | Part No.       | Description                                  | Remark |
|----------|----------------|---|--------|----------|----------------|--|--------|
| 1        | 4-943-091-11   | KNOB (VOLUME) (AV270X)                        |        | 10       | * A-4341-720-A | DISPLAY BOARD, COMPLETE (AV270X)             |        |
| 1        | 4-943-091-01   | KNOB (VOLUME) (AV570X/AV370X/AV23)            |        | 10       | * A-4341-729-A | DISPLAY BOARD, COMPLETE (AV570X/AV370X/AV23) |        |
| 2        | 4-943-092-01   | PLATE (VOL), LIGHT GUIDE (AV570X/AV370X/AV23) |        | 11       | 4-943-087-01   | BUTTON (S)                                   |        |
| 3        | 3-350-426-01   | SPRING, RING                                  |        | 12       | 3-704-366-01   | SCREW (CASE) (M3X8)                          |        |
| 4        | 4-916-745-11   | KNOB (DIA. 21) (TONE)                         |        | 13       | 4-943-088-11   | CASE   |        |
| 5        | A-4323-871-A   | PANEL ASSY, FRONT (AV570X)                    |        | 14       | * 1-590-499-11 | WIRE, FLAT TYPE (23 CORE)                    |        |
| 5        | A-4323-900-A   | PANEL ASSY, FRONT (AV370X)                    |        | 15       | * 1-590-770-11 | WIRE, FLAT TYPE (11 CORE)                    |        |
| 5        | A-4323-869-A   | PANEL ASSY, FRONT (AV270X)                    |        | 16       | * A-4341-733-A | TONE BOARD, COMPLETE                         |        |
| 5        | A-4323-868-A   | PANEL ASSY, FRONT (AV23)                      |        | 17       | 9-911-842-XX   | CUSHION (CD), RUBBER                         |        |
| 6        | * 1-638-236-11 | STAND BY BOARD (AV570X/AV370X/AV23)           |        | 18       | * 1-638-950-11 | VOLUME BOARD                                 |        |
| 7        | 4-928-635-01   | SCREW, +BV (2.6X8) TAPPING                    |        | 19       | * 1-638-239-11 | MUTING BOARD                                 |        |
| 8        | * 4-921-941-01 | CUSHION (FL)                                  |        | 20       | * 1-590-769-11 | WIRE, FLAT TYPE (7 CORE)                     |        |
| 9        | * 4-943-107-01 | HOLDER (FL TUBE)                              |        |          |                |  |        |

(2) CHASSIS SECTION

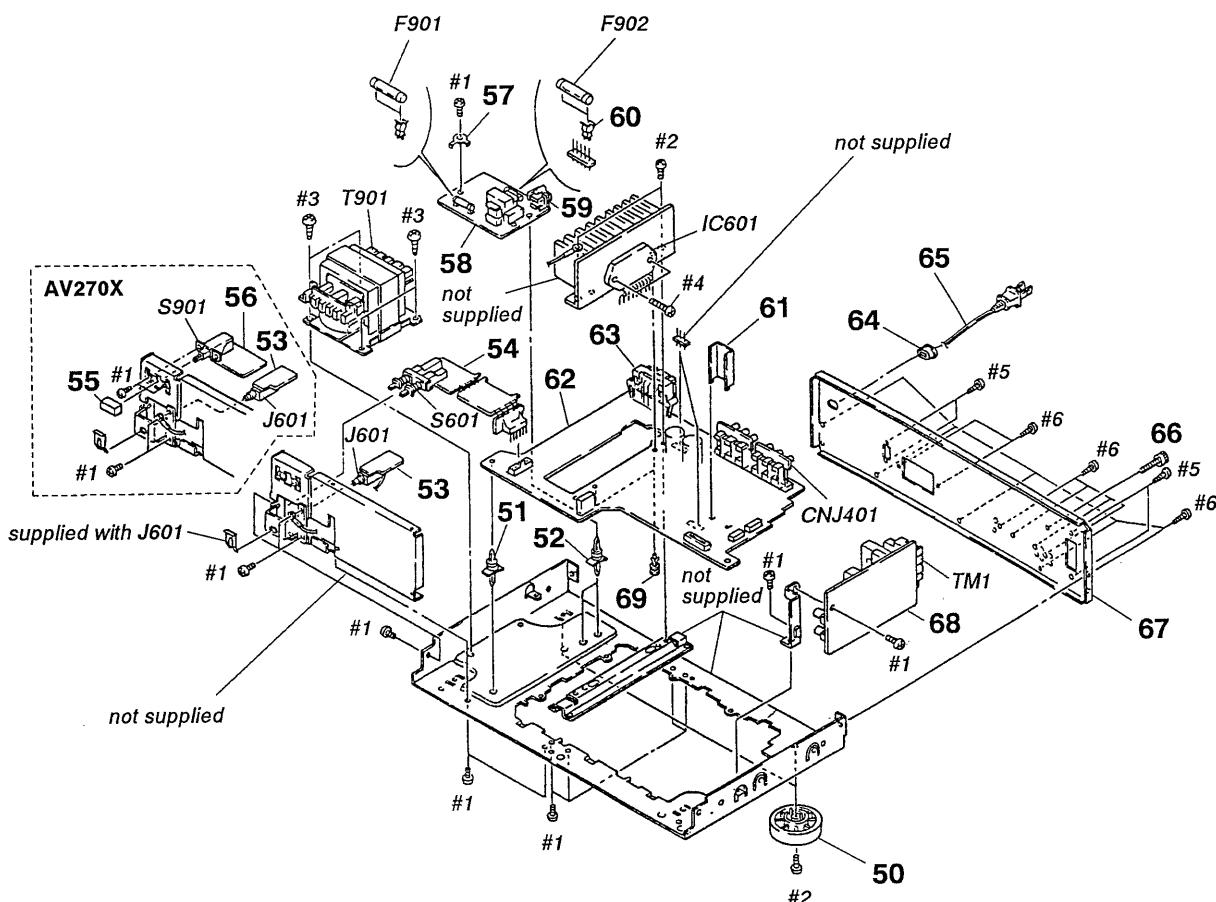

| Ref. No. | Part No.       | Description                        | Remark |
|----------|----------------|------------------------------------|--------|
| 50       | 3-318-688-51   | FOOT (F58175S)                     |        |
| 51       | * 4-924-098-11 | HOLDER, PC BOARD                   |        |
| 52       | * 4-924-098-31 | HOLDER, PC BOARD                   |        |
| 53       | * 1-638-949-11 | HP BOARD                           |        |
| 54       | * 1-638-234-11 | SPEAKER SWITCH BOARD               |        |
| 55       | 4-917-460-01   | KNOB, POWER (AV270X)               |        |
| 56       | * 1-638-237-11 | AC SWITCH BOARD (AV270X)           |        |
| 57       | * 4-942-204-11 | PLATE, GROUND                      |        |
| 58       | * 1-638-235-11 | POWER BOARD                        |        |
| 59       | △ 1-540-057-11 | OUTLET, AC (POLAR)                 |        |
| 60       | 1-533-217-31   | HOLDER, FUSE                       |        |
| 61       | * 4-880-403-11 | HEAT SINK                          |        |
| 62       | * A-4341-726-A | MAIN BOARD, COMPLETE (AV570X)      |        |
| 62       | * A-4341-718-A | MAIN BOARD, COMPLETE (AV270X)      |        |
| 62       | * A-4345-248-A | MAIN BOARD, COMPLETE (AV370X/AV23) |        |

| Ref. No. | Part No.       | Description                             | Remark |
|----------|----------------|---|--------|
| 63       | 1-537-341-11   | TERMINAL BOARD, (8P) (SPEAKER)          |        |
| 64       | * 3-703-244-00 | BUSHING (2104), CORD                    |        |
| 65       | △ 1-551-478-00 | CORD, POWER                             |        |
| 66       | 3-706-165-00   | SCREW                                   |        |
| 67       | * 4-943-098-01 | PANEL, BACK (AV570X)                    |        |
| 67       | * 4-943-109-01 | PANEL, BACK (AV270X)                    |        |
| 67       | * 4-943-109-31 | PANEL, BACK (AV23)                      |        |
| 67       | * 4-943-109-41 | PANEL, BACK (AV370X)                    |        |
| 68       | * A-4341-739-A | TUNER BOARD, COMPLETE                   |        |
| 69       | * 3-698-359-01 | RIVET (DIA 3.5), NYLON                  |        |
| F901     | △ 1-576-107-11 | FUSE GLASS TUBE (3.15A 125V)            |        |
| F902     | △ 1-576-109-11 | FUSE GLASS TUBE (5A 125V)               |        |
| T901     | △ 1-450-365-11 | TRANSFORMER, POWER (AV370X/AV270X/AV23) |        |
| T901     | △ 1-450-362-11 | TRANSFORMER, POWER (AV570X)             |        |

**Note:**  
 The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

**Note:**  
 Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

## SECTION 5

### ELECTRICAL PARTS LIST

AC SWITCH

DISPLAY

POWER

STAND BY

VOLUME

**NOTE:**

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some differences from the original one.
- **RESISTORS**  
All resistors are in ohms.  
METAL: Metal-film resistor  
METAL OXIDE: Metal Oxide-film resistor  
F: nonflammable

• Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

**• SEMICONDUCTORS**

In each case, u:  $\mu$ , for example:  
uA...:  $\mu$ A...;  $\mu$ PA...:  $\mu$ PA...  
 $\mu$ PB...:  $\mu$ PB...;  $\mu$ PC...:  $\mu$ PC...  
 $\mu$ PD...:  $\mu$ PD...

**• CAPACITORS**

uF:  $\mu$ F

**• COILS**

uH:  $\mu$ H

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When including parts by reference number, please include the board name.

| Ref. No.   | Part No.     | Description   | Remark        |
|--|--------------|---|---------------|
| -----  |              |   |               |
| * 1-638-237-11 AC SWITCH BOARD (AV270X)<br>*****   |              |   |               |
| < CAPACITOR >  |              |   |               |
| C901 $\Delta$  | 1-161-744-00 | CERAMIC 0.01uF                                      | 400V (AV270X) |
| < SWITCH >   |              |   |               |
| S901 $\Delta$  | 1-572-267-21 | SWITCH, PUSH (AC POWER) (1 KEY)<br>(POWER) (AV270X) |               |
| *****  |              |   |               |
| * A-4341-720-A DISPLAY BOARD, COMPLETE<br>*****  |              |   |               |
| * 1-638-235-11 POWER BOARD<br>*****  |              |   |               |
| * 1-638-236-11 STAND BY BOARD<br>*****   |              |   |               |
| * 1-638-950-11 VOLUME BOARD<br>*****   |              |   |               |
| 1-533-217-31 HOLDER, FUSE<br>1-533-217-31 HOLDER, FUSE   |              |   |               |
| * 1-535-140-00 BASE POST 22MM (10MM PITCH) 3P<br>1-535-416-00 TERMINAL   |              |   |               |
| * 1-568-830-11 SOCKET, CONNECTOR 11P<br>* 4-921-941-01 CUSHION (FL)<br>* 4-942-204-01 PLATE, GROUND<br>* 4-943-107-01 HOLDER (FL TUBE) |              |   |               |
| < CAPACITOR >  |              |   |               |
| C301   | 1-162-306-11 | CERAMIC 0.01uF                                      | 20% 16V       |
| C303   | 1-162-306-11 | CERAMIC 0.01uF                                      | 20% 16V       |
| C304   | 1-162-306-11 | CERAMIC 0.01uF                                      | 20% 16V       |
| C306   | 1-124-261-00 | ELECT 10uF  | 20% 50V       |
| C307   | 1-162-306-11 | CERAMIC 0.01uF                                      | 20% 16V       |

| Ref. No.             | Part No.              | Description                            | Remark  |
|----------------------|-----------------------|--|---------|
| -----                |                       |  |         |
| C308                 | 1-125-486-11          | DUBLE LAYERS 0.22F                     | 5.5V    |
| C309                 | 1-124-261-00          | ELECT 10uF                             | 20% 50V |
| C310                 | 1-162-306-11          | CERAMIC 0.01uF                         | 20% 16V |
| C311                 | 1-162-306-11          | CERAMIC 0.01uF                         | 20% 16V |
| C517                 | 1-124-464-11          | ELECT 0.22uF                           | 20% 50V |
| (AV570X/AV370X/AV23) |                       |  |         |
| C518                 | 1-124-464-11          | ELECT 0.22uF                           | 20% 50V |
| (AV570X/AV370X/AV23) |                       |  |         |
| C630                 | 1-162-306-11          | CERAMIC 0.01uF                         | 20% 16V |
| C901                 | 1-161-744-00          | CERAMIC 0.01uF                         | 400V    |
| < CONNECTOR >        |                       |  |         |
| CNJ306               | * 1-568-937-11        | PIN, CONNECTOR 10P                     |         |
| CNJ901               | $\Delta$ 1-540-057-11 | OUTLET, AC (POLAR)                     |         |
| CNP904               | * 1-560-062-00        | PIN, CONNECTOR 4P (AV570X/AV370X/AV23) |         |
| CNS301               | * 1-568-865-11        | SOCKET, CONNECTOR 23P                  |         |
| CNS302               | * 1-568-951-11        | PIN, CONNECTOR 2P (AV570X/AV370X/AV23) |         |
| < DIODE >            |                       |  |         |
| D301                 | 8-719-987-63          | DIODE 1N4148M                          |         |
| D302                 | 8-719-987-63          | DIODE 1N4148M                          |         |
| D303                 | 8-719-987-63          | DIODE 1N4148M                          |         |
| D304                 | 8-719-987-63          | DIODE 1N4148M                          |         |
| D305                 | 8-719-987-63          | DIODE 1N4148M                          |         |
| D306                 | 8-719-987-63          | DIODE 1N4148M                          |         |
| D307                 | 8-719-987-63          | DIODE 1N4148M                          |         |
| D308                 | 8-719-987-63          | DIODE 1N4148M                          |         |
| D309                 | 8-719-987-63          | DIODE 1N4148M                          |         |
| D311                 | 8-719-987-63          | DIODE 1N4148M                          |         |
| D312                 | 8-719-987-63          | DIODE 1N4148M                          |         |
| D313                 | 8-719-985-53          | DIODE HZS4ALL                          |         |
| D314                 | 8-719-987-63          | DIODE 1N4148M                          |         |
| D315                 | 8-719-987-63          | DIODE 1N4148M                          |         |

|         |       |          |        |
|---------|-------|----------|--------|
| DISPLAY | POWER | STAND BY | VOLUME |
|---------|-------|----------|--------|

| Ref. No. | Part No.     | Description                      | Remark               | Ref. No. | Part No.     | Description                         | Remark                |
|----------|--------------|----------------------------------|----------------------|----------|--------------|-------------------------------------|-----------------------|
| D323     | 8-719-987-63 | DIODE 1N4148M                    |                      | R337     | 1-249-437-11 | CARBON                              | 47K 5% 1/4W           |
| D324     | 8-719-987-63 | DIODE 1N4148M                    |                      | R338     | 1-249-437-11 | CARBON                              | 47K 5% 1/4W           |
| D325     | 8-719-987-63 | DIODE 1N4148M                    |                      | R347     | 1-249-437-11 | CARBON                              | 47K 5% 1/4W           |
| D326     | 8-719-987-63 | DIODE 1N4148M                    |                      | R348     | 1-249-437-11 | CARBON                              | 47K 5% 1/4W           |
| D327     | 8-719-987-63 | DIODE 1N4148M                    |                      | R349     | 1-249-437-11 | CARBON                              | 47K 5% 1/4W           |
| D803     | 8-719-987-63 | DIODE 1N4148M                    |                      | R350     | 1-249-437-11 | CARBON                              | 47K 5% 1/4W           |
|          |              | < FLORESCENT INDICATOR TUBE >    |                      | R351     | 1-249-437-11 | CARBON                              | 47K 5% 1/4W           |
| FL301    | 1-519-509-11 | INDICATOR TUBE, FLUORESCENT      |                      | R352     | 1-249-437-11 | CARBON                              | 47K 5% 1/4W           |
|          |              | < IC >                           |                      | R353     | 1-249-437-11 | CARBON                              | 47K 5% 1/4W           |
| IC301    | 8-759-154-23 | IC uPD75206G-557-1B              |                      | R354     | 1-249-437-11 | CARBON                              | 47K 5% 1/4W           |
| IC302    | 8-749-920-83 | IC GP1U52XB (AV570X/AV370X/AV23) |                      | R355     | 1-249-437-11 | CARBON                              | 47K 5% 1/4W           |
| IC304    | 8-759-820-62 | IC LB1639 (AV570X/AV370X/AV23)   |                      | R356     | 1-249-401-11 | CARBON                              | 47 5% 1/4W            |
|          |              | < COIL >                         |                      | R901     | 1-202-725-00 | SOLID                               | 3.3M 10% 1/2W         |
| L301     | 1-410-521-11 | INDUCTOR                         | 100uH                |          |              |                                     | < RESISTOR ARRAY >    |
|          |              | < TRANSFORMER >                  |                      | RB301    | 1-233-081-11 | COMPOSITION CIRCUIT BLOCK           |                       |
| PT902    | 1-450-361-11 | TRANSFORMER, POWER               | (AV570X/AV370X/AV23) |          |              |                                     | < VARIABLE RESISTOR > |
|          |              | < TRANSISTOR >                   |                      | RV502    | 1-241-405-11 | RES; VAR, CARBON 100K/100K (VOLUME) | (AV570X/AV370X/AV23)  |
| Q305     | 8-729-119-76 | TRANSISTOR 2SA1175-HFE           |                      | RV502    | 1-241-408-11 | RES, VAR, CARBON 100K/100K (VOLUME) | (AV270X)              |
| Q306     | 8-729-119-76 | TRANSISTOR 2SA1175-HFE           | (AV570X/AV370X/AV23) |          |              |                                     | < RELAY >             |
| Q307     | 8-729-119-76 | TRANSISTOR 2SA1175-HFE           |                      | RY901    | 1-515-720-11 | RELAY (AV570X/AV370X/AV23)          |                       |
|          |              | < RESISTOR >                     |                      |          |              |                                     | < SWITCH >            |
| R301     | 1-249-411-11 | CARBON                           | 330                  | S301     | 1-554-303-21 | SWITCH, TACTILE (DIRECT)            |                       |
| R302     | 1-249-411-11 | CARBON                           | 330                  | S302     | 1-554-303-21 | SWITCH, TACTILE (CH -)              |                       |
| R303     | 1-249-411-11 | CARBON                           | 330                  | S303     | 1-554-303-21 | SWITCH, TACTILE (TUNING -)          |                       |
| R304     | 1-249-411-11 | CARBON                           | 330                  | S304     | 1-554-303-21 | SWITCH, TACTILE (FM)                |                       |
| R305     | 1-249-429-11 | CARBON                           | 10K                  | S305     | 1-554-303-21 | SWITCH, TACTILE (FM MODE)           |                       |
| R306     | 1-249-429-11 | CARBON                           | 10K                  | S306     | 1-554-303-21 | SWITCH, TACTILE (CH +)              |                       |
| R307     | 1-249-429-11 | CARBON                           | 10K                  | S307     | 1-554-303-21 | SWITCH, TACTILE (TUNING +)          |                       |
| R308     | 1-249-429-11 | CARBON                           | 10K                  | S308     | 1-554-303-21 | SWITCH, TACTILE (AM)                |                       |
| R311     | 1-249-429-11 | CARBON                           | 10K                  | S310     | 1-554-303-21 | SWITCH, TACTILE (TAPE)              |                       |
| R312     | 1-249-431-11 | CARBON                           | 15K                  | S311     | 1-554-303-21 | SWITCH, TACTILE (VIDEO)             |                       |
| R313     | 1-249-417-11 | CARBON                           | 1K                   | S312     | 1-554-303-21 | SWITCH, TACTILE (PHONO)             |                       |
| R314     | 1-249-441-11 | CARBON                           | 100K                 | S313     | 1-554-303-21 | SWITCH, TACTILE (TUNER)             |                       |
| R315     | 1-249-437-11 | CARBON                           | 47K                  | S314     | 1-554-303-21 | SWITCH, TACTILE (CD)                |                       |
| R316     | 1-249-441-11 | CARBON                           | 100K                 | S315     | 1-554-303-21 | SWITCH, TACTILE (7)                 |                       |
| R325     | 1-249-441-11 | CARBON                           | 100K                 | S316     | 1-554-303-21 | SWITCH, TACTILE (8)                 |                       |
| R331     | 1-249-437-11 | CARBON                           | 47K                  | S317     | 1-554-303-21 | SWITCH, TACTILE (9)                 |                       |
| R332     | 1-249-437-11 | CARBON                           | 47K                  | S318     | 1-554-303-21 | SWITCH, TACTILE (MEMORY)            |                       |
| R333     | 1-249-437-11 | CARBON                           | 47K                  | S319     | 1-554-303-21 | SWITCH, TACTILE (4)                 |                       |
| R334     | 1-249-437-11 | CARBON                           | 47K                  | S320     | 1-554-303-21 | SWITCH, TACTILE (5)                 |                       |
| R335     | 1-249-437-11 | CARBON                           | 47K                  | S321     | 1-554-303-21 | SWITCH, TACTILE (6)                 |                       |
|          |              |                                  |                      | S322     | 1-554-303-21 | SWITCH, TACTILE (0)                 |                       |

**DISPLAY**    **POWER**    **STAND BY**    **VOLUME**    **MAIN**

**TONE**    **SPEAKER SWITCH**    **MUTING**    **HP**

| Ref. No.       | Part No.                    | Description                                     | Remark          | Ref. No. | Part No.     | Description | Remark          |
|----------------|-----------------------------|---|-----------------|----------|--------------|-------------|-----------------|
| S323           | 1-554-303-21                | SWITCH, TACTILE (1)                             |                 | C418     | 1-124-478-11 | ELECT       | 100uF 20% 25V   |
| S324           | 1-554-303-21                | SWITCH, TACTILE (2)                             |                 | C419     | 1-124-478-11 | ELECT       | 100uF 20% 25V   |
| S325           | 1-554-303-21                | SWITCH, TACTILE (3)                             |                 | C420     | 1-124-927-11 | ELECT       | 4.7uF 20% 100V  |
| S326           | 1-554-303-21                | SWITCH, TACTILE (SHIFT)                         |                 | C421     | 1-124-927-11 | ELECT       | 4.7uF 20% 100V  |
| S330           | 1-554-303-21                | SWITCH, TACTILE (POWER)<br>(AV570X/AV370X/AV23) |                 | C451     | 1-162-282-31 | CERAMIC     | 100PF 10% 50V   |
|                |                             | < VARISTOR >                                    |                 | C452     | 1-123-382-00 | ELECT       | 3.3uF 20% 100V  |
| VZ901          | 1-807-293-31                | VARISTOR SNR-14A221U                            |                 | C453     | 1-162-282-31 | CERAMIC     | 100PF 10% 50V   |
|                |                             | < CERAMIC >                                     |                 | C454     | 1-162-282-31 | CERAMIC     | 100PF 10% 50V   |
| X301           | 1-577-101-11                | VIBRATOR, CERAMIC (4.19MHz)                     |                 | C455     | 1-124-034-51 | ELECT       | 33uF 20% 16V    |
|                |                             |   |                 | C456     | 1-130-480-00 | MYLAR       | 0.0056uF 5% 50V |
| <hr/>          |                             |   |                 |          |              |             |                 |
| * A-4341-726-A | MAIN BOARD, COMPLETE        |   |                 | C457     | 1-130-473-00 | MYLAR       | 0.0015uF 5% 50V |
|                | *****                       |   |                 | C458     | 1-123-382-00 | ELECT       | 3.3uF 20% 100V  |
| * A-4341-733-A | TONE BOARD, COMPLETE        |   |                 | C501     | 1-130-489-00 | MYLAR       | 0.033uF 5% 50V  |
|                | *****                       |   |                 | C502     | 1-124-250-00 | ELECT       | 0.15uF 20% 50V  |
| * 1-638-234-11 | SPEAKER SWITCH BOARD        |   |                 | C503     | 1-130-481-00 | MYLAR       | 0.0068uF 5% 50V |
|                | *****                       |   |                 | C504     | 1-130-489-00 | MYLAR       | 0.033uF 5% 50V  |
| * 1-638-239-11 | MUTING BOARD                |   |                 | C505     | 1-126-163-11 | ELECT       | 4.7uF 20% 50V   |
|                | *****                       |   |                 | C506     | 1-124-925-11 | ELECT       | 2.2uF 20% 100V  |
| * 1-638-949-11 | HP BOARD                    |   |                 | C507     | 1-101-880-00 | CERAMIC     | 47PF 5% 50V     |
|                | *****                       |   |                 | C509     | 1-124-903-11 | ELECT       | 1uF 20% 50V     |
| * 1-568-826-11 | SOCKET, CONNECTOR 7P        |   |                 | C510     | 1-130-489-00 | MYLAR       | 0.033uF 5% 50V  |
| * 1-568-826-11 | SOCKET, CONNECTOR 7P        |   |                 | C512     | 1-124-464-11 | ELECT       | 0.22uF 20% 50V  |
| * 1-568-830-11 | SOCKET, CONNECTOR 11P       |   |                 | C513     | 1-124-464-11 | ELECT       | 0.22uF 20% 50V  |
| * 3-698-359-01 | RIVET (DIA. 3.5). NYLON     |   |                 | C514     | 1-136-163-00 | MYLAR       | 0.068uF 10% 50V |
| * 4-880-403-31 | HEAT SINK                   |   |                 | C515     | 1-102-106-00 | CERAMIC     | 100PF 10% 50V   |
| 7-685-650-79   | SCREW +BVTP 3X16 TYPE2 IT-3 |   |                 | C551     | 1-130-489-00 | MYLAR       | 0.033uF 5% 50V  |
| 7-682-548-04   | SCREW +BVTT 3X8 (S)         |   |                 | C552     | 1-124-250-00 | ELECT       | 0.15uF 20% 50V  |
|                |                             |   |                 | C553     | 1-130-481-00 | MYLAR       | 0.0068uF 5% 50V |
|                |                             |   |                 | C554     | 1-130-489-00 | MYLAR       | 0.033uF 5% 50V  |
|                |                             |   |                 | C555     | 1-126-163-11 | ELECT       | 4.7uF 20% 50V   |
| <hr/>          |                             |   |                 |          |              |             |                 |
|                |                             | < CAPACITOR >                                   |                 | C556     | 1-124-925-11 | ELECT       | 2.2uF 20% 100V  |
| C091           | 1-164-089-11                | CERAMIC   | 0.0022uF 50V    | C557     | 1-101-880-00 | CERAMIC     | 47PF 5% 50V     |
| C092           | 1-164-089-11                | CERAMIC   | 0.0022uF 50V    | C559     | 1-124-903-11 | ELECT       | 1uF 20% 50V     |
| C401           | 1-162-282-31                | CERAMIC   | 100PF 10% 50V   | C560     | 1-130-489-00 | MYLAR       | 0.033uF 5% 50V  |
| C402           | 1-123-382-00                | ELECT   | 3.3uF 20% 100V  | C565     | 1-102-106-00 | CERAMIC     | 100PF 10% 50V   |
| C403           | 1-162-282-31                | CERAMIC   | 100PF 10% 50V   | C601     | 1-162-286-31 | CERAMIC     | 220PF 10% 50V   |
| C404           | 1-162-282-31                | CERAMIC   | 100PF 10% 50V   | C602     | 1-124-927-11 | ELECT       | 4.7uF 20% 100V  |
| C405           | 1-124-034-51                | ELECT   | 33uF 20% 16V    | C603     | 1-162-288-31 | CERAMIC     | 330PF 10% 50V   |
| C406           | 1-130-480-00                | MYLAR   | 0.0056uF 5% 50V | C604     | 1-124-122-11 | ELECT       | 100uF 20% 50V   |
| C407           | 1-130-473-00                | MYLAR   | 0.0015uF 5% 50V | C605     | 1-124-910-11 | ELECT       | 47uF 20% 50V    |
| C408           | 1-123-382-00                | ELECT   | 3.3uF 20% 100V  | C606     | 1-124-120-11 | ELECT       | 220uF 20% 25V   |
| C409           | 1-124-477-11                | ELECT   | 47uF 20% 25V    | C607     | 1-162-193-31 | CERAMIC     | 3.3PF 10% 50V   |
| C410           | 1-124-477-11                | ELECT   | 47uF 20% 25V    | C608     | 1-124-907-11 | ELECT       | 10uF 20% 50V    |
| C411           | 1-162-294-31                | CERAMIC   | 0.001uF 10% 50V | C621     | 1-130-495-00 | MYLAR       | 0.1uF 5% 50V    |
| C412           | 1-162-282-31                | CERAMIC   | 100PF 10% 50V   | C622     | 1-130-495-00 | MYLAR       | 0.1uF 5% 50V    |
| C417           | 1-124-478-11                | ELECT   | 100uF 20% 25V   | C623     | 1-124-907-11 | ELECT       | 10uF 20% 50V    |
|                |                             |   |                 | C624     | 1-124-472-11 | ELECT       | 470uF 20% 10V   |
|                |                             |   |                 | C625     | 1-130-495-00 | MYLAR       | 0.1uF 5% 50V    |
|                |                             |   |                 | C651     | 1-162-286-31 | CERAMIC     | 220PF 10% 50V   |

MAIN

TONE

SPEAKER SWITCH

MUTING

HP

| Ref. No.  | Part No.     | Description | Remark  |     |      | Ref. No. | Part No.     | Description                        | Remark               |
|---|--------------|-------------|---------|-----|------|----------|--------------|------------------------------------|----------------------|
| C652  | 1-124-927-11 | ELECT       | 4.7uF   | 20% | 100V |          |              | < DIODE >                          |                      |
| C653  | 1-162-288-31 | CERAMIC     | 330PF   | 10% | 50V  | D317     | 8-719-313-50 | DIODE SEL2810A-C (MUTING)          | (AV570X/AV370X/AV23) |
| C654  | 1-124-122-11 | ELECT       | 100uF   | 20% | 50V  | D318     | 8-719-313-50 | DIODE SEL2810A-C (SURROUND)        |                      |
| C655  | 1-124-910-11 | ELECT       | 47uF    | 20% | 50V  | D319     | 8-719-313-50 | DIODE SEL2810A-C (DBFB)            |                      |
| C656  | 1-124-120-11 | ELECT       | 220uF   | 20% | 25V  |          |              |                                    |                      |
| C657  | 1-162-193-31 | CERAMIC     | 3.3PF   | 10% | 50V  | D401     | 8-719-987-63 | DIODE 1N4148M                      |                      |
| C658  | 1-124-907-11 | ELECT       | 10uF    | 20% | 50V  | D402     | 8-719-987-63 | DIODE 1N4148M                      |                      |
| C671  | 1-130-495-00 | MYLAR       | 0.1uF   | 5%  | 50V  | D403     | 8-719-987-63 | DIODE 1N4148M                      |                      |
| C672  | 1-130-495-00 | MYLAR       | 0.1uF   | 5%  | 50V  | D502     | 8-719-987-63 | DIODE 1N4148M                      |                      |
| C675  | 1-130-495-00 | MYLAR       | 0.1uF   | 5%  | 50V  | D601     | 8-719-987-63 | DIODE 1N4148M                      |                      |
| C701  | 1-106-367-00 | MYLAR       | 0.01uF  | 5%  | 200V | D602     | 8-719-987-63 | DIODE 1N4148M                      |                      |
| C702  | 1-106-367-00 | MYLAR       | 0.01uF  | 5%  | 200V | D603     | 8-719-987-63 | DIODE 1N4148M                      |                      |
| C704  | 1-124-478-11 | ELECT       | 100uF   | 20% | 25V  | D604     | 8-719-987-63 | DIODE 1N4148M                      |                      |
| C705  | 1-124-477-11 | ELECT       | 47uF    | 20% | 25V  | D605     | 8-719-987-63 | DIODE 1N4148M                      |                      |
| C706  | 1-101-005-00 | CERAMIC     | 22000PF |     | 50V  | D651     | 8-719-987-63 | DIODE 1N4148M                      |                      |
| C708  | 1-124-927-11 | ELECT       | 4.7uF   | 20% | 100V | D702     | 8-719-010-86 | DIODE UZ-16BSB                     |                      |
| C710  | 1-124-910-11 | ELECT       | 47uF    | 20% | 50V  | D703     | 8-719-010-29 | DIODE UZ-4.3BSB                    |                      |
| C711  | 1-124-910-11 | ELECT       | 47uF    | 20% | 50V  | D704     | 8-719-110-67 | DIODE UZ-27ESB2                    |                      |
| C712  | 1-124-907-11 | ELECT       | 10uF    | 20% | 50V  | D705     | 8-719-010-82 | DIODE UZ-15BSB                     |                      |
| C713  | 1-124-477-11 | ELECT       | 47uF    | 20% | 25V  | D706     | 8-719-010-47 | DIODE UZ-6.2BSC                    |                      |
| C714  | 1-124-477-11 | ELECT       | 47uF    | 20% | 25V  | D707     | 8-719-933-41 | DIODE HZS6C3L                      |                      |
| C716  | 1-124-464-11 | ELECT       | 0.22uF  | 20% | 50V  | D708     | 8-719-985-53 | DIODE HZS4ALL                      |                      |
| C717  | 1-124-902-00 | ELECT       | 0.47uF  | 20% | 50V  | D709     | 8-719-987-63 | DIODE 1N4148M                      |                      |
| C718  | 1-124-903-11 | ELECT       | 1uF     | 20% | 50V  | D801     | 8-719-312-09 | DIODE RBA-402                      |                      |
| C719  | 1-101-005-00 | CERAMIC     | 22000PF |     | 50V  | D803     | 8-719-987-63 | DIODE 1N4148M (AV570X/AV370X/AV23) |                      |
| C801  | 1-125-614-11 | ELECT       | 6800uF  | 20% | 50V  | D814     | 8-719-200-82 | DIODE 11ES2 (AV570X/AV370X/AV23)   |                      |
| C802  | 1-125-614-11 | ELECT       | 6800uF  | 20% | 50V  | D815     | 8-719-200-82 | DIODE 11ES2 (AV570X/AV370X/AV23)   |                      |
| C803  | 1-101-005-00 | CERAMIC     | 22000PF |     | 50V  | D816     | 8-719-200-82 | DIODE 11ES2 (AV570X/AV370X/AV23)   |                      |
| C804  | 1-101-005-00 | CERAMIC     | 22000PF |     | 50V  | D817     | 8-719-200-82 | DIODE 11ES2 (AV570X/AV370X/AV23)   |                      |
| C805  | 1-124-557-11 | ELECT       | 1000uF  | 20% | 25V  | D818     | 8-719-987-63 | DIODE 1N4148M                      |                      |
| C806  | 1-101-005-00 | CERAMIC     | 22000PF |     | 50V  | D819     | 8-719-987-63 | DIODE 1N4148M                      |                      |
| C810  | 1-124-903-11 | ELECT       | 1uF     | 20% | 50V  |          |              | < IC >                             |                      |
| < CONNECTOR >   |              |             |         |     |      |          |              |                                    |                      |
| CNJ401 * 1-580-835-11 JACK, PIN 6P                            |              |             |         |     |      |          |              |                                    |                      |
| CNJ402 * 1-580-835-11 JACK, PIN 6P                            |              |             |         |     |      |          |              |                                    |                      |
| CNJ610 * 1-569-507-11 PIN, CONNECTOR 12P                      |              |             |         |     |      |          |              |                                    |                      |
| CNP503 * 1-564-507-11 PLUG, CONNECTOR 4P (AV570X/AV370X/AV23) |              |             |         |     |      |          |              |                                    |                      |
| CNP504 * 1-535-116-00 TERMINAL                                |              |             |         |     |      |          |              |                                    |                      |
| CNP505 * 1-580-804-11 PIN, CONNECTOR 10P                      |              |             |         |     |      |          |              |                                    |                      |
| CNP506 * 1-564-903-11 PIN, CONNECTOR (L TYPE) 7P              |              |             |         |     |      |          |              |                                    |                      |
| CNP507 * 1-569-498-11 SOCKET, CONNECTOR 12P                   |              |             |         |     |      |          |              |                                    |                      |
| CNP508 * 1-568-952-11 PIN, CONNECTOR 3P                       |              |             |         |     |      |          |              |                                    |                      |
| CNS501 * 1-568-839-11 SOCKET, CONNECTOR 23P                   |              |             |         |     |      |          |              |                                    |                      |
| < JACK >  |              |             |         |     |      |          |              |                                    |                      |
| J601 1-568-151-11 JACK (LARGE TYPE) (HEADPHONES)              |              |             |         |     |      |          |              |                                    |                      |
| < COIL >  |              |             |         |     |      |          |              |                                    |                      |
| L601 * 1-420-872-00 COIL, AIR CORE                            |              |             |         |     |      |          |              |                                    |                      |
| L651 * 1-420-872-00 COIL, AIR CORE                            |              |             |         |     |      |          |              |                                    |                      |

**Note:**  
The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety.  
Replace only with part number specified.

**Note:**  
Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

| MAIN | TONE | SPEAKER SWITCH | MUTING | HP |
|------|------|----------------|--------|----|
|------|------|----------------|--------|----|

| Ref. No.       | Part No.     | Description            | Remark               | Ref. No.             | Part No.     | Description | Remark               |
|----------------|--------------|------------------------|----------------------|----------------------|--------------|-------------|----------------------|
| < TRANSISTOR > |              |                        |                      |                      |              |             |                      |
| Q302           | 8-729-900-36 | TRANSISTOR DTC124ES    | (AV570X/AV370X/AV23) | R402                 | 1-249-417-11 | CARBON      | 1K 5% 1/4W           |
| Q303           | 8-729-900-36 | TRANSISTOR DTC124ES    |                      | R403                 | 1-249-417-11 | CARBON      | 1K 5% 1/4W           |
| Q304           | 8-729-900-36 | TRANSISTOR DTC124ES    |                      | R404                 | 1-249-425-11 | CARBON      | 4.7K 5% 1/4W         |
| Q401           | 8-729-141-30 | TRANSISTOR 2SC3623A-LK | (AV570X/AV370X/AV23) | R405                 | 1-249-417-11 | CARBON      | 1K 5% 1/4W           |
| Q402           | 8-729-141-30 | TRANSISTOR 2SC3623A-LK |                      | R406                 | 1-249-425-11 | CARBON      | 4.7K 5% 1/4W         |
| Q403           | 8-729-900-63 | TRANSISTOR DTA124ES    |                      | R407                 | 1-247-897-11 | CARBON      | 560K 5% 1/4W         |
| Q451           | 8-729-141-30 | TRANSISTOR 2SC3623A-LK | (AV570X/AV370X/AV23) | R408                 | 1-247-897-11 | CARBON      | 560K 5% 1/4W         |
| Q452           | 8-729-141-30 | TRANSISTOR 2SC3623A-LK |                      | R409                 | 1-249-437-11 | CARBON      | 47K 5% 1/4W          |
| Q501           | 8-729-202-67 | TRANSISTOR 2SK246-GR3  |                      | R410                 | 1-247-897-11 | CARBON      | 560K 5% 1/4W         |
| Q502           | 8-729-620-05 | TRANSISTOR 2SC2603-EF  |                      | R411                 | 1-249-416-11 | CARBON      | 820 5% 1/4W          |
| Q504           | 8-729-202-67 | TRANSISTOR 2SK246-GR3  |                      | R412                 | 1-247-897-11 | CARBON      | 560K 5% 1/4W         |
| Q505           | 8-729-900-36 | TRANSISTOR DTC124ES    |                      | R413                 | 1-249-437-11 | CARBON      | 47K 5% 1/4W          |
| Q506           | 8-729-900-63 | TRANSISTOR DTA124ES    |                      | R414                 | 1-247-897-11 | CARBON      | 560K 5% 1/4W         |
| Q551           | 8-729-202-67 | TRANSISTOR 2SK246-GR3  |                      | R415                 | 1-249-417-11 | CARBON      | 1K 5% 1/4W           |
| Q552           | 8-729-620-05 | TRANSISTOR 2SC2603-EF  |                      | R416                 | 1-249-411-11 | CARBON      | 330 5% 1/4W          |
| Q601           | 8-729-108-14 | TRANSISTOR 2SA988-FA   |                      | R417                 | 1-249-411-11 | CARBON      | 330 5% 1/4W          |
| Q602           | 8-729-620-05 | TRANSISTOR 2SC2603-EF  |                      | R418                 | 1-249-425-11 | CARBON      | 4.7K 5% 1/4W         |
| Q603           | 8-729-620-05 | TRANSISTOR 2SC2603-EF  |                      | R419                 | 1-247-838-00 | CARBON      | 2K 5% 1/4W           |
| Q604           | 8-729-620-05 | TRANSISTOR 2SC2603-EF  |                      | R420                 | 1-249-409-11 | CARBON      | 220 5% 1/4W          |
| Q605           | 8-729-620-05 | TRANSISTOR 2SC2603-EF  |                      | (AV570X/AV370X/AV23) |              |             |                      |
| Q651           | 8-729-108-14 | TRANSISTOR 2SA988-FA   |                      | R421                 | 1-249-429-11 | CARBON      | 10K 5% 1/4W          |
| Q701           | 8-729-209-15 | TRANSISTOR 2SD2012     |                      | R422                 | 1-249-425-11 | CARBON      | 4.7K 5% 1/4W         |
| Q702           | 8-729-140-97 | TRANSISTOR 2SB734-34   |                      | R423                 | 1-249-437-11 | CARBON      | 47K 5% 1/4W          |
| Q703           | 8-729-180-92 | TRANSISTOR 2SD809-K    |                      | R424                 | 1-249-434-11 | CARBON      | 27K 5% 1/4W          |
| Q704           | 8-729-620-05 | TRANSISTOR 2SC2603-EF  |                      | R425                 | 1-249-441-11 | CARBON      | 100K 5% 1/4W         |
| Q705           | 8-729-900-   | TRANSISTOR DTC124ES    |                      | R426                 | 1-249-405-11 | CARBON      | 100 5% 1/4W          |
| Q706           | 8-729-119-76 | TRANSISTOR 2SA1175-HFE |                      | R427                 | 1-249-437-11 | CARBON      | 47K 5% 1/4W          |
| Q707           | 8-729-620-05 | TRANSISTOR 2SC2603-EF  |                      | R428                 | 1-249-441-11 | CARBON      | 100K 5% 1/4W         |
| Q708           | 8-729-900-36 | TRANSISTOR DTC124ES    |                      | R451                 | 1-249-411-11 | CARBON      | 330 5% 1/4W          |
| Q709           | 8-729-904-39 | TRANSISTOR DTC114TS    | (AV570X/AV370X/AV23) | R452                 | 1-249-417-11 | CARBON      | 1K 5% 1/4W           |
| Q801           | 8-729-620-05 | TRANSISTOR 2SC2603-EF  | (AV570X/AV370X/AV23) | R453                 | 1-249-417-11 | CARBON      | 1K 5% 1/4W           |
| < RESISTOR >   |              |                        |                      |                      |              |             |                      |
| R322           | 1-249-410-11 | CARBON                 | 270 5% 1/4W          | R454                 | 1-249-425-11 | CARBON      | 4.7K 5% 1/4W         |
| R323           | 1-249-410-11 | CARBON                 | 270 5% 1/4W          | R455                 | 1-249-417-11 | CARBON      | 1K 5% 1/4W           |
|                |              |                        | (AV570X/AV370X/AV23) | R456                 | 1-249-425-11 | CARBON      | 4.7K 5% 1/4W         |
| R324           | 1-249-410-11 | CARBON                 | 270 5% 1/4W          | R457                 | 1-247-897-11 | CARBON      | 560K 5% 1/4W         |
| R357           | 1-249-429-11 | CARBON                 | 10K 5% 1/4W          | R458                 | 1-247-897-11 | CARBON      | 560K 5% 1/4W         |
| R358           | 1-249-429-11 | CARBON                 | 10K 5% 1/4W          | R459                 | 1-249-437-11 | CARBON      | 47K 5% 1/4W          |
|                |              |                        | (AV570X/AV370X/AV23) | R460                 | 1-247-897-11 | CARBON      | 560K 5% 1/4W         |
| R359           | 1-249-429-11 | CARBON                 | 10K 5% 1/4W          | R461                 | 1-249-416-11 | CARBON      | 820 5% 1/4W          |
| R401           | 1-249-411-11 | CARBON                 | 330 5% 1/4W          | R462                 | 1-247-897-11 | CARBON      | 560K 5% 1/4W         |
|                |              |                        |                      | R463                 | 1-249-437-11 | CARBON      | 47K 5% 1/4W          |
|                |              |                        |                      | R464                 | 1-247-897-11 | CARBON      | 560K 5% 1/4W         |
|                |              |                        |                      | R465                 | 1-249-417-11 | CARBON      | 1K 5% 1/4W           |
|                |              |                        |                      | R469                 | 1-247-838-00 | CARBON      | 2K 5% 1/4W           |
|                |              |                        |                      | R470                 | 1-249-409-11 | CARBON      | 220 5% 1/4W          |
|                |              |                        |                      |                      |              |             | (AV570X/AV370X/AV23) |
|                |              |                        |                      | R501                 | 1-249-429-11 | CARBON      | 10K 5% 1/4W          |
|                |              |                        |                      | R502                 | 1-249-421-11 | CARBON      | 2.2K 5% 1/4W         |
|                |              |                        |                      | R503                 | 1-249-441-11 | CARBON      | 100K 5% 1/4W         |

|             |             |                       |               |           |
|-------------|-------------|-----------------------|---------------|-----------|
| <b>MAIN</b> | <b>TONE</b> | <b>SPEAKER SWITCH</b> | <b>MUTING</b> | <b>HP</b> |
|-------------|-------------|-----------------------|---------------|-----------|

| Ref. No. | Part No.        | Description           | Remark         | Ref. No. | Part No.        | Description           | Remark               |
|----------|-----------------|-----------------------|----------------|----------|-----------------|-----------------------|----------------------|
| R504     | 1-249-427-11    | CARBON                | 6.8K 5% 1/4W   | R639     | 1-247-768-00    | CARBON                | 2.4 5% 1/4W          |
| R505     | 1-249-438-11    | CARBON                | 56K 5% 1/4W    | R640     | ▲· 1-249-419-11 | CARBON                | 1.5K 5% 1/4W F       |
| R506     | 1-249-441-11    | CARBON                | 100K 5% 1/4W   | R641     | ▲· 1-249-390-11 | CARBON                | 5.6 5% 1/4W F        |
| R507     | 1-247-883-00    | CARBON                | 150K 5% 1/4W   | R651     | 1-249-417-11    | CARBON                | 1K 5% 1/4W           |
| R508     | 1-249-417-11    | CARBON                | 1K 5% 1/4W     | R652     | 1-249-438-11    | CARBON                | 56K 5% 1/4W          |
| R509     | 1-249-412-11    | CARBON                | 390 5% 1/4W    | R653     | 1-249-413-11    | CARBON                | 470 5% 1/4W          |
| R510     | 1-249-427-11    | CARBON                | 6.8K 5% 1/4W   | R654     | 1-249-423-11    | CARBON                | 3.3K 5% 1/4W         |
| R518     | 1-249-441-11    | CARBON                | 100K 5% 1/4W   | R655     | 1-249-438-11    | CARBON                | 56K 5% 1/4W          |
| R519     | 1-249-441-11    | CARBON                | 100K 5% 1/4W   | R656     | ▲· 1-249-420-11 | CARBON                | 1.8K 5% 1/4W F       |
| R520     | 1-247-903-00    | CARBON                | 1M 5% 1/4W     | R657     | 1-217-151-00    | RES, METAL PLATE 0.22 |                      |
| R521     | 1-249-427-11    | CARBON                | 6.8K 5% 1/4W   | R658A    | 1-249-417-11    | CARBON                | 1K 5% 1/4W           |
| R522     | 1-247-903-00    | CARBON                | 1M 5% 1/4W     | R658B    | ▲· 1-216-454-11 | METAL OXIDE           | 390 5% 2W F          |
| R551     | 1-249-429-11    | CARBON                | 10K 5% 1/4W    | R671     | 1-249-427-11    | CARBON                | 6.8K 5% 1/4W         |
| R552     | 1-249-421-11    | CARBON                | 2.2K 5% 1/4W   | R672     | 1-249-435-11    | CARBON                | 33K 5% 1/4W          |
| R553     | 1-249-441-11    | CARBON                | 100K 5% 1/4W   | R673     | 1-249-433-11    | CARBON                | 22K 5% 1/4W          |
| R554     | 1-249-427-11    | CARBON                | 6.8K 5% 1/4W   | R674     | ▲· 1-249-390-11 | CARBON                | 5.6 5% 1/4W F        |
| R555     | 1-249-438-11    | CARBON                | 56K 5% 1/4W    | R675     | 1-247-768-00    | CARBON                | 2.4 5% 1/4W          |
| R556     | 1-249-441-11    | CARBON                | 100K 5% 1/4W   | R689     | 1-247-768-00    | CARBON                | 2.4 5% 1/4W          |
| R557     | 1-247-883-00    | CARBON                | 150K 5% 1/4W   | R690     | ▲· 1-249-419-11 | CARBON                | 1.5K 5% 1/4W F       |
| R558     | 1-249-417-11    | CARBON                | 1K 5% 1/4W     | R691     | ▲· 1-249-390-11 | CARBON                | 5.6 5% 1/4W F        |
| R559     | 1-249-412-11    | CARBON                | 390 5% 1/4W    | R702     | 1-249-422-11    | CARBON                | 2.7K 5% 1/4W         |
| R560     | 1-249-427-11    | CARBON                | 6.8K 5% 1/4W   | R703     | ▲· 1-216-448-11 | METAL OXIDE           | 39 5% 2W F           |
| R601     | 1-249-417-11    | CARBON                | 1K 5% 1/4W     | R705     | 1-249-423-11    | CARBON                | 3.3K 5% 1/4W         |
| R602     | 1-249-438-11    | CARBON                | 56K 5% 1/4W    | R706     | ▲· 1-249-405-11 | CARBON                | 100 5% 1/4W F        |
| R603     | 1-249-413-11    | CARBON                | 470 5% 1/4W    | R707     | 1-249-410-11    | CARBON                | 270 5% 1/4W          |
| R604     | 1-249-423-11    | CARBON                | 3.3K 5% 1/4W   | R708     | ▲· 1-249-389-11 | CARBON                | 4.7 5% 1/4W F        |
| R605     | 1-249-438-11    | CARBON                | 56K 5% 1/4W    | R709     | 1-249-423-11    | CARBON                | 3.3K 5% 1/4W         |
| R606     | ▲· 1-249-420-11 | CARBON                | 1.8K 5% 1/4W F | R710     | 1-249-437-11    | CARBON                | 47K 5% 1/4W          |
| R607     | 1-217-151-00    | RES, METAL PLATE 0.22 |                | R711     | 1-249-429-11    | CARBON                | 10K 5% 1/4W          |
| R608     | 1-249-417-11    | CARBON                | 1K 5% 1/4W     | R712     | 1-249-429-11    | CARBON                | 10K 5% 1/4W          |
| R612     | ▲· 1-249-405-11 | CARBON                | 100 5% 1/4W F  | R713     | 1-249-426-11    | CARBON                | 5.6K 5% 1/4W         |
| R615     | ▲· 1-249-405-11 | CARBON                | 100 5% 1/4W F  | R714     | 1-249-417-11    | CARBON                | 1K 5% 1/4W           |
| R621     | 1-249-427-11    | CARBON                | 6.8K 5% 1/4W   | R715     | 1-249-426-11    | CARBON                | 5.6K 5% 1/4W         |
| R622     | 1-249-435-11    | CARBON                | 33K 5% 1/4W    | R716     | 1-249-417-11    | CARBON                | 1K 5% 1/4W           |
| R623     | 1-249-433-11    | CARBON                | 22K 5% 1/4W    | R718     | ▲· 1-249-401-11 | CARBON                | 47 5% 1/4W F         |
| R624     | ▲· 1-249-390-11 | CARBON                | 5.6 5% 1/4W F  | R721     | 1-249-413-11    | CARBON                | 470 5% 1/4W F        |
| R625     | 1-247-768-00    | CARBON                | 2.4 5% 1/4W    | R722     | 1-249-437-11    | CARBON                | 47K 5% 1/4W          |
| R626     | 1-249-441-11    | CARBON                | 100K 5% 1/4W   | R723     | 1-249-437-11    | CARBON                | 47K 5% 1/4W          |
| R627     | 1-249-435-11    | CARBON                | 33K 5% 1/4W    | R724     | 1-249-437-11    | CARBON                | 47K 5% 1/4W          |
| R628     | 1-249-427-11    | CARBON                | 6.8K 5% 1/4W   | R725     | 1-249-437-11    | CARBON                | 47K 5% 1/4W          |
| R629     | ▲· 1-249-399-11 | CARBON                | 33 5% 1/4W F   | R726     | 1-249-410-11    | CARBON                | 270 5% 1/4W          |
| R630     | 1-249-417-11    | CARBON                | 1K 5% 1/4W     | R727     | 1-249-429-11    | CARBON                | 10K 5% 1/4W          |
| R631     | 1-249-429-11    | CARBON                | 10K 5% 1/4W    | R728     | 1-249-417-11    | CARBON                | 1K 5% 1/4W           |
| R632     | 1-249-441-11    | CARBON                | 100K 5% 1/4W   | R801     | ▲· 1-249-389-11 | CARBON                | 4.7 5% 1/4W F        |
| R634     | 1-249-427-11    | CARBON                | 6.8K 5% 1/4W   | R802     | 1-249-437-11    | CARBON                | 47K 5% 1/4W          |
| R635     | 1-249-441-11    | CARBON                | 100K 5% 1/4W   |          |                 |                       | (AV570X/AV370X/AV23) |
| R636     | 1-247-903-00    | CARBON                | 1M 5% 1/4W     |          |                 |                       |                      |
| R637     | ▲· 1-216-432-00 | METAL OXIDE           | 820 5% 1W F    |          |                 |                       |                      |
| R638     | ▲· 1-216-454-11 | METAL OXIDE           | 390 5% 2W F    |          |                 |                       |                      |

**Note:**  
The components identified by mark ▲ or dotted line with mark ▲ are critical for safety. Replace only with part number specified.

**Note:**  
Les composants identifiés par une marque ▲ sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

**MAIN TONE SPEAKER SWITCH MUTING HP TUNER**

**Note:**  
The components identified by mark ▲ or dotted line with mark ▲ are critical for safety.  
Replace only with part number specified.

**Note:**  
Les composants identifiés par  
une marque  sont critiques  
pour la sécurité.  
Ne les remplacer que par une  
pièce portant le numéro spéci-  
fié.

## TUNER

| Ref. No.              | Part No.       | Description            | Remark        | Ref. No.        | Part No.       | Description                          | Remark        |  |  |  |  |
|-----------------------|----------------|------------------------|---------------|-----------------|----------------|--------------------------------------|---------------|--|--|--|--|
| < COIL >              |                |                        |               |                 |                |                                      |               |  |  |  |  |
| L21                   | 1-410-494-11   | INDUCTOR               | 1MMH          | R81             | 1-216-049-00   | METAL CHIP                           | 1K 5% 1/10W   |  |  |  |  |
| < FILTER >            |                |                        |               |                 |                |                                      |               |  |  |  |  |
| LPF21                 | 1-235-164-00   | FILTER, LOW PASS       |               | R82             | 1-216-049-00   | METAL CHIP                           | 1K 5% 1/10W   |  |  |  |  |
| LPF22                 | 1-235-164-00   | FILTER, LOW PASS       |               | R83             | 1-216-049-00   | METAL CHIP                           | 1K 5% 1/10W   |  |  |  |  |
| < TRANSISTOR >        |                |                        |               |                 |                |                                      |               |  |  |  |  |
| Q1                    | 8-729-230-XX   | TRANSISTOR 2SC2669-0Y  |               | R84             | 1-216-049-00   | METAL CHIP                           | 1K 5% 1/10W   |  |  |  |  |
| Q21                   | 8-729-119-78   | TRANSISTOR 2SC2785-HFE |               | R85             | 1-216-073-00   | METAL CHIP                           | 10K 5% 1/10W  |  |  |  |  |
| Q22                   | 8-729-119-78   | TRANSISTOR 2SC2785-HFE |               | R86             | 1-216-049-00   | METAL CHIP                           | 1K 5% 1/10W   |  |  |  |  |
| Q23                   | 8-729-900-61   | TRANSISTOR DTA114ES    |               | R87             | 1-216-073-00   | METAL CHIP                           | 10K 5% 1/10W  |  |  |  |  |
| Q24                   | 8-729-900-80   | TRANSISTOR DTC114ES    |               | R88             | 1-216-065-00   | METAL CHIP                           | 4.7K 5% 1/10W |  |  |  |  |
| Q81                   | 8-729-900-61   | TRANSISTOR DTA114ES    |               | R89             | 1-216-049-00   | METAL CHIP                           | 1K 5% 1/10W   |  |  |  |  |
| Q82                   | 8-729-900-80   | TRANSISTOR DTC114ES    |               | R90             | 1-216-073-00   | METAL CHIP                           | 10K 5% 1/10W  |  |  |  |  |
| Q83                   | 8-729-202-67   | TRANSISTOR 2SK246-GR3  |               | R91             | 1-216-049-00   | METAL CHIP                           | 1K 5% 1/10W   |  |  |  |  |
| Q84                   | 8-729-230-93   | TRANSISTOR 2SC3113-AB  |               | R92             | ▲ 1-249-401-11 | CARBON                               | 47 5% 1/4W F  |  |  |  |  |
| < RESISTOR >          |                |                        |               |                 |                |                                      |               |  |  |  |  |
| R1                    | ▲ 1-249-401-11 | CARBON                 | 47 5% 1/4W F  | R101            | 1-216-061-00   | METAL CHIP                           | 3.3K 5% 1/10W |  |  |  |  |
| R4                    | 1-216-013-00   | METAL CHIP             | 33 5% 1/10W   | R102            | 1-216-043-00   | METAL CHIP                           | 560 5% 1/10W  |  |  |  |  |
| R5                    | 1-216-013-00   | METAL CHIP             | 33 5% 1/10W   | R103            | 1-216-049-00   | METAL CHIP                           | 1K 5% 1/10W   |  |  |  |  |
| R6                    | 1-216-037-00   | METAL CHIP             | 330 5% 1/10W  | R104            | 1-216-035-00   | METAL CHIP                           | 270 5% 1/10W  |  |  |  |  |
| R7                    | 1-216-109-00   | METAL CHIP             | 330K 5% 1/10W | R105            | 1-216-065-00   | METAL CHIP                           | 4.7K 5% 1/10W |  |  |  |  |
| R21                   | ▲ 1-249-404-00 | CARBON                 | 82 5% 1/4W F  | R106            | 1-216-057-00   | METAL CHIP                           | 2.2K 5% 1/10W |  |  |  |  |
| R22                   | 1-247-535-11   | CARBON                 | 8.2K 5% 1/4W  | R107            | 1-216-065-00   | METAL CHIP                           | 4.7K 5% 1/10W |  |  |  |  |
| R23                   | 1-216-049-00   | METAL CHIP             | 1K 5% 1/10W   | R108            | 1-216-025-00   | METAL CHIP                           | 100 5% 1/10W  |  |  |  |  |
| R24                   | 1-216-085-00   | METAL CHIP             | 33K 5% 1/10W  | R109            | 1-216-065-00   | METAL CHIP                           | 4.7K 5% 1/10W |  |  |  |  |
| R25                   | 1-216-071-00   | METAL CHIP             | 8.2K 5% 1/10W | R110            | ▲ 1-249-405-11 | CARBON                               | 100 5% 1/4W F |  |  |  |  |
| < VARIABLE RESISTOR > |                |                        |               |                 |                |                                      |               |  |  |  |  |
| R21                   | ▲ 1-249-404-00 | CARBON                 | 82 5% 1/4W F  | RV21            | 1-238-015-11   | RES, ADJ, CARBON 4.7K (FM SEP)       |               |  |  |  |  |
| R22                   | 1-247-535-11   | CARBON                 | 8.2K 5% 1/4W  | RV24            | 1-238-017-11   | RES, ADJ, CARBON 22K (FM TUNING)     |               |  |  |  |  |
| R23                   | 1-216-049-00   | METAL CHIP             | 1K 5% 1/10W   | < TRANSFORMER > |                |                                      |               |  |  |  |  |
| R24                   | 1-216-085-00   | METAL CHIP             | 33K 5% 1/10W  | T21             | 1-404-807-11   | TRANSFORMER, DISCRIMINATOR (PRIMARY) |               |  |  |  |  |
| R25                   | 1-216-071-00   | METAL CHIP             | 8.2K 5% 1/10W | < TERMINAL >    |                |                                      |               |  |  |  |  |
| R27                   | 1-247-543-11   | CARBON                 | 18K 5% 1/4W   | TM1             | * 1-537-264-11 | TERMINAL BOARD (ANTENNA)             |               |  |  |  |  |
| R28                   | 1-247-719-11   | CARBON                 | 3.3K 5% 1/4W  | < TEST PIN >    |                |                                      |               |  |  |  |  |
| R29                   | 1-216-073-00   | METAL CHIP             | 10K 5% 1/10W  | TP1             | * 1-560-060-00 | PIN, CONNECTOR 2P                    |               |  |  |  |  |
| R31                   | 1-216-041-00   | METAL CHIP             | 470 5% 1/10W  | < CRYSTAL >     |                |                                      |               |  |  |  |  |
| R32                   | 1-216-073-00   | METAL CHIP             | 10K 5% 1/10W  | XT81            | 1-577-126-11   | VIBRATOR, CRYSTAL 7.2MHz             |               |  |  |  |  |
| R33                   | 1-216-073-00   | METAL CHIP             | 10K 5% 1/10W  |                 |                |                                      |               |  |  |  |  |
| R35                   | 1-216-089-00   | METAL CHIP             | 47K 5% 1/10W  |                 |                |                                      |               |  |  |  |  |
| R37                   | 1-216-109-00   | METAL CHIP             | 330K 5% 1/10W |                 |                |                                      |               |  |  |  |  |
| R39                   | 1-216-057-00   | METAL CHIP             | 2.2K 5% 1/10W |                 |                |                                      |               |  |  |  |  |
| R40                   | 1-216-055-00   | METAL CHIP             | 1.8K 5% 1/10W |                 |                |                                      |               |  |  |  |  |
| R41                   | 1-216-067-00   | METAL CHIP             | 5.6K 5% 1/10W |                 |                |                                      |               |  |  |  |  |
| R42                   | 1-216-109-00   | METAL CHIP             | 330K 5% 1/10W |                 |                |                                      |               |  |  |  |  |
| R44                   | 1-216-057-00   | METAL CHIP             | 2.2K 5% 1/10W |                 |                |                                      |               |  |  |  |  |
| R45                   | 1-216-055-00   | METAL CHIP             | 1.8K 5% 1/10W |                 |                |                                      |               |  |  |  |  |
| R46                   | 1-216-067-00   | METAL CHIP             | 5.6K 5% 1/10W |                 |                |                                      |               |  |  |  |  |
| R47                   | ▲ 1-249-409-11 | CARBON                 | 220 5% 1/4W F |                 |                |                                      |               |  |  |  |  |
| R61                   | 1-216-097-00   | METAL CHIP             | 100K 5% 1/10W |                 |                |                                      |               |  |  |  |  |
| R62                   | 1-216-089-00   | METAL CHIP             | 47K 5% 1/10W  |                 |                |                                      |               |  |  |  |  |
| R63                   | 1-216-009-00   | METAL CHIP             | 22 5% 1/10W   |                 |                |                                      |               |  |  |  |  |

**Note:**  
The components identified by mark ▲ or dotted line with mark ▲ are critical for safety. Replace only with part number specified.

**Note:**  
Les composants identifiés par une marque ▲ sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

| Ref. No. | Part No. | Description   | Remark |
|----------|----------|---------------|--------|
|          |          | MISCELLANEOUS |        |
|          |          | *****         |        |

|      |   |  |  |
|------|---|--|--|
| 13   | * | 1-590-769-11 WIRE, FLAT TYPE (7 CORE)                |  |
| 14   | * | 1-590-499-11 WIRE, FLAT TYPE (23 CORE)               |  |
| 15   | * | 1-590-770-11 WIRE, FLAT TYPE (11 CORE)               |  |
| 65   | △ | 1-551-478-00 CORD, POWER                             |  |
| F901 | △ | 1-576-107-11 FUSE GLASS TUBE (3. 15A 125V)           |  |
| F902 | △ | 1-576-109-11 FUSE GLASS TUBE (5A 125V)               |  |
| T901 | △ | 1-450-365-11 TRANSFORMER, POWER (AV370X/AV270X/AV23) |  |
| T901 | △ | 1-450-362-11 TRANSFORMER, POWER (AV570X)             |  |

\*\*\*\*\*

#### ACCESSORY & PACKING MATERIAL

\*\*\*\*\*

|                |   |                            |
|----------------|---|----------------------------|
| 1-465-423-11   | REMOTE COMMANDER (RM-S103)                | (AV570X/AV370X/AV23)       |
| 1-501-374-11   | ANTENNA, LOOP                             |                            |
| 2-181-754-01   | COVER, BATTERY (for RM-S103)              |                            |
| 3-753-021-21   | MANUAL, INSTRUCTION (ENGLISH)             | (AV570X/AV270X) (US)       |
| 3-753-021-31   | MANUAL, INSTRUCTION (ENGLISH, FRENCH)     | (AV570X/AV370X) (Canadian) |
| 3-753-022-21   | MANUAL, INSTRUCTION (ENGLISH) (AV23) (US) |                            |
| * 4-943-615-01 | CUSHION                                   |                            |
| * 4-943-616-01 | INDIVIDUAL CARTON (AV570X)                |                            |
| * 4-943-617-01 | INDIVIDUAL CARTON (AV270X)                |                            |
| * 4-943-618-01 | INDIVIDUAL CARTON (AV23)                  |                            |
| * 4-943-647-01 | INDIVIDUAL CARTON (AV370X)                |                            |

\*\*\*\*\*

#### HARDWARE LIST

\*\*\*\*\*

|     |  |
|-----|--|
| # 1 | 7-682-547-04 SCREW +BVTT 3X6 (S)         |
| # 2 | 7-682-548-04 SCREW +BVTT 3X8 (S)         |
| # 3 | 7-682-560-04 SCREW +BVTT 4X6 (S)         |
| # 4 | 7-685-650-79 SCREW +BVTP 3X16 TYPE2 IT-3 |
| # 5 | 7-685-647-79 SCREW +BTP 3X10 TYPE2 N-S   |
| # 6 | 7-682-547-09 SCREW +BVTT 3X6 (S)         |

**Note:**  
The components identified by mark △ or dotted line with mark △ are critical for safety.  
Replace only with part number specified.

**Note:**  
Les composants identifiés par une marque △ sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.



# STR-AV23/AV270X/AV370X/AV570X

## SONY SERVICE MANUAL

US Model

STR-AV23/AV270X/AV570X



Canadian Model

STR-AV370X/AV570X

## CORRECTION-1

Correct your service manual as shown below.

→ : Indicates corrected portion
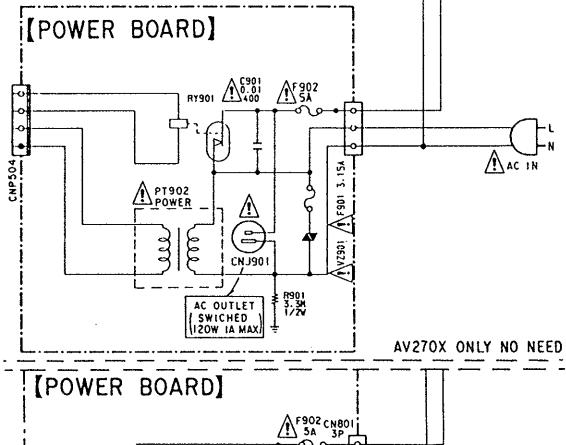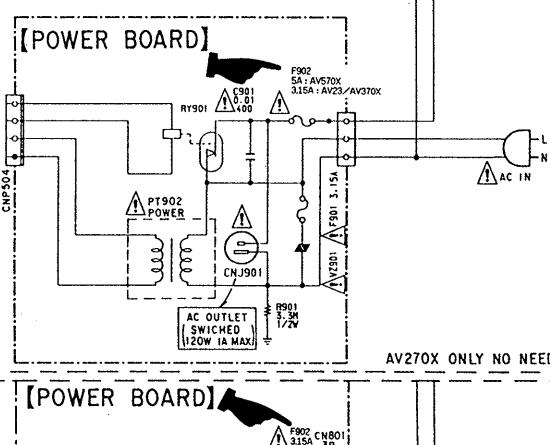
| Page |      | Incorrect    |  |
|------|------|--------------|--|
| No.  | No.  | Part No.     | Description  |
| 35   | F902 | 1-576-109-11 | FUSE GLASS TUBE (5A 125V)  |
|      |      | 1-576-107-11 | FUSE GLASS TUBE (3.15A 125V)<br>(AV23/AV270X /AV370X)                                |
|      |      | 1-576-109-11 | FUSE GLASS TUBE (5A 125V)<br>(AV570X)  |
| 18   |      |              |   |
|      |      |              |  |