

# STR-DE435/DE535/SE491/V424/V525

## SERVICE MANUAL

Ver 1.1 2003. 05



Photo: STR-DE535

*US Model*

STR-DE435/DE535/SE491

*Canadian Model*

STR-DE435/DE535

*AEP Model*

STR-DE435

*E Model*

STR-DE435/DE535

*Australian Model*

STR-DE435/DE535

*Chinese Model*

STR-V424/V525

Dolby Laboratories Licensing Corporation.

"DOLBY" the double-D symbol □ "AC-3" and "PRO LOGIC"  
are trademarks of Dolby Laboratories Licensing Corporation.

## SPECIFICATIONS

### POWER OUTPUT AND TOTAL HARMONIC DISTORTION

With 8-ohm load, both channels driven, from 20<sup>a)</sup>–  
20,000 Hz rated 100 watts per channel minimum  
RMS power, with no more than 0.09%<sup>b)</sup> total  
harmonic distortion from 250 milliwatts to rated  
output.

STR-SE491:

- a) 40Hz
- b) 0.5%

### Amplifier section

Stereo mode

STR-DE535/DE435:  
(8Ω at 20Hz – 20kHz  
less than 0.09% total  
harmonic distortion)  
100W + 100W

STR-SE491:  
(8Ω at 40Hz – 20kHz less  
than 0.5% total harmonic  
distortion)

100W + 100W  
STR-DE535/435:  
(8Ω at 1kHz, THD 0.8%)  
Front: 100W/ch  
Center\*: (Pro Logic Mode)  
100W  
Rear\*: 100W/ch

STR-SE491:  
(8Ω at 1kHz, THD 0.5%)  
Front: 100W/ch  
Center\*: 100W  
Rear\*: 100W/ch

Frequency response

PHONO: RIAA  
equalization curve  
±0.5dB  
(except STR-DE435)

Muting  
BASS BOOST  
TONE

Full mute  
+8dB at 70Hz  
±8dB at 100Hz and  
10kHz

### Inputs

	Sensitivity	Impedance	S/N
PHONO (except STR- DE435)	4mV	50 kilohms	86dB
CD, 5.1CH/ DVD, MD/TAPE,	250mV	50 kilohms	96dB
TV/SAT, VIDEO			

### Outputs

MD/TAPE REC OUT:  
Voltage: 250mV,  
Impedance: 10kilohms  
VIDEO AUDIO OUT:  
Voltage: 250mV,  
Impedance: 10kilohms  
WOOFER:  
Voltage: 2V  
Impedance: 1kilohms  
PHONES: Accepts low  
and high impedance  
headphones

### Tuner section

FM Stereo, FM/AM superheterodyne tuner

### FM tuner section

Tuning range 87.5 – 108.0MHz  
Antenna terminals 75Ω, unbalanced  
Intermediate frequency 10.7MHz  
Sensitivity Mono: 18.3dBf,  
4.5µV  
Stereo: 38.3dBf,  
45µV  
Usable sensitivity 11.2dBf, 2µV (IHF)  
S/N Mono: 76dB  
Stereo: 70dB  
Harmonic distortion at 1kHz Mono: 0.3%  
Separation Stereo: 0.5%  
Frequency response 45dB at 1kHz  
Selectivity 30Hz – 15kHz <sup>+0.5</sup><sub>-2</sub> dB  
60dB at 400kHz

— Continued on next page —

## FM STEREO FM-AM RECEIVER

9-928-848-12

2003E16-1

© 2003.05

**Sony Corporation**

Home Audio Company

Published by Sony Engineering Corporation

**SONY®**

**AM tuner section**

Tuning range	10kHz interval** 530 – 1,710kHz
Antenna	Loop antenna
Intermediate frequency	450kHz
Usable sensitivity	50dB/m (at 1,000kHz)
S/N	54dB (at 50mV/m)
Harmonic distortion	0.5% (50mV/m, 400Hz)
Selectivity	At 10kHz: 40dB At 9kHz: 35dB

\*\* You can change the AM tuning interval between 9kHz and 10kHz. After tuning in any AM station, turn off the receiver.

Hold down the PRESET TUNING+ button and press the  $\text{I}/\text{O}$  (power) button. All preset stations will be erased when you change the interval. To reset the interval, repeat the procedure.

**VIDEO section (except STR-SE491)**


Inputs	VIDEO, TV/SAT, 5.1CH/DVD: 1Vp-p 75Ω
Outputs	VIDEO, MONITOR: 1Vp-p 75Ω

**General**

System	Tuner section: PLL quartz-locked digital synthesizer system
Preamplifier section:	Low-noise NF type equalizer
Power amplifier section:	Pure-complementary SEPP
Power requirements	120V AC, 60Hz
Power consumption	220W
AC outlets	STR-DE535/SE491: 2 switched, total 120W/1A Max
	STR-DE435: 1 switched, total 120W/1A Max
Dimensions	430 × 157 × 366 mm (17 × 6 1/8 × 14 5/8 inches)
Mass (Aprox.)	STR-DE535: 11.1kg (24 lb 6 oz) STR-DE435: 11.0kg (24 lb 3 oz) STR-DE491: 11.2kg (24 lb 9 oz)
Supplied accessories	FM wire antenna (1) AM loop antenna (1) Remote commander (remote) (1) LR6 (size - AA) batteries (3) (STR-DE535 only) R6 (size - AA) batteries (2) (STR-DE435/SE491 only)

\* Depending on the sound field setting and the source, there may be no sound output.

Design and specifications are subject to change without notice.

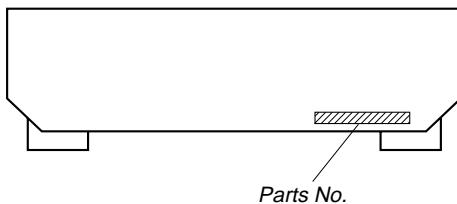**MODEL IDENTIFICATION****— BACK PANEL —**

MODEL	PARTS No.
DE535: US model	4-216-927-0□
DE535: Canadian model	4-216-927-1□
DE535: Australian model	4-216-927-2□
DE535: E model	4-216-927-3□
DE535: Malaysia, Singapore model	4-216-927-4□
V525: Chinese model	4-216-927-5□
DE435: US model	4-217-181-0□
DE435: Canadian model	4-217-181-1□
DE435: Australian model	4-217-181-2□
DE435: Malaysia, Singapore model	4-217-181-3□
V424: Chinese model	4-217-181-4□
DE435: AEP model	4-217-181-5□
DE435: East European, CIS model	4-217-181-6□
SE491: US model	4-217-181-7□

## SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer: Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

### LEAKAGE

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

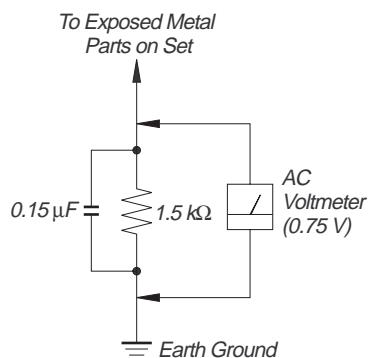


Fig. A. Using an AC voltmeter to check AC leakage.

### SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  $\triangle$  OR DOTTED LINE WITH MARK  $\triangle$  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

### TABLE OF CONTENTS

<b>1. GENETAL</b>	4
<b>2. TEST MODE</b>	6
<b>3. DIAGRAMS</b>	
3-1. Circuit Boards Location	7
3-2. Block Diagrams	9
• Main Section	9
• Power Section	11
3-3. Printed Wiring Board — Input Section	13
3-4. Schematic Diagram — Input Section	15
3-5. Printed Wiring Board — Surround Section	17
3-6. Schematic Diagram — Surround Section	19
3-7. Printed Wiring Board — Display Section	21
3-8. Schematic Diagram — Display Section	23
3-9. Printed Wiring Board — Key Section	25
3-10. Schematic Diagram — Key Section	27
3-11. Printed Wiring Board — Rear Amp Section	29
3-12. Schematic Diagram — Rear Amp Section	31
3-13. Printed Wiring Board — Power Amp Section	33
3-14. Schematic Diagram —Power Amp Section	35
3-15. IC Pin Function Description	37
3-16. IC Block Diagrams	39
<b>4. EXPLODEO VIEWS</b>	
4-1. Front Panel Section	40
4-2. Chassis Section	42
<b>5. ELECTRICAL PARTS LIST</b>	44

### ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFÉS PAR UNE MARQUE  $\triangle$  SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPÉMENTS PUBLIÉS PAR SONY.

### 与安全有关的零部件须知


在原理图上用阴影及  $\triangle$  标记来识别的零部件在安全操作上是具有关键性的。这些零部件要用本手册中所示的部件号对应的索尼零部件进行更换。

在安全操作上具有关键性的电路调整与索尼公司出版的维修手册完全一致。在更换关键零部件时或怀疑动作失常时，请进行这些调整操作。

# SECTION 1


## GENETAL

### Front Panel

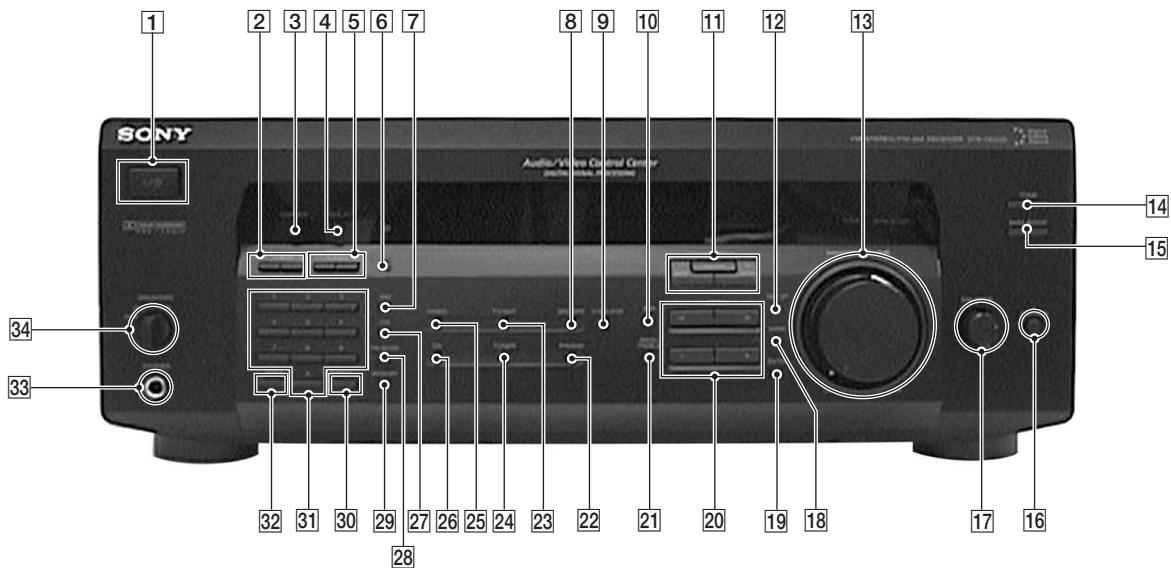

- |           |   |           |   |
|-----------|---|-----------|---|
| <b>1</b>  | I/O (POWER) button  | <b>18</b> | NAME button                                 |
| <b>2</b>  | TUNING +, - button  | <b>19</b> | ENTER button                                |
| <b>3</b>  | DIMMER button   | <b>20</b> | MENU <, >, +, - buttons                     |
| <b>4</b>  | DISPLAY button  | <b>21</b> | BASS/TREBLE button                          |
| <b>5</b>  | PRESET/PTY SELECT +, - buttons (DE435),<br>PRESET TUNING +, - buttons (DE535) | <b>22</b> | PHONO button (DE535 only)                   |
| <b>6</b>  | RDS PTY button (DE435 only)   | <b>23</b> | TV/LD button (DE435), TV/SAT button (DE535) |
| <b>7</b>  | RDS EON button (DE435), AM button (DE535)                                     | <b>24</b> | TUNER button                                |
| <b>8</b>  | MD/TAPE button  | <b>25</b> | VIDEO button                                |
| <b>9</b>  | 5.1CH/DVD button  | <b>26</b> | CD button                                   |
| <b>10</b> | SUR button  | <b>27</b> | FM/AM button (DE435), FM button (DE535)     |
| <b>11</b> | SOUND FIELD ON/OFF, MODE +, - buttons   | <b>28</b> | FM MODE button                              |
| <b>12</b> | SET UP button   | <b>29</b> | MEMORY button                               |
| <b>13</b> | MASTER VOLUME control   | <b>30</b> | DIRECT button                               |
| <b>14</b> | TONE button   | <b>31</b> | Number buttons                              |
| <b>15</b> | BASS BOOST button   | <b>32</b> | SHIFT button                                |
| <b>16</b> | MUTING button   | <b>33</b> | PHONES jack                                 |
| <b>17</b> | BALANCE control   | <b>34</b> | SPEAKERS A. B switch                        |

## Rear Panel

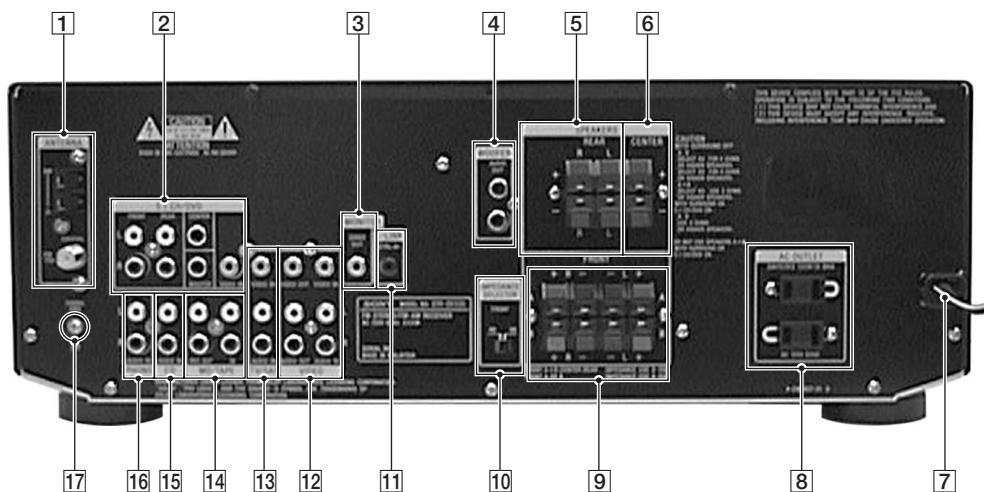

- 1** ANTENNA (FM/AM)
- 2** 5.1CH/DVD
- 3** MONITOR
- 4** WOOFER
- 5** SPEAKER (REAR)
- 6** SPEAKER (CENTER)
- 7** AC power cord
- 8** AC OUTLET
- 9** SPEAKER (FRONT)
- 10** IMPEDANCE SELECTOR (DE535 only)
- 11** S-LINK (DE535 only)
- 12** VIDEO
- 13** TV/LD (DE435), TV/SAT (DE535)
- 14** MD/TAPE
- 15** CD
- 16** PHONO (DE535 only)
- 17** ↘ SIGNAL GND (DE535 only)

## SECTION 2 TEST MODE

### SOFTWARE VERSION DISPLAY MODE

\* The software version is displayed.

\* Procedure:

While depressing the MD/TAPE and the DIRECT buttons simultaneously, press the power [I/O] button to turn on the main power. The model name, destination and the software version are displayed.


### FLUORESCENT INDICATOR TUBE TEST MODE

\* All fluorescent segments are tested. When this test is activated, all segments turn on at the same time, then each segment turns on one after another.

\* Procedure:


While depressing the TV/SAT and the DIRECT buttons simultaneously, press the power [I/O] button to turn on the main power.

1. All segments turn on.

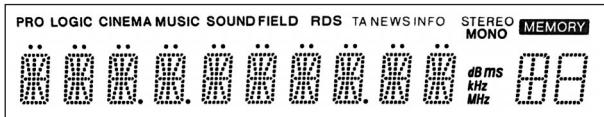


VIDEO, TV/SAT, MD/TAPE, CD, TUNER and PHONO LED turn on.

2. Press the VIDEO button, confirm display

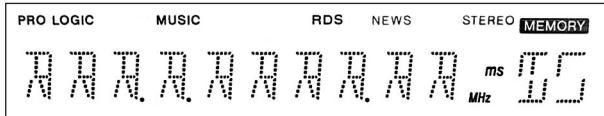

5.1CH/DVD, SUR, BASS/TREBLE, SET UP and NAME LED turn on.

3. Press the VIDEO button, confirm display

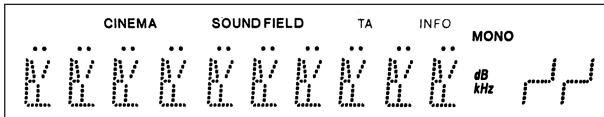

TONE, BASS BOOST and MUTING LED turn on.

4. Press the VIDEO button, All segments turn off.

5. Every pressing of the VIDEO button turns on each segment one after another in the following order.

(Not only the VIDEO button, but also the other buttons such as TV/SAT, MD/TAPE, CD, TUNER, PHONO, 1, 2, 3, 4, 5, 6, 7, 8, 9, 0 can be used.)

### FACTORY SET MODE

\* All preset contents are reset to the default setting.

\* Procedure:

While depressing the VIDEO and the DIRECT buttons simultaneously, press the power [I/O] button to turn on the main power. The message FACTORY appears and the present contents are reset to the default values.

### ALL CLEAR MODE

\* All preset contents are cleared when this mode is activated. Use this mode before returning the product to clients upon completion of repair.

\* Procedure:

While depressing the TUNER and the MD/TAPE buttons simultaneously, press the power [I/O] button to turn on the main power. Alternatively, press I/O more than 4S. The message ALL CLEAR appears and initialization is performed.

### SURROUND CLEAR MODE

\* The preset sound field is cleared when this mode is activated. Use this mode before returning the product to clients upon completion of repair.

\* Procedure:

While depressing the SOUND FIELD ON/OFF button, press the power [I/O] button to turn on the main power. The message SUR CLEAR appears and initialization is performed.

### AM CHANNEL STEP 9 kHz/10 kHz SELECTION MODE

\* Either the 9 kHz step or 10 kHz step can be selected for the AM channel step.


\* Procedure:

Set the FUNCTION to AM. Turn off the main power. While depressing the TUNING+ button or the PRESET+ button, press the power [I/O] button to turn on the main power. Either the message AM 9k STEP or AM 10k STEP appears. Select the desired step.

\* For US/Canadian/E model only

## SECTION 3 DIAGRAMS

### 3-1. CIRCUIT BOARDS LOCATION

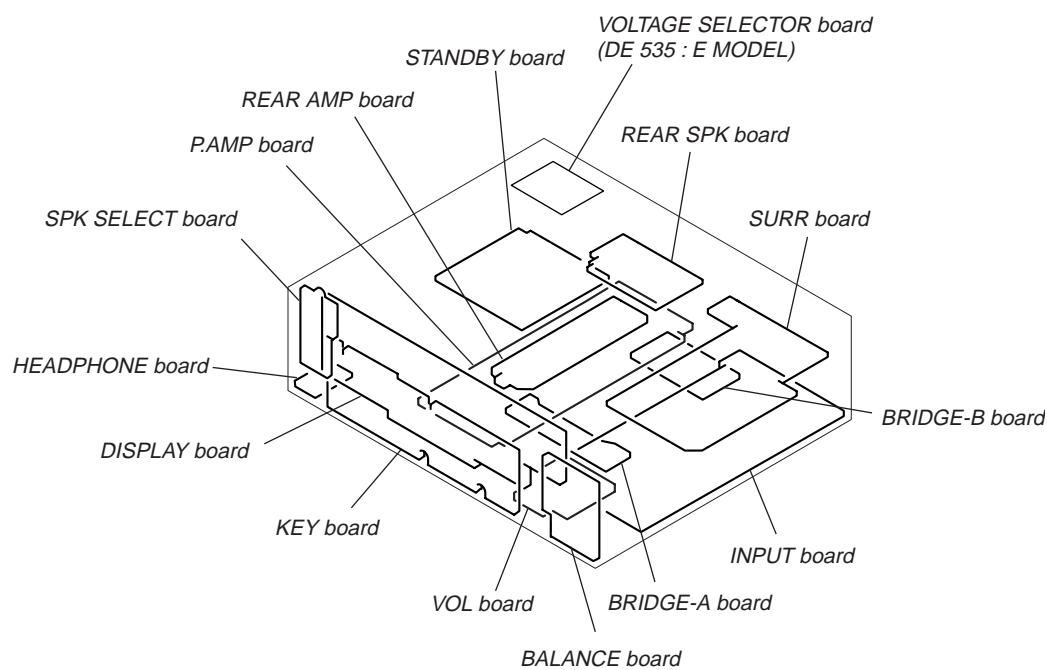

**THIS NOTE IS COMMON FOR PRINTED WIRING  
BOARDS AND SCHEMATIC DIAGRAMS.**  
(In addition to this necessary note is printed in each  
block.)

#### For schematic diagrams.

##### Note:

- All capacitors are in  $\mu\text{F}$  unless otherwise noted.  $\text{pF}$ :  $\mu\mu\text{F}$  50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in  $\Omega$  and  $1/4\text{W}$  or less unless otherwise specified.
- % : indicates tolerance.
- $\triangle$  : internal component.
- : nonflammable resistor.
- : fusible resistor.
- : panel designation.

**Note:**  
The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety.  
Replace only with part number specified.

**Note:**  
Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和  $\triangle$  标志来识别的零  
部件，在安全方面具有关键  
性，因此只能以规定号码的  
零部件来更换。



- : B+ Line.
- : B- Line.
- : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.  
No mark : FM
- Voltages are taken with a VOM (Input impedance  $10\text{ M}\Omega$ ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope.
- Circled numbers refer to waveforms.
- Signal path:  
 : FM  
 : CD  
 : VIDEO  
 : PHONO
- Abbreviation  
CND : Canadian model  
AUS : Australian model  
CH : Chinese model  
MY : Malaysia model  
SP : Singapore model

EA : Saudi Arabia model  
EE : East European model



#### For printed wiring boards.

##### Note:


- : parts extracted from the component side.
- : Through hole.
- : internal component.
- : Pattern from the side which enables seeing.

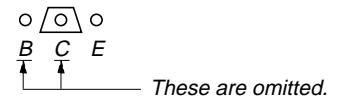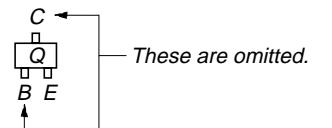

#### • Waveform — DISPLAY SECTION —

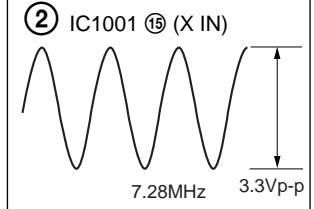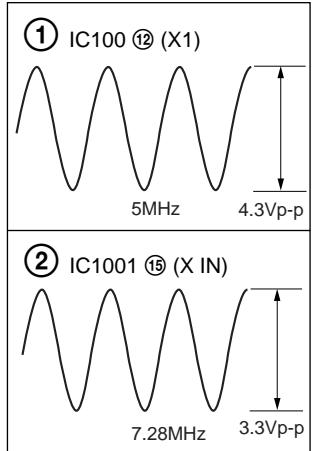


#### — INPUT SECTION —

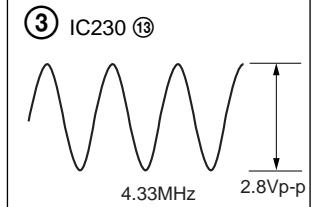


## 3-2. BLOCK DIAGRAMS


## — MAIN SECTION —

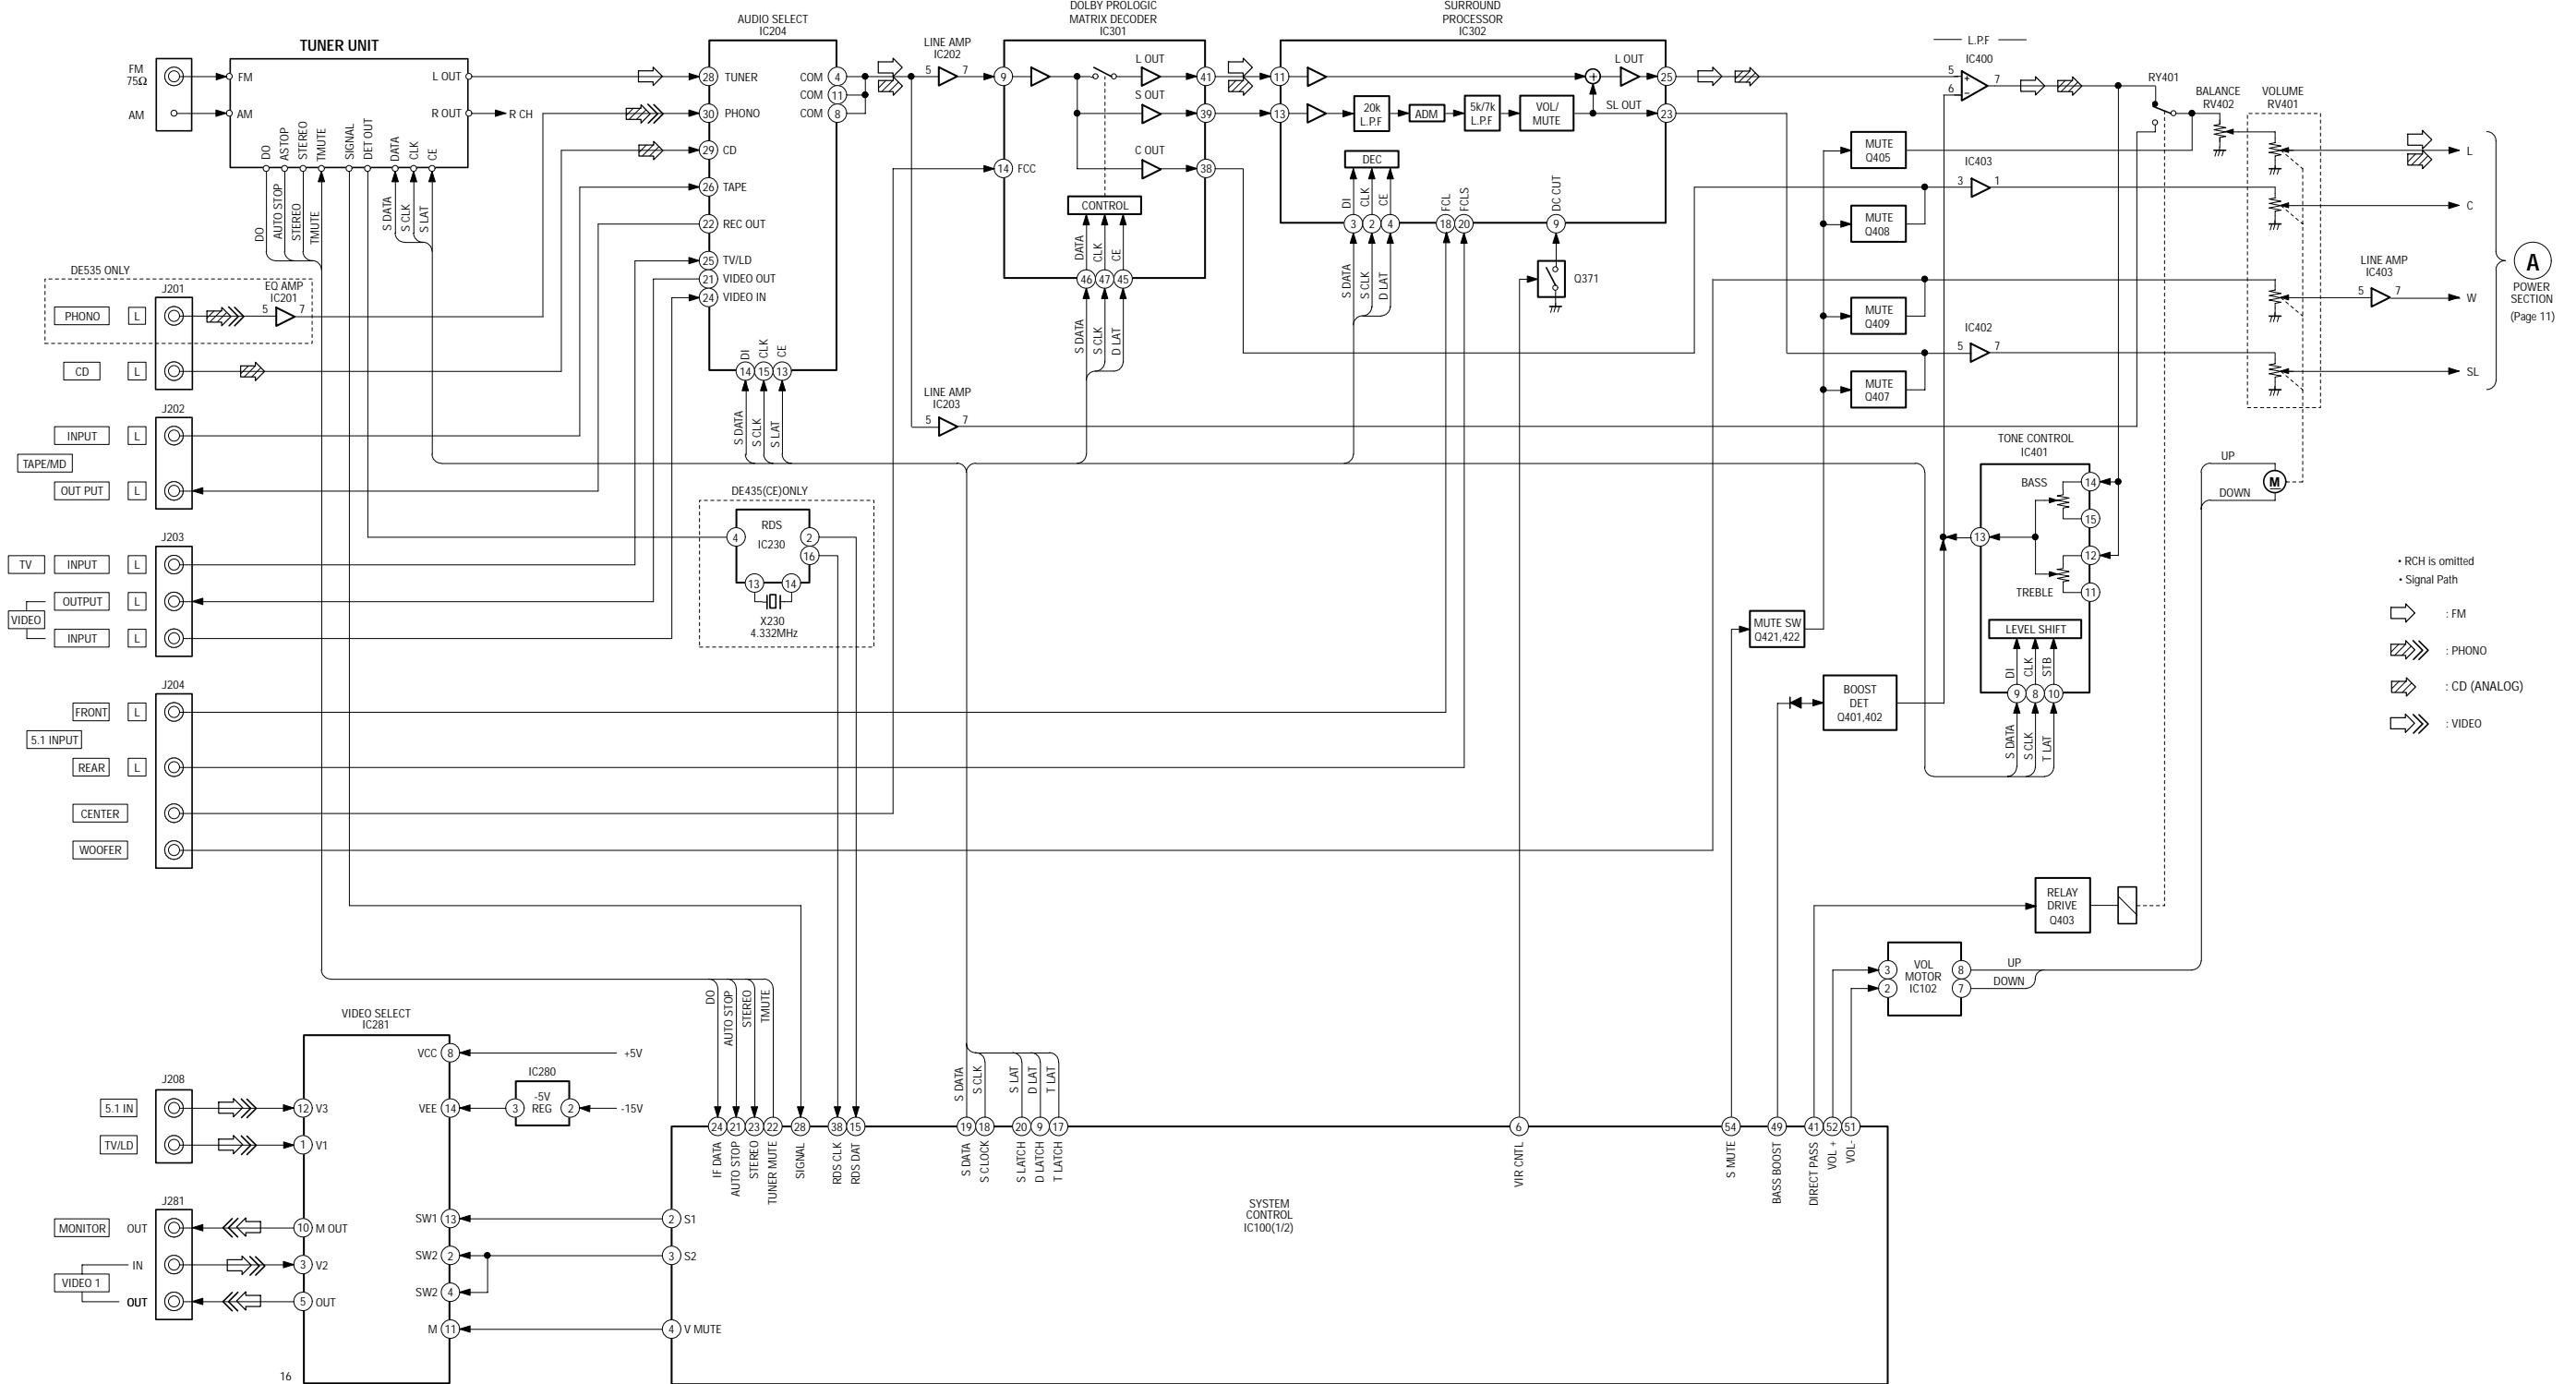

## — POWER SECTION —

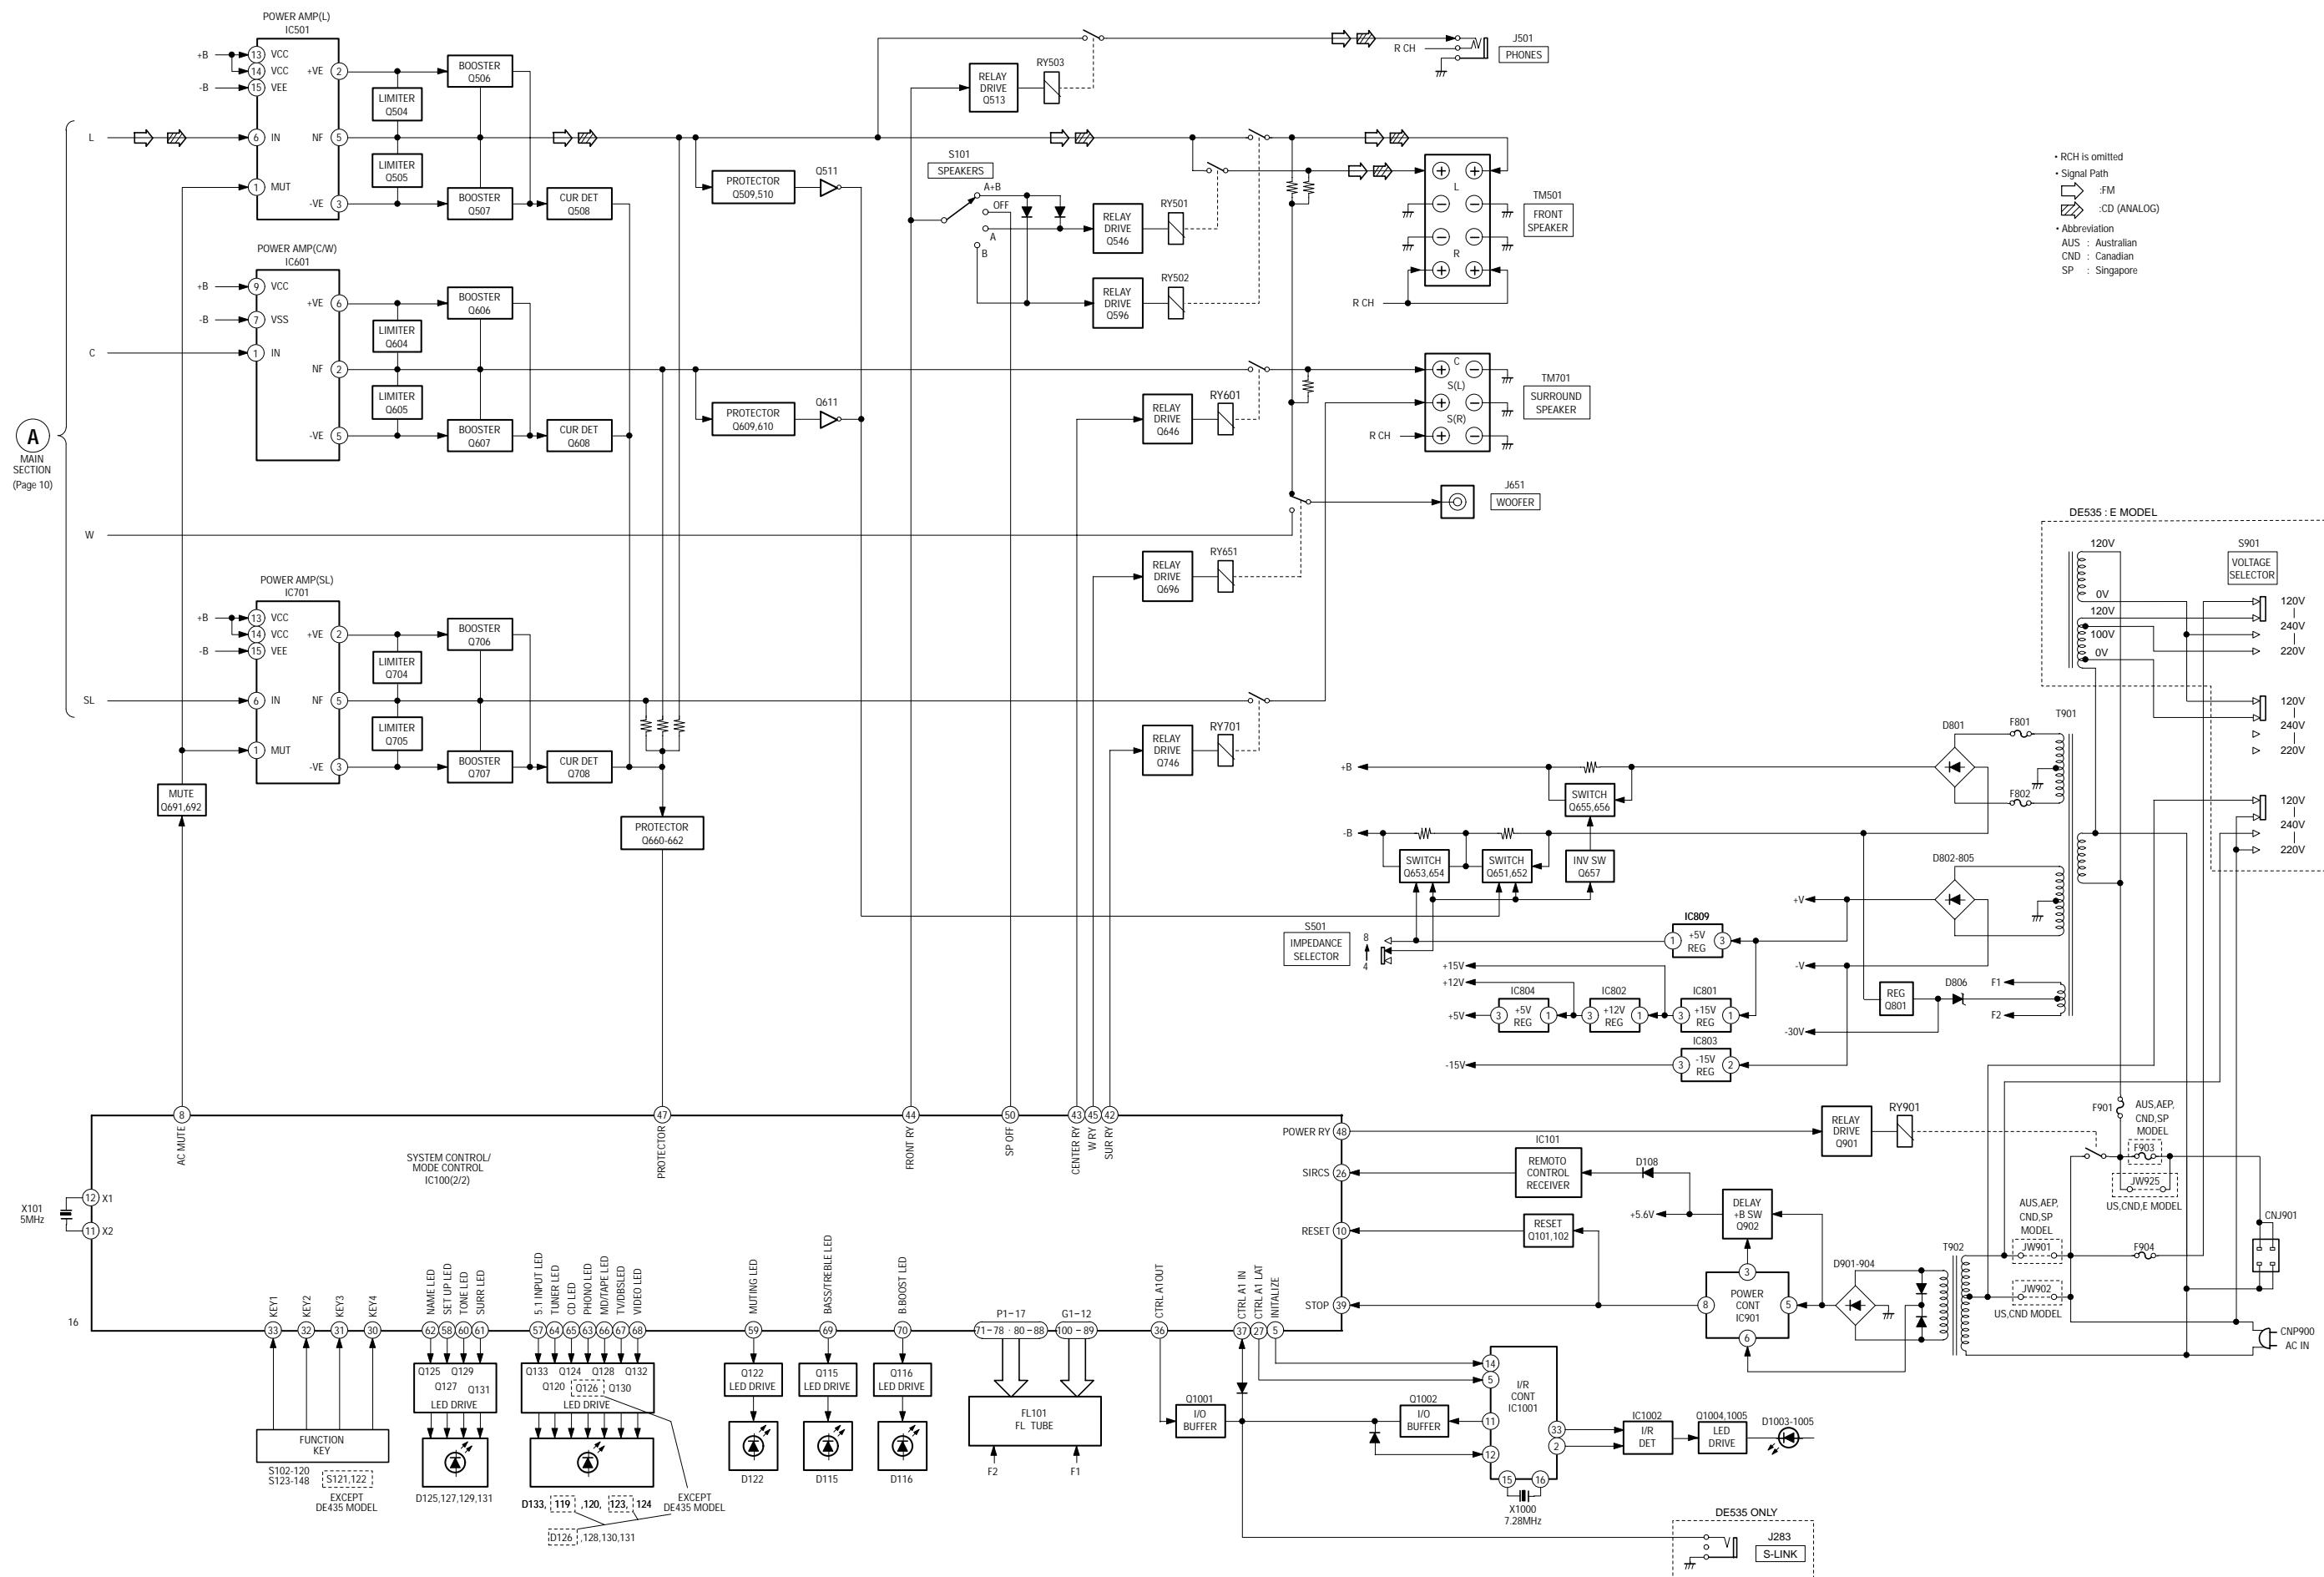

## 3-3. PRINTED WIRING BOARD — INPUT SECTION — • Refer to page 7 for Circuit Boards Location.

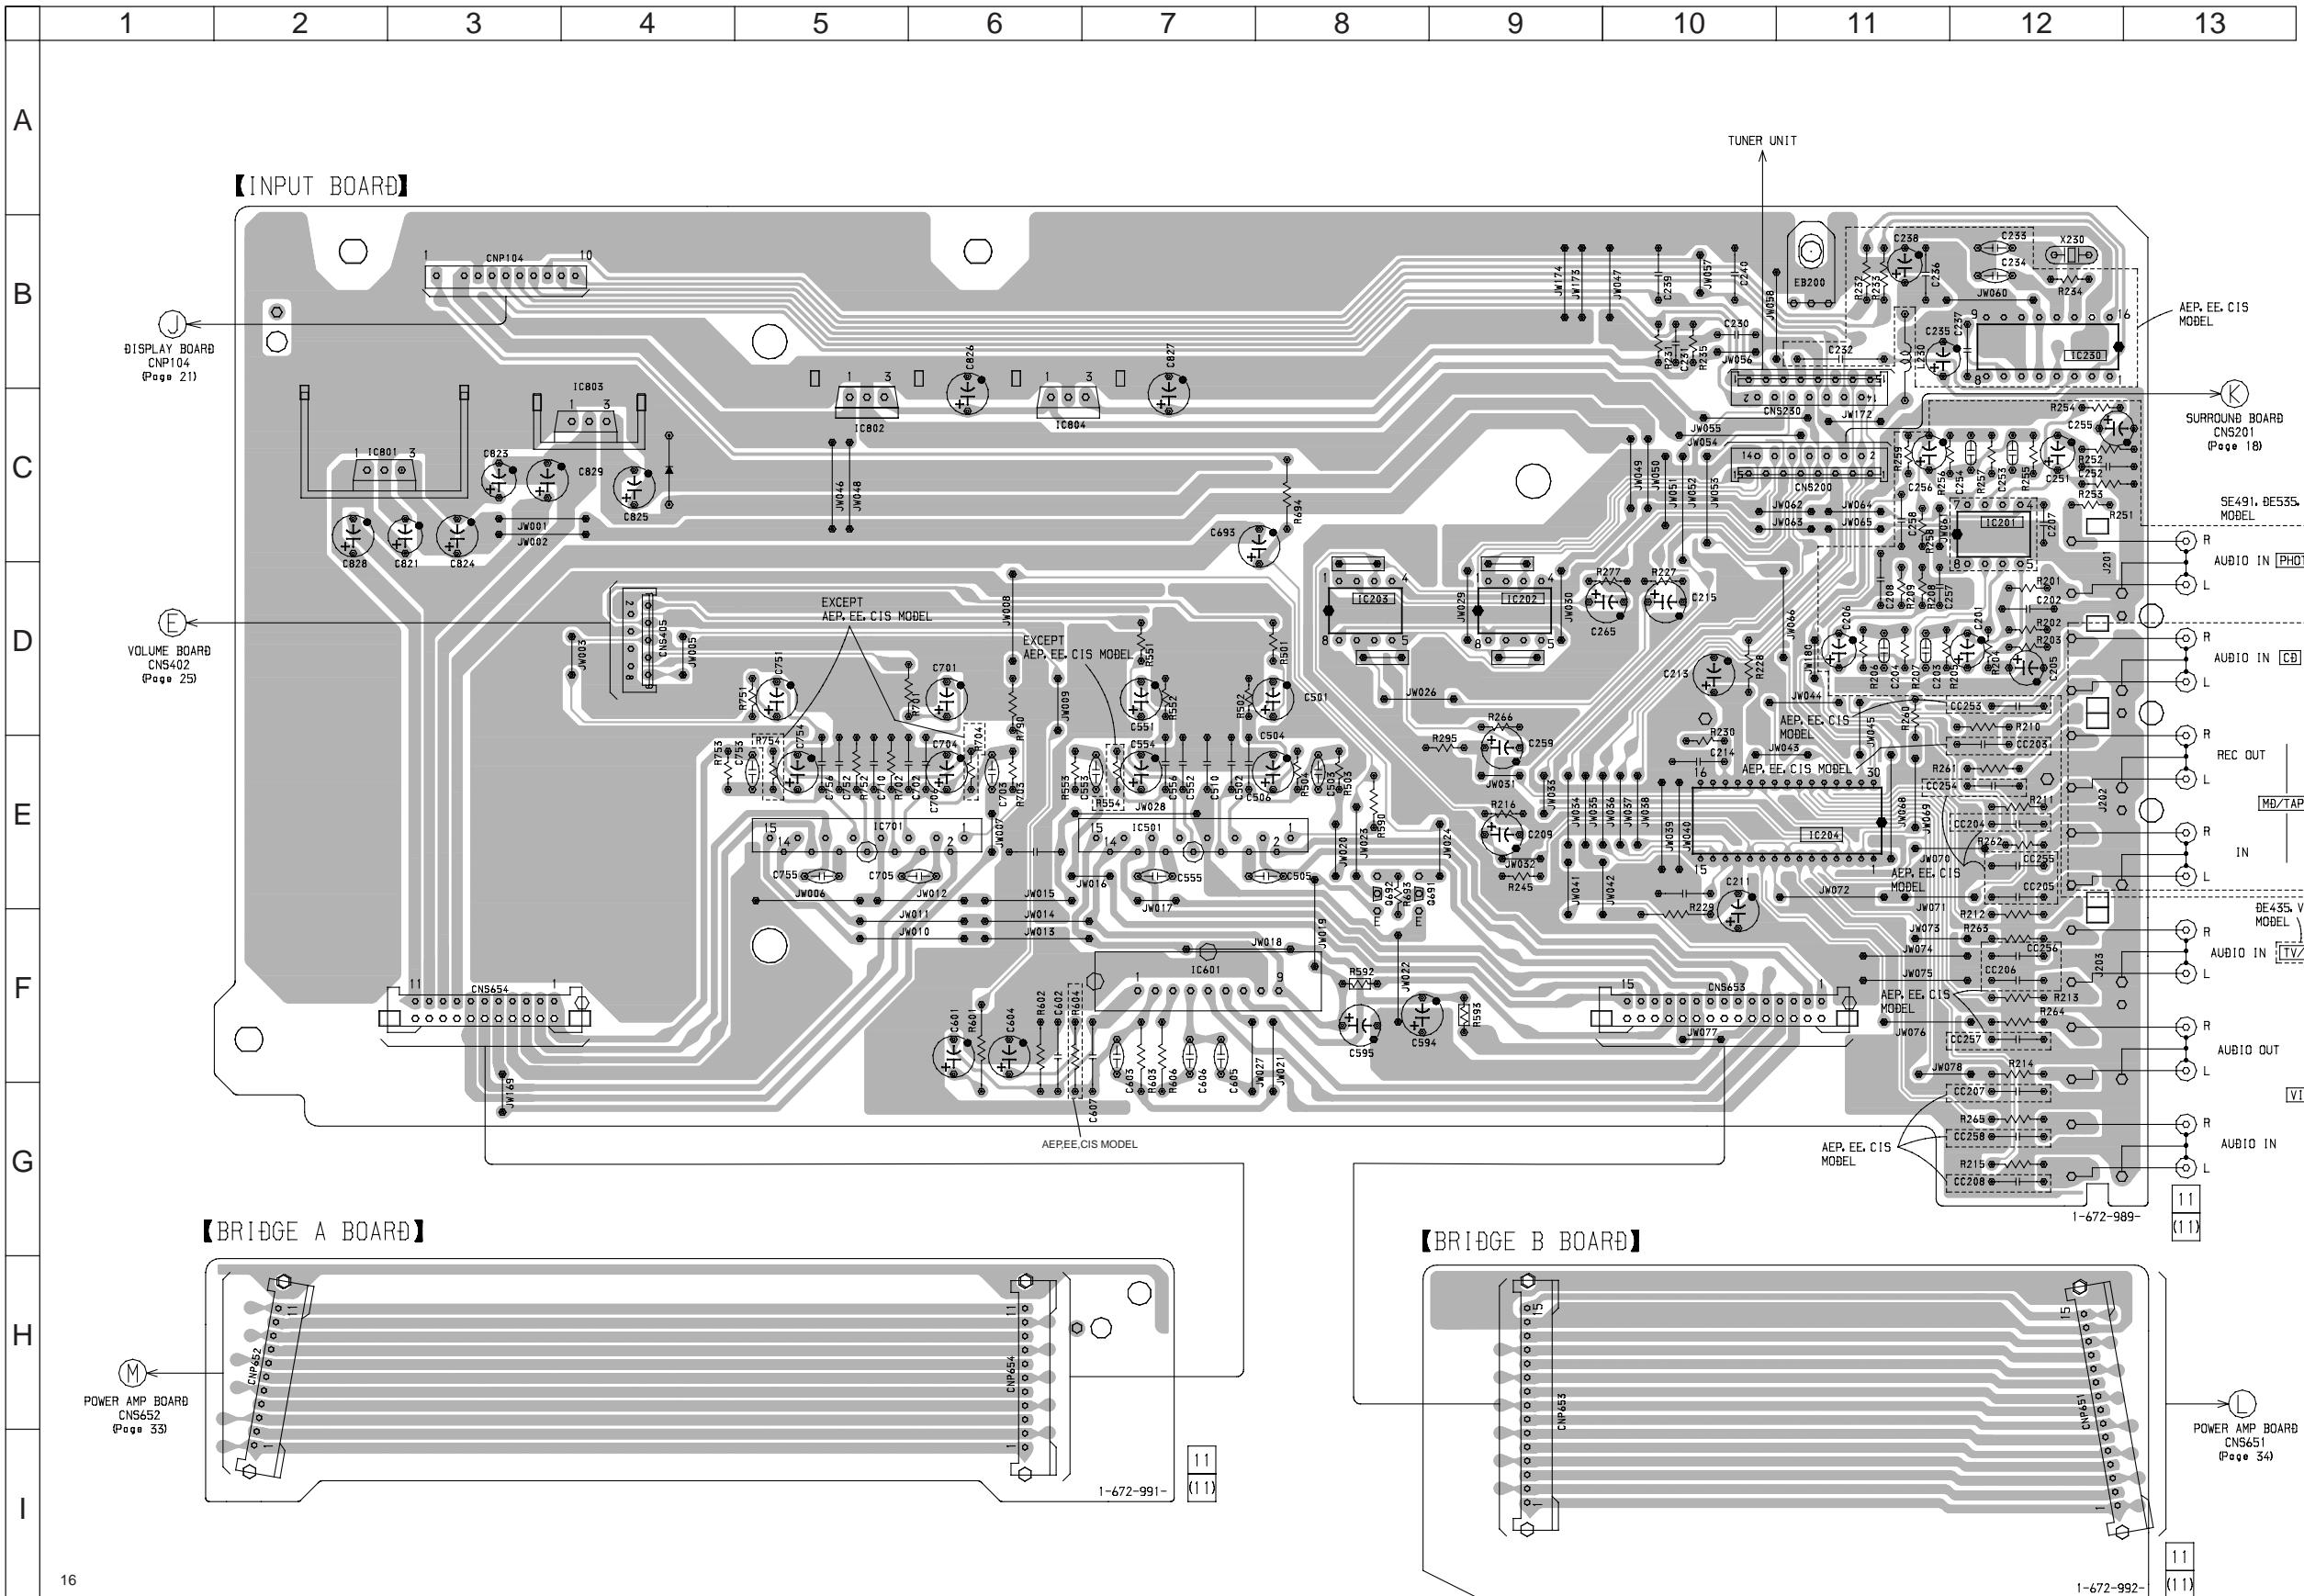


## • Semiconductor Location

Ref. No.	Location
IC201	C-12
IC202	D-9
IC203	D-8
IC204	E-11
IC230	B-12
IC501	E-7
IC601	F-7
IC701	E-5
IC801	C-2
IC802	C-5
IC803	C-4
IC804	C-6
Q691	E-8
Q692	E-8


### **3-4. SCHEMATIC DIAGRAM — INPUT SECTION —**

- Refer to page 39 for IC Block Diagrams
  - Refer to page 8 for Waveforms.

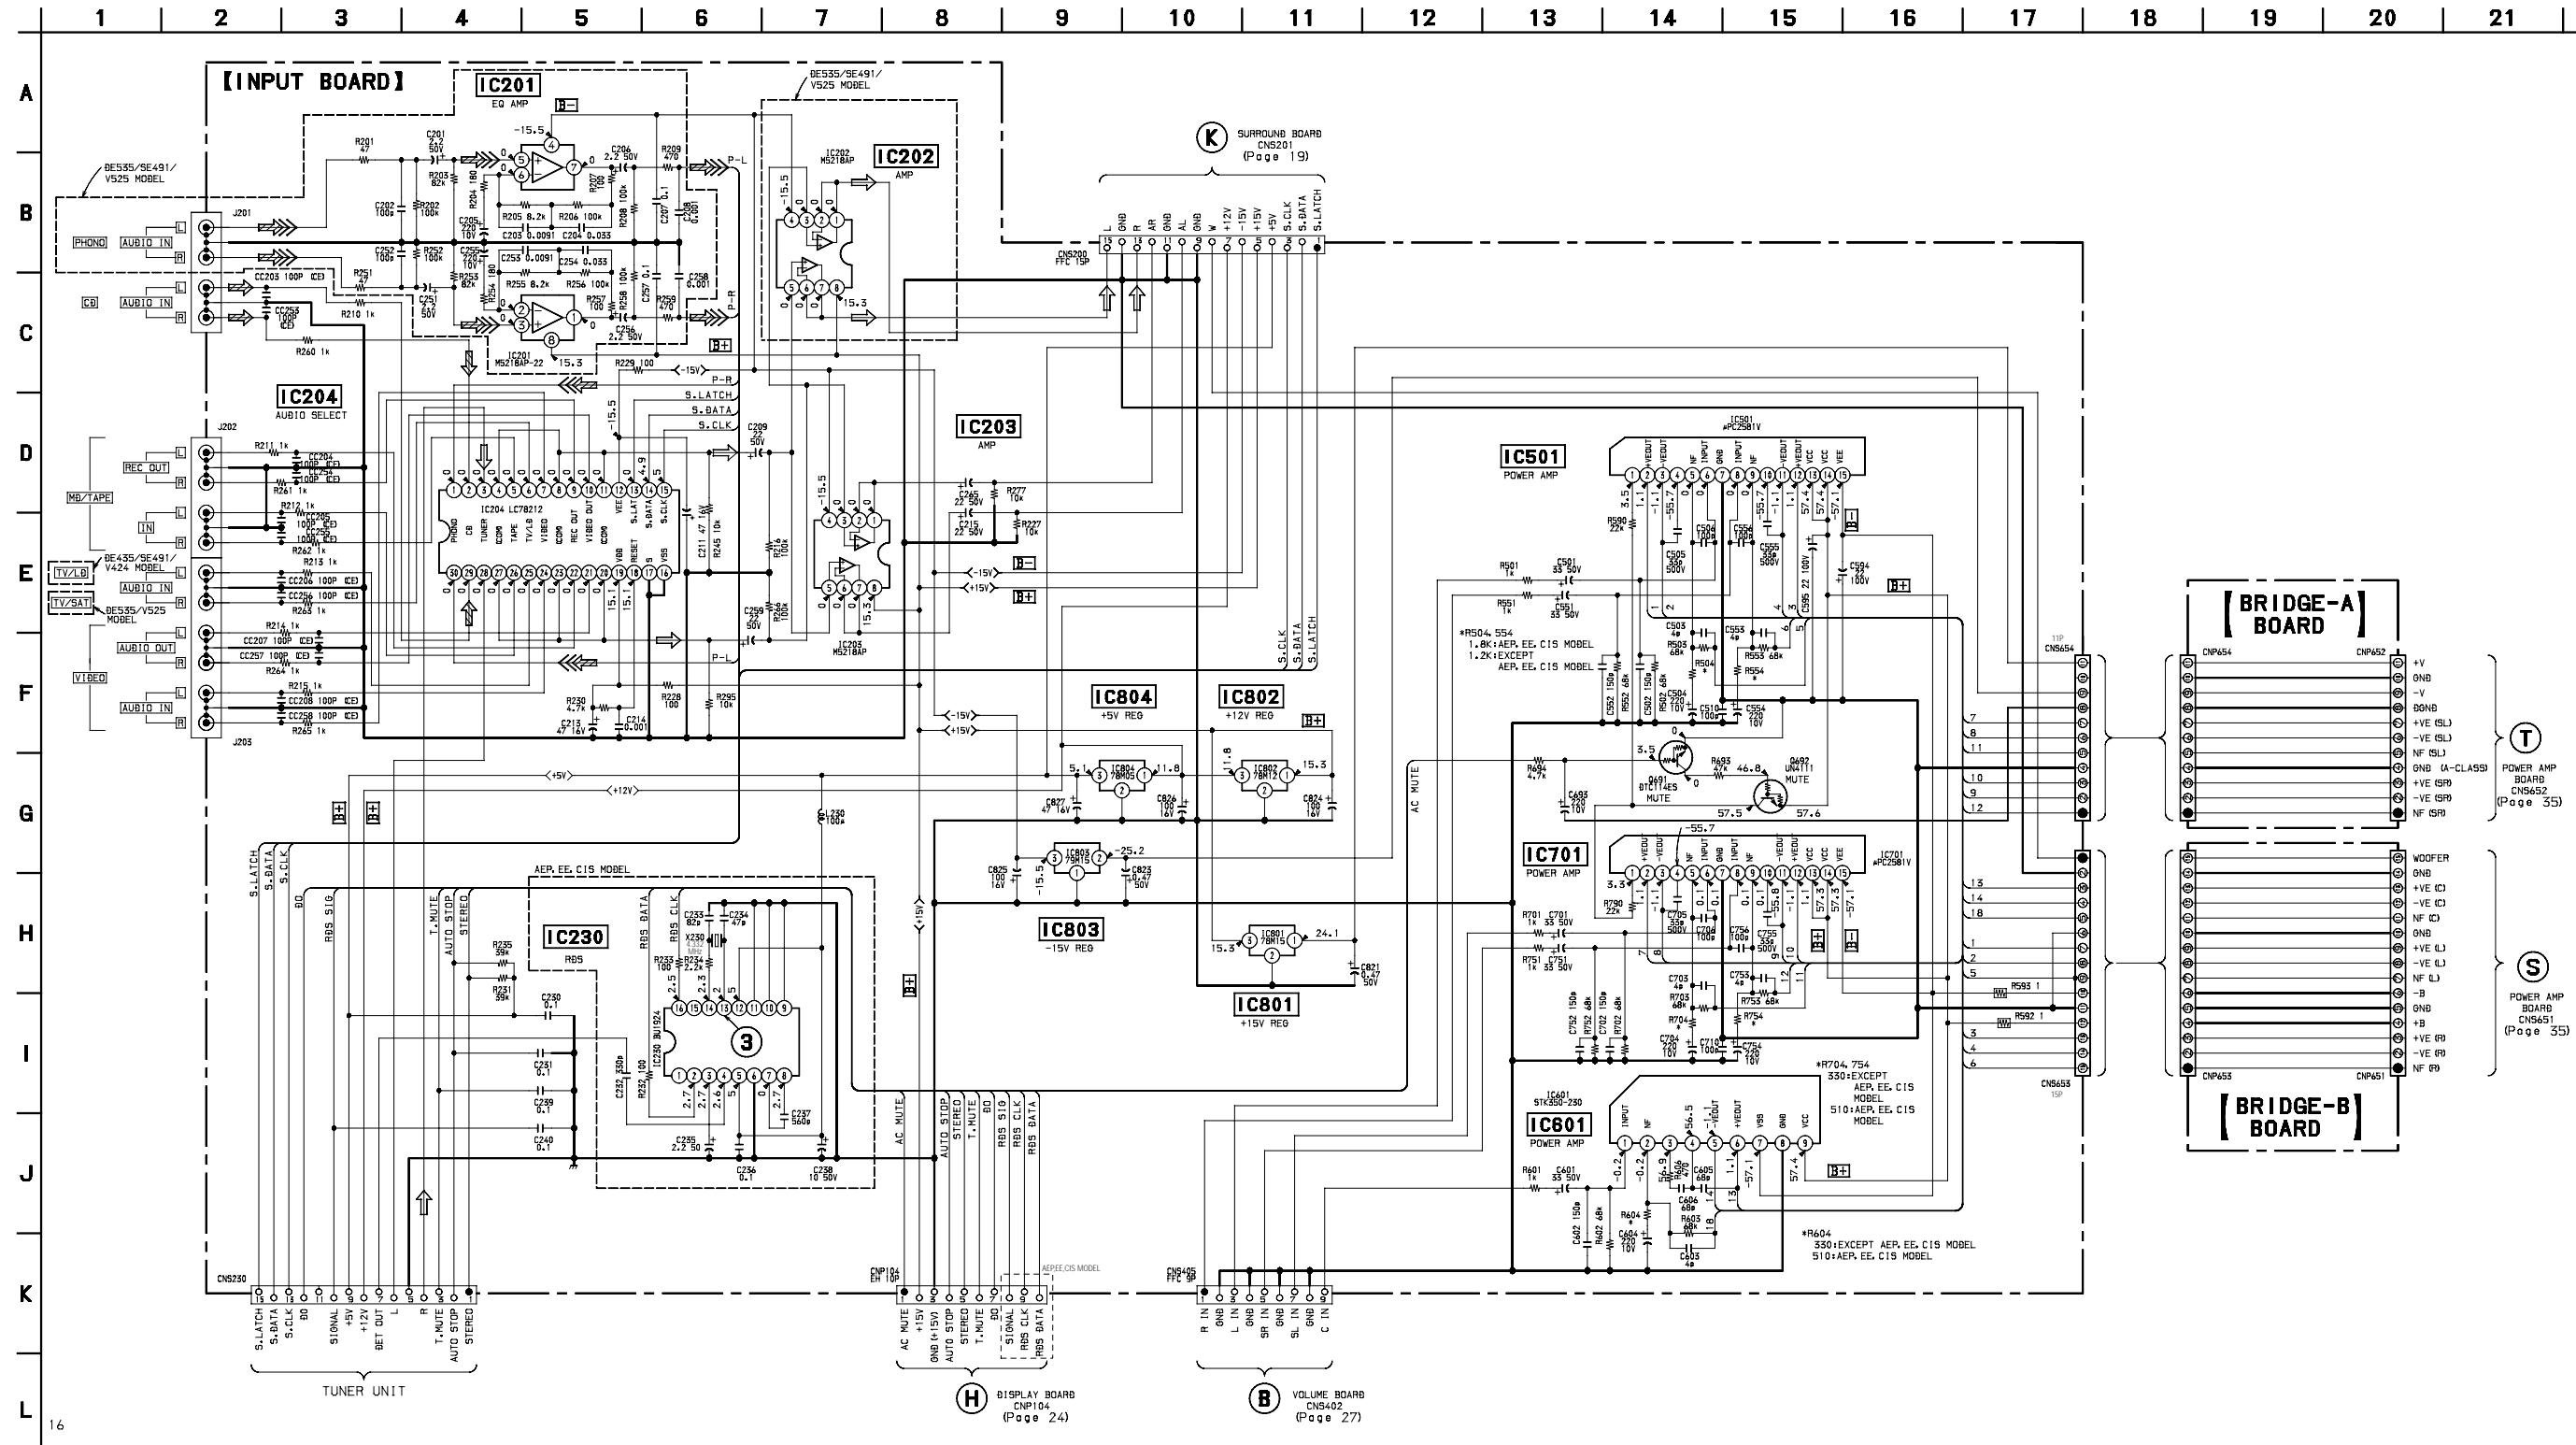

## 3-5. PRINTED WIRING BOARD — SURROUND SECTION —

• Refer to page 7 for Circuit Boards Location.

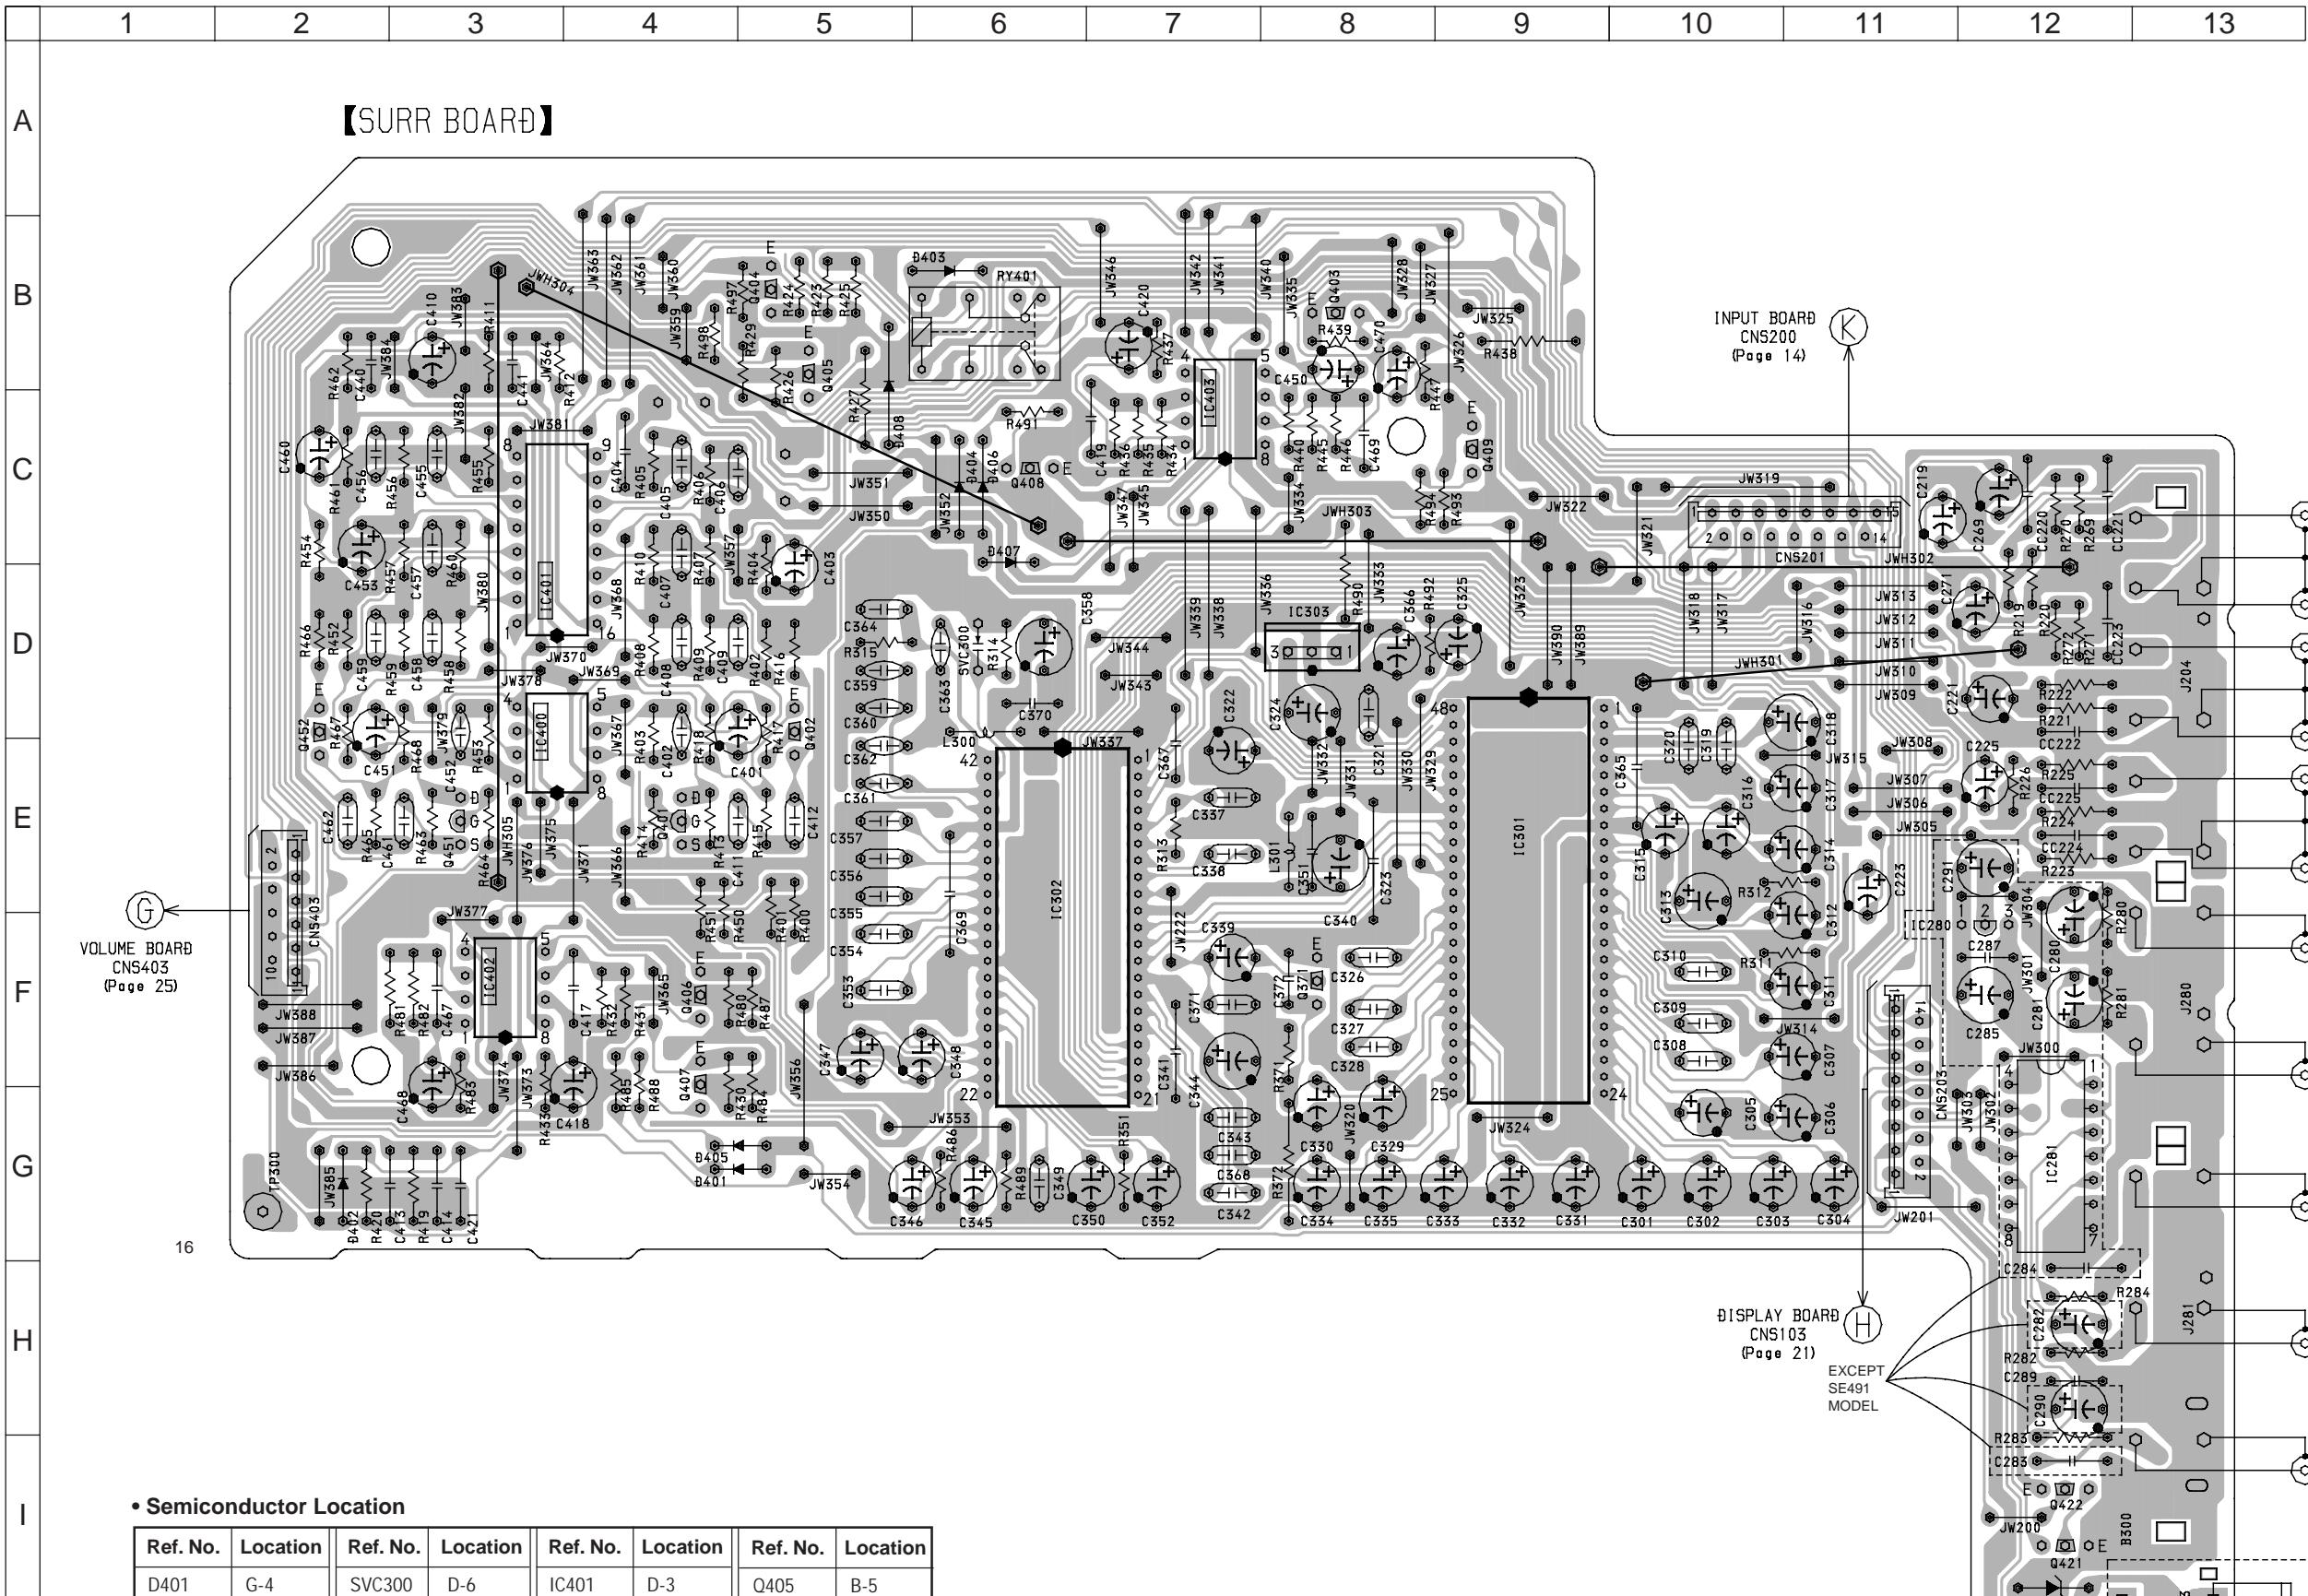


## • Semiconductor Location


Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D401	G-4	SVC300	D-6	IC401	D-3	Q405	B-5
D402	G-2			IC402	F-3	Q406	F-4
D403	B-6	IC280	E-12	IC403	B-7	Q407	F-4
D404	C-6	IC281	G-12	Q401	E-4	Q408	C-6
D405	G-4	IC301	E-9	Q402	D-5	Q409	C-9
D406	C-6	IC302	E-6	Q403	B-8	Q451	E-3
D407	C-6	IC303	D-8	Q404	B-5	Q452	D-2
D408	C-5	IC400	D-3				

## 3-6. SCHEMATIC DIAGRAM — SURROUND SECTION —

• Refer to page 39 for IC Block Diagrams.

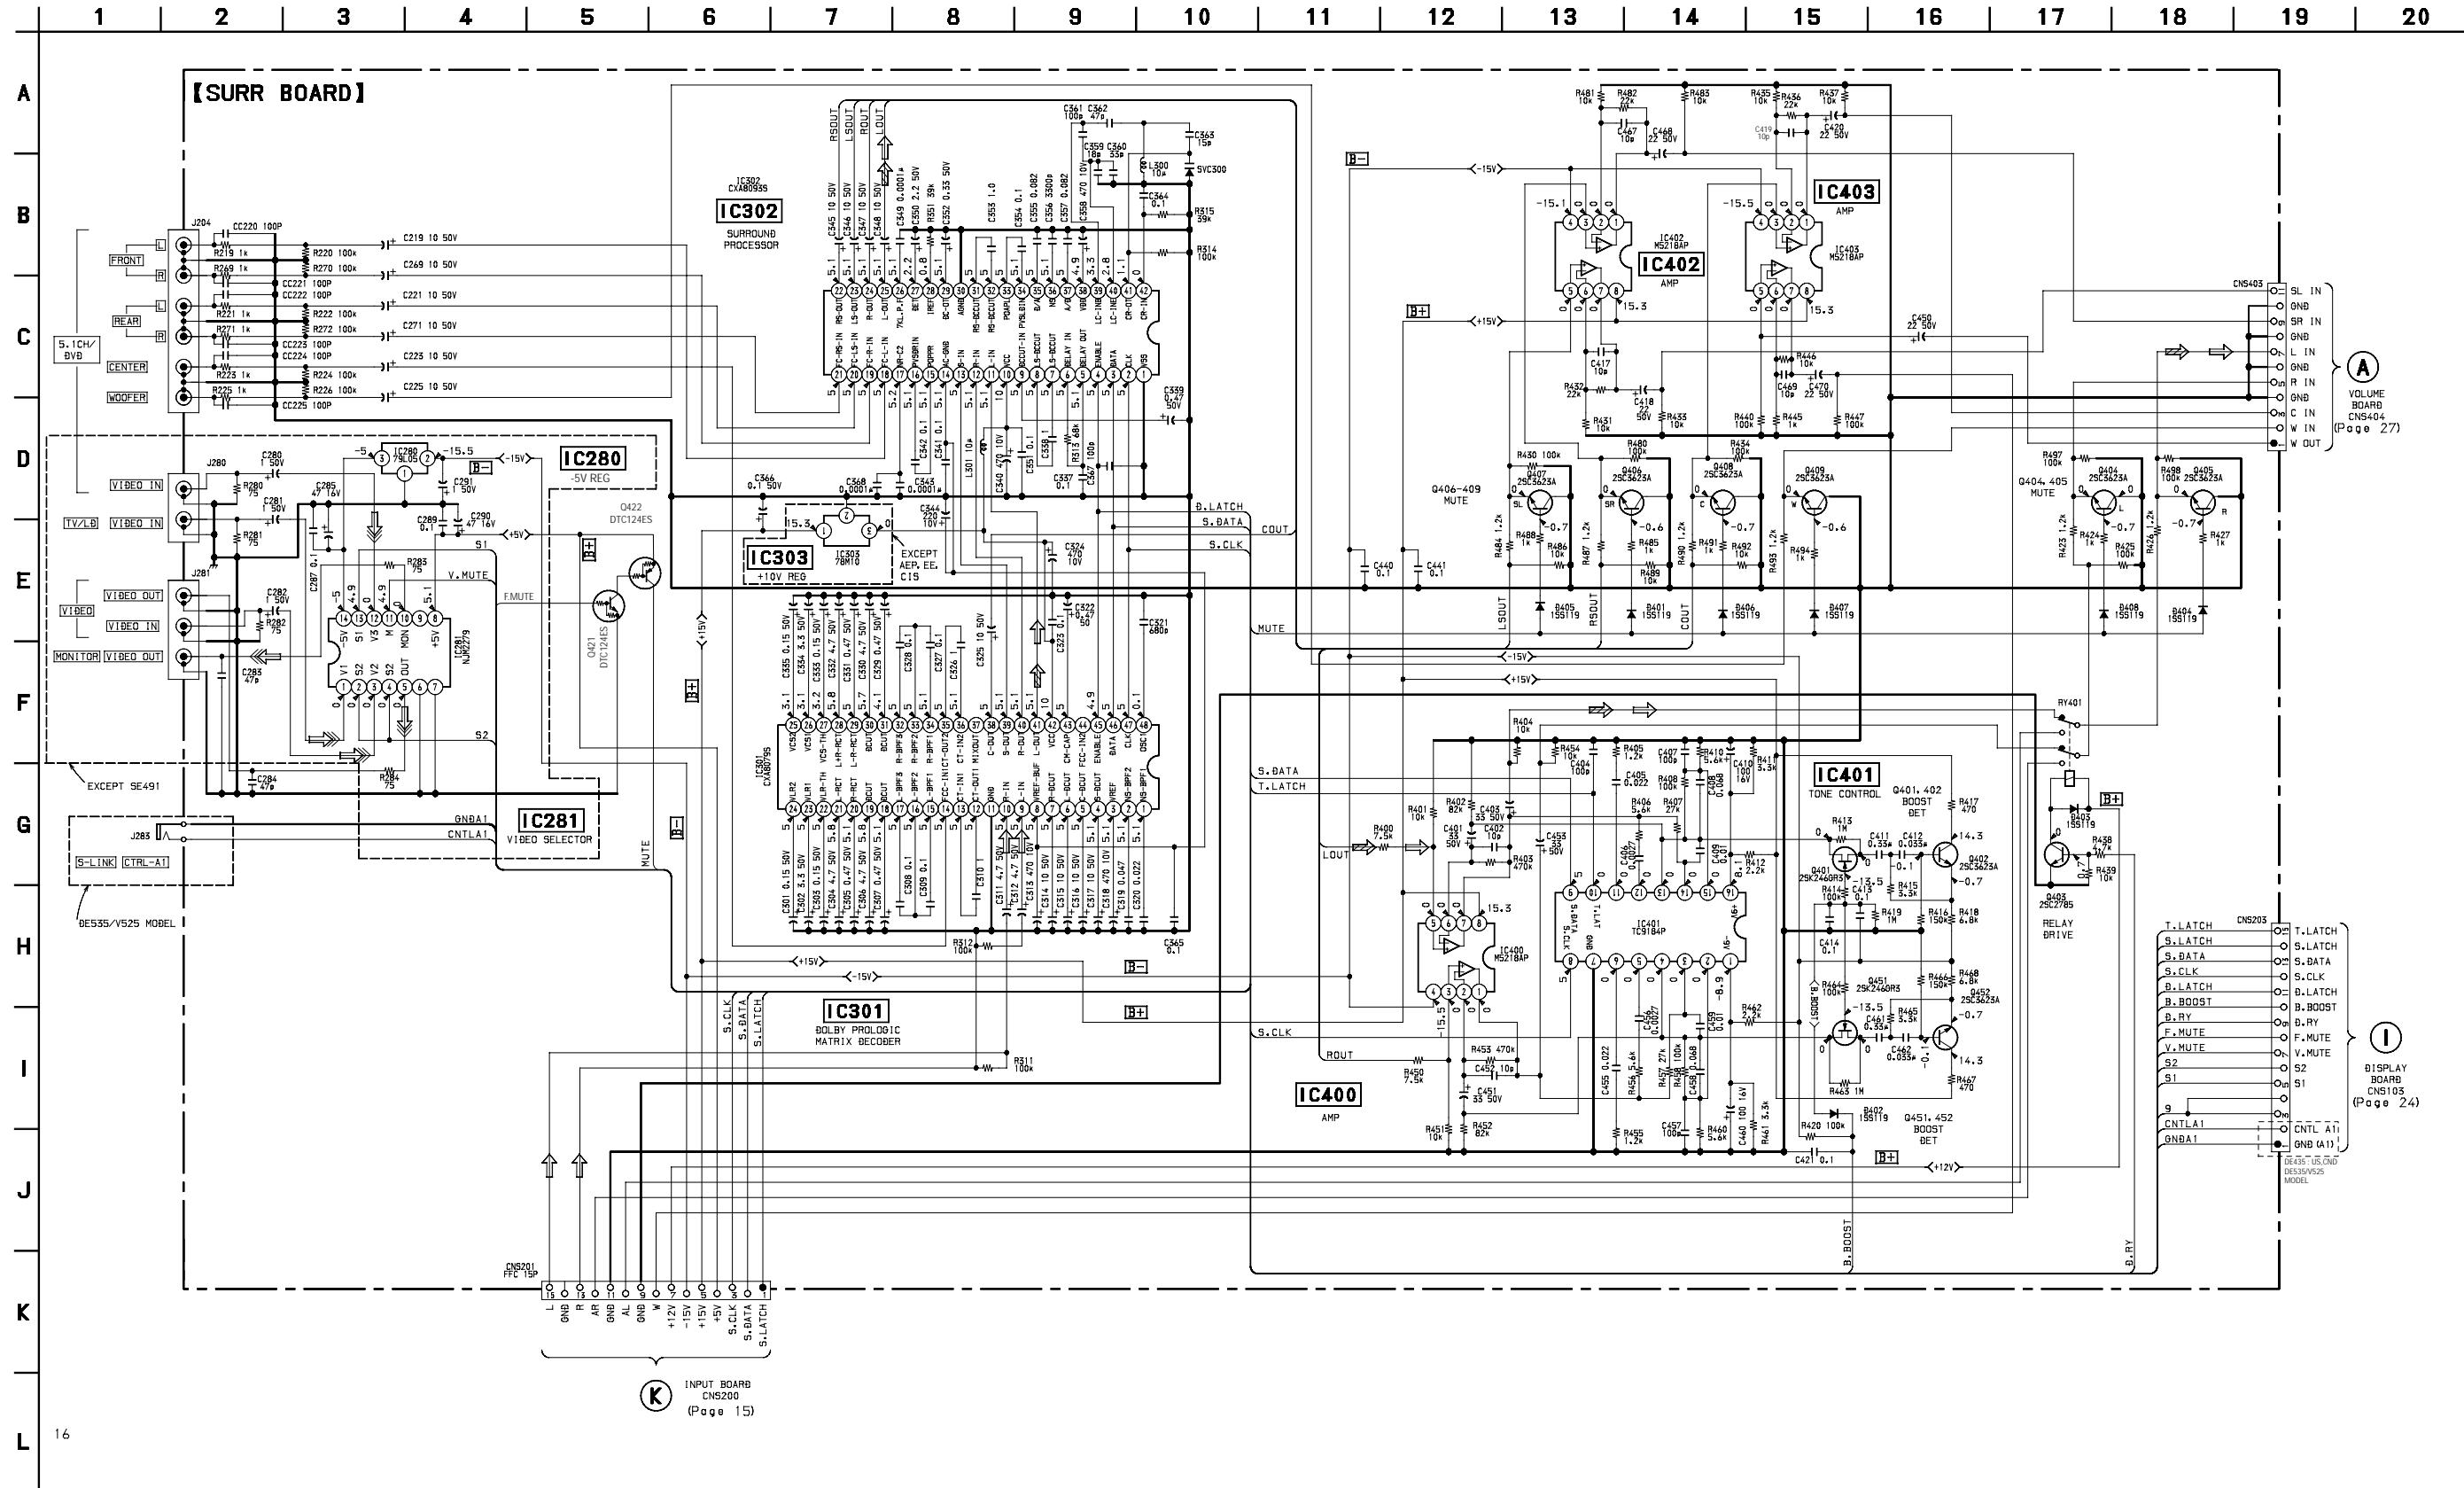


## 3-7. PRINTED WIRING BOARD — DISPLAY SECTION — • Refer to page 7 for Circuit Boards Location.

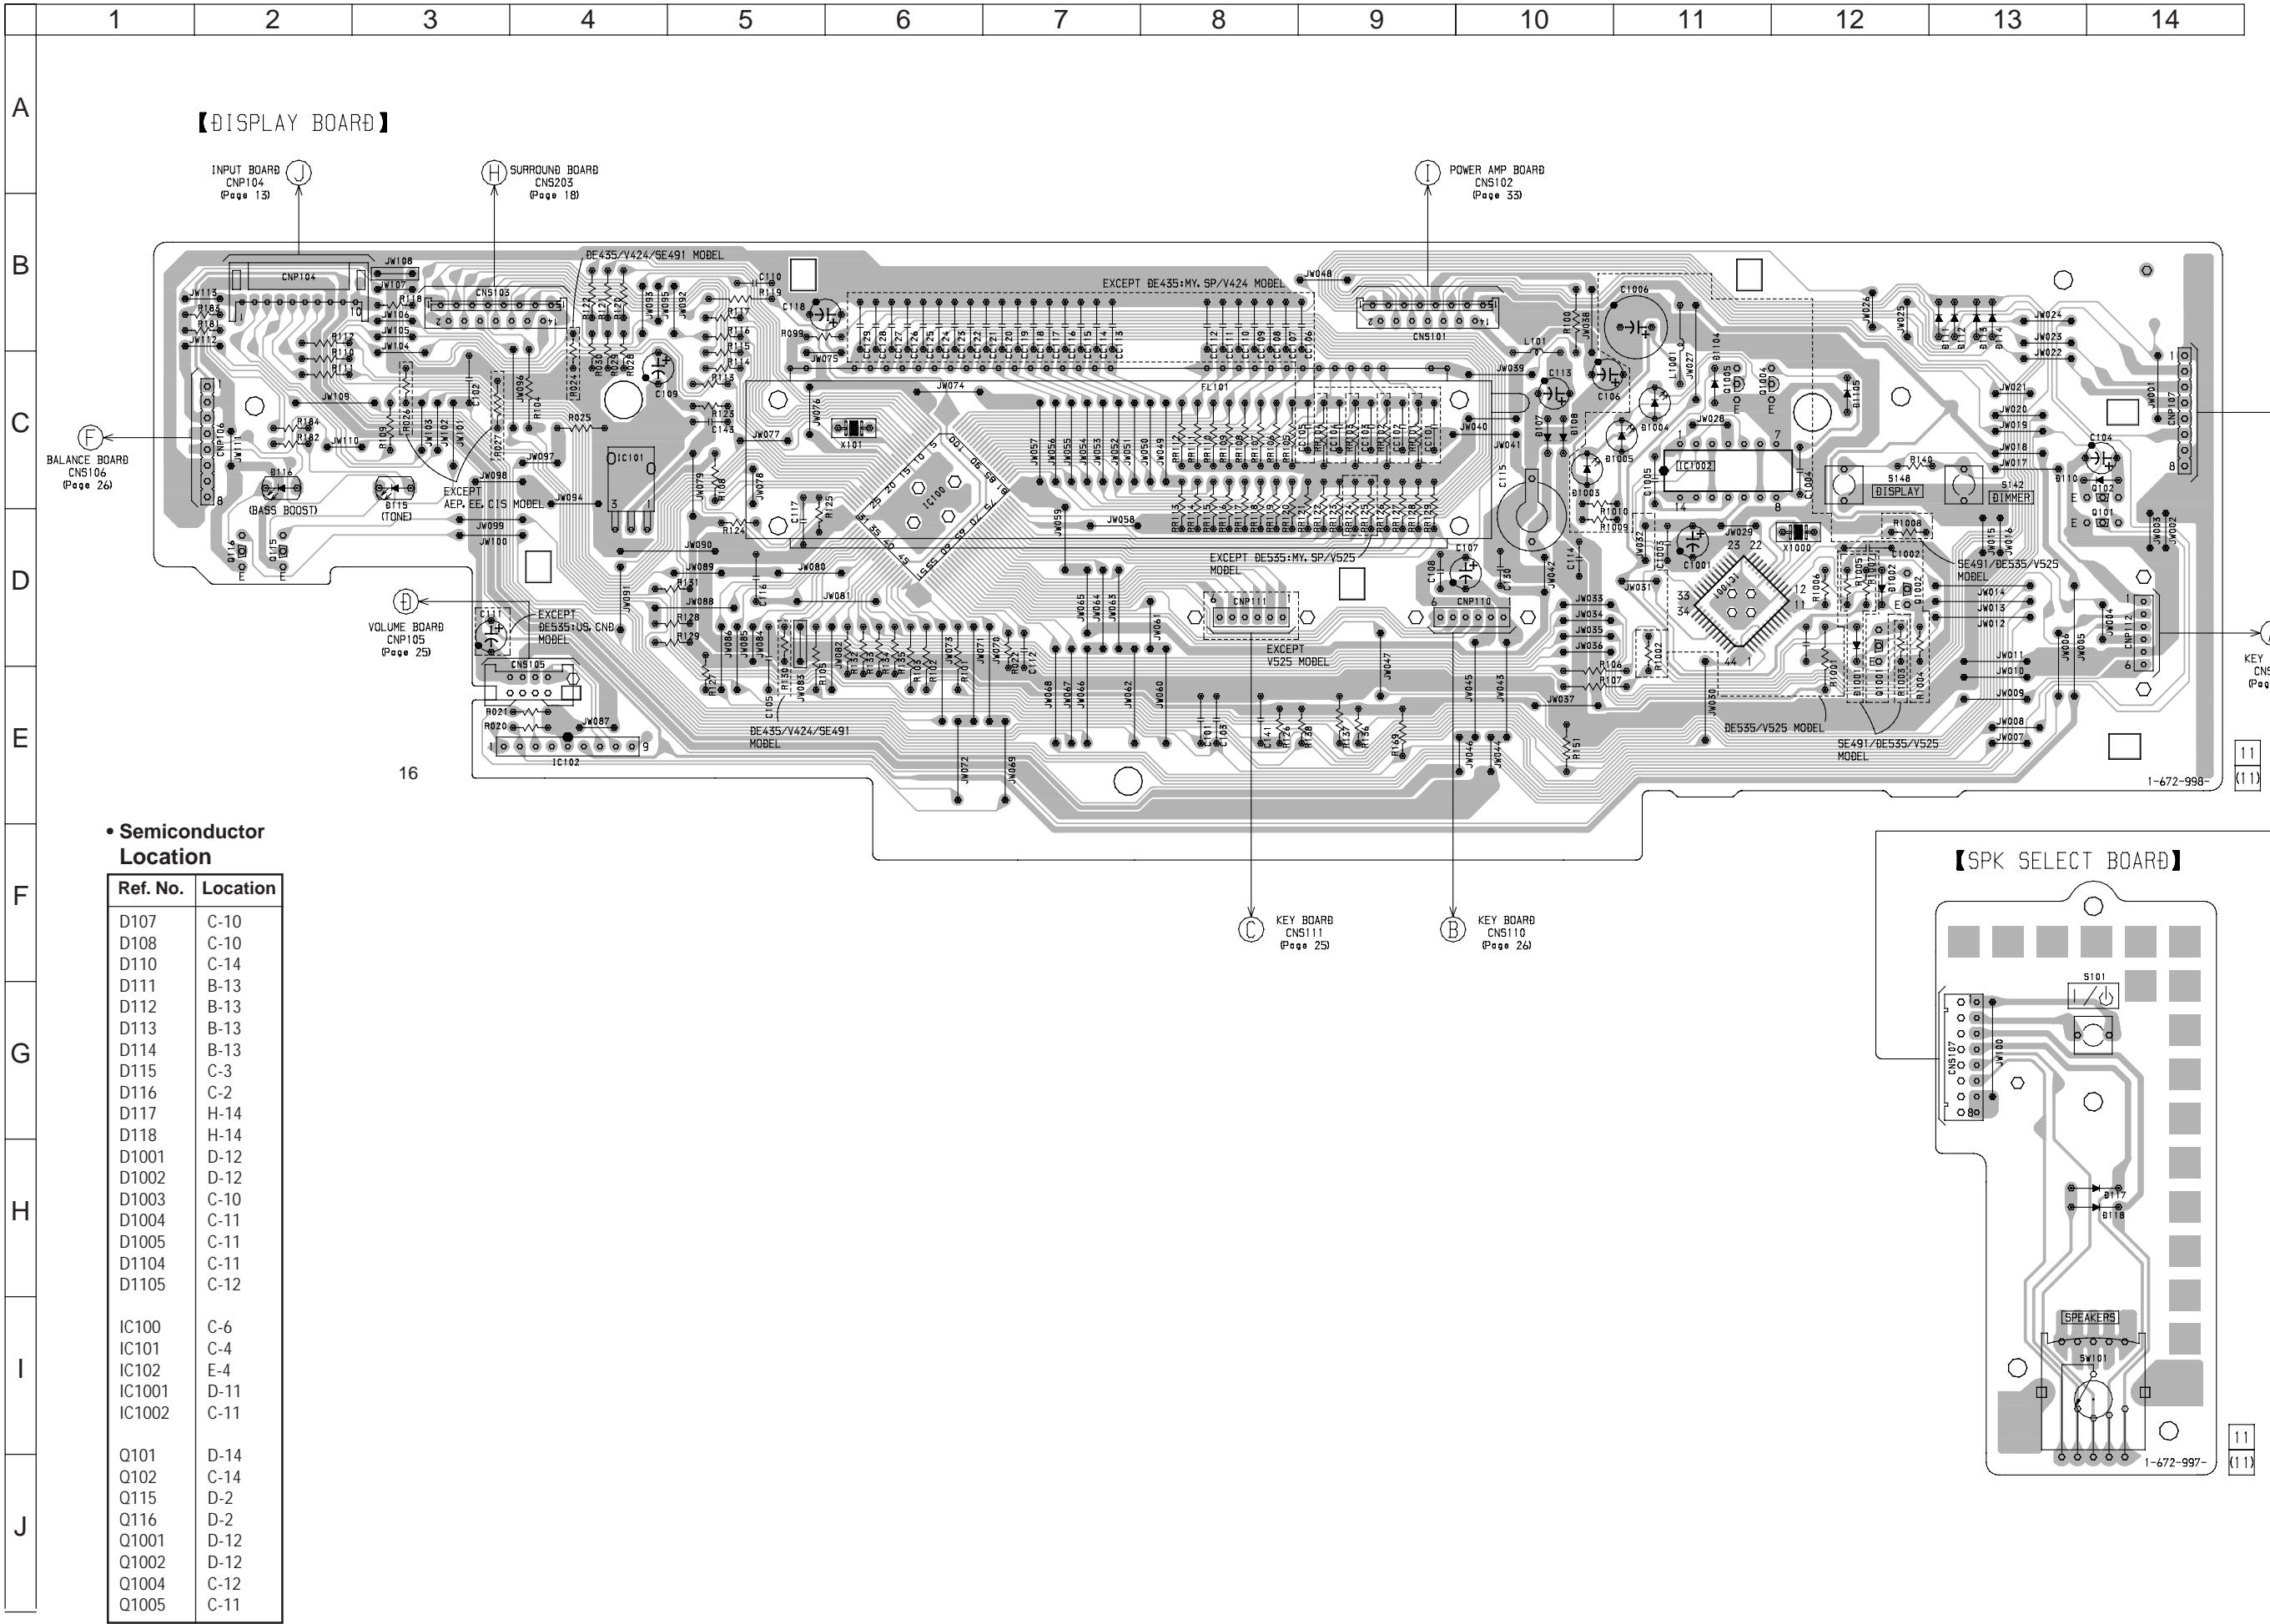

## 3-8. SCHEMATIC DIAGRAM — DISPLAY SECTION —



• Refer to page 37 for IC Pin Functions. • Refer to page 8 for Waveforms.

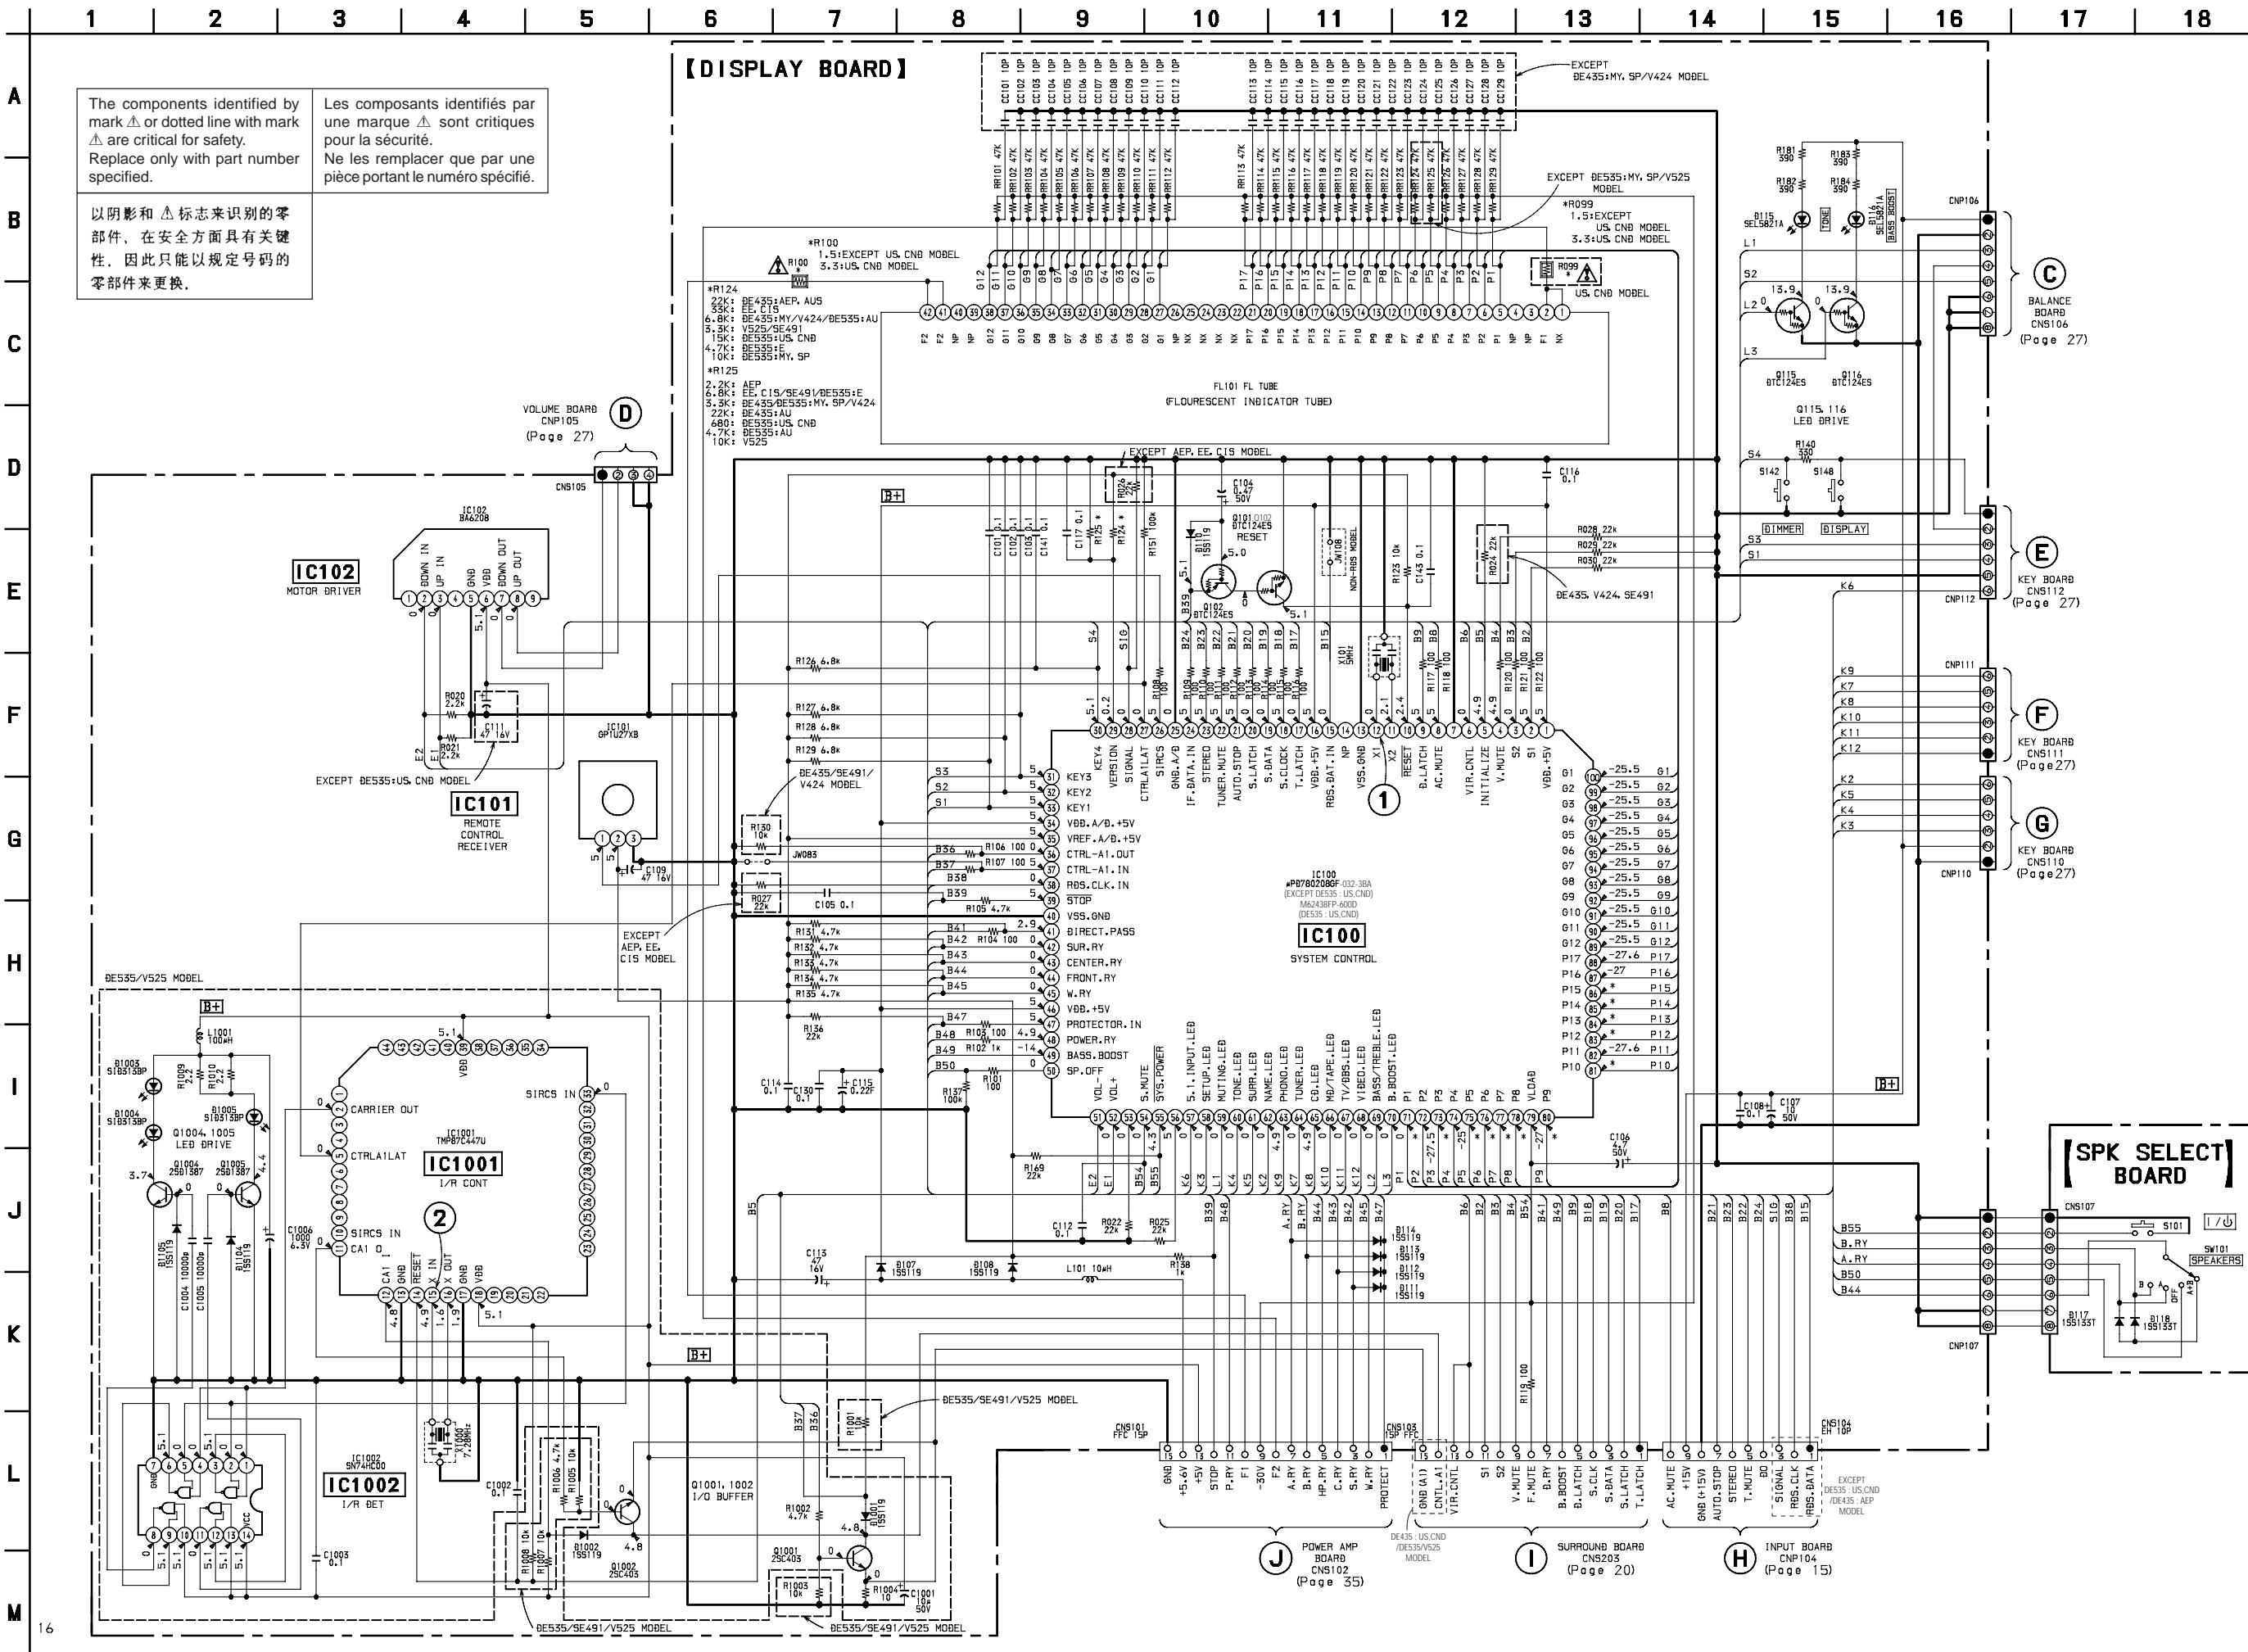


### **3-9. PRINTED WIRING BOARD — KEY SECTION —**

- Refer to page 7 for Circuit Boards Locations


• Semiconductor Location	
Ref. No.	Location
D119	H-7
D120	H-6
D122	A-10
D123	H-9
D124	H-8
D125	G-1
D126	H-6
D127	H-1
D128	H-6
D129	H-4
D130	H-7
D131	H-4
D132	H-9
Q122	A-10
Q124	I-9
Q125	I-6
Q126	I-6
Q127	H-9
Q128	I-7
Q129	I-7
Q130	I-8
Q131	H-9
Q132	I-9
Q133	H-14

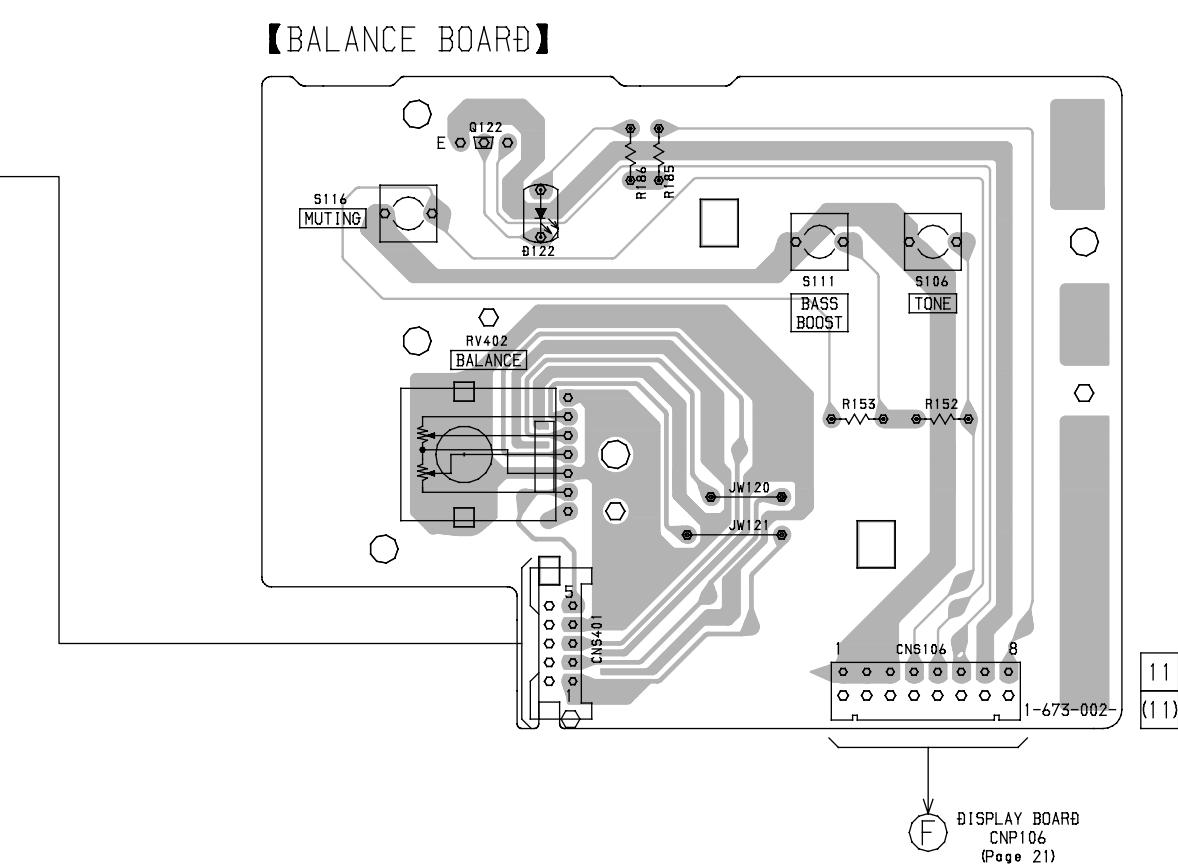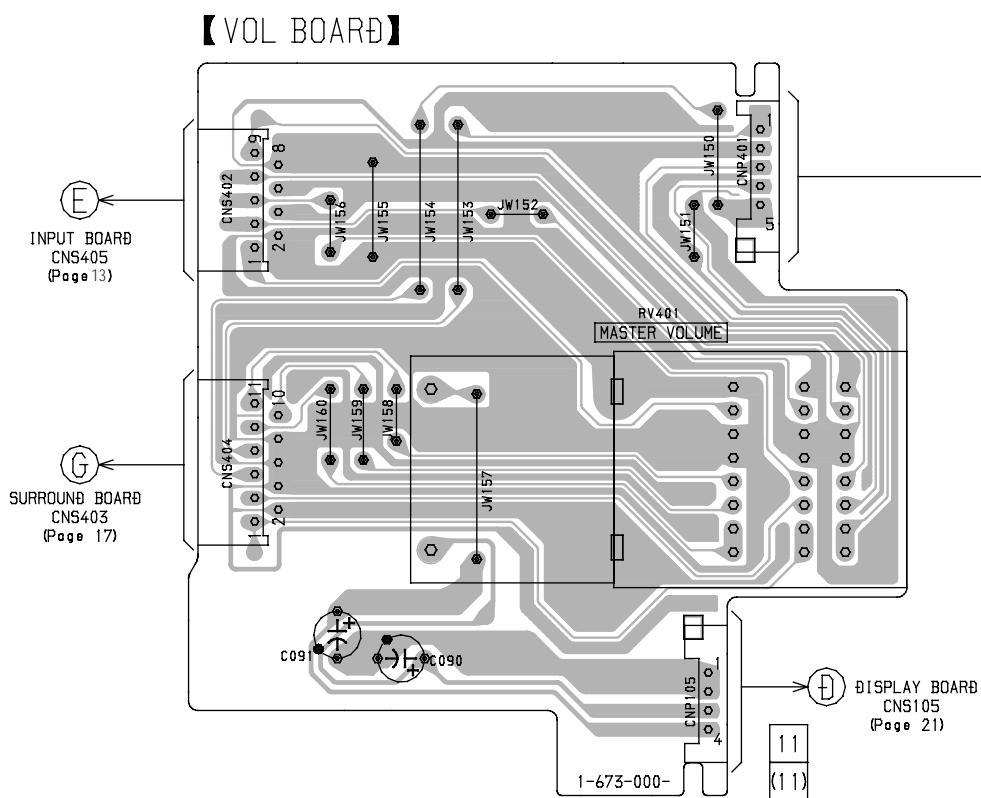

## 【KEY BOARD】

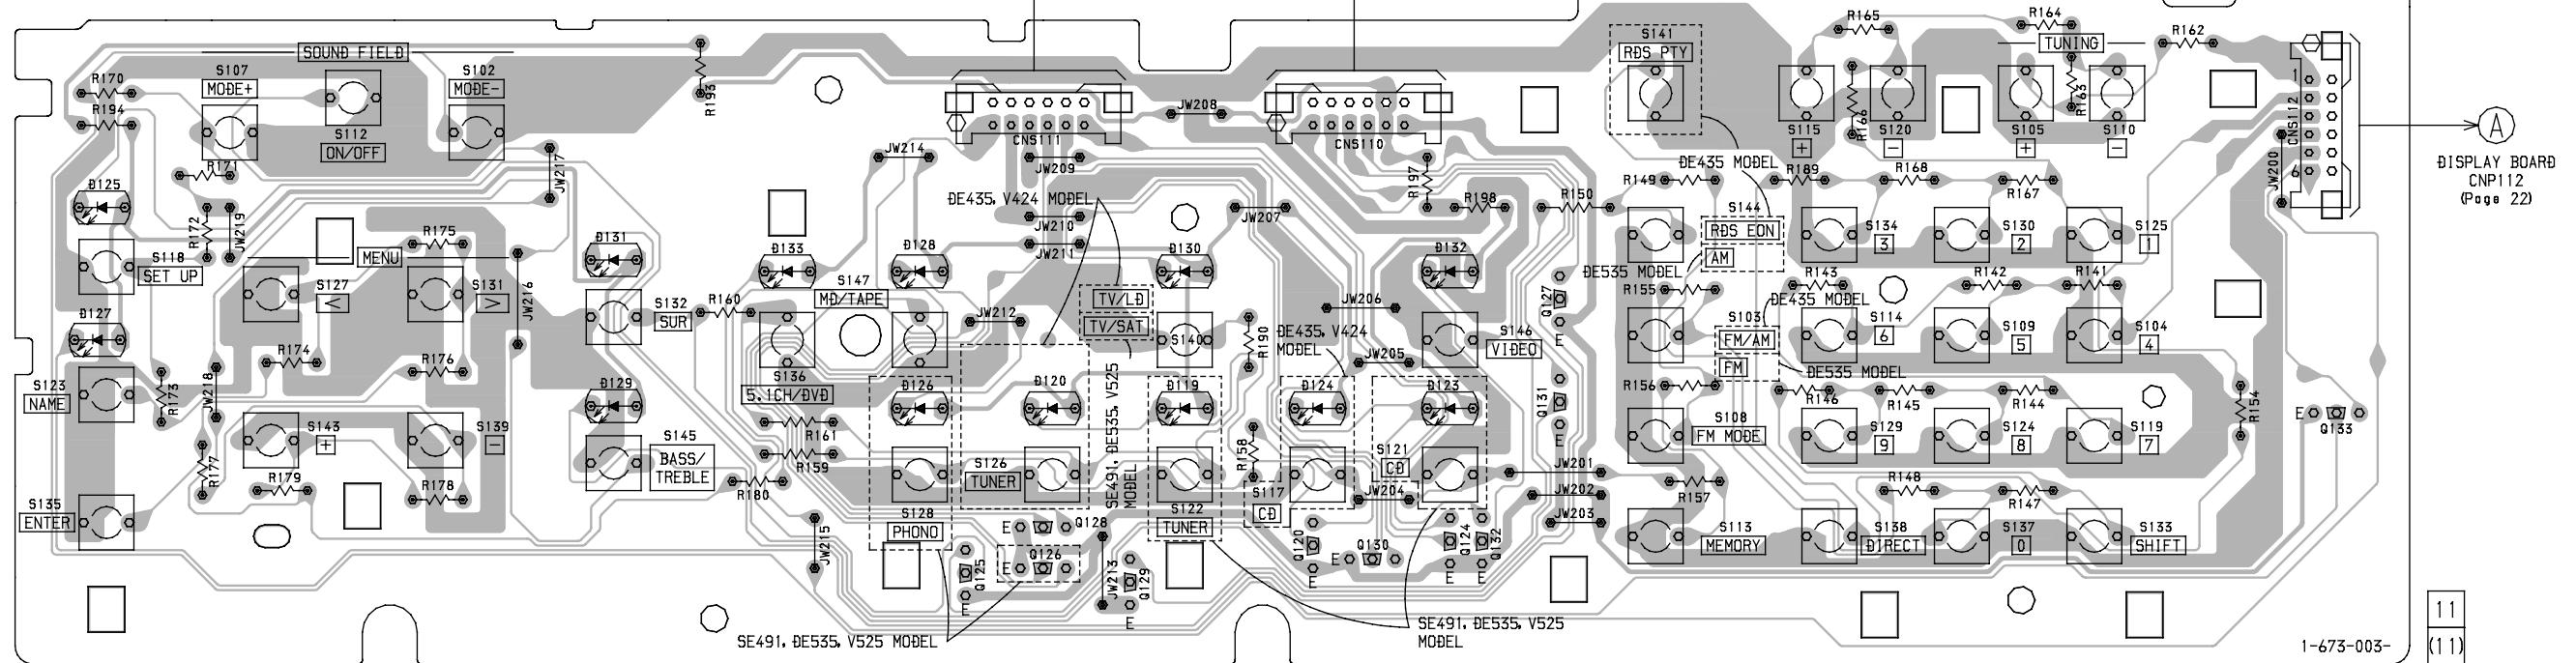


### **3-10. SCHEMATIC DIAGRAM — KEY SECTION —**

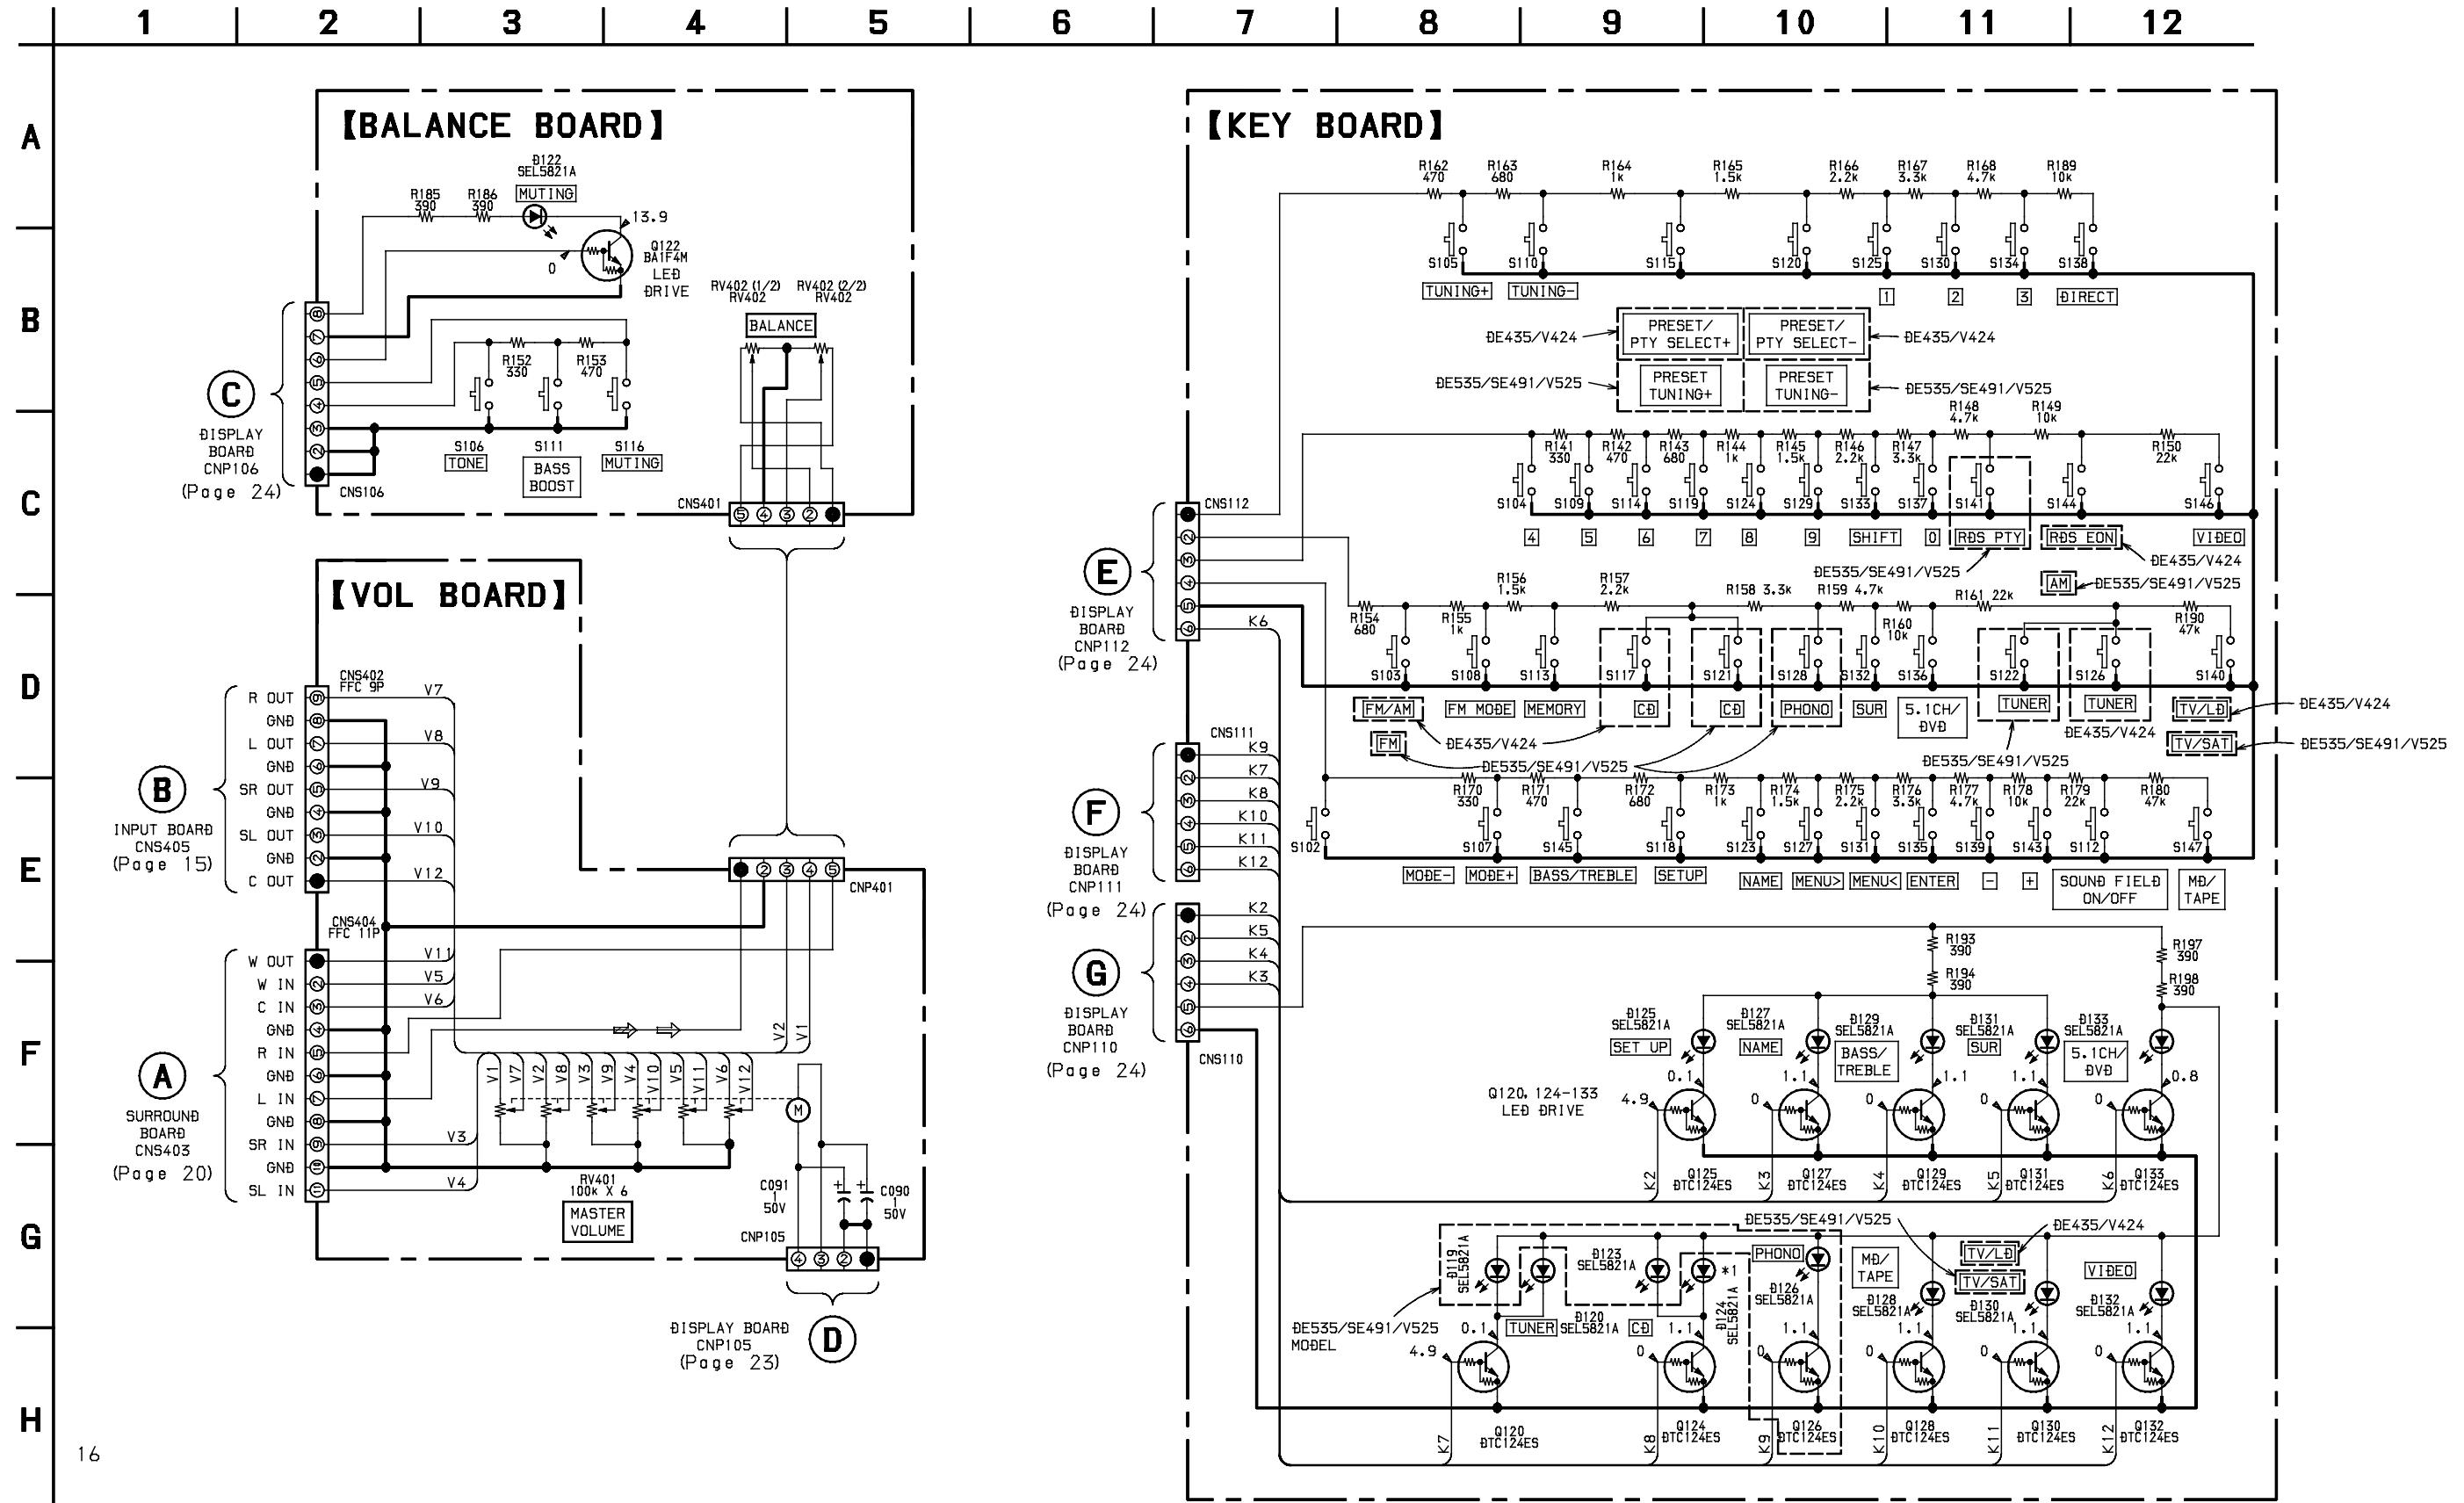

**3-11. PRINTED WIRING BOARD — REAR AMP SECTION —** • Refer to page 7 for Circuit Boards Locations


page 7 for Circuit Boards Locatio

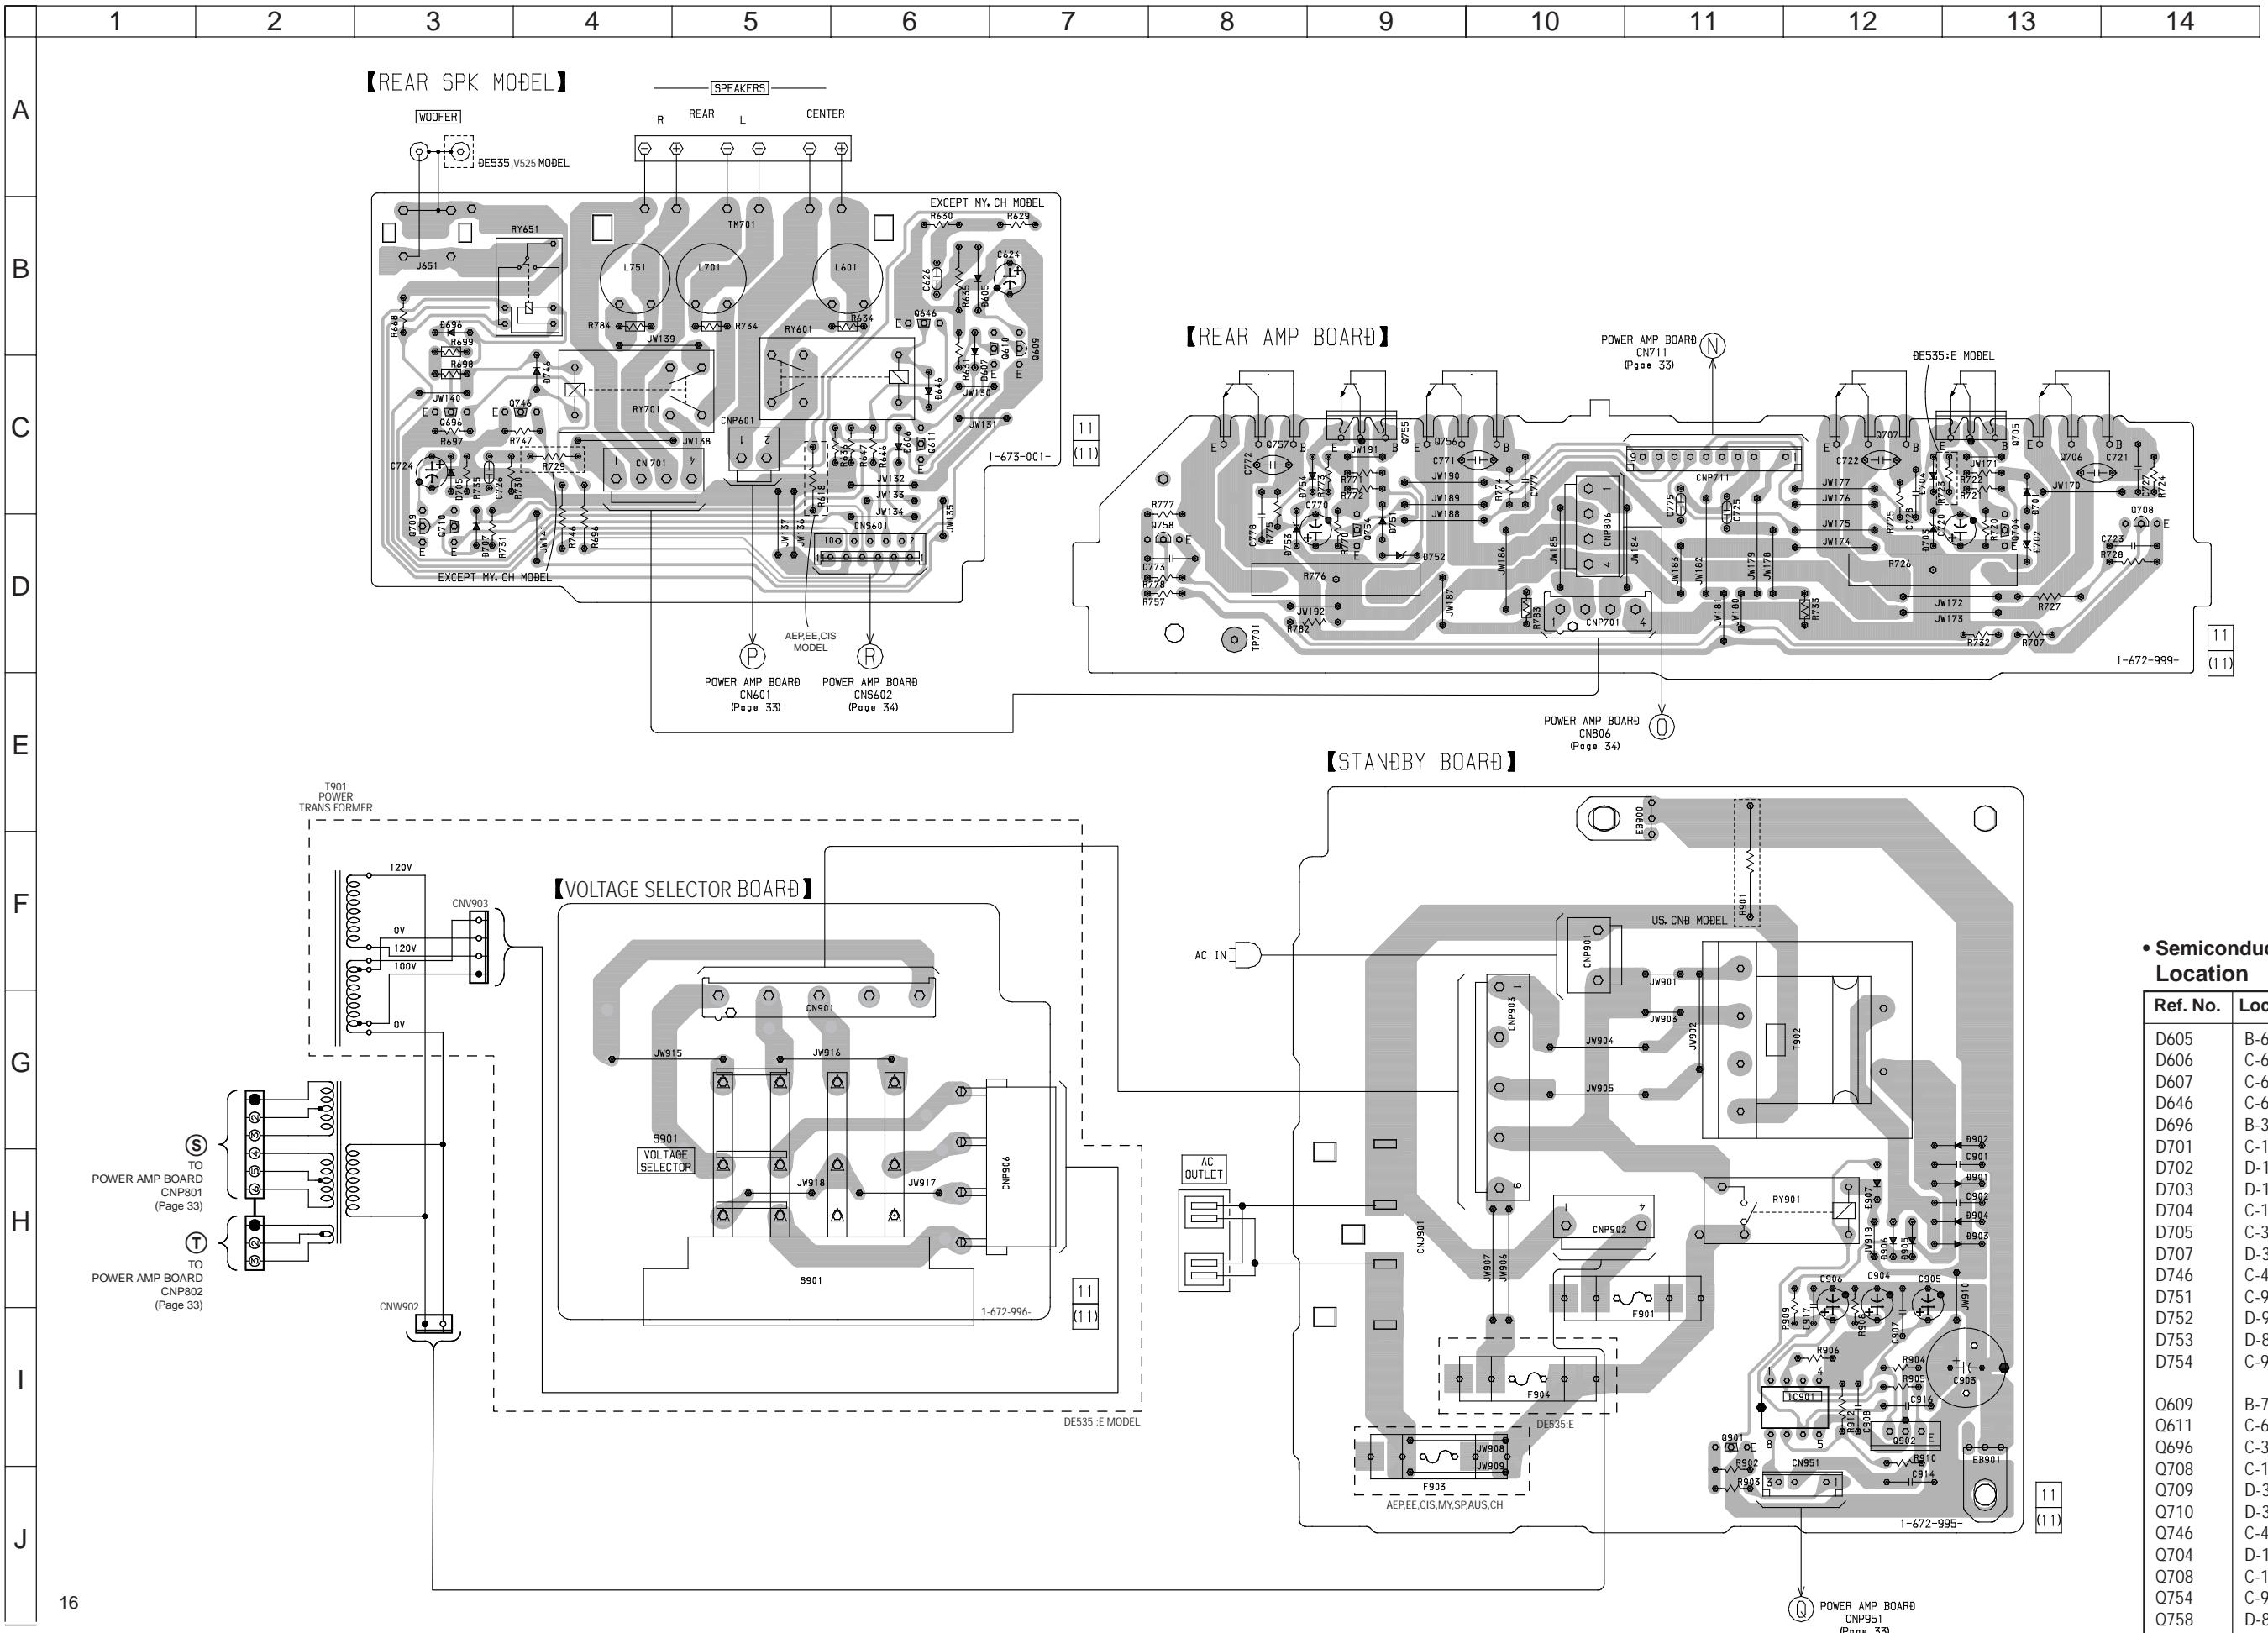

- Semiconductor Location

<b>Ref. No.</b>	<b>Location</b>
D605	B-6
D606	C-6
D607	C-6
D646	C-6
D696	B-3
D701	C-13
D702	D-13
D703	D-12
D704	C-12
D705	C-3
D707	D-3
D746	C-4
D751	C-9
D752	D-9
D753	D-8
D754	C-9
Q609	B-7
Q611	C-6
Q696	C-3
Q708	C-14
Q709	D-3
Q710	D-3
Q746	C-4
Q704	D-13
Q708	C-14
Q754	C-9
Q758	D-8

## 3-12. SCHEMATIC DIAGRAM — REAR AMP SECTION —

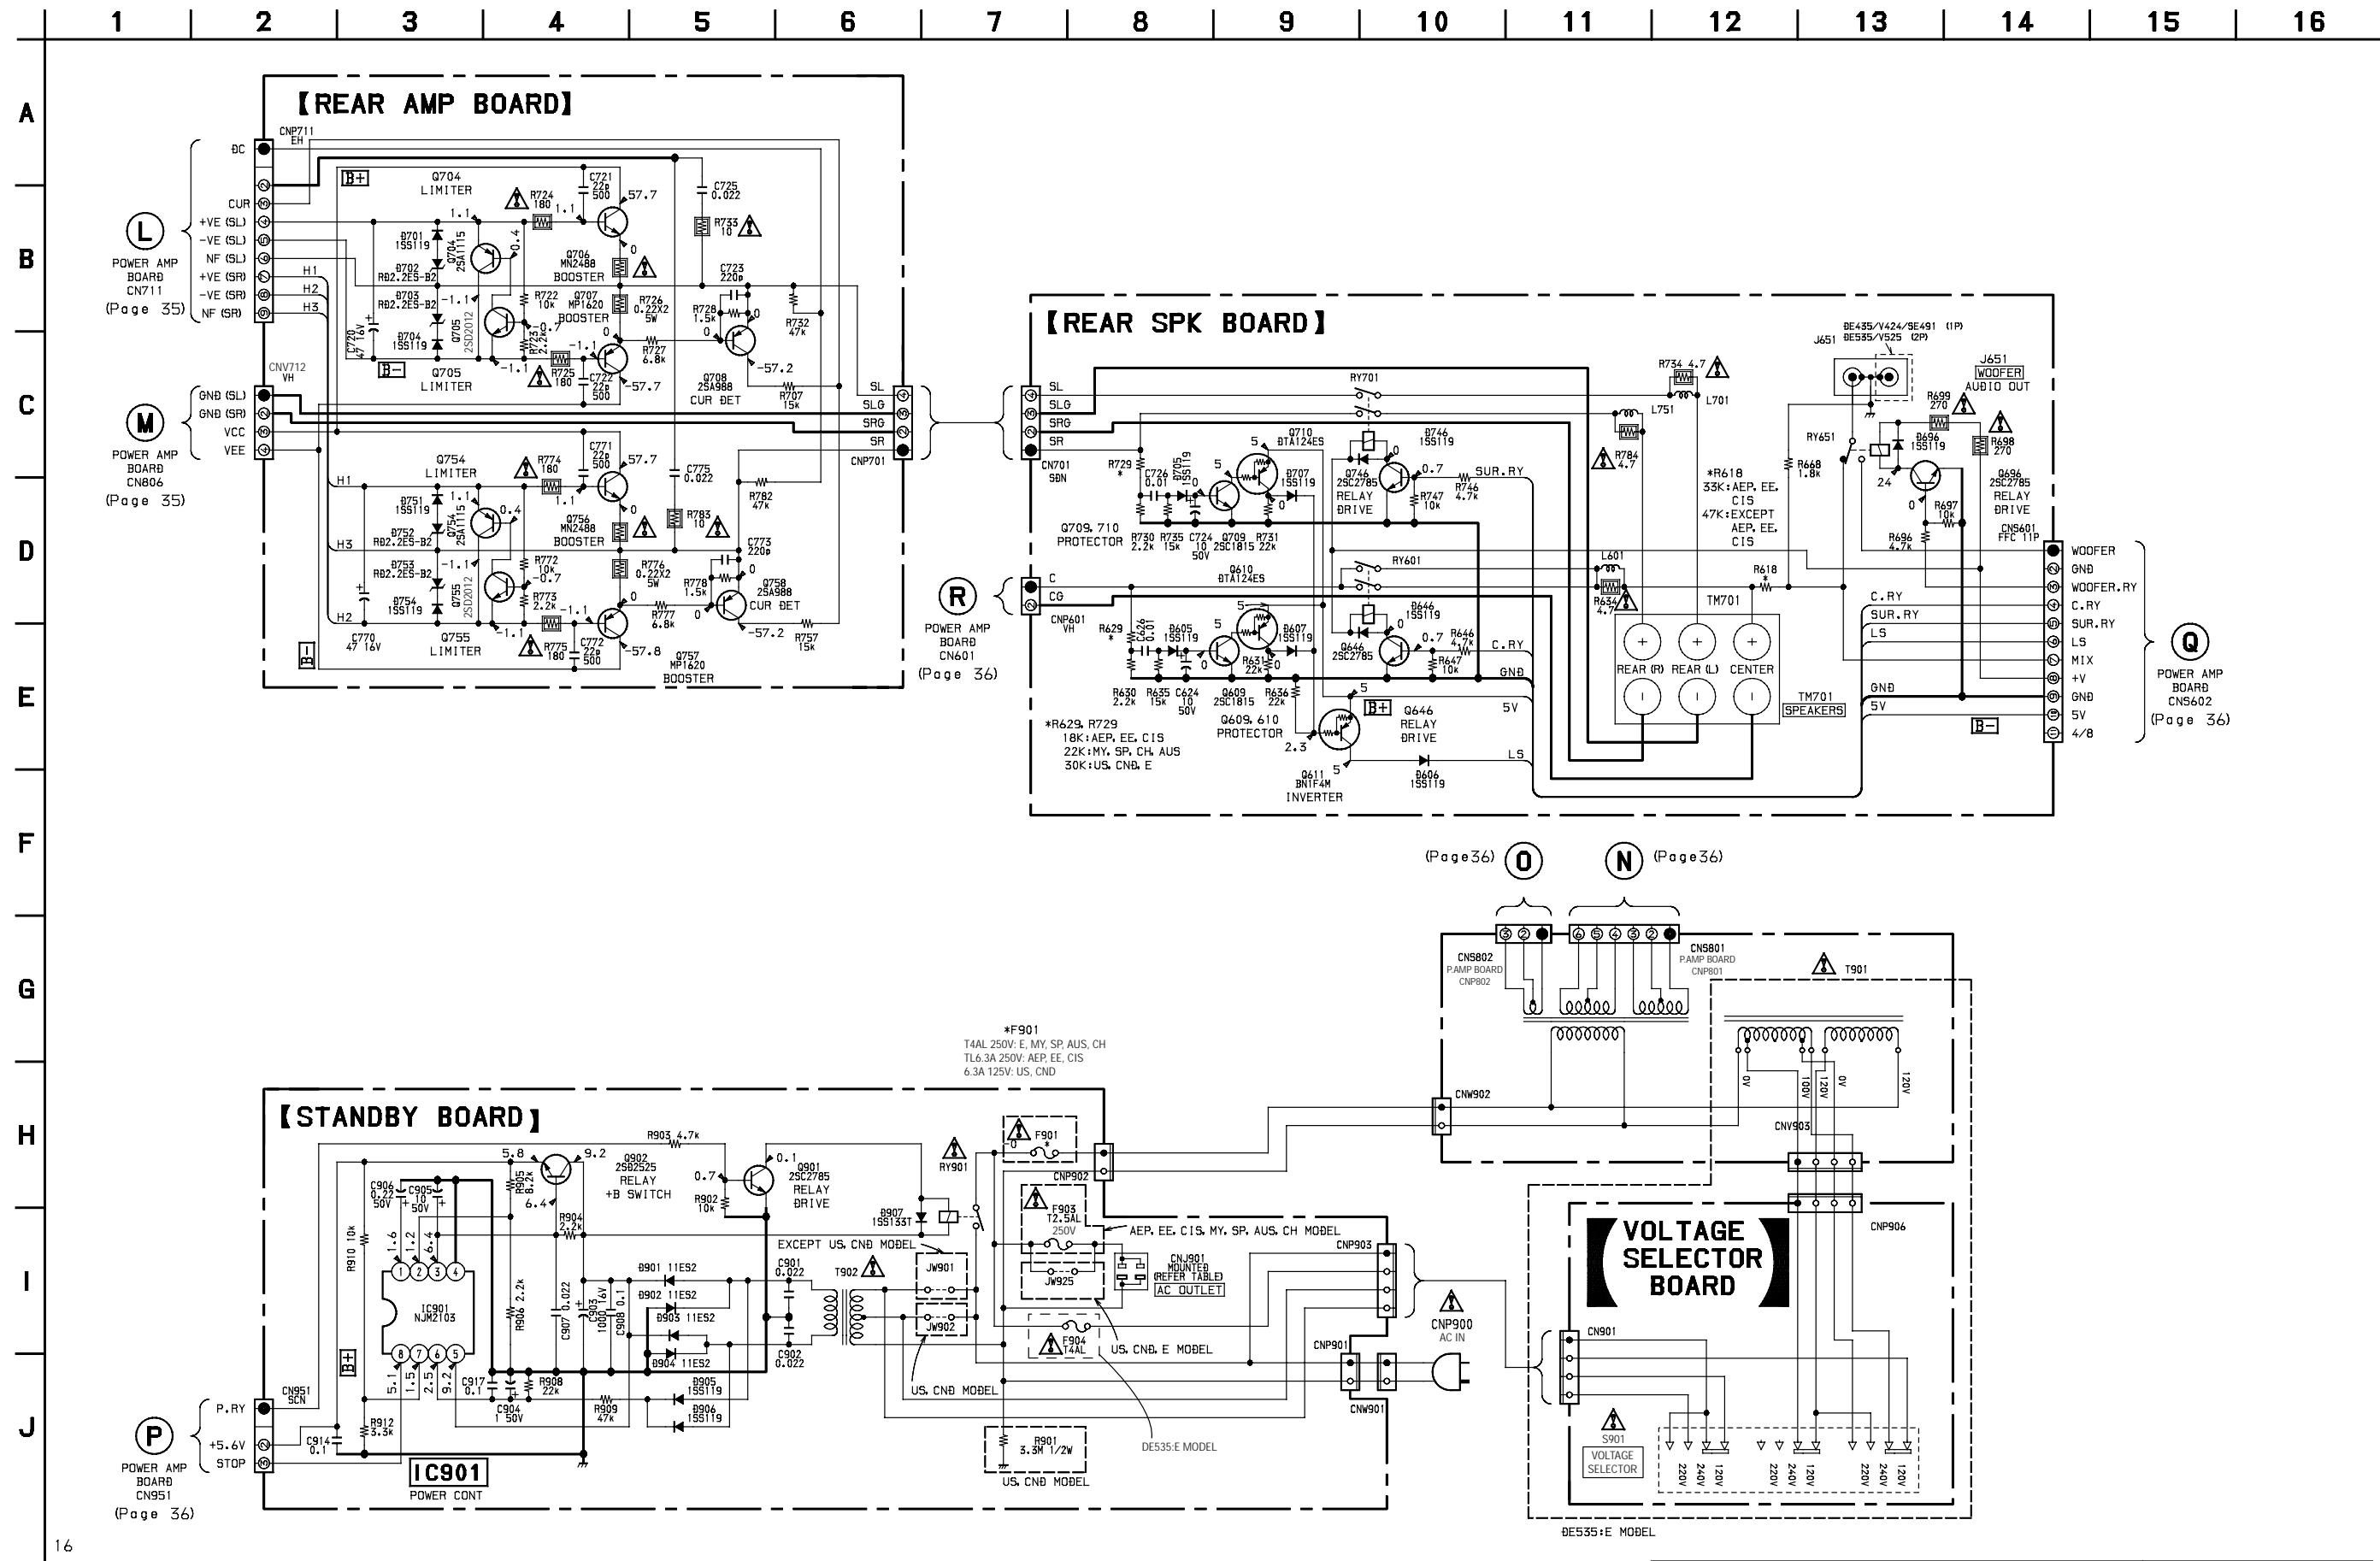

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和  $\triangle$  标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

### **3-13. PRINTED WIRING BOARD — POWER AMP SECTION —**

- Refer to page 7 for Circuit Boards Locations


1 2 3 4 5 6 7 8 9 10 11 12 13 14

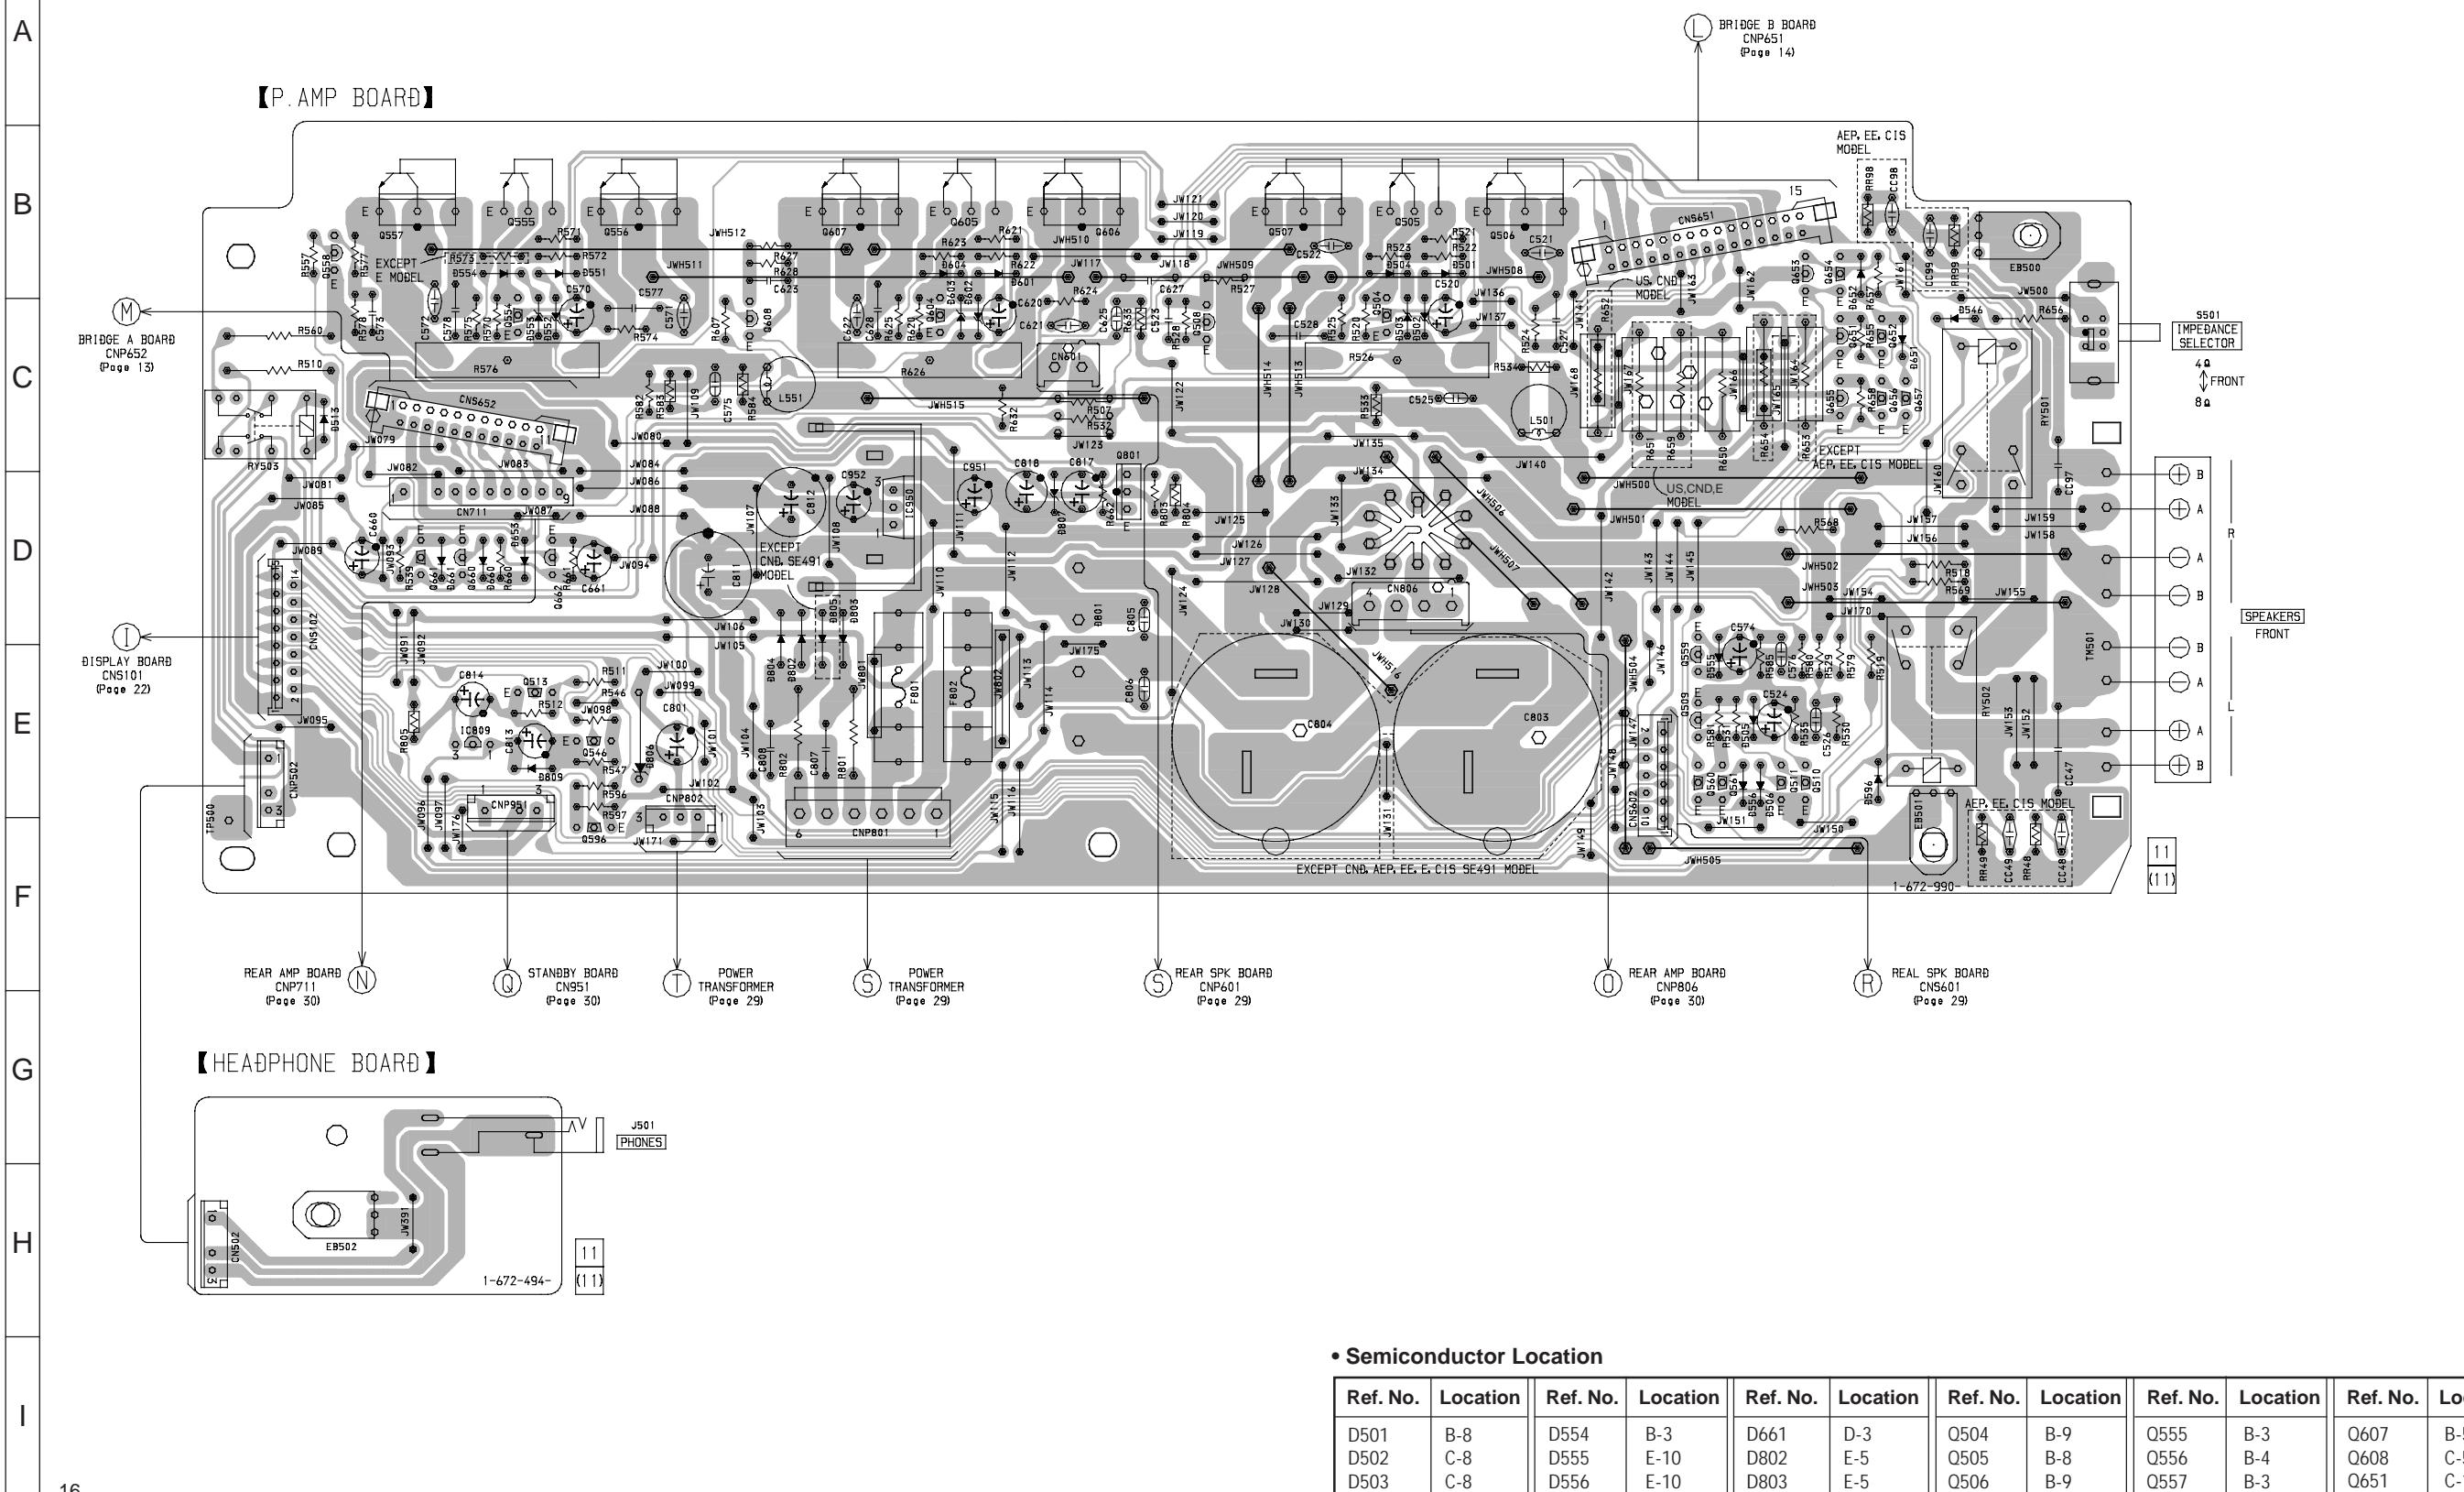

- Semiconductor Location

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D501	B-8	D554	B-3	D661	D-3	Q504	B-9	Q555	B-3	Q607	B-5
D502	C-8	D555	E-10	D802	E-5	Q505	B-8	Q556	B-4	Q608	C-5
D503	C-8	D556	E-10	D803	E-5	Q506	B-9	Q557	B-3	Q651	C-11
D504	B-8	D601	B-7	D804	E-5	Q507	B-9	Q558	B-2	Q653	C-11
D505	E-10	D602	B-6	D805	E-5	Q508	C-8	Q559	E-10	Q655	C-11
D506	E-10	D603	B-6	D806	E-4	Q509	E-11	Q560	E-10	Q656	C-11
D513	C-2	D604	B-6	D807	D-7	Q510	E-12	Q561	E-10	Q657	C-11
D546	B-12	D651	C-11	D809	E-3	Q511	E-12	Q596	F-4	Q660	D-3
D551	B-2	D652	B-12			Q513	E-3	Q604	C-6	Q661	D-3
D552	C-2	D653	D-3	IC809	E-3	Q546	E-4	Q605	B-6	Q662	D-4
D553	C-4	D660	D-3	IC950	D-6	Q554	C-3	Q606	B-7	Q801	D-7

### **3-14. SCHEMATIC DIAGRAM —POWER AMP SECTION —**

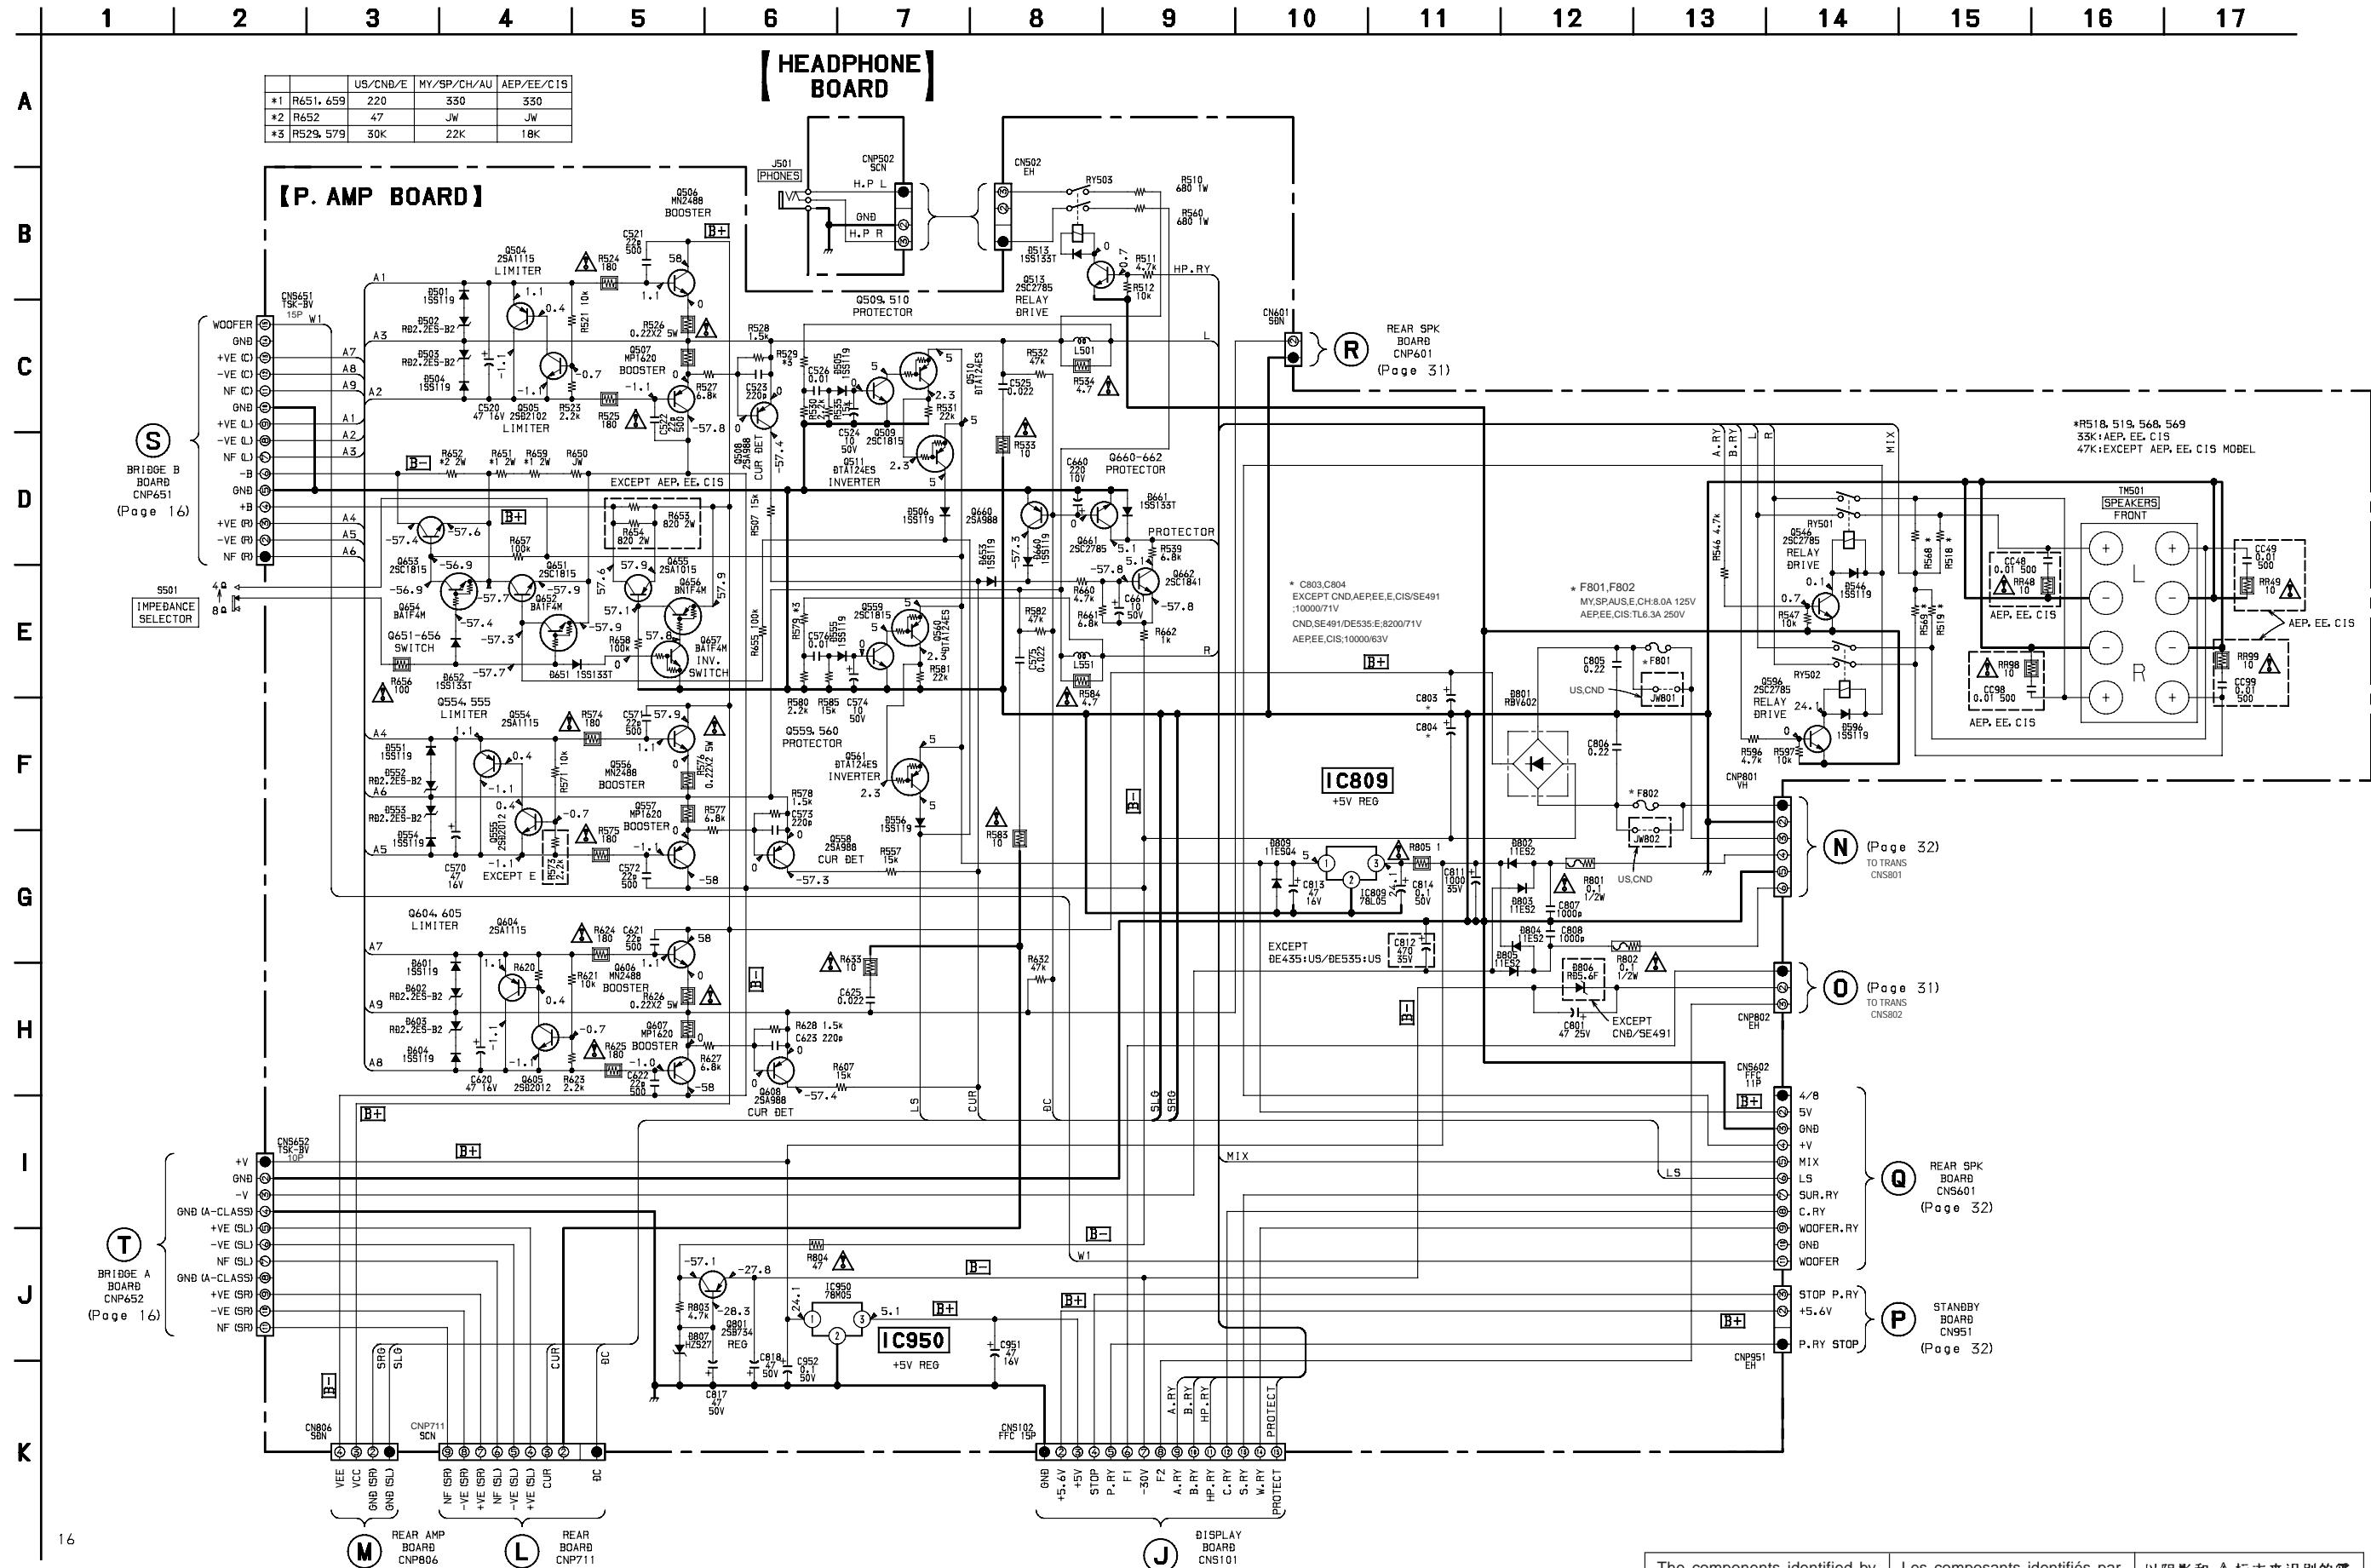

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety.  
Replace only with part number specified.

Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité.

阴影和△标志来识别的零件，在安全方面具有关键作用。因此只能以规定号码的部件来更换。


### 3-15. IC PIN FUNCTION DESCRIPTION

#### • IC100 uPD780208GF-032-3BA/M62438FP-600D SYSTEM CONTROL (DISPLAY BOARD)


Pin No.	Pin Name	I/O	Description
1	VDD.+5V	—	Power Supply (+5 V).
2	S1	O	Video IC S1.
3	S2	O	Video IC S2.
4	V.MUTE	O	Video IC MUTE.
5	INITIALIZE	O	Reset.
6	VIR CNTL	O	VIR Control.
7	GND	—	Not used (ground).
8	AC.MUTE	O	A-class mute.
9	D.LATCH	O	Dolby latch.
10	RESET	I	System reset.
11, 12	X2, X1	—	System clock X101(5.0 MHz).
13	VSS. GND	—	VSS (0 V).
14	N.C.	—	Open.
15	RDS.DAT.IN	I	RDS data input.
16	VDD.+5v	—	Power Supply (+5 V).
17	T.LATCH	O	Tone latch.
18	S.CLOCK	O	Serial clock.
19	S.DATA	O	Serial data.
20	S.LATCH	O	Serial latch.
21	AUTO.STOP	I	Auto stop detect input.
22	TUNER.MUTE	O	Tuner mute.
23	STEREO	I	Stereo.
24	IF.DATA.IN	I	IF. Data input.
25	GND.A/D	—	A/D ground (0 V).
26	SIRCS	I	SIRCS input.
27	CTRLA1LAT	O	Control A1 Latch.
28	SIGNAL	I	Signal.
29	VERSION	I	Version.
30 to 33	KEY4 to 1	I	Key A/D 4 to 1
34	VDD.A/D.+5V	—	A/D power supply (+5 V).
35	VREF.A/D.+5V	—	A/D reference voltage (+5 V).
36	CTRL-A1.OUT	O	Control-A1 out.
37	CTRL-A1.IN	I	Control-A1 in.
38	RDS.CLK.IN	I	RDS clock in.
39	STOP	I	STOP.
40	VSS.GND	—	Ground.
41	DIRECT.PASS	O	Direct pass.
42	SUR.RY	O	Surround relay.
43	CENTER.RY	O	Center relay.
44	FRONT.RY	O	Front relay.
45	W.RY	O	Woofer relay.
46	VDD.+5V	—	+5 V.
47	PROTECTOR.IN	I	Protector in.
48	POWER.RY	O	Power relay.
49	BASS.BOOT	O	Bass boost.
50	SP.OFF	I	Speaker off.

Pin No.	Pin Name	I/O	Description
51	VOL -	O	Volume -.
52	VOL +	O	Volume +.
53	GND	—	Not used (ground).
54	S.MUTE	O	S. Mute.
55	SYS. POWER	I	System Power.
56	GND	—	Not used (ground).
57	5.1.INPUT.LED	O	5.1/DVD input LED drive.
58	SET UP LED	O	Set up LED drive.
59	MUTING.LED	O	Muting LED drive.
60	TONE.LED	O	TUNE LED drive.
61	SURR.LED	O	Surround LED drive.
62	NAME.LED	O	NAME LED drive.
63	PHONO.LED	O	PHONO LED drive.
64	TUNER.LED	O	TUNER LED drive.
65	CD.LED	O	CD LED drive.
66	MD/TAPE.LED	O	MD/TAPE LED drive.
67	TV/DBS.LED	O	TV/DBS LED drive.
68	VIDEO.LED	O	VIDEO LED drive.
69	BASS/TREBLE LED	O	BASS/TREBLE LED drive.
70	B.BOOST.LED	O	B. BOOST LED drive.
71 to 78	P1 to P8	O	Key Out 1 to 8 Fluorescent indicator tube drive.
79	VLOAD	—	Vee (-30V).
80 to 88	P9 to P17	O	Key Out 9 to 17 Fluorescent indicator tube drive.
89 to 100	G12 to G1	O	Fluorescent indicator tube drive.


**IC301 (SURR BOARD) CXA8079S**

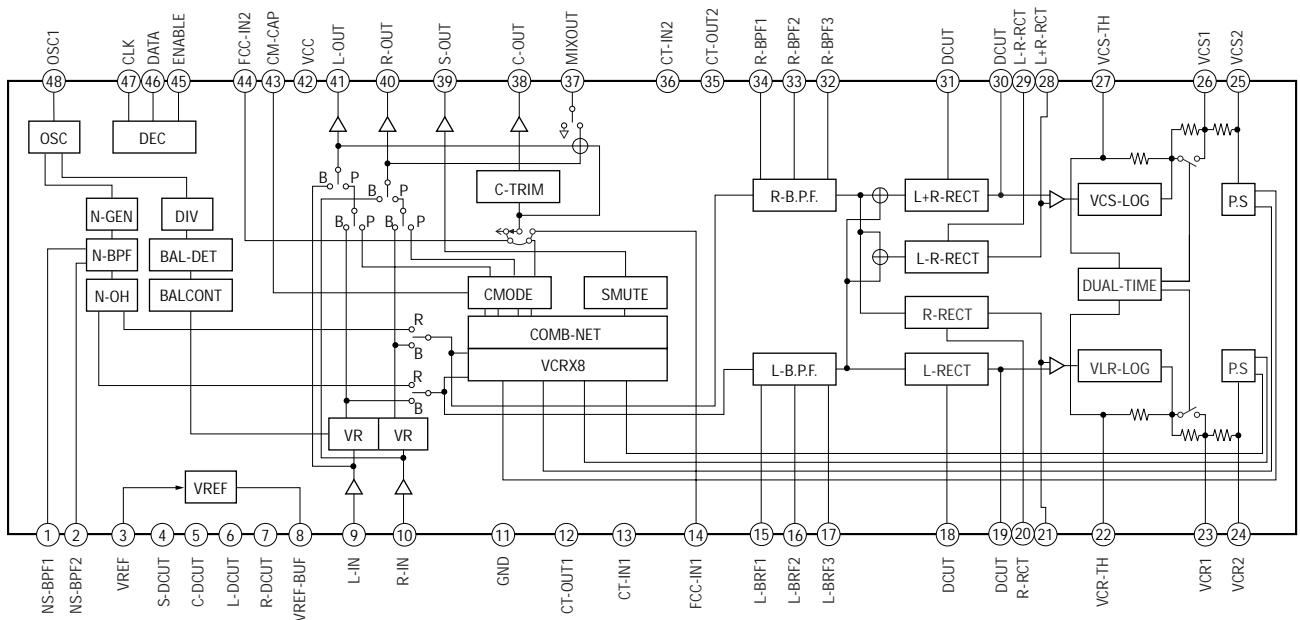


**IC281 (SURR BOARD) NJM2279D**

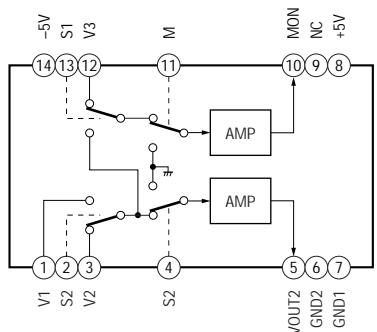

**IC401 (SURR BOARD) TC9184P**

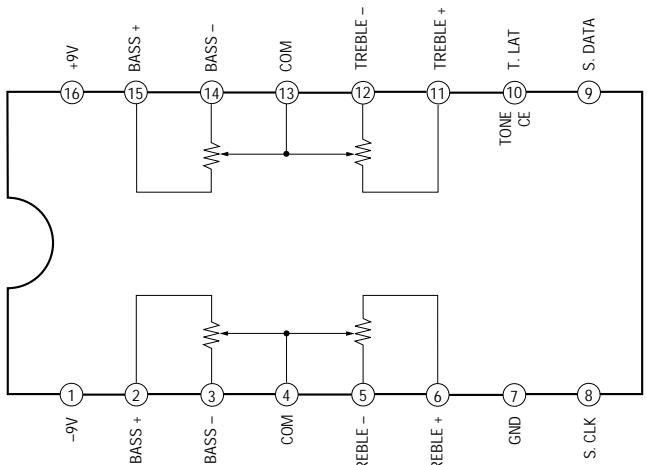

**IC501, IC701 (INPUT BOARD) μPC2581V**

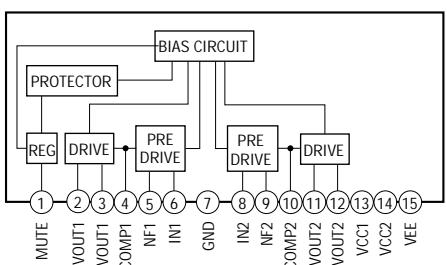

## **SECTION 4**

# **EXPLODED VIEWS**

**NOTE:**

- -XX, -X mean standardized parts, so they may have some differences from the original one.
  - Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
  - Color Indication of Appearance Parts Example: KNOB, BALANCE (WHITE) . . . (RED)

## Parts of Color Cabinet's Color


- The mechanical parts with no reference number in the exploded views are not supplied.
  - Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque ▲ sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.


以阴影和△标志来识别的零部件在安全方面具有关键性。因此只能以规定号码的零部件来更换。

## **4-1. FRONT PANEL SECTION**

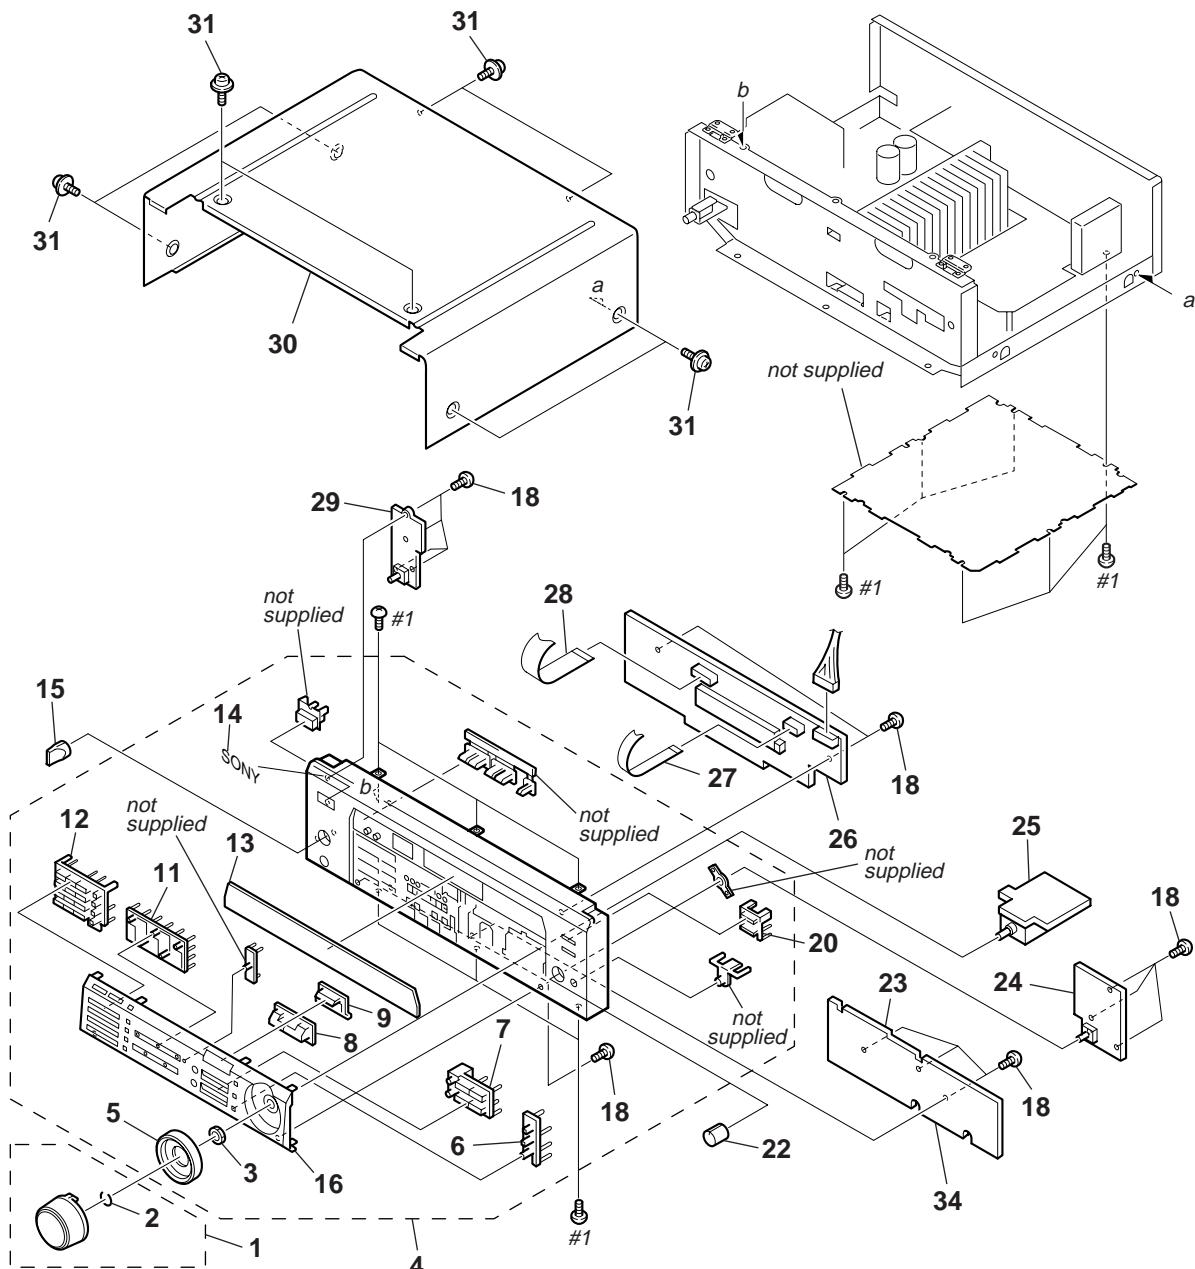

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>
1	X-4951-035-1	KNOB (VOL) ASSY (BLACK) (EXCEPT V525)		16	4-216-923-01	ESCUTCHEON (US,CND,AUS)	
1	X-4951-269-1	KNOB (VOL) ASSY (V525)		16	4-216-923-11	ESCUTCHEON (DE535:E,MY,SP)	
1	X-4951-435-1	KNOB (VOL) ASSY (SILVER) (DE435:AEP)		16	4-216-923-31	ESCUTCHEON (DE435:MY,SP/V424)	
2	3-350-426-01	SPRING, RING		16	4-216-923-41	ESCUTCHEON (BLACK) (DE435:AEP,EE,CIS)	
3	4-216-792-01	RING (VOL) (EXCEPT V525)		16	4-216-923-51	ESCUTCHEON (V525)	
3	4-216-792-11	RING (VOL) (V525)		16	4-216-923-61	ESCUTCHEON (SILVER) (DE435:AEP)	
3	4-216-792-21	RING (VOL) (SILVER) (DE435:AEP)		18	4-951-620-01	SCREW (2.6 × 8), +BVTP	
4	X-4951-061-1	FRONT PANEL ASSY (DE535:US,CND,AUS)		20	4-216-922-01	BUTTON (EQ)	
4	X-4951-084-1	FRONT PANEL ASSY (DE435:US,CND,AUS)		22	4-998-717-01	KNOB (BAL) (BLACK) (EXCEPT V525)	
4	X-4951-085-1	FRONT PANEL ASSY (DE535:E,MY,SP)		22	4-998-717-12	KNOB (BAL) (V525)	
4	X-4951-086-1	FRONT PANEL ASSY (DE435:MY,SP)		22	4-998-717-31	KNOB (BAL) (SILVER) (DE435:AEP)	
4	X-4951-087-1	FRONT PANEL ASSY (BLACK) (DE435:AEP,EE,CIS)		23	A-4419-078-A	KEY BOARD, COMPLETE (DE535/SE491/V525)	
4	X-4951-088-1	FRONT PANEL ASSY (SE491)		23	A-4419-219-A	KEY BOARD, COMPLETE (DE435:US,CND,MY,SP,AUS/V424)	
4	X-4951-128-1	FRONT PANEL ASSY (V525)		23	A-4419-231-A	KEY BOARD, COMPLETE (DE435:AEP,EE,CIS)	
4	X-4951-129-1	FRONT PANEL ASSY (V424)		24	1-673-002-11	BALANCE BOARD	
4	X-4951-434-1	FRONT PANEL ASSY (SILVER) (DE435:AEP)		25	A-4419-075-A	VOL BOARD, COMPLETE	
5	4-216-392-01	RING(VOL)		26	A-4419-073-A	DISPLAY BOARD, COMPLETE (DE535:US,CND)	
6	4-216-787-01	BUTTON (SET UP) (BLACK) (DE435:US,CND,AEP,EE,CIS,MY,SP,AUS/DE535/SE491/V424)		26	A-4419-201-A	DISPLAY BOARD, COMPLETE (SE491)	
6	4-216-787-11	BUTTON (SET UP) (V525)		26	A-4419-206-A	DISPLAY BOARD, COMPLETE (DE535:AUS)	
6	4-216-787-31	BUTTON (SET UP) (SILVER) (DE435:AEP)		26	A-4419-210-A	DISPLAY BOARD, COMPLETE (DE535:MY,SP)	
7	4-216-921-01	BUTTON (MENU) (BLACK) (DE435:US,CND,AEP,EE,CIS,MY,SP,AUS/DE535/SE491/V424)		26	A-4419-213-A	DISPLAY BOARD, COMPLETE (DE535:E)	
7	4-216-921-21	BUTTON (MENU) (SILVER) (DE435:AEP)		26	A-4419-217-A	DISPLAY BOARD, COMPLETE (DE435:US,CND)	
8	4-216-384-01	BUTTON (MODE)		26	A-4419-223-A	DISPLAY BOARD, COMPLETE (DE435:AUS)	
9	4-216-983-01	BUTTON (ON/OFF)		26	A-4419-225-A	DISPLAY BOARD, COMPLETE (DE435:MY,SP/V424)	
11	4-216-784-01	BUTTON (MODE) (BLACK) (DE435:US,CND,AEP,EE,CIS,MY,SP,AUS/DE535/SE491/V424)		26	A-4419-228-A	DISPLAY BOARD, COMPLETE (DE435:AEP)	
11	4-216-784-11	BUTTON (MODE) (V525)		26	A-4419-236-A	DISPLAY BOARD, COMPLETE (DE435:EE,CIS)	
11	4-216-784-21	BUTTON (MODE) (SILVER) (DE435:AEP)		* 26	A-4419-605-A	DISPLAY BOARD, COMPLETE (V525)	
12	4-216-779-01	BUTTON (KEY) (BLACK) (DE435:US,CND,AEP,EE,CIS,MY,SP,AUS/DE535/SE491/V424)		27	1-769-991-11	WIRE (FLAT TYPE) (13 CORE) (DE435,V424,SE491)	
12	4-216-779-11	BUTTON (KEY) (V525)		* 27	1-773-024-11	WIRE (FLAT TYPE) (15 CORE) (DE535,V525)	
12	4-216-779-21	BUTTON (KEY) (SILVER) (DE435:AEP)		28	1-773-012-11	WIRE (FLAT TYPE) (15 CORE)	
13	4-216-924-01	INDICATION PLATE		29	1-672-997-11	SPK SELECT BOARD	
14	4-996-698-01	EMBLEM, SONY (EXCEPT V525)		* 30	4-982-682-01	CASE (414532) (DE435:US,CND,AUS/DE535:US,CND,E,AUS/SE491/V424)	
14	4-996-698-11	EMBLEM, SONY (V525)		30	X-4947-722-1	CASE ASSY (BLACK) (AEP,MY,SP,EE,CIS)	
15	4-957-383-01	KNOB (F14) (BLACK) (D435:US,CND,AEP,EE,CIS,MY,SP,AUS/DE535/SE491/V424)		30	X-4947-723-1	CASE ASSY (V525)	
15	4-957-383-21	KNOB (F14) (V525)		30	X-4951-513-1	CASE ASSY (SILVER) (AEP)	
15	4-957-383-51	KNOB (F14) (SILVER) (DE435:AEP)		31	4-210-291-01	SCREW (BLACK) (CASE 3 TP2) (DE435:US,CND,AEP,EE,CIS,MY,SP,AUS/DE535/SE491/V424)	
				31	4-210-291-11	SCREW (CASE 3 TP2) (SILVER) (DE435:AEP/V525)	
				34	1-673-002-11	BALANCE BOARD	

## 4-2. CHASSIS SECTION

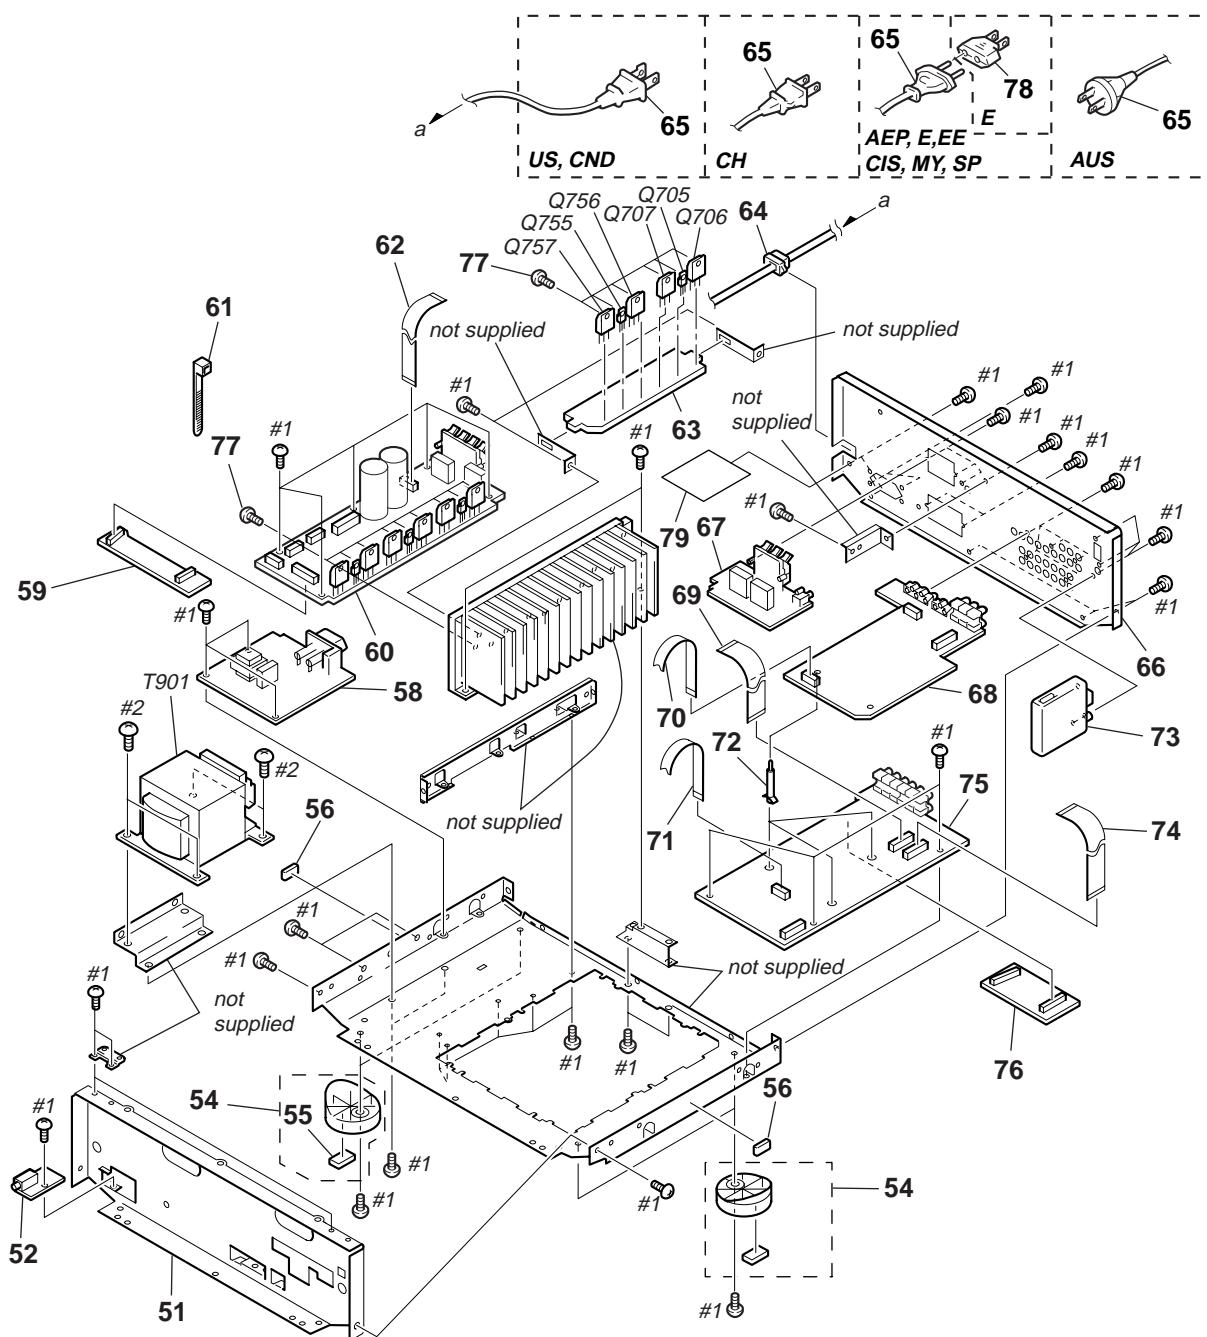

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	4-216-926-01	SUB-CHASSIS		67	A-4419-218-A	REAR SPK BOARD, COMPLET	
52	1-672-994-11	HEADPHONE BOARD				(DE435:US,CND/SE491)	
54	X-4947-124-1	FOOT ASSY (F50150S) (SILVER) (DE435:AEP)		67	A-4419-224-A	REAR SPK BOARD, COMPLET	
54	X-4947-207-1	FOOT ASSY (F50150S) (BLACK) (DE435:AEP,EE,CIS,MY,SP,AUS/DE535:E,MY,SP,AUS/V424)				(DE435:MY,SP,AUS/V424)	
54	X-4947-208-1	FOOT ASSY (F50150S) (D435:US,CND/DE535:US,CND/SE491)		67	A-4419-230-A	REAR SPK BOARD, COMPLET	
54	X-4947-547-1	FOOT ASSY (F50150S) (V525)				(DE435:AEP,EE,CIS)	
56	4-985-642-01	CUSHION		68	A-4419-083-A	SURR BOARD, COMPLETE (DE535/V525)	
58	1-672-995-11	STANDBY BOARD		68	A-4419-203-A	SURR BOARD, COMPLETE (SE491)	
59	1-672-991-11	BRIDGE-A BOARD		68	A-4419-221-A	SURR BOARD, COMPLETE	
60	A-4419-080-A	P.AMP BOARD, COMPLETE (DE435:US/DE535:US)				(DE435:US,CND,MY,SP,AUS/V424)	
60	A-4419-205-A	P.AMP BOARD, COMPLETE (DE435:CND/DE535:CND/SE491)		68	A-4419-234-A	SURR BOARD, COMPLETE (DE435:AEP,EE,CIS)	
60	A-4419-208-A	P.AMP BOARD, COMPLETE (DE435:MY,SP,AUS/DE535:MY,SP,AUS/V424/V525)		69	1-773-008-11	WIRE (FLAT TYPE) (15 CORE)	
60	A-4419-214-A	P.AMP BOARD, COMPLETE (DE535:E)		70	1-769-942-11	WIRE (FLAT TYPE) (11 CORE)	
60	A-4419-233-A	P.AMP BOARD, COMPLETE (DE435:AEP,EE,CIS)		71	1-769-909-11	WIRE (FLAT TYPE) (9 CORE)	
* 61	3-655-653-21	BAND (TAITON), BINDING		72	4-924-098-91	HOLDER, PC BOARD	
62	1-769-937-11	WIRE (FLAT TYPE) (11 CORE)		73	1-693-407-62	TUNER	
63	A-4419-074-A	REAR AMP BOARD, COMPLET (EXCEPT AEP,EE,CIS)				(DE435:US,CND/DE535:US,CND,E/SE491)	
63	A-4419-229-A	REAR AMP BOARD, COMPLET (AEP,EE,CIS)		73	1-693-408-41	TUNER	
* 64	3-703-244-00	BUSHING (2104), CORD				(DE435:AEP,MY,SP,AUS/DE535:MY,SP,AUS/V424/V525)	
△ 65	1-696-847-11	CORD, POWER (DE435:AUS/DE535:AUS)		73	1-693-411-43	TUNER (DE435:EE,CIS)	
△ 65	1-777-070-21	CORD, POWER (DE435:CND/DE535:CND)		74	1-773-004-11	WIRE (FLAT TYPE) (15 CORE)	
△ 65	1-777-071-21	CORD, POWER (DE435:AEP,EE,CIS,MY,SP/DE535:E,MY,SP)		75	A-4419-079-A	INPUT BOARD, COMPLETE	
△ 65	1-783-205-11	CORD, POWER (V424/V525)				(DE535/SE491/V525)	
△ 65	1-783-820-11	CORD, POWER (DE435:US/DE535:US/SE491)		75	A-4419-220-A	INPUT BOARD, COMPLETE	
66	4-216-927-01	BACK PANEL (DE535:US)				(DE435:US,CND,MY,SP,AUS/V424)	
66	4-216-927-11	BACK PANEL (DE535:CND)		75	A-4419-232-A	INPUT BOARD, COMPLETE (DE435:AEP,EE,CIS)	
66	4-216-927-21	BACK PANEL (DE535:AUS)		76	1-672-992-11	BRIDGE-B BOARD	
66	4-216-927-31	BACK PANEL (DE535:E)		77	3-905-609-01	SCREW (TRANSISTOR)	
66	4-216-927-41	BACK PANEL (DE535:MY,SP)		△ 78	1-569-008-21	ADAPTOR, CONVERSION 2P (DE535: E)	
66	4-216-927-51	BACK PANEL (V525)		79	1-672-996-11	VOLTAGE SELECTOR BOARD (DE535:E)	
66	4-217-181-01	BACK PANEL (DE435:US)		Q705	8-729-209-15	TRANSISTOR 2SD2012	
66	4-217-181-11	BACK PANEL (DE435:CND)		Q706	8-749-010-25	IC MN2488-OPY-M	
66	4-217-181-21	BACK PANEL (DE435:AUS)		Q707	8-749-010-26	IC MP1620-OPY-M	
66	4-217-181-31	BACK PANEL (DE435:MY,SP)		△ T901	1-433-679-11	TRANSFORMER, POWER (DE435:CND/DE535:CND)	
66	4-217-181-41	BACK PANEL (V424)		△ T901	1-433-680-11	TRANSFORMER, POWER (DE435:US/DE535:US)	
66	4-217-181-51	BACK PANEL (DE435:AEP)		△ T901	1-433-680-21	TRANSFORMER, POWER (SE491)	
66	4-217-181-61	BACK PANEL (DE435:EE,CIS)		△ T901	1-433-681-11	TRANSFORMER, POWER (DE435:AEP,EE,CIS)	
66	4-217-181-71	BACK PANEL (SE491)		△ T901	1-433-682-11	TRANSFORMER, POWER (DE435:AUS/DE535:AUS)	
67	A-4419-076-A	REAR SPK BOARD, COMPLET (DE535:US,CND,E)		△ T901	1-433-683-11	TRANSFORMER, POWER (DE435:MY,SP/DE535:MY,SP/V424/V525)	
67	A-4419-207-A	REAR SPK BOARD, COMPLET (DE535:MY,SP,AUS/V525)		△ T901	1-433-684-11	TRANSFORMER, POWER (DE535:E)	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 △ 标志来识别的零 部件，在安全方面具有关键 性，因此只能以规定号码的 零部件来更换。
---	---	---

**BALANCE****BRIDGE-A****BRIDGE-B****DISPLAY**

## SECTION 5

### ELECTRICAL PARTS LIST

## NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked “\*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

## Abbreviation

CND	: Canadian	SP	: Singapore
AUS	: Australian	EA	: Saudi Arabia
CH	: Chinese	EE	: East European
MY	: Malaysia		

## CAPACITORS:

uF:  $\mu$ F

## RESISTORS

All resistors are in ohms.

METAL: metal-film resistor

METAL OXIDE: Metal Oxide-film resistor

F: nonflammable

## COILS

uH:  $\mu$ H

When indicating parts by reference number,  
please include the board name.

## SEMICONDUCTORS

In each case, u:  $\mu$ , for example:uA...:  $\mu$ A..., uPA... ,  $\mu$ PA... ,uPB... ,  $\mu$ PB... , uPC... ,  $\mu$ PC... ,uPD... ,  $\mu$ PD... ,

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité.

Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和 $\triangle$ 标志来识别的零部件在安全方面具有关键性。因此只能以规定号码的零部件来更换。

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks		
	1-673-002-11	BALANCE BOARD *****			A-4419-073-A	DISPLAY BOARD, COMPLETE (DE535:US,CND) *****			
		< CONNECTOR >			A-4419-201-A	DISPLAY BOARD, COMPLETE (SE491) *****			
* CNS106	1-695-808-11	CONNECTOR, PC BOARD 8P			A-4419-206-A	DISPLAY BOARD, COMPLETE (DE535:AUS) *****			
CNS401	1-770-398-11	HOUSING, CONNECTOR (PC BOARD) 5P			A-4419-210-A	DISPLAY BOARD, COMPLETE (DE535:MY,SP) *****			
		< DIODE >			A-4419-213-A	DISPLAY BOARD, COMPLETE (DE535:E) *****			
D122	8-719-046-39	DIODE SEL5821A-TP15 (MUTING)			A-4419-217-A	DISPLAY BOARD, COMPLETE (DE435:US,CND) *****			
		< TRANSISTOR >			A-4419-223-A	DISPLAY BOARD, COMPLETE (DE435:AUS) *****			
Q122	8-729-900-36	TRANSISTOR DTC124ES			A-4419-225-A	DISPLAY BOARD, COMPLETE (DE435:MY,SP/V424)			
		< RESISTOR >			A-4419-228-A	DISPLAY BOARD, COMPLETE (AEP) *****			
R152	1-249-411-11	CARBON	330	5%	C101	1-164-159-11	CERAMIC	0.1uF	50V
R153	1-249-413-11	CARBON	470	5%	C102	1-164-159-11	CERAMIC	0.1uF	50V
R185	1-249-412-11	CARBON	390	5%	C103	1-164-159-11	CERAMIC	0.1uF	50V
R186	1-249-412-11	CARBON	390	5%	C104	1-124-465-00	ELECT	0.47uF	20% 50V
		< VARIABLE RESISTOR >		C105	1-164-159-11	CERAMIC	0.1uF	50V	
RV402	1-225-447-11	RES, VAR, CARBON 100K/100K (BALANCE)			C106	1-126-163-11	ELECT	4.7uF	20% 50V
		< SWITCH >		C107	1-124-261-00	ELECT	10uF	20% 50V	
S106	1-762-196-21	SWITCH, TACT (TONE)		C108	1-164-159-11	CERAMIC	0.1uF	50V	
S111	1-762-196-21	SWITCH, TACT (BASS BOOST)		C109	1-124-589-11	ELECT	47uF	20% 16V	
S116	1-762-196-21	SWITCH, TACT (MUTING)		C111	1-124-589-11	ELECT	47uF	20% 16V	
		*****						(EXCEPT DE535:US,CND)	
	1-672-991-11	BRIDGE-A BOARD *****							
		< CONNECTOR >							
CNP652	1-770-553-11	CONNECTOR, BOARD TO BOARD 11P							
CNP654	1-770-553-11	CONNECTOR, BOARD TO BOARD 11P							
		*****							
	1-672-992-11	BRIDGE-B BOARD *****							
		< CONNECTOR >							
CNP651	1-785-820-11	CONNECTOR, BOARD TO BOARD 15P							
CNP653	1-785-820-11	CONNECTOR, BOARD TO BOARD 15P							
		*****							

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks		
C112	1-164-159-11	CERAMIC	0.1uF	50V	CC121	1-162-199-31	CERAMIC	10PF 5% 50V	
C113	1-124-589-11	ELECT	47uF	20%	16V	(EXCEPT DE435:MY,SP/V424)			
C114	1-164-159-11	CERAMIC	0.1uF	50V	CC122	1-162-199-31	CERAMIC	10PF 5% 50V	
C115	1-104-905-11	CAPACITOR	0.22F	5.5V	(EXCEPT DE435:MY,SP/V424)				
C116	1-164-159-11	CERAMIC	0.1uF	50V	CC123	1-162-199-31	CERAMIC	10PF 5% 50V	
C117	1-164-159-11	CERAMIC	0.1uF	50V	(EXCEPT DE435:MY,SP/V424)				
C130	1-164-159-11	CERAMIC	0.1uF	50V	CC124	1-162-199-31	CERAMIC	10PF 5% 50V	
C141	1-164-159-11	CERAMIC	0.1uF	50V	(EXCEPT DE435:MY,SP/V424)				
C143	1-164-159-11	CERAMIC	0.1uF	50V	CC125	1-162-199-31	CERAMIC	10PF 5% 50V	
C1001	1-124-261-00	ELECT	10uF	20%	50V (DE535/V525)	(EXCEPT DE435:MY,SP/V424)			
C1002	1-164-159-11	CERAMIC	0.1uF	50V (DE535/V525)	CC126	1-162-199-31	CERAMIC	10PF 5% 50V	
C1003	1-164-159-11	CERAMIC	0.1uF	50V (DE535/V525)	(EXCEPT DE435:MY,SP/V424)				
C1004	1-164-360-11	CERAMIC	0.01uF	20%	16V (DE535/V525)	CC127	1-162-199-31	CERAMIC	10PF 5% 50V
C1005	1-164-360-11	CERAMIC	0.01uF	20%	16V (DE535/V525)	(EXCEPT DE435:MY,SP/V424)			
C1006	1-124-916-11	ELECT	1000uF	20%	6.3V (DE535/V525)	CC128	1-162-199-31	CERAMIC	10PF 5% 50V
CC101	1-162-199-31	CERAMIC	10PF	5%	50V (EXCEPT DE435:MY,SP/V424)	CC129	1-162-199-31	CERAMIC	10PF 5% 50V
CC102	1-162-199-31	CERAMIC	10PF	5%	50V (EXCEPT DE435:MY,SP/V424)	(EXCEPT DE435:MY,SP/V424)			
CC103	1-162-199-31	CERAMIC	10PF	5%	50V (EXCEPT DE435:MY,SP/V424)	CC106	1-779-365-11	CONNECTOR, PC BOARD (PLUG) 8P	
CC104	1-162-199-31	CERAMIC	10PF	5%	50V (EXCEPT DE435:MY,SP/V424)	CC107	1-779-365-11	CONNECTOR, PC BOARD (PLUG) 8P	
CC105	1-162-199-31	CERAMIC	10PF	5%	50V (EXCEPT DE435:MY,SP/V424)	CNP109	1-779-366-11	CONNECTOR, BOARD TO BOARD 4P (V525)	
CC106	1-162-199-31	CERAMIC	10PF	5%	50V (EXCEPT DE435:MY,SP/V424)	CNP110	1-785-821-11	CONNECTOR, BOARD TO BOARD 6P	
CC107	1-162-199-31	CERAMIC	10PF	5%	50V (EXCEPT DE435:MY,SP/V424)	CNP111	1-785-821-11	CONNECTOR, BOARD TO BOARD 6P (DE435:SE491/V424/DE535)	
CC108	1-162-199-31	CERAMIC	10PF	5%	50V (EXCEPT DE435:MY,SP/V424)	CNP111	1-779-366-11	CONNECTOR, BOARD TO BOARD 4P (V525)	
CC109	1-162-199-31	CERAMIC	10PF	5%	50V (EXCEPT DE435:MY,SP/V424)	CNP112	1-785-821-11	CONNECTOR, BOARD TO BOARD 6P	
CC110	1-162-199-31	CERAMIC	10PF	5%	50V (EXCEPT DE435:MY,SP/V424)	CNS101	1-569-932-11	SOCKET, CONNECTOR 15P	
CC111	1-162-199-31	CERAMIC	10PF	5%	50V (EXCEPT DE435:MY,SP/V424)	CNS103	1-569-930-11	SOCKET, CONNECTOR 13P (DE435 EXCEPT US,CND/V424/SE491)	
CC112	1-162-199-31	CERAMIC	10PF	5%	50V (EXCEPT DE435:MY,SP/V424)	* CNS103	1-569-932-11	SOCKET, CONNECTOR 15P (DE435:US,CND/DE535/V525)	
CC113	1-162-199-31	CERAMIC	10PF	5%	50V (EXCEPT DE435:MY,SP/V424)	CNS104	1-564-723-11	PIN, CONNECTOR (SMALL TYPE) 7P (DE535:US,CND DE435:AEP)	
CC114	1-162-199-31	CERAMIC	10PF	5%	50V (EXCEPT DE435:MY,SP/V424)	CNS104	1-564-726-11	PIN, CONNECTOR (SMALL TYPE) 10P (EXCEPT DE535:US,CND DE435:AEP)	
CC115	1-162-199-31	CERAMIC	10PF	5%	50V (EXCEPT DE435:MY,SP/V424)	CNS105	1-770-397-11	HOUSING, CONNECTOR (PC BOARD) 4P	
CC116	1-162-199-31	CERAMIC	10PF	5%	50V (EXCEPT DE435:MY,SP/V424)	< DIODE >			
CC117	1-162-199-31	CERAMIC	10PF	5%	50V (EXCEPT DE435:MY,SP/V424)	D107	8-719-911-19	DIODE 1SS119	
CC118	1-162-199-31	CERAMIC	10PF	5%	50V (EXCEPT DE435:MY,SP/V424)	D108	8-719-911-19	DIODE 1SS119	
CC119	1-162-199-31	CERAMIC	10PF	5%	50V (EXCEPT DE435:MY,SP/V424)	D110	8-719-911-19	DIODE 1SS119	
CC120	1-162-199-31	CERAMIC	10PF	5%	50V (EXCEPT DE435:MY,SP/V424)	D111	8-719-911-19	DIODE 1SS119	
					D112	8-719-911-19	DIODE 1SS119		
					D113	8-719-911-19	DIODE 1SS119		
					D114	8-719-911-19	DIODE 1SS119		
					D115	8-719-046-39	DIODE SEL5821A-TH15		
					D116	8-719-046-39	DIODE SEL5821A-TH15		
					D1001	8-719-911-19	DIODE 1SS119 (DE535/V525)		
					D1002	8-719-911-19	DIODE 1SS119 (DE535/V525)		
					D1003	8-719-059-14	DIODE SID313BP-TP19 (DE535/V525)		
					D1004	8-719-059-14	DIODE SID313BP-TP19 (DE535/V525)		
					D1005	8-719-059-14	DIODE SID313BP-TP19 (DE535/V525)		
					D1104	8-719-911-19	DIODE 1SS119 (DE535/V525)		
					D1105	8-719-911-19	DIODE 1SS119 (DE535/V525)		

# DISPLAY

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
< FLUORESCENT TUBE >											
FL101	1-517-770-11	INDICATOR TUBE, FLUORESCENT				R106	1-247-807-31	CARBON	100	5%	1/4W
		< IC >				R107	1-247-807-31	CARBON	100	5%	1/4W
IC100	8-759-577-79	IC uPD780208GF-032-3BA (EXCEPT DE535:US,CND)				R108	1-247-807-31	CARBON	100	5%	1/4W
IC100	8-759-577-91	IC M62438FP-600D (DE535:US,CND)				R109	1-247-807-31	CARBON	100	5%	1/4W
IC101	8-759-332-18	IC GP1U27XB				R110	1-247-807-31	CARBON	100	5%	1/4W
IC102	8-759-962-08	IC BA6208				R111	1-247-807-31	CARBON	100	5%	1/4W
IC1001	8-759-545-07	IC TMP87C447U-4A06 (DE535/V525)				R112	1-247-807-31	CARBON	100	5%	1/4W
IC1002	8-759-916-12	IC SN74HC00AN (DE535/V525)				R113	1-247-807-31	CARBON	100	5%	1/4W
		< COIL >				R114	1-247-807-31	CARBON	100	5%	1/4W
L101	1-410-509-11	INDUCTOR 10uH				R115	1-247-807-31	CARBON	100	5%	1/4W
L1001	1-408-080-00	INDUCTOR 100uH (DE535/V525)				R116	1-247-807-31	CARBON	100	5%	1/4W
		< TRANSISTOR >				R117	1-247-807-31	CARBON	100	5%	1/4W
Q101	8-729-900-36	TRANSISTOR DTC124ES				R118	1-247-807-31	CARBON	100	5%	1/4W
Q102	8-729-900-63	TRANSISTOR DTA124ES				R119	1-247-807-31	CARBON	100	5%	1/4W
Q115	8-729-900-36	TRANSISTOR DTC124ES				R120	1-247-807-31	CARBON	100	5%	1/4W
Q116	8-729-900-36	TRANSISTOR DTC124ES				R121	1-247-807-31	CARBON	100	5%	1/4W
Q1001	8-729-119-78	TRANSISTOR 2SC403SP-51 (DE535/V525)				R122	1-247-807-31	CARBON	100	5%	1/4W
Q1002	8-729-119-78	TRANSISTOR 2SC403SP-51 (DE535/V525)				R123	1-249-429-11	CARBON	10K	5%	1/4W
Q1004	8-729-801-93	TRANSISTOR 2SD1387 (DE535/V525)				R124	1-249-433-11	CARBON	22K	5%	1/4W
Q1005	8-729-801-93	TRANSISTOR 2SD1387 (DE535/V525)				R124	1-249-427-11	CARBON	6.8K	5%	1/4W F (DE435:MY,SP/V424/DE535:AU)
		< RESISTOR >				R124	1-247-843-11	CARBON	3.3K	5%	1/4W (V525/SE491)
R020	1-249-421-11	CARBON	2.2K	5%	1/4W F	R124	1-249-431-11	CARBON	15K	5%	1/4W (DE535:US,CND)
R021	1-249-421-11	CARBON	2.2K	5%	1/4W F	R124	1-249-425-11	CARBON	4.7K	5%	1/4W F (DE535:E)
R022	1-249-433-11	CARBON	22K	5%	1/4W	R124	1-249-429-11	CARBON	10K	5%	1/4W (DE535:MY,SP)
R023	1-249-433-11	CARBON	22K	5%	1/4W (EXCEPT AEP,EE,CIS/SE491)	R125	1-249-421-11	CARBON	2.2K	5%	1/4W F (AEP)
R024	1-249-433-11	CARBON	22K	5%	1/4W (DE435,V424,SE491)	R125	1-249-427-11	CARBON	6.8K	5%	1/4W F (DE535:E EE,CIS/SE491)
R025	1-249-433-11	CARBON	22K	5%	1/4W	R125	1-247-843-11	CARBON	3.3K	5%	1/4W (DE435:MY,SP DE535:MY,SP/V424)
R026	1-249-433-11	CARBON	22K	5%	1/4W (EXCEPT AEP,EE,CIS)	R125	1-249-433-11	CARBON	22K	5%	1/4W (DE435:AUS)
R027	1-249-433-11	CARBON	22K	5%	1/4W (EXCEPT AEP,EE,CIS)	R125	1-249-415-11	CARBON	680	5%	1/4W F (DE535:US,CND)
R028	1-249-433-11	CARBON	22K	5%	1/4W	R125	1-249-425-11	CARBON	4.7K	5%	1/4W F (DE535:AUS)
R029	1-249-433-11	CARBON	22K	5%	1/4W	R125	1-249-429-11	CARBON	10K	5%	1/4W (V525)
R030	1-249-433-11	CARBON	22K	5%	1/4W	R126	1-249-427-11	CARBON	6.8K	5%	1/4W F
△R099	1-249-383-11	CARBON	1.5	5%	1/6W F (EXCEPT US,CND)	R127	1-249-427-11	CARBON	6.8K	5%	1/4W F
△R099	1-249-387-81	CARBON	3.3	5%	1/4W F (US,CND)	R128	1-249-427-11	CARBON	6.8K	5%	1/4W F
△R100	1-249-383-11	CARBON	1.5	5%	1/6W F (EXCEPT US,CND)	R129	1-249-427-11	CARBON	6.8K	5%	1/4W F
△R100	1-249-387-81	CARBON	3.3	5%	1/4W F (US,CND)	R130	1-249-429-11	CARBON	10K	5%	1/4W F (DE435/SE491/V424)
R101	1-247-807-31	CARBON	100	5%	1/4W	R131	1-249-425-11	CARBON	4.7K	5%	1/4W F
R102	1-249-417-11	CARBON	1K	5%	1/4W F	R132	1-249-425-11	CARBON	4.7K	5%	1/4W F
R103	1-247-807-31	CARBON	100	5%	1/4W	R133	1-249-425-11	CARBON	4.7K	5%	1/4W F
R104	1-247-807-31	CARBON	100	5%	1/4W	R134	1-249-425-11	CARBON	4.7K	5%	1/4W F
R105	1-249-425-11	CARBON	4.7K	5%	1/4W F	R135	1-249-425-11	CARBON	4.7K	5%	1/4W F
						R136	1-249-433-11	CARBON	22K	5%	1/4W
						R137	1-249-441-11	CARBON	100K	5%	1/4W
						R138	1-249-417-11	CARBON	1K	5%	1/4W F

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和△标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。
---	---	---

## DISPLAY

## HEADPHONE

## INPUT

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description		Remarks
R140	1-249-411-11	CARBON	330	5%	1/4W			< SWITCH >		
R151	1-249-441-11	CARBON	100K	5%	1/4W	S142	1-762-196-21	SWITCH, TACT (EXCEPT DE435:US,CND)		
R169	1-249-433-11	CARBON	22K	5%	1/4W	S142	1-762-875-21	SWITCH, KEYBOARD (DE435:US,CND)		
R181	1-249-412-11	CARBON	390	5%	1/4W F	S148	1-762-196-21	SWITCH, TACT (EXCEPT DE435:US,CND)		
R182	1-249-412-11	CARBON	390	5%	1/4W F	S148	1-762-875-21	SWITCH, KEYBOARD (DE435:US,CND)		
R183	1-249-412-11	CARBON	390	5%	1/4W F			< VIBRATOR >		
R184	1-249-412-11	CARBON	390	5%	1/4W F	X101	1-760-489-11	VIBRATOR, CERAMIC (5MHz)		
R1001	1-249-429-11	CARBON	10K	5%	1/4W	X1000	1-767-938-21	VIBRATOR, CERAMIC (7.28MHz) (DE535/V525)		
			(DE535/SE491/V525)			*****	*****	*****	*****	*****
R1002	1-249-425-11	CARBON	4.7K	5%	1/4W F			1-672-994-11 HEADPHONE BOARD		
			(DE535/V525)			*****	*****	*****	*****	*****
R1003	1-249-429-11	CARBON	10K	5%	1/4W			< EARTH >		
			(DE535/SE491/V525)			*****	*****	*****	*****	*****
R1004	1-249-393-11	CARBON	10	5%	1/4W F	* EB502	1-537-738-21	TERMINAL, EARTH		
			(DE535/V525)			*****	*****	*****	*****	*****
R1005	1-249-429-11	CARBON	10K	5%	1/4W			< JACK >		
			(DE535/SE491/V525)			*****	*****	*****	*****	*****
R1006	1-249-425-11	CARBON	4.7K	5%	1/4W F	J501	1-750-731-11	JACK (LARGE TYPE) (HEADPHONE)(SE491)		
			(DE535/V525)			J501	1-750-733-11	JACK (LARGE TYPE) (HEADPHONE)		
			(DE435/V424/DE535)			J501	1-750-735-11	JACK (LARGE TYPE) (HEADPHONE)(V525)		
R1007	1-249-429-11	CARBON	10K	5%	1/4W	*****	*****	*****	*****	*****
			(DE535/SE491/V525)			A-4419-079-A	INPUT BOARD, COMPLETE			
R1008	1-249-429-11	CARBON	10K	5%	1/4W			*****		
			(DE535/SE491/V525)			*****	*****	*****	*****	*****
R1009	1-249-385-11	CARBON	2.2	5%	1/6W F			(DE535/SE491/V525)		
			(DE535/V525)			*****	*****	*****	*****	*****
R1010	1-249-385-11	CARBON	2.2	5%	1/6W F			A-4419-232-A INPUT BOARD, COMPLETE (AEP,EE,CIS)		
			(DE535/V525)			*****	*****	*****	*****	*****
RR101	1-249-437-11	CARBON	47K	5%	1/4W			< CAPACITOR >		
RR102	1-249-437-11	CARBON	47K	5%	1/4W			*****		
RR103	1-249-437-11	CARBON	47K	5%	1/4W			*****		
RR104	1-249-437-11	CARBON	47K	5%	1/4W			(EXCEPT AEP,EE,CIS/DE535/SE491/V525)		
RR105	1-249-437-11	CARBON	47K	5%	1/4W			*****		
RR106	1-249-437-11	CARBON	47K	5%	1/4W			*****		
RR107	1-249-437-11	CARBON	47K	5%	1/4W			*****		
RR108	1-249-437-11	CARBON	47K	5%	1/4W			*****		
RR109	1-249-437-11	CARBON	47K	5%	1/4W	C201	1-126-961-11	ELECT	2.2uF 20% 50V	
RR110	1-249-437-11	CARBON	47K	5%	1/4W			(DE535/SE491/V525)		
RR111	1-249-437-11	CARBON	47K	5%	1/4W	C202	1-162-282-31	CERAMIC	100PF 10% 50V	
RR112	1-249-437-11	CARBON	47K	5%	1/4W			(DE535/SE491/V525)		
RR113	1-249-437-11	CARBON	47K	5%	1/4W	C203	1-125-896-91	MYLAR	0.0091uF 5% 50V	
RR114	1-249-437-11	CARBON	47K	5%	1/4W			(DE535/SE491/V525)		
RR115	1-249-437-11	CARBON	47K	5%	1/4W	C204	1-136-159-00	FILM	0.033uF 5% 50V	
RR116	1-249-437-11	CARBON	47K	5%	1/4W			(DE535/SE491/V525)		
RR117	1-249-437-11	CARBON	47K	5%	1/4W	C205	1-104-666-11	ELECT	220uF 20% 10V	
RR118	1-249-437-11	CARBON	47K	5%	1/4W			(DE535/SE491/V525)		
RR119	1-249-437-11	CARBON	47K	5%	1/4W	C206	1-126-961-11	ELECT	2.2uF 20% 50V	
RR120	1-249-437-11	CARBON	47K	5%	1/4W			(DE535/SE491/V525)		
RR121	1-249-437-11	CARBON	47K	5%	1/4W	C207	1-164-159-11	CERAMIC	0.1uF 50V	
RR122	1-249-437-11	CARBON	47K	5%	1/4W			(DE535/SE491/V525)		
RR123	1-249-437-11	CARBON	47K	5%	1/4W	C208	1-162-294-31	CERAMIC	0.001uF 10% 50V	
RR124	1-249-437-11	CARBON	47K	5%	1/4W			(DE535/SE491/V525)		
			(EXCEPT DE535:MY,SP/V525)			C209	1-126-965-11	ELECT	22uF 20% 50V	
RR125	1-249-437-11	CARBON	47K	5%	1/4W	C211	1-104-664-11	ELECT	47uF 20% 16V	
			(EXCEPT DE535:MY,SP/V525)			C213	1-104-664-11	ELECT	47uF 20% 16V	
RR126	1-249-437-11	CARBON	47K	5%	1/4W	C214	1-162-294-31	CERAMIC	0.001uF 10% 50V	
RR127	1-249-437-11	CARBON	47K	5%	1/4W	C215	1-126-965-11	ELECT	22uF 20% 50V	
RR128	1-249-437-11	CARBON	47K	5%	1/4W	C230	1-164-159-11	CERAMIC	0.1uF 50V	
RR129	1-249-437-11	CARBON	47K	5%	1/4W	C231	1-164-159-11	CERAMIC	0.1uF 50V	

**INPUT**

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
C232	1-162-288-31	CERAMIC	330PF	10%	50V (AEP,EE,CIS)	C705	1-102-233-00	CERAMIC	33PF	10%	500V
C233	1-102-527-11	CERAMIC	82PF	5%	50V (AEP,EE,CIS)	C706	1-162-282-31	CERAMIC	100PF	10%	50V
C234	1-102-852-91	CERAMIC	47PF	5%	50V (AEP,EE,CIS)	C710	1-162-282-31	CERAMIC	100PF	10%	50V
C235	1-126-961-11	ELECT	2.2uF	20%	50V (AEP,EE,CIS)	C751	1-126-966-11	ELECT	33uF	20%	50V
C236	1-164-159-00	CERAMIC	0.1uF	5%	50V (AEP,EE,CIS)	C752	1-162-284-31	CERAMIC	150PF	10%	50V
C237	1-162-291-31	CERAMIC	560PF	10%	50V (AEP,EE,CIS)	C753	1-107-584-11	CERAMIC	4PF	0.25PF	500V
C238	1-126-964-11	ELECT	10uF	20%	50V (AEP,EE,CIS)	C754	1-104-666-11	ELECT	220uF	20%	10V
C239	1-164-159-11	CERAMIC	0.1uF		50V	C755	1-102-233-00	CERAMIC	33PF	10%	500V
C240	1-164-159-11	CERAMIC	0.1uF		50V	C756	1-162-282-31	CERAMIC	100PF	10%	50V
C251	1-126-961-11	ELECT	2.2uF	20%	50V (DE535/SE491/V525)	C821	1-126-959-11	ELECT	0.47uF	20%	50V
C252	1-162-282-31	CERAMIC	100PF	10%	50V (DE535/SE491/V525)	C823	1-126-959-11	ELECT	0.47uF	20%	50V
C253	1-125-896-91	MYLAR	0.0091uF	5%	50V (DE535/SE491/V525)	C824	1-126-933-11	ELECT	100uF	20%	16V
C254	1-136-159-00	FILM	0.033uF	5%	50V (DE535/SE491/V525)	C825	1-126-933-11	ELECT	100uF	20%	16V
C255	1-104-666-11	ELECT	220uF	20%	10V (DE535/SE491/V525)	C826	1-126-933-11	ELECT	100uF	20%	16V
C256	1-126-961-11	ELECT	2.2uF	20%	50V (DE535/SE491/V525)	C827	1-104-664-11	ELECT	47uF	20%	16V
C257	1-164-159-11	CERAMIC	0.1uF		50V (DE535/SE491/V525)	CC203	1-162-282-31	CERAMIC	100PF	10%	50V (AEP,EE,CIS)
C258	1-162-294-31	CERAMIC	0.001uF	10%	50V (DE535/SE491/V525)	CC204	1-162-282-31	CERAMIC	100PF	10%	50V (AEP,EE,CIS)
C259	1-126-965-11	ELECT	22uF	20%	50V	CC205	1-162-282-31	CERAMIC	100PF	10%	50V (AEP,EE,CIS)
C265	1-126-965-11	ELECT	22uF	20%	50V	CC206	1-162-282-31	CERAMIC	100PF	10%	50V (AEP,EE,CIS)
C501	1-126-966-11	ELECT	33uF	20%	50V	CC207	1-162-282-31	CERAMIC	100PF	10%	50V (AEP,EE,CIS)
C502	1-162-284-31	CERAMIC	150PF	10%	50V	CC208	1-162-282-31	CERAMIC	100PF	10%	50V (AEP,EE,CIS)
C503	1-107-584-11	CERAMIC	4PF	0.25PF	500V	CC253	1-162-282-31	CERAMIC	100PF	10%	50V (AEP,EE,CIS)
C504	1-104-666-11	ELECT	220uF	20%	10V	CC254	1-162-282-31	CERAMIC	100PF	10%	50V (AEP,EE,CIS)
C505	1-102-233-00	CERAMIC	33PF	10%	500V	CC255	1-162-282-31	CERAMIC	100PF	10%	50V (AEP,EE,CIS)
C506	1-162-282-31	CERAMIC	100PF	10%	50V	CC256	1-162-282-31	CERAMIC	100PF	10%	50V (AEP,EE,CIS)
C510	1-162-282-31	CERAMIC	100PF	10%	50V	< CONNECTOR >					
C551	1-126-966-11	ELECT	33uF	20%	50V	CNP104	1-784-923-11	PIN, CONNECTOR 7P (EXCEPT AEP,EE,CIS)			
C552	1-162-284-31	CERAMIC	150PF	10%	50V	CNP104	1-784-925-11	PIN, CONNECTOR 10P (AEP,EE,CIS)			
C553	1-107-584-11	CERAMIC	4PF	0.25PF	500V	CNS200	1-569-932-11	SOCKET, CONNECTOR 15P			
C554	1-104-666-11	ELECT	220uF	20%	10V	CNS230	1-569-932-11	SOCKET, CONNECTOR 15P			
C555	1-102-233-00	CERAMIC	33PF	10%	500V	CNS405	1-569-927-11	SOCKET, CONNECTOR 9P			
C556	1-162-282-31	CERAMIC	100PF	10%	50V	CNS653	1-785-819-11	HOUSING, CONNECTOR (PC BOARD) 15P			
C594	1-128-560-11	ELECT	22uF	20%	100V	CNS654	1-770-404-11	HOUSING, CONNECTOR (PC BOARD) 11P			
C595	1-128-560-11	ELECT	22uF	20%	100V	< IC >					
C601	1-126-966-11	ELECT	33uF	20%	50V	C602	1-162-284-31	CERAMIC	150PF	10%	50V
C603	1-107-584-11	CERAMIC	4PF	0.25PF	500V	IC201	8-759-636-74	IC M5218AP-22 (DE535/SE491/V525)			
C604	1-104-666-11	ELECT	220uF	20%	10V	IC202	8-759-636-74	IC M5218AP-22			
C605	1-102-989-00	CERAMIC	68PF	5%	500V	IC203	8-759-636-74	IC M5218AP-22			
C606	1-102-989-00	CERAMIC	68PF	5%	500V	IC204	8-759-545-64	IC LC78212			
C693	1-104-666-11	ELECT	220uF	20%	10V	IC230	8-759-541-48	IC BU1924 (AEP,EE,CIS)			
C701	1-126-966-11	ELECT	33uF	20%	50V	IC501	8-759-326-52	IC uPC2581V			
C702	1-162-284-31	CERAMIC	150PF	10%	50V	IC601	8-749-011-16	IC STK350-230			
C703	1-107-584-11	CERAMIC	4PF	0.25PF	500V	IC701	8-759-326-52	IC uPC2581V			
C704	1-104-666-11	ELECT	220uF	20%	10V	IC801	8-759-604-40	IC M5F78M15			
						IC802	8-759-231-58	IC TA7812S			

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
IC803	8-759-604-46	IC M5F79M15		R253	1-249-440-11	CARBON	82K 5% 1/4W
IC804	8-759-604-35	IC M5F78M05L		R254	1-249-408-11	CARBON	(DE535/SE491/V525) 180 5% 1/4W F
		< JACK >		R255	1-249-428-11	CARBON	(DE535/SE491/V525) 8.2K 5% 1/4W F
J201	1-770-614-11	JACK, PIN 4P (DE535/SE491/V525)		R256	1-249-441-11	CARBON	(DE535/SE491/V525) 100K 5% 1/4W
J202	1-691-887-11	JACK, PIN 6P (EXCEPT DE535/SE491/V525)		R257	1-247-807-31	CARBON	(DE535/SE491/V525) 100 5% 1/4W
J202	1-770-613-11	JACK, PIN 4P (DE535/SE491/V525)		R258	1-249-441-11	CARBON	(DE535/SE491/V525) 100K 5% 1/4W
J203	1-580-825-11	JACK, PIN 6P		R259	1-249-413-11	CARBON	(DE535/SE491/V525) 470 5% 1/4W F
		< TRANSISTOR >		R260	1-249-417-11	CARBON	1K 5% 1/4W F
L230	1-408-080-00	INDUCTOR 100uH (AEP,EE,CIS)		R261	1-249-417-11	CARBON	1K 5% 1/4W F
Q691	8-729-900-80	TRANSISTOR DTC114ES		R262	1-249-417-11	CARBON	1K 5% 1/4W F
Q692	8-729-422-57	TRANSISTOR UN4111		R263	1-249-417-11	CARBON	1K 5% 1/4W F
		< RESISTOR >		R264	1-249-417-11	CARBON	1K 5% 1/4W F
R201	1-249-401-11	CARBON	47 5% 1/4W F (DE535/SE491/V525)	R265	1-249-417-11	CARBON	1K 5% 1/4W F
R202	1-249-441-11	CARBON	100K 5% 1/4W (DE535/SE491/V525)	R266	1-249-441-11	CARBON	100K 5% 1/4W
R203	1-249-440-11	CARBON	82K 5% 1/4W (DE535/SE491/V525)	R267	1-249-429-11	CARBON	10K 5% 1/4W
R204	1-249-408-11	CARBON	180 5% 1/4W F (DE535/SE491/V525)	R268	1-249-434-11	CARBON	27K 5% 1/4W
R205	1-249-428-11	CARBON	8.2K 5% 1/4W F (DE535/SE491/V525)	R277	1-249-429-11	CARBON	10K 5% 1/4W
R206	1-249-441-11	CARBON	100K 5% 1/4W (DE535/SE491/V525)	R295	1-249-429-11	CARBON	10K 5% 1/4W
R207	1-247-807-31	CARBON	100 5% 1/4W (DE535/SE491/V525)	R501	1-249-417-11	CARBON	1K 5% 1/4W F
R208	1-249-441-11	CARBON	100K 5% 1/4W (DE535/SE491/V525)	R502	1-249-439-11	CARBON	68K 5% 1/4W
R209	1-249-413-11	CARBON	470 5% 1/4W F (DE535/SE491/V525)	R503	1-249-439-11	CARBON	68K 5% 1/4W
R210	1-249-417-11	CARBON	1K 5% 1/4W F	R504	1-249-420-11	CARBON	1.8K 5% 1/4W F (AEPEE,CIS)
R211	1-249-417-11	CARBON	1K 5% 1/4W F	R504	1-249-418-11	CARBON	1.2K 5% 1/4W F (EXCEPT AEPEE,CIS)
R212	1-249-417-11	CARBON	1K 5% 1/4W F	R551	1-249-417-11	CARBON	1K 5% 1/4W F
R213	1-249-417-11	CARBON	1K 5% 1/4W F	R552	1-249-439-11	CARBON	68K 5% 1/4W
R214	1-249-417-11	CARBON	1K 5% 1/4W F	R553	1-249-439-11	CARBON	68K 5% 1/4W
R215	1-249-417-11	CARBON	1K 5% 1/4W F	R554	1-249-420-11	CARBON	1.8K 5% 1/4W F (AEPEE,CIS)
R216	1-249-441-11	CARBON	100K 5% 1/4W	R554	1-249-418-11	CARBON	1.2K 5% 1/4W F (EXCEPT AEPEE,CIS)
R217	1-249-429-11	CARBON	10K 5% 1/4W	R590	1-249-433-11	CARBON	22K 5% 1/4W
R218	1-249-434-11	CARBON	27K 5% 1/4W	R592	1-249-381-11	CARBON	1 5% 1/4W F
R227	1-249-429-11	CARBON	10K 5% 1/4W	R593	1-249-381-11	CARBON	1 5% 1/4W F
R228	1-247-807-31	CARBON	100 5% 1/4W	R601	1-249-417-11	CARBON	1K 5% 1/4W F
R229	1-247-807-31	CARBON	100 5% 1/4W	R602	1-249-439-11	CARBON	68K 5% 1/4W
R230	1-249-425-11	CARBON	4.7K 5% 1/4W F	R603	1-249-439-11	CARBON	68K 5% 1/4W
R231	1-249-436-11	CARBON	39K 5% 1/4W	R604	1-249-411-11	CARBON	330 5% 1/4W (EXCEPT AEPEE,CIS)
R232	1-247-807-31	CARBON	100 5% 1/4W (AEPEE,CIS)	R604	1-249-442-11	CARBON	510 5% 1/4W (AEPEE,CIS)
R233	1-247-807-31	CARBON	100 5% 1/4W (AEPEE,CIS)	R606	1-249-413-11	CARBON	470 5% 1/4W F
R234	1-249-421-11	CARBON	2.2K 5% 1/4W F (AEPEE,CIS)	R693	1-249-437-11	CARBON	47K 5% 1/4W
R235	1-249-436-11	CARBON	39K 5% 1/4W	R694	1-249-425-11	CARBON	4.7K 5% 1/4W F
R245	1-249-429-11	CARBON	10K 5% 1/4W	R701	1-249-417-11	CARBON	1K 5% 1/4W F
R251	1-249-401-11	CARBON	47 5% 1/4W F (DE535/SE491/V525)	R702	1-249-439-11	CARBON	68K 5% 1/4W
R252	1-249-441-11	CARBON	100K 5% 1/4W (DE535/SE491/V525)	R703	1-249-439-11	CARBON	68K 5% 1/4W
				R704	1-249-411-11	CARBON	330 5% 1/4W (EXCEPT AEPEE,CIS)
				R704	1-249-442-11	CARBON	510 5% 1/4W (AEPEE,CIS)
				R751	1-249-417-11	CARBON	1K 5% 1/4W F

**INPUT KEY**

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>			<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>								
R752	1-249-439-11	CARBON	68K	5%	1/4W				< RESISTOR >								
R753	1-249-439-11	CARBON	68K	5%	1/4W				R141	1-249-411-11	CARBON						
R754	1-249-411-11	CARBON	330	5%	1/4W	(EXCEPT AEP,EE,CIS)			R142	1-249-413-11	CARBON						
R754	1-249-442-11	CARBON	510	5%	1/4W	(AEP,EE,CIS)			R143	1-249-415-11	CARBON						
R790	1-249-433-11	CARBON	22K	5%	1/4W				R144	1-249-417-11	CARBON						
			< VIBRATOR >						R145	1-249-419-11	CARBON						
X230	1-579-900-21	VIBRATOR, CRYSTAL 4.332MHz(AEP,EE,CIS)				< VIBRATOR >			R146	1-249-421-11	CARBON						
*****																	
A-4419-078-A KEY BOARD, COMPLETE (DE535/SE491/V525)																	
*****																	
A-4419-219-A KEY BOARD, COMPLETE																	
*****																	
(EXCEPT AEP,EE,CIS/DE535/SE491/V525)																	
A-4419-231-A KEY BOARD, COMPLETE (AEP,EE,CIS)																	
*****																	
< CONNECTOR >																	
CNS110	1-770-399-11	HOUSING, CONNECTOR (PC BOARD) 6P				R159	1-249-425-11	CARBON	4.7K	5%	1/4W						
CNS111	1-770-399-11	HOUSING, CONNECTOR (PC BOARD) 6P				R160	1-249-429-11	CARBON	10K	5%	1/4W						
CNS112	1-770-399-11	HOUSING, CONNECTOR (PC BOARD) 6P				R161	1-249-433-11	CARBON	22K	5%	1/4W						
			< DIODE >			R162	1-249-413-11	CARBON	470	5%	1/4W						
D119	8-719-046-39	DIODE SEL5821A-TP15 (DE535/SE491/V525)	(TUNER)			R163	1-249-415-11	CARBON	680	5%	1/4W						
D120	8-719-046-39	DIODE SEL5821A-TP15 (TUNER)				R164	1-249-417-11	CARBON	1K	5%	1/4W						
D123	8-719-046-39	DIODE SEL5821A-TP15 (DE535/SE491/V525)	(CD)			R165	1-249-419-11	CARBON	1.5K	5%	1/4W						
D124	8-719-046-39	DIODE SEL5821A-TP15 (CD)				R166	1-249-421-11	CARBON	2.2K	5%	1/4W						
D125	8-719-046-39	DIODE SEL5821A-TP15 (SET UP)				R167	1-247-843-11	CARBON	3.3K	5%	1/4W						
D126	8-719-046-39	DIODE SEL5821A-TP15 (PHONO)	(DE535/SE491/V525)			R168	1-249-425-11	CARBON	4.7K	5%	1/4W						
D127	8-719-046-39	DIODE SEL5821A-TP15 (NAME)				R170	1-249-411-11	CARBON	330	5%	1/4W						
D128	8-719-046-39	DIODE SEL5821A-TP15 (MD/TAPE)				R171	1-249-413-11	CARBON	470	5%	1/4W						
D129	8-719-046-39	DIODE SEL5821A-TP15 (BASS/TREBLE)				R172	1-249-415-11	CARBON	680	5%	1/4W						
D130	8-719-046-39	DIODE SEL5821A-TP15 (TU/LD)				R173	1-249-417-11	CARBON	1K	5%	1/4W						
D131	8-719-046-39	DIODE SEL5821A-TP15 (SUR)				R174	1-249-419-11	CARBON	1.5K	5%	1/4W						
D132	8-719-046-39	DIODE SEL5821A-TP15 (VIDEO)				R175	1-249-421-11	CARBON	2.2K	5%	1/4W						
D133	8-719-046-39	DIODE SEL5821A-TP15 (5.1CH/DVD)				R176	1-247-843-11	CARBON	3.3K	5%	1/4W						
			< TRANSISTOR >			R177	1-249-425-11	CARBON	4.7K	5%	1/4W						
Q122	8-729-900-36	TRANSISTOR DTC124ES				R178	1-249-429-11	CARBON	10K	5%	1/4W						
Q124	8-729-900-36	TRANSISTOR DTC124ES				R179	1-249-433-11	CARBON	22K	5%	1/4W						
Q125	8-729-900-36	TRANSISTOR DTC124ES				R180	1-249-437-11	CARBON	47K	5%	1/4W						
Q126	8-729-900-36	TRANSISTOR DTC124ES (DE535/SE491/V525)				R189	1-249-429-11	CARBON	10K	5%	1/4W						
Q127	8-729-900-36	TRANSISTOR DTC124ES				R190	1-249-437-11	CARBON	47K	5%	1/4W						
Q128	8-729-900-36	TRANSISTOR DTC124ES				R193	1-249-412-11	CARBON	390	5%	1/4W						
Q129	8-729-900-36	TRANSISTOR DTC124ES				R194	1-249-412-11	CARBON	390	5%	1/4W						
Q130	8-729-900-36	TRANSISTOR DTC124ES				R197	1-249-412-11	CARBON	390	5%	1/4W						
Q131	8-729-900-36	TRANSISTOR DTC124ES				R198	1-249-412-11	CARBON	390	5%	1/4W						
Q132	8-729-900-36	TRANSISTOR DTC124ES															
Q133	8-729-900-36	TRANSISTOR DTC124ES				< SWITCH >											
						S102	1-762-196-21	SWITCH, TACT (SOUND FIELD MODE -)									
						S103	1-762-196-21	SWITCH, TACT (FM/AM:DE435/V424) (FM:DE535/SE491/V525)									
						S104	1-762-196-21	SWITCH, TACT (4)									
						S105	1-762-196-21	SWITCH, TACT (TUNING +)									
						S107	1-762-196-21	SWITCH, TACT (SOUND FIELED MODE +)									
						S108	1-762-196-21	SWITCH, TACT (FM MODE)									
						S109	1-762-196-21	SWITCH, TACT (5)									
						S110	1-762-196-21	SWITCH, TACT (TUNING -)									
						S112	1-762-196-21	SWITCH, TACT (SOUND FIELED ON/OFF)									
						S113	1-762-196-21	SWITCH, TACT (MEMORY)									

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
S114	1-762-196-21	SWITCH, TACT (6)		C524	1-126-964-11	ELECT	10uF 20% 50V
S115	1-762-196-21	SWITCH, TACT (PRESET/PTY SELECT +:DE435/V424) (PRESET TUNING +:DE535/SE491/V525)		C525	1-136-157-00	FILM	0.022uF 5% 50V
S117	1-762-196-21	SWITCH, TACT (CD) (DE435/V424)		C526	1-136-153-00	FILM	0.01uF 5% 50V
S118	1-762-196-21	SWITCH, TACT (SET UP)		C570	1-104-664-11	ELECT	47uF 20% 16V
S119	1-762-196-21	SWITCH, TACT (7)		C571	1-107-597-11	CERAMIC	22PF 10% 500V
S120	1-762-196-21	SWITCH, TACT (PRESET/PTY SELECT -:DE435/V424) (PRESET TUNING -:DE535/SE491/V525)		C572	1-107-597-11	CERAMIC	22PF 10% 500V
S121	1-762-196-21	SWITCH, TACT (CD) (DE535/SE491/V525)		C573	1-162-286-31	CERAMIC	220PF 10% 50V
S122	1-762-196-21	SWITCH, TACT (TUNER) (DE535/SE491/V525)		C574	1-126-964-11	ELECT	10uF 20% 50V
S123	1-762-196-21	SWITCH, TACT (NAME)		C575	1-136-157-00	FILM	0.022uF 5% 50V
S124	1-762-196-21	SWITCH, TACT (8)		C576	1-136-153-00	FILM	0.01uF 5% 50V
S125	1-762-196-21	SWITCH, TACT (1)		C620	1-104-664-11	ELECT	47uF 20% 16V
S126	1-762-196-21	SWITCH, TACT (TUNER)(DE435/V424)		C621	1-107-597-11	CERAMIC	22PF 10% 500V
S127	1-762-196-21	SWITCH, TACT (MENU <)		C622	1-107-597-11	CERAMIC	22PF 10% 500V
S128	1-762-196-21	SWITCH, TACT (PHONO)(DE535/SE491/V525)		C623	1-162-286-31	CERAMIC	220PF 10% 50V
S129	1-762-196-21	SWITCH, TACT (9)		C625	1-136-157-00	FILM	0.022uF 5% 50V
S130	1-762-196-21	SWITCH, TACT (2)		C651	1-215-888-00	METAL OXIDE	220 5% 2W F (CND/SE491)
S131	1-762-196-21	SWITCH, TACT (MENU <)		C659	1-215-888-00	METAL OXIDE	220 5% 2W F (CND/SE491)
S132	1-762-196-21	SWITCH, TACT (SUR)		C660	1-126-934-11	ELECT	220uF 20% 10V
S133	1-762-196-21	SWITCH, TACT (SHIFT)		C661	1-126-964-11	ELECT	10uF 20% 50V
S134	1-762-196-21	SWITCH, TACT (3)		C801	1-104-664-11	ELECT	47uF 20% 25V
S135	1-762-196-21	SWITCH, TACT (ENTER)		C803	1-125-897-11	ELECT	10000uF 20% 71V (EXCEPT CND,AEP,EE,E,CIS/SE491)
S136	1-762-196-21	SWITCH, TACT (5.1CH/DVD)		C803	1-107-766-12	ELECT	8200uF 20% 71V (CND/SE491/DE535:E)
S137	1-762-196-21	SWITCH, TACT (0)		C803	1-117-203-11	ELECT	10000uF 20% 63V (AEP,EE,CIS)
S138	1-762-196-21	SWITCH, TACT (DIRECT)		C804	1-125-897-11	ELECT	10000uF 20% 71V (EXCEPT CND,AEP,EE,E,CIS/SE491)
S139	1-762-196-21	SWITCH, TACT (MENU -)		C804	1-107-766-12	ELECT	8200uF 20% 71V (CND/SE491/DE535:E)
S140	1-762-196-21	SWITCH, TACT (TV/LD:DE435/V424) (TV/SAT:DE535/SE491/V525)		C804	1-117-203-11	ELECT	10000uF 20% 63V (AEP,EE,CIS)
S141	1-762-196-21	SWITCH, TACT (RDS PTY)(DE535/SE491/V525)		C805	1-130-781-00	MYLAR	0.22uF 5% 100V
S143	1-762-196-21	SWITCH, TACT (MENU +)		C806	1-130-781-00	MYLAR	0.22uF 5% 100V
S144	1-762-196-21	SWITCH, TACT (RDS EON:DE435/V424) (AM:DE535/SE491/V525)		C807	1-162-294-31	CERAMIC	0.001uF 10% 50V
S145	1-762-196-21	SWITCH, TACT (BASS TREBLE)		C808	1-162-294-31	CERAMIC	0.001uF 10% 50V
S146	1-762-196-21	SWITCH, TACT (VIDEO)		C811	1-126-952-11	ELECT	1000uF 20% 35V
S147	1-762-196-21	SWITCH, TACT (MD/TAPE)		C812	1-126-951-11	ELECT	470uF 20% 35V (EXCEPT DE435:US/DE535:US)
*****				C813	1-104-664-11	ELECT	47uF 20% 16V
A-4419-080-A P.AMP BOARD, COMPLETE ***** (DE435:US/DE535:US)				C814	1-124-463-00	ELECT	0.1uF 20% 50V
A-4419-214-A P.AMP BOARD, COMPLETE (DE535:E) *****				C817	1-126-967-11	ELECT	47uF 20% 50V
A-4419-208-A P.AMP BOARD, COMPLETE (MY,SP,AUS,CH) *****				C818	1-126-967-11	ELECT	47uF 20% 50V
A-4419-233-A P.AMP BOARD, COMPLETE (AEP,EE,CIS) *****				C951	1-104-664-11	ELECT	47uF 20% 16V
A-4419-205-A P.AMP BOARD, COMPLETE (CND/SE491) *****				C952	1-124-463-00	ELECT	0.1uF 20% 50V
A-4419-233-A P.AMP BOARD, COMPLETE (AEP,EE,CIS) *****				CC48	1-164-096-11	CERAMIC	0.01uF 50V (AEP,EE,CIS)
A-4419-205-A P.AMP BOARD, COMPLETE (CND/SE491) *****				CC49	1-164-096-11	CERAMIC	0.01uF 50V (AEP,EE,CIS)
1-533-233-11 CLIP, FUSE (EXCEPT US,CND)  < CAPACITOR >				CC98	1-164-096-11	CERAMIC	0.01uF 50V (AEP,EE,CIS)
C520 1-104-664-11 ELECT 47uF 20% 16V C521 1-107-597-11 CERAMIC 22PF 10% 500V C522 1-107-597-11 CERAMIC 22PF 10% 500V C523 1-162-286-31 CERAMIC 220PF 10% 50V				CC99	1-164-096-11	CERAMIC	0.01uF 50V (AEP,EE,CIS)
< CONNECTOR >				CN502	1-691-765-11	PLUG(MICRO CONNECTOR) 3P	
				CN951	1-691-765-11	PLUG(MICRO CONNECTOR) 3P	
				CNP711	1-691-771-11	PLUG(MICRO CONNECTOR) 9P	

# P. AMP

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
* CNP801	1-564-243-11	PIN, CONNECTOR 6P					< TRANSISTOR >
* CNP802	1-564-506-11	PLUG, CONNECTOR 3P					
CNS102	1-569-932-11	SOCKET, CONNECTOR 15P		Q504	8-729-119-76	TRANSISTOR 2SA1175-HFE	
CNS602	1-569-928-11	SOCKET, CONNECTOR 11P		Q505	8-729-209-15	TRANSISTOR 2SD2012	
CNS651	1-785-819-11	HOUSING, CONNECTOR(PC BOARD) 15P		Q506	8-749-010-25	IC MN2488-OPY-M	
CNS652	1-770-404-11	HOUSING, CONNECTOR(PC BOARD) 11P		Q507	8-749-010-26	IC MP1620-OPY-M	
			< DIODE >	Q508	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
D501	8-719-911-19	DIODE 1SS119		Q509	8-729-281-53	TRANSISTOR 2SC1815-GR	
D502	8-719-109-54	DIODE RD2.2ES-B2					
D503	8-719-109-54	DIODE RD2.2ES-B2		Q510	8-729-900-63	TRANSISTOR DTA124ES	
D504	8-719-911-19	DIODE 1SS119		Q511	8-729-900-63	TRANSISTOR DTA124ES	
D505	8-719-911-19	DIODE 1SS119		Q513	8-729-119-79	TRANSISTOR 2SC2785-FEK	
D506	8-719-911-19	DIODE 1SS119		Q546	8-729-119-79	TRANSISTOR 2SC2785-FEK	
D513	8-719-911-19	DIODE 1SS119		Q554	8-729-119-76	TRANSISTOR 2SA1175-HFE	
D546	8-719-911-19	DIODE 1SS119					
D551	8-719-911-19	DIODE 1SS119		Q555	8-729-209-15	TRANSISTOR 2SD2012	
D552	8-719-109-54	DIODE RD2.2ES-B2		Q556	8-749-010-25	IC MN2488-OPY-M	
D553	8-719-109-54	DIODE RD2.2ES-B2		Q557	8-749-010-26	IC MP1620-OPY-M	
D554	8-719-911-19	DIODE 1SS119		Q558	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
D555	8-719-911-19	DIODE 1SS119		Q559	8-729-281-53	TRANSISTOR 2SC1815-GR	
D556	8-719-911-19	DIODE 1SS119					
D596	8-719-911-19	DIODE 1SS119		Q560	8-729-900-63	TRANSISTOR DTA124ES	
D601	8-719-911-19	DIODE 1SS119		Q561	8-729-900-63	TRANSISTOR DTA124ES	
D602	8-719-109-54	DIODE RD2.2ES-B2		Q596	8-729-119-79	TRANSISTOR 2SC2785-FEK	
D603	8-719-109-54	DIODE RD2.2ES-B2		Q604	8-729-119-76	TRANSISTOR 2SA1175-HFE	
D604	8-719-911-19	DIODE 1SS119		Q605	8-729-209-15	TRANSISTOR 2SD2012	
D651	8-719-911-19	DIODE 1SS119					
D652	8-719-911-19	DIODE 1SS119		Q606	8-749-010-25	IC MN2488-OPY-M	
D653	8-719-911-19	DIODE 1SS119		Q607	8-749-010-26	IC MP1620-OPY-M	
D660	8-719-911-19	DIODE 1SS119		Q608	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
D661	8-719-911-19	DIODE 1SS119		Q651	8-729-281-53	TRANSISTOR 2SC1815-GR	
D801	8-719-302-38	DIODE RBV-602-01		Q652	8-729-900-36	TRANSISTOR DTC124ES	
D802	8-719-024-99	DIODE 11ES2-NTA2B					
D803	8-719-024-99	DIODE 11ES2-NTA2B		Q653	8-729-281-53	TRANSISTOR 2SC1815-GR	
D804	8-719-024-99	DIODE 11ES2-NTA2B		Q654	8-729-900-36	TRANSISTOR DTC124ES	
D805	8-719-024-99	DIODE 11ES2-NTA2B		Q655	8-729-201-53	TRANSISTOR 2SA1015-GR	
D806	8-719-160-26	DIODE RD5.6F-B2 (EXCEPT CND/SE491)		Q656	8-729-900-63	TRANSISTOR DTA124ES	
D806	8-719-069-68	DIODE RD5.6F-T7 (CND/SE491)		Q657	8-729-900-36	TRANSISTOR DTC124ES	
D807	8-719-934-17	DIODE HZS27-1L					
D809	8-719-210-21	DIODE 11EQS04		Q660	8-729-140-82	TRANSISTOR 2SA988-PAFAEA	
			< FUSE >	Q661	8-729-119-79	TRANSISTOR 2SC2785-FEK	
D806	8-719-069-68	DIODE RD5.6F-T7 (CND/SE491)		Q662	8-729-140-84	TRANSISTOR 2SC1841-PAFAEA	
D807	8-719-934-17	DIODE HZS27-1L		Q801	8-729-140-97	TRANSISTOR 2SB734-34	
D809	8-719-210-21	DIODE 11EQS04					
			< RESISTOR >				
△F801	1-532-311-11	FUSE GLASS TUBE 8.0A 125V (MY,SP,AUS,E,CH)		R507	1-249-431-11	CARBON	15K 5% 1/4W
△F801	1-533-506-51	FUSE TL6.3A 250V(AEP,EE,CIS)		R510	1-215-868-00	METAL OXIDE	680 5% 1W F
△F802	1-532-506-51	FUSE TL6.3A 250V(AEP,EE,CIS)		R511	1-249-425-11	CARBON	4.7K 5% 1/4W F
△F802	1-533-311-11	FUSE GLASS TUBE 8.0A 125V (MY,SP,AUS,E,CH)		R512	1-249-429-11	CARBON	10K 5% 1/4W
				R518	1-249-435-11	CARBON	33K 5% 1/4W
							(AEP,EE,CIS)
			< IC >	R518	1-249-437-11	CARBON	47K 5% 1/4W
							(EXCEPT AEP,EE,CIS)
				R519	1-249-435-11	CARBON	33K 5% 1/4W
							(AEP,EE,CIS)
				R519	1-249-437-11	CARBON	47K 5% 1/4W
							(EXCEPT AEP,EE,CIS)
				R521	1-249-429-11	CARBON	10K 5% 1/4W
				R523	1-249-421-11	CARBON	2.2K 5% 1/4W F
IC809	8-759-708-05	IC NJM78L05A		R524	1-249-408-11	CARBON	180 5% 1/4W F
IC950	8-759-231-53	IC TA7805S		R525	1-249-408-11	CARBON	180 5% 1/4W F
			< COIL >	R526	1-234-182-11	ENCAPSULATED COMPONENT	
L501	1-420-872-00	COIL, AIR-CORE		R527	1-249-427-11	CARBON	6.8K 5% 1/4W F
L551	1-420-872-00	COIL, AIR-CORE		R528	1-249-419-11	CARBON	1.5K 5% 1/4W F

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和△标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。
--	--	---

Ref. No.	Part No.	Description		Remarks	Ref. No.	Part No.	Description		Remarks
R529	1-249-432-11	CARBON	18K	5% 1/4W (AEP,EE,CIS)	R633	1-249-393-11	CARBON	10	5% 1/4W F
R529	1-249-433-11	CARBON	22K	5% 1/4W (MY,SP,AUS,CH)	R651	1-215-888-00	METAL OXIDE	220	5% 2W F (DE435:US/DE535:US,E)
R529	1-247-866-11	CARBON	30K	5% 1/4W (US,CND,E)	R651	1-215-889-00	METAL OXIDE	330	5% 2W F (AEP,EE,CIS,MY,SP,AU,CH)
R530	1-249-421-11	CARBON	2.2K	5% 1/4W F	R652	1-215-884-11	METAL OXIDE	47	5% 2W F (US,CND,E)
R531	1-249-433-11	CARBON	22K	5% 1/4W	R653	1-216-456-00	METAL OXIDE	820	5% 2W F (EXCEPT AEP,EE,CIS)
R532	1-249-437-11	CARBON	47K	5% 1/4W	R654	1-216-456-00	METAL OXIDE	820	5% 2W F (EXCEPT AEP,EE,CIS)
R533	1-249-393-11	CARBON	10	5% 1/4W F	R655	1-249-441-11	CARBON	100K	5% 1/4W
R534	1-249-389-11	CARBON	4.7	5% 1/4W F	R656	1-249-405-11	CARBON	100	5% 1/4W F
R535	1-249-431-11	CARBON	15K	5% 1/4W	R657	1-249-441-11	CARBON	100K	5% 1/4W
R539	1-249-427-11	CARBON	6.8K	5% 1/4W F	R658	1-249-441-11	CARBON	100K	5% 1/4W
R546	1-249-425-11	CARBON	4.7K	5% 1/4W F	R659	1-215-888-00	METAL OXIDE	220	5% 2W F (DE435:US/DE535:US,E)
R547	1-249-429-11	CARBON	10K	5% 1/4W	R659	1-215-889-00	METAL OXIDE	330	5% 2W F (AEP,EE,CIS,MY,SP,AU,CH)
R557	1-249-431-11	CARBON	15K	5% 1/4W	R660	1-249-425-11	CARBON	4.7K	5% 1/4W F
R560	1-215-868-00	METAL OXIDE	680	5% 1W F	R661	1-249-427-11	CARBON	6.8K	5% 1/4W F
R568	1-249-435-11	CARBON	33K	5% 1/4W (AEP,EE,CIS)	R662	1-249-417-11	CARBON	1K	5% 1/4W F
R568	1-249-437-11	CARBON	47K	5% 1/4W (EXCEPT AEP,EE,CIS)	R801	1-219-591-11	FUSIBLE	0.1	5% 1/2W F
R569	1-249-435-11	CARBON	33K	5% 1/4W (AEP,EE,CIS)	R802	1-219-591-11	FUSIBLE	0.1	5% 1/2W F
R569	1-249-437-11	CARBON	47K	5% 1/4W (EXCEPT AEP,EE,CIS)	R803	1-249-425-11	CARBON	4.7K	5% 1/4W F
R571	1-249-429-11	CARBON	10K	5% 1/4W	R804	1-249-401-11	CARBON	47	5% 1/4W F
R573	1-249-421-11	CARBON	2.2K	5% 1/4W F (EXCEPT E)	R805	1-249-381-11	CARBON	1	5% 1/4W F
R574	1-249-408-11	CARBON	180	5% 1/4W F	R812	1-126-951-11	ELECT	470MF	20% 35V (DE435:US/DE535:US)
R575	1-249-408-11	CARBON	180	5% 1/4W F	RR48	1-249-393-11	CARBON	10	5% 1/4W F (AEP,EE,CIS)
R576	1-234-182-11	ENCAPSULATED COMPONENT			RR49	1-249-393-11	CARBON	10	5% 1/4W F (AEP,EE,CIS)
R577	1-249-427-11	CARBON	6.8K	5% 1/4W F	RR98	1-249-393-11	CARBON	10	5% 1/4W F (AEP,EE,CIS)
R578	1-249-419-11	CARBON	1.5K	5% 1/4W F	RR99	1-249-393-11	CARBON	10	5% 1/4W F (AEP,EE,CIS)
R579	1-249-432-11	CARBON	18K	5% 1/4W (AEP,EE,CIS)					< RELAY >
R579	1-249-433-11	CARBON	22K	5% 1/4W (MY,SP,AUS,CH)	RY501	1-515-920-11	RELAY (24V)		
R579	1-247-866-11	CARBON	30K	5% 1/4W (US,CND,E)	RY502	1-515-920-11	RELAY (24V)		
R580	1-249-421-11	CARBON	2.2K	5% 1/4W F	RY503	1-515-793-11	RELAY		
R581	1-249-433-11	CARBON	22K	5% 1/4W					< SWITCH >
R582	1-249-437-11	CARBON	47K	5% 1/4W	S501	1-771-692-11	SWITCH, SLIDE (IMPEDANCE SELECTOR)		
R583	1-249-393-11	CARBON	10	5% 1/4W F					< TERMINAL >
R584	1-249-389-11	CARBON	4.7	5% 1/4W F	TM501	1-537-922-11	TERMINAL BOARD (SP)		
R585	1-249-431-11	CARBON	15K	5% 1/4W	A-4419-074-A		REAR AMP BOARD, COMPLETE		
R596	1-249-425-11	CARBON	4.7K	5% 1/4W F					*****
R597	1-249-429-11	CARBON	10K	5% 1/4W					*****
R607	1-249-431-11	CARBON	15K	5% 1/4W					*****
R621	1-249-429-11	CARBON	10K	5% 1/4W					*****
R623	1-249-421-11	CARBON	2.2K	5% 1/4W F					*****
R624	1-249-408-11	CARBON	180	5% 1/4W F					*****
R625	1-249-408-11	CARBON	180	5% 1/4W F					(EXCEPT AEP,EE,CIS)
R626	1-234-182-11	ENCAPSULATED COMPONENT							
R627	1-249-427-11	CARBON	6.8K	5% 1/4W F	A-4419-229-A		REAR AMP BOARD, COMPLETE (AEP,EE,CIS)		
R628	1-249-419-11	CARBON	1.5K	5% 1/4W F					*****
R632	1-249-437-11	CARBON	47K	5% 1/4W					< CAPACITOR >
					C720	1-104-664-11	ELECT	47uF	20% 16V
					C721	1-107-597-11	CERAMIC	22PF	10% 500V
					C722	1-107-597-11	CERAMIC	22PF	10% 500V
					C723	1-162-286-31	CERAMIC	220PF	10% 50V
					C725	1-136-157-00	FILM	0.022uF	5% 50V

## REAR AMP

## REAR SPK

Ref. No.	Part No.	Description	Remarks		Ref. No.	Part No.	Description	Remarks		
C770	1-104-664-11	ELECT	47uF	20%	16V	A-4419-218-A	REAR SPK BOARD, COMPLETE	***** (DE435:US,CND/SE491)		
C771	1-107-597-11	CERAMIC	22PF	10%	500V	A-4419-076-A	REAR SPK BOARD, COMPLETE	***** (DE535:US,CND,E)		
C772	1-107-597-11	CERAMIC	22PF	10%	500V	A-4419-207-A	REAR SPK BOARD, COMPLETE	***** (DE535:MY,SP,AUS/V525)		
C773	1-162-286-31	CERAMIC	220PF	10%	50V	A-4419-224-A	REAR SPK BOARD, COMPLETE	***** (DE435:MY,SP,AUS/V424)		
C775	1-136-157-00	FILM	0.022uF	5%	50V	A-4419-230-A	REAR SPK BOARD, COMPLETE (AEP,EE,CIS)	***** EXCEPT DE535:US,CND,E		
< CONNECTOR >										
* CNV712	1-564-241-11	PIN, CONNECTOR (B4P-VH) 4P								
< DIODE >										
D701	8-719-911-19	DIODE 1SS119								
D702	8-719-109-51	DIODE RD2.0ES-B2								
D703	8-719-109-51	DIODE RD2.0ES-B2								
D704	8-719-911-19	DIODE 1SS119								
D751	8-719-911-19	DIODE 1SS119								
D752	8-719-109-51	DIODE RD2.0ES-B2								
D753	8-719-109-51	DIODE RD2.0ES-B2								
D754	8-719-911-19	DIODE 1SS119								
< TRANSISTOR >										
Q704	8-729-119-76	TRANSISTOR 2SA1175-HFE								
Q708	8-729-140-82	TRANSISTOR 2SA988-PAFAEA								
Q754	8-729-119-76	TRANSISTOR 2SA1175-HFE								
Q758	8-729-140-82	TRANSISTOR 2SA988-PAFAEA								
< RESISTOR >										
R707	1-249-431-11	CARBON	15K	5%	1/4W	D605	8-719-911-19	DIODE 1SS119		
R722	1-249-429-11	CARBON	10K	5%	1/4W	D606	8-719-911-19	DIODE 1SS119		
R723	1-249-421-11	CARBON	2.2K	5%	1/4W F	D607	8-719-911-19	DIODE 1SS119		
△ R724	1-249-408-11	CARBON	180	5%	1/4W F	D646	8-719-911-19	DIODE 1SS119		
△ R725	1-249-408-11	CARBON	180	5%	1/4W F	D696	8-719-911-19	DIODE 1SS119		
△ R726	1-234-182-11	ENCAPSULATED COMPONENT								
R727	1-249-427-11	CARBON	6.8K	5%	1/4W F	D705	8-719-911-19	DIODE 1SS119		
R728	1-249-419-11	CARBON	1.5K	5%	1/4W F	D707	8-719-911-19	DIODE 1SS119		
R732	1-249-437-11	CARBON	47K	5%	1/4W	D746	8-719-911-19	DIODE 1SS119		
△ R733	1-249-393-11	CARBON	10	5%	1/4W F					
R757	1-249-431-11	CARBON	15K	5%	1/4W					
R772	1-249-429-11	CARBON	10K	5%	1/4W					
R773	1-249-421-11	CARBON	2.2K	5%	1/4W F					
△ R774	1-249-408-11	CARBON	180	5%	1/4W F					
△ R775	1-249-408-11	CARBON	180	5%	1/4W F	J651	1-770-377-21	JACK, PIN 1P (DE435/SE491/V424)		
△ R776	1-234-182-11	ENCAPSULATED COMPONENT								
R777	1-249-427-11	CARBON	6.8K	5%	1/4W F	J651	1-770-157-21	JACK, PIN 2P (DE535/V525)		
R778	1-249-419-11	CARBON	1.5K	5%	1/4W F					
R782	1-249-437-11	CARBON	47K	5%	1/4W	L601	1-420-872-00	COIL, AIR-CORE		
△ R783	1-249-393-11	CARBON	10	5%	1/4W F	L701	1-420-872-00	COIL, AIR-CORE		
*****										
< DIODE >										
< TRANSISTOR >										
< JACK >										
< COIL >										
< TRANSISTOR >										
*****										
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.										
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.										
以阴影和 △ 标志来识别的零 部件，在安全方面具有关键 性，因此只能以规定号码的 零部件来更换。										

**REAR SPK**

## **SPK SELECT**

## STANDBY

The components identified by mark  or dotted line with mark  are critical for safety.  
Replace only with part number specified.

Les composants identifiés par une marque  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和△标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

# SURR

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
		< IC >		C284	1-162-215-31	CERAMIC	47PF 5% 50V (DE435/DE535/V424/V525)
IC901	8-759-333-83	IC NJM2103D		C285	1-104-664-11	ELECT	47uF 20% 16V (DE435/DE535/V424/V525)
		<TRANSISTOR >		C287	1-164-159-11	CERAMIC	0.1uF 50V (DE435/DE535/V424/V525)
Q901	8-729-119-79	TRANSISTOR 2SC2785-FEK		C289	1-164-159-11	CERAMIC	0.1uF 50V (DE435/DE535/V424/V525)
Q902	8-729-026-68	TRANSISTOR 2SD2525 (TP)		C290	1-104-664-11	ELECT	47uF 20% 16V (DE435/DE535/V424/V525)
		< RESISTOR >		C291	1-126-960-11	ELECT	1uF 20% 50V (DE435/DE535/V424/V525)
R901	1-202-725-00	SOLID	3.3M 10% 1/2W (US,CND)	C301	1-124-250-11	ELECT	0.15uF 20% 50V
R902	1-249-429-11	CARBON	10K 5% 1/4W	C302	1-126-962-11	ELECT	3.3uF 20% 50V
R903	1-249-425-11	CARBON	4.7K 5% 1/4W F	C303	1-124-250-11	ELECT	0.15uF 20% 50V
R904	1-249-421-11	CARBON	2.2K 5% 1/4W F	C304	1-126-963-11	ELECT	4.7uF 20% 50V
R905	1-249-428-11	CARBON	8.2K 5% 1/4W F	C305	1-126-959-11	ELECT	0.47uF 20% 50V
R906	1-249-421-11	CARBON	2.2K 5% 1/4W F	C306	1-126-963-11	ELECT	4.7uF 20% 50V
R908	1-249-433-11	CARBON	22K 5% 1/4W	C307	1-126-959-11	ELECT	0.47uF 20% 50V
R909	1-249-437-11	CARBON	47K 5% 1/4W	C308	1-136-165-00	FILM	0.1uF 5% 50V
R910	1-249-429-11	CARBON	10K 5% 1/4W	C309	1-136-165-00	FILM	0.1uF 5% 50V
R912	1-247-843-11	CARBON	3.3K 5% 1/4W	C310	1-136-177-00	FILM	1uF 5% 50V
		< RELAY >		C311	1-126-963-11	ELECT	4.7uF 20% 50V
△RY01	1-755-298-11	RELAY (EXCEPT DE435:US,CND)		C312	1-126-963-11	ELECT	4.7uF 20% 50V
△RY01	1-515-999-11	RELAY, POWER (DE435:US,CND)		C313	1-126-925-11	ELECT	470uF 20% 10V
		< TRANSFORMER >		C314	1-126-964-11	ELECT	10uF 20% 50V
△T902	1-433-687-11	TRANSFORMER, POWER (AEP,EE,CIS,AUS,E)		C315	1-126-964-11	ELECT	10uF 20% 50V
△T902	1-433-685-11	TRANSFORMER, POWER (MY,SPCH)		C316	1-126-964-11	ELECT	10uF 20% 50V
△T902	1-433-686-11	TRANSFORMER, POWER (US,CND)		C317	1-126-964-11	ELECT	10uF 20% 50V
		*****		C318	1-126-925-11	ELECT	470uF 20% 10V
		A-4419-083-A SURR BOARD, COMPLETE (DE535/V525)	*****	C319	1-136-161-00	FILM	0.047uF 5% 50V
		*****		C320	1-136-157-00	FILM	0.022uF 5% 50V
		A-4419-203-A SURR BOARD, COMPLETE (SE491)	*****	C321	1-130-469-00	MYLAR	680PF 5% 50V
		*****		C322	1-126-959-11	ELECT	0.47uF 20% 50V
		(EXCEPT AEP,EE,CIS/DE535/SE491/V525)		C323	1-164-159-11	CERAMIC	0.1uF 50V
		A-4419-221-A SURR BOARD, COMPLETE	*****	C324	1-126-925-11	ELECT	470uF 20% 10V
		*****		C325	1-126-964-11	ELECT	10uF 20% 50V
		A-4419-234-A SURR BOARD, COMPLETE (AEP,EE,CIS)	*****	C326	1-136-177-00	FILM	1uF 5% 50V
		*****		C327	1-136-165-00	FILM	0.1uF 5% 50V
		< CAPACITOR >		C328	1-136-165-00	FILM	0.1uF 5% 50V
C219	1-126-964-11	ELECT	10uF 20% 50V	C329	1-126-959-11	ELECT	0.47uF 20% 50V
C221	1-126-964-11	ELECT	10uF 20% 50V	C330	1-126-963-11	ELECT	4.7uF 20% 50V
C223	1-126-964-11	ELECT	10uF 20% 50V	C331	1-126-959-11	ELECT	0.47uF 20% 50V
C225	1-126-964-11	ELECT	10uF 20% 50V	C332	1-126-963-11	ELECT	4.7uF 20% 50V
C269	1-126-964-11	ELECT	10uF 20% 50V	C333	1-124-250-11	ELECT	0.15uF 20% 50V
C271	1-126-964-11	ELECT	10uF 20% 50V	C334	1-126-962-11	ELECT	3.3uF 20% 50V
C280	1-126-960-11	ELECT	1uF 20% 50V (DE435/DE535/V424/V525)	C335	1-124-250-11	ELECT	0.15uF 20% 50V
C281	1-126-960-11	ELECT	1uF 20% 50V (DE435/DE535/V424/V525)	C337	1-136-165-00	FILM	0.1uF 5% 50V
C282	1-126-960-11	ELECT	1uF 20% 50V (DE435/DE535/V424/V525)	C338	1-136-177-00	FILM	1uF 5% 50V
C283	1-162-215-31	CERAMIC	47PF 5% 50V (DE435/DE535/V424/V525)	C339	1-126-959-11	ELECT	0.47uF 20% 50V
				C340	1-126-925-11	ELECT	470uF 20% 10V
				C341	1-164-159-11	CERAMIC	0.1uF 50V
				C342	1-136-165-00	FILM	0.1uF 5% 50V
				C343	1-137-358-11	FILM	0.0001uF 5% 50V
				C344	1-126-934-11	ELECT	220uF 20% 10V
				C345	1-126-964-11	ELECT	10uF 20% 50V

The components identified by mark △ or dotted line with mark △ are critical for safety.  
Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和△标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description		Remarks
C346	1-126-964-11	ELECT	10uF	20%	50V	C467	1-162-199-31	CERAMIC	10PF	5% 50V
C347	1-126-964-11	ELECT	10uF	20%	50V	C468	1-126-965-11	ELECT	22uF	20% 50V
C348	1-126-964-11	ELECT	10uF	20%	50V	C469	1-162-199-31	CERAMIC	10PF	5% 50V
C349	1-137-358-11	FILM	0.0001uF	5%	50V	C470	1-126-965-11	ELECT	22uF	20% 50V
C350	1-126-961-11	ELECT	2.2uF	20%	50V					
C351	1-164-159-11	CERAMIC	0.1uF		50V					< CONNECTOR >
C352	1-124-252-00	ELECT	0.33uF	20%	50V	CNS201	1-569-932-11	SOCKET, CONNECTOR 15P		
C353	1-136-177-00	FILM	1uF	5%	50V	* CNS203	1-569-932-11	SOCKET, CONNECTOR 15P		
C354	1-136-165-00	FILM	0.1uF	5%	50V					(DE435:US,CND/DE535/V525)
C355	1-136-164-00	FILM	0.082uF	5%	50V	CNS203	1-569-930-11	SOCKET, CONNECTOR 13P		
C356	1-130-477-00	MYLAR	0.0033uF	5%	50V					(DE435:EXCEPT US,CND/SE491/V424)
C357	1-136-164-00	FILM	0.082uF	5%	50V	CNS403	1-569-928-11	SOCKET, CONNECTOR 11P		
C358	1-126-925-11	ELECT	470uF	20%	10V					
C359	1-102-953-00	CERAMIC	18PF	5%	50V					< DIODE >
C360	1-102-518-11	CERAMIC	33PF	5%	50V	D401	8-719-911-19	DIODE 1SS119		
C361	1-102-973-00	CERAMIC	100PF	5%	50V	D402	8-719-911-19	DIODE 1SS119		
C362	1-102-852-91	CERAMIC	47PF	5%	50V	D403	8-719-911-19	DIODE 1SS119		
C363	1-102-951-00	CERAMIC	15PF	5%	50V	D404	8-719-911-19	DIODE 1SS119		
C364	1-136-165-00	FILM	0.1uF	5%	50V	D405	8-719-911-19	DIODE 1SS119		
C365	1-164-159-11	CERAMIC	0.1uF		50V	D406	8-719-911-19	DIODE 1SS119		
C366	1-126-956-91	ELECT	0.1uF	20%	50V	D407	8-719-911-19	DIODE 1SS119		
C367	1-162-282-31	CERAMIC	100PF	10%	50V	D408	8-719-911-19	DIODE 1SS119		
C368	1-137-358-11	FILM	0.0001uF	5%	50V	SVC300	8-719-070-77	DIODE SVC201SPA-M1-AC		
C401	1-126-966-11	ELECT	33uF	20%	50V					< IC >
C402	1-102-508-91	CERAMIC	10PF	0.5PF	50V					
C403	1-126-966-11	ELECT	33uF	20%	50V	IC280	8-759-700-65	IC NJM79L05A (DE435/DE535/V424/V525)		
C404	1-162-282-31	CERAMIC	100PF	10%	50V	IC281	8-759-333-84	IC NJM2279D (DE435/DE535/V424/V525)		
C405	1-136-157-00	FILM	0.022uF	5%	50V	IC301	8-759-528-35	IC CXA8079S		
C406	1-130-476-00	MYLAR	0.0027uF	5%	50V	IC302	8-759-579-62	IC LV1018		
C407	1-110-335-11	MYLAR	100PF	5%	50V	IC303	8-759-604-38	IC M5F78M10 (EXCEPT AEP,EE,CIS)		
C408	1-136-495-11	FILM	0.068uF	5%	50V	IC400	8-759-636-74	IC M5218AP-22		
C409	1-136-153-00	FILM	0.01uF	5%	50V	IC401	8-759-462-99	IC TC9184P		
C410	1-126-933-11	ELECT	100uF	20%	16V	IC402	8-759-636-74	IC M5218AP-22		
C411	1-136-171-00	FILM	0.33uF	5%	50V	IC403	8-759-636-74	IC M5218AP-22		
C412	1-136-159-00	FILM	0.033uF	5%	50V					< JACK >
C413	1-164-159-11	CERAMIC	0.1uF		50V	J204	1-779-380-11	JACK, PIN 6P		
C414	1-164-159-11	CERAMIC	0.1uF		50V	J280	1-770-336-11	JACK, PIN 2P (DE435/DE535/V424/V525)		
C417	1-162-199-31	CERAMIC	10PF	5%	50V	J281	1-774-821-11	JACK, PIN 3P (DE435/DE535/V424/V525)		
C418	1-126-965-11	ELECT	22uF	20%	50V	J283	1-563-330-11	JACK (DE535/V525)		
C419	1-162-199-31	CERAMIC	10pF	5%	50V					
C420	1-126-965-11	ELECT	22uF	20%	50V					< COIL >
C421	1-164-159-11	CERAMIC	0.1uF		50V	L300	1-410-509-11	INDUCTOR 10uH		
C422	1-164-159-11	CERAMIC	0.1uF		50V	L301	1-410-509-11	INDUCTOR 10uH		
C423	1-164-159-11	CERAMIC	0.1uF		50V					< TRANSISTOR >
C424	1-164-159-11	CERAMIC	0.1uF		50V	C440	1-164-159-11	CERAMIC	0.1uF	
C441	1-164-159-11	CERAMIC	0.1uF		50V	Q401	8-729-202-67	TRANSISTOR 2SK246-GR3		
C450	1-126-965-11	ELECT	22uF	20%	50V	Q402	8-729-141-30	TRANSISTOR 2SC3623A-LK		
C451	1-126-966-11	ELECT	33uF	20%	50V	Q403	8-729-119-79	TRANSISTOR 2SC2785-FEK		
C452	1-102-508-91	CERAMIC	10PF	0.5PF	50V	Q404	8-729-141-30	TRANSISTOR 2SC3623A-LK		
C453	1-126-966-11	ELECT	33uF	20%	50V	Q405	8-729-141-30	TRANSISTOR 2SC3623A-LK		
C455	1-136-157-00	FILM	0.022uF	5%	50V	Q406	8-729-141-30	TRANSISTOR 2SC3623A-LK		
C456	1-130-476-00	MYLAR	0.0027uF	5%	50V	Q407	8-729-141-30	TRANSISTOR 2SC3623A-LK		
C457	1-110-335-11	MYLAR	100PF	5%	50V	Q408	8-729-141-30	TRANSISTOR 2SC3623A-LK		
C458	1-136-495-11	FILM	0.068uF	5%	50V	Q409	8-729-141-30	TRANSISTOR 2SC3623A-LK		
C459	1-136-153-00	FILM	0.01uF	5%	50V	Q421	8-729-900-36	DTC124ES		
C460	1-126-933-11	ELECT	100uF	20%	16V	Q422	8-729-900-63	DTA124ES		
C461	1-136-171-00	FILM	0.33uF	5%	50V	Q451	8-729-202-67	TRANSISTOR 2SK246-GR3		
C462	1-136-159-00	FILM	0.033uF	5%	50V	Q452	8-729-141-30	TRANSISTOR 2SC3623A-LK		

**SURR**

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			<u>Remarks</u>		<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			<u>Remarks</u>		
< RESISTOR >														
R219	1-249-417-11	CARBON	1K	5%	1/4W	F	R428	1-249-441-11	CARBON	100K	5%	1/4W		
R220	1-249-441-11	CARBON	100K	5%	1/4W		R430	1-249-441-11	CARBON	100K	5%	1/4W		
R221	1-249-417-11	CARBON	1K	5%	1/4W	F	R431	1-249-429-11	CARBON	10K	5%	1/4W		
R222	1-249-441-11	CARBON	100K	5%	1/4W		R432	1-249-433-11	CARBON	22K	5%	1/4W		
R223	1-249-417-11	CARBON	1K	5%	1/4W	F	R433	1-249-429-11	CARBON	10K	5%	1/4W		
R224	1-249-441-11	CARBON	100K	5%	1/4W		R434	1-249-441-11	CARBON	100K	5%	1/4W		
R225	1-249-417-11	CARBON	1K	5%	1/4W	F	R435	1-249-429-11	CARBON	10K	5%	1/4W		
R226	1-249-441-11	CARBON	100K	5%	1/4W		R436	1-249-433-11	CARBON	22K	5%	1/4W		
R269	1-249-417-11	CARBON	1K	5%	1/4W		R437	1-249-429-11	CARBON	10K	5%	1/4W		
R270	1-249-441-11	CARBON	100K	5%	1/4W		R438	1-249-425-11	CARBON	4.7K	5%	1/4W	F	
R271	1-249-417-11	CARBON	1K	5%	1/4W	F	R439	1-249-429-11	CARBON	10K	5%	1/4W		
R272	1-249-441-11	CARBON	100K	5%	1/4W		R440	1-249-441-11	CARBON	100K	5%	1/4W		
R280	1-247-804-11	CARBON	75	5%	1/4W		R445	1-249-417-11	CARBON	1K	5%	1/4W	F	
			(DE435/DE535/V424/V525)				R446	1-249-429-11	CARBON	10K	5%	1/4W		
R281	1-247-804-11	CARBON	75	5%	1/4W		R447	1-249-441-11	CARBON	100K	5%	1/4W		
			(DE435/DE535/V424/V525)				R450	1-247-852-11	CARBON	7.5K	5%	1/4W		
R282	1-247-804-11	CARBON	75	5%	1/4W		R451	1-249-429-11	CARBON	10K	5%	1/4W		
			(DE435/DE535/V424/V525)				R452	1-249-440-11	CARBON	82K	5%	1/4W		
R283	1-247-804-11	CARBON	75	5%	1/4W		R453	1-247-895-00	CARBON	470K	5%	1/4W		
			(DE435/DE535/V424/V525)				R454	1-249-429-11	CARBON	10K	5%	1/4W		
R284	1-247-804-11	CARBON	75	5%	1/4W		R455	1-249-418-11	CARBON	1.2K	5%	1/4W	F	
			(DE435/DE535/V424/V525)				R456	1-249-426-11	CARBON	5.6K	5%	1/4W		
R311	1-249-441-11	CARBON	100K	5%	1/4W		R457	1-249-434-11	CARBON	27K	5%	1/4W		
R312	1-249-441-11	CARBON	100K	5%	1/4W		R458	1-249-441-11	CARBON	100K	5%	1/4W		
R313	1-249-439-11	CARBON	68K	5%	1/4W		R459	1-249-426-11	CARBON	5.6K	5%	1/4W		
R314	1-249-441-11	CARBON	100K	5%	1/4W		R460	1-249-426-11	CARBON	5.6K	5%	1/4W		
R315	1-249-436-11	CARBON	39K	5%	1/4W		R461	1-247-843-11	CARBON	3.3K	5%	1/4W		
R351	1-249-436-11	CARBON	39K	5%	1/4W		R462	1-249-421-11	CARBON	2.2K	5%	1/4W	F	
R400	1-247-852-11	CARBON	7.5K	5%	1/4W		R463	1-247-903-00	CARBON	1M	5%	1/4W		
R401	1-249-429-11	CARBON	10K	5%	1/4W		R464	1-249-441-11	CARBON	100K	5%	1/4W		
R402	1-249-440-11	CARBON	82K	5%	1/4W		R465	1-247-843-11	CARBON	3.3K	5%	1/4W		
R403	1-247-895-00	CARBON	470K	5%	1/4W		R466	1-247-883-00	CARBON	150K	5%	1/4W		
R404	1-249-429-11	CARBON	10K	5%	1/4W		R467	1-249-413-11	CARBON	470	5%	1/4W	F	
R405	1-249-418-11	CARBON	1.2K	5%	1/4W	F	R468	1-249-427-11	CARBON	6.8K	5%	1/4W	F	
R406	1-249-426-11	CARBON	5.6K	5%	1/4W		R480	1-249-441-11	CARBON	100K	5%	1/4W		
R407	1-249-434-11	CARBON	27K	5%	1/4W		R481	1-249-429-11	CARBON	10K	5%	1/4W		
R408	1-249-441-11	CARBON	100K	5%	1/4W		R482	1-249-433-11	CARBON	22K	5%	1/4W		
R409	1-249-426-11	CARBON	5.6K	5%	1/4W		R483	1-249-429-11	CARBON	10K	5%	1/4W		
R410	1-249-426-11	CARBON	5.6K	5%	1/4W		R484	1-249-418-11	CARBON	1.2K	5%	1/4W	F	
R411	1-247-843-11	CARBON	3.3K	5%	1/4W		R485	1-249-417-11	CARBON	1K	5%	1/4W	F	
R412	1-249-421-11	CARBON	2.2K	5%	1/4W	F	R486	1-249-429-11	CARBON	10K	5%	1/4W		
R413	1-247-903-00	CARBON	1M	5%	1/4W		R487	1-249-418-11	CARBON	1.2K	5%	1/4W	F	
R414	1-249-441-11	CARBON	100K	5%	1/4W		R488	1-249-417-11	CARBON	1K	5%	1/4W	F	
R415	1-247-843-11	CARBON	3.3K	5%	1/4W		R489	1-249-429-11	CARBON	10K	5%	1/4W		
R416	1-247-883-00	CARBON	150K	5%	1/4W		R490	1-249-418-11	CARBON	1.2K	5%	1/4W	F	
R417	1-249-413-11	CARBON	470	5%	1/4W	F	R491	1-249-417-11	CARBON	1K	5%	1/4W	F	
R418	1-249-427-11	CARBON	6.8K	5%	1/4W	F	R492	1-249-429-11	CARBON	10K	5%	1/4W		
R419	1-247-903-00	CARBON	1M	5%	1/4W		R493	1-249-418-11	CARBON	1.2K	5%	1/4W	F	
R420	1-249-441-11	CARBON	100K	5%	1/4W		R494	1-249-417-11	CARBON	1K	5%	1/4W	F	
R422	1-249-429-11	CARBON	10K	5%	1/4W		R497	1-249-441-11	CARBON	100K	5%	1/4W		
< RELAY >														
R423	1-249-418-11	CARBON	1.2K	5%	1/4W	F	RY401	1-515-614-11	RELAY	*****				
R424	1-249-417-11	CARBON	1K	5%	1/4W	F				*****				
R425	1-249-441-11	CARBON	100K	5%	1/4W					*****				
R426	1-249-418-11	CARBON	1.2K	5%	1/4W	F				*****				
R427	1-249-417-11	CARBON	1K	5%	1/4W	F				*****				

VOL

VOLTAGE SELECTOR

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks
	A-4419-075-A	VOL BOARD, COMPLETE *****				Q755	8-729-209-15	TRANSISTOR 2SD2012	
		< CAPACITOR >				Q756	8-749-010-25	IC MN2488-OPY-M	
C090	1-126-960-11	ELECT	1uF	20%	50V	Q757	8-749-010-26	IC MP1620-OPY-M	
C091	1-126-960-11	ELECT	1uF	20%	50V	△T901	1-433-679-11	TRANSFORMER, POWER (DE435:CND/DE535:CND)	
		< CONNECTOR >				△T901	1-433-680-11	TRANSFORMER, POWER (DE435:US/DE535:US)	
CNP105	1-770-388-11	PIN, CONNECTOR (PC BOARD) 4P				△T901	1-433-680-21	TRANSFORMER, POWER (SE491)	
CNP401	1-770-389-11	PIN, CONNECTOR (PC BOARD) 5P				△T901	1-433-681-11	TRANSFORMER, POWER (DE435:AEP,EE,CIS)	
CNS402	1-569-904-11	SOCKET, CONNECTOR 9P				△T901	1-433-682-11	TRANSFORMER, POWER (DE435:AUS/DE535:AUS)	
CNS404	1-569-906-11	SOCKET, CONNECTOR 11P				△T901	1-433-683-11	TRANSFORMER, POWER (DE435:MY,SP/DE535:MY,SP/V424/V525)	
		< VARIABLE RESISTOR >				△T901	1-433-684-11	TRANSFORMER, POWER (DE535:E)	
RV401	1-225-776-11	RES, VAR, CARBON 100K/100K × 5 (MASTER VOLUME)				*****			
						ACCESSORIES & PACKING MATERIALS			
						*****			
	1-672-996-11	VOLTAGE SELECTOR BOARD (DE535:E) *****				1-418-293-11		REMOTE COMMANDER (RM-LJ302) (DE535/V525)	
1-533-399-31		HOLDER, FUSE				1-501-374-11		ANTENNA LOOP	
		< CONNECTOR >				1-501-594-11		ANTENNA (FM) (EXCEPT US,CND)	
* CNP906	1-566-664-11	PIN, CONNECTOR 4P				3-866-247-11		MANUAL,INSTRUCTION (ENGLISH) (US)	
		< SWITCH >				3-866-247-21		MANUAL,INSTRUCTION (FRENCH) (CND,MY,SP,E,AUS)	
△S901	1-571-437-11	SWITCH POWER VOLTAGE CHANGE				3-866-247-31		MANUAL,INSTRUCTION (ENGLISH,CHINESE) (CH)	
						3-866-247-41		MANUAL,INSTRUCTION (SWEDISH,SPANISH,ITALIAN,PORTUGUESE) (AEP)	
		MISCELLANEOUS	*****			3-866-247-51		MANUAL,INSTRUCTION (ENGLISH,FRENCH,DUTCH,GERMAN) (AEP)	
27	1-769-991-11	WIRE (FLAT TYPE) (13 CORE) (DE435,SE491,V424)				3-866-247-61		MANUAL,INSTRUCTION (ENGLISH,RUSSIAN,POLISH) (EE,CIS)	
27	1-773-024-11	WIRE (FLAT TYPE) (15 CORE)(DE535/V525)				3-866-295-11		MANUAL,INSTRUCTION (RM-LJ302) (FRENCH,SPANISH) (DE535:CND,E)	
28	1-773-012-11	WIRE (FLAT TYPE) (15 CORE)				3-866-295-31		MANUAL,INSTRUCTION (RM-LJ302)(CHINESE) (DE535:MY,SP/V525)	
62	1-769-937-11	WIRE (FLAT TYPE) (11 CORE)				3-866-296-11		MANUAL,INSTRUCTION (RM-PP402) (ENGLISH) (DE435/SE491/V424)	
△65	1-696-847-11	CORD, POWER (DE435:AUS/DE535:AUS)				3-866-296-21		MANUAL,INSTRUCTION (RM-PP402) (FRENCH,SPANISH) (DE435:CND/AEP)	
△65	1-777-070-21	CORD, POWER (DE435:CND/DE535:CND)				3-866-296-31		MANUAL,INSTRUCTION (RM-PP402)(CHINESE) (DE435:MY,SP/V424)	
△65	1-777-071-21	CORD, POWER (DE435:AEP,EE,CIS,MY,SP/DE535:E,MY,SP)				3-866-296-41		MANUAL,INSTRUCTION (RM-PP402) (DUTCH,SWEDISH,GERMAN,ITALIAN,PORTUGUESE) (DE435:AEP)	
△65	1-783-205-11	CORD, POWER (V424/V525)				3-866-296-51		MANUAL,INSTRUCTION (RM-PP402) (DANISH,FINNISH) (DE435:AEP)	
△65	1-783-820-11	CORD, POWER (DE435:US/DE535:US/SE491)				3-866-296-61		MANUAL,INSTRUCTION (RM-PP402) (POLISH,RUSSIAN) (DE435:EE,CIS)	
69	1-773-008-11	WIRE (FLAT TYPE) (15 CORE)				3-866-296-71		MANUAL,INSTRUCTION (RM-PP402) (CZECH) (DE435:EE,CIS)	
70	1-769-942-11	WIRE (FLAT TYPE) (11 CORE)				3-866-419-11		MANUAL (RECV.HOOK-UP)(EXCEPT SE491)	
71	1-769-909-11	WIRE (FLAT TYPE) (9 CORE)				3-866-670-11		MANUAL,COMMONNESS INSTRUCTION	
73	1-693-407-62	TUNER (DE435:US,CND/DE535:US,CND,E/SE491)							
73	1-693-408-41	TUNER (DE435:AEP,MY,SP,AUS/DE535:MY,SP,AUS/V424/V525)							
73	1-693-411-43	TUNER (DE435:EE,CIS)							
74	1-773-004-11	WIRE (FLAT TYPE) (15 CORE)							
△78	1-569-008-21	ADAPTOR, CONVERSION 2P (DE535: E)							
Q705	8-729-209-15	TRANSISTOR 2SD2012							
Q706	8-749-010-25	IC MN2488-OPY-M							
Q707	8-749-010-26	IC MP1620-OPY-M							

The components identified by mark △ or dotted line with mark △ are critical for safety.  
Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和 △ 标志来识别的零  
部件、在安全方面具有关键  
性，因此只能以规定号码的  
零部件来更换。

# STR-DE435/DE535/SE491/V424/V525

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>
		(ENGLISH) (DE535:US,AUS)	
3-866-670-21		MANUAL,COMMONNESS INSTRUCTION (ENGLISH,FRENCH,GERMAN,SPANISH,DUTCH) (DE535:CND,E,MY,SP)	
3-866-670-41		MANUAL,COMMONNESS INSTRUCTION (ENGLISH,ARABIC,CHINESE)(V525)	
4-981-643-11		COVER,BATTERY (FOR RM-JL302)	(DE535/V525)
4-978-977-01		COVER BATTERY(FOR RM-PP402)	(DE435,SE491,V424)
8-917-666-90		REMOTE COMMANDER(RM-PP402)	(DE435,SE491,V424)

\*\*\*\*\*

## \*\*\*\*\* HARDWARE LIST \*\*\*\*\*

- #1 7-685-646-79 SCREW +BVTP 3 × 8 TYPE2 TT(B)  
#2 7-685-881-09 SCREW +BVTT 4 × 8 (S)

**MEMO**

## REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.