

TEAC TECHNICAL INFORMATION

9513

TASCAM CD-701, Open/Close Button


8th September 1995

This information is a revised edition of Technical Information No. 9105.

In order to improve durability, make of the Open/Close Button has been changed on the products serial numbered 400001 and up.

Drawing below shows how to mount the new Open/Close Button.

- 1 Cut off former button from Panel, Front (Ref 1-21).
- 2 Assemble new button and put it between Panel, Front(Ref 1-21) and Panel, Dress(Ref 1-29).

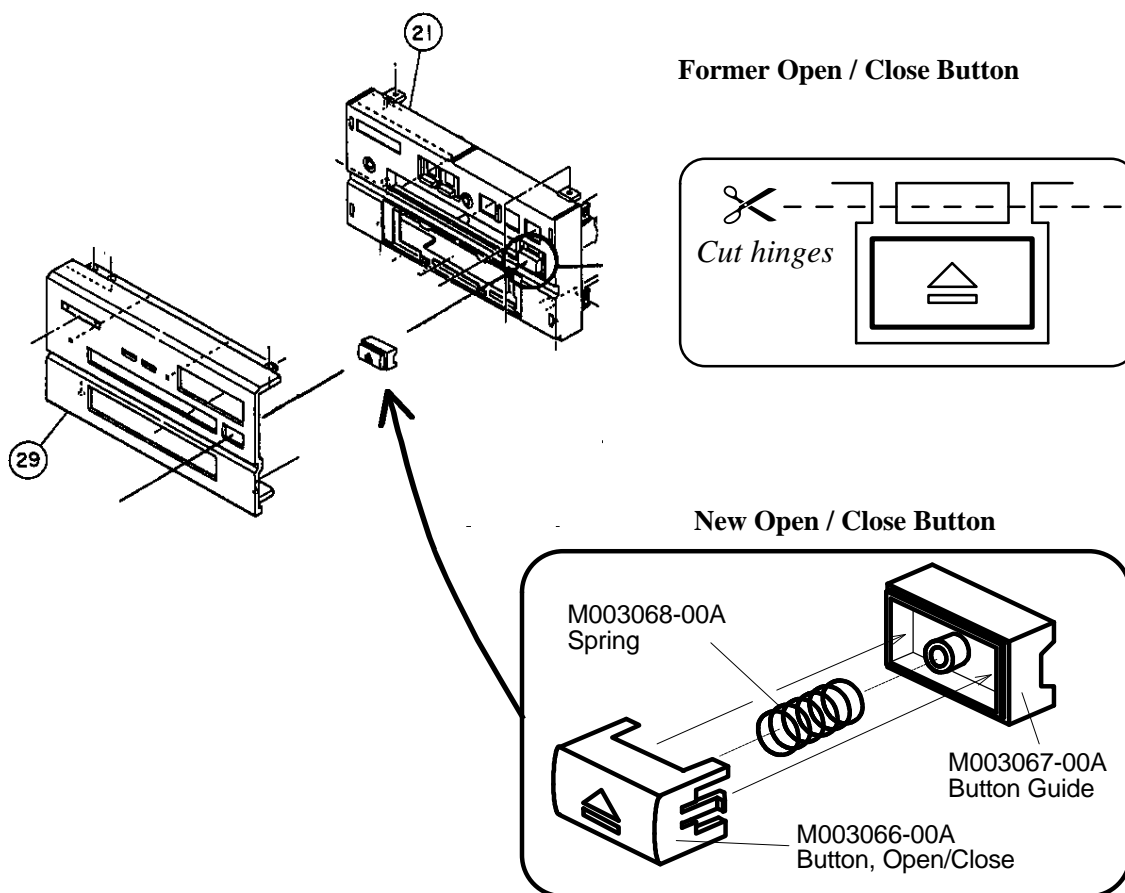

Parts Required

Part Number	Description
M003066-00A	Button, Open/Close
M003067-00A	Button Guide
M003068-00A	Spring