

TEAC

SCHEMATIC DIAGRAMS

AG-H600 Series

CONTENTS


Wiring Diagram	2
Block Diagram	3
Level Diagram	4
MAIN PCB (1/5) Input & Output	5
MAIN PCB (2/5) Selector	6
MAIN PCB (3/5) Control	7
MAIN PCB (4/5) Power Amp	8
MAIN PCB (5/5) AC Input	9
CPU (FRONT) PCB	10
HP PCB, AMP PWR PCB, POWER SW PCB, F/W-UP PCB	11

AG-H600/AG-H600NT/AG-H600DNT

Stereo Receiver

1 st Issue; July 2009

TEAC WIRING DIAGRAM AG-H600 Series

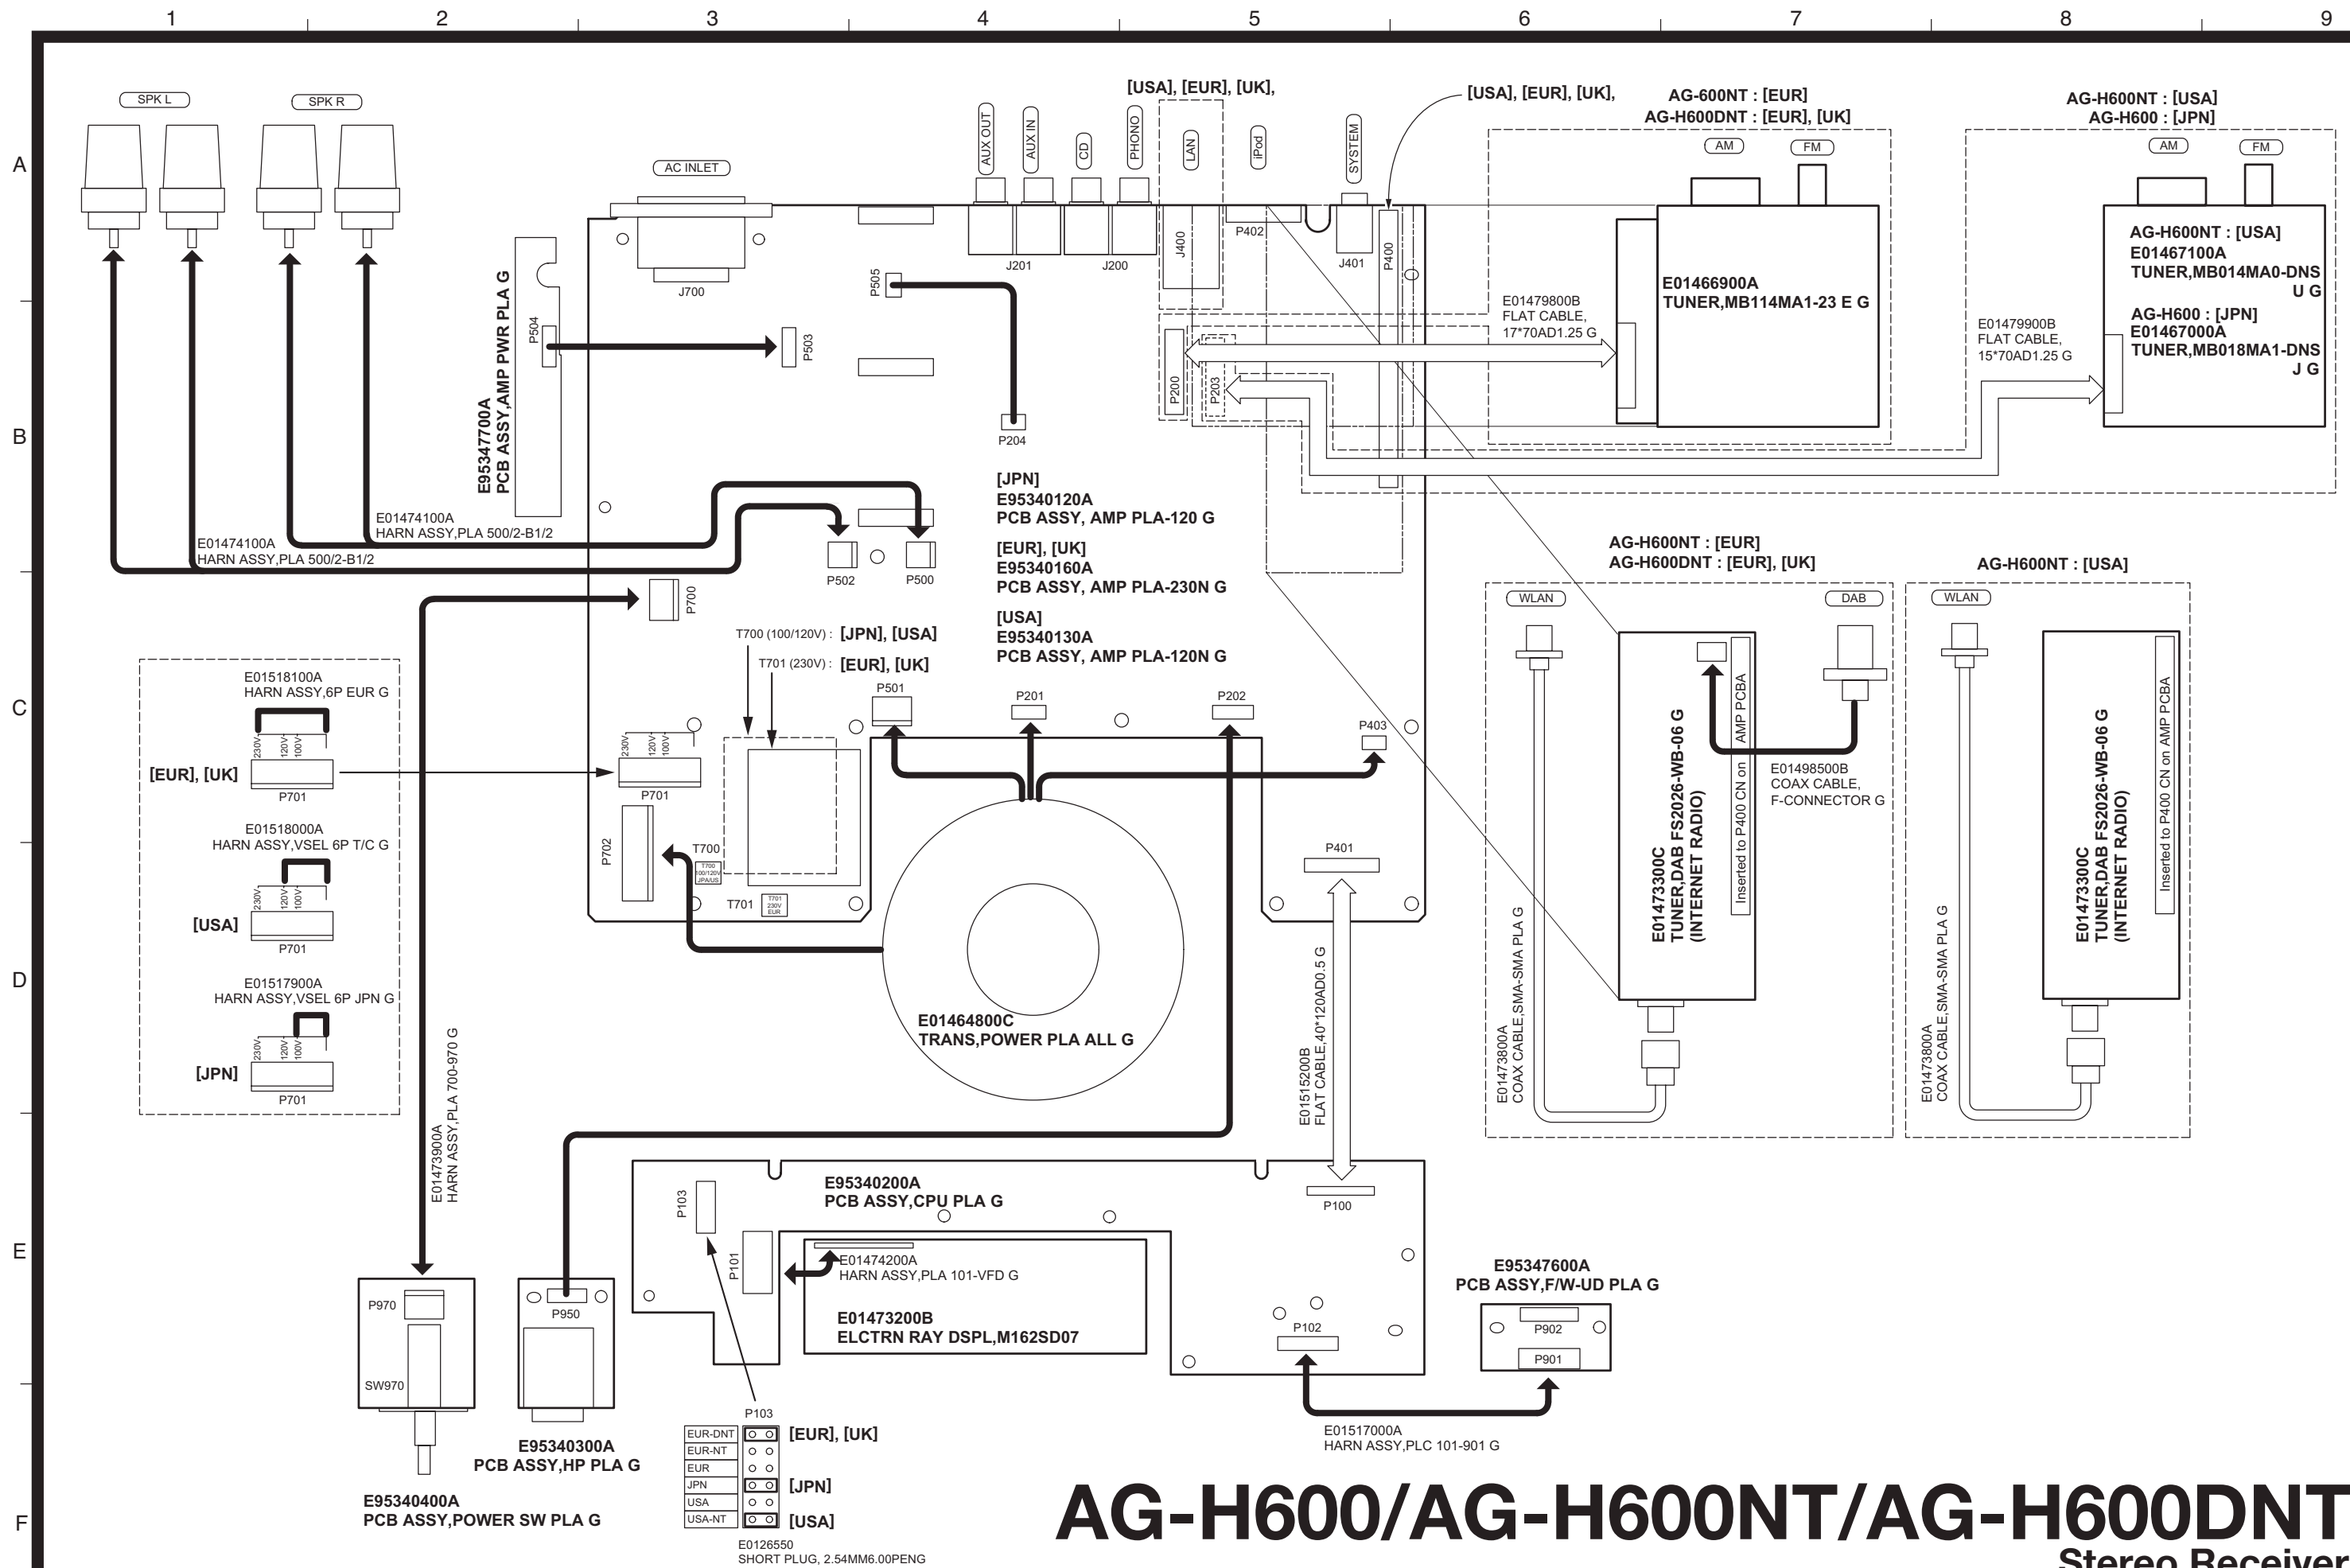


AG-H600/AG-H600NT/AG-H600DNT Stereo Receiver

1st Issue; July 2009

EUR-DNT	<input checked="" type="checkbox"/>	[EUR], [UK]
EUR-NT	<input type="checkbox"/>	
EUR	<input type="checkbox"/>	
JPN	<input checked="" type="checkbox"/>	[JPN]
USA	<input type="checkbox"/>	
USA-NT	<input checked="" type="checkbox"/>	[USA]

E0126550
SHORT PLUG, 2.54MM6.00PENG


TEAC BLOCK DIAGRAM AG-H600 Series

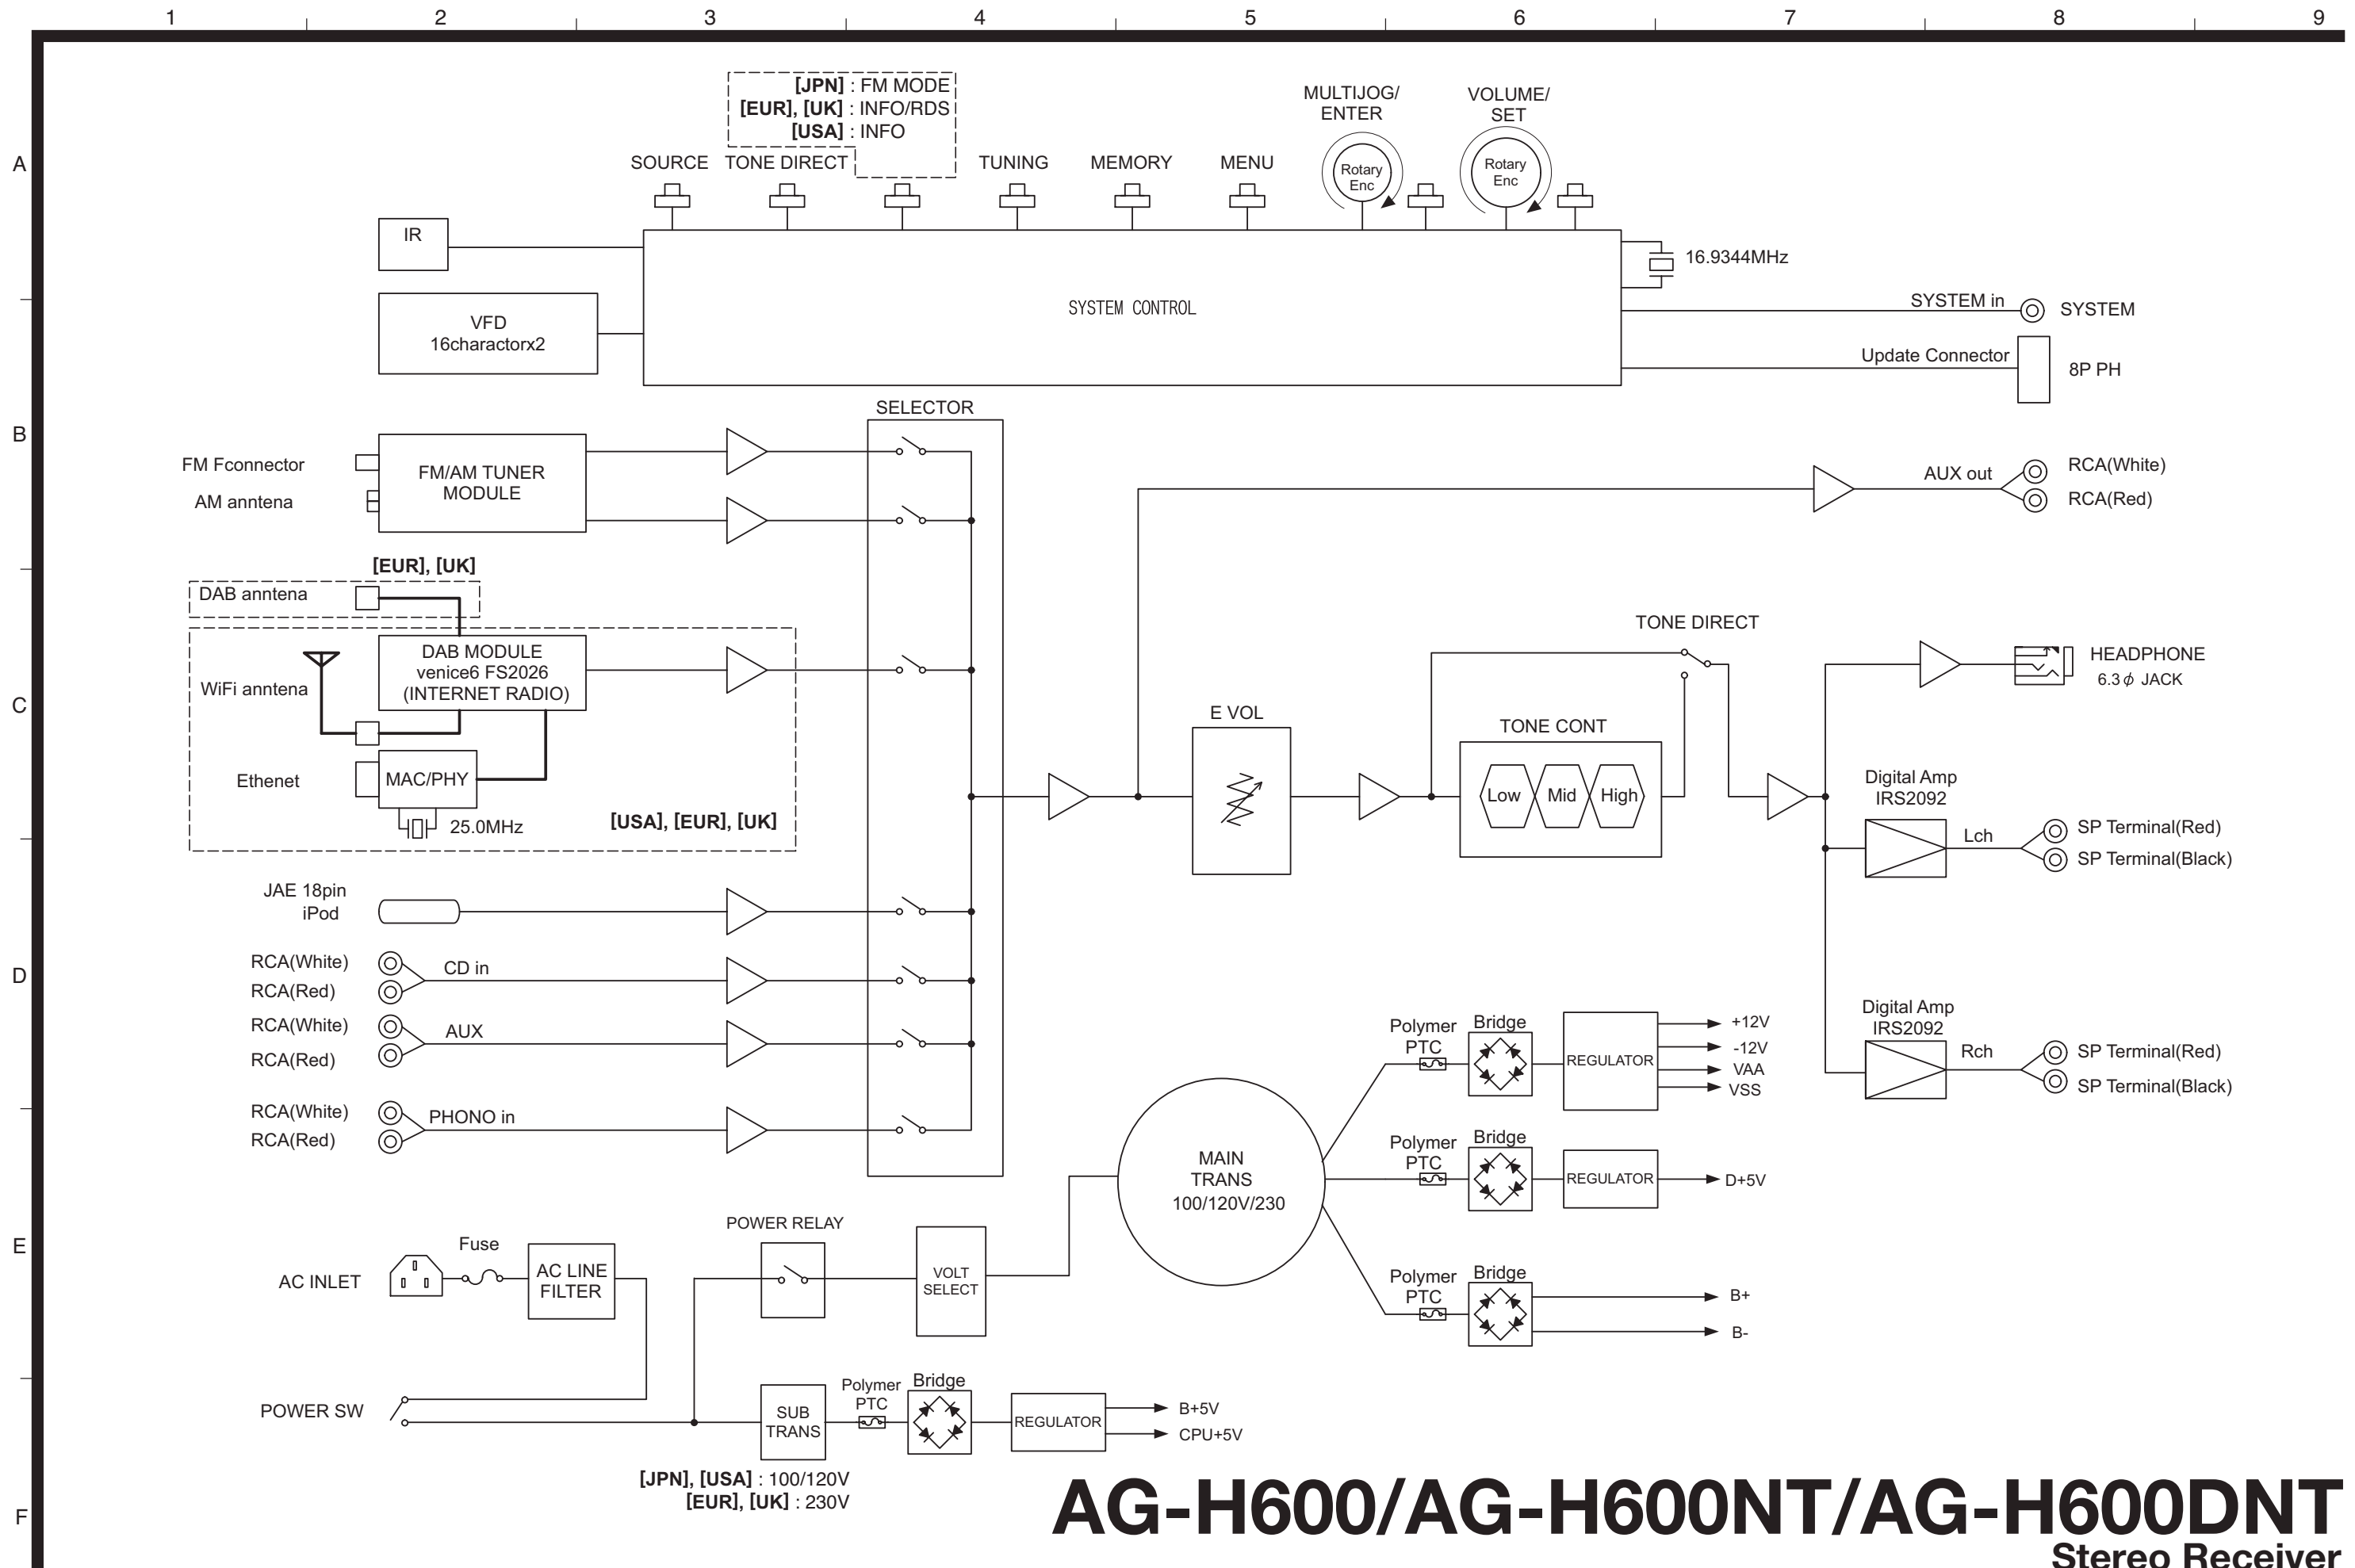


AG-H600/AG-H600NT/AG-H600DNT Stereo Receiver

A
B
C
D
E
F


AG-H600 [JPN]

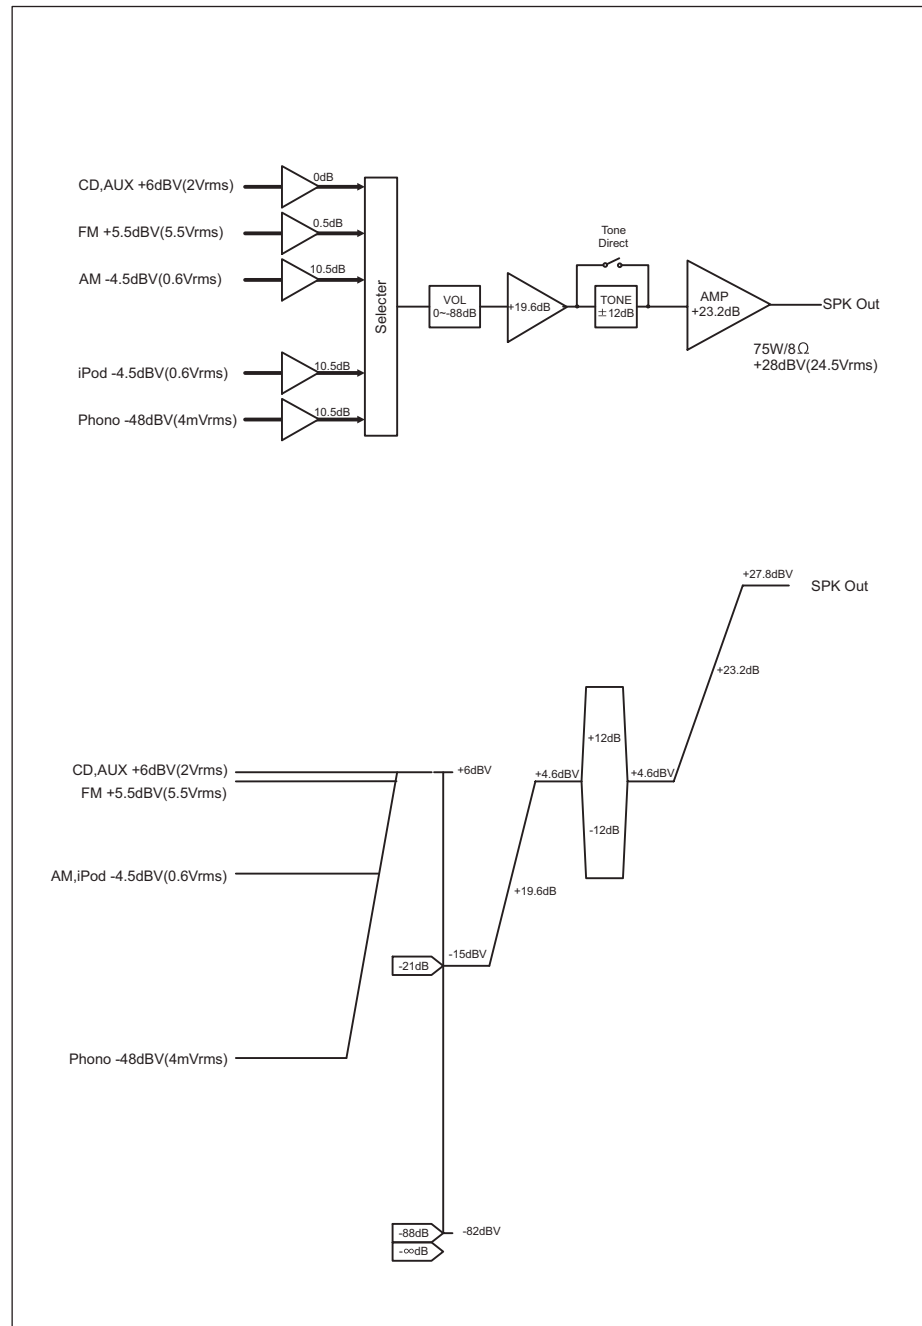


**AG-H600NT [EUR]
AG-H600NT/DNT [EUR], [UK]**

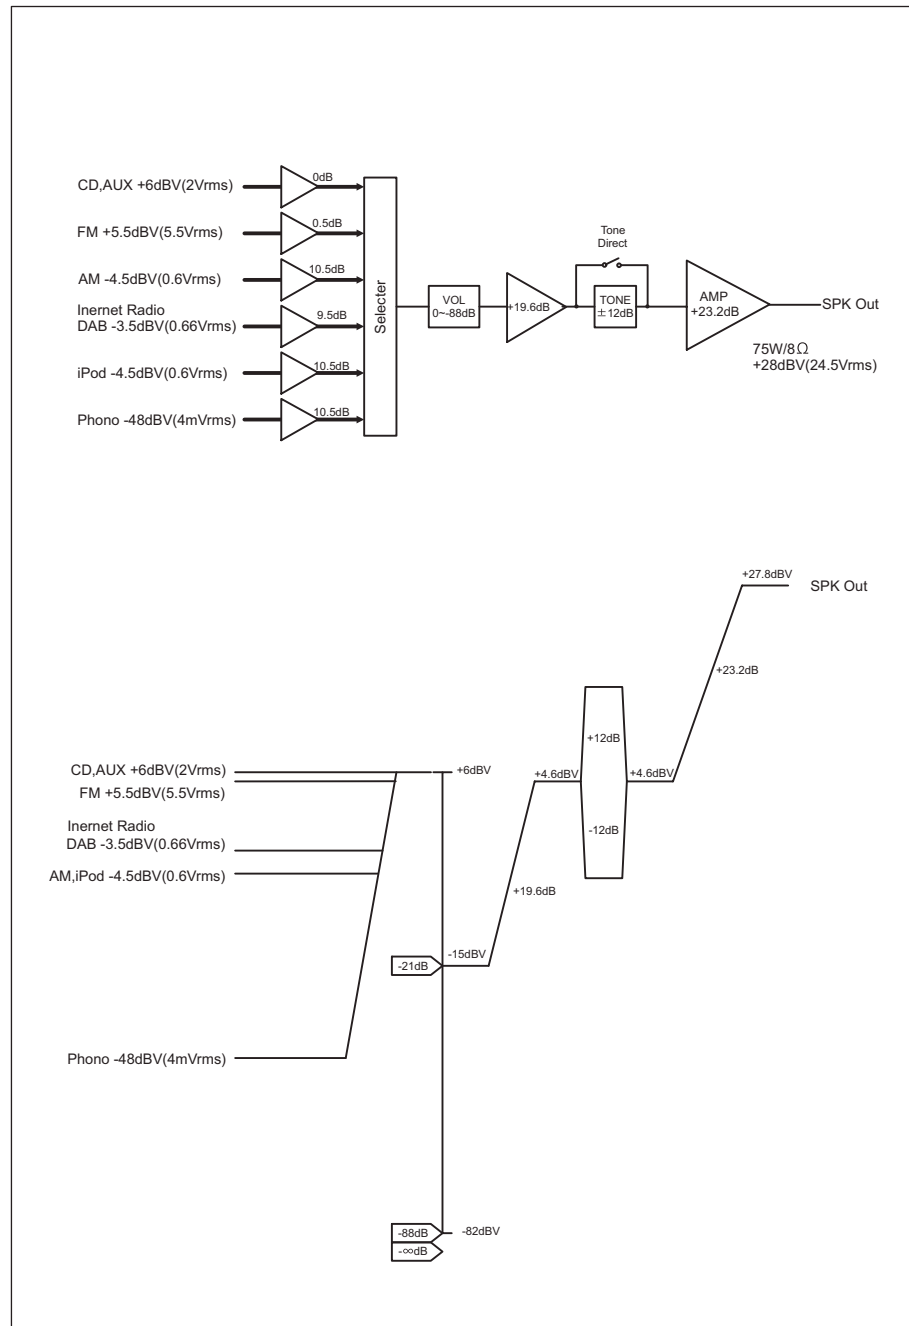


AG-H600NT [USA]

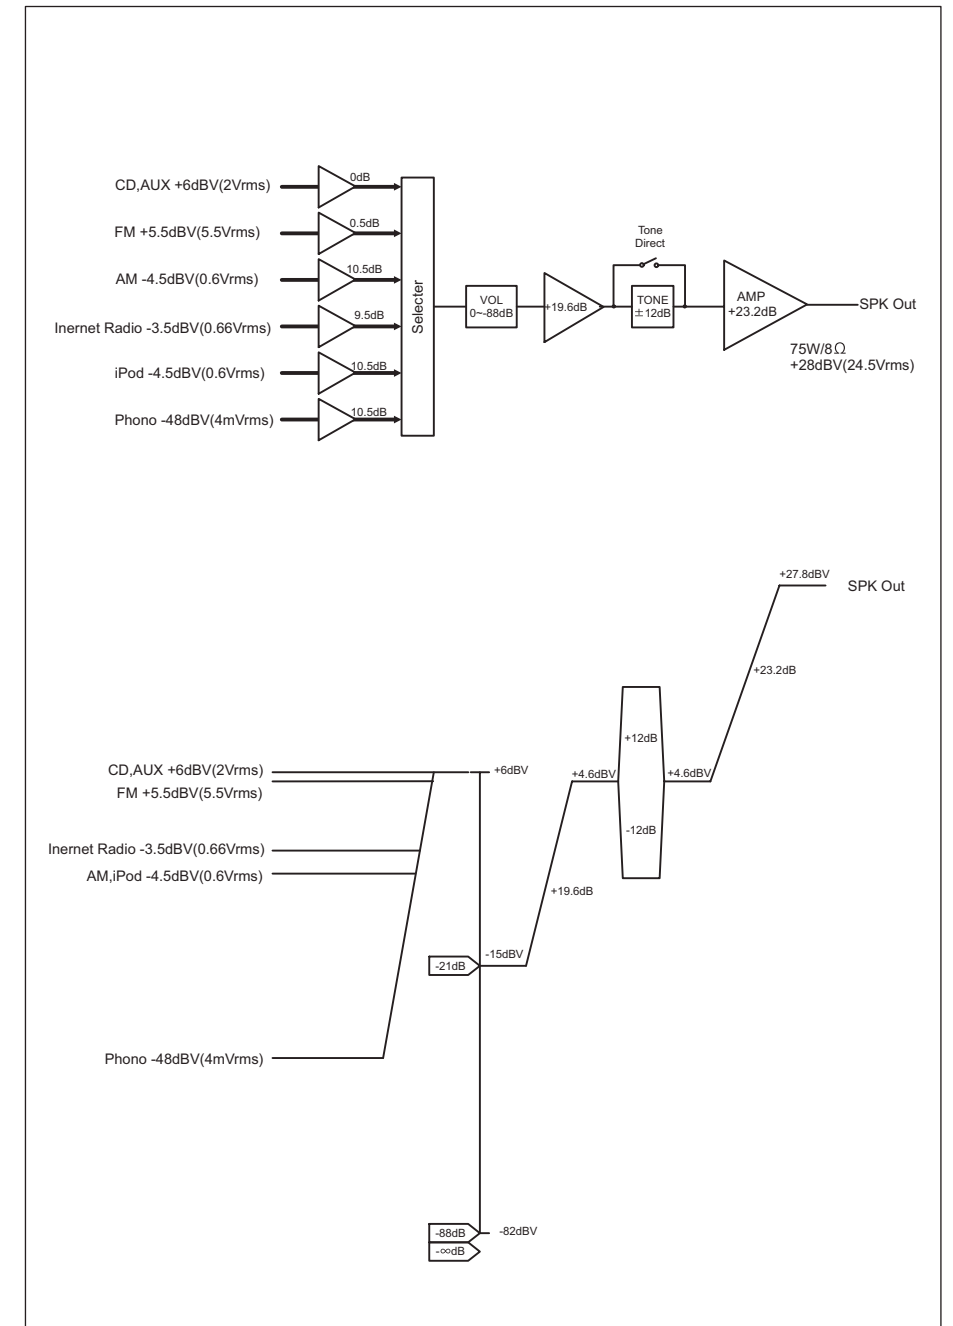

AG-H600/AG-H600NT/AG-H600DNT
Stereo Receiver

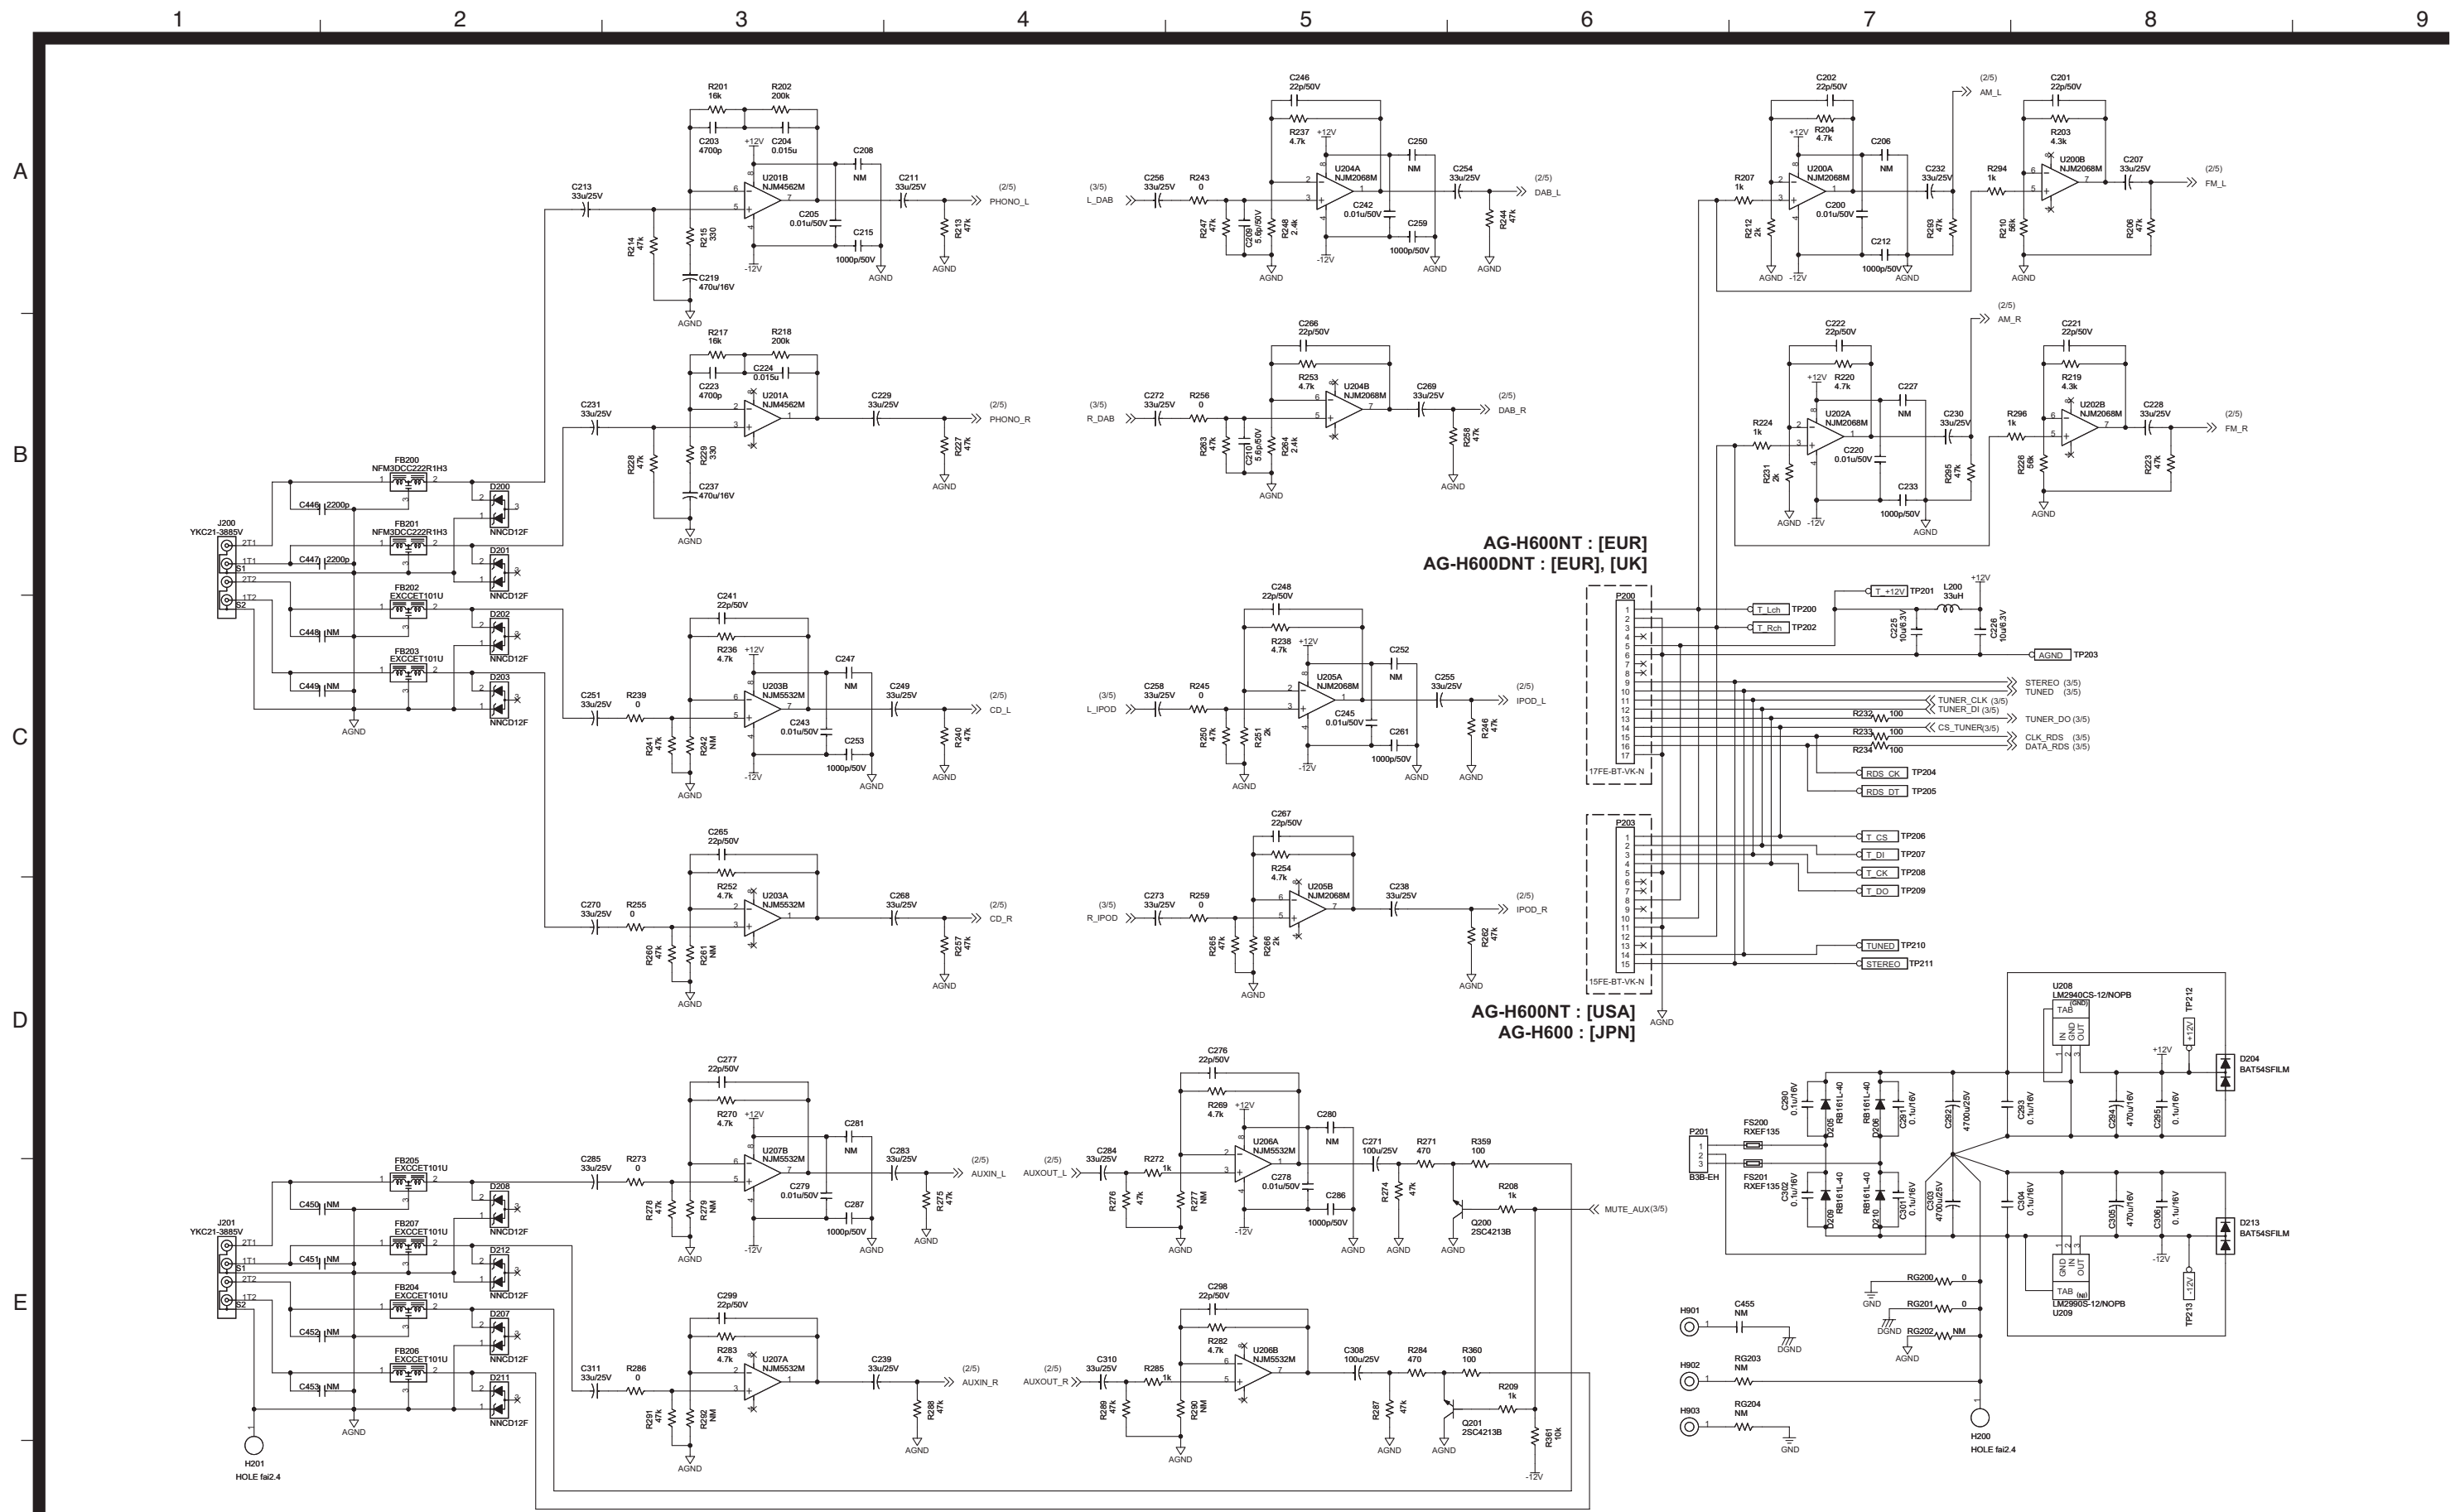


AG-H600/AG-H600NT/AG-H600DNT Stereo Receiver

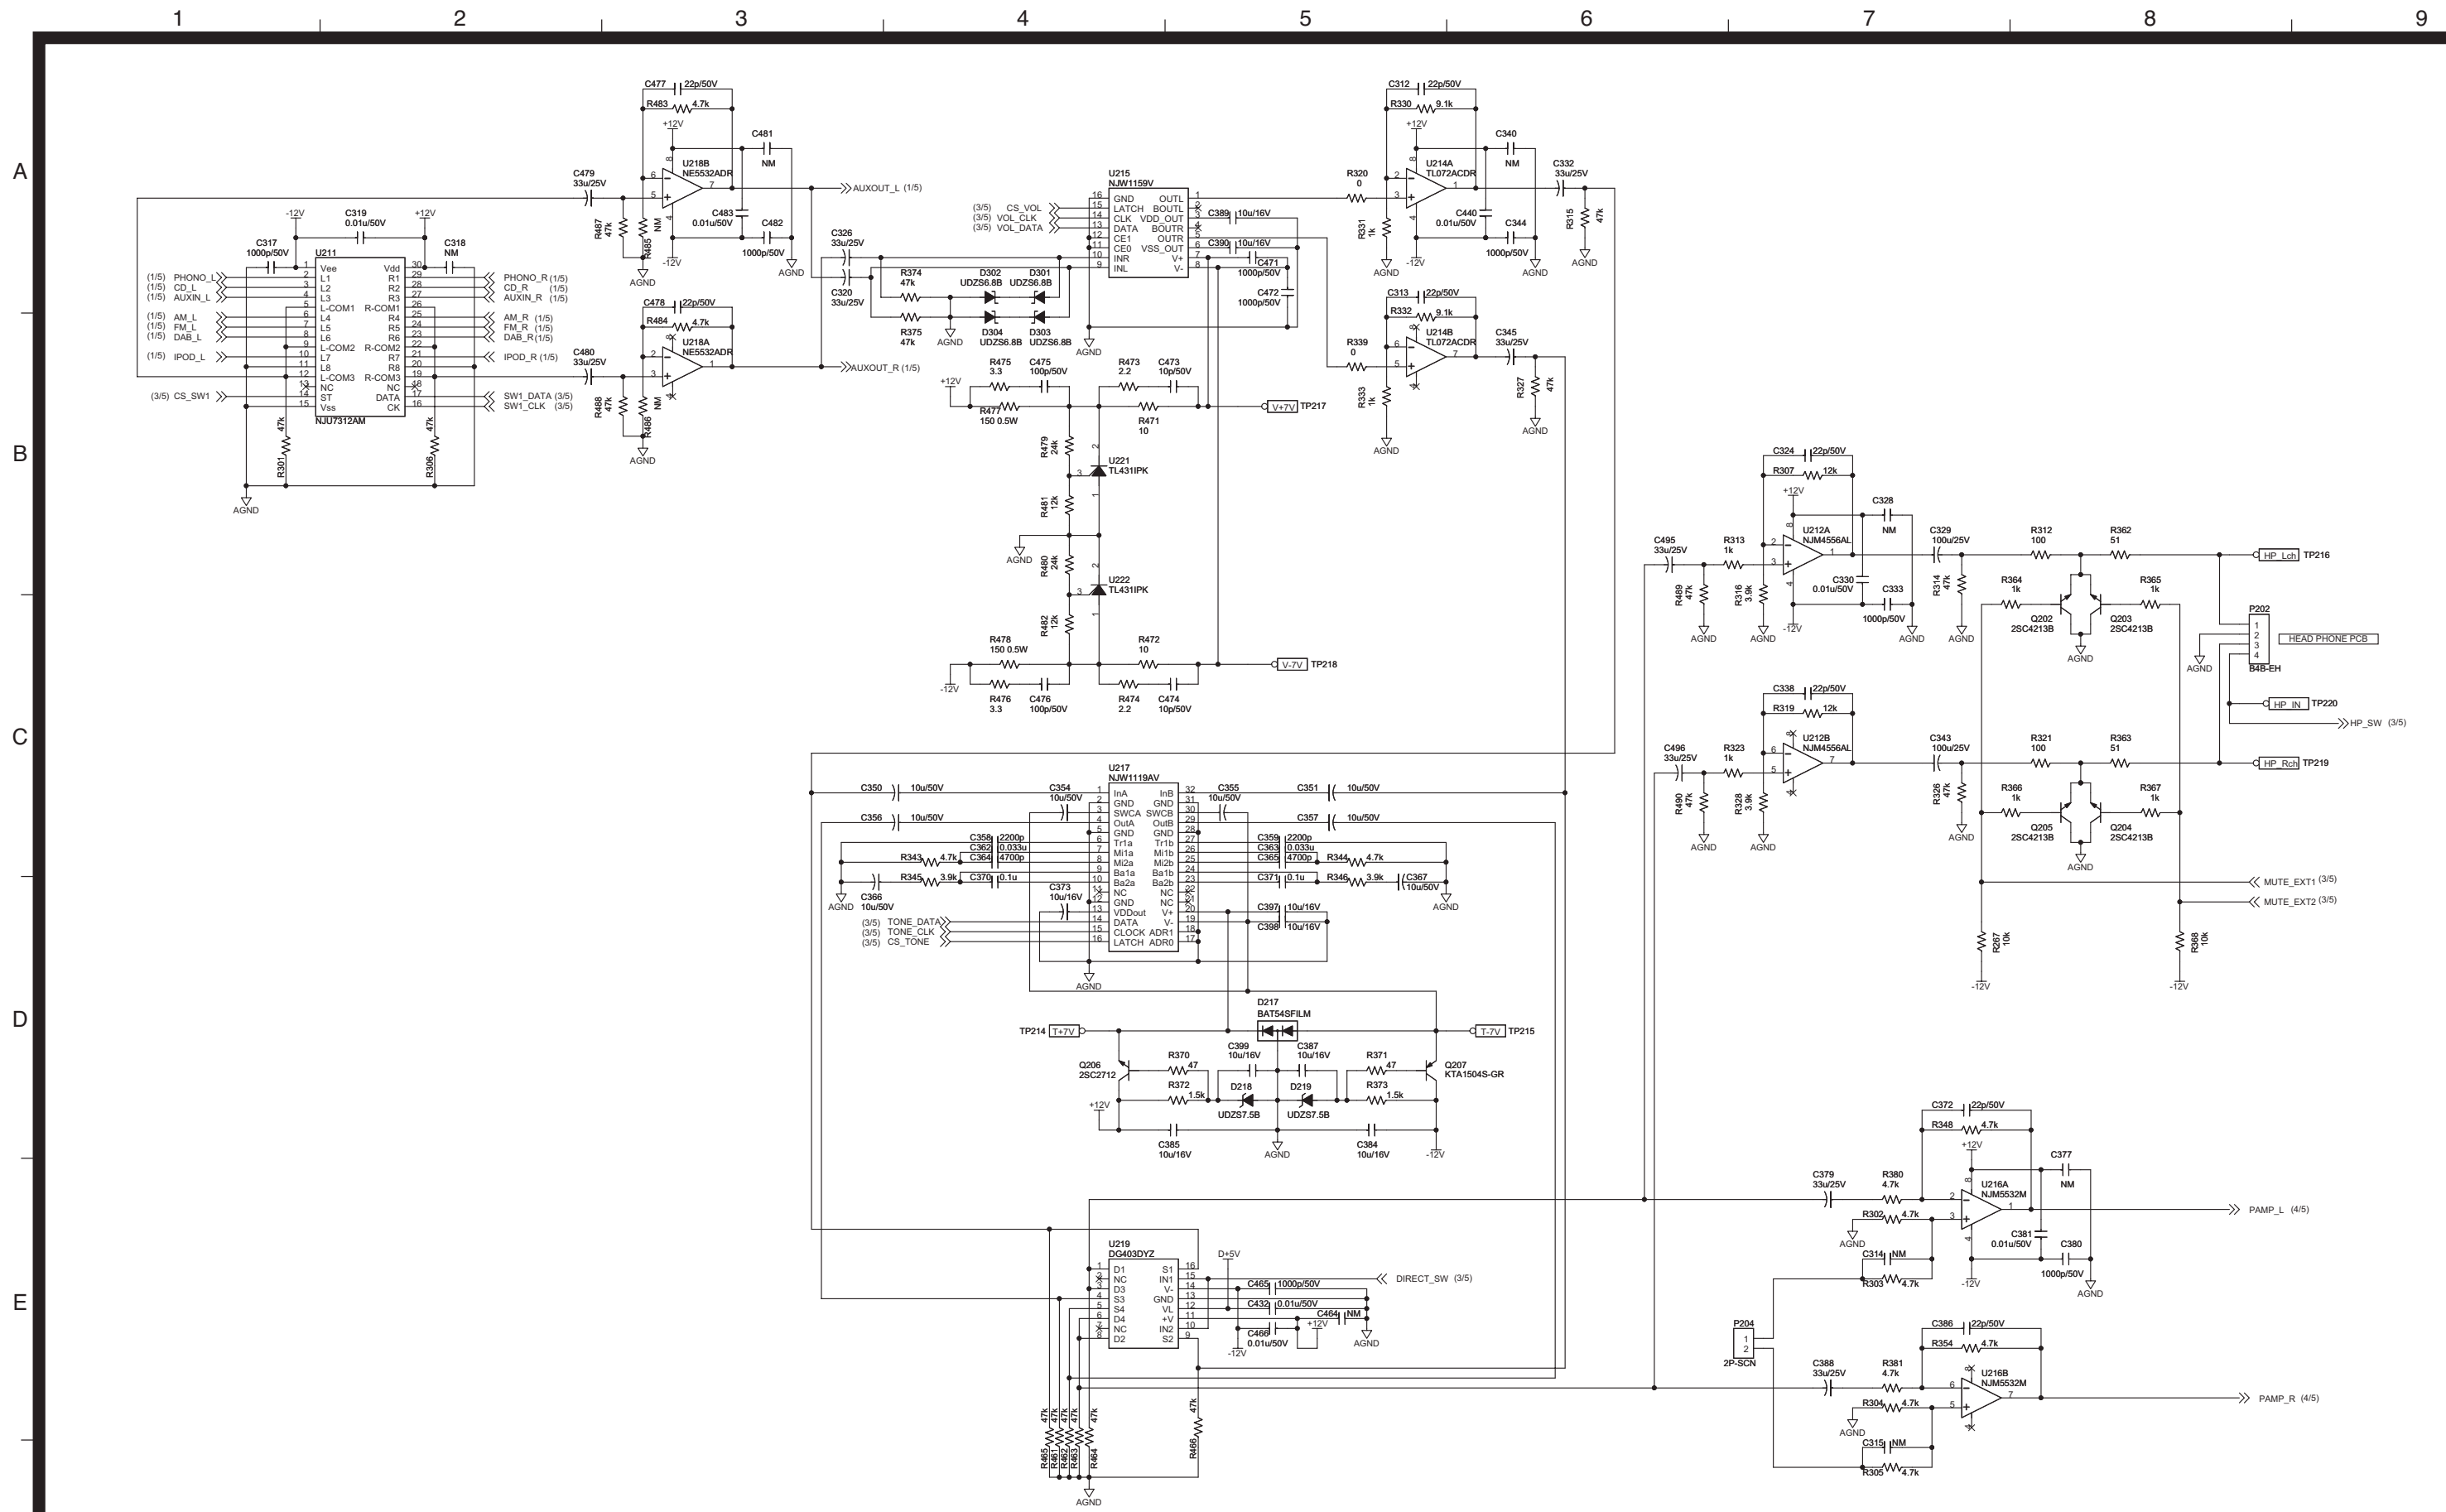


A
B
C
D
E
F

1 2 3 4 5 6 7 8 9


AG-H600/AG-H600NT/AG-H600DNT
Stereo Receiver

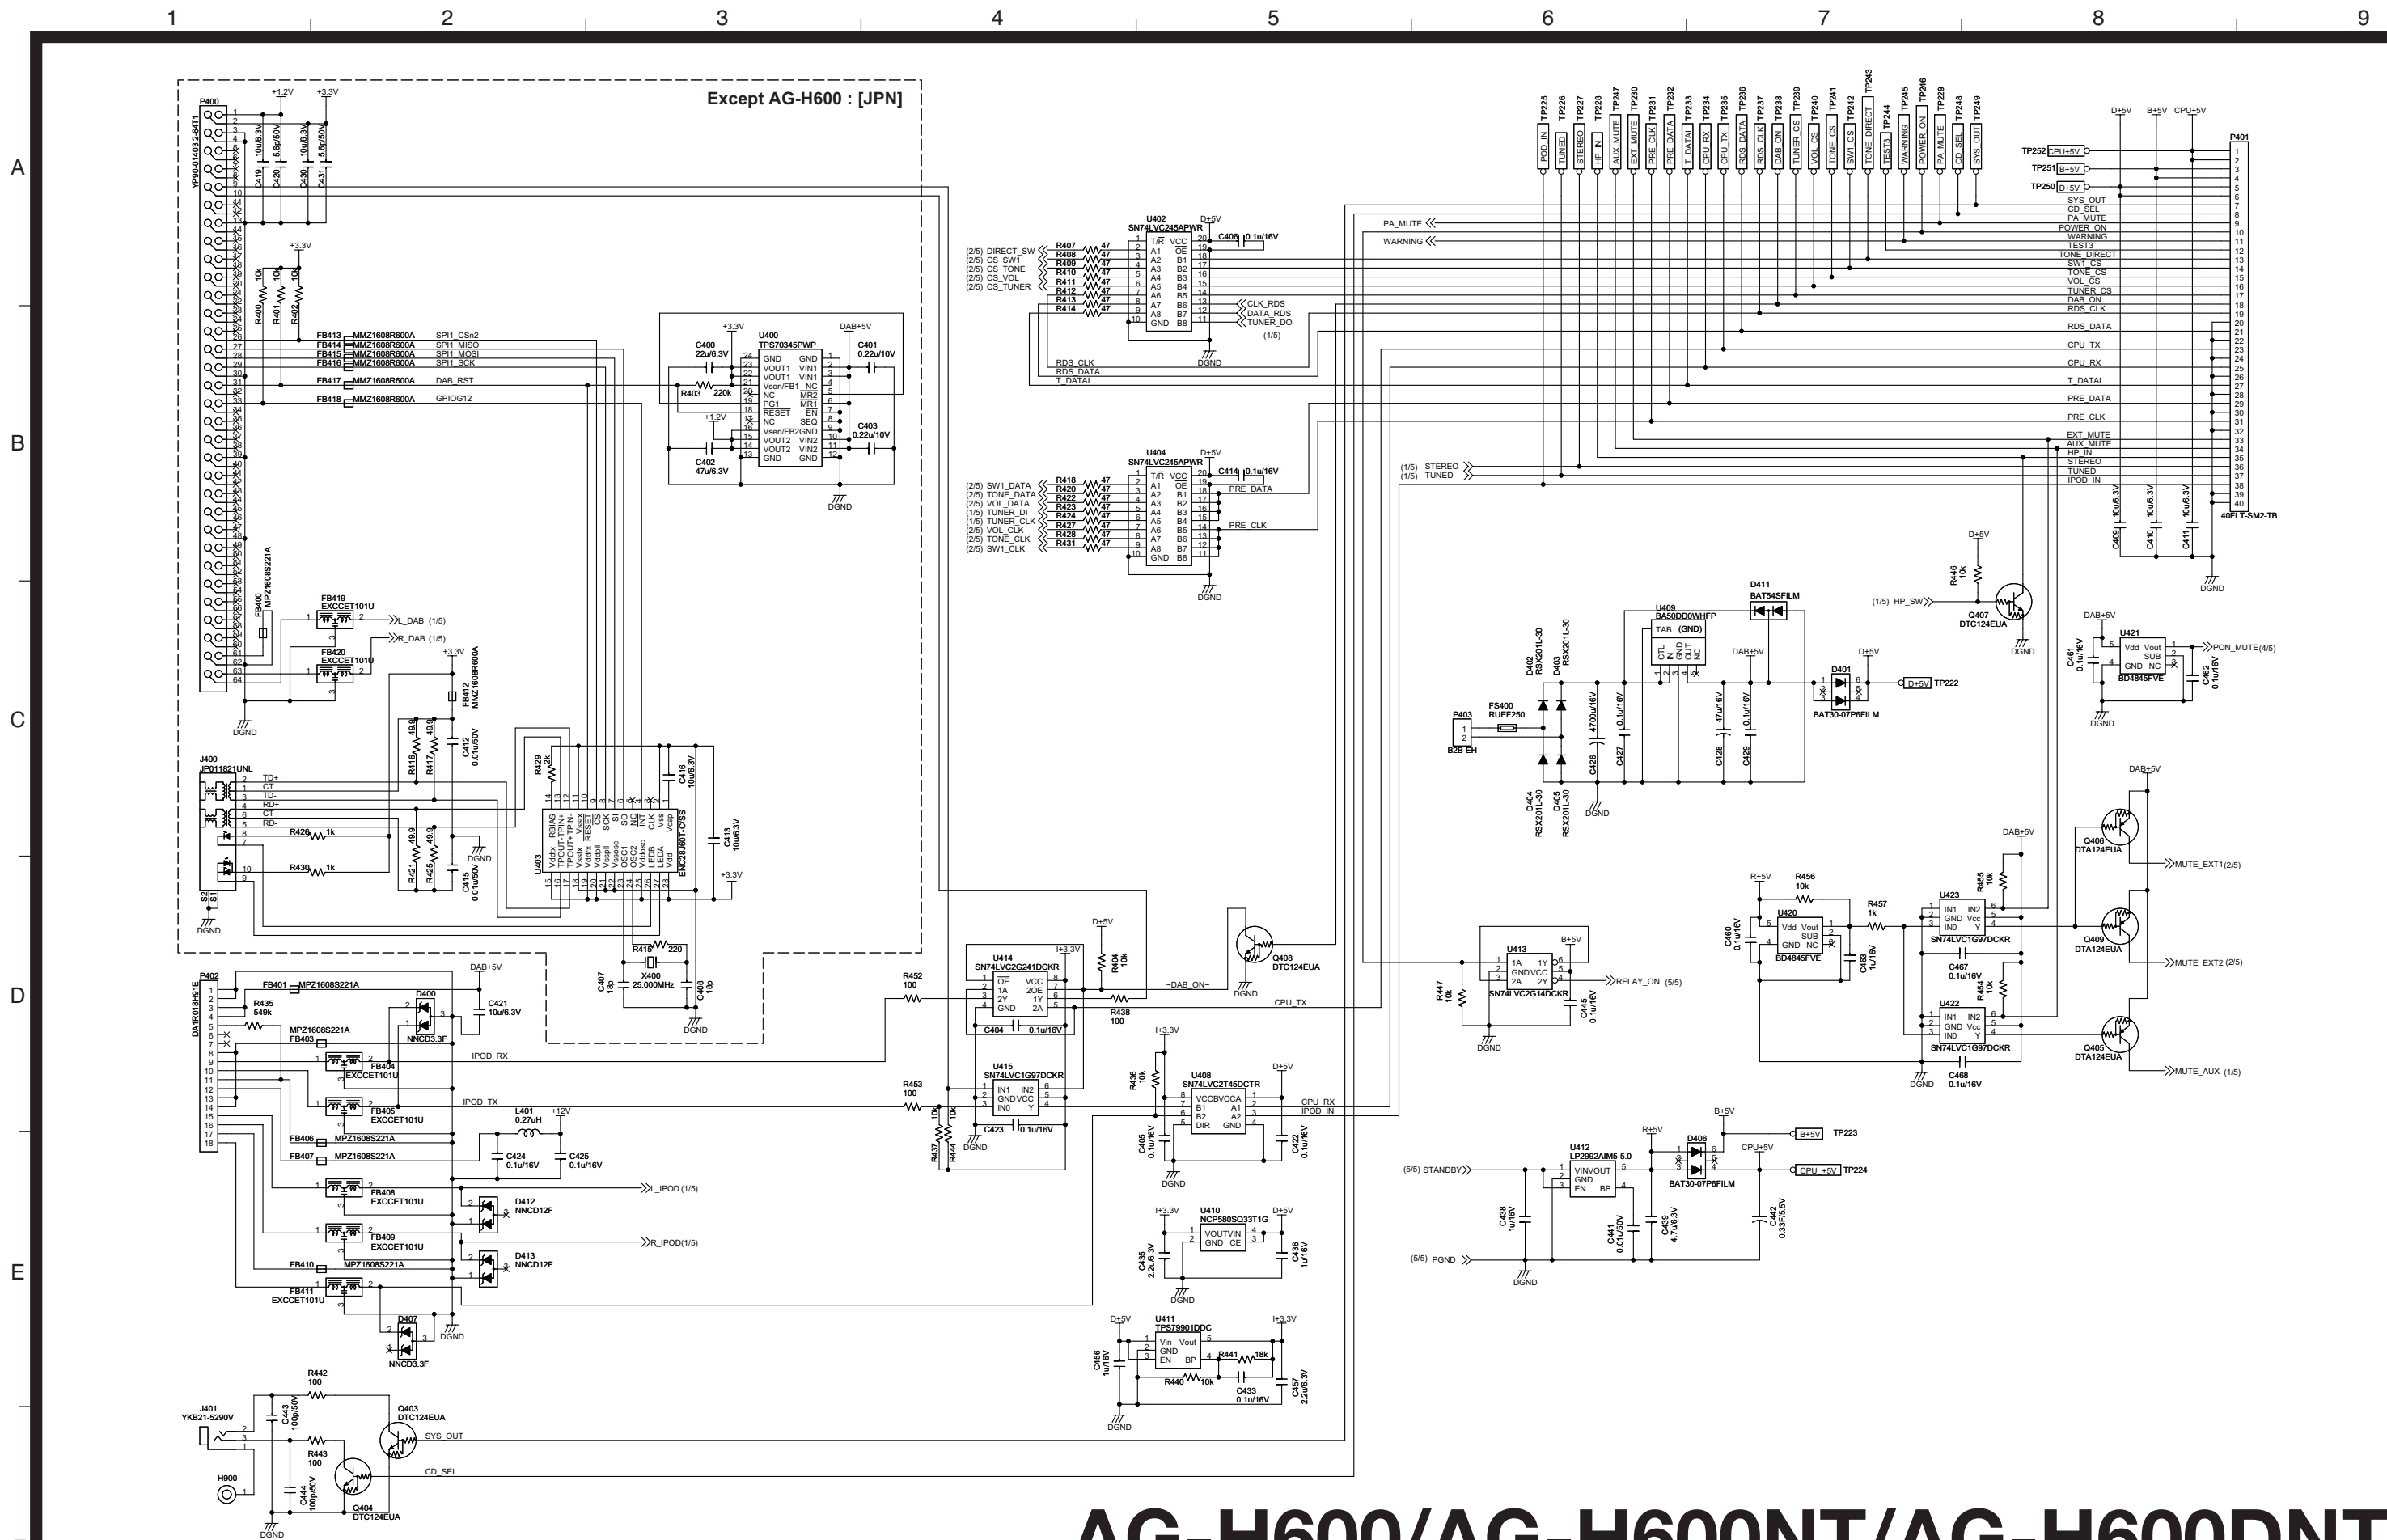

AG-H600/AG-H600NT/AG-H600DNT
Stereo Receiver

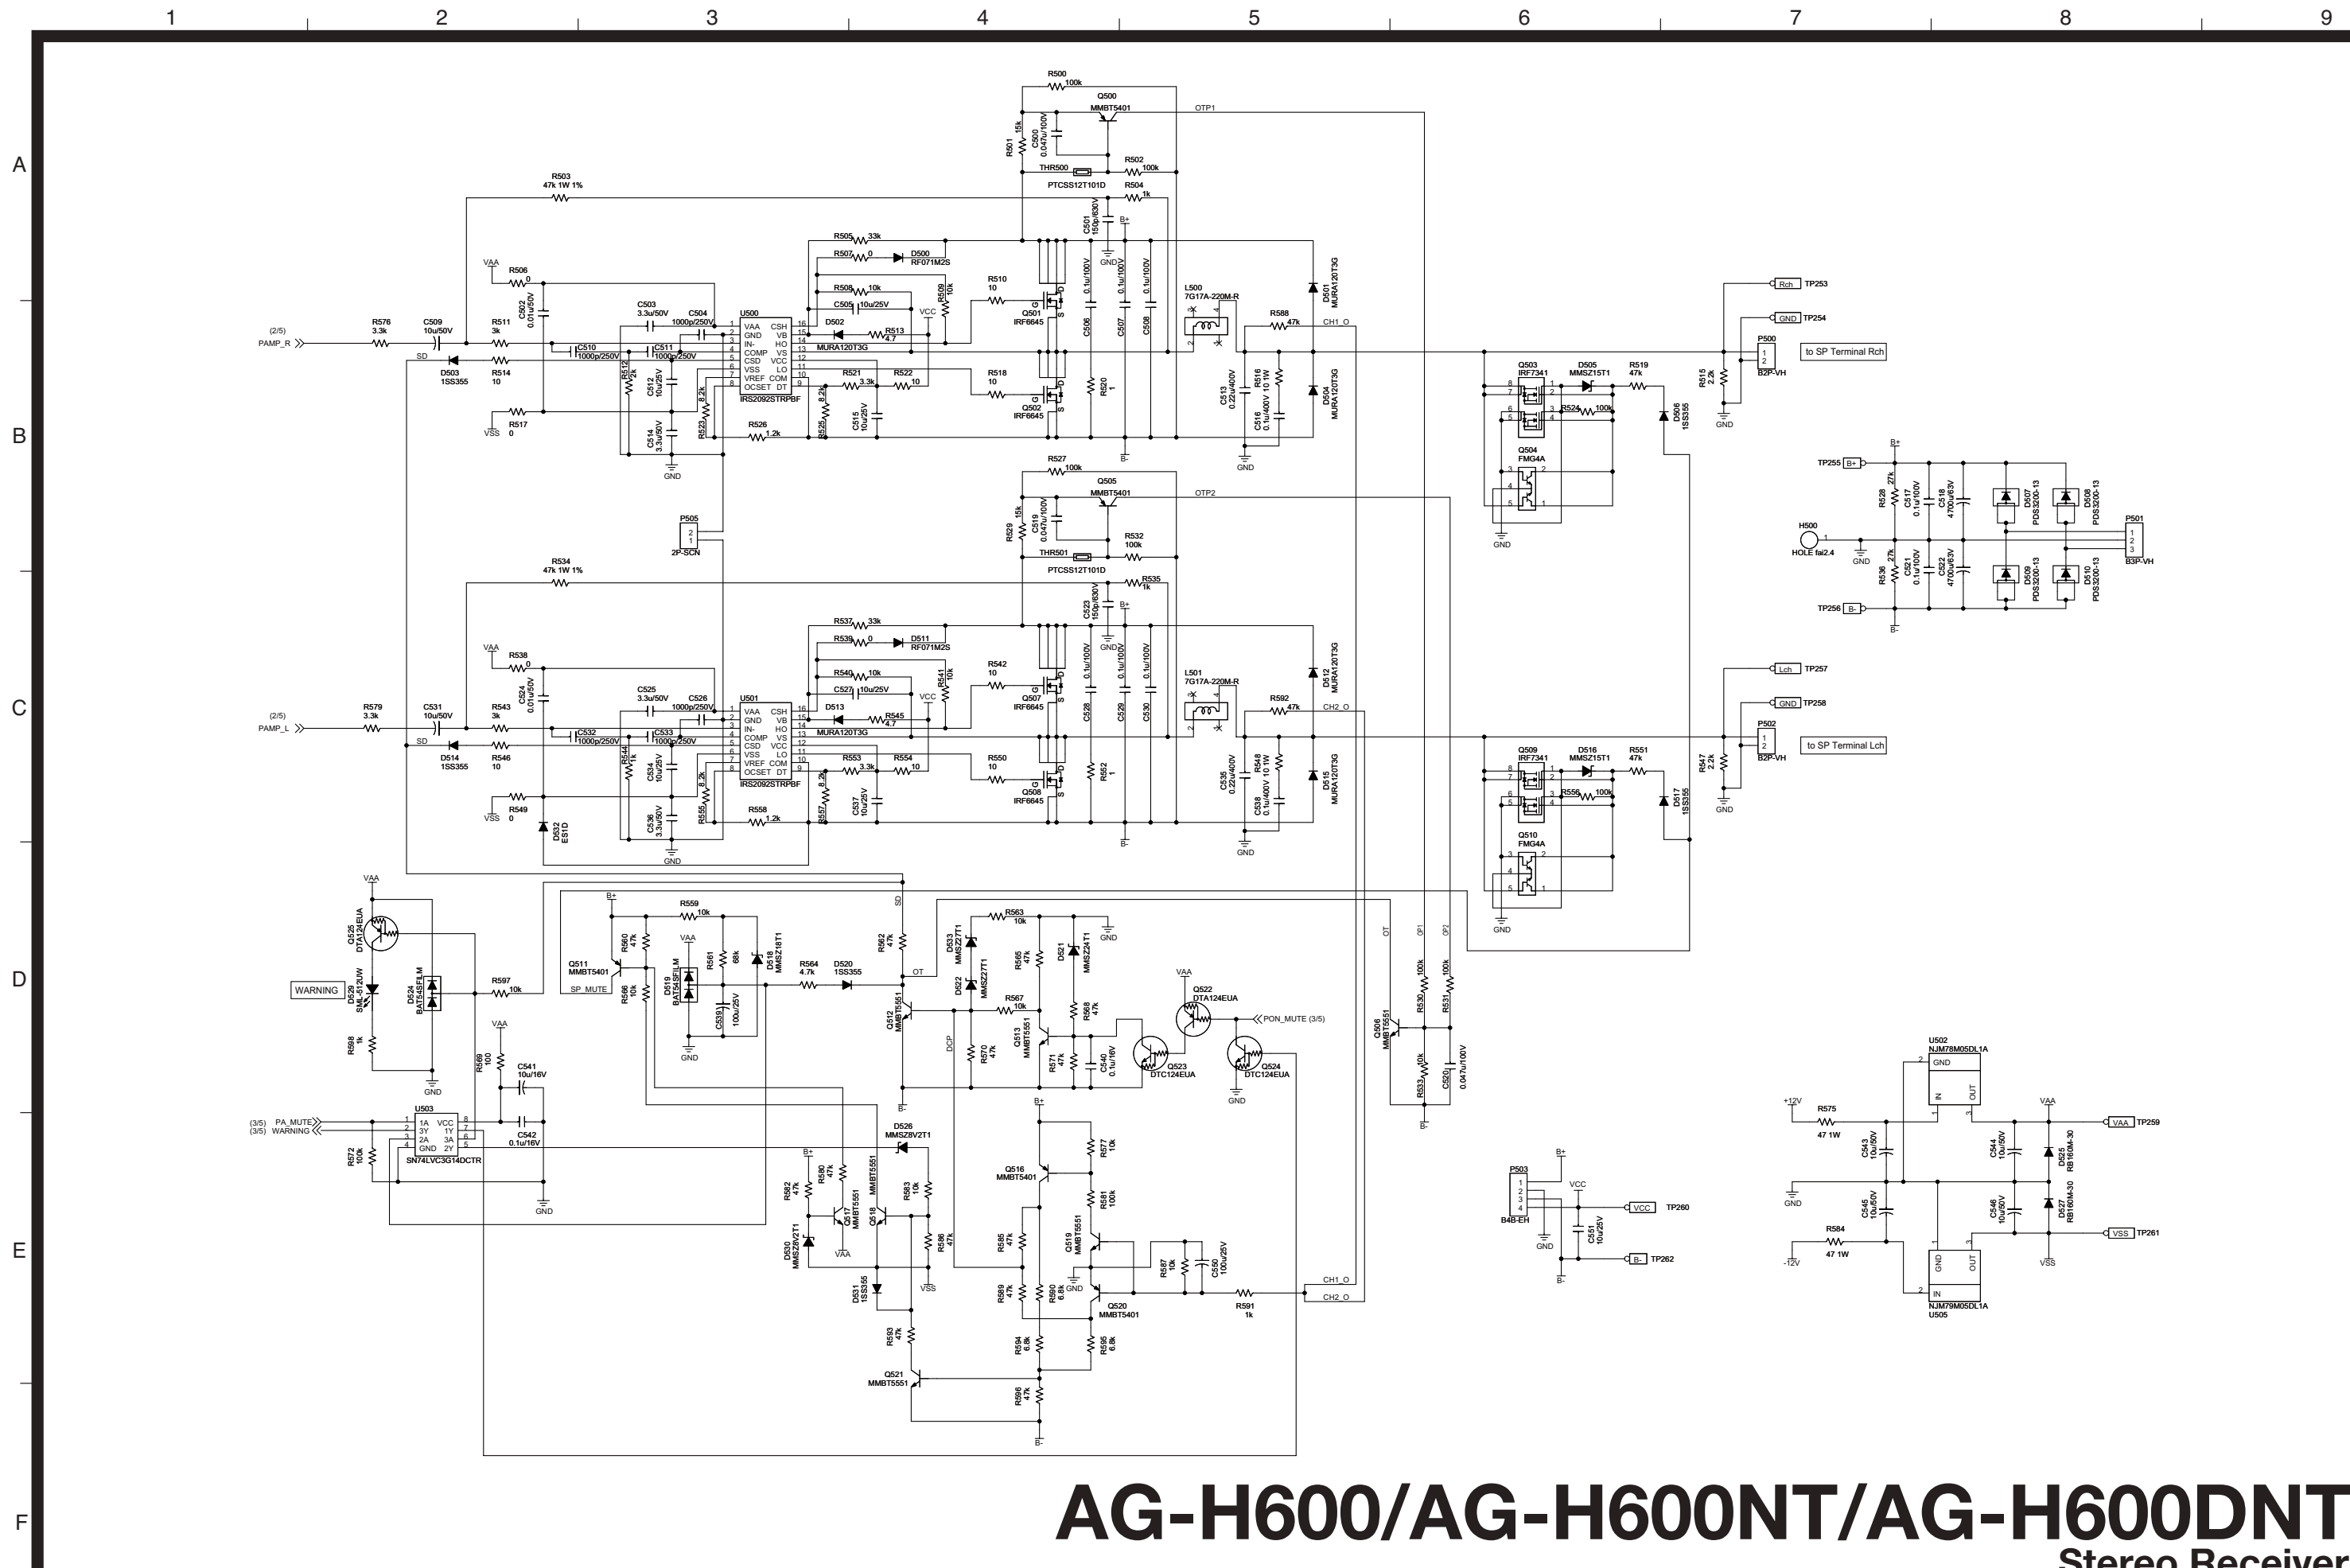


AG-H600/AG-H600NT/AG-H600DNT
Stereo Receiver

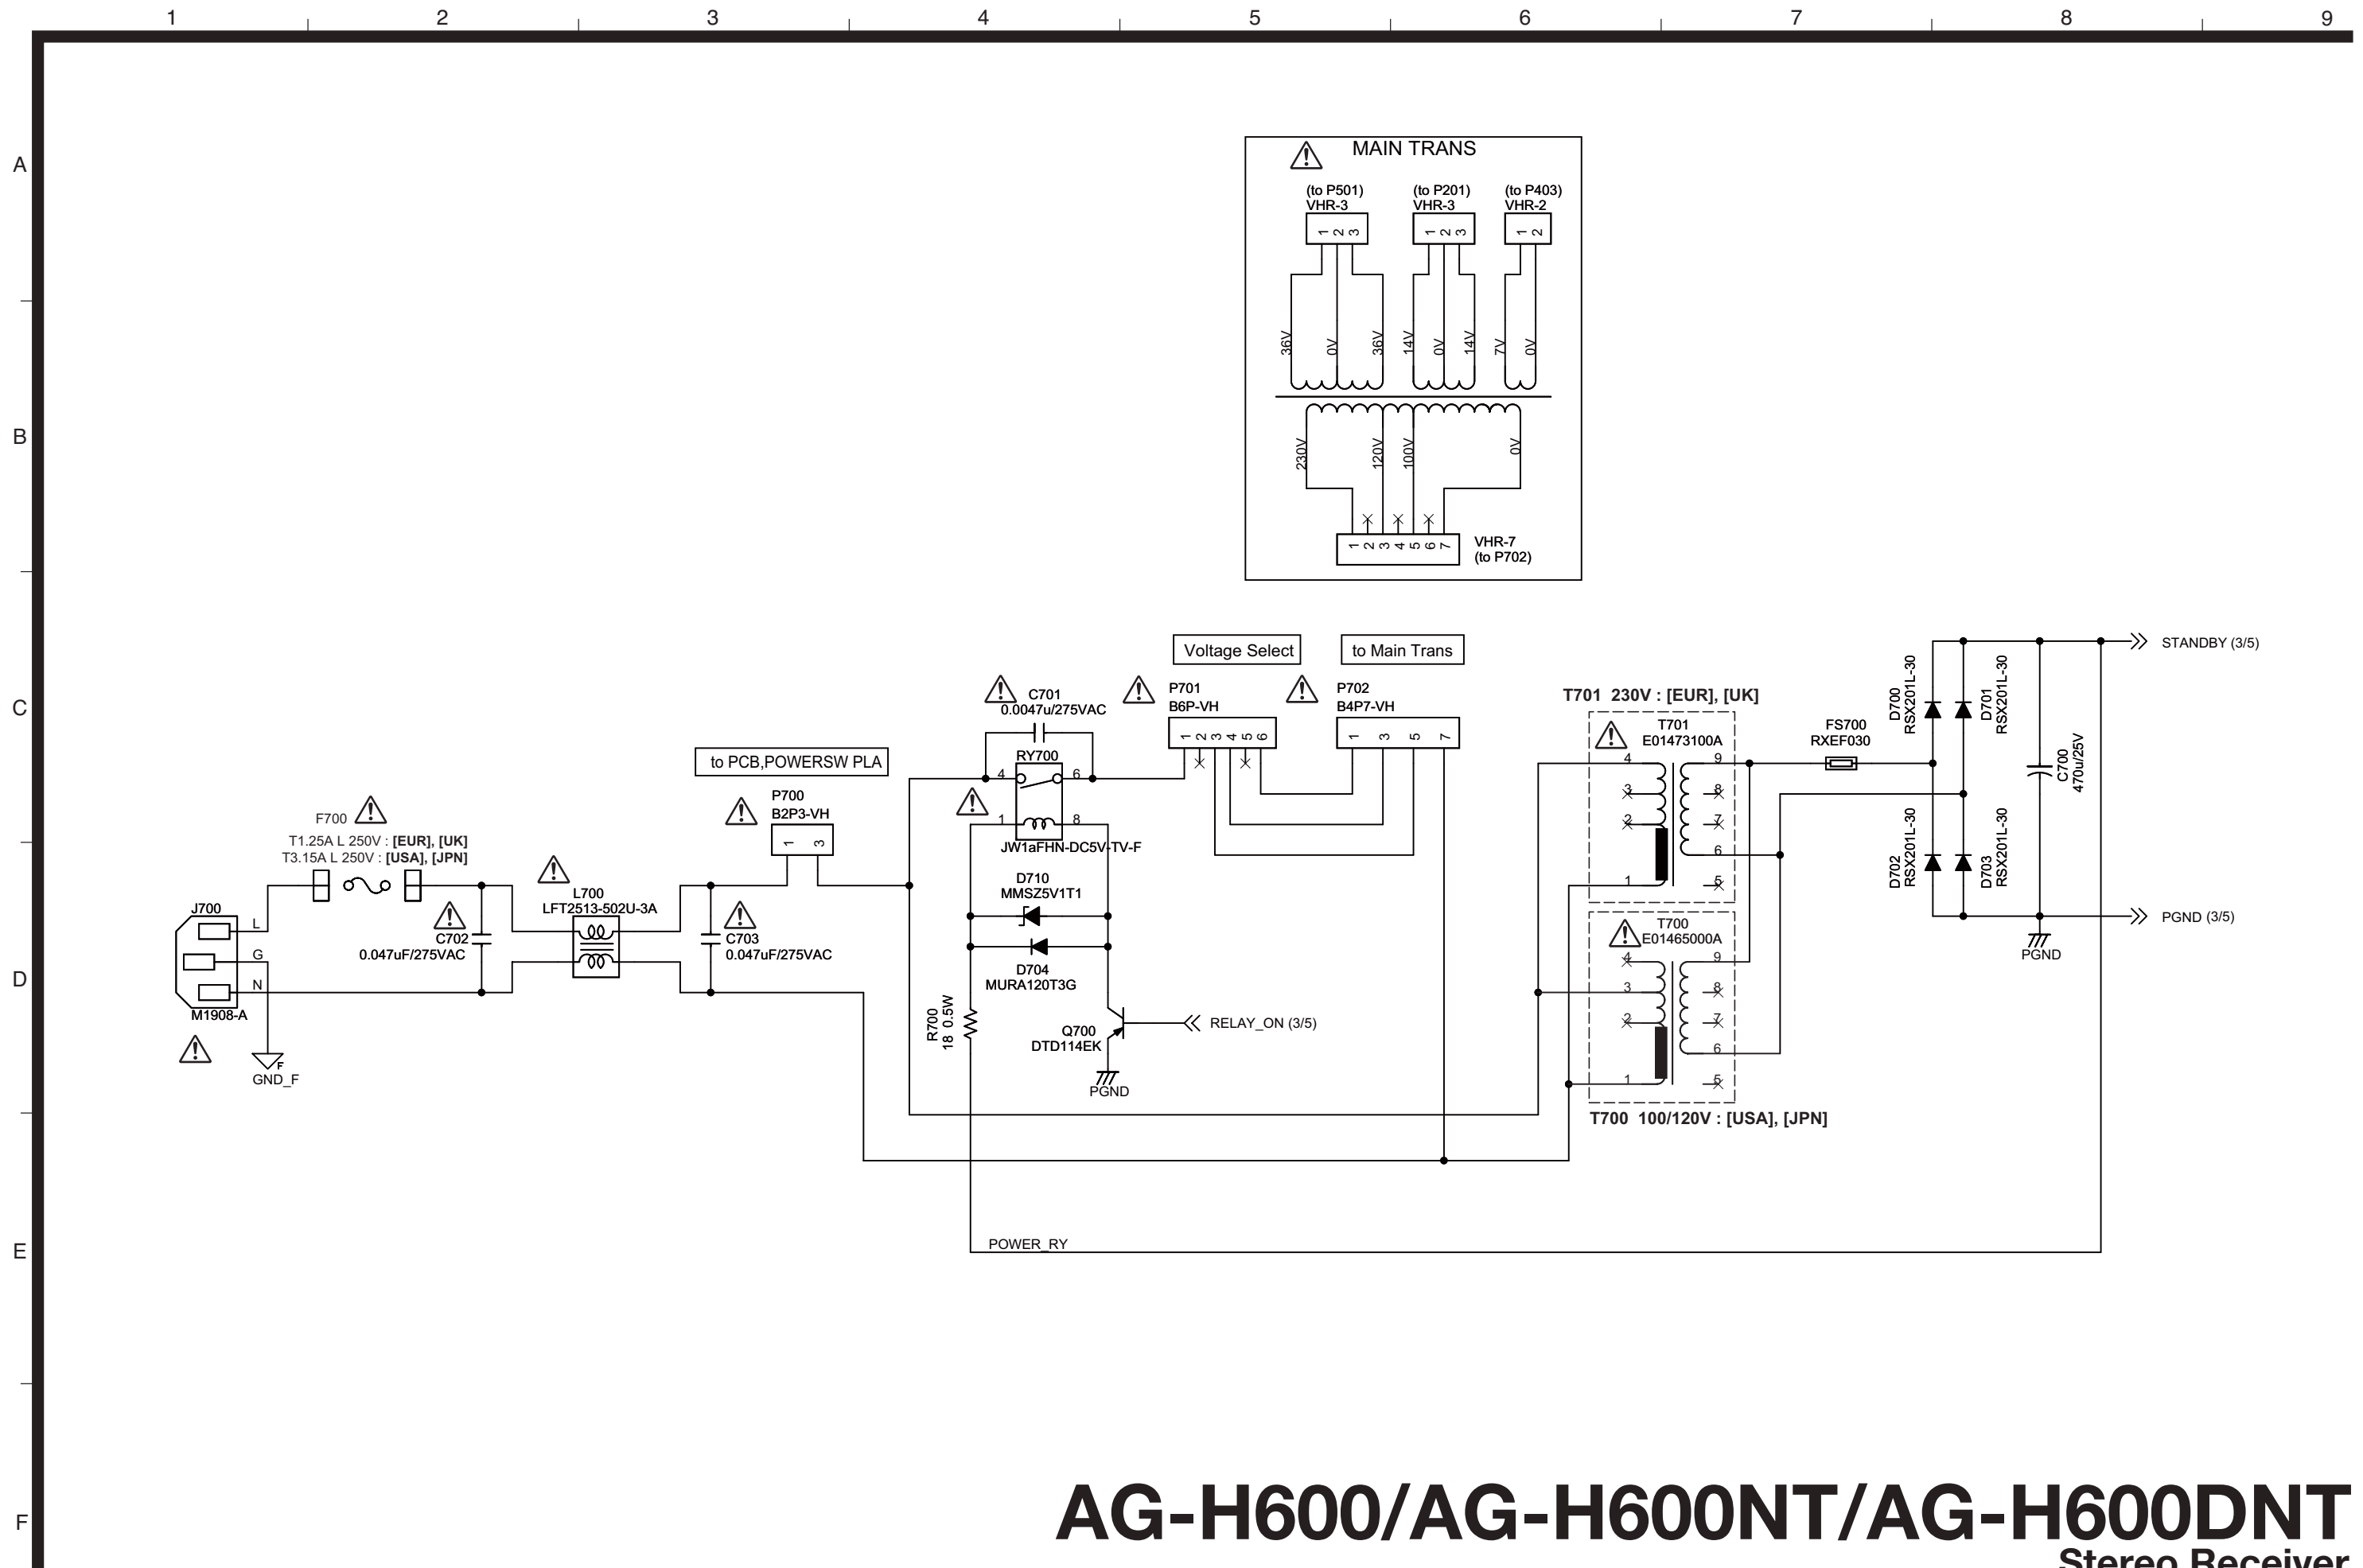

AG-H600/AG-H600NT/AG-H600DNT


Stereo Receiver

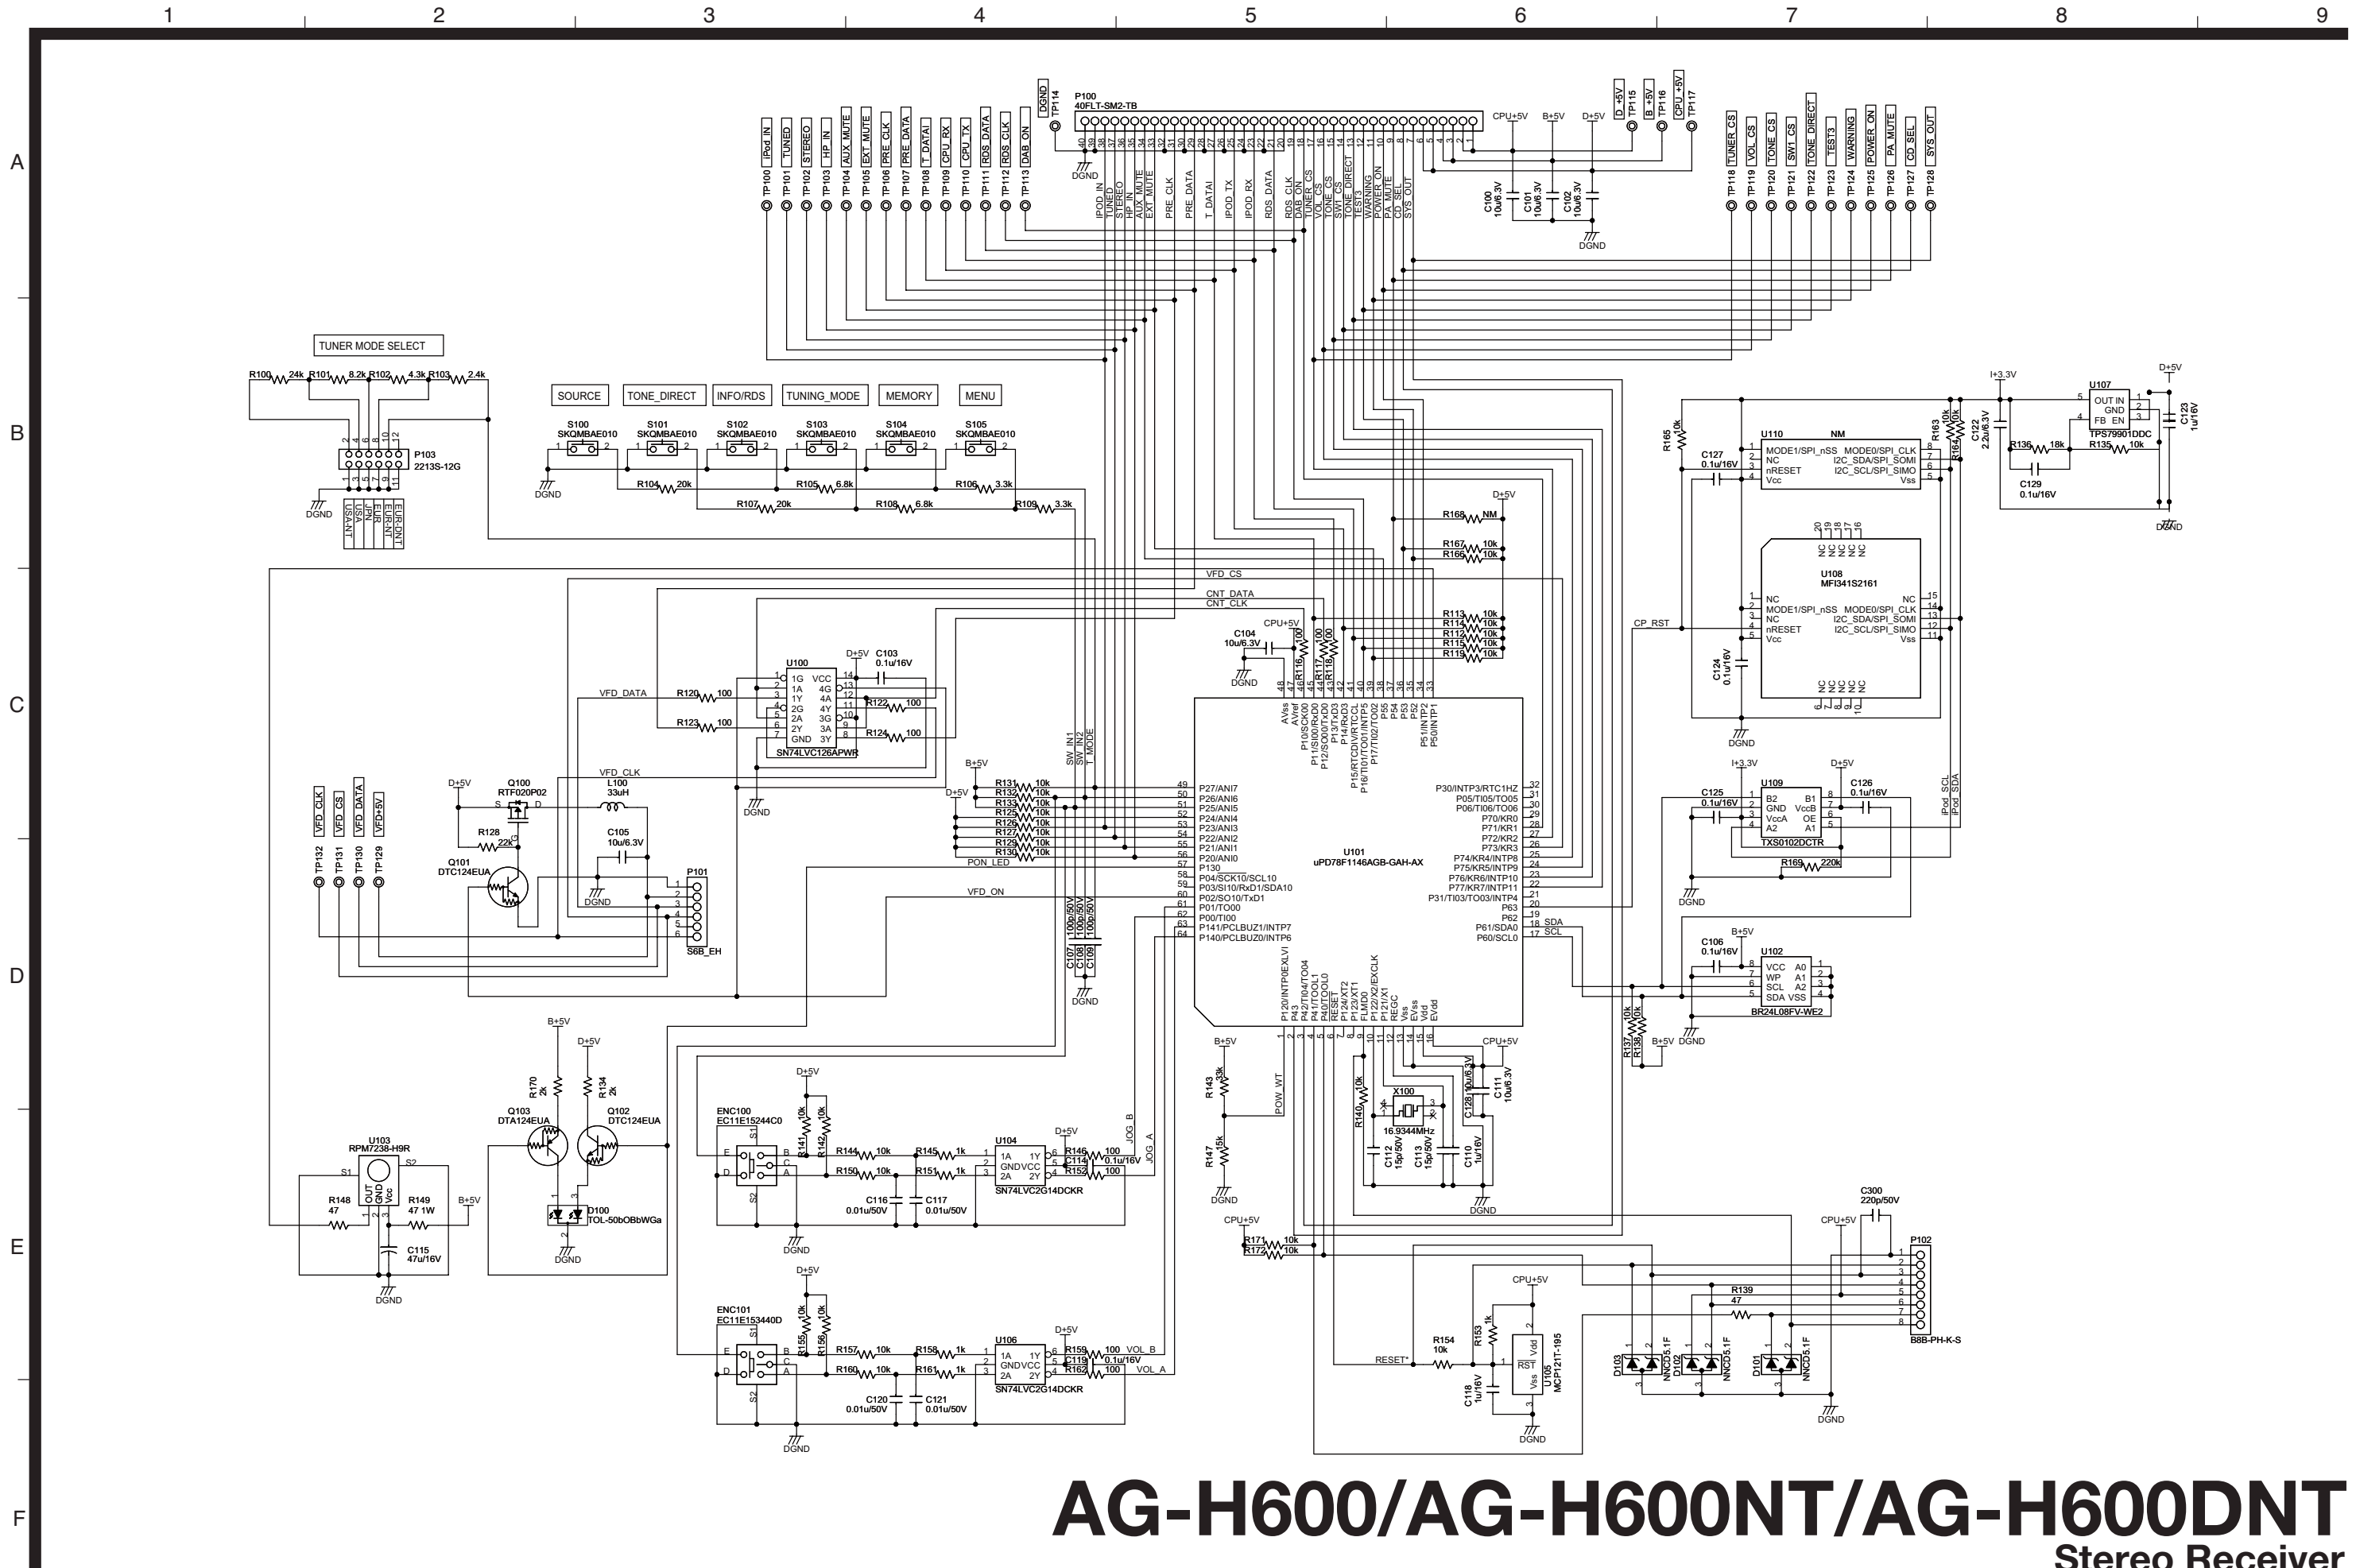


AG-H600/AG-H600NT/AG-H600DNT
Stereo Receiver

1 2 3 4 5 6 7 8 9


A
B
C
D
E
F

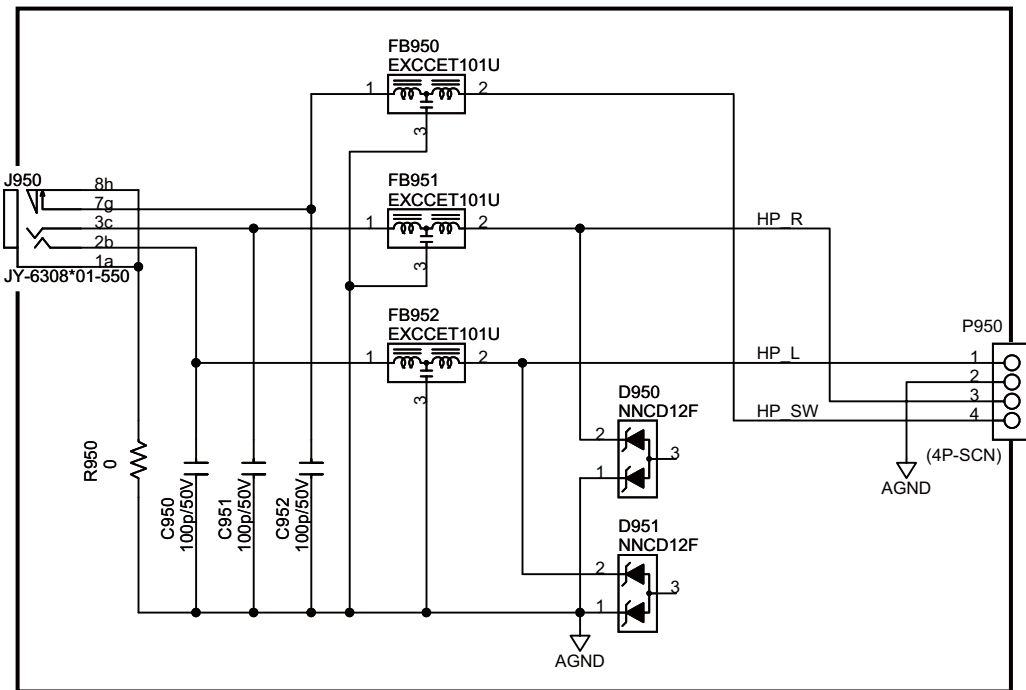


HP PCB

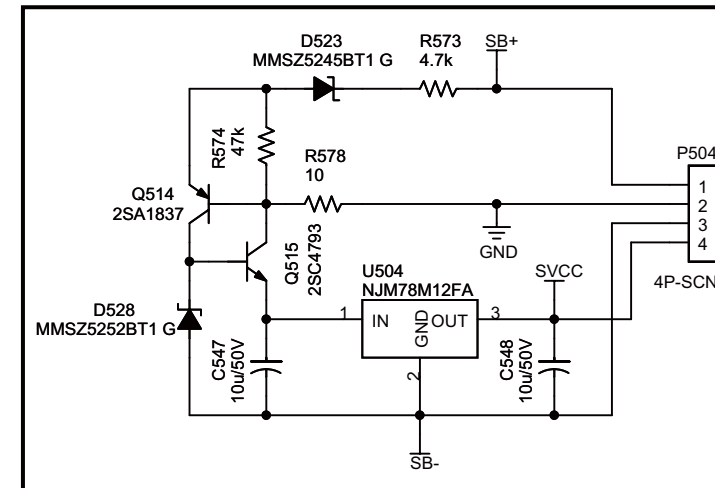

AMP PWR PCB

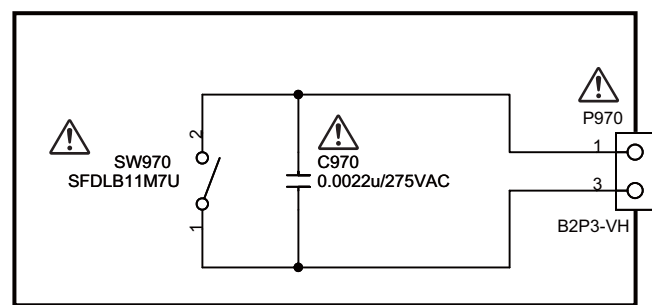

POWER SW PCB

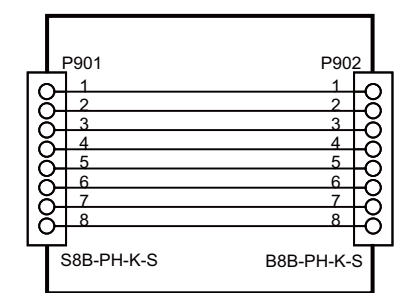

F/W-UP PCB

AG-H600/AG-H600NT/AG-H600DNT
Stereo Receiver