


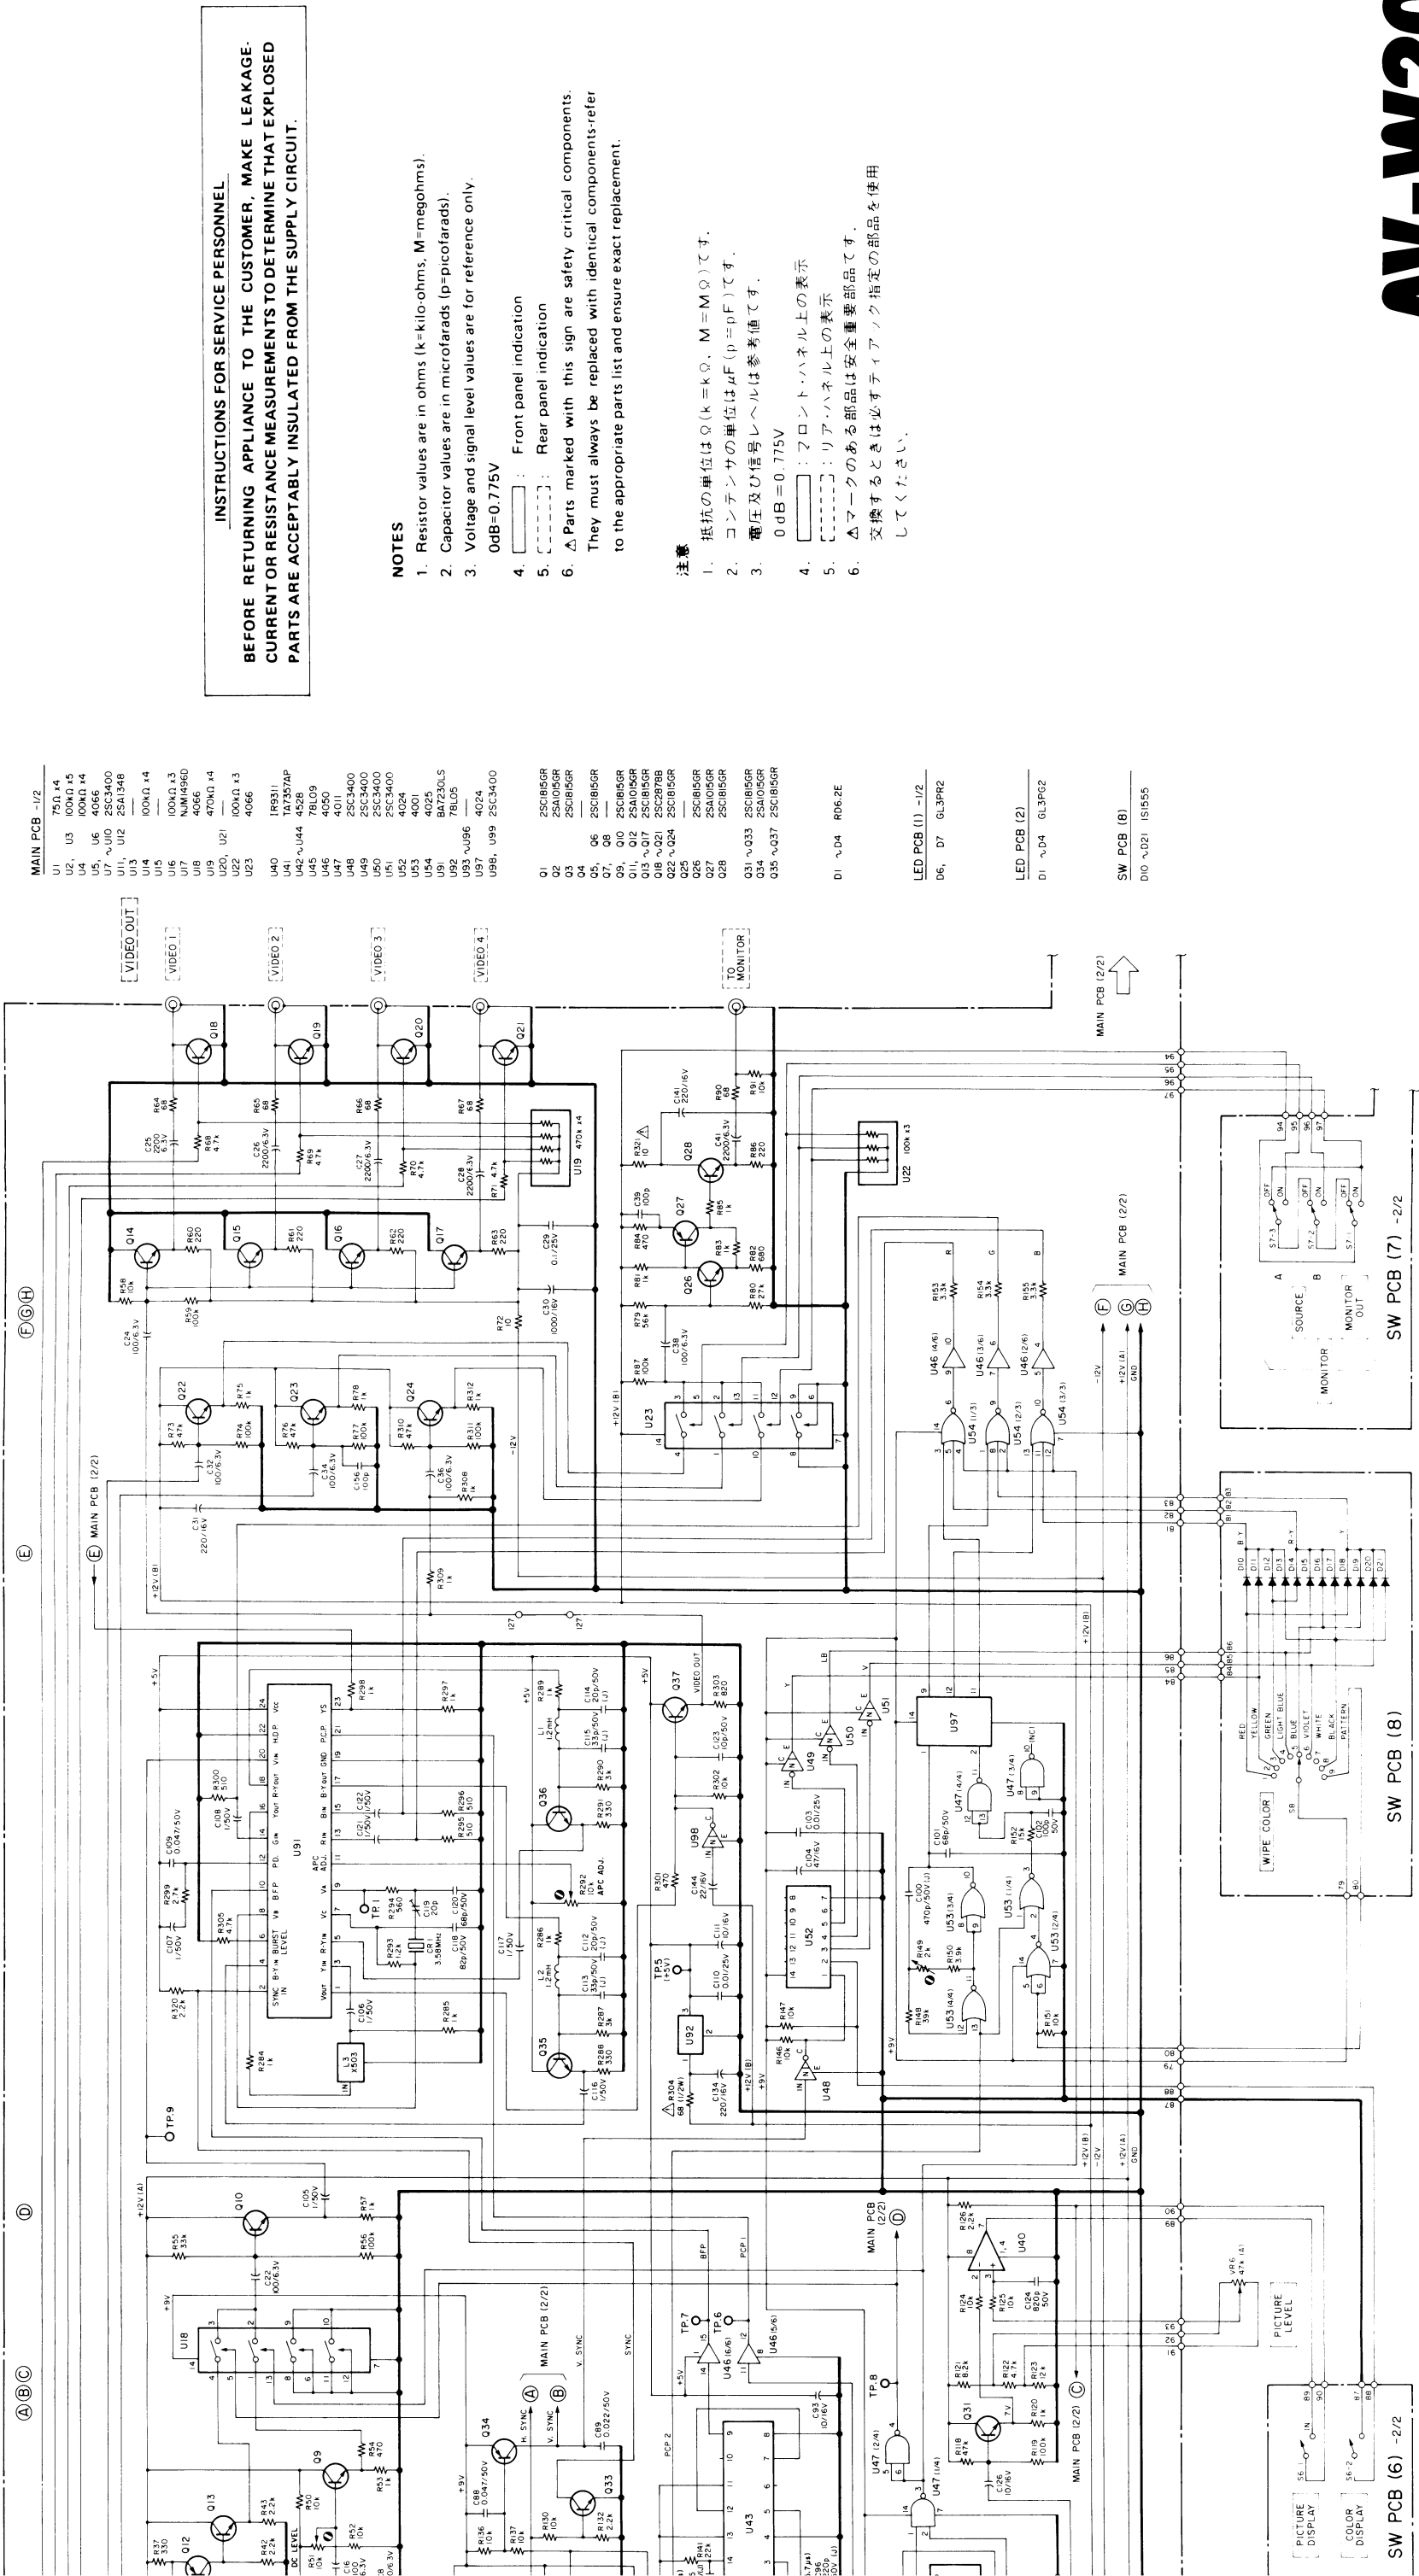

INSTRUCTIONS FOR SERVICE PERSONNEL
BEFORE RETURNING APPLIANCE TO THE CUSTOMER, MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT.

NOTES

- 1. Resistor values are in ohms (k=kilo-ohms, M=megohms).
- 2. Capacitor values are in microfarads (p=picofarads).
- 3. Voltage and signal level values are for reference only.
- 4. 0dB=0.775V
- 5. [] : Front panel indication
- 6. [] : Rear panel indication
- 7. [] : Parts marked with this sign are safety critical components. They must always be replaced with identical components-refer to the appropriate parts list and ensure exact replacement.


注意

- 1. 抵抗の単位はΩ (k=kΩ, M=MΩ) です。
- 2. コンデンサの単位はμF (p=pF) です。
- 3. 電圧及び信号レベルは参考値です。
- 4. 0dB=0.775V
- 5. [] : フロント・パネル上の表示
- 6. [] : リア・パネル上の表示
- 7. △マークのある部品は安全重要部品です。交換するときは必ずアイソック指定の部品を使用してください。

AV-W20

Audio/Video Selector & Wipe Generator

1st Issue: February, 1987

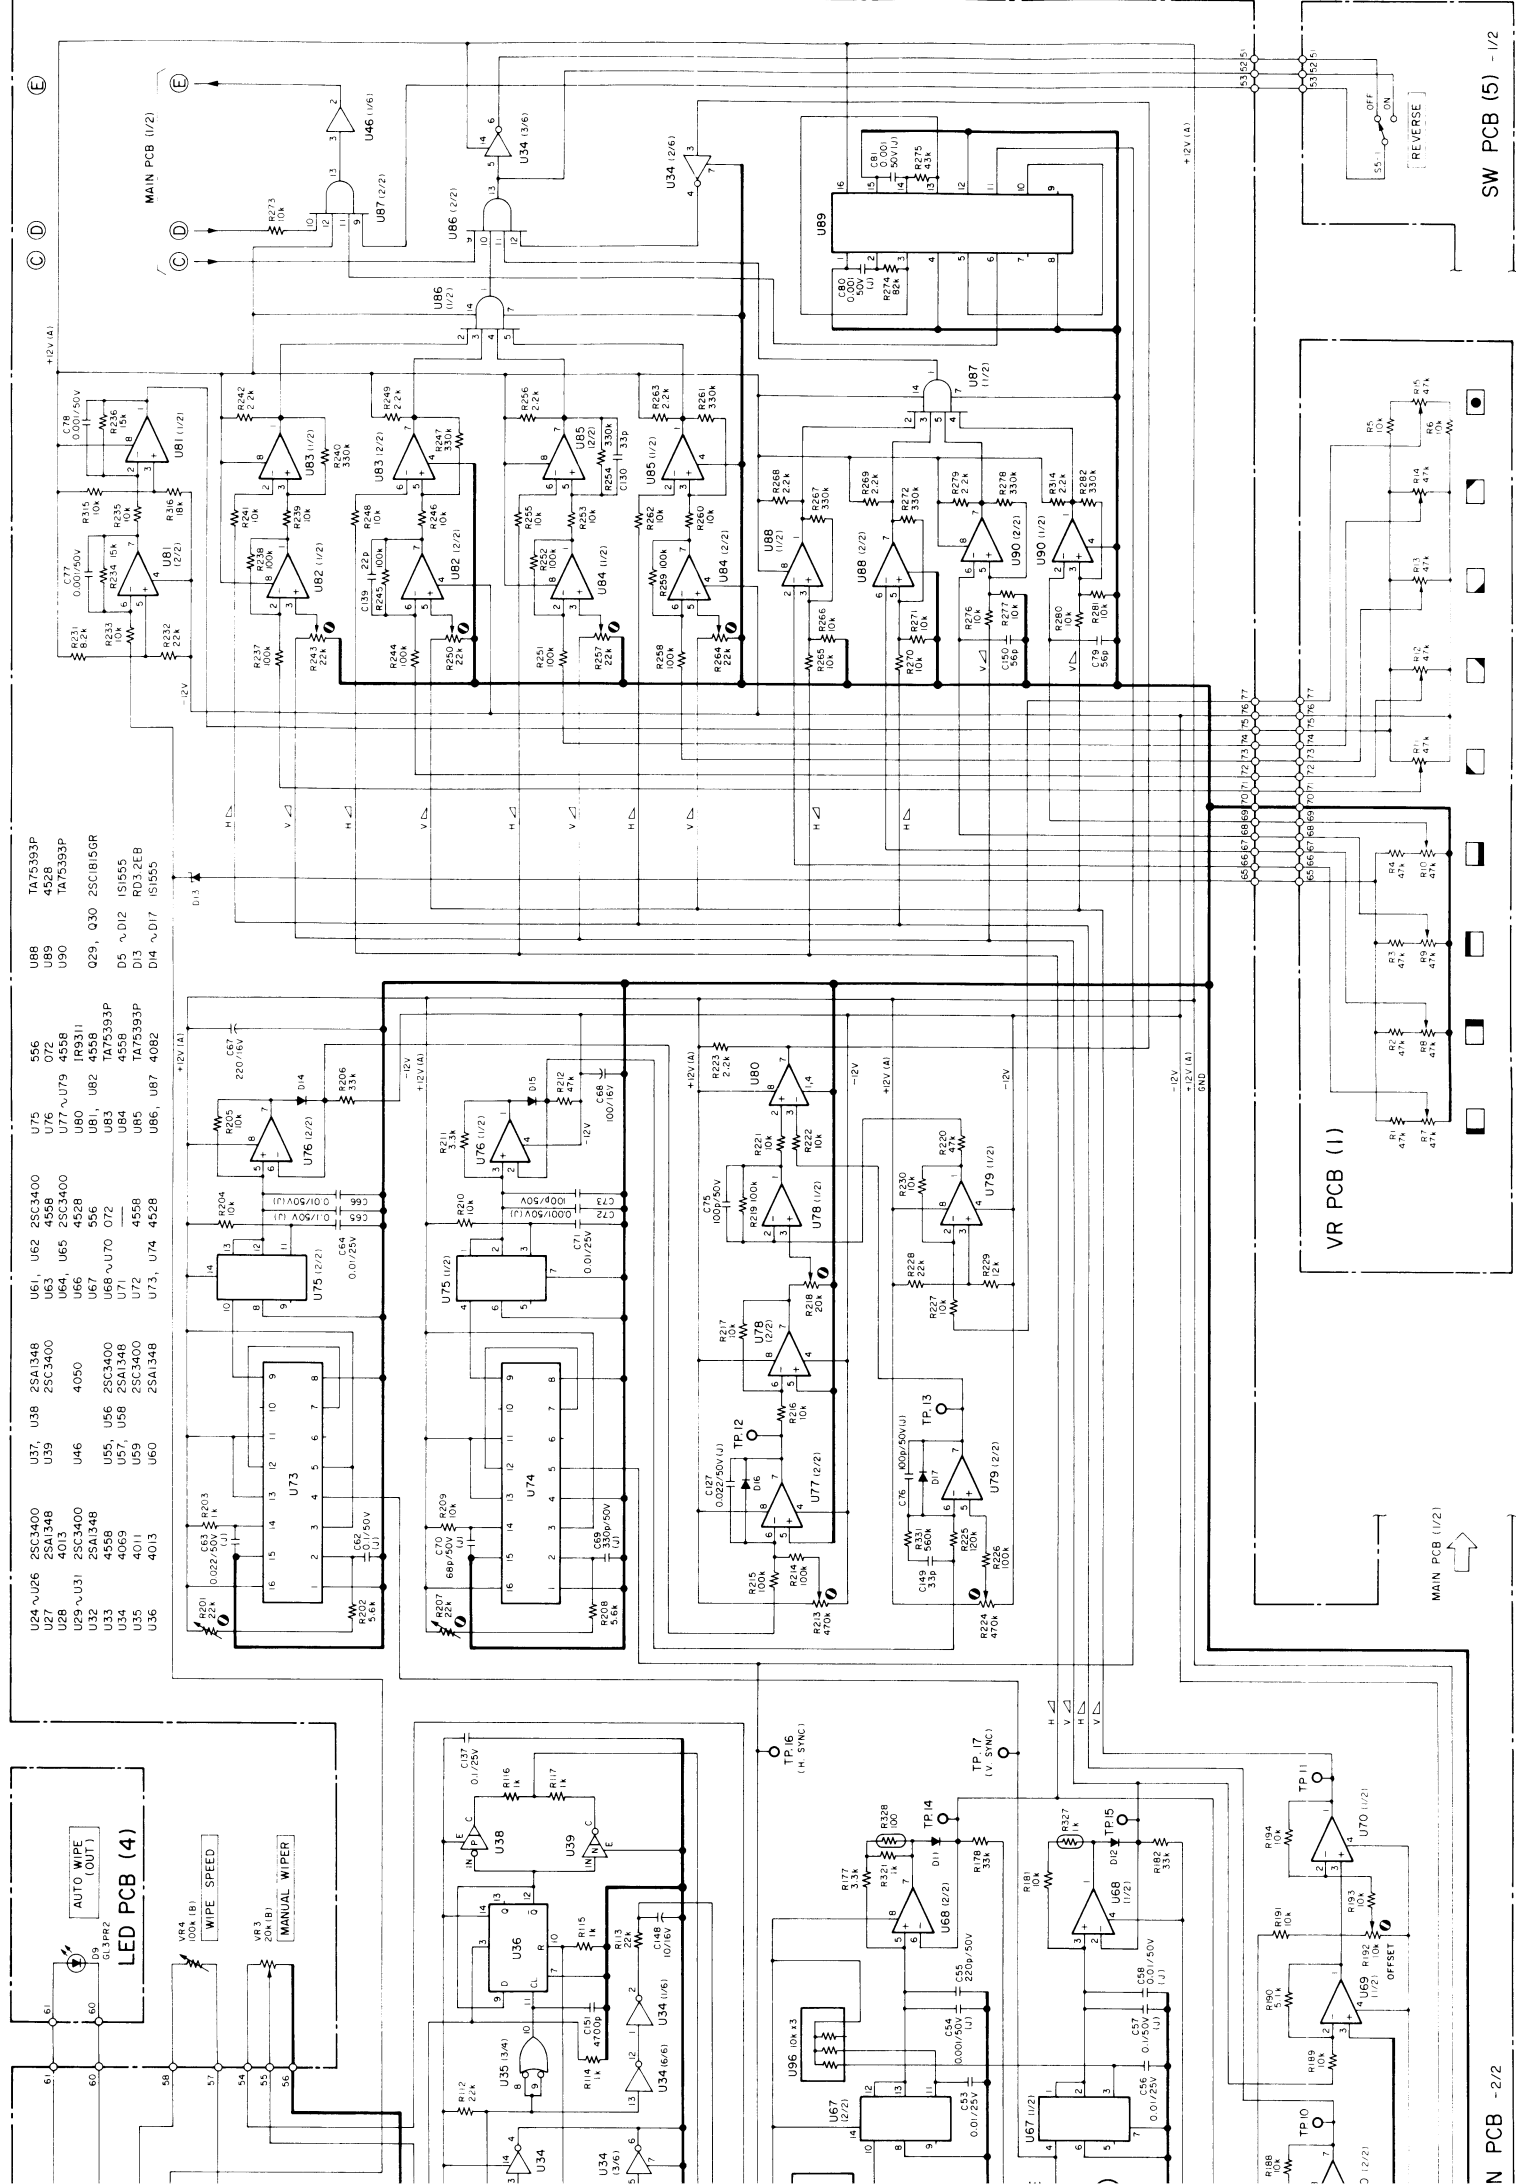

INSTRUCTIONS FOR SERVICE PERSONNEL

BEFORE RETURNING APPLIANCE TO THE CUSTOMER, MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT.

NOTES

1. Resistor values are in ohms (k=kilo-ohms, M=megohms).
2. Capacitor values are in microfarads (p=picofarads).
3. Voltage and signal level values are for reference only.
4. $0dB=0.775V$
5. $\square$: Front panel indication
6. $\square$: Rear panel indication
7. Δ Parts marked with this sign are safety critical components. They must always be replaced with identical components refer to the appropriate parts list and ensure exact replacement.


注意

1. 抵抗の単位は Ω (k=k Ω , M=M Ω)です。
2. コンデンサの単位は μF (p=pF)です。
3. 電圧及び信号レベルは参考値です。
4. $0dB=0.775V$
5. $\square$: フロントパネル上の表示
6. $\square$: リアパネル上の表示
7. Δ マークのある部品は安全重要部品です。交換するときは必ずティアック指定の部品を使用してください。


AV-W20

Audio/Video Selector & Wipe Generator

1st Issue: February, 1987

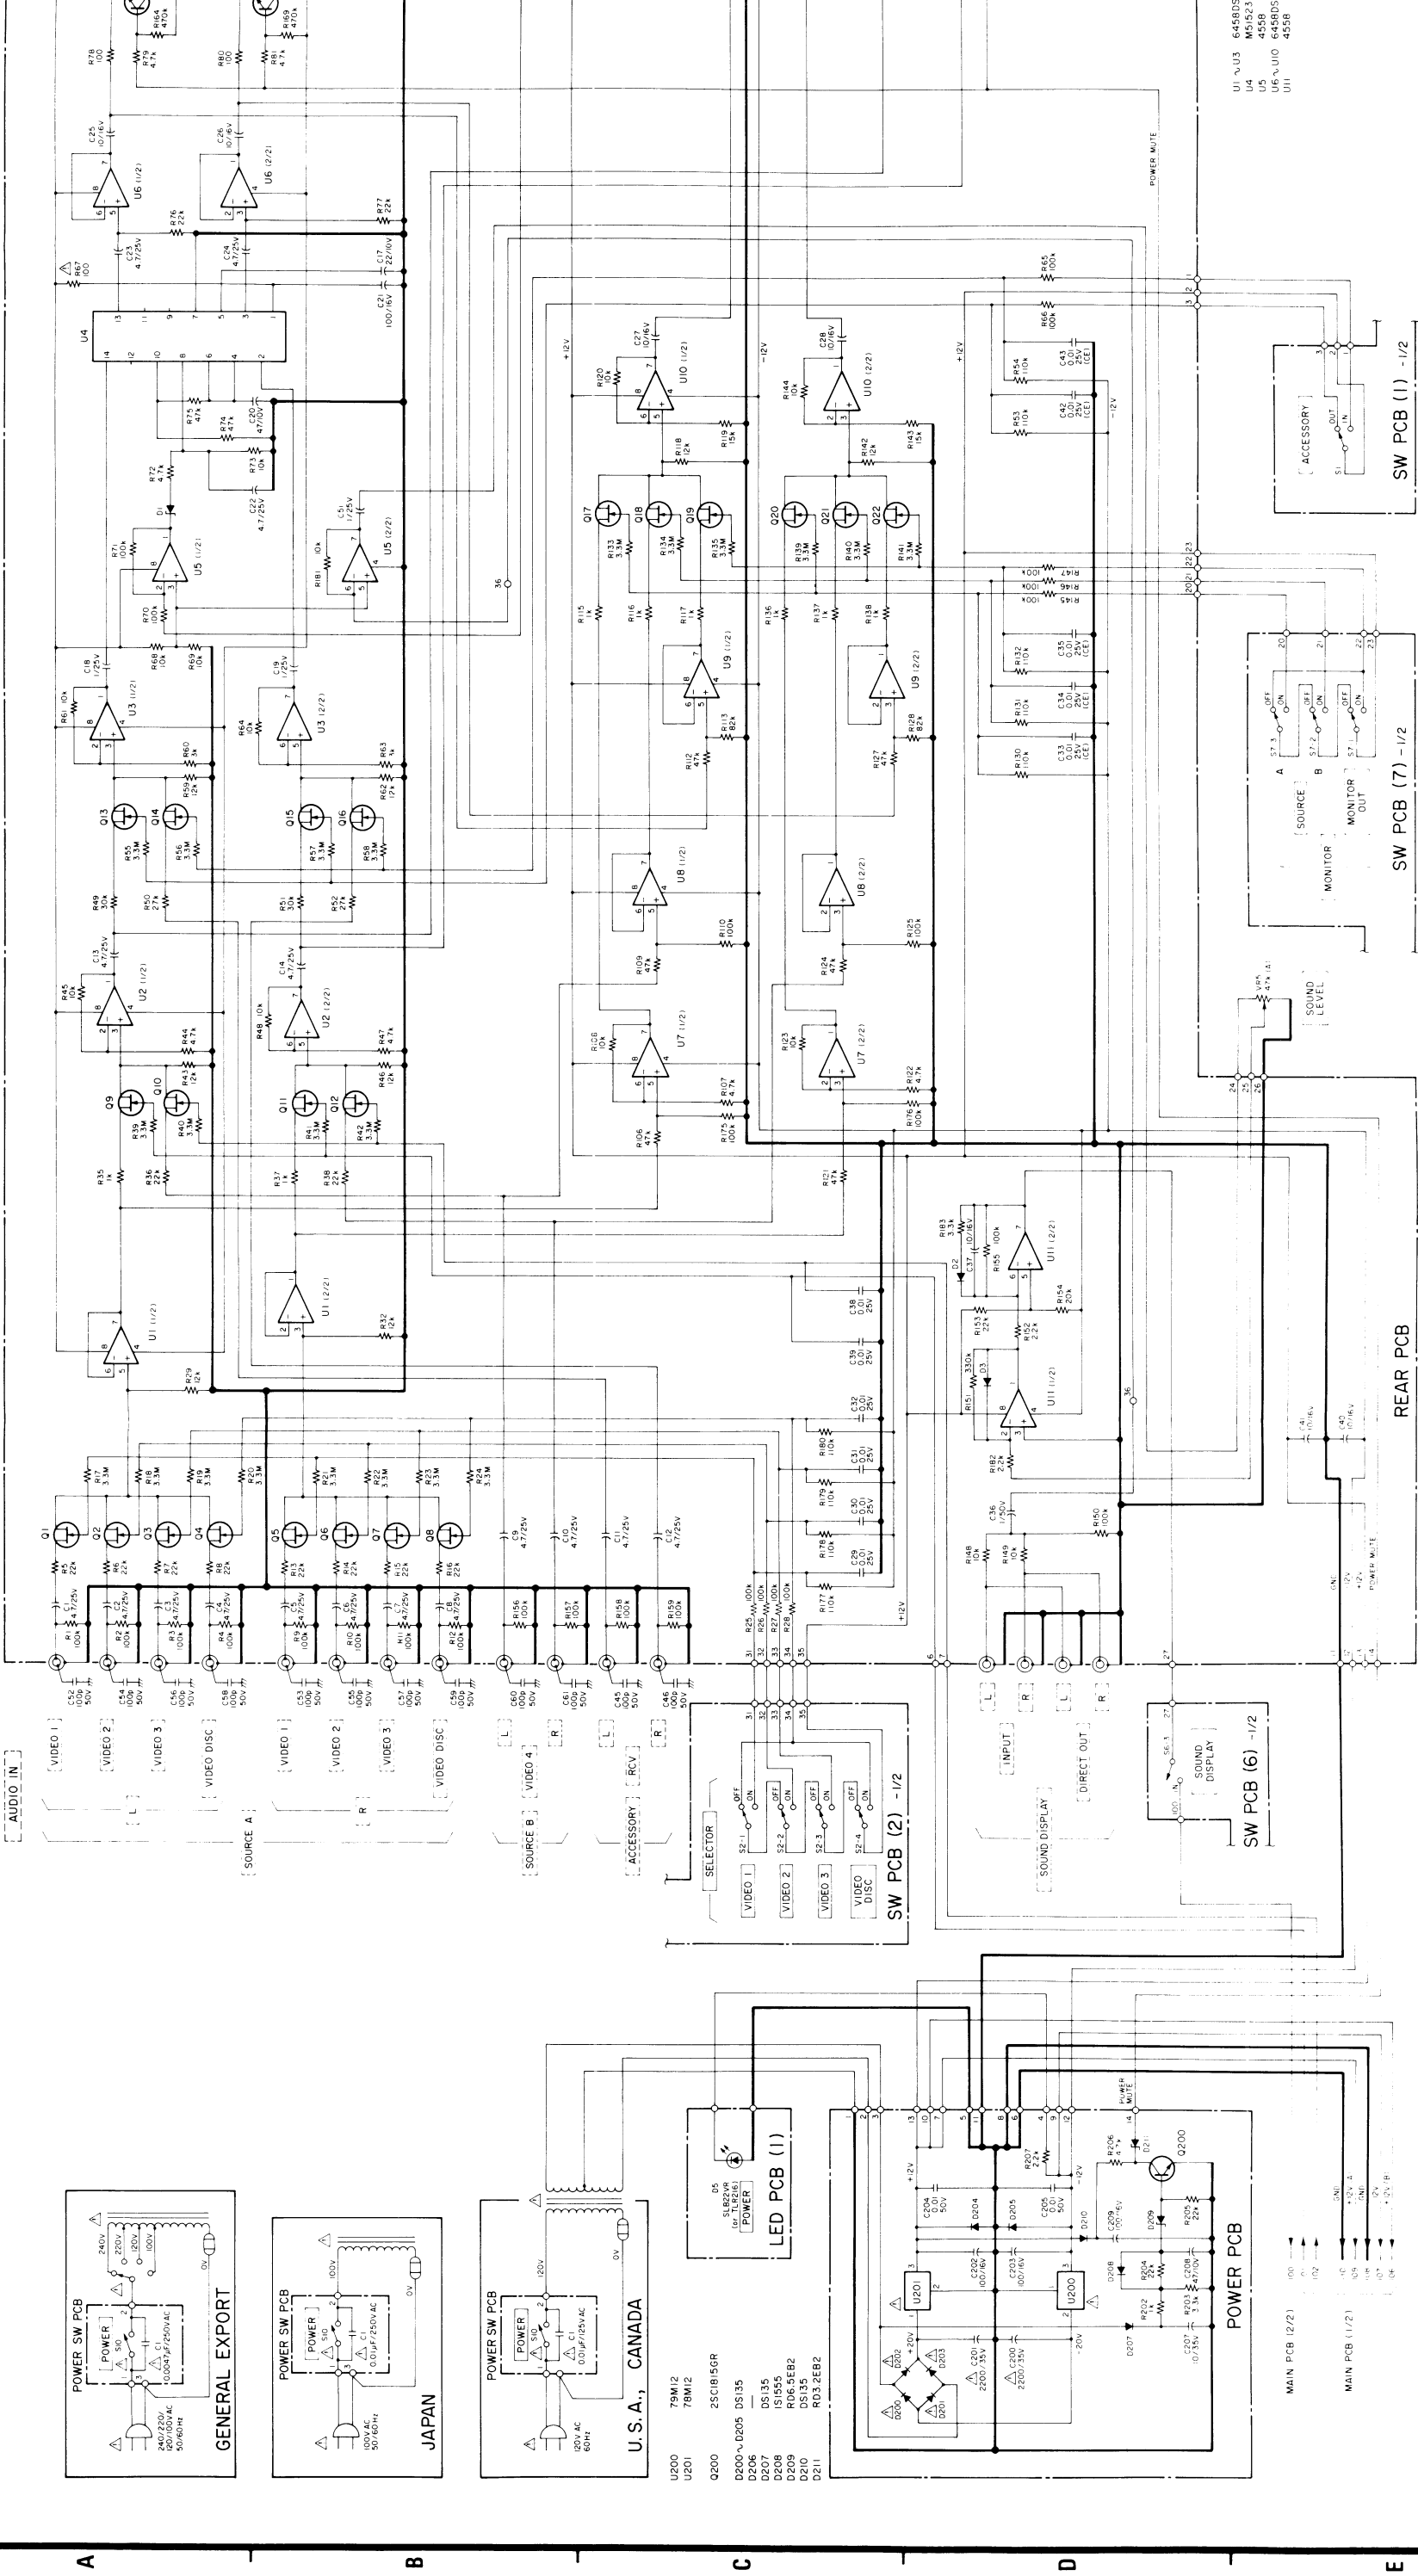

U1 ~ U3 64580DS
U4 M5123
U5 4558
U6 ~ U10 64580DS
U11 4558

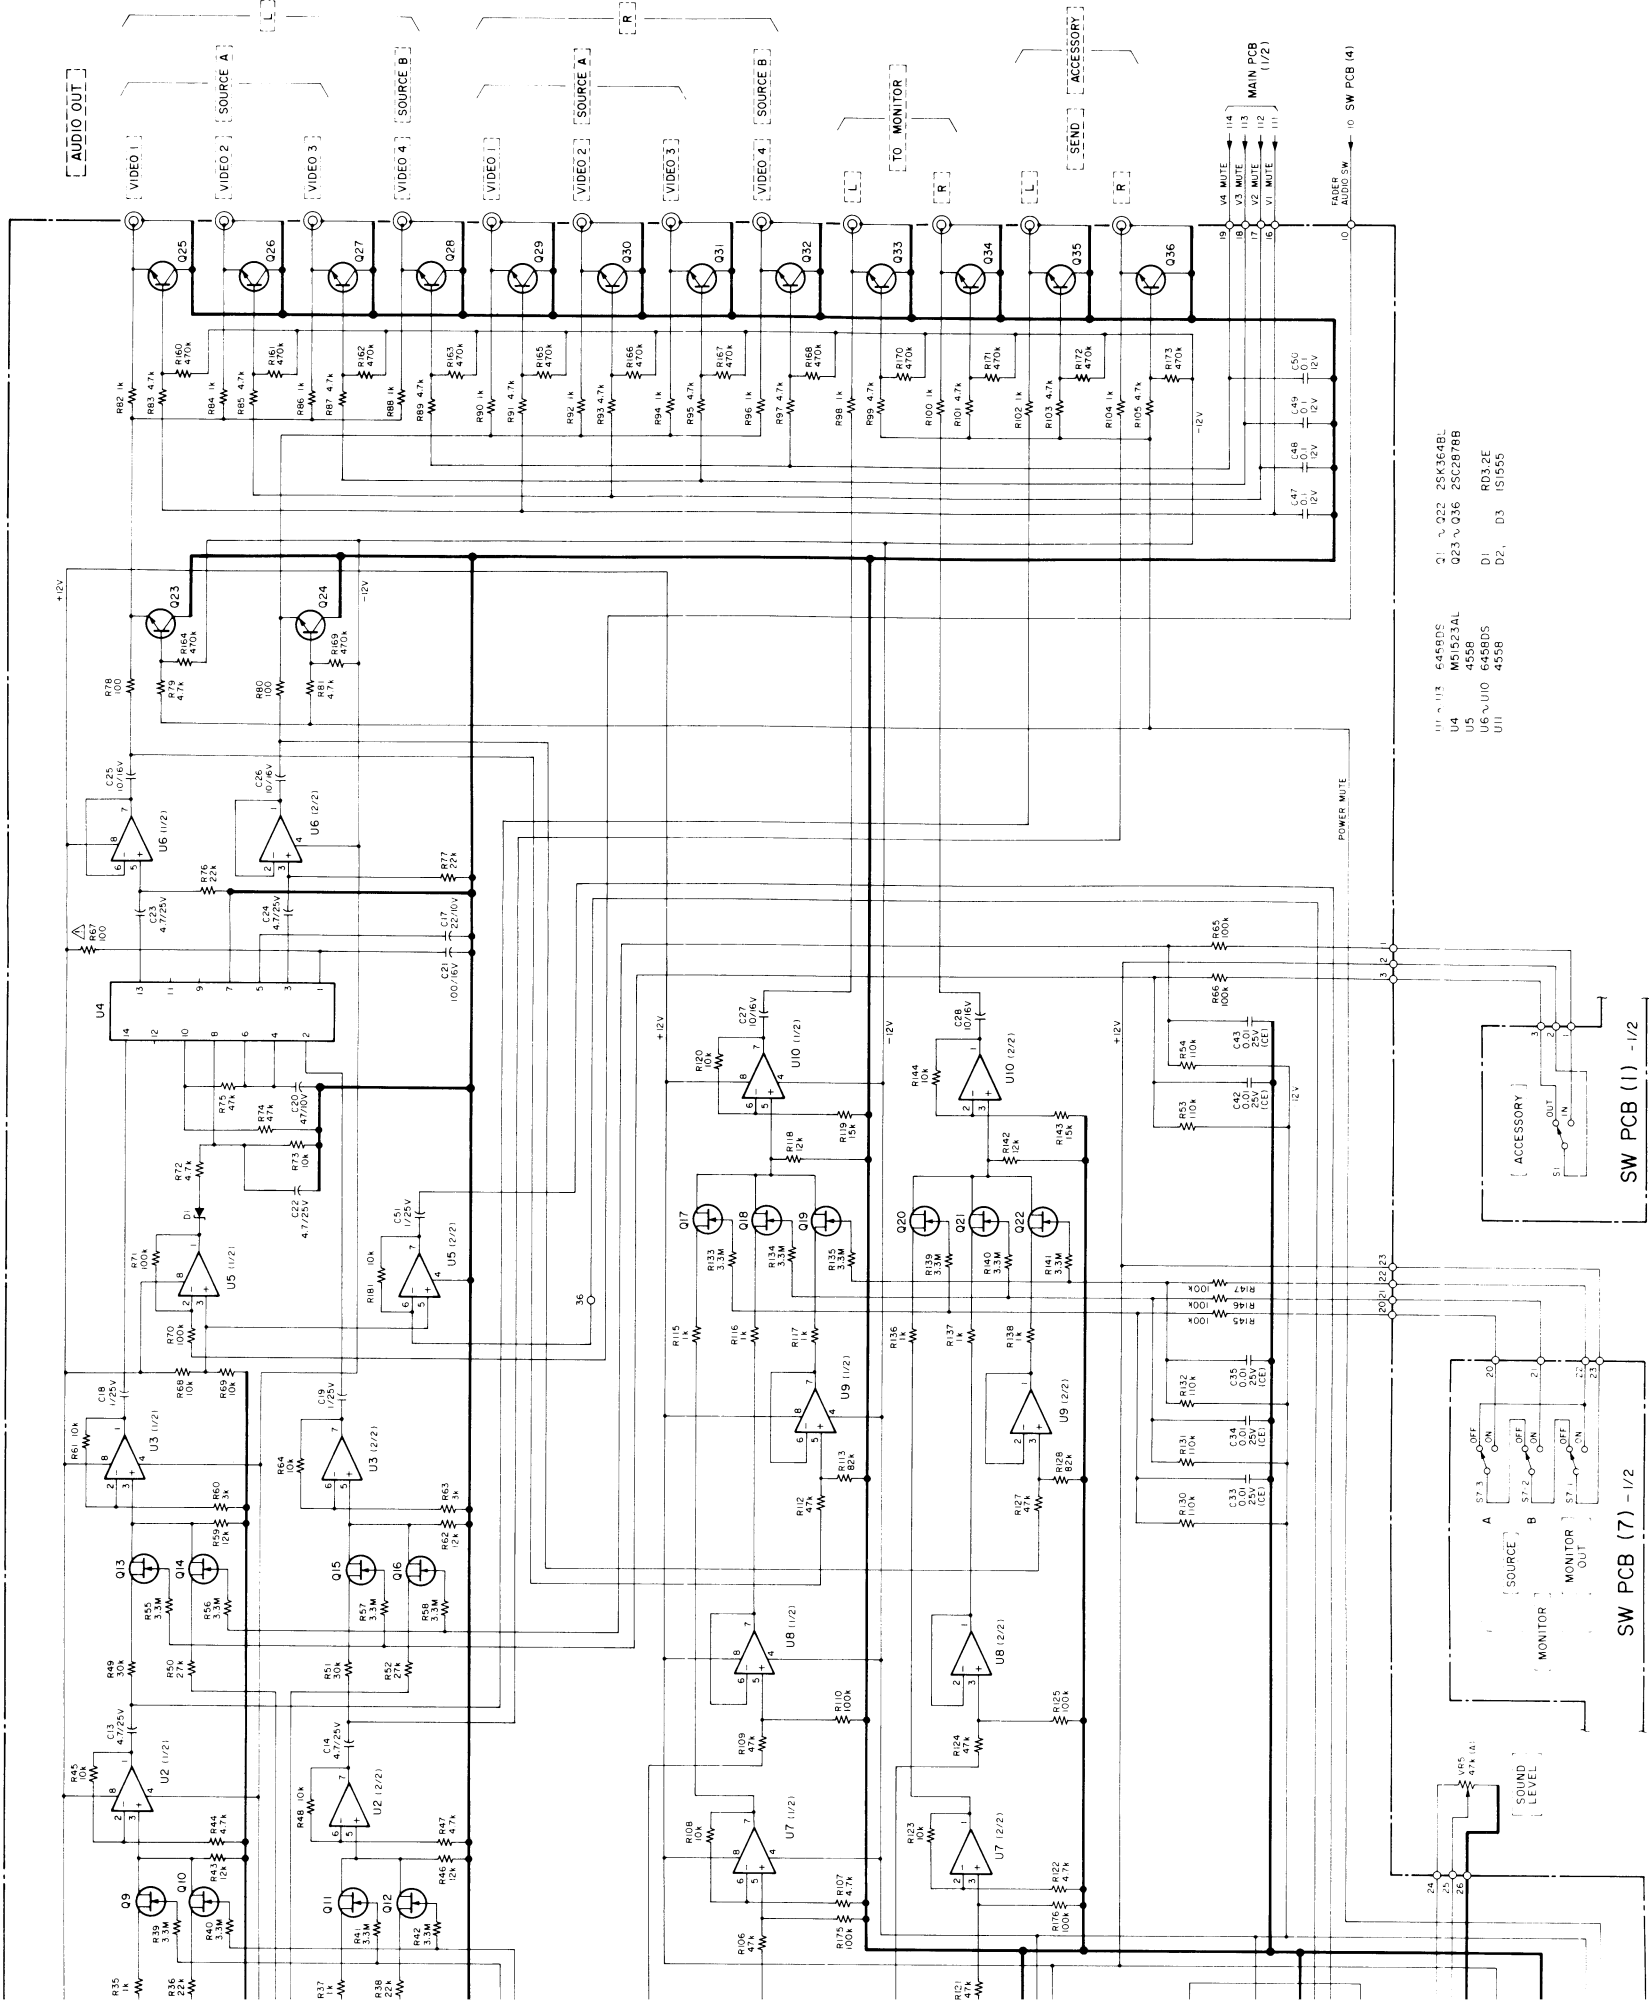

INSTRUCTIONS FOR SERVICE PERSONNEL

BEFORE RETURNING APPLIANCE TO THE CUSTOMER, MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT.

NOTES

1. Resistor values are in ohms (k=kilo-ohms, M=megohms).
2. Capacitor values are in microfarads (p=picofarads).
3. Voltage and signal level values are for reference only.
0dB=0.775V
4. [] : Front panel indication
5. [] : Rear panel indication
6. Δ Parts marked with this sign are safety critical components. They must always be replaced with identical components-refer to the appropriate parts list and ensure exact replacement.

注意

1. 抵抗の単位はΩ (k=kΩ, M=MΩ) です。
コンデンサの単位はμF (p=pF) です。
2. 電圧及び信号レベルは参考値です。
0dB=0.775V
4. [] : フロント・パネル上の表示
5. [] : リア・パネル上の表示
6. Δマークのある部品は安全重要部品です。
交換するときには必ずティアップ指定の部品を使用してください。

AV-W20

Audio/Video Selector & Wipe Generator