



TAPE DECK MODEL RS-676US SCHEMATIC DIAGRAM


PRE-AMPLIFIER UNIT

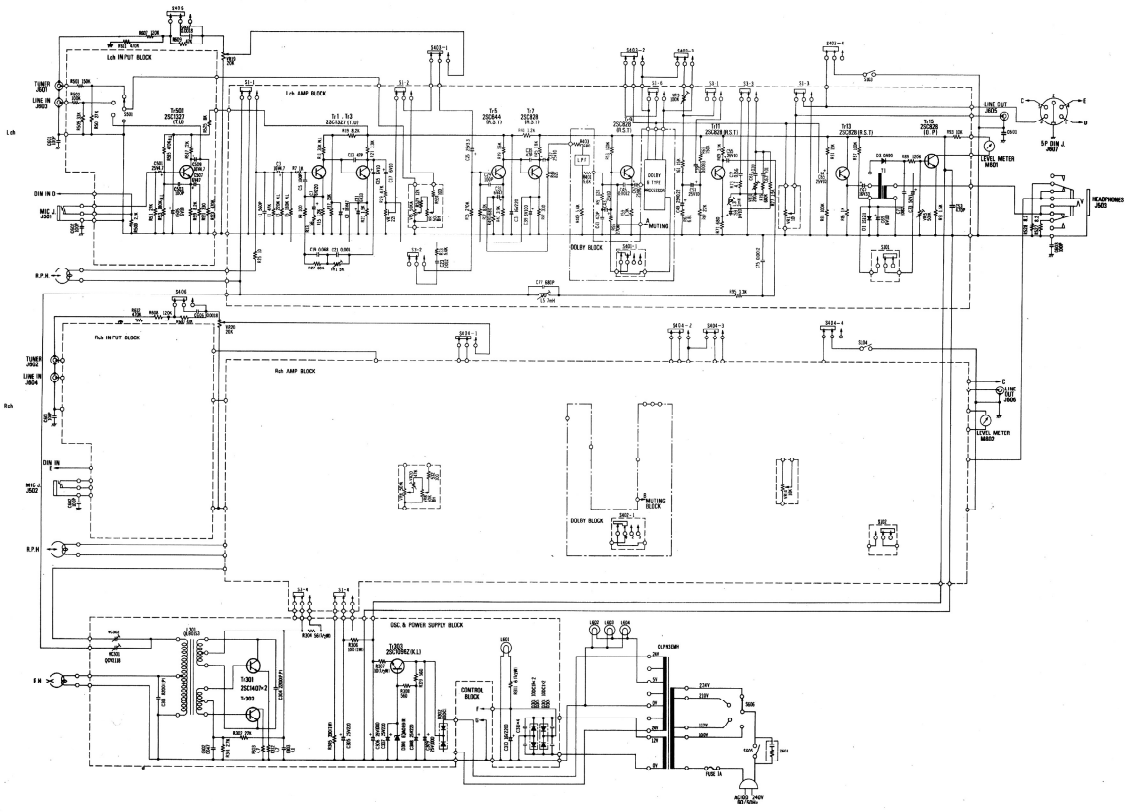

CONTROL UNIT

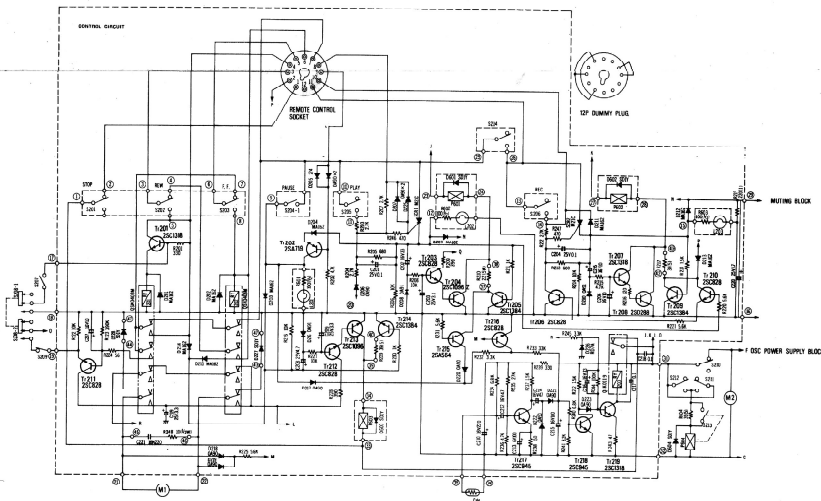

DOLBY UNIT

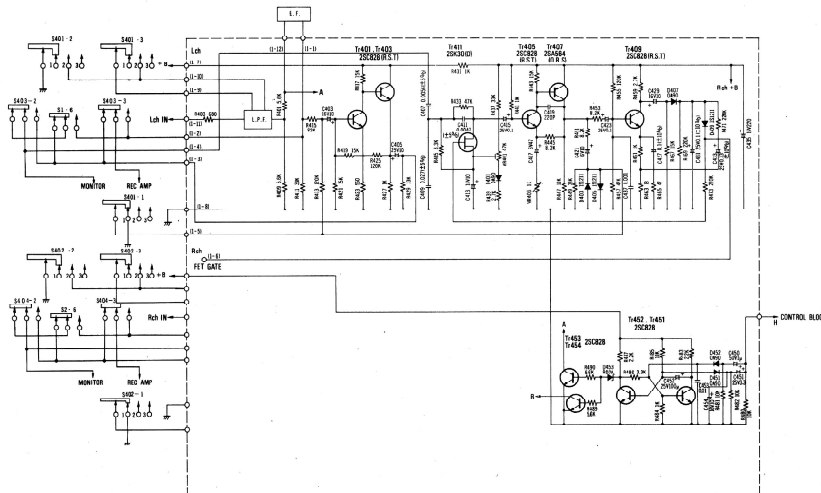

- S1, 2 : REC/PR SW (PR POSITION)
- S3, 4 : TAPE SELECTOR SW (NORMAL POSITION)
- S101, 102 : PEAK CHECK SW (OFF POSITION)
- S103, 104 : STOP MUTING SW
- S401, 402 : DOLBY NR SW 1. NR: OUT
2. NR: IN, MPX FILTER: IN
3. NR: IN, MPX FILTER: OUT
- S403, 404 : DOLBY FM: IN/OUT SW (OUT POSITION)
- S405, 406 : DOLBY FM DE-EMPH SW (CONVENTIONAL/25µs
(CONVENTIONAL POSITION)
- S501, 502 : IN PUT SELECTOR SW (TUNER POSITION)
- S605 : POWER SW
- L601 : AUTO STOP LIGHT
- L602 : CASSETTE CABIN LIGHT
- L603 : METER LIGHT
- L604 : METER LIGHT (L, R)
- ABSENT SERIAL NUMBER OF R 31, 32, 79, 80, 530, 604
L 1, 2
C 27, 28, 54, 604
VR 19
- S201 : STOP SW
- S202 : REWIND SW
- S203 : FAST FORWARD SW
- S204 : PAUSE SW (PUSH SW)
- S205 : PLAY SW
- S206 : RECORD SW
- S207 : MEMORY COUNTER
- S208 : MEMORY & PLAY SW (PUSH SW)
- S209 : MEMORY & PLAY SW (MICRO SW)
- S210 : POWER SUPPLY SW
(CLOSE WHEN CASSETTE IN)
- S211 : TAPE SELECTOR SW
(LEVER SW)
- S212 : AUTO MATIC TAPE SELECTOR SW
- S213 : CURRENT SAVE SW
(COOPERATED WITH P604)
- S214 : KNOCK OUT TUB SENSER
(CLOSE WHEN CASSETTE
WITH KNOCK OUT TUB IN)
- P601 : PLAY PLUNGER
- P602 : REC PLUNGER
- P603 : PAUSE PLUNGER
- P604 : TAPE SELECTOR PLUNGER
- RY201 : REWIND RELAY
- RY202 : FAST FORWARD RELAY
- RY203 : AUTO STOP RELAY
- M1 : REW, FF MOTOR
- M2 : CAPSTAN MOTOR

* ALL RESISTORS' TOLERANCES ARE ±5%

* This schematic diagram is subject to change, to accommodate improvements in design.