


Service Manual

COMPACT
disc
DIGITAL AUDIO

DIGITAL

MASH*
multi-stage noise shaping

Compact Disc Changer
SL-PD1010

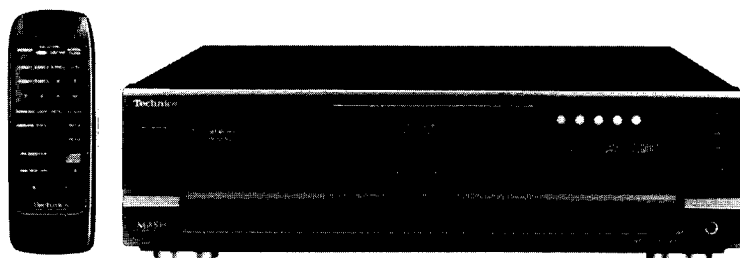

Colour

(K) ... Black Type

Area

Suffix for Model No.	Area	Colour
(E)	Europe.	(K)
(EB)	Great Britain.	
(EG)	Germany and Italy.	
(GN)	Oceania.	

- ※ • Technics (or Panasonic) developed the world's first MASH type DAC and ADC. MASH technology was invented by NTT (LSI Labs).
• MASH is a trademark of NTT.

RAE0113Z MECHANISM SERIES

■ SPECIFICATIONS

■ AUDIO

No. of channels	2 (left and right, stereo)
Frequency response	2–20,000 Hz, ±1 dB
Output voltage	2 V (at 0 dB)
Dynamic range	92 dB
S/N	100 dB
Total harmonic distortion	0.007 % (1 kHz, 0 dB)
Wow and flutter	Below measurable limit
DA converter	MASH (1 bit)
Output impedance	Approx. 1 kΩ
Load impedance	More than 10 kΩ
Headphones output level	3 mW max. 32 Ω

■ PICKUP

Wavelength 780 nm

■ GENERAL

Power consumption	16 W
Power supply	AC 50/60 Hz, 230–240 V
Dimensions (W × H × D)	430 × 125 × 372 mm
Weight	4.6 kg

Note:

Design and specifications are subject to change without notice.
Weight and dimensions are approximate.

■ CONTENTS

	Page
PRECAUTION OF LASER DIODE.....	2
ACCESSORIES.....	3
CONNECTIONS.....	3
CAUTION FOR AC MAINS LEAD.....	4
CAUTIONS CONCERNING THE MOVING OF THIS UNIT.....	4, 5
FRONT PANEL CONTROLS.....	5
BASIC OPERATIONS.....	6, 7
QUICK REFERENCE TABLE OF	
REMOTE CONTROL OPERATION.....	8, 9
SELF-DIAGNOSTIC DISPLAY FUNCTION.....	10
HANDLING PRECAUTIONS FOR TRAVERSE DECK.....	11
REPLACEMENT OF THE FOOT.....	11
DISASSEMBLY INSTRUCTIONS.....	12~23
AUTOMATIC ADJUSTMENT RESULTS	
DISPLAY FUNCTION.....	24

	Page
DIGITAL SERVO SYSTEM.....	25
MEASUREMENTS AND ADJUSTMENTS.....	26, 27
TROUBLESHOOTING.....	28, 29
TERMINAL GUIDE.....	30~35
TERMINAL GUIDE OF IC'S, TRANSISTORS, AND DIODES.....	35
BLOCK DIAGRAM.....	36~40
SCHEMATIC DIAGRAM.....	41~48
PRINTED CIRCUIT BOARDS.....	49~51
WIRING CONNECTION DIAGRAM.....	52
REPLACEMENT PARTS LIST.....	53~55, 60
LOADING MECHANISM PARTS.....	56
CABINET PARTS LOCATION.....	57, 58
RESISTORS AND CAPACITORS.....	59, 60
PACKAGING.....	61

Technics®

© 1995 Matsushita Electric Industrial Co., Ltd.
All rights reserved. Unauthorized copying and
distribution is a violation of law.

△ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

■ PRECAUTION OF LASER DIODE

CAUTION: This product utilizes a laser diode with the unit turned "on", invisible laser radiation is emitted from the pickup lens.

Wave length: 780nm

Maximum output radiation power from pickup: 100µW/VDE

Laser radiation from the pickup lens is safety level, but be sure the followings:

1. Do not disassemble the optical pickup unit, since radiation from exposed laser diode is dangerous.
2. Do not adjust the variable resistor on the pickup unit. It was already adjusted.
3. Do not look at the focus lens using optical instruments.
4. Recommend not to look at pickup lens for a long time.

ACHTUNG: Dieses Produkt enthält eine Laserdiode. Im eingeschalteten Zustand wird unsichtbare Laserstrahlung von der Lasereinheit abgestrahlt.

Wellenlänge: 780nm

Maximale Strahlungsleistung der Lasereinheit: 100µW/VDE


Die Strahlung an der Lasereinheit ist ungefährlich, wenn folgende Punkte beachtet werden:

1. Die Lasereinheit nicht zerlegen, da die Strahlung an der freigelegten Laserdiode gefährlich ist.
2. Den werkseitig justierten Einstellregler der Lasereinheit nicht verstellen.
3. Nicht mit optischen Instrumenten in die Fokussierlines blicken.
4. Nicht über längere Zeit in die Fokussierlinse blicken.

ADVARSEL: I dette a apparat anvendes laser.

• Use of caution label






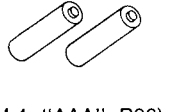
DANGER	INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM.
ADVARSEL	USYNLIG LASERSTRÅLING VED ÅBNING. NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.
VARO!	AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALTTIINA NÄKYMÄTÖNTÄ LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.
VARNING	OSYNLIG LASERSTRÅLING NÅR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRAKTA EJ STRÅLEN.
ADVARSEL	USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES OG SIKKERHEDSLÅS BRYTES. UNNGÅ EKSPONERING FOR STRÅLEN.
VORSICHT	UNSICHTBARE LASERSTRALUNG. WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN. RQLS0104

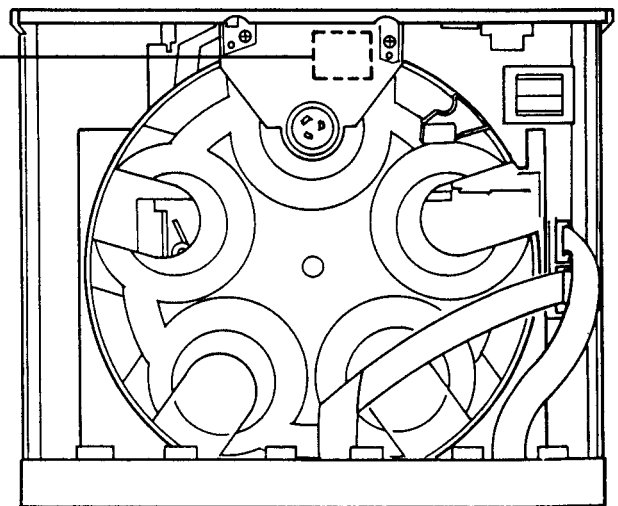

CAUTION!
THIS PRODUCT UTILIZES A LASER.
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

ACCESSORIES

AC power supply cord 1 pc.	Stereo connection cable 1 pc.	Remote control transmitter 1 pc.	Batteries for remote control transmitter ... 2 pcs.
----------------------------------	-------------------------------------	---------------------------------------	---

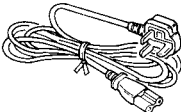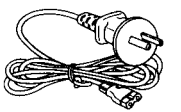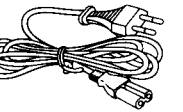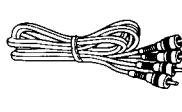					
[VJA0733 (EB)]	[RJA0036-K (GN)]	[RJA0019-2K (E, EG)]	[SJP2249-3]	[RAK-SL122WH]	(UM-4, "AAA", R03) Note: There are available on sale route.


 
CONNECTIONS

[For (EB) area only]
BE SURE TO READ THE CAUTION FOR AC POWER SUPPLY CORD ON PAGE 4 BEFORE THE FOLLOWING CONNECTIONS.

Before connecting the changer to your audio system, make sure that the power of the changer and all other system components is turned off.

- Although the figure below shows the AC power supply cord being connected to a household AC outlet, if the amplifier (or receiver) is equipped with an AC outlet, connect the cord to that outlet.
- The configuration of the AC outlet differs according to area.

Stereo connection cable

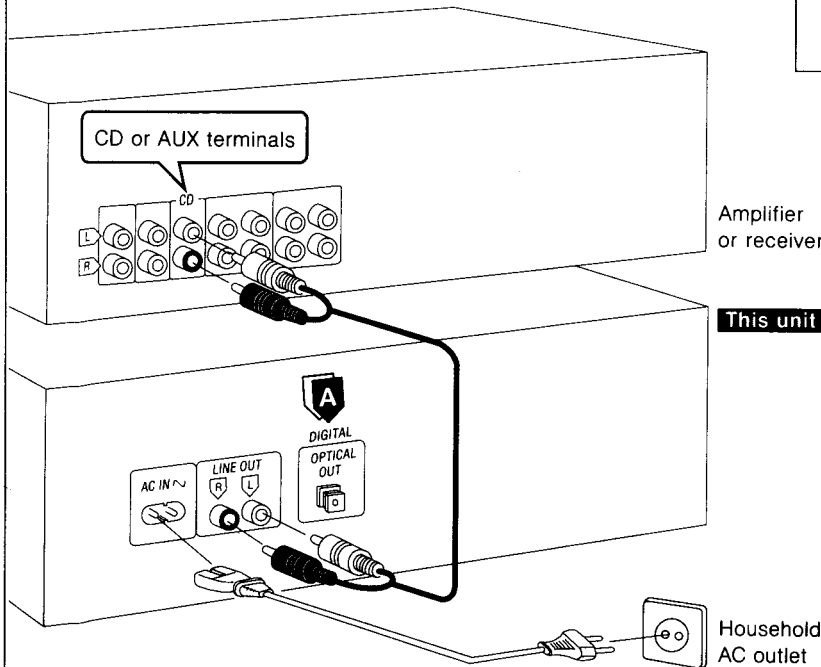


"DIGITAL OPTICAL OUT" terminal

This unit can be connected to the "OPTICAL IN" terminal of a digital compact cassette (DCC) player, DAT deck or digital amplifier using an optical fiber cable (not included).

Note

When the memory reserve function is on, no sound will be output from the "DIGITAL OPTICAL OUT" terminal at the rear of this unit. Make sure that the memory reserve indicator is off when making a digital recording.

 Optical fiber cable connections




Note

- Never force the optical fiber cables to bend excessively.
- Store the dust protection cap securely, and replace it whenever cables are not connected to the terminals.

[For (E, EB, EG) areas.]

Even when the connector is perfectly inserted, depending on the type of inlet used, the front part of the connector may jut out as shown in the drawing. However there is no problem using the unit.

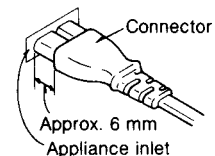

■ CAUTION FOR AC MAINS LEAD

For (EB) area.

(“EB” area code model only)

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug.

Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local dealer.

CAUTION!

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY.

THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.

If a new plug is to be fitted please observe the wiring code as shown below.

If in any doubt please consult a qualified electrician.

IMPORTANT


The wires in this mains lead are coloured in accordance with the following code:

Blue: Neutral, Brown: Live.

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Black or Blue.


The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Brown or Red.

WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E, BY THE EARTH SYMBOL  OR COLOURED GREEN OR GREEN/YELLOW.

THIS PLUG IS NOT WATERPROOF—KEEP DRY.


Before use

Remove the connector cover as follows.

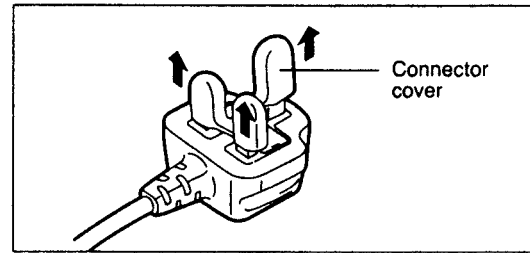


How to replace the fuse


1. Remove the fuse cover with a screwdriver.

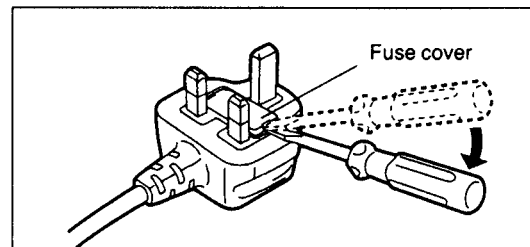

2. Replace the fuse and attach the fuse cover.

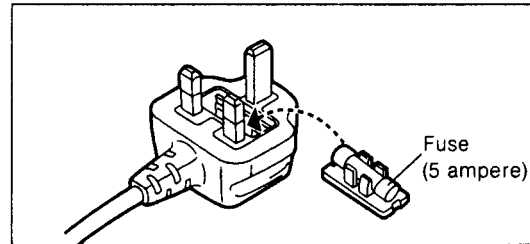

■ CAUTIONS CONCERNING THE MOVING OF THIS UNIT

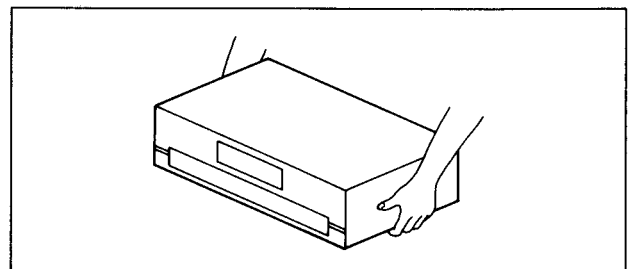

CAUTION

Before moving the changer to another location, be sure to carry out the “Preparations for moving the unit” described below.

Failure to do so will expose the compact discs and the changer to the risk of severe damage.


Preparations for moving the unit

All of the discs must be removed so that the trays are completely empty.

Use the following procedure.

- ① Press **POWER** to switch off the unit.
- ② Press **POWER** to switch on the unit.
(If there is a disc in the play section, it will be returned to the disc tray at this time.)
- ③ Press **OPEN/CLOSE** to open the loading drawer.
- ④ Press **DISC SKIP** to rotate the disc trays and remove the discs from all disc trays.
- ⑤ Press **OPEN/CLOSE** to close the loading drawer.
- ⑥ Press **POWER** to switch off the unit.


If you have pressed a wrong button by mistake, return to step ①.

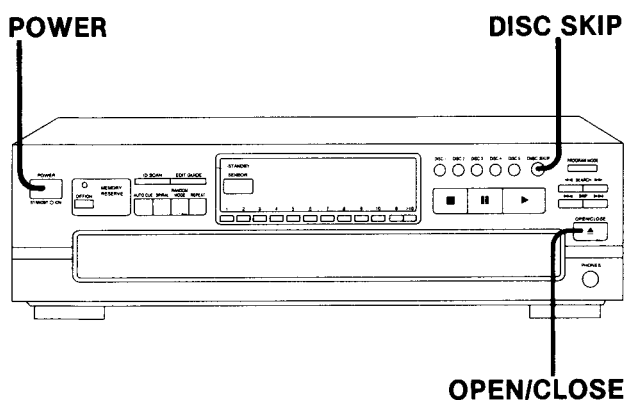

FRONT PANEL CONTROLS

No.	Name
①	Power "STANDBY ⏻ /ON" switch (POWER, STANDBY ⏻ /ON) Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
②	Memory reserve button/indicator (OFF/ON)
③	ID scan button (ID SCAN)
④	Edit guide button (EDIT GUIDE)


No.	Name
⑤	"STANDBY" indicator (STANDBY) When the unit is connected to the AC mains supply, this indicator lights up in standby mode and goes out when the unit is turned on.
⑥	Remote control signal sensor (SENSOR)
⑦	Display
⑧	Disc buttons (DISC 1 – 5)
⑨	Disc skip button (DISC SKIP)
⑩	Program mode button (PROGRAM MODE)
⑪	Auto cue button (AUTO CUE)
⑫	Spiral button (SPIRAL)
⑬	Random mode button (RANDOM MODE)
⑭	Repeat button (REPEAT)
⑮	Numeric buttons (1 – 10, 0, > 10)
⑯	Loading drawer
⑰	Stop button (■)
⑱	Pause button (⏸)
⑲	Play button (▶)
⑳	Search buttons (◀◀ SEARCH ▶▶)
㉑	Skip buttons (◀◀ SKIP ▶▶)
㉒	Loading drawer open/close button (▲ OPEN/CLOSE)
㉓	Headphones jack (PHONES)
㉔	Disc trays (1 – 5)

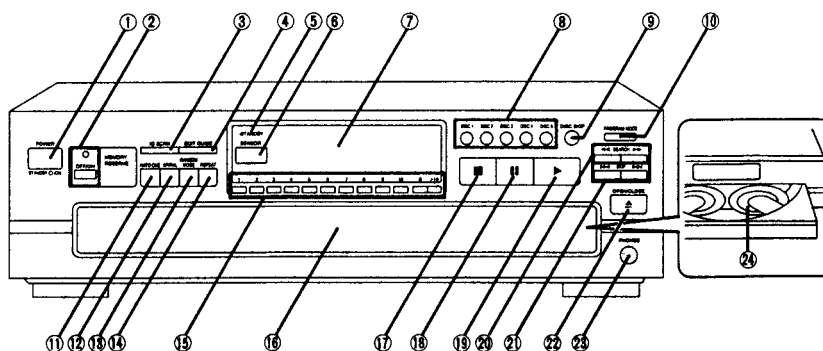

BASIC OPERATIONS

Sequential play

All of the discs will be played, beginning from track 1 on the selected disc.

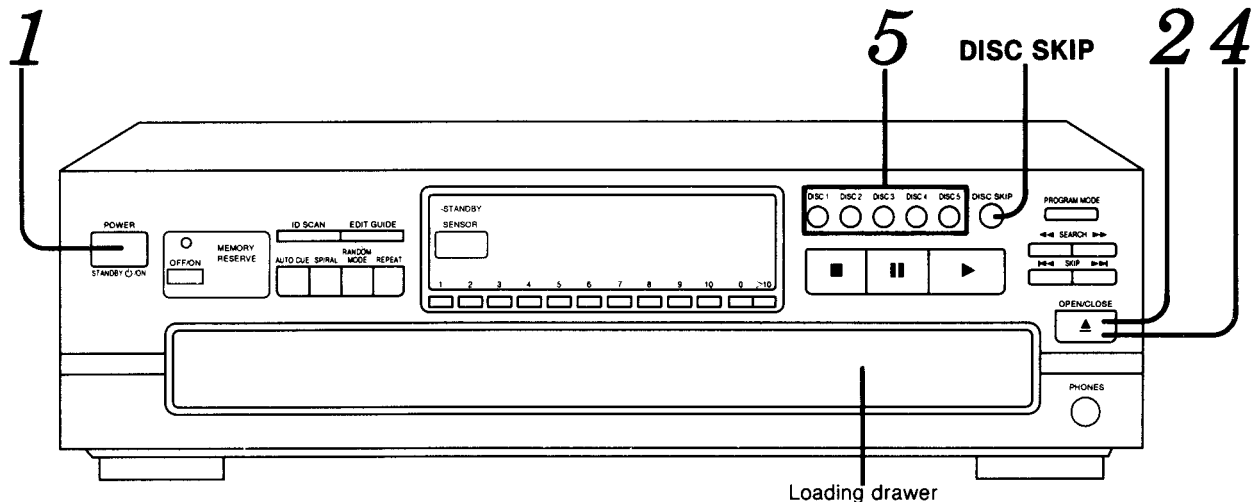

The explanation below is an example of operation in the case where all five disc trays in the changer are holding CDs.

1/ Press POWER.
 The unit will switch on.

2/ Press OPEN/CLOSE to open the loading drawer.
 Indicates that the loading drawer is open.

Numbers of the trays in which discs are loaded.

 
3/ Load the disc(s) on the disc tray(s).
 The discs can be loaded two at a time by pressing DISC SKIP to rotate the carousel.

Note
 Do not load 8 cm and 12 cm discs on the same disc tray.

CAUTION
 Do not touch the loading drawer and carousel while they are in motion, and do not attempt to rotate the carousel by hand; doing so could result in incorrect operation of the unit and/or damage to the discs.

4/ Press OPEN/CLOSE again to close the loading drawer.
Note
 Do not attempt to close the drawer by hand.

Current play position (The numeral illuminates with a red color.)




Illuminates when a disc is in the disc tray. If there is no disc in the disc tray, the indication disappears when the disc tray comes to the play position.

5/ Press the desired disc button (1-5).
 Play will begin from the selected disc. If a disc is not on the selected disc tray, the changer plays the disc at the next number.

Disc number in play Elapsed play time
 Track number in play Play indicator


The illumination of a disc button indicates that there is a disc in the corresponding tray. During play, the illumination color will change to green.

The changer plays all the tracks on all the discs in order and stops automatically when the last track on the last disc finishes playing. The first disc will then be at the playing position.

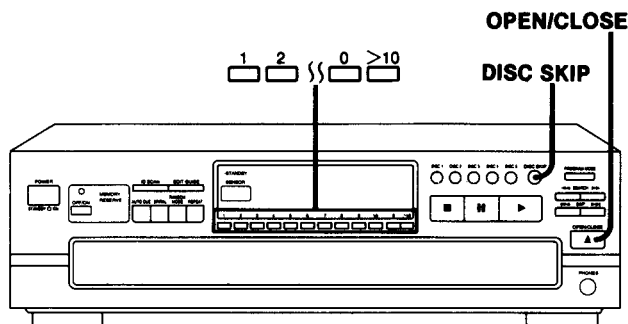

To directly access a desired track

Press the numeric button(s) to select the track.

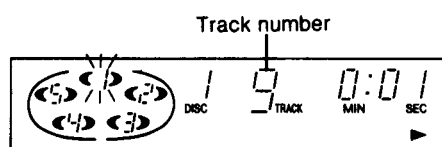


- To select a track between 1 and 10:**
Press the corresponding number on the numeric button.
- To select a two-digit track number over 10:**
First press >10, and then press the numbers for the two digits.
- For example; number 20:**
Press >10, then 2, and then 0.

To exchange discs during play

While playing a disc, it is possible to change the other discs without interrupting play.

① Press OPEN/CLOSE to open the loading drawer.

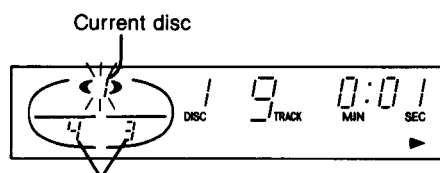

Discs which can be changed.


② Press DISC SKIP to rotate the disc trays and exchange the discs.

The carousel will move by one disc tray. Pressing again moves the carousel in the opposite direction by two disc trays.

③ Press OPEN/CLOSE to close the loading drawer.

Note


If you play a disc with the loading drawer open, discs other than the current disc cannot be played.

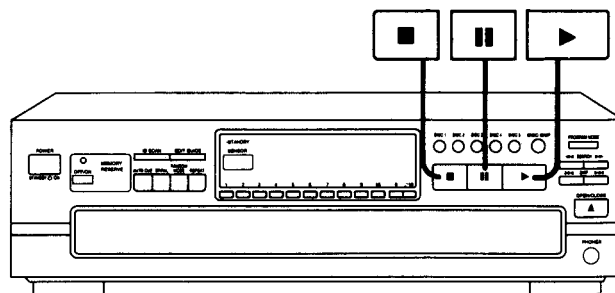

To temporarily stop play



Press **||**.

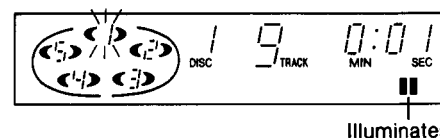

To resume play




Press **▶**.

To stop play



Press **■**.

The display will show the total number of tracks and the total playing time of the current disc.

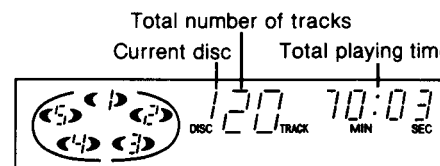

The total playing time displayed includes the silent sections between tracks. For this reason, it may be a few seconds longer than the playing time indicated on the disc.

To re-start play









 

 
 
 
 

 
 




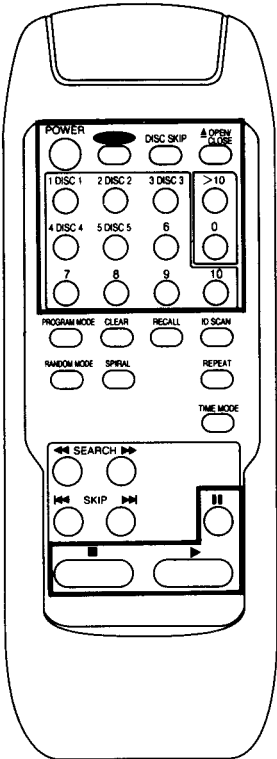




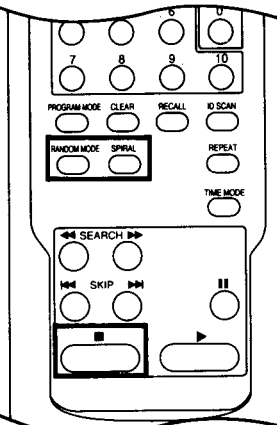

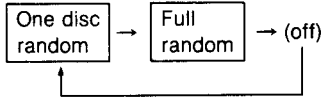




Press **▶**.


CAUTION

Do not move this changer with a compact disc inside the unit. If a disc comes off the disc tray, it might be scratched or the changer might become incapable of playing.


■ QUICK REFERENCE TABLE OF REMOTE CONTROL OPERATION





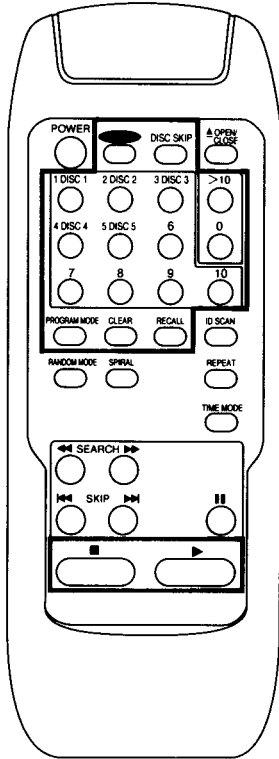

Basic operation		
	To turn OFF/ON the main unit	POWER 
	To open/close the loading drawer	 ▲ OPEN / CLOSE
	To rotate the carousel	DISC SKIP 
	To select the desired disc number	 →  1 DISC 1  2 DISC 2  3 DISC 3  4 DISC 4  5 DISC 5
	To select the desired track number	 1 DISC 1  2 DISC 2  3 DISC 3  >10  4 DISC 4  5 DISC 5  6  7  8  9  0  10 To select a track between 1 and 10: Press the corresponding number on the keypad. To select a two-digit track number over 10: First press >10, and then press the numbers for the two digits.
	To start play	
	To stop play temporarily	 Press  button to resume play.
To stop play		
Random/spiral play		
	To start one disc/full random play	RANDOM MODE  Each time the button is pressed, the random mode will change in the following order: 
	To start spiral play	SPIRAL  To cancel spiral mode, press this button again.
	To stop random/spiral play	 Random/spiral mode is also canceled at the same time.











Program/delete play



To start program/delete play

① PROGRAM MODE
 Select program or delete mode. Each time the button is pressed, the program/delete mode will change in the following order:
Program → **Delete** → (off)


② DISC
 →    Select the disc number.
 

③           Select the track number.


Repeat steps ② and ③ until you have completed the desired entry.

④  Start play.


To check the entered contents

RECALL
 The selections entered are displayed one by one each time this button is pressed.


To clear a single item of the entered contents

CLEAR
 Only the selection which is currently displayed is cleared.


To clear all entered contents

(In the stop mode)


To cancel program/delete mode

(In the stop mode)
 PROGRAM MODE
 Press twice in program mode. Press once in delete mode.

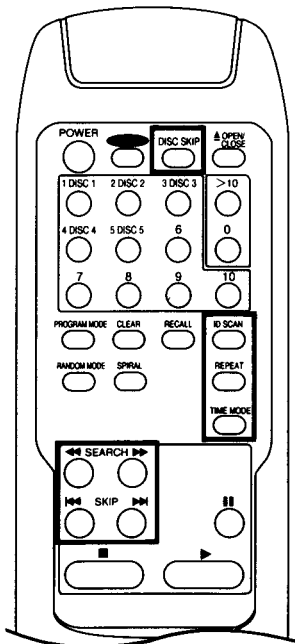

Other functions





To skip discs

DISC SKIP



To skip tracks

◀ SKIP ▶
 


To search for a desired place

(In the play or pause mode)
 ◀ SEARCH ▶
 

To start ID scan

ID SCAN
 To cancel ID scan, press this button again.

To repeat play

REPEAT
 To cancel repeat mode, press this button again.

To select time mode

TIME MODE


SELF-DIAGNOSTIC DISPLAY FUNCTION

Self-diagnostic display

This unit is equipped with a self-diagnostic display function which, if a problem occurs, will display an error code corresponding to the problem. Use this function when performing maintenance on the unit.

Display procedure	Display location
<p>Entering the Self-Diagnostic Mode</p> <ol style="list-style-type: none"> 1. With no CD loaded in the tray, turn on the unit. 2. Unplug the power cord of the unit, and then plug it back in while pressing the STOP (■), PLAY (▶) and DISC 4 buttons together. This will bring up the FL display. 3. Release the above three buttons. <p>To Display Self-Diagnostic Results</p> <ol style="list-style-type: none"> 1. When the FL display lights up, the unit automatically repeats an approximately 50-second cycle of the following operations. <pre> graph TD Start((※)) --> TrayOpens1[Tray opens.] TrayOpens1 -- A --> TrayCloses1[Tray closes.] TrayCloses1 -- B --> TraverseLifts1[Traverse deck lifts.] TraverseLifts1 --> TrayOpens2[Tray opens.] TrayOpens2 --> TraverseLowers1[Traverse deck lowers.] TraverseLowers1 -- B --> TrayCloses2[Tray closes.] TrayCloses2 --> RotaryCCW1[Rotary tray turns counter-clockwise two disc slots.] RotaryCCW1 -- C --> TraverseLifts2[Traverse deck lifts once, and then lowers.] TraverseLifts2 --> RotaryCW1[Rotary tray turns clockwise one disc slot.] RotaryCW1 -- C --> TraverseLifts3[Traverse deck lifts once, and then lowers.] TraverseLifts3 --> RotaryCW2[Rotary tray turns clockwise three disc slots.] RotaryCW2 -- C --> TraverseLifts4[Traverse deck lifts once, and then lowers.] TraverseLifts4 --> RotaryCCW2[Rotary tray turns counterclockwise one disc slot.] RotaryCCW2 -- C --> TraverseLifts5[Traverse deck lifts once, and then lowers.] TraverseLifts5 --> RotaryCCW3[Rotary tray turns counterclockwise two disc slots.] RotaryCCW3 --> End((※)) </pre> 2. Self-diagnostic fault results appear on the FL display for approximately one second as "H15" at location ①, "H16" at ② and "F18" at ③, during the above cycle. 3. If there are no faults as a result of self-diagnostic, "TRACK 00:00" appears on the FL display. <p>To Return to Normal Display</p> <ul style="list-style-type: none"> • Press the power button to turn off the unit, and then turn it on again. <p>To Display Self-Diagnostic Results Again</p> <ul style="list-style-type: none"> • Follow steps 1 through 3 of "Entering Self-Diagnostic Mode" above. <p>To Clear the Display of Self-Diagnostic Results</p> <ul style="list-style-type: none"> • Turn off the unit to clear the contents of the stored fault results. 	<p>Self-diagnostic display location</p> <p>The diagram shows the front panel of the unit. A rectangular display area at the top center shows 'H: 15'. Above the display is a circular icon with four arrows pointing to the numbers 1, 2, 3, and 4. Below the display, there are several buttons: a square button labeled 'Disc button (DISC 4)', a square button labeled 'Stop button (■)', and a right-pointing triangle button labeled 'Play button (▶)'. Arrows from the text labels point to these specific buttons on the unit's face.</p>

Interpretation of error codes

Error code	Problem condition	Correction procedure
H15	CD tray does not open or close when CD tray open/close (▲) button is pressed.	Faulty loading motor and motor drive IC (IC501), or faulty contact or short-circuit on open/close detect switch, S551. (Check and replace)
H16	When the CD tray open/close (▲) button is pressed, the CD tray closes momentarily but then opens again, or opens momentarily and then closes again.	
F18	Faulty rotary turret rotation detection. Example: The turret continues to turn at the initial position without stopping.	Check the optical sensor (D501) and replace if necessary.


HANDLING PRECAUTIONS FOR TRAVERSE DECK

The laser diode in the traverse deck (optical pickup) may break down due to potential difference caused by static electricity of clothes or human body.

So, be careful of electrostatic breakdown during repair of the traverse deck (optical pickup).


• Handling of traverse deck (optical pickup)

1. Do not subject the traverse deck (optical pickup) to static electricity as it is extremely sensitive to electrical shock.
2. To prevent the breakdown of the laser diode, an antistatic shorting pin is inserted into the flexible board (FFC).
When removing or connecting the short pin, finish the job in as short time as possible.
3. Take care not to apply excessive stress to the flexible board (FFC).
4. Do not turn the variable resistor (laser power adjustment). It has already been adjusted.

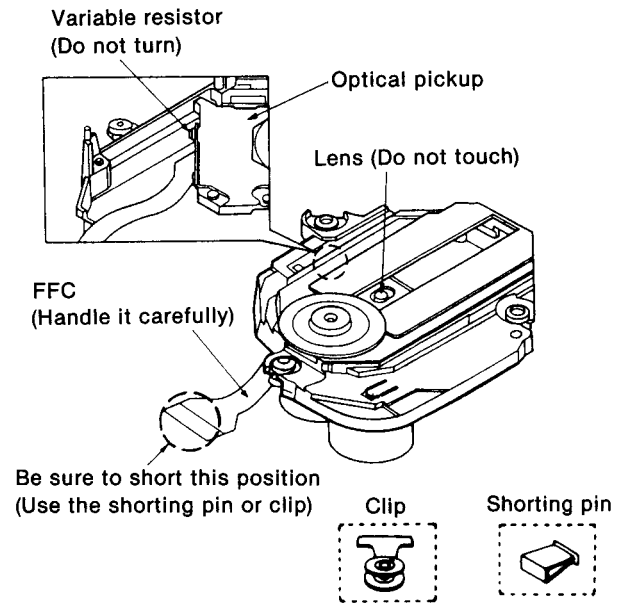


• Grounding for electrostatic breakdown prevention

1. Human body grounding
Use the anti-static wrist strap to discharge the static electricity from your body.
2. Work table grounding
Put a conductive material (sheet) or steel sheet on the area where the optical pickup is placed, and ground the sheet.

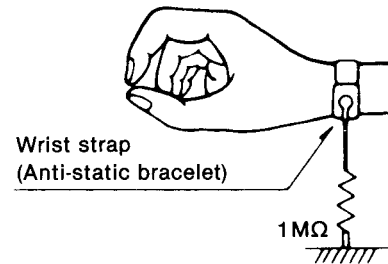


Caution:

The static electricity of your clothes will not be grounded through the wrist strap. So, take care not to let your clothes touch the traverse deck (optical pickup).

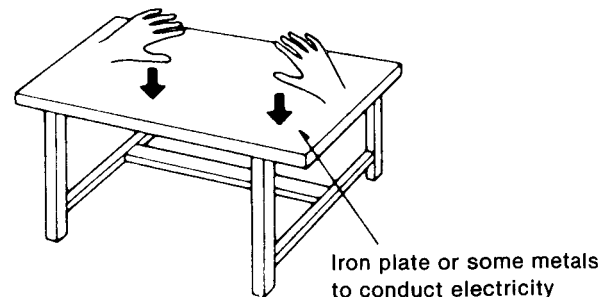

REPLACEMENT OF THE FOOT

1. Remove the 4 heat melted posts on the Bottom board ass'y with a pair of nippers or similar tool.
2. To replace the foot (RKA0053-A) on the Bottom board ass'y melt the 4 posts with a soldering iron or install it with a screw (XTB3+6J).

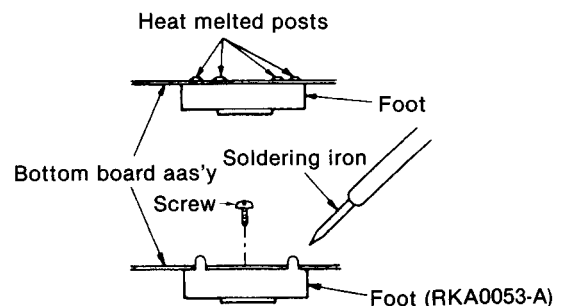

DISASSEMBLY INSTRUCTIONS





“ATTENTION SERVICER”

Some chassis components may have sharp edges. Be careful when disassembling and servicing.

Warning: This product uses a laser diode. Refer to caution statements on page 2.


ACHTUNG: •Die lasereinheit nicht zerlegen.

•Die lasereinheit darf nur gegen eine vom hersteller spezifizierte einheit ausgetauscht werden.

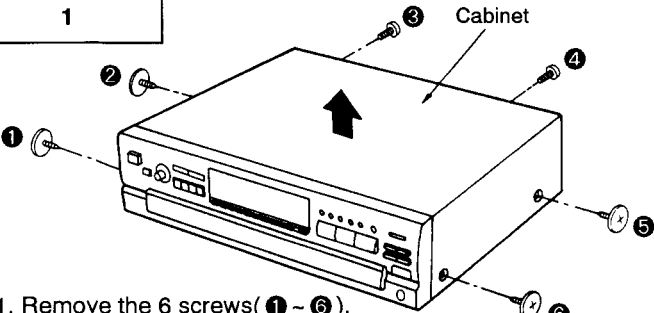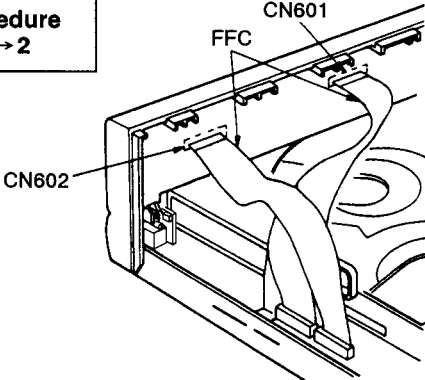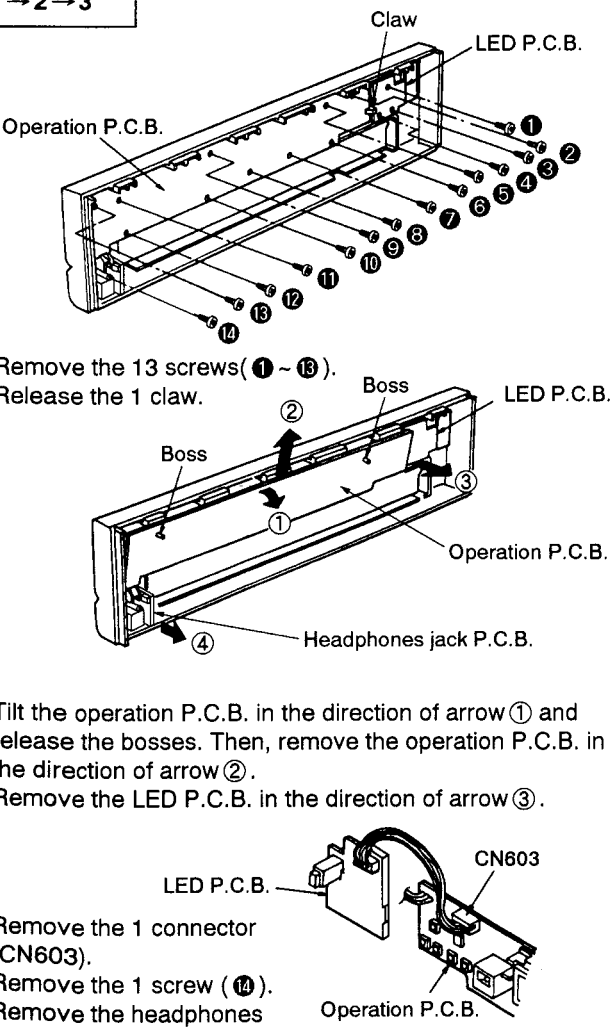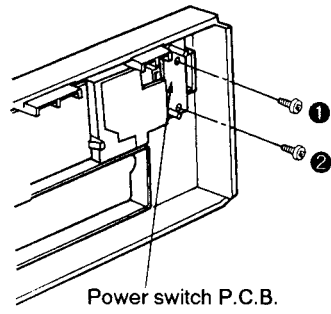
<p>Ref.No. 1</p>	<p>Removal of the cabinet</p>	<p>Ref.No. 2</p>	<p>Removal of the front panel ass'y</p>
<p>Procedure 1</p>	 <p>1. Remove the 6 screws(① ~ ⑥). 2. Remove the cabinet in the direction of arrow.</p>	<p>Procedure 1→2</p>	 <p>1. Pull out the FFC from connectors(CN601, CN602).</p>
<p>Ref.No. 3</p>	<p>Removal of the operation P.C.B., LED P.C.B. and headphones jack P.C.B.</p>	<p>Ref.No. 4</p>	<p>Removal of the power switch P.C.B.</p>
<p>Procedure 1→2→3</p>	 <p>1. Remove the 13 screws(① ~ ⑬). 2. Release the 1 claw. 3. Tilt the operation P.C.B. in the direction of arrow ① and release the bosses. Then, remove the operation P.C.B. in the direction of arrow ② . 4. Remove the LED P.C.B. in the direction of arrow ③ . 5. Remove the 1 connector (CN603). 6. Remove the 1 screw (⑭). 7. Remove the headphones jack P.C.B. in the direction of arrow ④ .</p>	<p>Procedure 1→2→4</p>	 <p>• Remove the 2 screws(① , ②).</p>

Ref.No. 5
Removal of the tray ass'y

Procedure
1→2→5

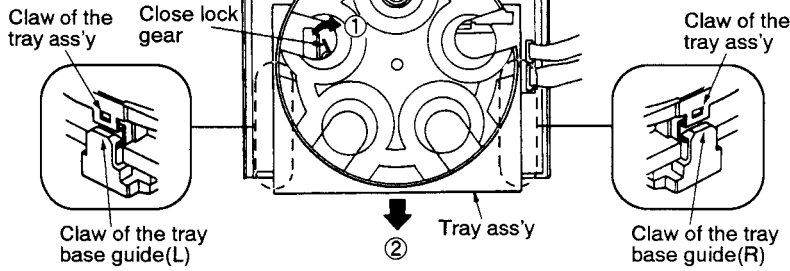


1. Keep the close lock gear pressed in the direction of arrow ①, and move the tray ass'y in the direction of arrow ②.
2. Fit the claw of the tray ass'y in the claw of the tray base guide(L).
3. Fit the claw of the tray ass'y in the claw of the tray base guide(R).

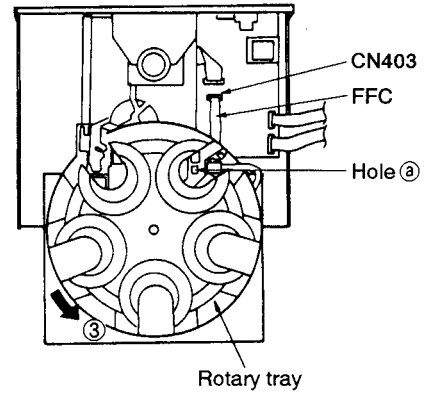


4. Pull out the FFC from connector(CN403).
5. Rotate the rotary tray to the position that can be confirmed the hole ③ in the direction of arrow ③.

Ref.No. 6
Removal of the tray base guide(L) and tray base guide(R)

Procedure
1→2→5→6

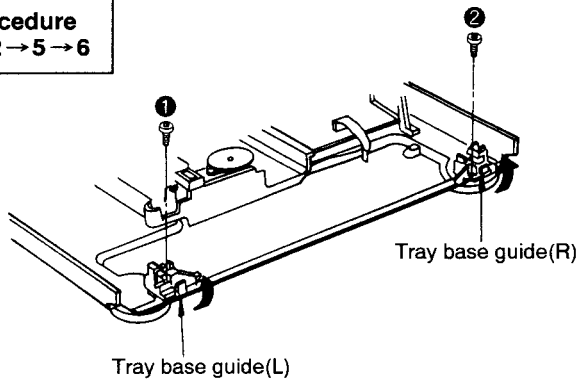

1. Remove the 2 screws(①, ②).
2. Remove the tray base guide(L) and tray base guide(R) in the direction of arrow.


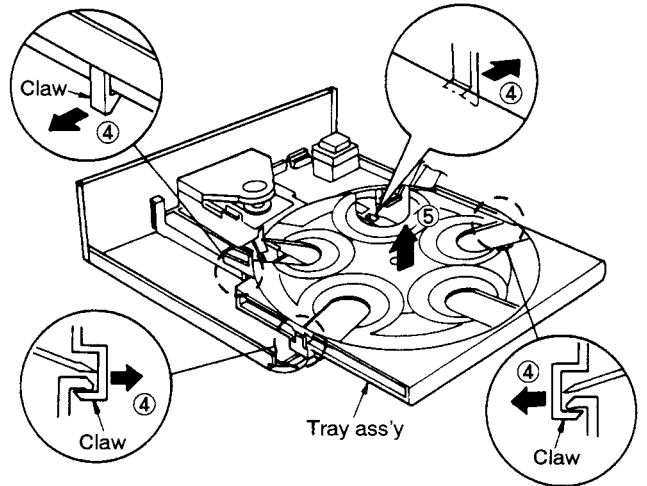


5. Push and release the 4 claws in the direction of arrow ④, and then remove the tray ass'y in the direction of arrow ⑤.

Ref.No. 7
Removal of the power transformer

Procedure
1→7


 
※ Be careful not to bend the pins of power transformer.

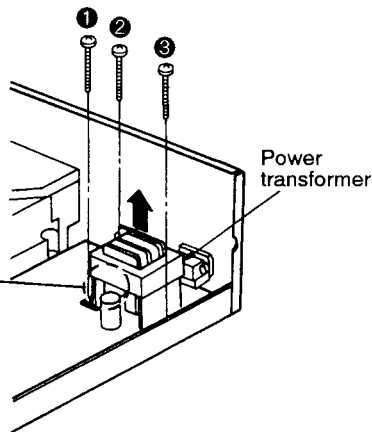






1. Remove the 3 screws(① ~ ③).
2. Remove the power transformer in the direction of arrow.








Ref.No. 8
Removal of the cable holder





Procedure
1→2→5→8



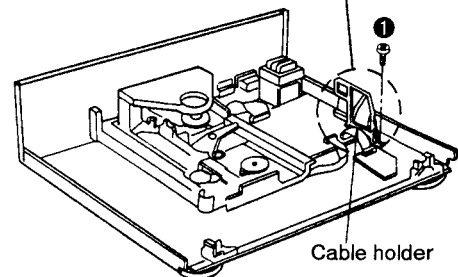
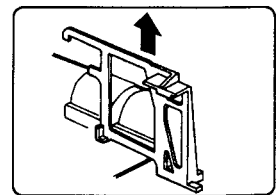





1. Remove the 1 screw(①).
2. Lift the cable holder in the direction of arrow.

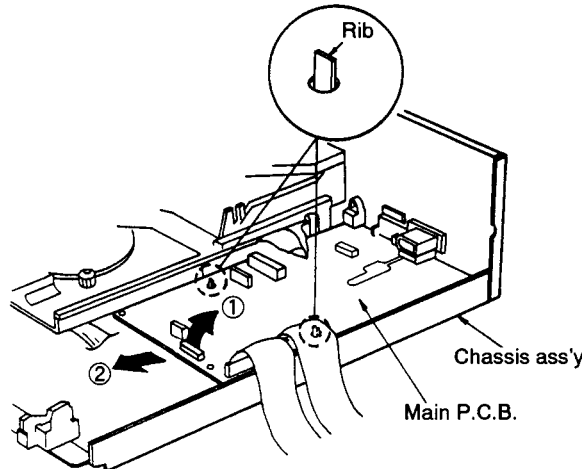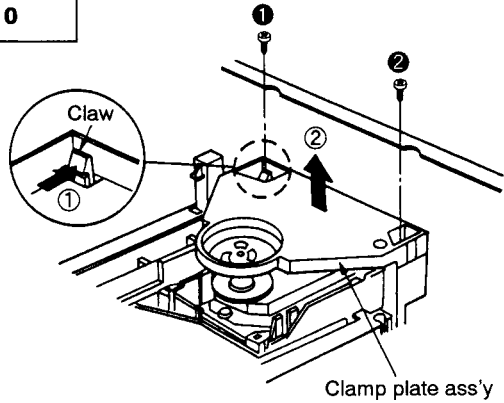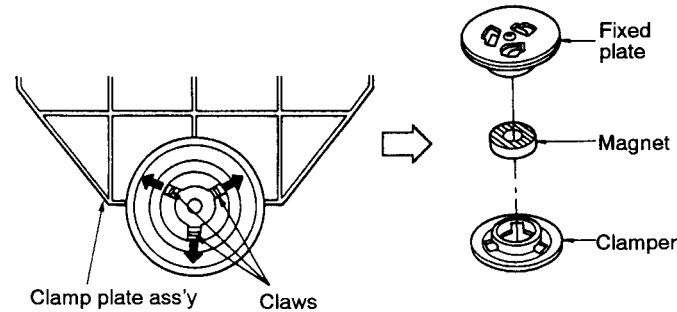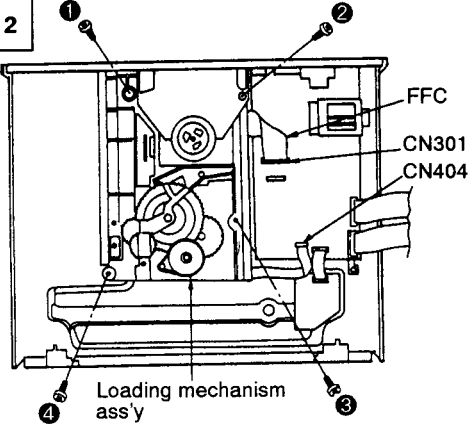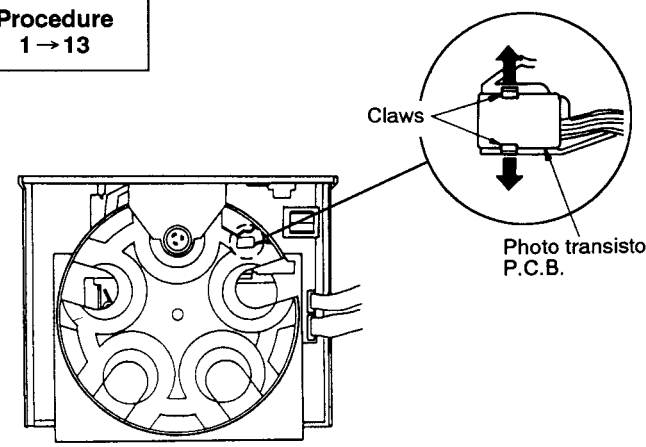
<p>Ref.No. 9</p>	<p>Removal of the main P.C.B. and D/A CONV. P.C.B.</p>	 <p>1. Pull out the FFC from connector(CN301). 2. Remove the 2 connectors(CN404,CN405). 3. Remove the 6 screws(①~⑥).</p> <p>4. Lift up the main P.C.B. in the direction of arrow ①, and release the 2 ribs on the chassis ass'y. Then, remove the main P.C.B. in the direction of arrow ②.</p>	
<p>Ref.No. 10</p>	<p>Removal of the clamp plate ass'y</p>	<p>Ref.No. 11</p>	<p>Removal of the fixed plate, magnet and clamper</p>
<p>Procedure 1→10</p>	 <p>1. Remove the 2 screws(①, ②). 2. Push the claw in the direction of arrow ①, and then remove the clamp plate ass'y in the direction of arrow ②.</p>	<p>Procedure 1→10→11</p>	 <p>• Release the 3 claws in the direction of arrow.</p>
<p>Ref.No. 12</p>	<p>Removal of the loading mechanism ass'y</p>	<p>Ref.No. 13</p>	<p>Removal of the photo transistor P.C.B.</p>
<p>Procedure 1→2→5→12</p>	 <p>1. Pull out the FFC from connector(CN301). 2. Remove the 1 connector(CN404). 3. Remove the 4 screws(①~④).</p>	<p>Procedure 1→13</p>	 <p>• Release the 2 claws in the direction of arrow.</p>

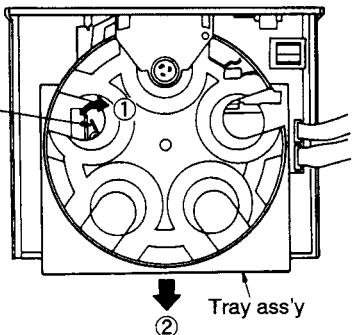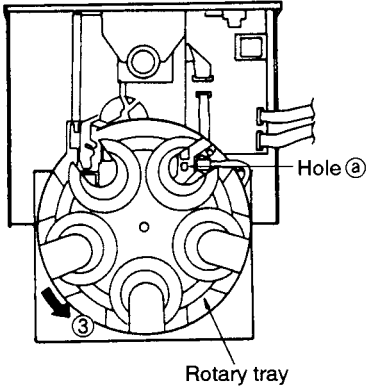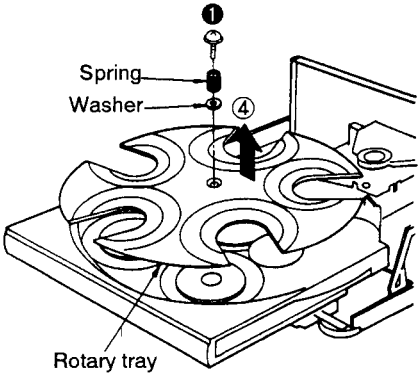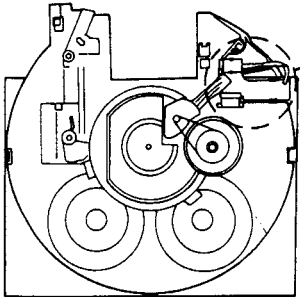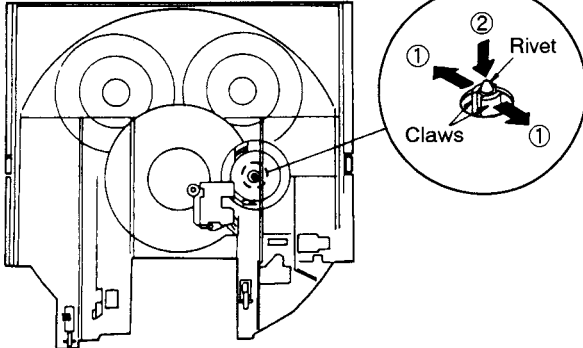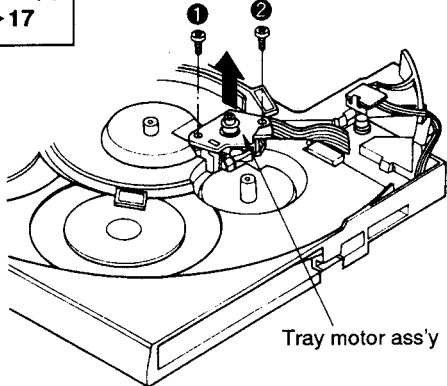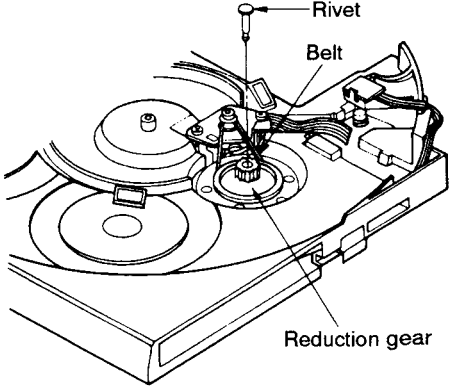
<p>Ref.No. 14</p>	<p>Removal of the rotary tray</p>	
<p>Procedure 1 → 2 → 14</p>	<div style="display: flex; justify-content: space-around;">    </div> <ol style="list-style-type: none"> 1. Keep the close lock gear pressed in the direction of arrow ①, and move the tray ass'y in the direction of arrow ②. 2. Rotate the rotary tray to the position that can be confirmed the hole ② in the direction of arrow ③. 3. Remove the 1 screw (①). 4. Remove the spring and washer. 5. Remove the rotary tray in the direction of arrow ④. 	
<p>Ref.No. 15</p>	<p>Removal of the sensor P.C.B.</p>	<p>Ref.No. 16</p> <p>Removal of reduction gear</p>
<p>Procedure 1 → 2 → 5 → 13 → 14 → 15</p>	<div style="display: flex; justify-content: space-around;">   </div> <ul style="list-style-type: none"> • Release the 3 claws in the direction of arrow, and remove the sensor P.C.B. <ol style="list-style-type: none"> 1. Release the 2 claws in the direction of arrow ①, and then push the rivet in the direction of arrow ②. 	
<p>Ref.No. 17</p>	<p>Removal of motor holder and tray motor ass'y</p>	
<p>Procedure 1 → 2 → 5 → 14 → 16 → 17</p>	<div style="display: flex; justify-content: space-around;">   </div> <ol style="list-style-type: none"> 1. Remove the 2 screws (①, ②). 2. Remove the motor holder and tray motor ass'y in the direction of arrow. 2. Pull out the rivet. 3. Remove the belt. 3. Remove the reduction gear. 	

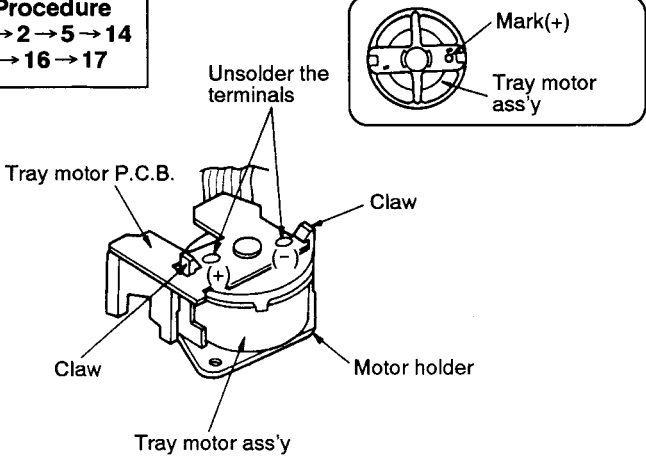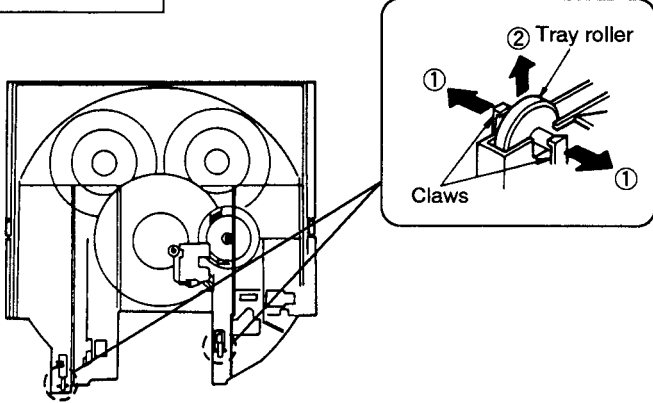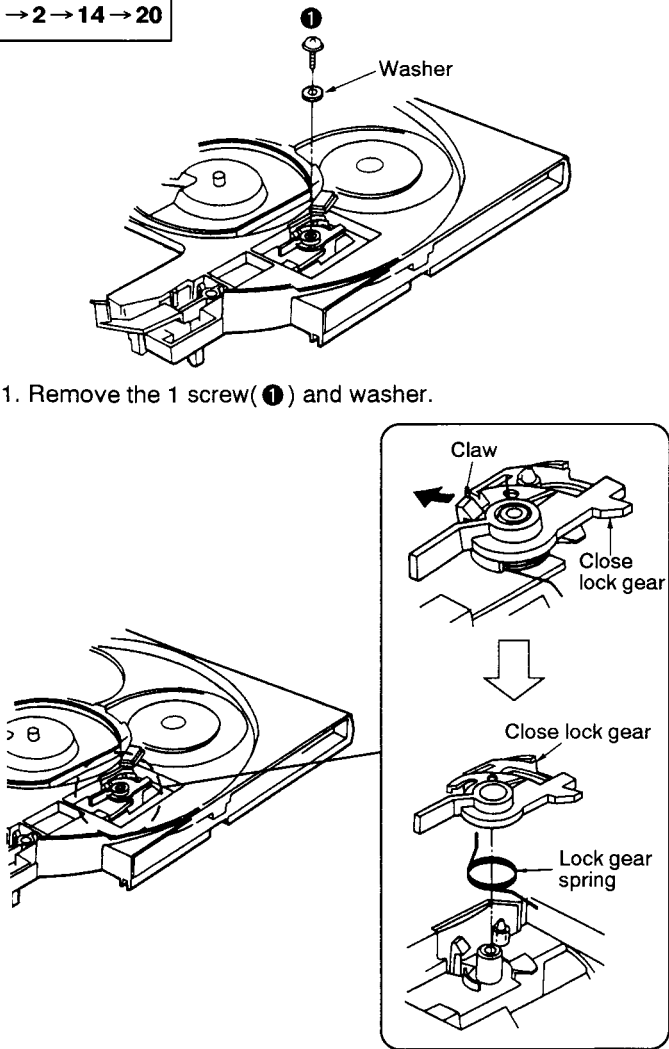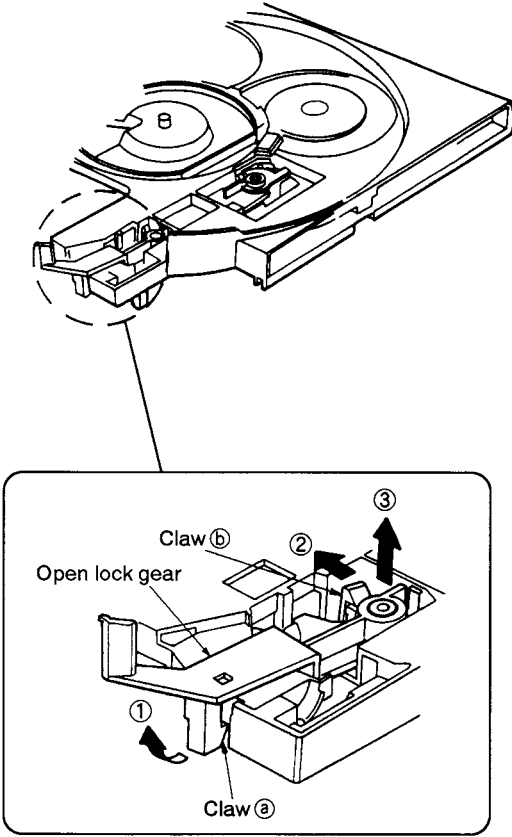
<p>Ref.No. 18</p>	<p>Removal of the tray motor P.C.B.</p>	<p>Ref.No. 19</p>	<p>Removal of the tray roller</p>
<p>Procedure 1 → 2 → 5 → 14 → 16 → 17</p>	 <ol style="list-style-type: none"> 1. Release the 2 claw, and then remove the motor holder. 2. Unsolder the terminals of the tray motor ass'y. 	<p>Procedure 1 → 2 → 14 → 19</p>  <ul style="list-style-type: none"> • Release the 2 claws in the direction of arrow ①, and then remove the tray roller in the direction of arrow ②. 	
<p>Ref.No. 20</p>	<p>Removal of the close lock gear</p>	<p>Ref.No. 21</p>	<p>Removal of the open lock gear</p>
<p>Procedure 1 → 2 → 14 → 20</p>  <ol style="list-style-type: none"> 1. Remove the 1 screw (❶) and washer. 2. Release the 1 claw and then remove the close lock gear and lock gear spring. 		<p>Procedure 1 → 2 → 5 → 14 → 21</p>  <ol style="list-style-type: none"> 1. Release the claw (a) of open lock gear in the direction of arrow ①. 2. Release the claw (b) of open lock gear in the direction of arrow ②, and then remove the of open lock gear in the direction of arrow ③. 	

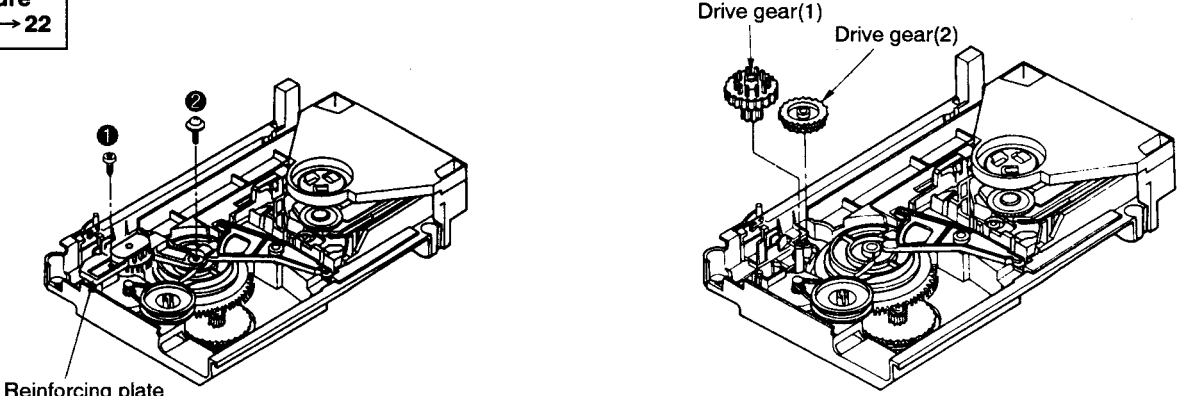
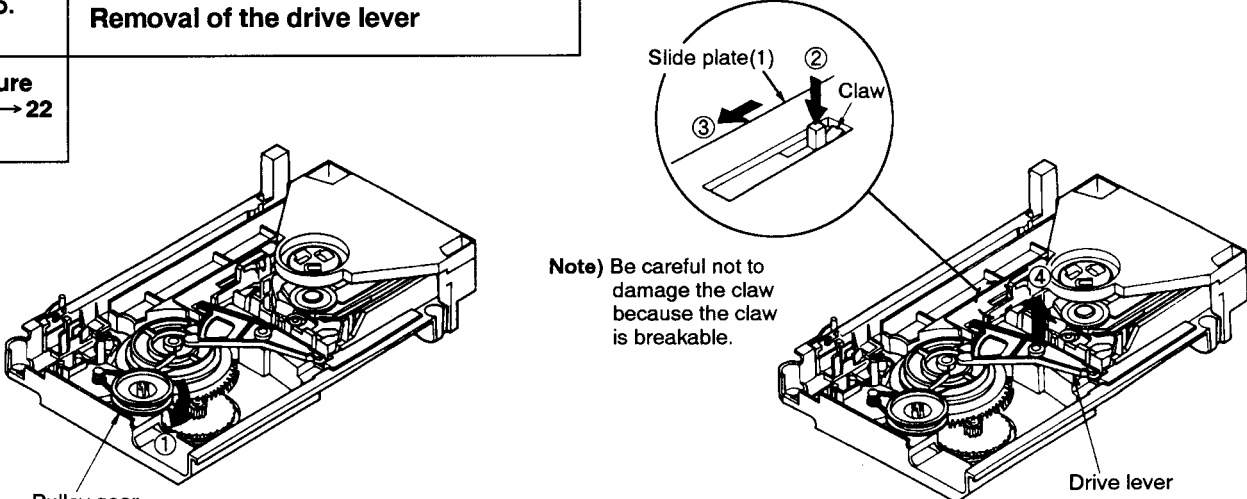
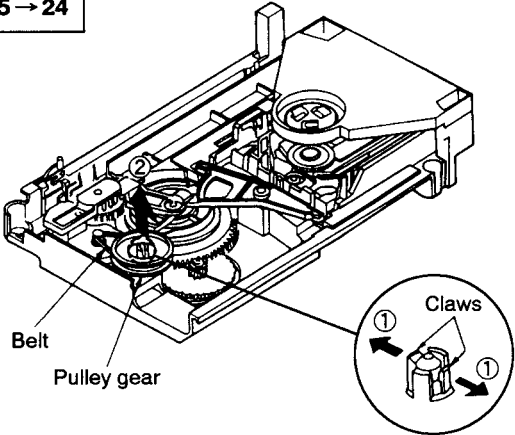
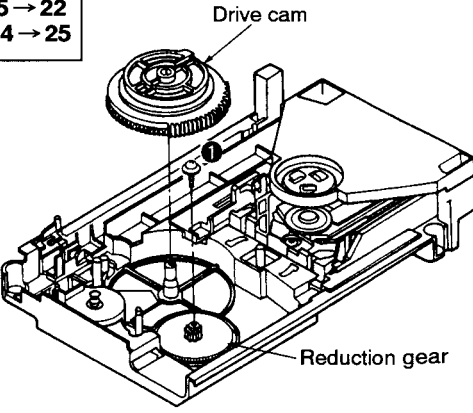
<p>Ref.No. 22</p>	<p>Removal of the reinforcing plate, drive gear(1) and drive gear(2)</p>	 <p>1. Remove the 2 screws(①, ②). 2. Remove the reinforcing plate.</p> <p>3. Remove the drive gear(1) and drive gear(2).</p>	
<p>Procedure 1 → 2 → 5 → 22</p>			
<p>Ref.No. 23</p>	<p>Removal of the drive lever</p>	 <p>1. Rotate the pulley gear to full position in the direction of arrow ①.</p> <p>2. Push the claw in the direction of arrow ②, and then move the slide plate(1) in the direction of arrow ③.</p> <p>3. Remove the drive lever in the direction of arrow ④.</p> <p>Note) Be careful not to damage the claw because the claw is breakable.</p>	
<p>Procedure 1 → 2 → 5 → 22 → 23</p>			
<p>Ref.No. 24</p>	<p>Removal of the pulley gear</p>	<p>Ref.No. 25</p>	<p>Removal of the drive cam and reduction gear</p>
<p>Procedure 1 → 2 → 5 → 24</p>	 <p>1. Remove the belt. 2. Release the 2 claws in the direction of arrow ①, and then remove the pulley gear in the direction of arrow ②.</p>		 <p>1. Remove the drive cam. 2. Remove 1 screw(①). 3. Remove the reduction gear.</p>

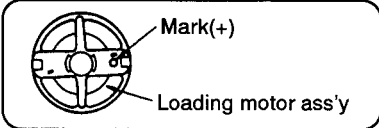
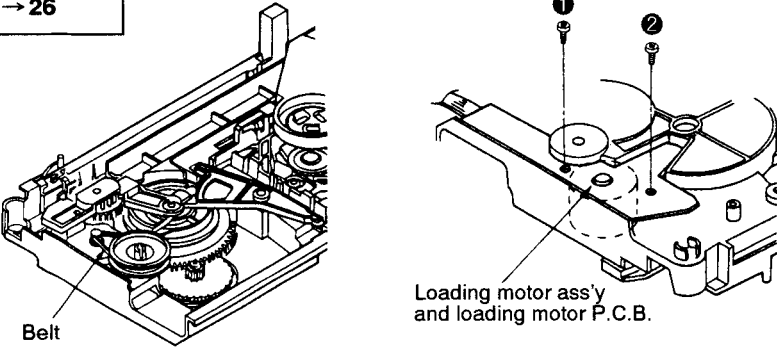
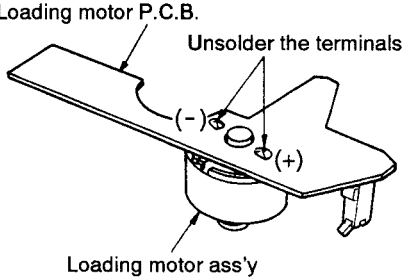
<p>Ref.No. 26</p>	<p>Removal of the loading motor ass'y and loading motor P.C.B.</p>		
<p>Procedure 1 → 2 → 5 → 12 → 26</p>	 <p>1. Remove the belt.</p> <p>2. Remove the 2 screws(①, ②).</p> <p>3. Remove the loading motor ass'y and loading motor P.C.B.</p>		<p>4. Unsolder the terminals of the loading motor ass'y.</p> 
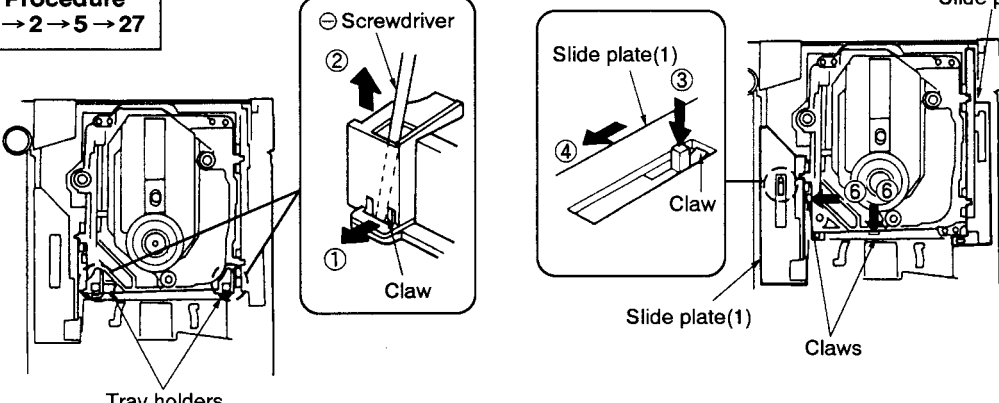
<p>Ref.No. 27</p>	<p>Removal of the traverse deck ass'y</p>		
<p>Procedure 1 → 2 → 5 → 27</p>	 <p>1. While pushing the claw of tray holders in the direction ① using the ⊖ screwdriver, remove the tray holder in the direction of arrow ②.</p> <p>2. Push the claw in the direction of arrow ③, and then move the slide plate(1) in the direction of arrow ④.</p> <p>3. Move the slide plate(2) in the direction of arrow ⑤.</p>		<p>4. Release the 2 claws in the direction of arrow ⑥, and then remove the traverse deck ass'y in the direction of arrow ⑦.</p> <p>※ Be careful not to scratch or bend the FFC.</p>
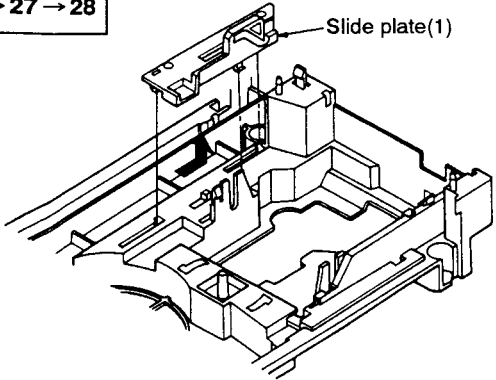
<p>Ref.No. 28</p>	<p>Removal of the slide plate(1)</p>	
<p>Procedure 1 → 2 → 5 → 22 → 23 → 27 → 28</p>	 <p>• Remove the slide plate(1) in the direction of arrow.</p>	
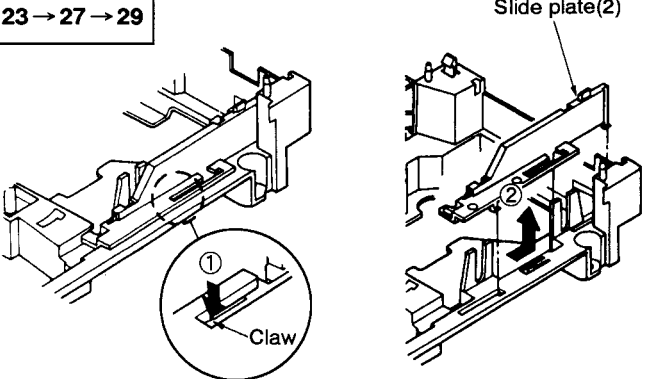
<p>Ref.No. 29</p>	<p>Removal of the slide plate(2)</p>	
<p>Procedure 1 → 2 → 5 → 22 → 23 → 27 → 29</p>	 <p>• Push the claw in the direction of arrow ①, and then remove the slide plate(2) in the direction of arrow ②.</p>	
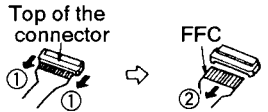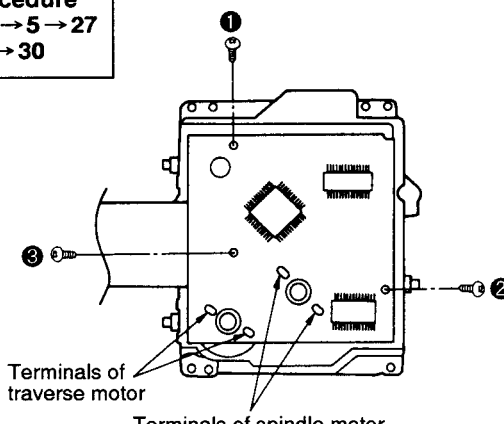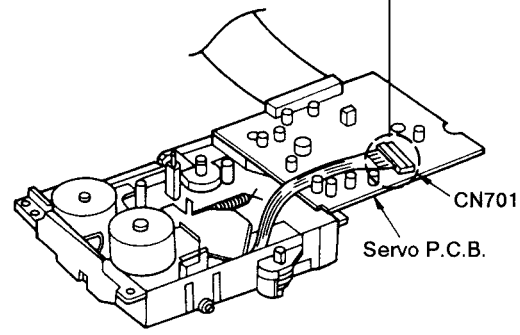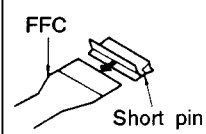
<p>Ref.No. 30</p>	<p>Removal of the servo P.C.B.</p>	<p>1. Push the top of the connector in the direction of arrow ①. 2. Remove the FFC in the direction of arrow ②.</p> 
<p>Procedure 1 → 2 → 5 → 27 → 30</p>		
<p>1. Remove the 3 screws(① ~ ③). 2. Unsolder the 2 terminals of spindle motor. 3. Unsolder the 2 terminals of traverse motor.</p>		<p>4. Remove the FFC from connector(CN701). Caution: Insert a short pin into the traverse unit FFC. (Refer to "handling precautions for traverse deck" on page 11.)</p> 

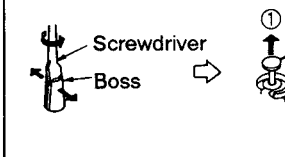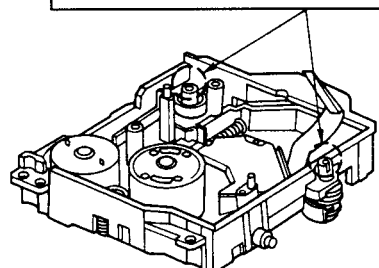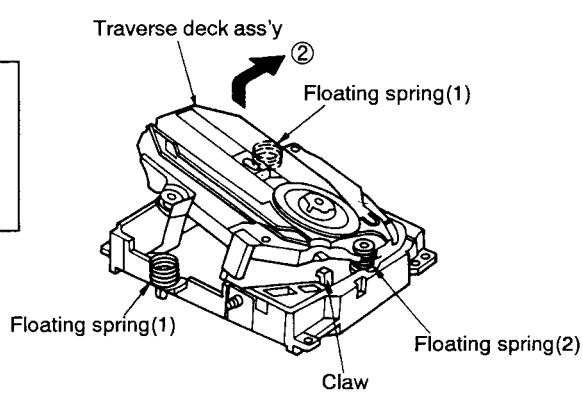
<p>Ref.No. 31</p>	<p>Removal of the traverse deck ass'y</p>	 <p>1. Widen the bosses by using a regular screwdriver or similar object. 2. Pull out the pins.</p>
<p>Procedure 1 → 2 → 5 → 27 → 30 → 31</p>		
<p>1. Remove the 2 pins in the direction of arrow ①.</p>		<p>2. Release the claw, and then remove the traverse deck ass'y in the direction of arrow ②. Caution: Be careful not to lose the 3 springs because those will also be removed on removal of the traverse deck ass'y.</p>

■ INSTALLATION OF SERVO P.C.B.



1. When installing servo P.C.B., move the optical pickup to the more external side than the mark (▲).
(When the optical pickup is not moved, the switch(S701) on the servo P.C.B. may be broken.)
2. Connect the FFC to the connector(CN701).
3. Install the servo P.C.B. to the traverse unit with 3 screws (① ~ ③).
4. Solder the 2 terminals of the traverse motor and the 2 terminals of the spindle motor.

Note:

- Insert the FFC into the connector and lock securely.
- After installing the motor with screws, solder each motor terminal.

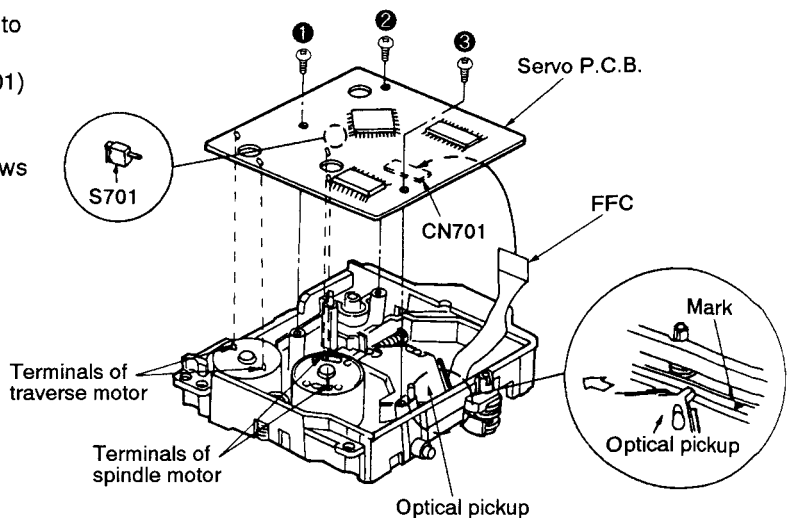


■ Installation of the traverse deck ass'y

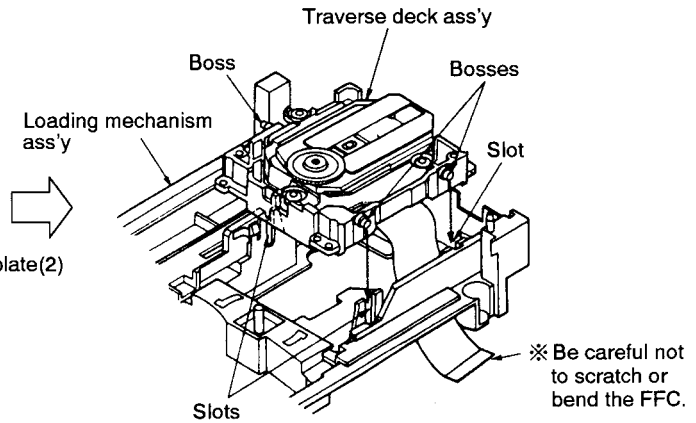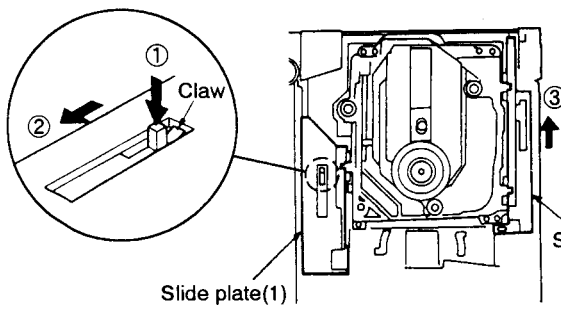

1. Push the claw in the direction of arrow ①, and then move the slide plate(1) in the direction of arrow ②.
2. Move the slide plate(2) in the direction of arrow ③.


3. Align the 3 bosses of traverse deck ass'y with the slots of loading mechanism ass'y.

■ Installation of the drive lever

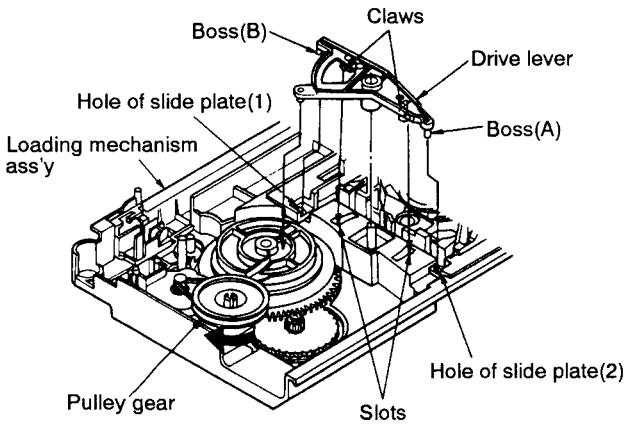


1. Rotate the pulley gear to full position in the direction of arrow.
2. Align the boss(A) with the hole of slide plate(2).
3. Align the boss(B) with the hole of slide plate(1).
4. Align the claws of drive lever with the slots of loading mechanism ass'y.

■ Positioning of the drive cam

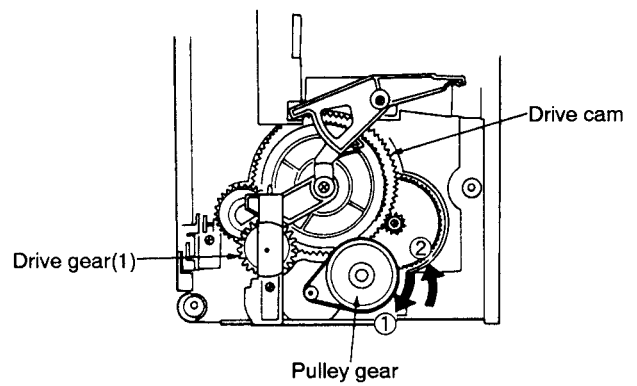


1. Rotate the pulley gear to full position in the direction of arrow ①.
2. Then, rotate the pulley gear in the direction of arrow ②.
3. When the drive gear(1) stops rotating, turn off that pulley gear is rotating.

■ Installation of the tray ass'y

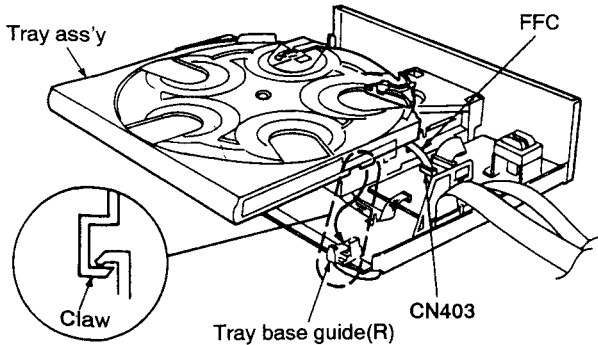

1. Attach the FFC to the connector(CN403).
2. Fit the claws on the right side of the tray ass'y underneath the claws on the tray base guide(R).
3. Fit the claws on the right side of the tray ass'y underneath the claws on the tray base guide(L).


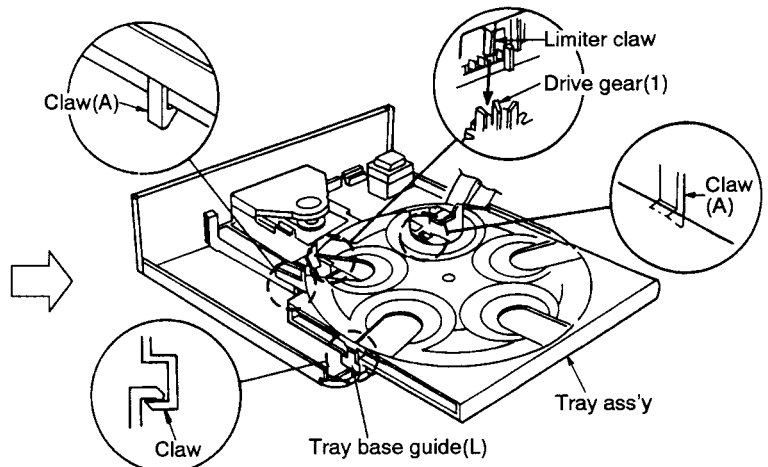


4. Fit the limiter claw on the tray ass'y between the teeth of the drive gear(1).
5. Catch the 2 claws(A) with the loading mechanism ass'y.
6. After installing the tray ass'y, check that it moves smoothly.

■ HOW TO CHECK THE MAIN AND SERVO P.C.B.


1. Remove the cabinet. (See Ref.No.1 of the disassembly instructions.)
2. Remove the front panel ass'y. (See Ref.No.2 of the disassembly instructions.)
3. Remove the tray ass'y. (See Ref.No.5 of the disassembly instructions.)
4. Remove the cable holder. (See Ref.No.8 of the disassembly instructions.)
5. Remove the clamp plate ass'y. (See Ref.No.10 of the disassembly instructions.)
6. Remove the fixed plate, magnet and clumper. (See Ref.No.11 of the disassembly instructions.)

● Check the main P.C.B.

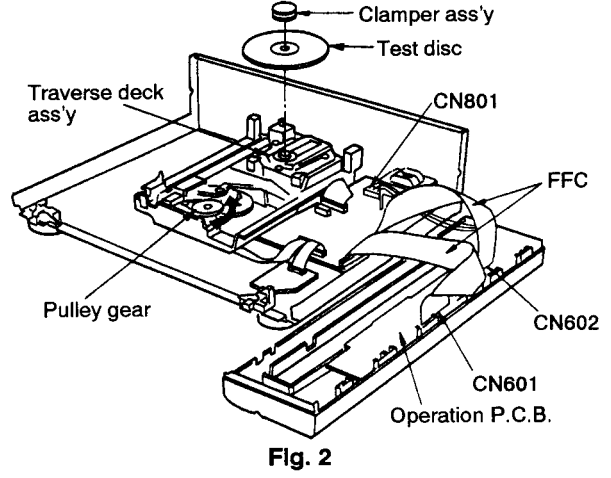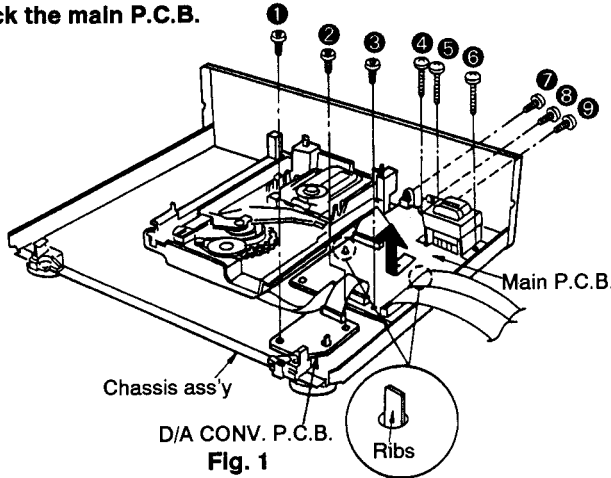


7. Remove the 9 screws (① ~ ⑨).
8. Lift up the main P.C.B. to release the 2 ribs of chassis ass'y, and then remove the main P.C.B. in the direction of arrow.

9. Rotate the pulley gear in the direction of arrow until traverse deck ass'y comes up.
10. Place the test disc and secure it by using the clumper ass'y.
11. Connect the 2 FFC (CN601, CN602) as shown in Fig. 2.
12. Connect the 1 connector (CN801).
13. Set up the main P.C.B.
14. Connect the main P.C.B. ground terminal (line out terminal) to the chassis ass'y with a lead wire.
15. When checking the soldered surface of the main P.C.B., do as shown in Fig. 3.

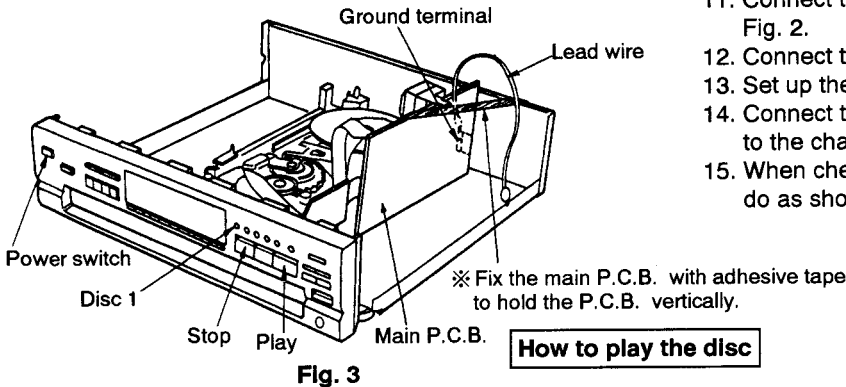

How to play the disc

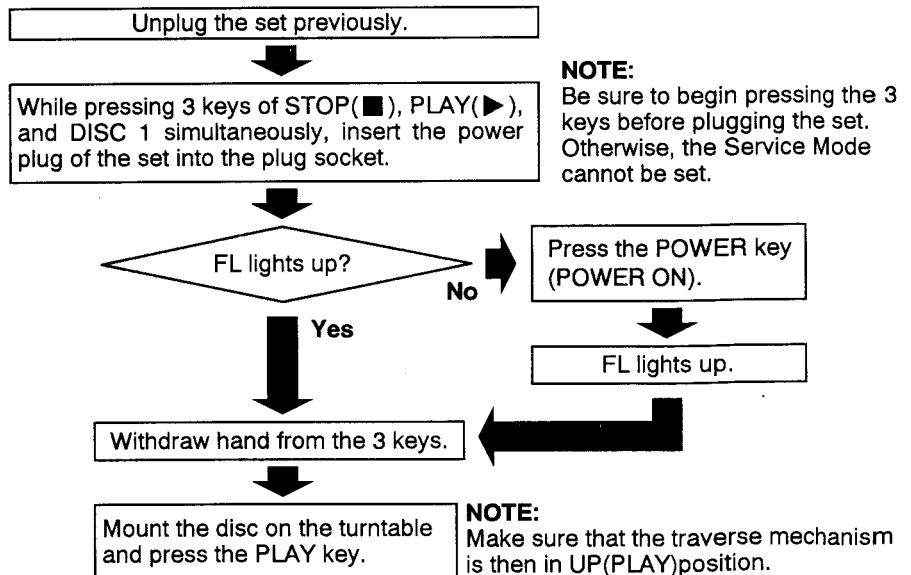

Service Mode setting

When checking the main/servo P.C.B. of this set, remove the rotary tray previously. After the rotary tray is removed, the microcomputer is kept from issuing PLAY command even when the PLAY key is pressed. Stated above is the procedure of setting the Service Mode for keeping the microcomputer in the PLAY mode even after removal of the rotary tray.

● Check the servo P.C.B.

7. Remove the loading mechanism ass'y. (See Ref.No.12 of the disassembly instructions.)
8. Remove the traverse deck ass'y. (See Ref.No.27 of the disassembly instructions.)

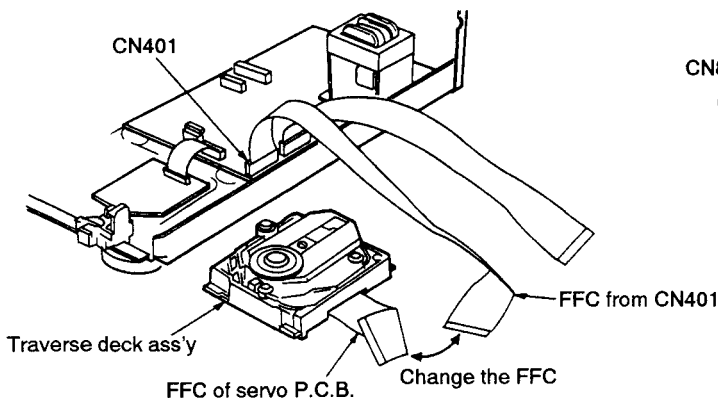


Fig. 4

9. Replace the FFC of servo P.C.B. to the FFC (CN401) of main P.C.B.

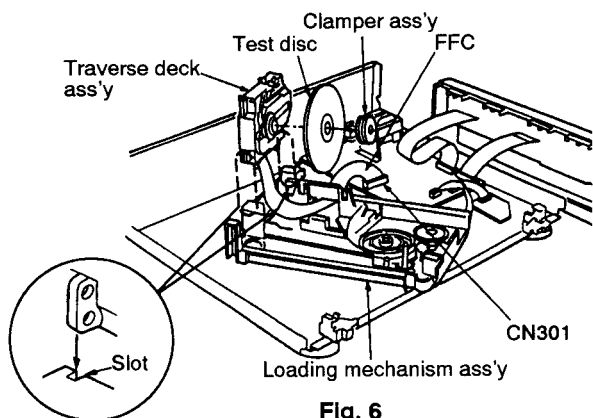


Fig. 6

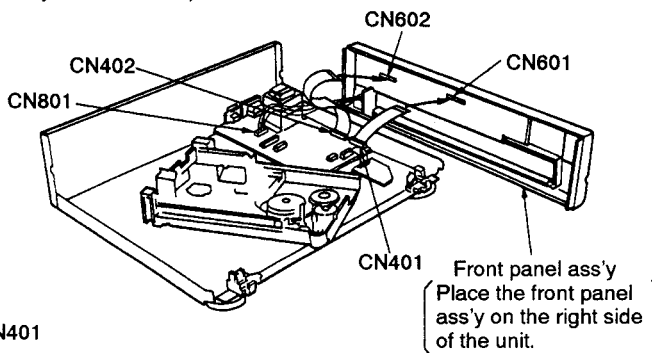


Fig. 5

10. Connect the FFC as shown in above.
 (Between CN401 and CN601)
 (Between CN402 and CN602)

11. Connect the 1 connector (CN801).
12. Insert the traverse deck ass'y in the slot of loading mechanism ass'y.
13. Connect the FFC of servo P.C.B. to the connector (CN301) of main P.C.B.
14. Set the test disc on the traverse deck ass'y, and then fix the traverse deck ass'y with clamper ass'y.
15. When checking the soldered surface of servo P.C.B., do as shown in Fig. 7.

Notes:

- After completing the check, restore the replaced FFC to their original positions.

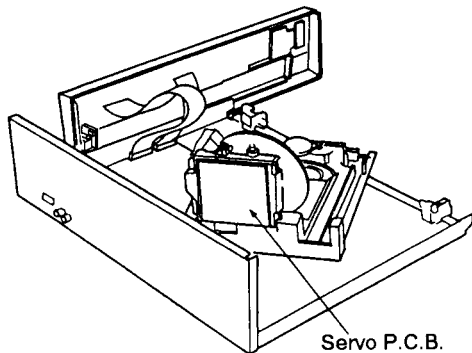
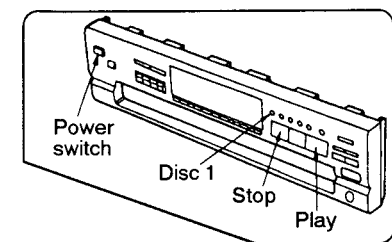


Fig. 7


How to play the disc

Unplug the set previously.

While pressing 3 keys of STOP (■), PLAY (▶), and DISC 1 simultaneously, insert the power plug of the set into the plug socket.

NOTE:

Be sure to begin pressing the 3 keys before plugging the set. Otherwise, the Service Mode cannot be set.

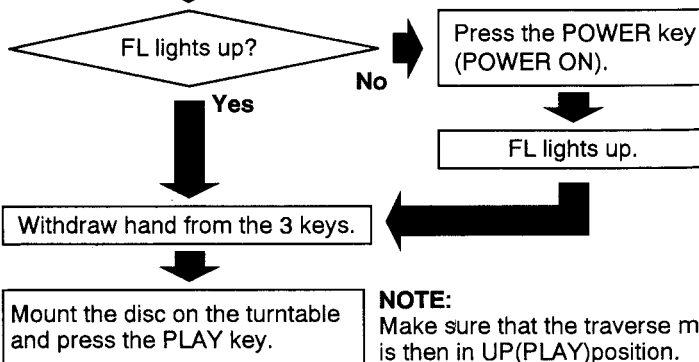

NOTE:

Make sure that the traverse mechanism is then in UP(PLAY)position.

Service Mode setting

When checking the main/servo P.C.B. of this set, remove the rotary tray previously. After the rotary tray is removed, the microcomputer is kept from issuing PLAY command even when the PLAY key is pressed. Stated above is the procedure of setting the Service Mode for keeping the microcomputer in the PLAY mode even after removal of the rotary tray.

■ OPERATING THE UNIT WITHOUT THE FRONT PANEL ASS'Y (OPERATION P.C.B. AND KEYS)

A Turning off the back-up power to the microprocessor(IC 401)

1. Unplug the AC cord.
2. Short the ends of the C401 jumpers at 10 Ω (5W) resistance for at least 1 second.

B Turning the power on again


1. Plug the AC cord back in.
2. Short the between the following jumpers simultaneously:
 - The D401 cathode and R401 from IC401 (equivalent to pressing the STOP button).
 - The D401 cathode and R403 from IC401 (equivalent to pressing the PLAY button).
 - The D402 cathode and R401 from IC401 (equivalent to pressing the DISC 1 button).
3. Keeping the above shorts in place, short between the D404 cathode and R405 from IC401 for 1 second to turn on the power to the main unit.
4. Remove the shorts placed in step 2.

C Using the machine

- To play, short between the D401 cathode and R403 from IC401 (equivalent to pressing the PLAY button).
- To pause, short between the D401 cathode and R402 from IC401 (equivalent to pressing the PAUSE button).
- To stop, short between the D401 cathode and R401 from IC401 (equivalent to pressing the STOP button).
- To move forward, short between the D402 cathode and R402 from IC401 (equivalent to pressing the F.SKIP button).
- To move backward, short between the D402 cathode and R403 from IC401 (equivalent to pressing the R.SKIP button).
- To search in the forward direction, short between the D403 cathode and R402 from IC401 (equivalent to pressing the F.SEARCH button).
- To search in the backward direction, short between the D403 cathode and R403 from IC401 (equivalent to pressing the R.SEARCH button).


D Finishing off

1. Unplug the AC cord.
2. Short the ends of the C401 jumpers at 10 Ω (5W) resistance.

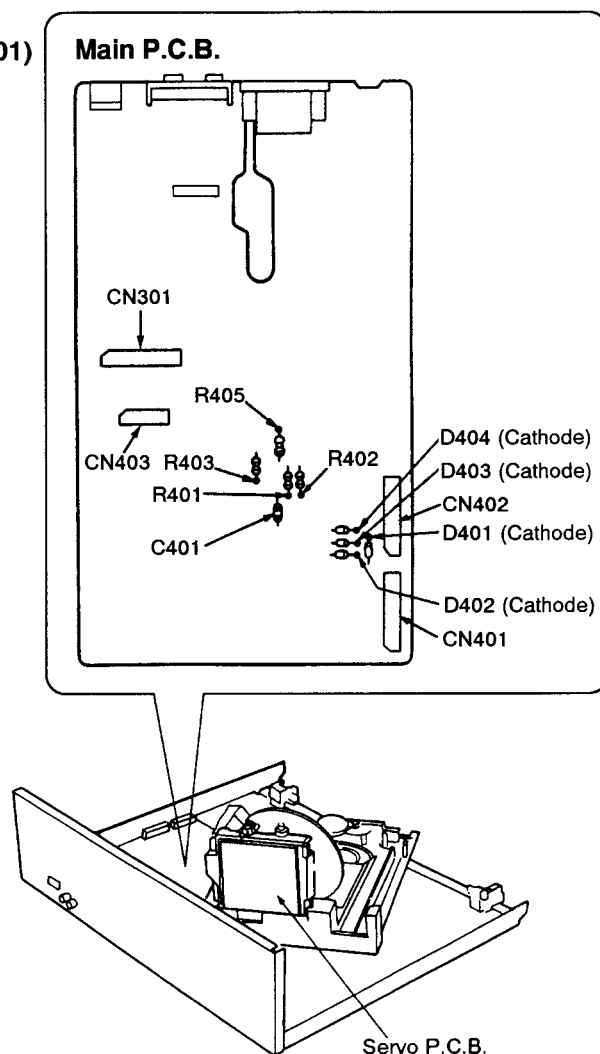

■ Installation of the FFC

- When connecting the FFC, connect as shown right.
- Connect as follows:
 - Short FFC ; between Connector **S** and SHORT
 - Long FFC ; between Connector **L** and LONG
- Connect the FFC (Long/Short) with blue line upward to the operation P.C.B. connectors .
- Connect the FFC (Long/Short) with blue line outward to the main P.C.B. connectors.

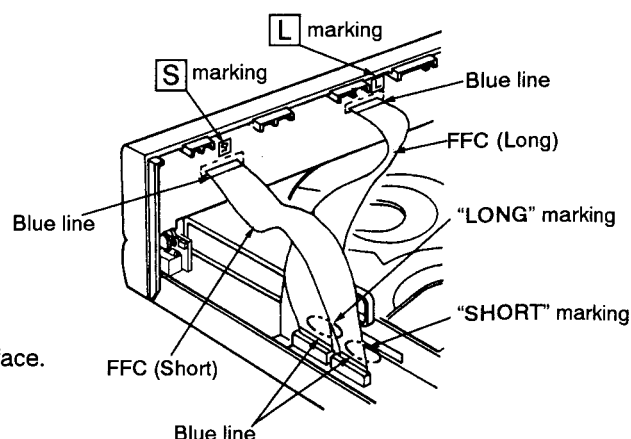

NOTE:

The pin numbers of each connector are marked on the P.C.B. surface.

■ AUTOMATIC ADJUSTMENT RESULTS DISPLAY FUNCTION

(SELF-CHECK FUNCTION)

The unit contains a function which displays the result of the automatically adjustment of the servo circuits (tracking, focus servo, etc.) as an error code on the FL display.

The error code display serves as a repair guide showing the automatically adjustment circuit is at fault. The procedures for displaying the error codes are given below.

• Procedures to display the error code

- (1) Procedure to display the error code before disassembly (finished unit)
 1. When the [POWER] key is pressed while holding down the [STOP (■)], [PAUSE (■)], and [PLAY (▶)] keys simultaneously, the FL display illuminates, release the power turns on.
 2. When the FL display illuminates, release the [STOP (■)], [PAUSE (■)] and [PLAY (▶)] keys.
 3. Press the [OPEN/CLOSE (▲)] key to open the disc tray and load the test disc (SZZP1054C).
 4. Press the [PLAY (▶)] key to start the play operation.
 5. After the time display appears, press the [STOP (■)] key to display the error code. (e.g. E-0)
 6. The error code display can be used as a repair guide showing which servo circuit is at fault. (See Error Code Based Troubleshooting.)
- (2) Procedure to display the error code when disassembled
 1. Prepare the unit as described in "How to Check the Main and Servo P.C.B." on pages 21, 22.


• Error code based troubleshooting

※ The unit is satisfactory if the error code is E-0 of E-2.

※ Before testing, check that the test disc is free of scratches and dirt and optical pickup is clean.


FL error code display	Symptom	Probable cause	Signal to check		Normal voltage and waveform values	
			Signal name	Location	PLAY	STOP
E-1	Focus and tracking offset adjustments not completed in specified time period.	① Clocks X1 and X2, power supply V _{DD} , and reset/RST, all on IC702 ② MDATA, MCLK, MLD, and SENSE signals to/from mechanism controller	MDATA	IC702 ⑥ pin		4.8V
			MCLK	IC702 ⑦ pin		4.8V
			MLD	IC702 ⑧ pin	0V	0V
			SENSE	IC702 ⑩ pin	4.7V	4.7V
			/RST	IC702 ⑬ pin		
			X2	IC702 ⑭ pin		
E-3 E-5 E-7 E-9 E-B E-D E-F	Disc play unstable	① Scratches or contaminants on disc surface ② Focus and tracking servo circuits (check waveforms, voltages, and part values.) ③ Spindle driver circuit ④ Optical pickup	FE	IC702 ⑳ pin		2.5V
			TE	IC702 ㉑ pin		2.5V
			FOD	IC702 ㉒ pin	2.5V	2.5V
			TRD	IC702 ㉓ pin	2.5V	2.5V
			KICK	IC702 ㉔ pin	2.5V	2.5V
			/FLOCK	IC702 ① pin	0V	4.9V
			/RF DET	IC702 ㉕ pin	0V	4.9V
			RF	TJ701		1.7V
			STAT	IC702 ⑰ pin	3.6V	0V
			E-4 E-6 E-C E-E	Best "Eye" (PD Balance) adjustment not completed in specified time period.	① Scratches or contaminants on disc surface ② Focus and Tracking servo circuit (check waveforms, voltages, and part values.) ③ Optical pickup	FBAL
RF	TJ701					1.7V
FE	IC702 ⑳ pin					2.5V
/TLOCK	IC702 ⑫ pin	0V				0V
OFT	IC702 ㉗ pin	0V				0V
E-8 E-A	Focus or Tracking gain adjustment not completed in specified time period.	① Scratches or contaminants on disc surface ② Focus and Tracking servo circuit (check waveforms, voltages, and part values.) ③ Optical pickup	FE	IC702 ⑳ pin		2.5V
			TE	IC702 ㉑ pin		2.5V
			/TLOCK	IC702 ⑫ pin	0V	0V
			OFT	IC702 ㉗ pin	0V	0V

DIGITAL SERVO SYSTEM

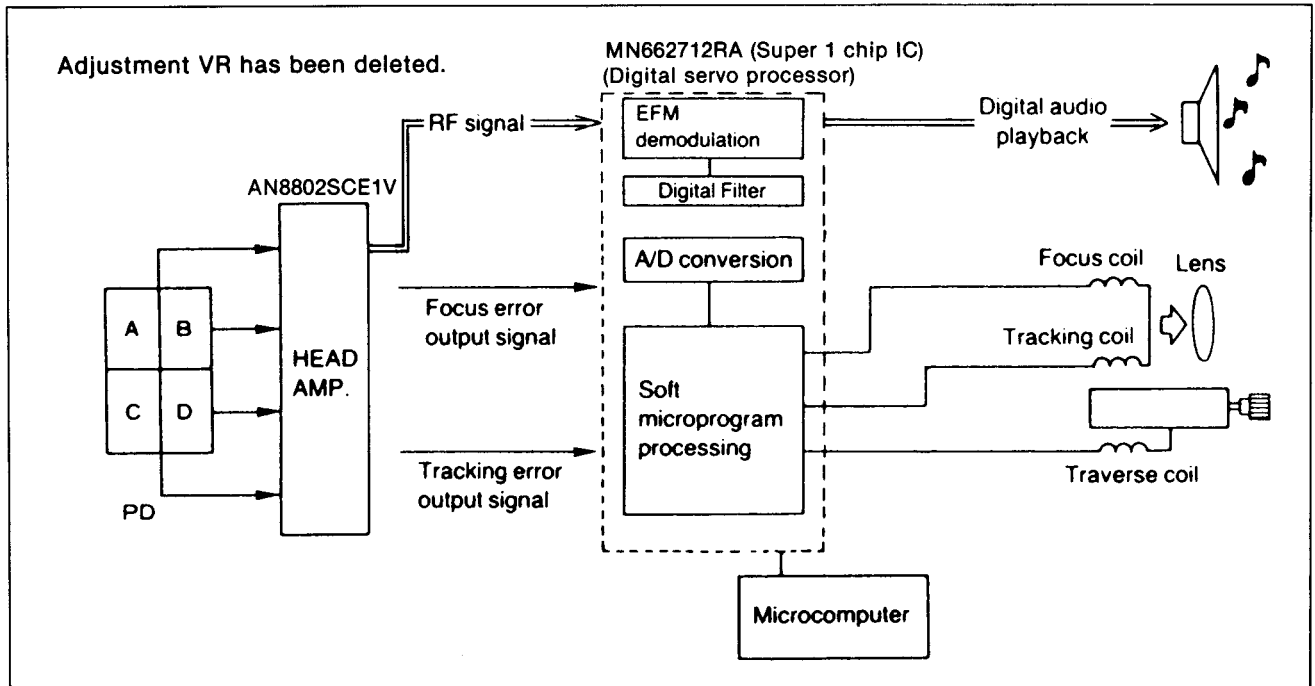

The following flow chart shows the sequence of automatic adjustments.

Flow chart automatic adjustment sequence

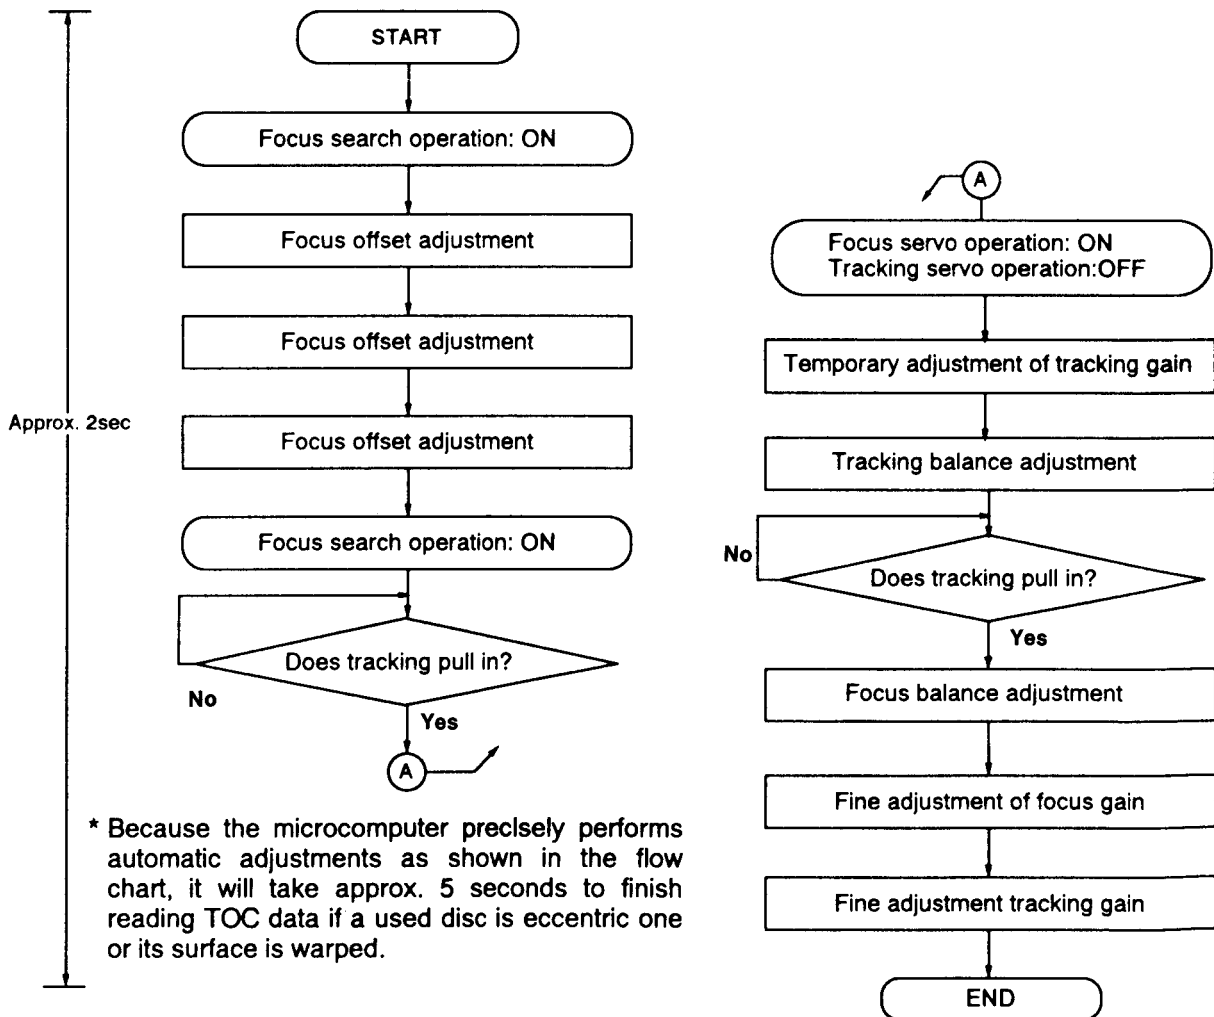

MEASUREMENTS AND ADJUSTMENTS

Warning: This product uses a laser diode. Refer to caution statements on page 2.

Measuring Instruments and Special Tools

- * Test discs
 1. Playability test disc (SZZP1054C)
 2. Uneven test disc (SZZP1056C)
- * Musical program disc (ordinary)
- * Dual-beam oscilloscope with bandwidth of 30MHz or better (with EXT. trigger and 1:1 probe).
- * Allen wrench (M2.0) (SZZP1101C)
- * Lock paint (RZZ0L01)

PREPARATION

1. Remove the cabinet and front panel ass'y (refer to "disassembly instructions" Ref. No. 1, 2).
2. Set the power switch to ON and press the open/close key to close the loading drawer.
3. Press the play key and when the traverse deck reaches it's height position, set the power switch to OFF.
4. Remove the tray ass'y (refer to "disassembly instructions" Ref. No. 5).
5. Remove the clamp plate ass'y, fixed plate, magnet and clamber (refer to "disassembly instructions" Ref. No. 10, 11).
6. Place the test disc and secure it by using clamber ass'y. (Refer to Fig. 1) (refer to "disassembly instructions" Ref. No. 11).

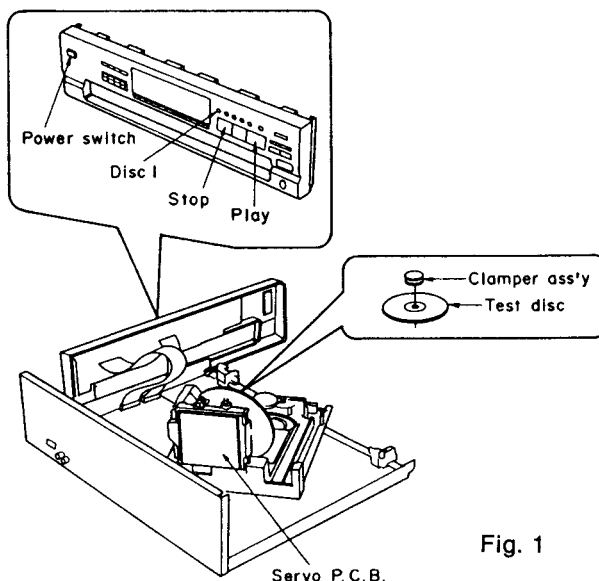


Fig. 1

How to play the disc

Unplug the set previously.

While pressing 3 keys of STOP(■), PLAY(▶), and DISC 1 simultaneously, insert the power plug of the set into the plug socket.

FL lights up?

No

Press the POWER key (POWER ON).

FL lights up.

Yes

Withdraw hand from the 3 keys.

Mount the disc on the turntable and press the PLAY key.

NOTE:

Be sure to begin pressing the 3 keys before plugging the set. Otherwise, the Service Mode cannot be set.

NOTE:


Make sure that the traverse mechanism is then in UP (PLAY) position.

(1) MECHANICAL ADJUSTMENT

1. Connect the oscilloscope's CH. 1 probe across **TJ701** (RF) and **TJ702** (VREF) on the servo P.C.B. (Refer to Fig. 3)

Oscilloscope setting: VOLT 200mV
 SWEEP 0.5μs.
 Input coupling..... AC

2. Switch the player power **ON**, and play track 19 on the test disc (SZZP1056C). (Playing any other track will prevent the HEX screws from being accessed.)
3. Leave the player in play mode and place it as shown Fig. 3.
4. Alternately adjust the two HEX screws with the 2.0mm allen wrench (SZZP1101C) until the vertical fluctuation of RF signal is minimized and the eye pattern is most stretched. (Refer to Fig. 2)
5. After completing the adjustment, lock the HEX screws with lock paint (RZZ0L01).

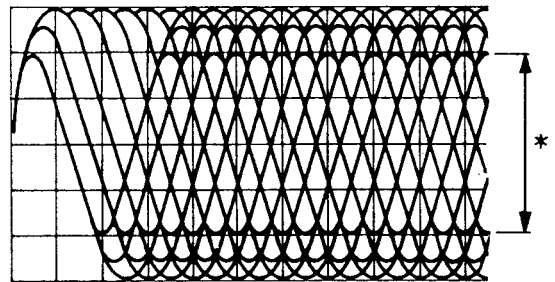

*Most stretched eye pattern.

Fig. 2

(2) CHECK OF PLAY OPERATION AFTER ADJUSTMENT

* **Checking Skip Search**

1. Play an ordinary musical program disc.
2. Press the skip button to check for normal skip search operation (in both the forward and reverse directions).

* **Checking Manual Search**

1. Play an ordinary musical program disc.
2. Press the manual search button to check for smooth manual search operations at either low or high speed (in both the forward and reverse directions).

* **Checking Playability**

1. Play the 0.7mm black dot and the 0.7mm wedge on the playability test disc (SZZP1054C) and verify that no sound skip or noise occurs.
2. Play the middle tracks of the uneven test disc (SZZP1056C) and verify that no sound skip or noise occurs.



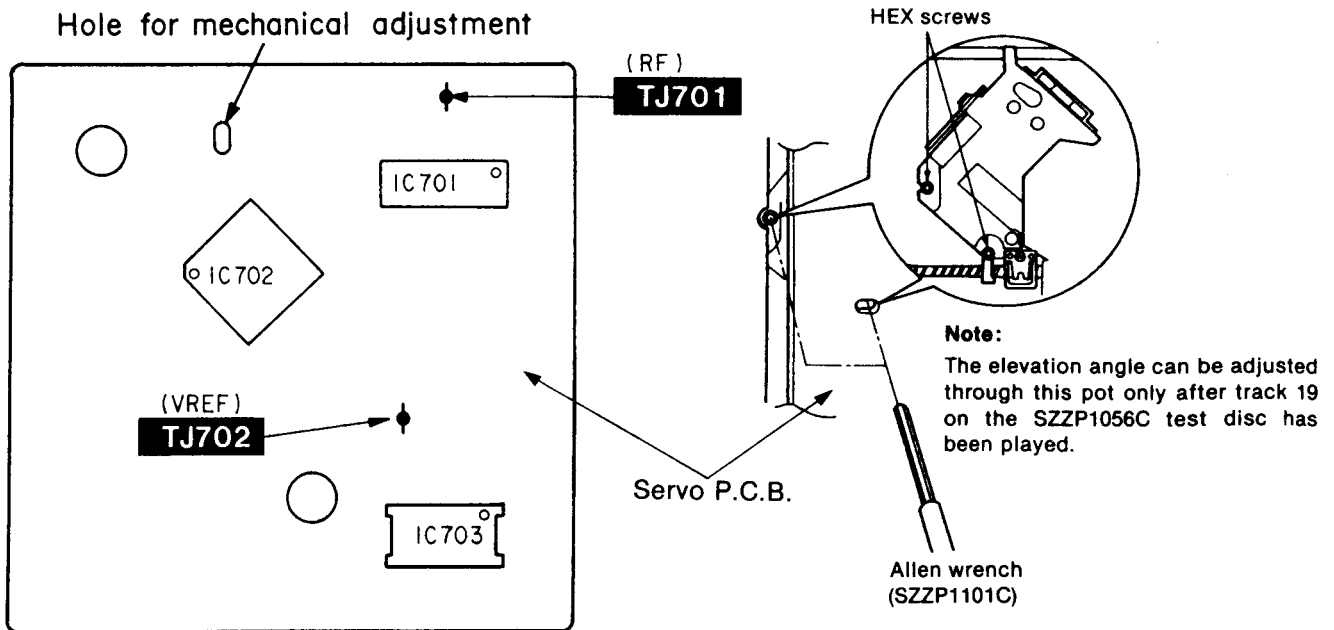


Fig. 3

■ TROUBLESHOOTING

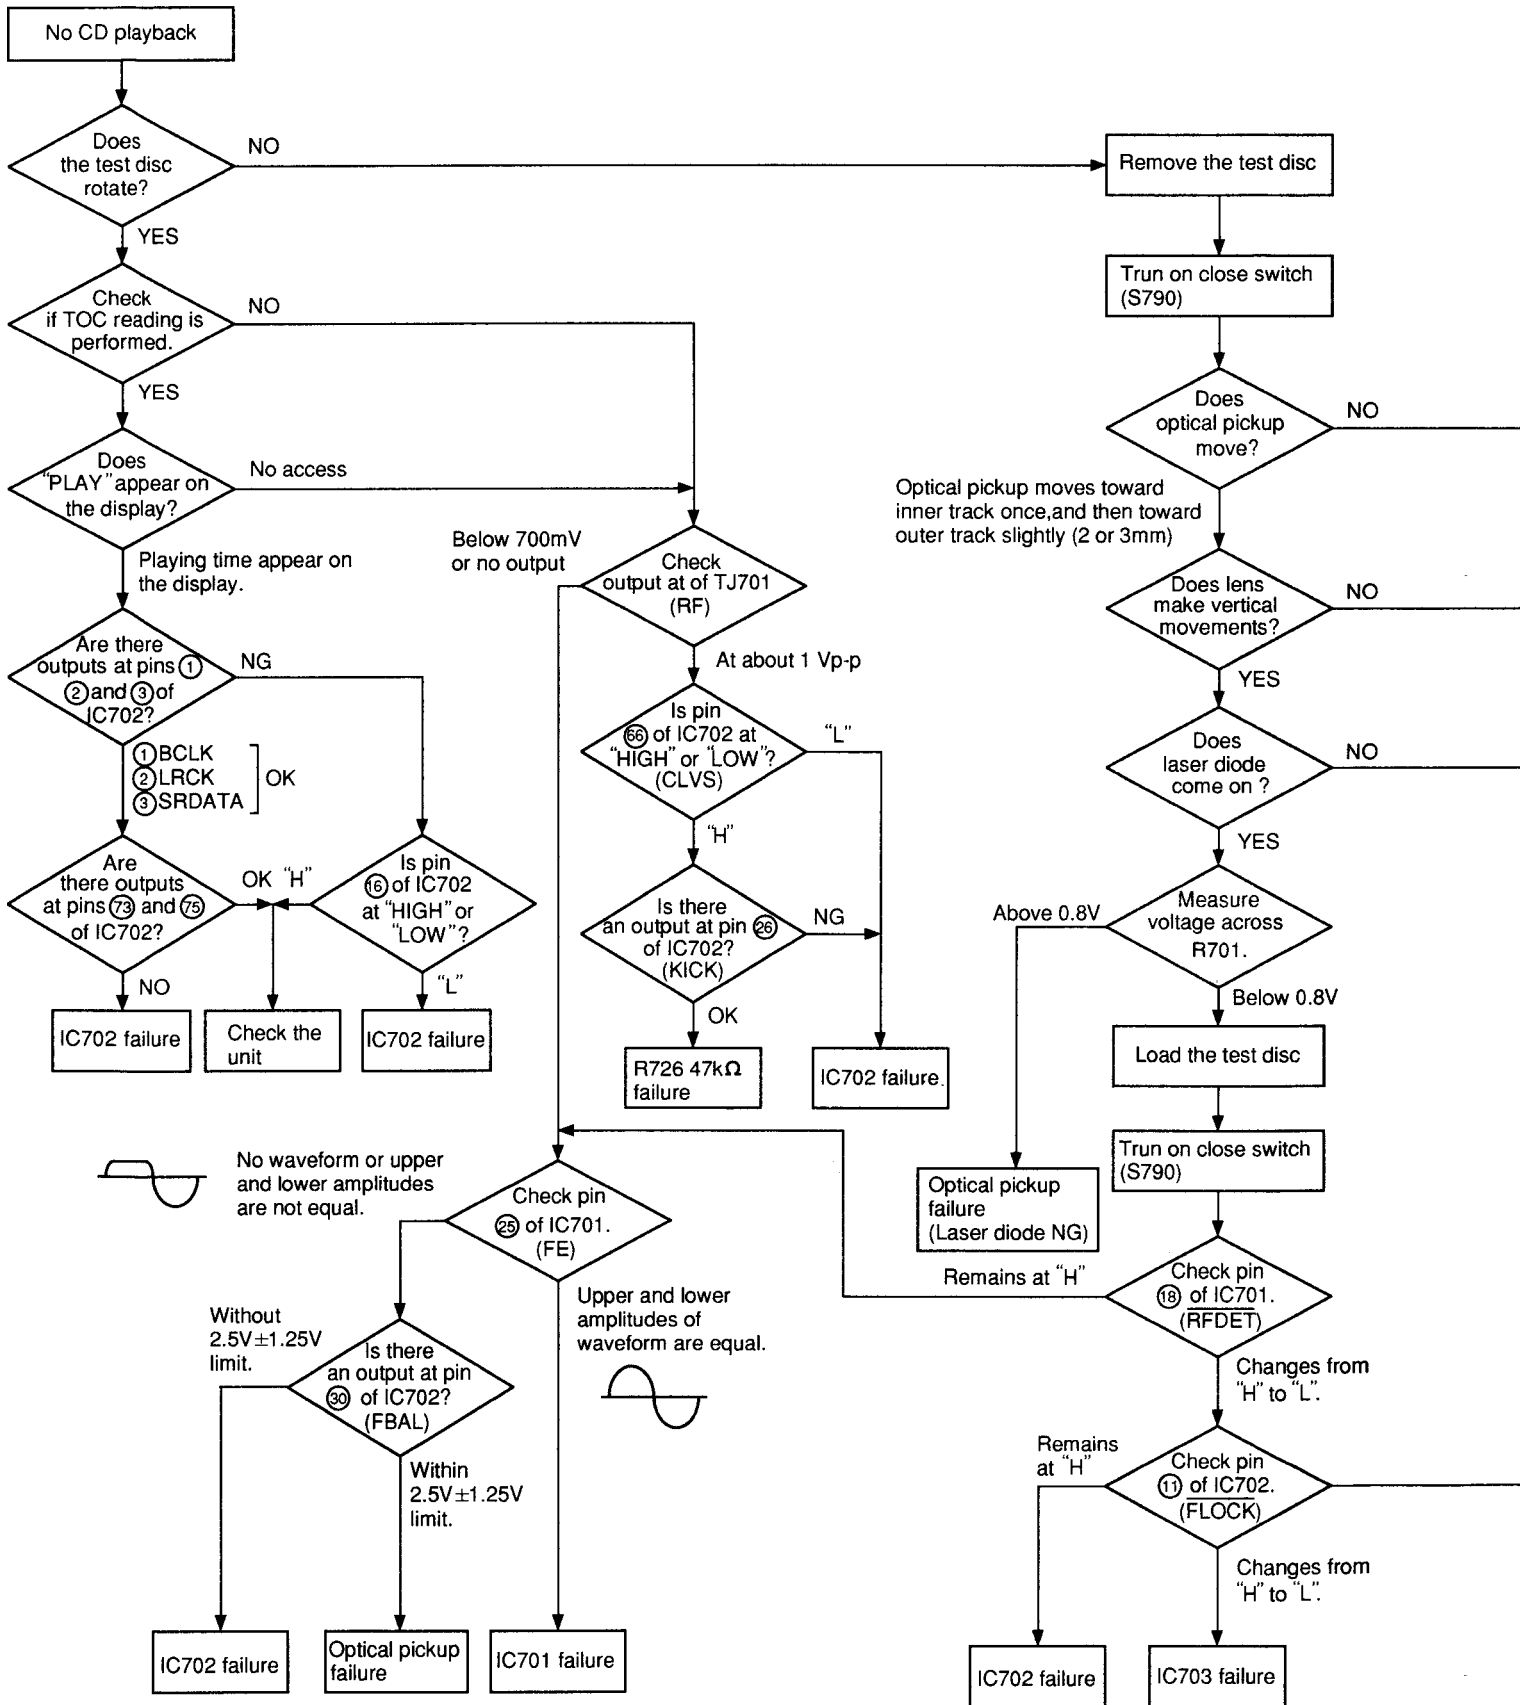

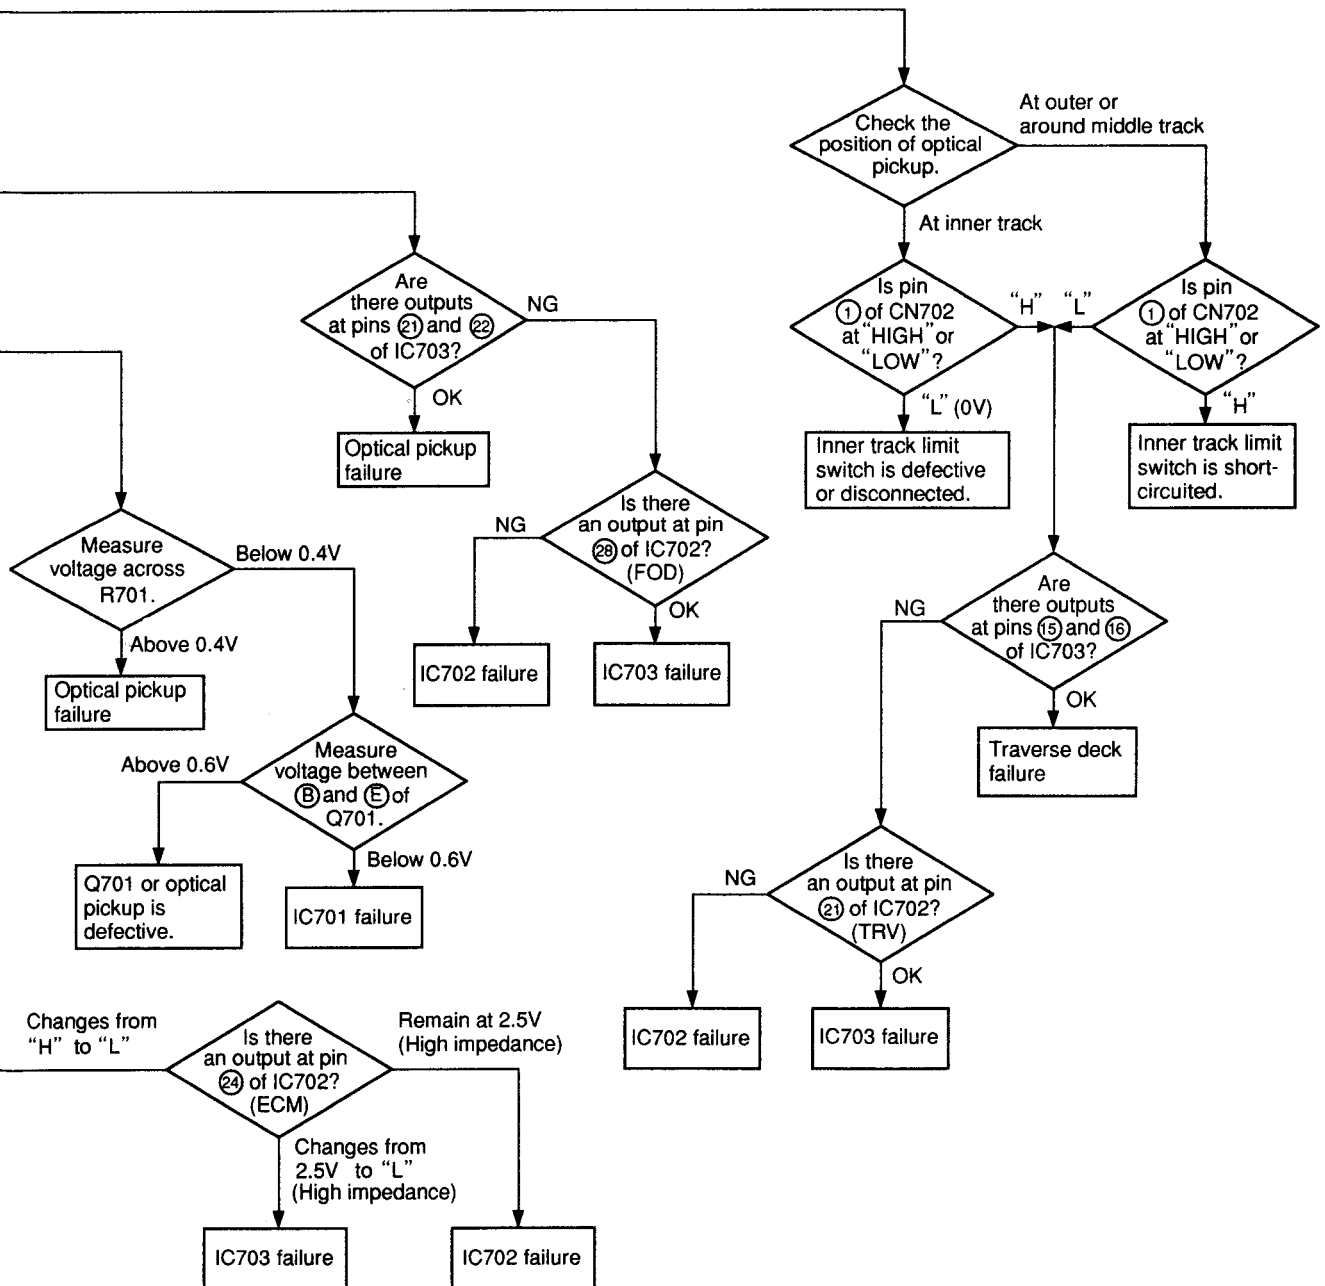

■ TERMINAL GUIDE

• IC701 (AN8802SCE1V): Servo amp

Pin No.	Mark	I/O Division	Function
1	PDAD	I	Photo detector Bch input without delay
2	PDA	I	Photo detector Ach input without delay
3	LPD	I	Laser PD signal
4	LD	O	Laser power auto control output
5	AMPI	I	RF amp terminal
6	V _{CC}	I	Power supply terminal
7	AMPO	O	RF amp signal
8	CAGC	I	AGC detection capacitor input
9	ARF	O	RF signal
10	CENV	I	RF detect capacitor connection terminal
11	CEA	I	HPF-AMP capacitor connection terminal
12	GND	—	GND terminal
13	LDON	I	LD APC ON/OFF ("H": ON, "L": OFF)
14	TES	I	Tracking error shunt input ("H": shunt)
15	PLAY	I	Play signal ("H": ON, "L": OFF)
16	WVEL	I	Double velocity ("H": double, "L": single)

Pin No.	Mark	I/O Division	Function
17	BDO	O	Dropout detection control
18	/RFDET	O	RF det. signal ("L": det.)
19	CROSS	O	Tracking error zero cross output
20	OFTR	O	Off track detection ("H": det.)
21	VDET	O	Oscillation det. signal ("H": det.)
22	ENV	O	Envelope output terminal
23	TEBPF	I	Oscillation detect input terminal (Not used, open)
24	TE	O	Tracking error signal
25	FE	O	Focusing error signal
26	PTO	O	Potention amp output
27	PTI	I	Potention amp input
28	TBAL	I	Tracking balance adj. input
29	FBAL	I	Focus balance adj. input
30	VREF	O	Reference voltage output
31	PDB	I	Photo detector Ach input with delay
32	PDBD	I	Photo detector Bch input with delay

• IC703 (AN8389SE1): Focus coil/tracking coil/traverse motor/spindle motor drive

Pin No.	Mark	I/O Division	Function
1	V _{CC}	I	Power supply terminal
2	VREF	I	Reference voltage input
3	IN4	I	Motor driver (4) input
4	IN3	I	Motor driver (3) input
5	GND	—	GND terminal
6	NC	—	No used, connected to GND
7	NRESET	O	Reset terminal
8	GND	—	GND terminal
9	IN2	I	Motor driver (2) input
10	PC2	I	PC2 (power cut) input
11	IN1	I	Motor driver (1) input
12	PC1	I	PC1 (power cut) input (Not used, open)

Pin No.	Mark	I/O Division	Function
13	PV _{CC} 1	I	Driver power supply (1)
14	PGND1	—	Driver GND terminal (1)
15	D1-	O	Motor driver (1) output terminal (-)
16	D1+	O	Motor driver (1) output terminal (+)
17	D2-	O	Motor driver (2) output terminal (-)
18	D2+	O	Motor driver (2) output terminal (+)
19	D3-	O	Motor driver (3) output terminal (-)
20	D3+	O	Motor driver (3) output terminal (+)
21	D4-	O	Motor driver (4) output terminal (-)
22	D4+	O	Motor driver (4) output terminal (+)
23	PGND2	—	Driver GND terminal (2)
24	PV _{CC} 2	I	Driver power supply (2)

• IC702 (MN662712RA): Servo processor/digital signal processor/digital filter/D/A converter

Pin No.	Mark	I/O Division	Function
1	BCLK	O	Serial bit clock terminal
2	LRCK	O	L/R discriminating signal
3	SRDATA	O	Serial data (Not used, open)
4	DV _{DD1}	I	Power supply (digital circuit) terminal
5	DV _{SS1}	—	GND (digital circuit) terminal
6	TX	O	Digital audio interface signal
7	MCLK	I	Command clock signal
8	MDATA	I	Command data signal
9	MLD	I	Command load signal ("L": LOAD)
10	SENSE	O	Sense signal (OFT, FESL, NACEND, NAJEND, POSAD, SFG)
11	/FLOCK	O	Optical servo condition (focus) ("L": lead-in)
12	/TLOCK	O	Optical servo condition (tracking) ("L": lead-in)
13	BLKCK	O	Sub-code block clock (f=75Hz) (Not used, open)
14	SQCK	I	Sub-code Q register clock
15	SUBQ	O	Sub-code Q data
16	DMUTE	I	Muting input ("H": MUTE) (Not used, connected to GND)
17	STAT	O	Status signal (CRC, CUE, CLVS, TTSTOP, FCLV, SQCK)
18	/RST	I	Reset signal ("L": reset)
19	SMCK	O	System clock (f=4.2336MHz) (Not used, open)
20	PMCK	O	Frequency division clock signal (Not used, open) $(f = \frac{1}{1.92} \times ck = 88.2\text{kHz})$
21	TRV	O	Traverse servo control

Pin No.	Mark	I/O Division	Function
22	TVD	O	Traverse drive signal
23	PC	O	Turntable motor drive signal ("L": ON)
24	ECM	O	Turntable motor drive signal (Forced mode)
25	ECS	O	Turntable motor drive signal (Servo error signal)
26	KICK	O	Kick pulse output
27	TRD	O	Tracking drive signal output
28	FOD	O	Focus drive signal output
29	VREF	I	D/A drive output (TVD, ECS, TRD, FOD, FBAL, TBAL) normal voltage input terminal
30	FBAL	O	Focus balance adj. output (Not used, open)
31	TBAL	O	Tracking balance adj. output
32	FE	I	Focus error signal (analog input)
33	TE	I	Tracking error signal (analog input)
34	RFENV	I	RF envelope signal
35	VDET	I	Oscillation det. signal ("H": det.)
36	OFT	I	Off track signal ("H": Off track)
37	TRCRS	I	Track cross signal input
38	/RFDET	I	RF detection signal ("L": detection)
39	BDO	I	Dropout detection signal ("H": dropout)
40	LDON	O	Laser power control ("H": ON)
41	TES	O	Tracking error shunt output ("H": dropout)
42	PLAY	O	Play signal ("H": play)

Pin No.	Mark	I/O Division	Function
43	WVEL	O	Double velocity status signal ("H": double)
44	ARF	I	RF signal input
45	IREF	I	Reference current input
46	DRF	I	DSL bias terminal (Not used, open)
47	DSL F	I/O	DSL loop filter terminal
48	PLL F	I/O	PLL loop filter terminal
49	VCO F	I/O	VCO loop filter terminal (Not used, open)
50	AV _{DD2}	I	Power supply (analog circuit) terminal (2)
51	AV _{SS2}	—	GND (analog circuit) terminal
52	EFM	O	EFM signal (Not used, open)
53	PCK	O	PLL extract clock (f=4.3218 MHz)
54	PDO	O	Phase compared signal of EFM and PCK (Not used, open)
55	SUBC	O	Sub-code serial output data (Not used, open)
56	SBCK	I	Sub-code serial output clock (Not used, connected to GND)
57	V _{SS}	—	GND terminal
58	X1	I	Crystal oscillator terminal (f=16.9344 MHz)
59	X2	O	
60	V _{DD}	I	Power supply terminal
61	BYTCK	O	Byte clock signal (Not used, open)
62	/CLDCK	O	Sub-code frame clock signal (f CLDCK=7.35 kHz: Normal) (Not used, open)

Pin No.	Mark	I/O Division	Function
63	FCLK	O	Crystal frame clock (Not used, open)
64	IPFLAG	O	Interpolation flag terminal
65	FLAG	O	Flag terminal
66	CLVS	O	Turntable servo phase synchro signal ("H": CLV, "L": Rough servo) (Not used, open)
67	CRC	O	Sub-code CRC check terminal ("H": OK, "L": NG)
68	DEMPH	O	De-emphasis ON signal ("H": ON) (Not used, open)
69	RESY	O	Re-synchronizing signal of frame sync. (Not used, open)
70	/RST2	I	Reset terminal after "MASH" circuit
71	/TEST	I	Test terminal (Normal: "H")
72	AV _{DD1}	I	Power supply (analog circuit) terminal (1)
73	OUTL	O	Lch audio signal
74	AV _{SS1}	—	GND (analog circuit) terminal (1)
75	OUTR	O	Rch audio signal
76	RSEL	I	Polarity direction control terminal of RF signal
77	CSEL	I	Frequency control terminal of crystal oscillator (Not used, connected to GND)
78	PSEL	I	Test terminal (Normal: "L")
79	MSEL	I	"SMCK" terminal frequency select ("L": SMCK=4.2336 MHz)
80	SSEL	I	"SUBQ" terminal mode select ("H": Q code buffer)

• IC401 (UPD78044A059): System control & FL drive

Pin No.	Mark	I/O Division	Function
1 └ 7	G7 └ G1	O	Grid signal of FL display
8	VDD	I	Power supply terminal
9	MCLK	O	Command clock signal
10	MDATA	O	Command data signal
11	MLD	O	Command load signal ("L" LOAD)
12	SENSE	I	Sense signal
13	DMUTE	O	Muting control signal
14	SQCK	O	Sub-code Q register clock
15	NC	—	Not connected
16	SUBQ	I	Sub-code Q data
17	/RESET	I	Reset signal input
18	ZSENSE	—	Not used, connected to GND
19	REC. EN	I	Synchro. rec. control terminal
20	AVSS	—	GND terminal
21	/RSTSV	O	Reset signal output
22	OPEN	I	Open detect terminal
23	DIR	O	Motor control signal
24	TRUN	O	
25	LOAD	O	Motor control signal
26	DAC	O	Not used, open
27	RESTSW	I	Rest position de
28	UP/DOWN	I	Traverse deck up/down det. terminal
29	AVDD	I	Power supply terminal
30	AVREF	I	Power supply terminal
31	XT1	—	Not used, connected to GND

Pin No.	Mark	I/O Division	Function
32	XT2	—	Not used, open
33	VSS	—	GND terminal
34	X1	I	Crystal Osc terminal (F: 4.2336 MHz)
35	X2	O	
36 └ 42	KEYIN 7 └ KEYIN 1	I	Key return signal
43	PWM	O	Motor control signal
44	POFF	I	Power det. terminal
45	POSITION	I	Rotary tray position det. terminal
46	SPEED	I	Loading motor speed sensor signal
47	REMOCON	I	Remote control signal input
48	IC	—	Not used, connected to GND
49	/TLOCK	I	Optical servo condition (tracking) input
50	/FLOCK	I	Optical servo condition (focus) input
51	STAT	I	Status signal (CRC, CUE, CLVS, TTSTOP, FCLV, SQCK)
52	VDD	I	Power supply terminal
53	POWER	O	Power ON/OFF output terminal
54	SYNCHRO	—	Not used, open
55 └ 60	KEYOUT 6 └ KEYOUT 1	O	Key scan signal
61 └ 70	S16 └ S7	O	Segment signal of FL display
71	VPP	I	Power supply terminal
72 └ 77	S6 └ S1	O	Segment signal of FL display
78	EXDATA	O	Not used, open
79	EXCLK	O	Not used, open
80	G8	O	Grid signal of FL display

• IC901 (RSI0001): Shock proof controller

Pin No.	Mark	I/O Division	Function
1	YFLAG	I	Signal processing flag input terminal
2	YFCLK	I	Frame clock input terminal ANTI-SHOCK MEMORY selector (ON: 14.7kHz, OFF: 7.35kHz)
3	YSRDATA	I	Serial data input terminal
4	YSCK	I	Shyft clock input terminal ANTI-SHOCK MEMORY selector (ON: 5.64MHz, OFF: 2.82MHz)
5	YLCK	I	L/R clock input terminal ANTI-SHOCK MEMORY selector (ON: 88.2kHz, OFF: 44.1kHz)
6	GND	—	GND terminal
7	X1	I	Crystal OSC terminal (F=33.9MHz)
8	X2	O	
9	ZXCK	O	Clock output terminal (F=16.9MHz)
10	ZSMCK	O	Clock output terminal (F=4.23MHz)
11	TEST	I	Test input terminal (Normal: "L")
12	ZVXCK	O	Clock output terminal ANTI-SHOCK MEMORY selector (ON: 33.9MHz, OFF: 16.9MHz)
13	ZCOSEL	O	Playback speed select output terminal ANTI-SHOCK MEMORY selector (ON: "H, OFF: "L")
14	ZMCOM	O	Voltage select output terminal ANTI-SHOCK MEMORY selector (ON: "H, OFF: "L")
15	ZPMCK	O	Clock output terminal (F=88.2kHz)
16	ZSVG	O	Traverse drive select output terminal
17	ZSBCK	O	Flag read out clock output terminal

Pin No.	Mark	I/O Division	Function
18	YBLKCK	I	Block clock input terminal ANTI-SHOCK MEMORY selector (ON: 150Hz, OFF: 75 Hz)
19	VDD	I	Power supply terminal
20 } 29	A0 } A9	O	Address output terminal
30	NRAS	O	Low address strobe terminal
31	GND	—	GND terminal
32	NOE	O	Output enable terminal
33	NCAS	O	Column address strobe terminal
34	NWE	O	Write enable terminal
35 } 38	D0 } D3	I/O	Data input/output terminal
39	ZLCK	O	L/R clock output terminal (F=44.1kHz)
40	ZSCK	O	Shyft clock output terminal (F=2.82MHz)
41	ZSRDATA	O	Serial data output terminal
42	ZSENSE	O	States output terminal
43	VDD	I	Power supply terminal
44	YMLD	I	Microcomputer command load input terminal
45	YMDATA	I	Microcomputer command data input terminal
46	YMCLK	I	Microcomputer command clock input
47	YDMUTE	I	Mute input terminal ("H"-MUTE: ON, "L"-MUTE: OFF)
48	NRESET	I	Reset input terminal (Normal: "H", RESET: "L")

• IC902 (UPD424400V): 4M. DRAM






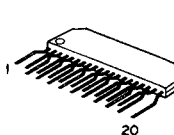
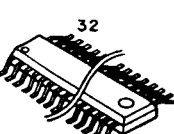
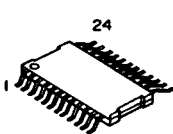
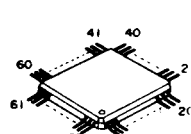
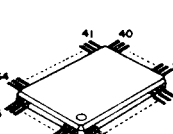
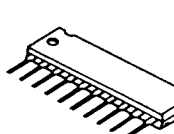
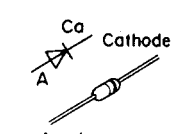
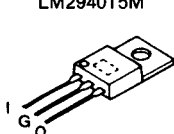
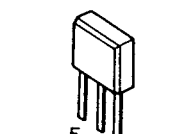








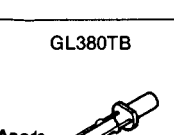
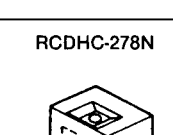
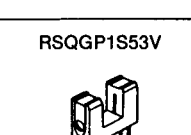
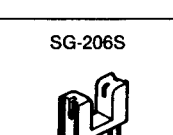
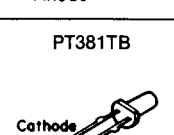
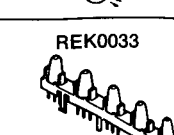
Pin No.	Mark	I/O Division	Function
1	OE	I	Output enable terminal
2	CAS	I	Column address strobe terminal
3	D3	I/O	Data input/output terminal
4	D4	I/O	Data input/output terminal
5	GND	—	GND terminal
6	D1	I/O	Data input/output terminal
7	D2	I/O	Data input/output terminal
8	WE	I	Write enable terminal

Pin No.	Mark	I/O Division	Function
9	RAS	I	Low address strobe terminal
10	A9	I	Address input terminal
11 } 14	A0 } A3	I	Address input terminal
15	VCC	I	Power supply terminal
16 } 20	A4 } A8	I	Address input terminal

• IC903 (MN6475A-T1): Digital filter & D/A converter

Pin No.	Mark	I/O Division	Function	Pin No.	Mark	I/O Division	Function
1	LRCLK	I	L/R discriminating signal	16	AV _{DD} R	I	Analog power supply terminal 2
2	BCLK	I	Serial bit clock input	17	RESET	I	Reset signal input (Active: L)
3	SRDATA	I	Serial data output (MSB first)	18	PWM	O	PWM output (TP...“H”: output “L”: High impedance) (Not used, open)
4	COT 1	—	Test terminal (Ordinaly: L)	19	TP	—	Test terminal (ordinaly: L)
5	COT 2						
6	TEST						
7	D. V _{DD}	I	Digital power supply terminal	20	WVEL	I	Double velocity (“H”: double, “L”: single)
8	X2	O	Clock terminal (F=33.8688MHz)	21	DEMPH	I	Digital de-emphasis ON/OFF (“H”: ON)
9	X1	I					
10	D. V _{SS}	—	Digital GND terminal	22	CSEL	I	Clock frequency select of CK 192 (Not used, connected to GND)
11	AV _{DD} L	I	Analog power supply terminal 1	23	192FS	O	192 fs (8.4672 MHz) signal output (Not used, open)
12	OUT. L	O	Analog signal output 1	24	384FS	O	Clock output terminal (384 FS= 16.9344 MHz)
13	AV _{SS} L	—	Analog GND terminal				
14	AV _{SS} R						
15	OUT. R	O	Analog signal output 2				

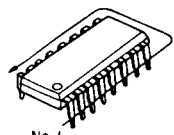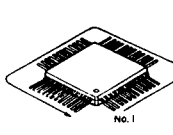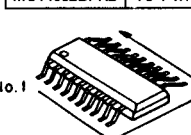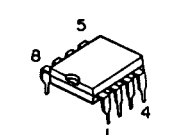■ TERMINAL GUIDE OF IC'S, TRANSISTORS, AND DIODES
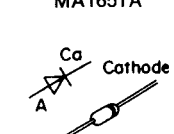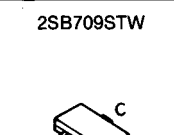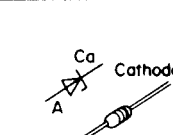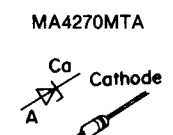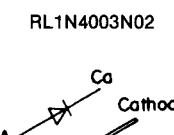
<p>NJU3713D 18 Pin</p> 	<p>RSI0001 48 Pin</p> 	<p>MN6475A-T1 24 Pin MC14052BFR2 16 Pin</p> 	<p>BA4560 8 Pin</p> 	<p>BA4558FHTT1</p> 	<p>UPD424400V 20 Pin</p> 
<p>AN8802SCE1V</p> 	<p>AN8389SE1</p> 	<p>MN662712RA</p> 	<p>UPD78044A059</p> 	<p>BA6247N</p> 	<p>1SS291TA</p> 
<p>LM2940T5M</p>  <p>I. Vin G. GND O. Vout</p>	 <p>E C B</p>	<p>2SA1309AIQST 2SC3311AIQST 2SD1450RSTTA UN4112AITA UN4114TA UN4212AITA UN4214AITA UN4215TA</p>	<p>2SD2037EFTA</p>  <p>B C E</p>	<p>2SB1238QSTV6 2SD1862QRTV6</p>  <p>B C E</p>	<p>MA165TA</p>  <p>A Cathode Anode</p>
<p>2SB709STW</p>  <p>B C E</p>	 <p>A Cathode Anode</p>	<p>MA4051MTA MA4062LTA MA4068HTA MA4082MTA MA4091MTA MA4056MTA</p>	<p>MA4270MTA</p>  <p>A Cathode Anode</p>	<p>RL1N4003N02</p>  <p>A Cathode Anode</p>	<p>LN013304P LN018304P</p>  <p>A Cathode Anode</p>
<p>GL380TB</p>  <p>A Cathode Anode</p>	<p>RCDHC-278N</p>  <p>3 2 1</p>	<p>RSQGP1S53V</p>  <p>A E C Ca C E</p>	<p>SG-206S</p>  <p>A E C Ca C E</p>	<p>PT381TB</p>  <p>Cathode Anode Ca A</p>	<p>REK0033</p>  <p>Anode Cathode A Ca</p>


BLOCK DIAGRAM

AN8802SCE1V

IC701

SERVO AMP


OPTICAL PICKUP

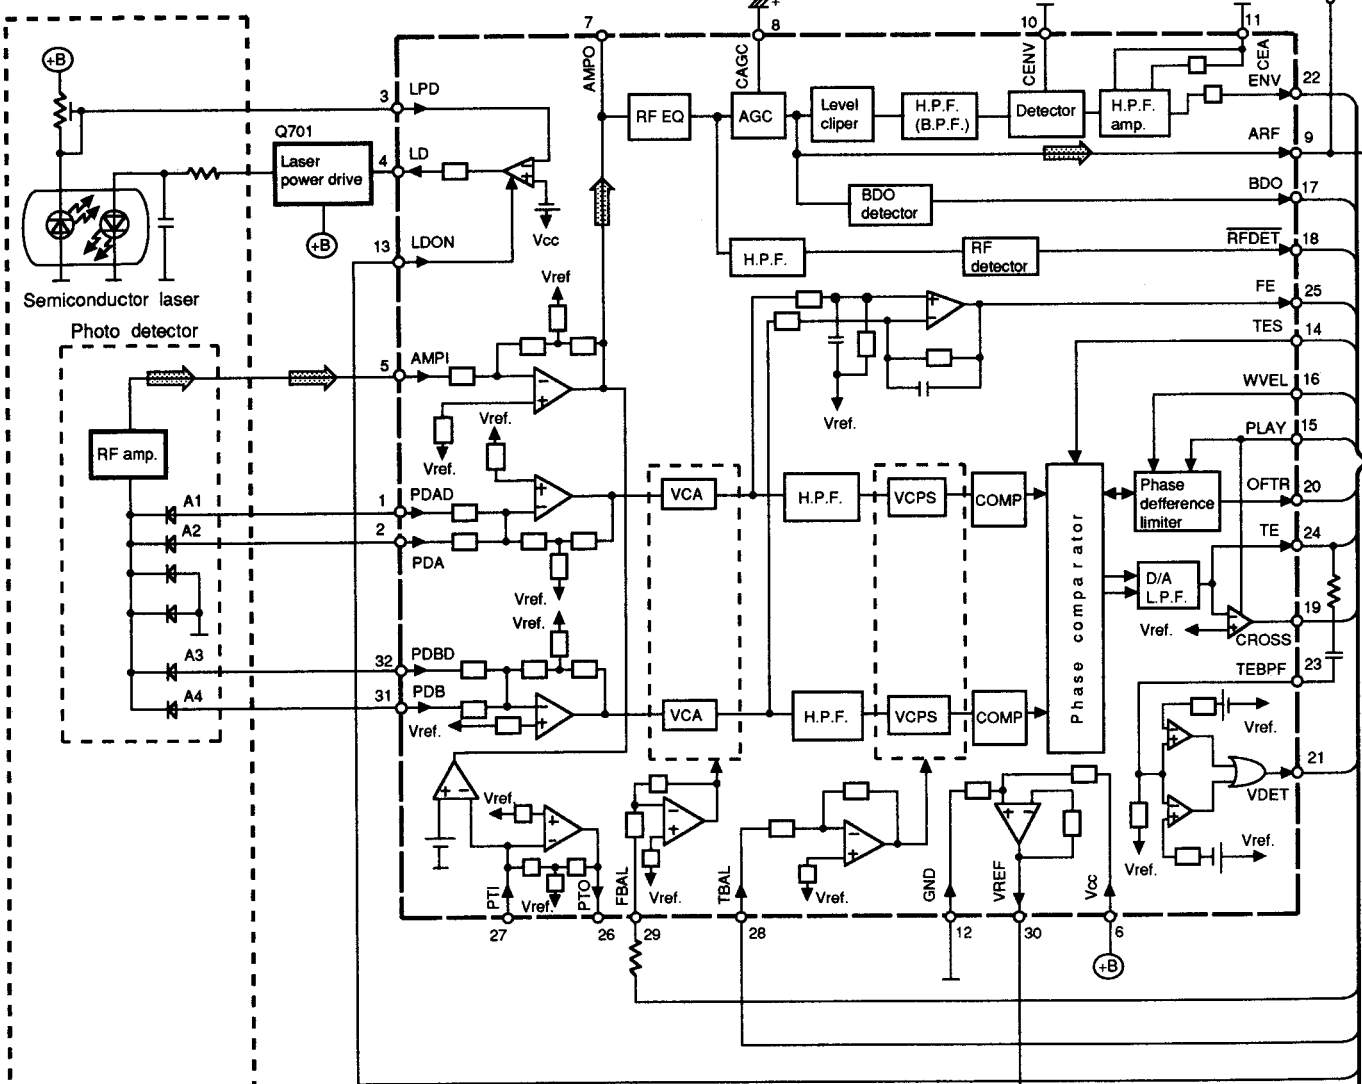

AN8389SE1

IC703


FOCUS COIL / TRACKING COIL / TRAVERSE MOTOR / SPINDLE MOTOR DRIVE

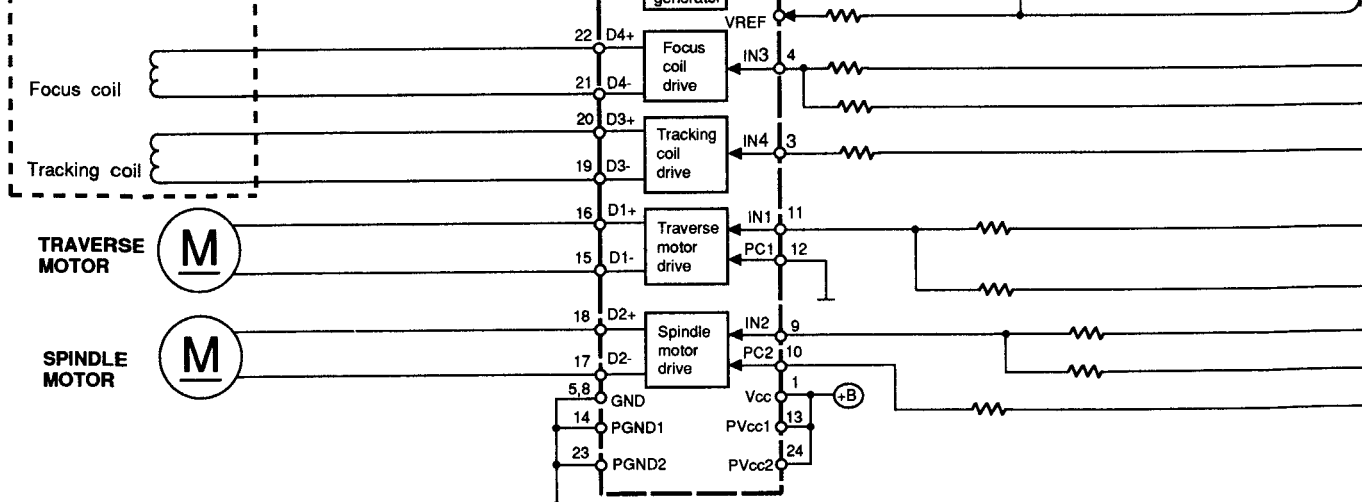



MN662712RA


IC702

SERVO PROCESSOR / DIGITAL SIGNAL PROCESSOR /
DIGITAL FILTER / D/A CONVERTER

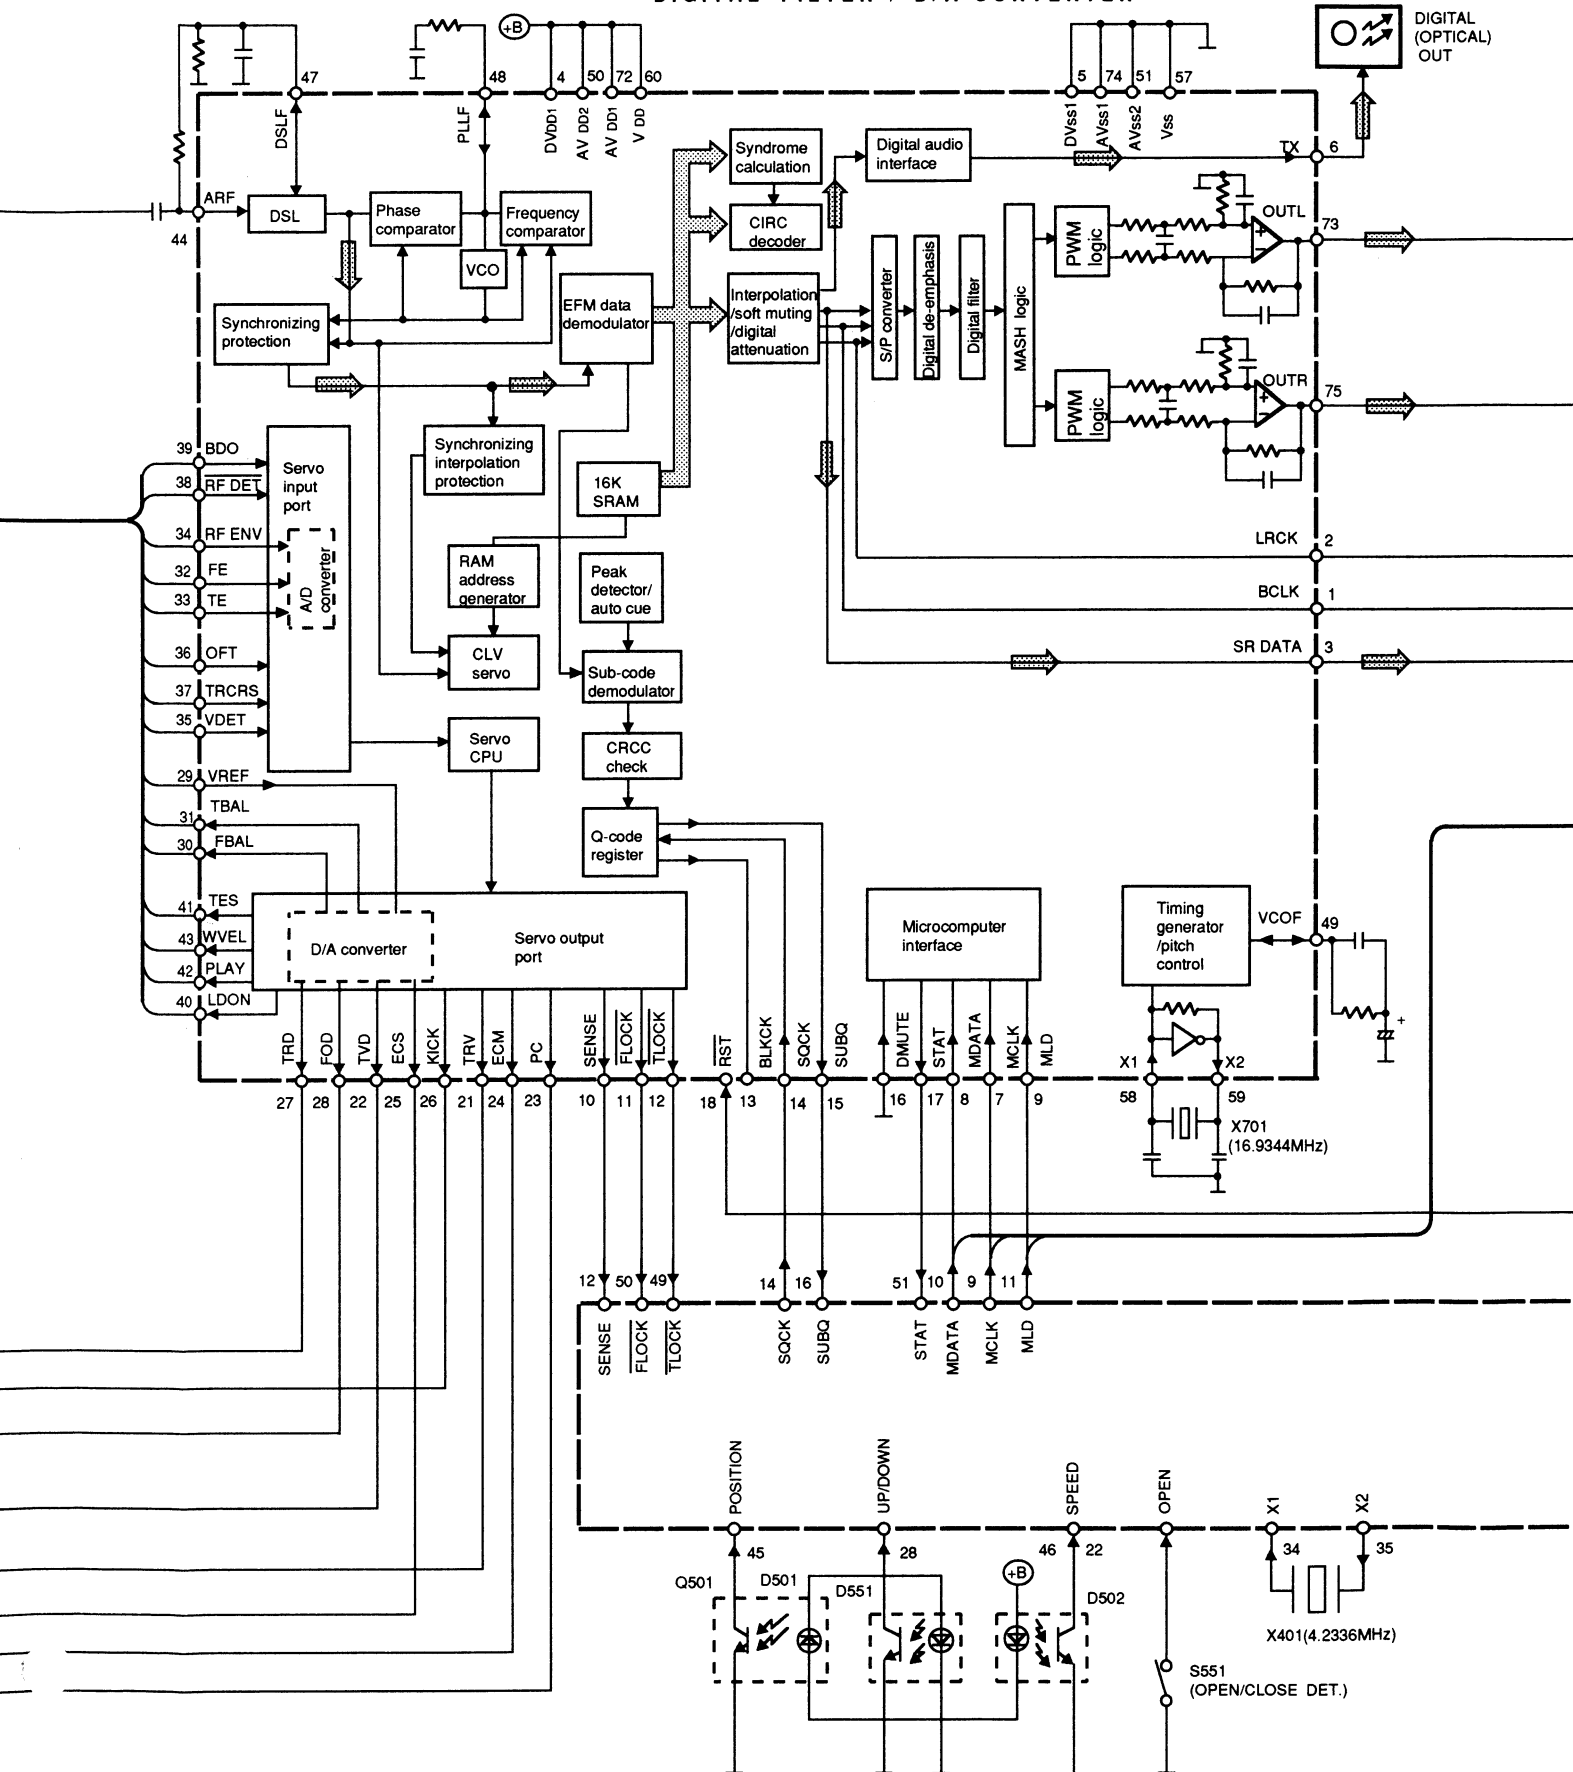

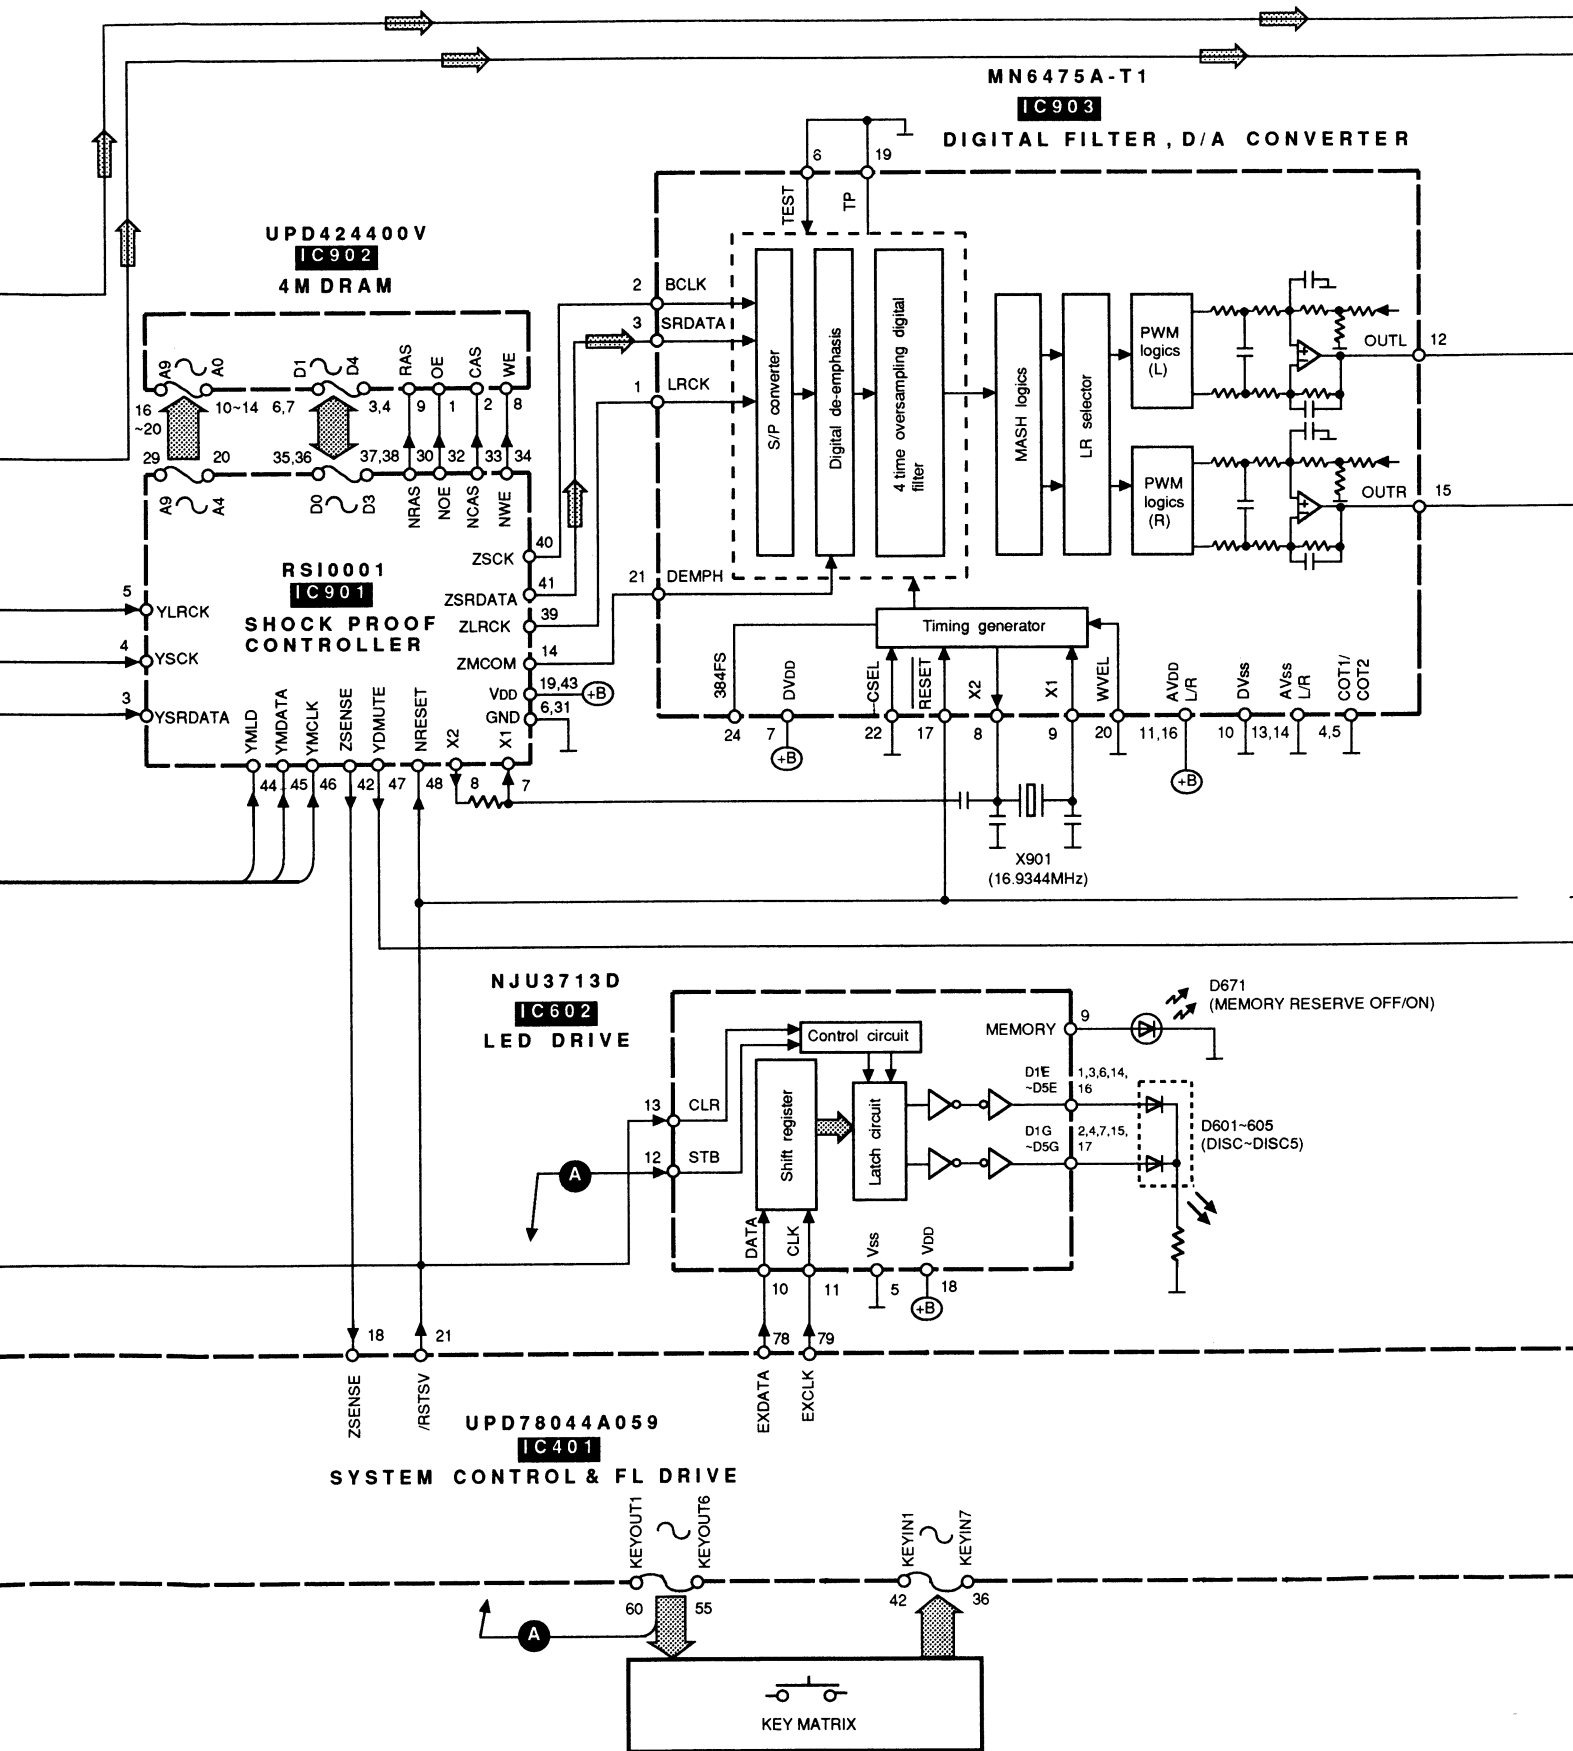

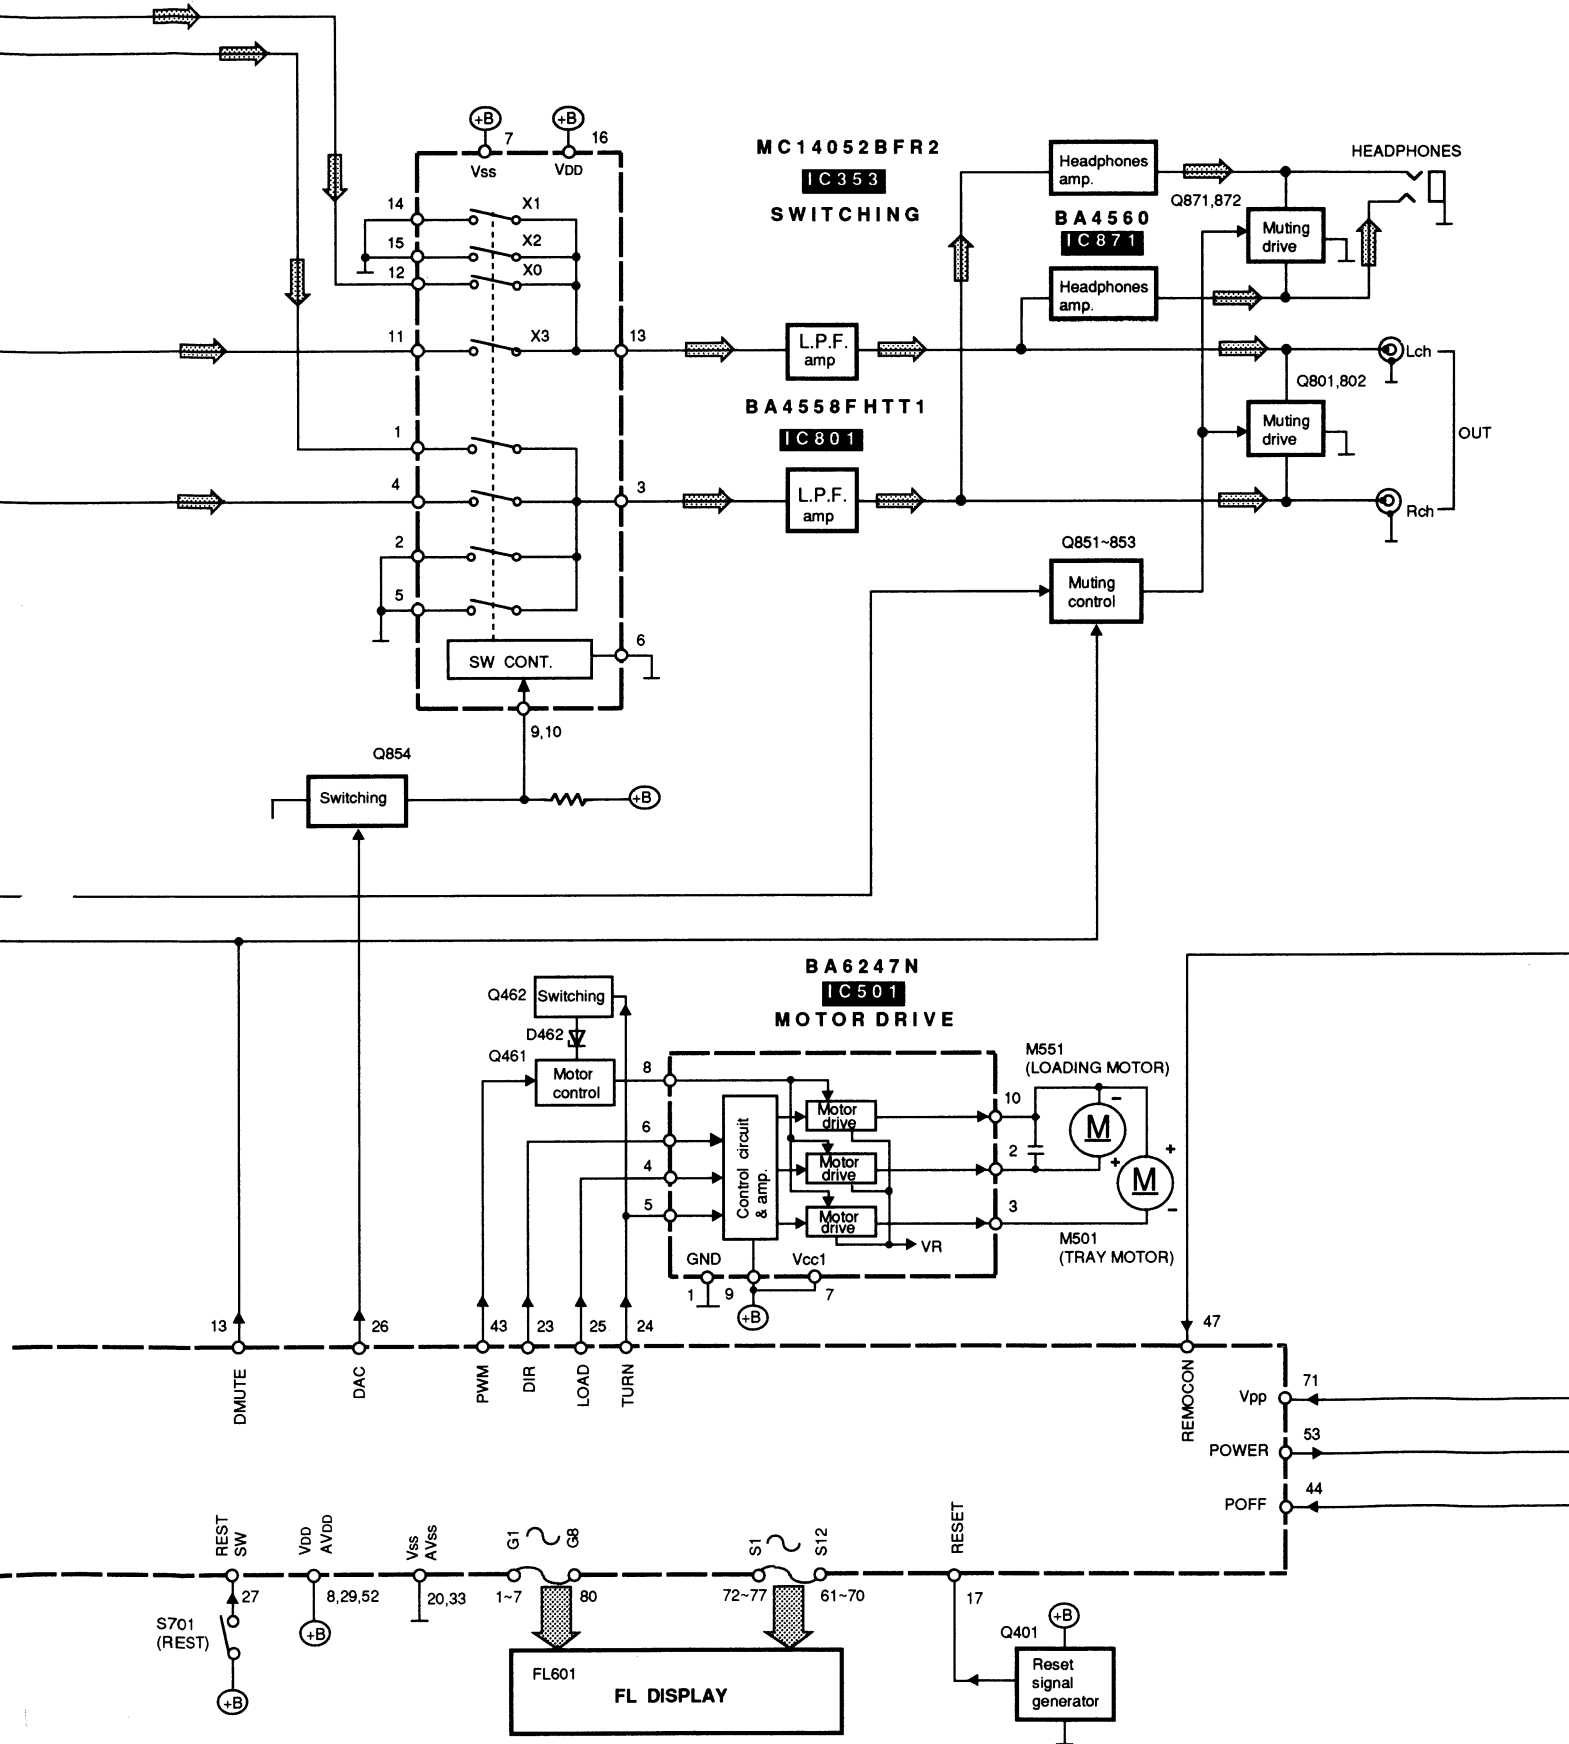

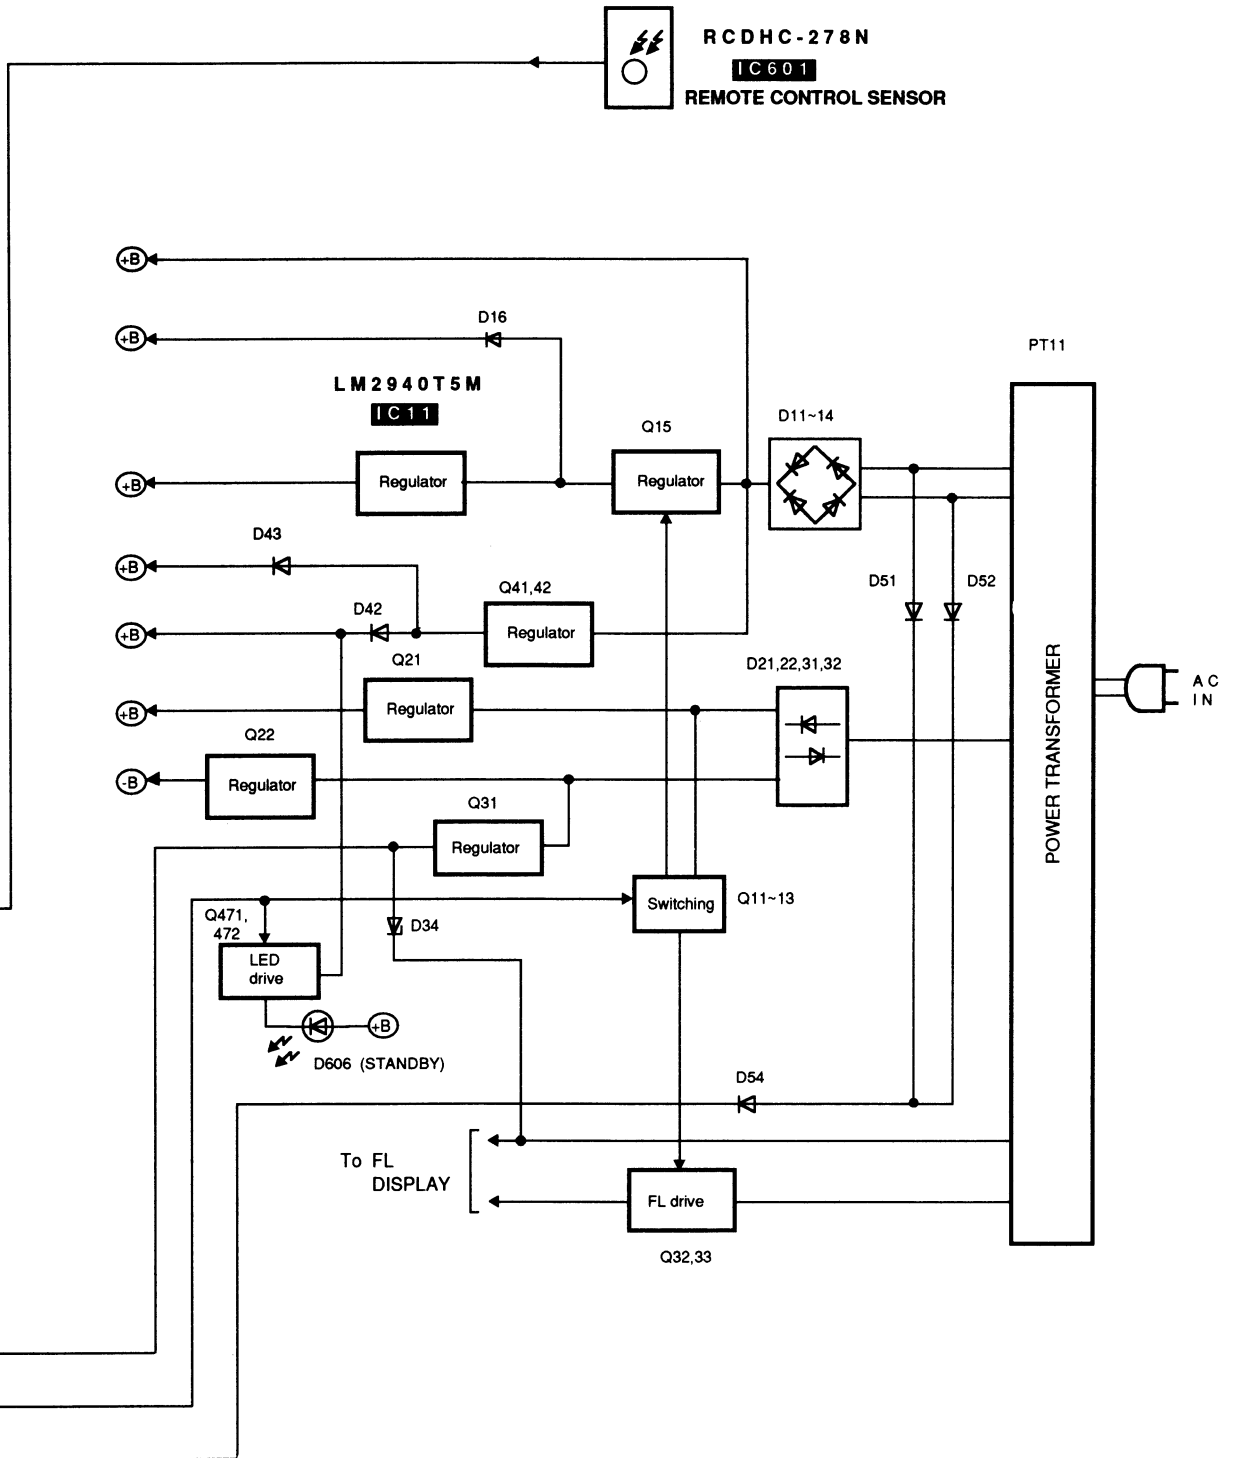

■ SCHEMATIC DIAGRAM (Parts list on pages 53, 54, 59, 60)

(This schematic diagram may be modified at any time with the development of new technology.)

Note:

- **S551** : Open/close det. switch.
- **S601** : Auto cue (AUTO CUE) switch.
- **S602** : Spiral (SPIRAL) switch.
- **S603** : Random mode (RANDOM MODE) switch.
- **S604** : Repeat (REPEAT) switch.
- **S605** : ID scan (ID SCAN) switch.
- **S606** : Edit guide (EDIT GUIDE) switch.
- **S607** : Stop (■) switch.
- **S608** : Pause (■) switch.
- **S609** : Play (▶) switch.
- **S610~S614**: Disc (DISC 1~5) switches.
[S610: 1, S611: 2, S612: 3, S613: 4, S614: 5]
- **S615** : Disc skip (DISC SKIP) switch.
- **S616** : Program mode (PROGRAM MODE) switch.
- **S617, 618** : Search (SEARCH) switches.
[S617: ◀◀, S618: ▶▶]
- **S619, 620** : Skip (SKIP) switches.
[S619: ◀◀, S620: ▶▶]
- **S621** : Loading drawer open/close (▲ OPEN/CLOSE) switch.
- **S631** : Power "STANDBY ⚡ / ON" (POWER, STANDBY ⚡ ON) switch.
- **S651~S662**: Numeric (1~10, 0, > 10) switches.
[S651: (1), S652: (2), S653: (3), S654: (4),
S655: (5), S656: (6), S657: (7), S658: (8),
S659: (9), S660: (10), S661: (> 10),
S662: (0)]
- **S671** : Memory reserve (OFF/ON) switch.
- **S701** : Rest detector.

- The voltage value and waveforms are the reference voltage of this unit measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of chassis.

Accordingly, there may arise some error in voltage values and waveforms depending upon the internal impedance of the tester or the measuring unit.

- *The parenthesized are the values of voltage generated during playing (Test disc 1kHz, L+R, 0dB), others are voltage values in stop mode.

- Important safety notice:

Components identified by △ mark have special characteristics important for safety. Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used as occasion calls. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

- The supply part number is described alone in the replacement parts.

Part No.	Production Part No.	Supply Part No.
IC11	LM2940T5M	LM2940T5

- ——— / - - - - - : Positive voltage lines and negative voltage lines.

⋯⋯⋯ : audio signal lines.



Caution!

IC and LSI are sensitive to static electricity. Secondary trouble can be prevented by taking care during repair.

- Cover the parts boxes made of plastics with aluminum foil.
- Ground the soldering iron.
- Put a conductive mat on the work table.
- Do not touch the pins of IC or LSI with fingers directly.


A SERVO CIRCUIT (P.C. Board : on page 51)

Δ OPTICAL PICKUP

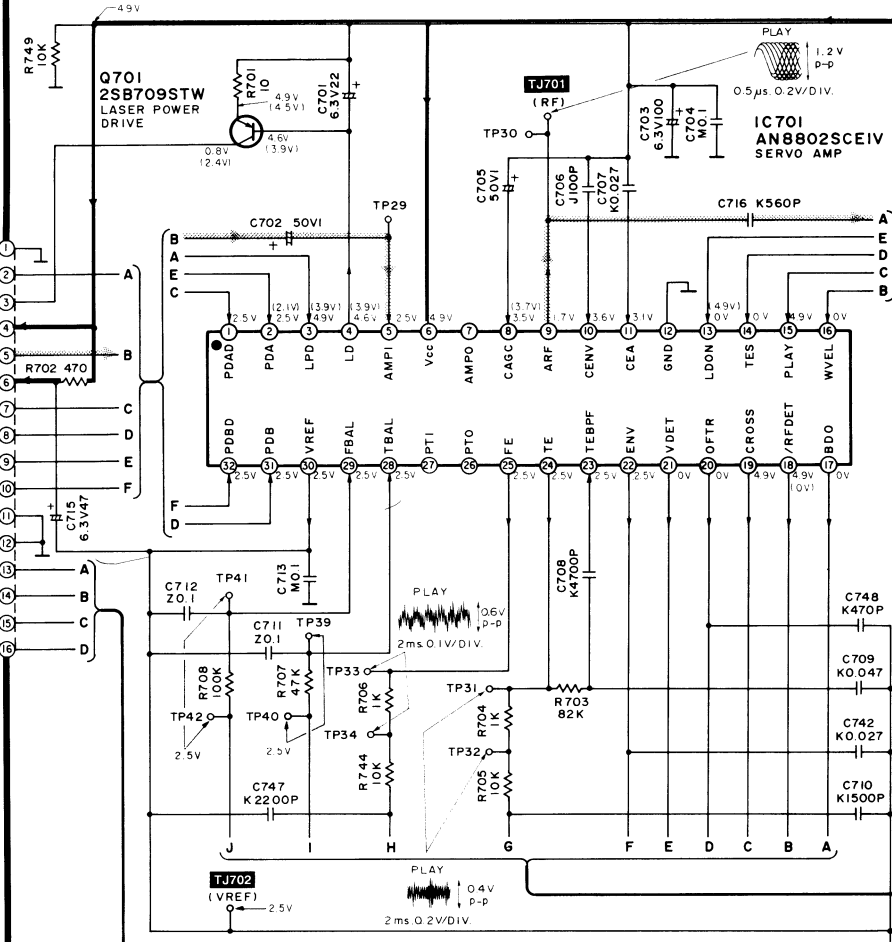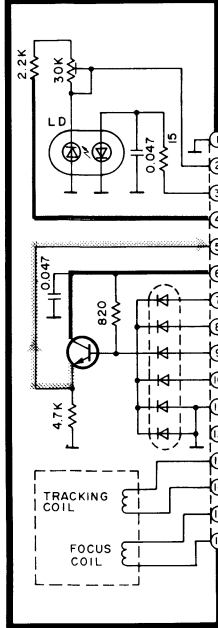

Terminal guide: on page 30

IC703 AN8389SE1
FOCUS COIL / TRACKING COIL / TRAVERSE MOTOR / SPINDLE MOTOR DRIVE

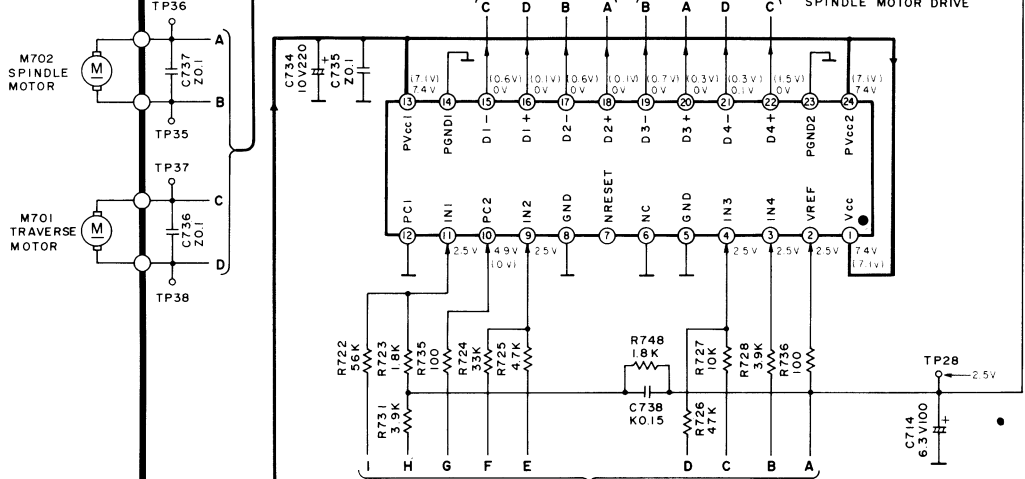


Terminal guide: on page 30


M702 SPINDLE MOTOR

M701 TRAVERSE MOTOR


J D/A CONV. CIRCUIT (P.C. Board: on page 49)

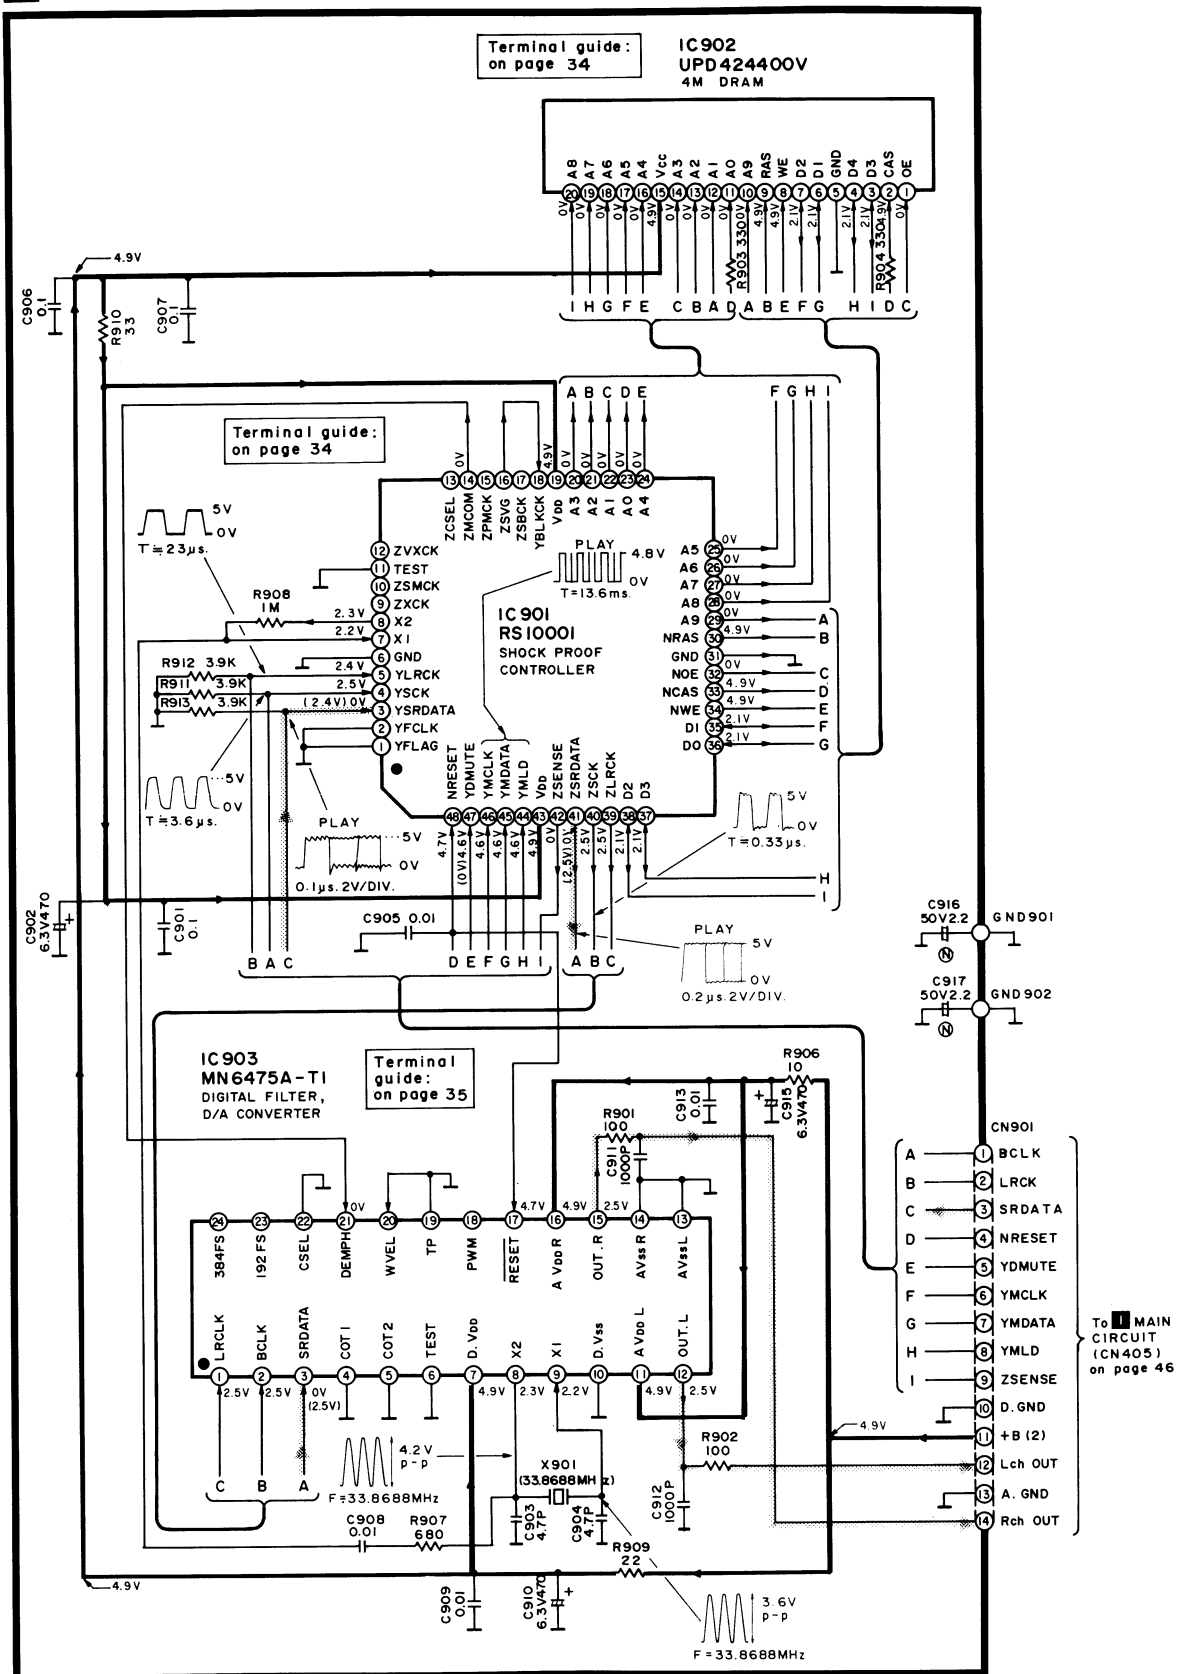


B LED CIRCUIT
(P.C.Board: on page 51)

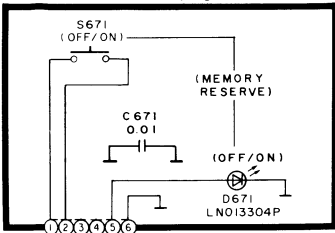

 
D POWER SWITCH CIRCUIT
(P.C.Board: on page 49)




C TRAY MOTOR CIRCUIT
(P.C.Board: on page 51)

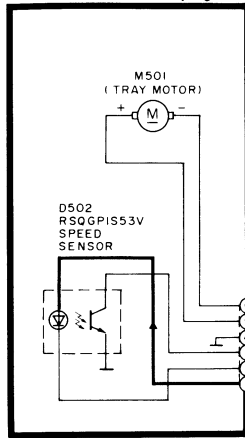


G LOADING MOTOR CIRCUIT
(P.C.Board: on page 51)

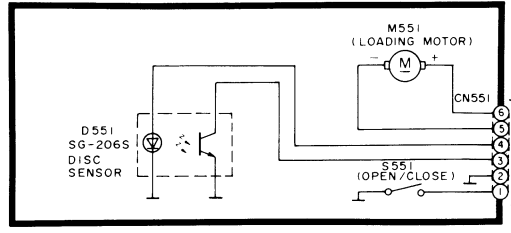


F SENSOR CIRCUIT (P.C.Board: on page 49)

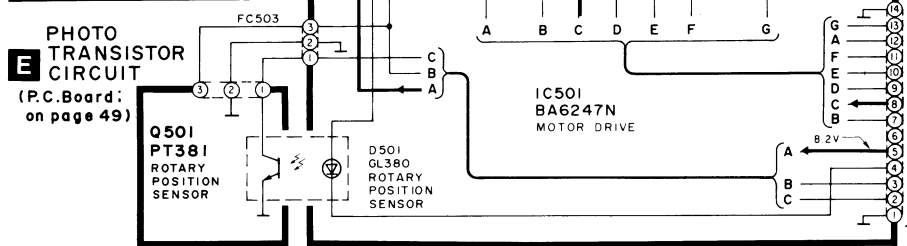


H OPERATION CIRCUIT (P.C.Board: on pages 49, 50)

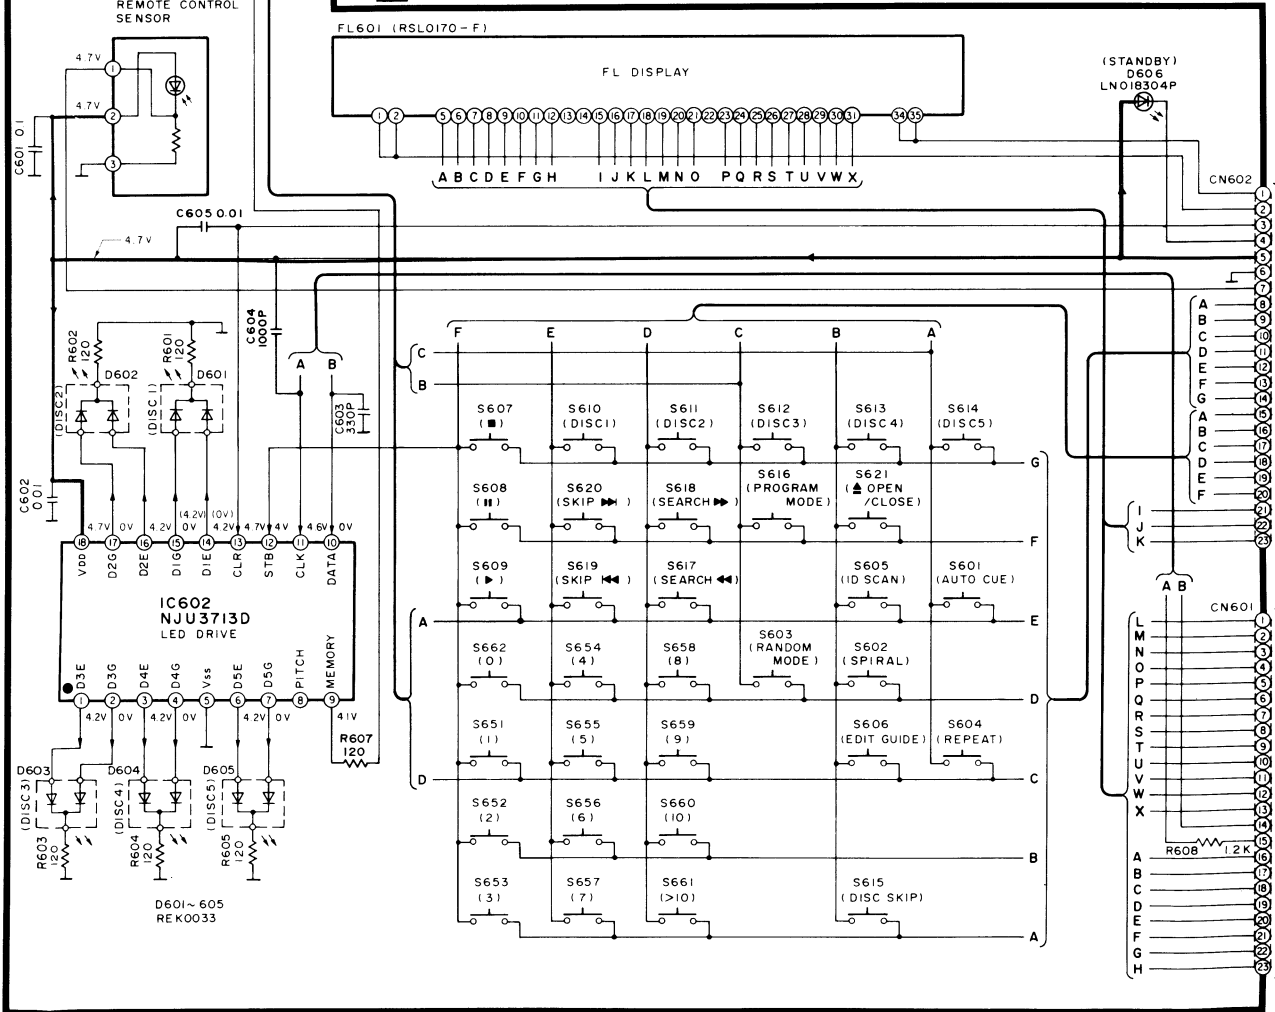

1 MAIN CIRCUIT (P.C. Board : on pages 49, 50)

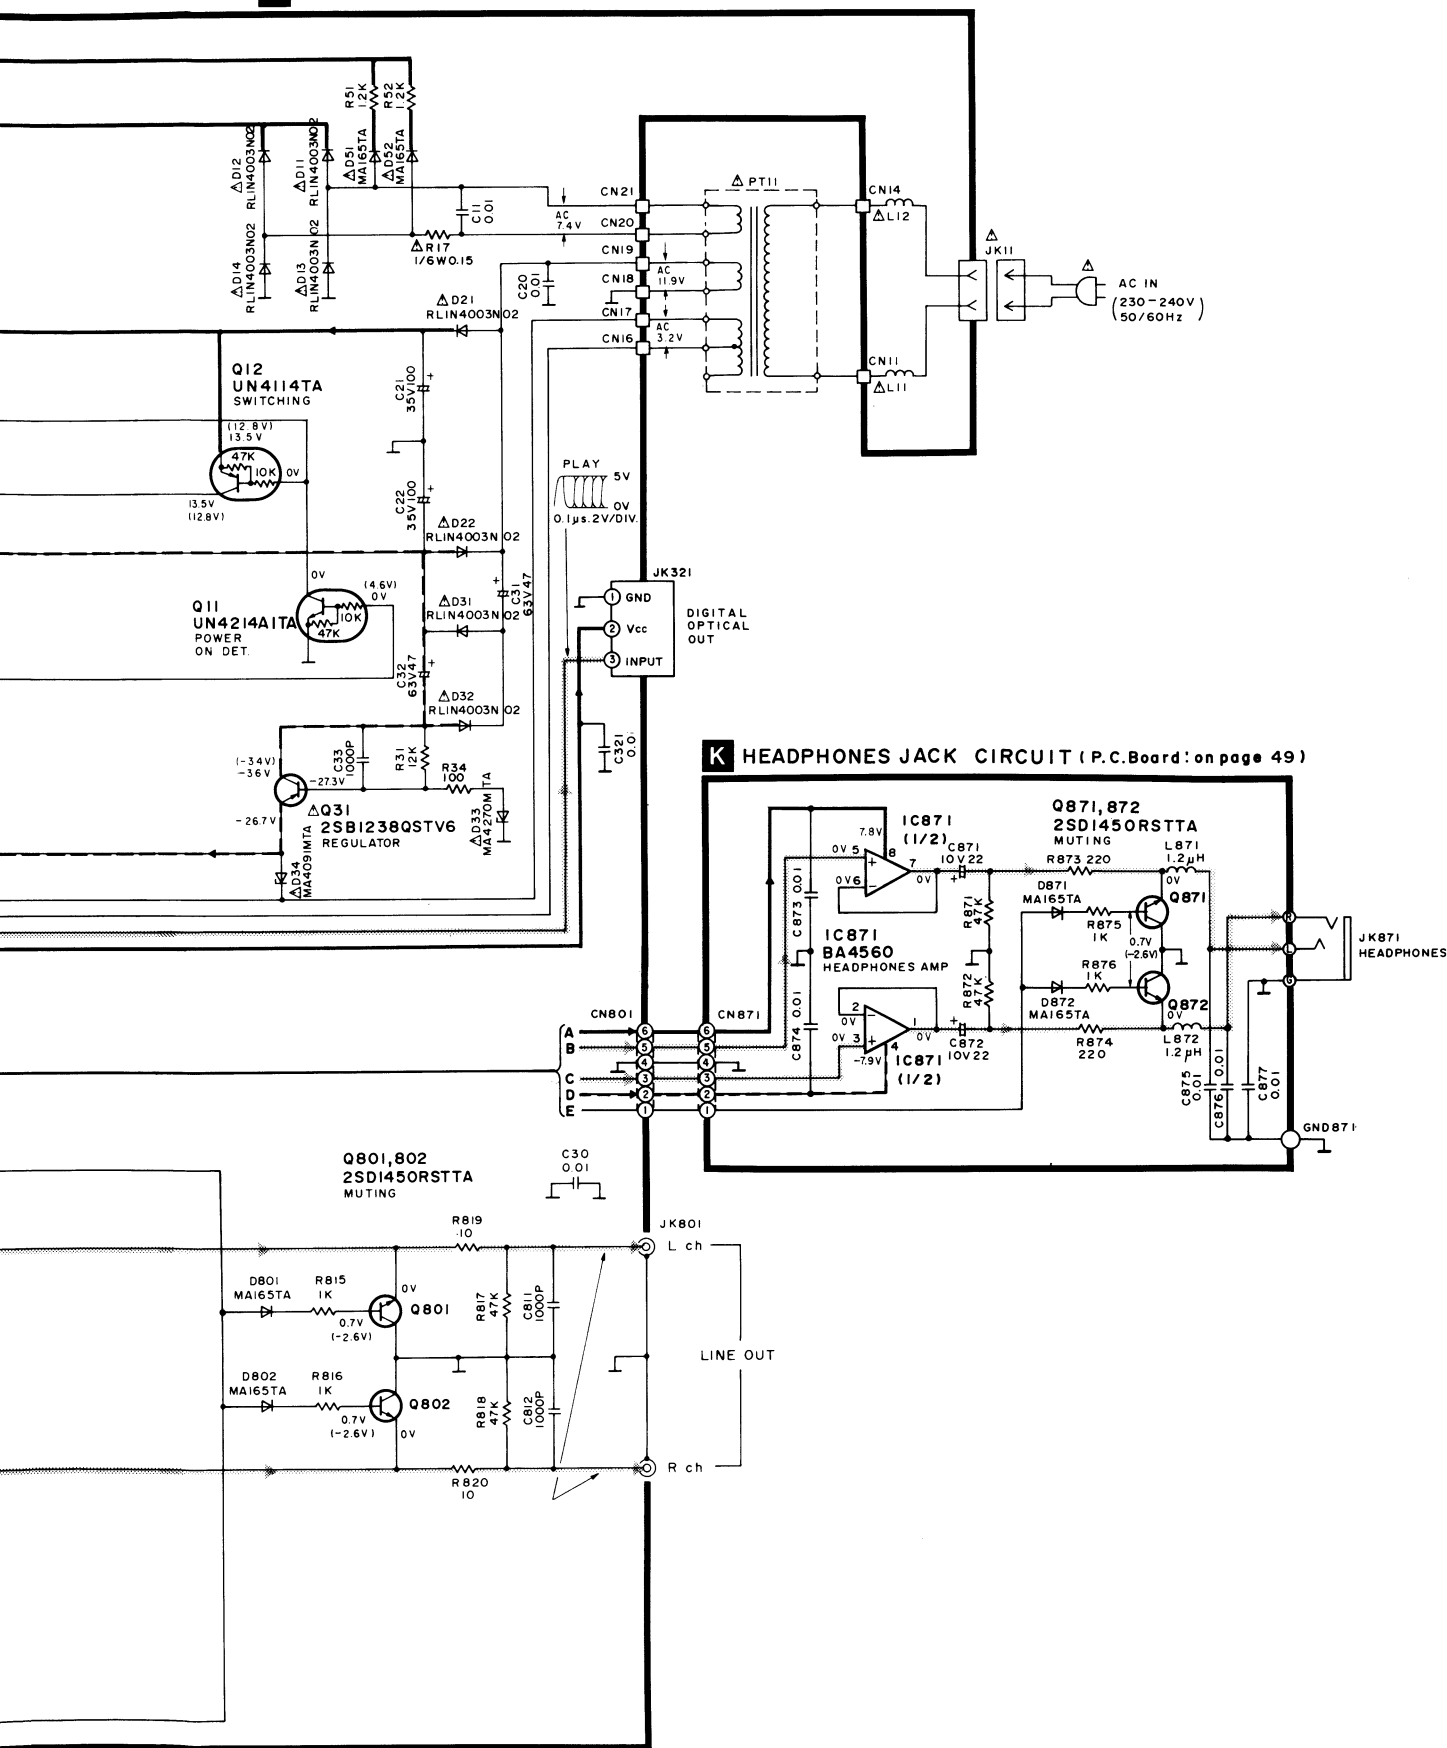


K HEADPHONES JACK CIRCUIT (P.C. Board : on page 49)

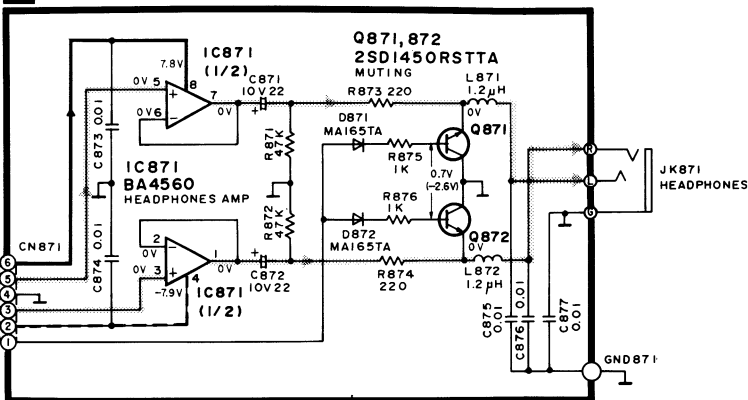


PRINTED CIRCUIT BOARDS (This printed circuit boards may be modified at any time with the development of new technology.)


J D/A CONV. P.C.B. (REPI844A-T)

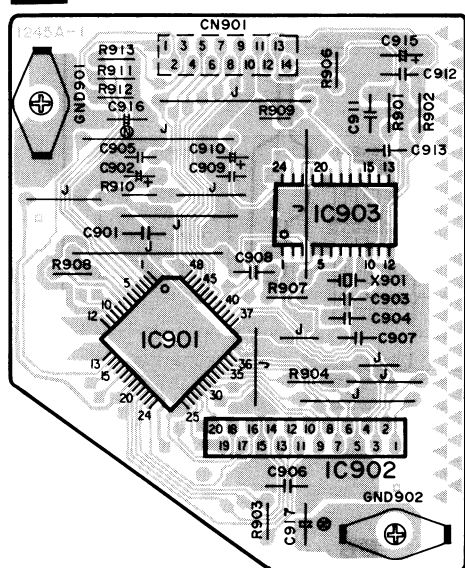


K HEADPHONES JACK P.C.B. (REPI886A-S)

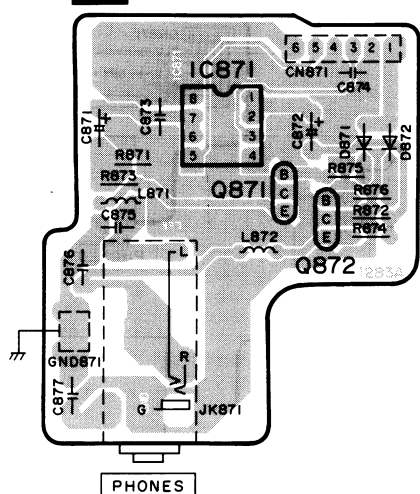


I MAIN P.C.B. (REPI822C-M)

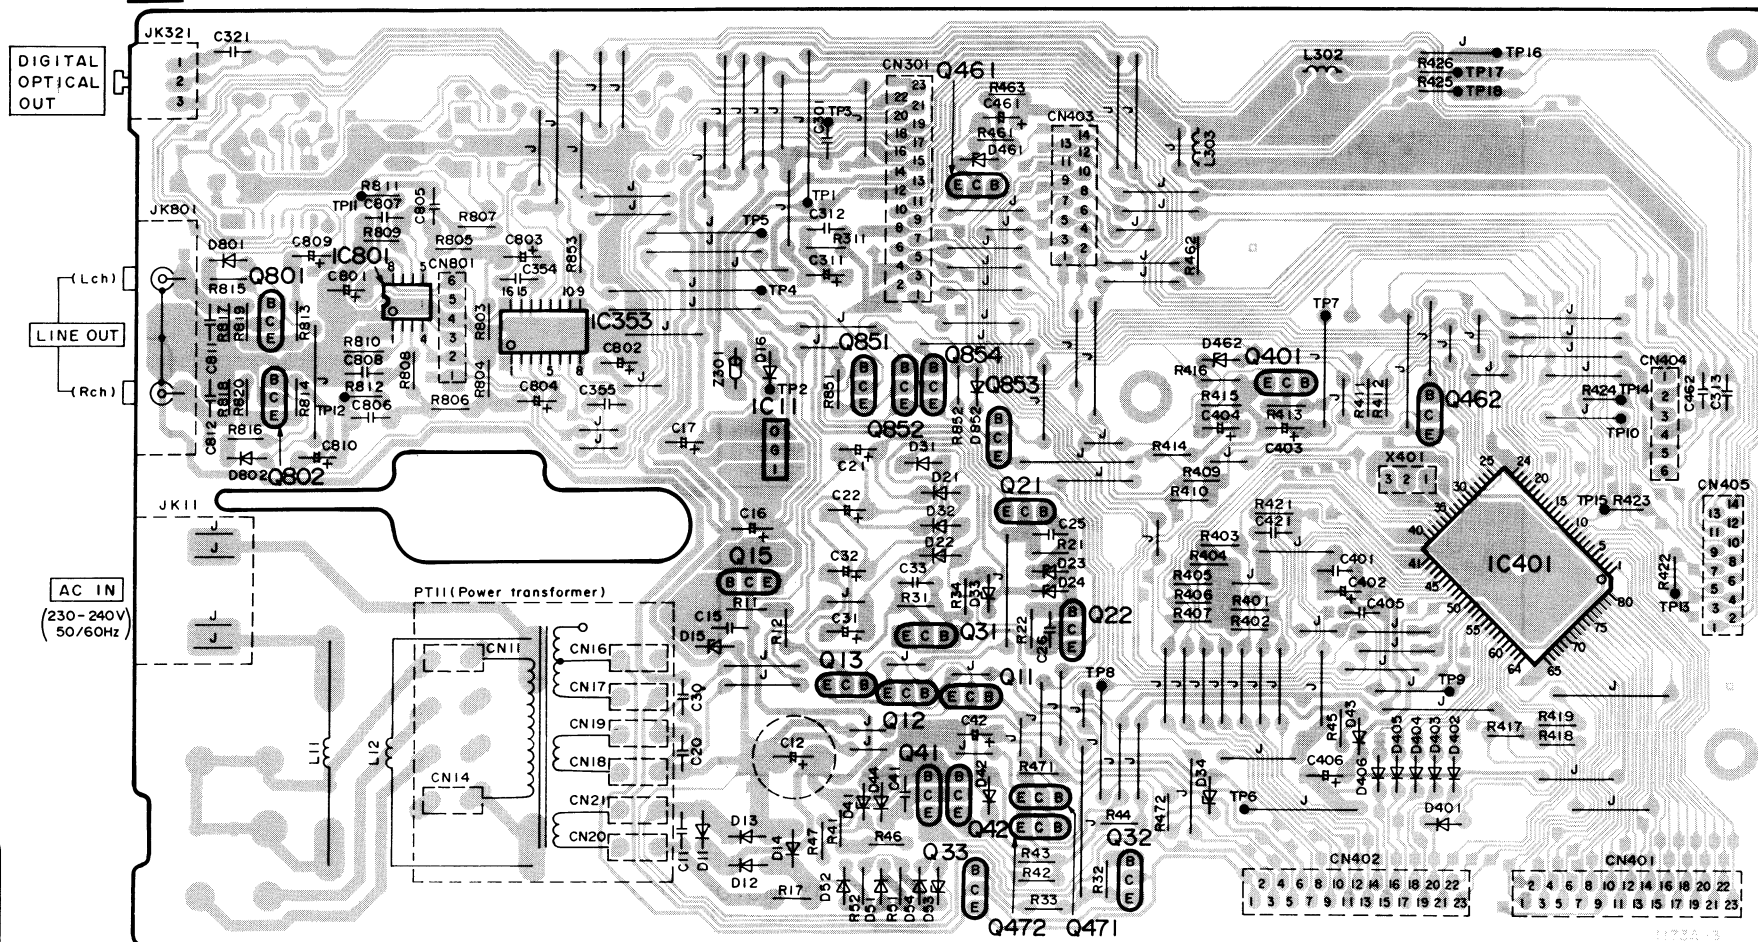

D POWER SWITCH P.C.B. (REPI723H-S)

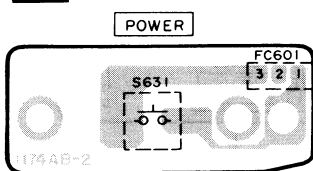


E PHOTO TRANSISTOR P.C.B. (REPI725A-N)


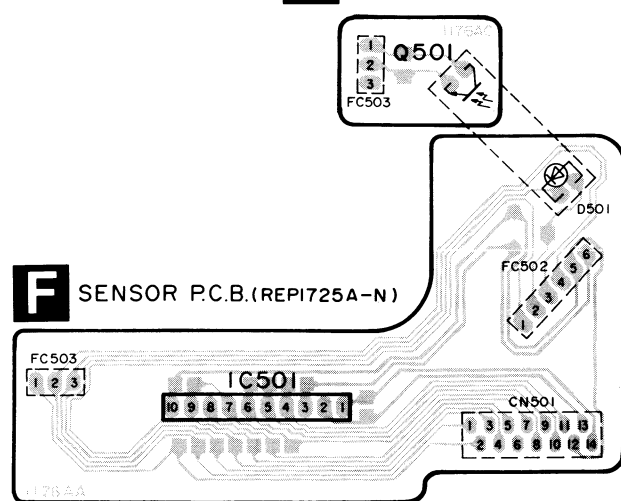


F SENSOR P.C.B. (REPI725A-N)

H OPERATION P.C.B. (REPI723H-S)

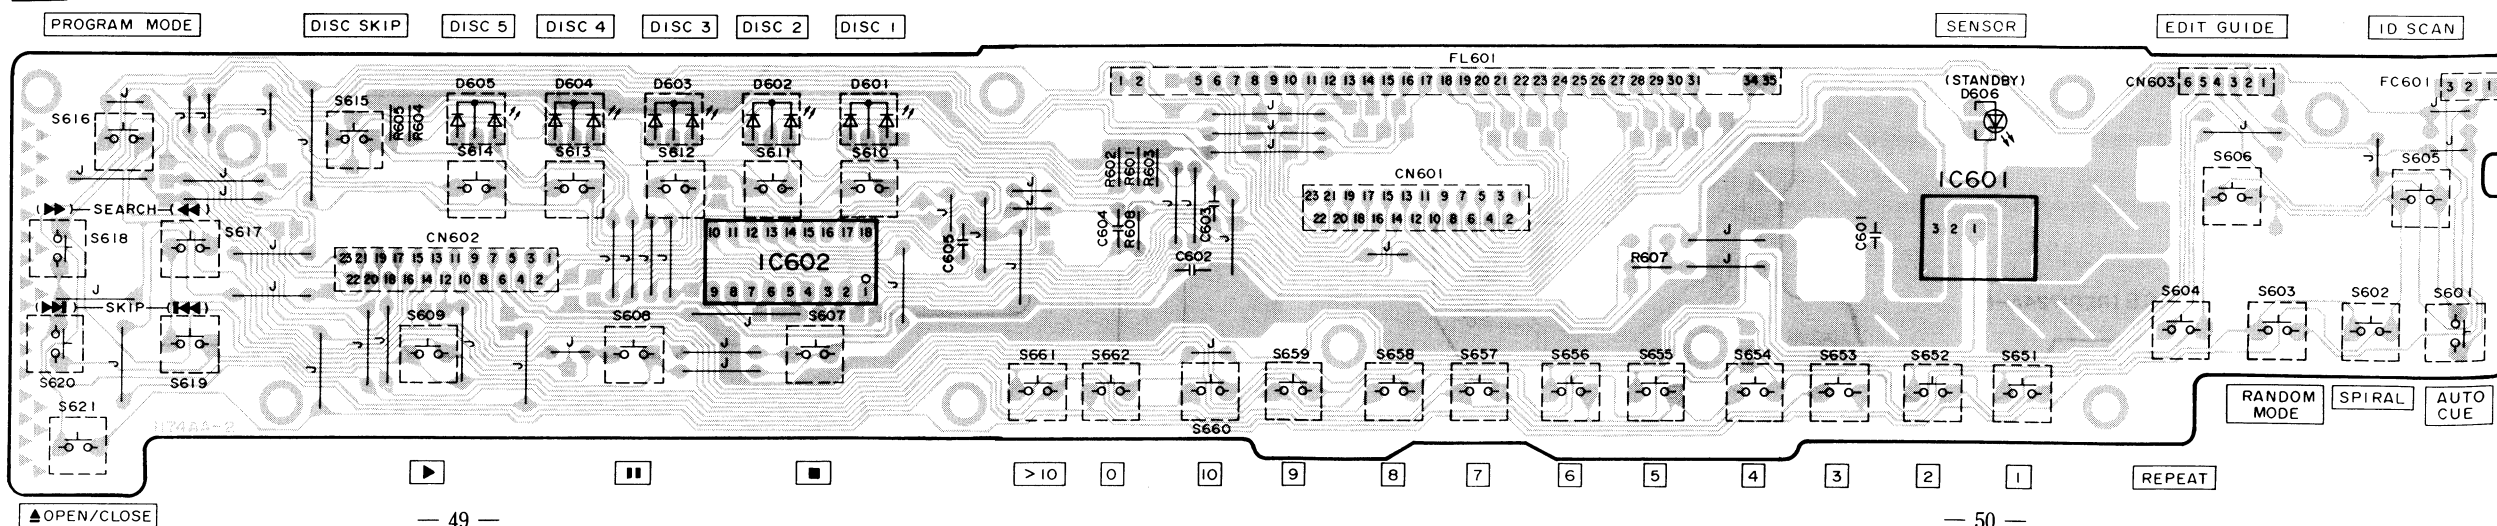

WIRING CONNECTION DIAGRAM

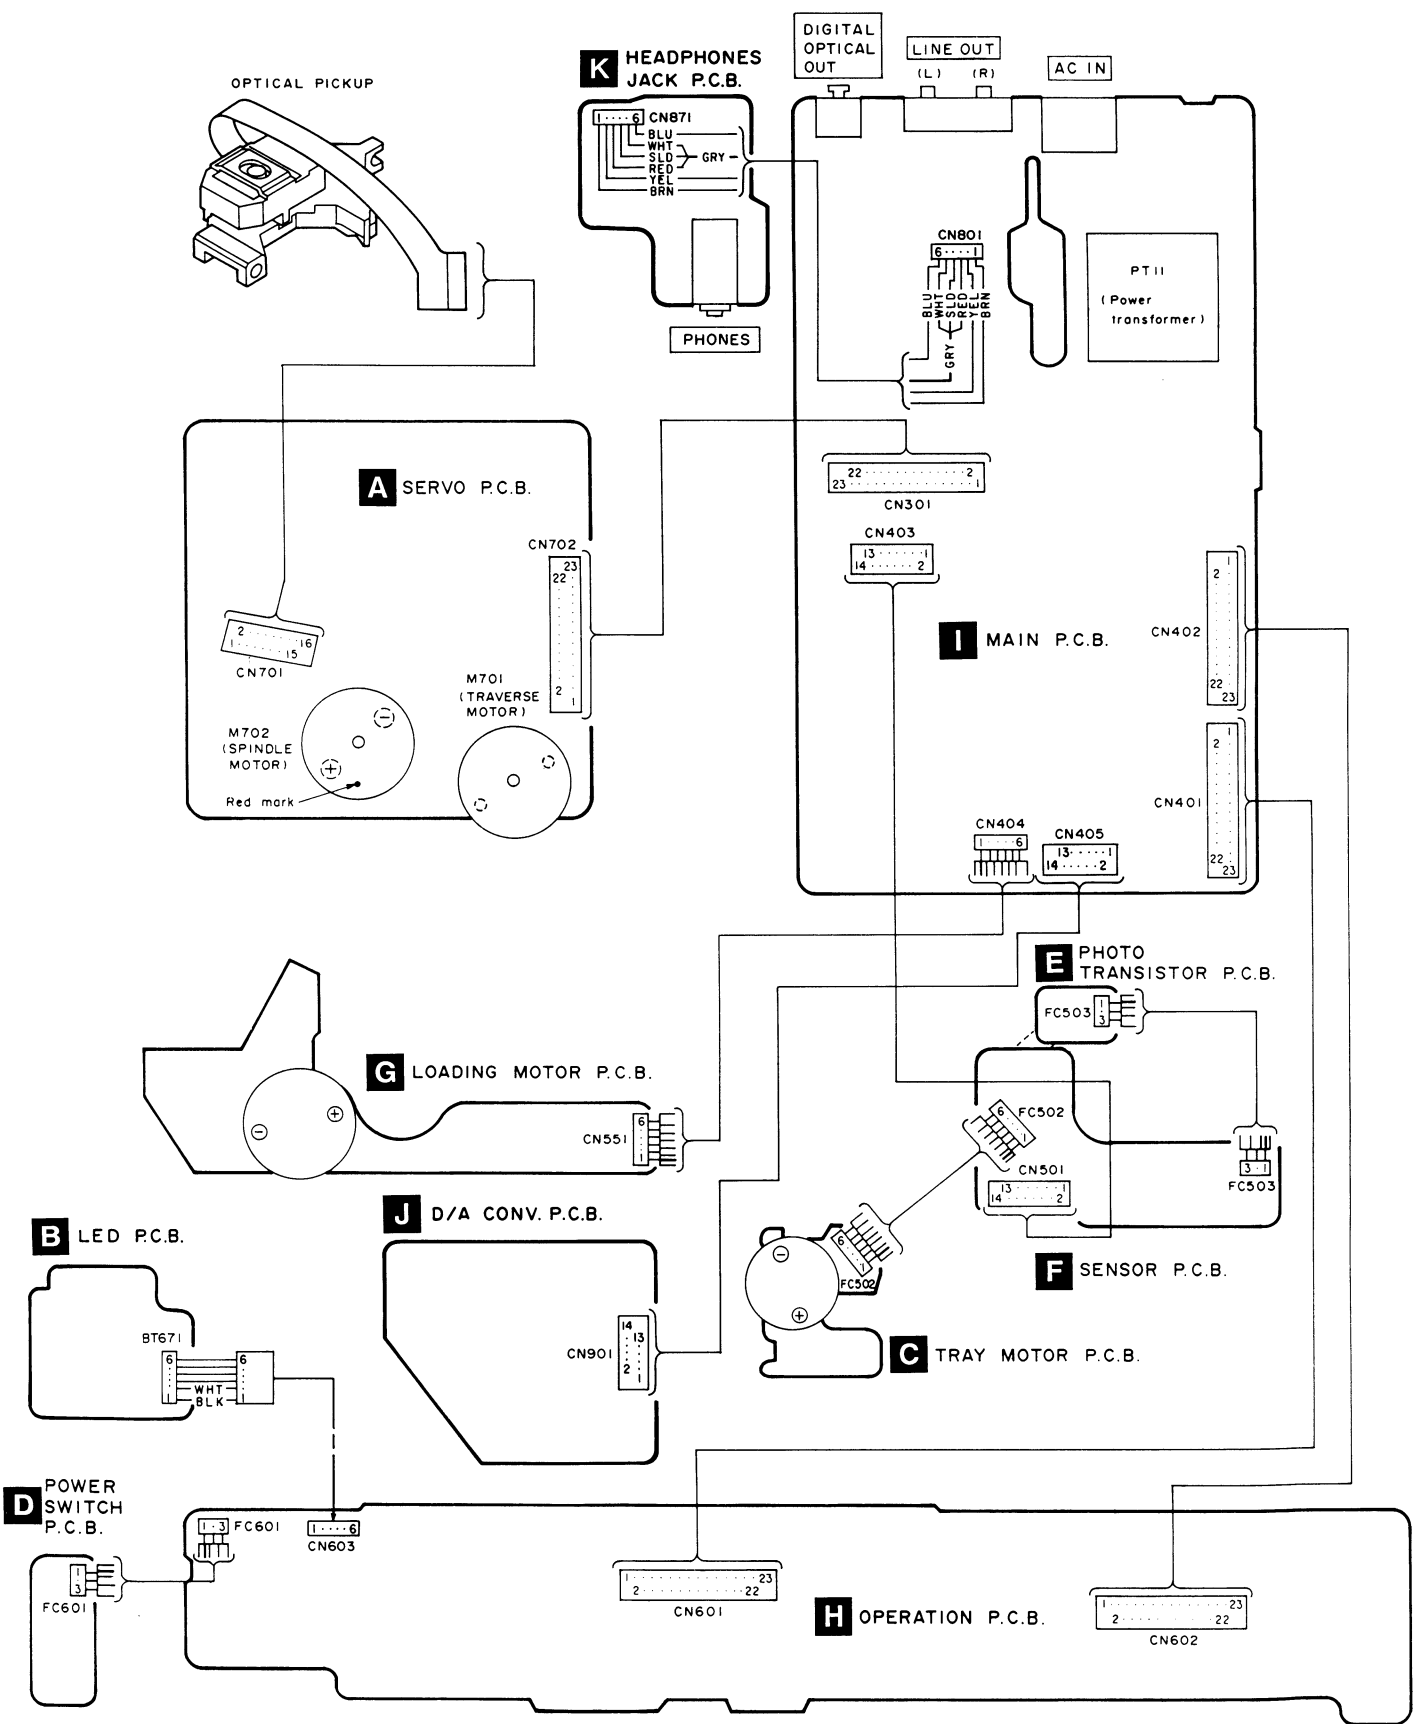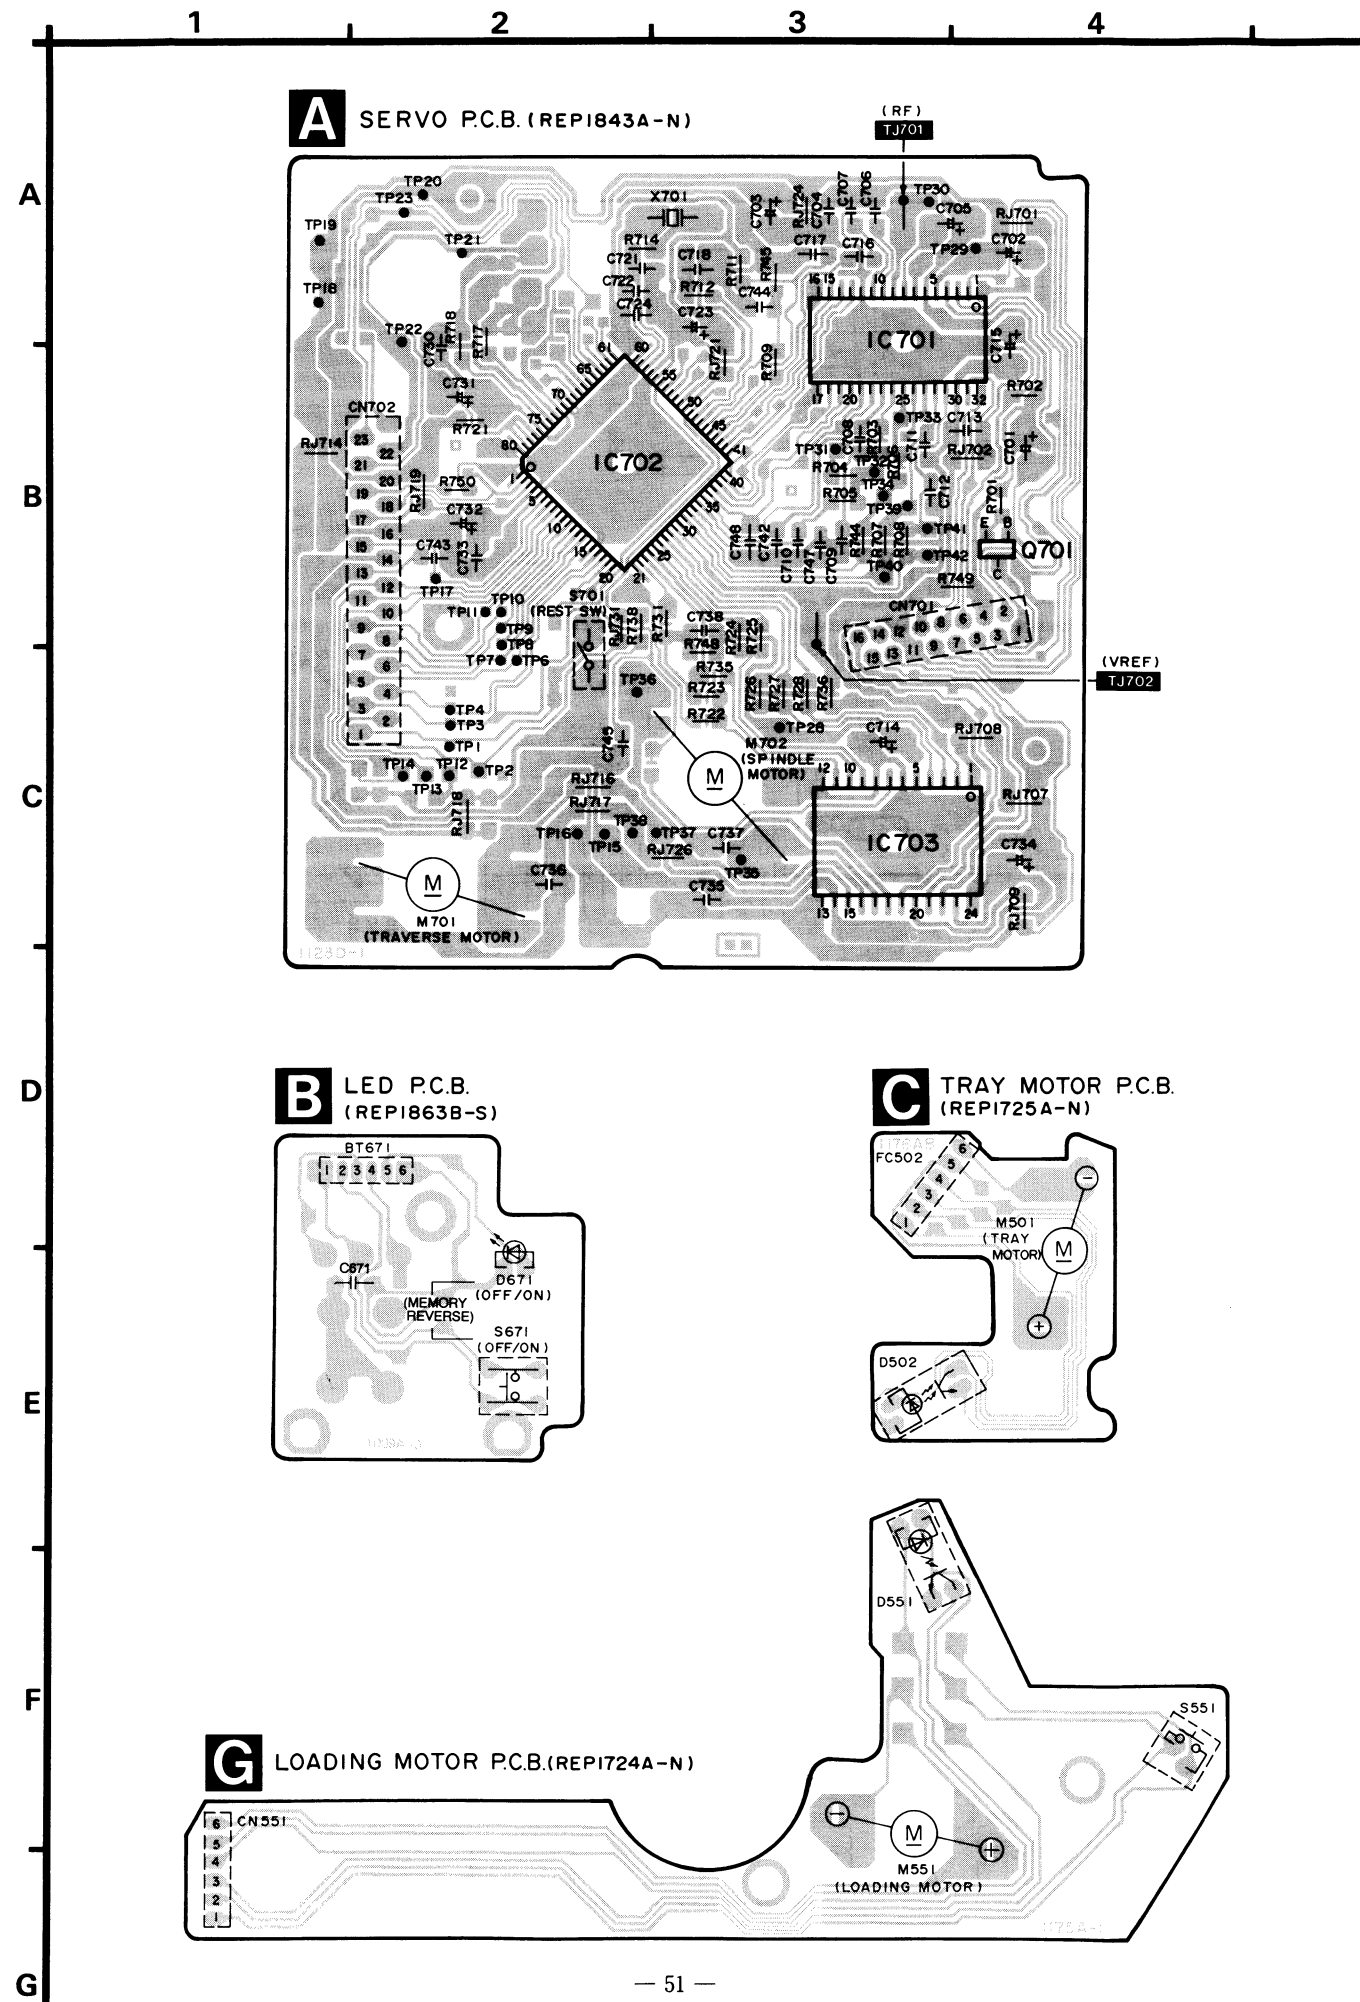

REPLACEMENT PARTS LIST

Notes: *Important safety notice:

 Components identified by Δ mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.

When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

*The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.)

Parts without these indications can be used for all areas.

*Warning: This product uses a laser diode. Refer to caution statements on page 2.

*ACHTUNG: Die Lasereinheit nicht zerlegen.

Die Lasereinheit darf nur gegen eine vom Hersteller spezifizierte Einheit ausgetauscht werden.


Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		INTEGRATED CIRCUIT(S)		D33	MA4270	DIODE	Δ
				D34	MA4091-M	DIODE	Δ
				D41	MA4062	DIODE	Δ
IC11	LM2940T5	REGULATOR	Δ	D42	RL1N4003N02	DIODE	
IC353	MC14052BFR2	SWITCHING		D43	1SS291TA	DIODE	
IC401	UPD78044A059	SYSTEM CONTROL&FL DRIVE		D44	RL1N4003N02	DIODE	
IC501	BA6247N	MOTOR DRIVE		D51, 52	MA165	DIODE	Δ
IC601	RC4HC-278N	REMOTE CONTROL SENSOR		D53	MA4051MTA	DIODE	Δ
IC602	NJU3713D	LED DRIVE		D54	MA165	DIODE	
IC801	BA4558FHTT1	L. P. F.		D401-406	MA165	DIODE	
IC871	BA4560	HEADPHONES AMP.		D461	MA4068HTA	DIODE	
IC901	RS10001	SHOCK PROOF		D462	MA4056MTA	DIODE	
IC902	UPD424400V	4M DRAM		D501	GL380TB	L. E. D.	
IC903	MN6475A-T1	DIGITAL FILTER&D/A CONV.		D502	RSQP1S53V	DIODE	
		TRANSISTOR(S)		D551	SG-206S	DIODE	
				D601-605	REK0033	L. E. D. BLOCK	
Q11	UN4214TA	TRANSISTOR		D606	LN018304P	L. E. D.	
Q12, 13	UN4114TA	TRANSISTOR		D671	LN013304P	L. E. D.	
Q15	2SD2037EFTA	TRANSISTOR	Δ	D801, 802	MA165	DIODE	
Q21	2SC3311A1QST	TRANSISTOR	Δ	D852	MA165	DIODE	
Q22	2SA1309A1QST	TRANSISTOR	Δ	D871, 872	MA165	DIODE	
Q31	2SB1238QSTV6	TRANSISTOR	Δ			COIL(S)	
Q32, 33	2SD1450RTA	TRANSISTOR		L11, 12	RLQX400MT-D	COIL	Δ
Q41, 42	2SD1862QRTV6	TRANSISTOR	Δ	L302	ELEXT1R2KA9	COIL	
Q401	2SC3311A1QST	TRANSISTOR		L303	RLQA100JT-Y	COIL	
Q461, 462	UN4215	TRANSISTOR		L871, 872	ELEXT1R2KA9	COIL	
Q471	UN4214TA	TRANSISTOR				TRANSFORMER(S)	
Q472	2SC3311A1QST	TRANSISTOR		PT11	RTP1K4B023-X	POWER TRANSFORMER	Δ
Q501	PT381TB	TRANSISTOR				COMPONENT COMBINATION(S)	
Q801, 802	2SD1450RTA	TRANSISTOR		Z301	BL02RN2R65T2	COMBINATION PART	
Q851	UN4112	TRANSISTOR				OSCILLATOR(S)	
Q852	UN4212TA	TRANSISTOR		X401	RSXY4M23M01T	OSCILLATOR (4.2336MHz)	
Q853	UN4112	TRANSISTOR		X901	RSXZ33M8M01T	OSCILLATOR (33.8688MHz)	
Q854	UN4212TA	TRANSISTOR				DISPLAY TUBE(S)	
Q871, 872	2SD1450RTA	TRANSISTOR		FL601	RSL0170-F	DISPLAY TUBE	
		DIODE(S)					
D11-14	RL1N4003N02	DIODE	Δ				
D15	MA4091-M	DIODE	Δ				
D16	RL1N4003N02	DIODE					
D21, 22	RL1N4003N02	DIODE	Δ				
D23, 24	MA4082MTA	DIODE	Δ				
D31, 32	RL1N4003N02	DIODE	Δ				

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		SWITCH(ES)		CN601, 602	RJS1A6223-1	CONNECTOR (23P)	
				CN603	RJP6G20ZA	CONNECTOR (6P)	
				CN801	RJT029W06VT	CONNECTOR (6P)	
S551	RSH1A005	OPEN/CLOSE DETECTOR		CN871	RJT029W06VT	CONNECTOR (6P)	
S601	EVQ21405R	AUTO CUE		CN901	RJS1A6814	CONNECTOR (14P)	
S602	EVQ21405R	SPIRAL		BT671	REX0493	CONNECTOR (6P)	
S603	EVQ21405R	RANDOM MODE				JACK(S)	
S604	EVQ21405R	REPEAT					
S605	EVQ21405R	ID SCAN		JK11	SJS9236	AC INLET	(E, EB, EG) Δ
S606	EVQ21405R	EDIT GUIDE		JK11	SJSD16	AC INLET	(GN) Δ
S607	EVQ21405R	STOP		JK321	TOTX178	DIGITAL (OPTICAL) OUT	
S608	EVQ21405R	PAUSE		JK801	RJH3201N	LINE OUT	
S609	EVQ21405R	PLAY		JK871	RJJ63TS01	HEADPHONES JACK	
S610	EVQ21405R	DISC 1				FLAT CABLE(S)	
S611	EVQ21405R	DISC 2					
S612	EVQ21405R	DISC 3		FC502	REZ0612	FLAT CABLE (6P)	
S613	EVQ21405R	DISC 4		FC503	REZ0613	FLAT CABLE (3P)	
S614	EVQ21405R	DISC 5		FC601	REZ0610	FLAT CABLE (3P)	
S615	EVQ21405R	DISC SKIP				GND PLATE(S)	
S616	EVQ21405R	PROGRAM MODE					
S617	EVQ21405R	R. SEARCH		GND871	RMC0210	GND PLATE	
S618	EVQ21405R	F. SEARCH		GND901, 902	SNE1004-2	GND PLATE	
S619	EVQ21405R	R. SKIP				<SERVO P. C. B. >	
S620	EVQ21405R	F. SKIP				INTEGRATED CIRCUIT(S)	
S621	EVQ21405R	OPEN/CLOSE		IC701	AN8802SCE1V	SERVO AMP.	
S631	EVQ21405R	POWER		IC702	MN662712RA	SERVO PROCESSOR	
S651	EVQ21405R	NUMERIC 1		IC703	AN8389SE1	MOTOR DRIVE	
S652	EVQ21405R	NUMERIC 2				TRANSISTOR(S)	
S653	EVQ21405R	NUMERIC 3					
S654	EVQ21405R	NUMERIC 4		Q701	2SB709S	TRANSISTOR	
S655	EVQ21405R	NUMERIC 5				OSCILLATOR(S)	
S656	EVQ21405R	NUMERIC 6					
S657	EVQ21405R	NUMERIC 7		X701	RSXB16M9J01T	OSCILLATOR (16.934MHz)	
S658	EVQ21405R	NUMERIC 8				SWITCH(ES)	
S659	EVQ21405R	NUMERIC 9					
S660	EVQ21405R	NUMERIC 10		S701	RSM0006-P	REST DETECTOR	
S661	EVQ21405R	NUMERIC >10				CONNECTOR(S) AND SOCKET(S)	
S662	EVQ21405R	NUMERIC 0					
S671	EVQB005R	MEMORY RESERVE OFF/ON		CN701	RJU035T016-1	SOCKET (16P)	
		CONNECTOR(S)		CN702	RJS1A6723-1Q	CONNECTOR (23P)	
CN11	RJS1A1101T1	CONNECTOR (1P)					
CN14	RJS1A1101T1	CONNECTOR (1P)					
CN16-21	RJS1A1101T1	CONNECTOR (1P)					
CN301	RJS1A6823	CONNECTOR (23P)					
CN401, 402	RJS1A6823	CONNECTOR (23P)					
CN403	RJS1A6814	CONNECTOR (14P)					
CN404	RJS1A6606	CONNECTOR (6P)					
CN405	RJS1A6814	CONNECTOR (14P)					
CN501	RJS1A6714	CONNECTOR (14P)					
CN551	RJS2A1506	CONNECTOR (6P)					

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET AND CHASSIS		44	XTB3+10JFZ	SCREW	
				45	XTB3+20J	SCREW	
				46	XTB3+8JFZ	SCREW	
1	RKMD193-K	CABINET		47	RGLO098	PANEL LIGHT	
2	SNE2129-3	SCREW		48	RGU0878-K	PITCH CONTROL BUTTON	
3	XTBS3+8JFZ1	SCREW		49	RGU1044-Q	DISC BUTTON	
4	RDGO267	REDUCTION GEAR		50	REZ0652	FFC (14P)	
5	RDGO268	CLOSE LOCK GEAR		51	RSC0390	SHIELD PALTE	
6	RDGO269-3	OPEN LOCK GEAR		52	RMCO245	EARTH PLATE	
7	RDV0031	BELT		53	REXD595	CONNECTOR ASS' Y	
8	RFKPLPD667PA	TRAY MOTOR(M501) ASS' Y		54	RMRO772-W	MINI CLAMPER	
9	RMNO254	LED HOLDER(D501, Q501)		55	RHD26016	SCREW	
10	RMNO255	SENSOR HOLDER(D502)		56	RMRO883-W	LIFTER	
11	RMNO263	MOTOR HOLDER					
12	REZ0648	FFC (14P)				LOADING MECHANISM	
13	RFKNLPD1000E	TRAY ASS' Y					
13-1	RMFO182	TRAY FELT		101	RDGO270	REDUCTION GEAR	
13-2	RMGO200	SILENT RUBBER		102	RDGO271	DRIVE GEAR(1)	
13-3	RMRO546-W	TRAY ROLLER		103	RDGO272	DRIVE GEAR(2)	
14	RGTO019-1	ROTARY TRAY		104	RDKO025	DRIVE CAM	
15	RHW81001-1	WASHER		105	RDPO050	PULLEY GEAR	
16	RMB0365	SPRING		106	RFKPLPD667PB	LOADING MOTOR(M551) ASS' Y	
17	RME0152-2	LOCK GEAR SPRING		107	RHD26019	SCREW	
18	RMS0123-1	RIVET		108	RMGO268-K	BELT	
19	XTB3+10G	SCREW		109	RML0334	DRIVE LEVER	
20	XTWS3+10T	SCREW		110	RMMD117	SLIDE PLATE(1)	
21	XWE3D13	WASHER		111	RMMD118	SLIDE PLATE(2)	
22	REZ0623	FLAT CABLE(6P)		112	RMRO746-W	REINFORCING PLATE	
23	REZ0635	FFC (23P)		113	RFKNLPD667PB	MECHANISM BASE ASS' Y	
24	REZ0636	FFC (23P)		114	RXQ0346-1	SLIDER ASS' Y	
25	REZ0637	FFC (23P)		115	XTB3+10JFZ	SCREW	
26	RGRO184C1B1	REAR PANEL	(E, EG)	116	RAE0113Z	TRAVERSE DECK ASS' Y	
26	RGRO184C1C1	REAR PANEL	(EB, GN)	116-1	SHGD112	FLOATING RUBBER(1)	
27	RFKJLPD667PK	CHASSIS ASS' Y		116-2	SHGD113-1	FLOATING RUBBER(2)	
27-1	RKA0053-A	FOOT		116-3	SNSD38	SCREW	
28	RMRO749-W	CABLE HOLDER		117	RME0109	FLOATING SPRING(1)	
29	RMRO742-K	TRAY BASE GUIDE(L)		118	RME0142	FLOATING SPRING(2)	
30	RMRO743-K	TRAY BASE GUIDE(R)		119	RMRO698-K	TRAVERSE CHASSIS	
31	RMRO765-W1	TRANSFORMER BASE		120	RMS0123-1	TRAVERSE FIXED PIN(1)	
32	RJM245ZA	MAGNET		121	RMS0350	TRAVERSE FIXED PIN(2)	
33	RMRO334	FIXED PLATE		122	XTV2+6G	SCREW	
34	RFKNLPD687EK	CLAMP PLATE ASS' Y		123	RMX0094	TRAY HOLDER	
35	RMRO761-W	CLAMPER		124	XTN2+6G	SCREW	
36	RMNO185-1	FL HOLDER					
37	RFKGLPD1010E	FRONT PANEL ASS' Y					
37-1	RGK0611D-K	FRONT ORNAMENT PLATE					
38	RGU1043-K	MAIN BUTTON					
39	RGU1019-K	10 KEY BUTTON					
40	RGU1015-K	POWER BUTTON					
41	RGU1017-K	SUB BUTTON					
42	RMGO200	STOPPER TUBE					
43	XTBS26+8J	SCREW					

LOADING MECHANISM PARTS

A
B
C
D
E
F
G

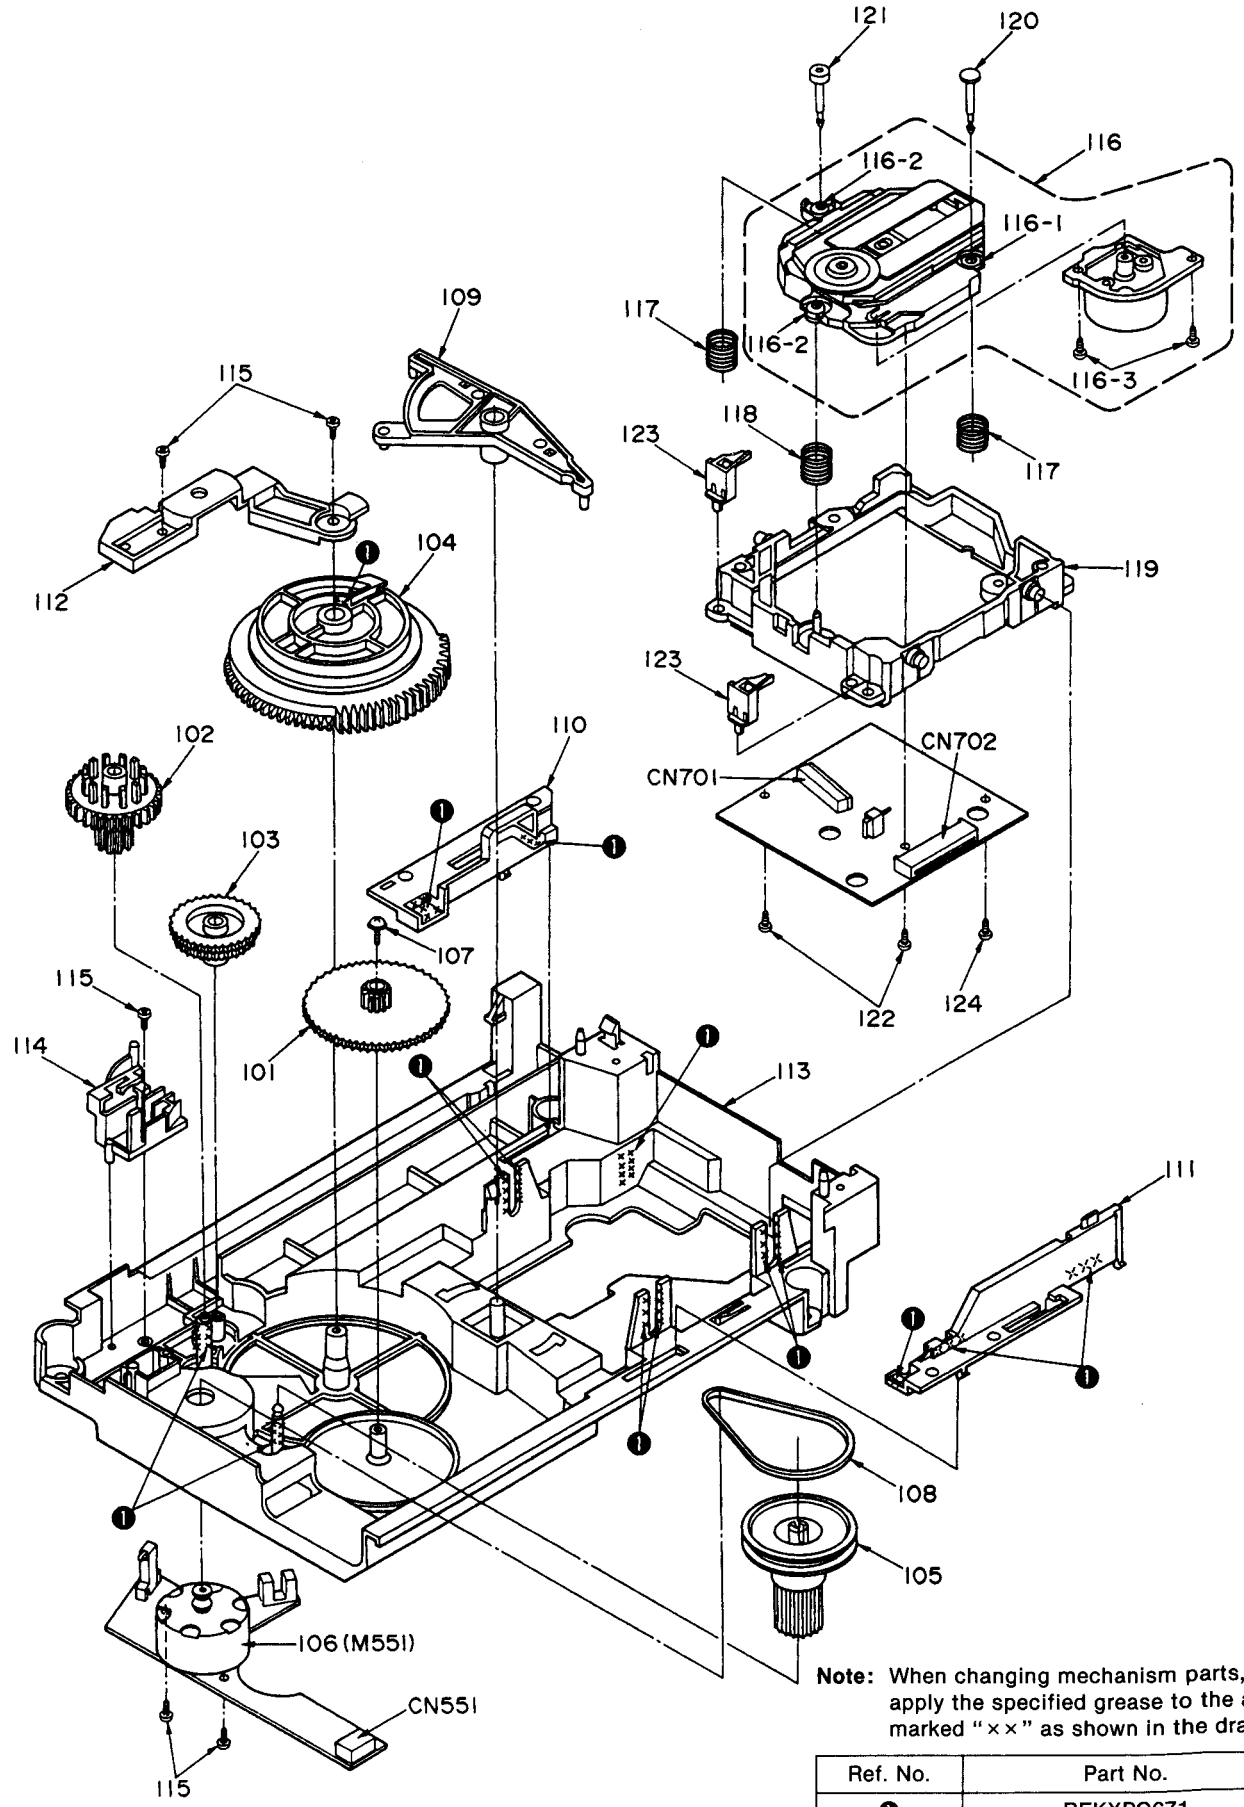


Note: When changing mechanism parts, apply the specified grease to the areas marked "x x" as shown in the drawing.

Ref. No.	Part No.
①	RFKXPG671



■ CABINET PARTS LOCATION

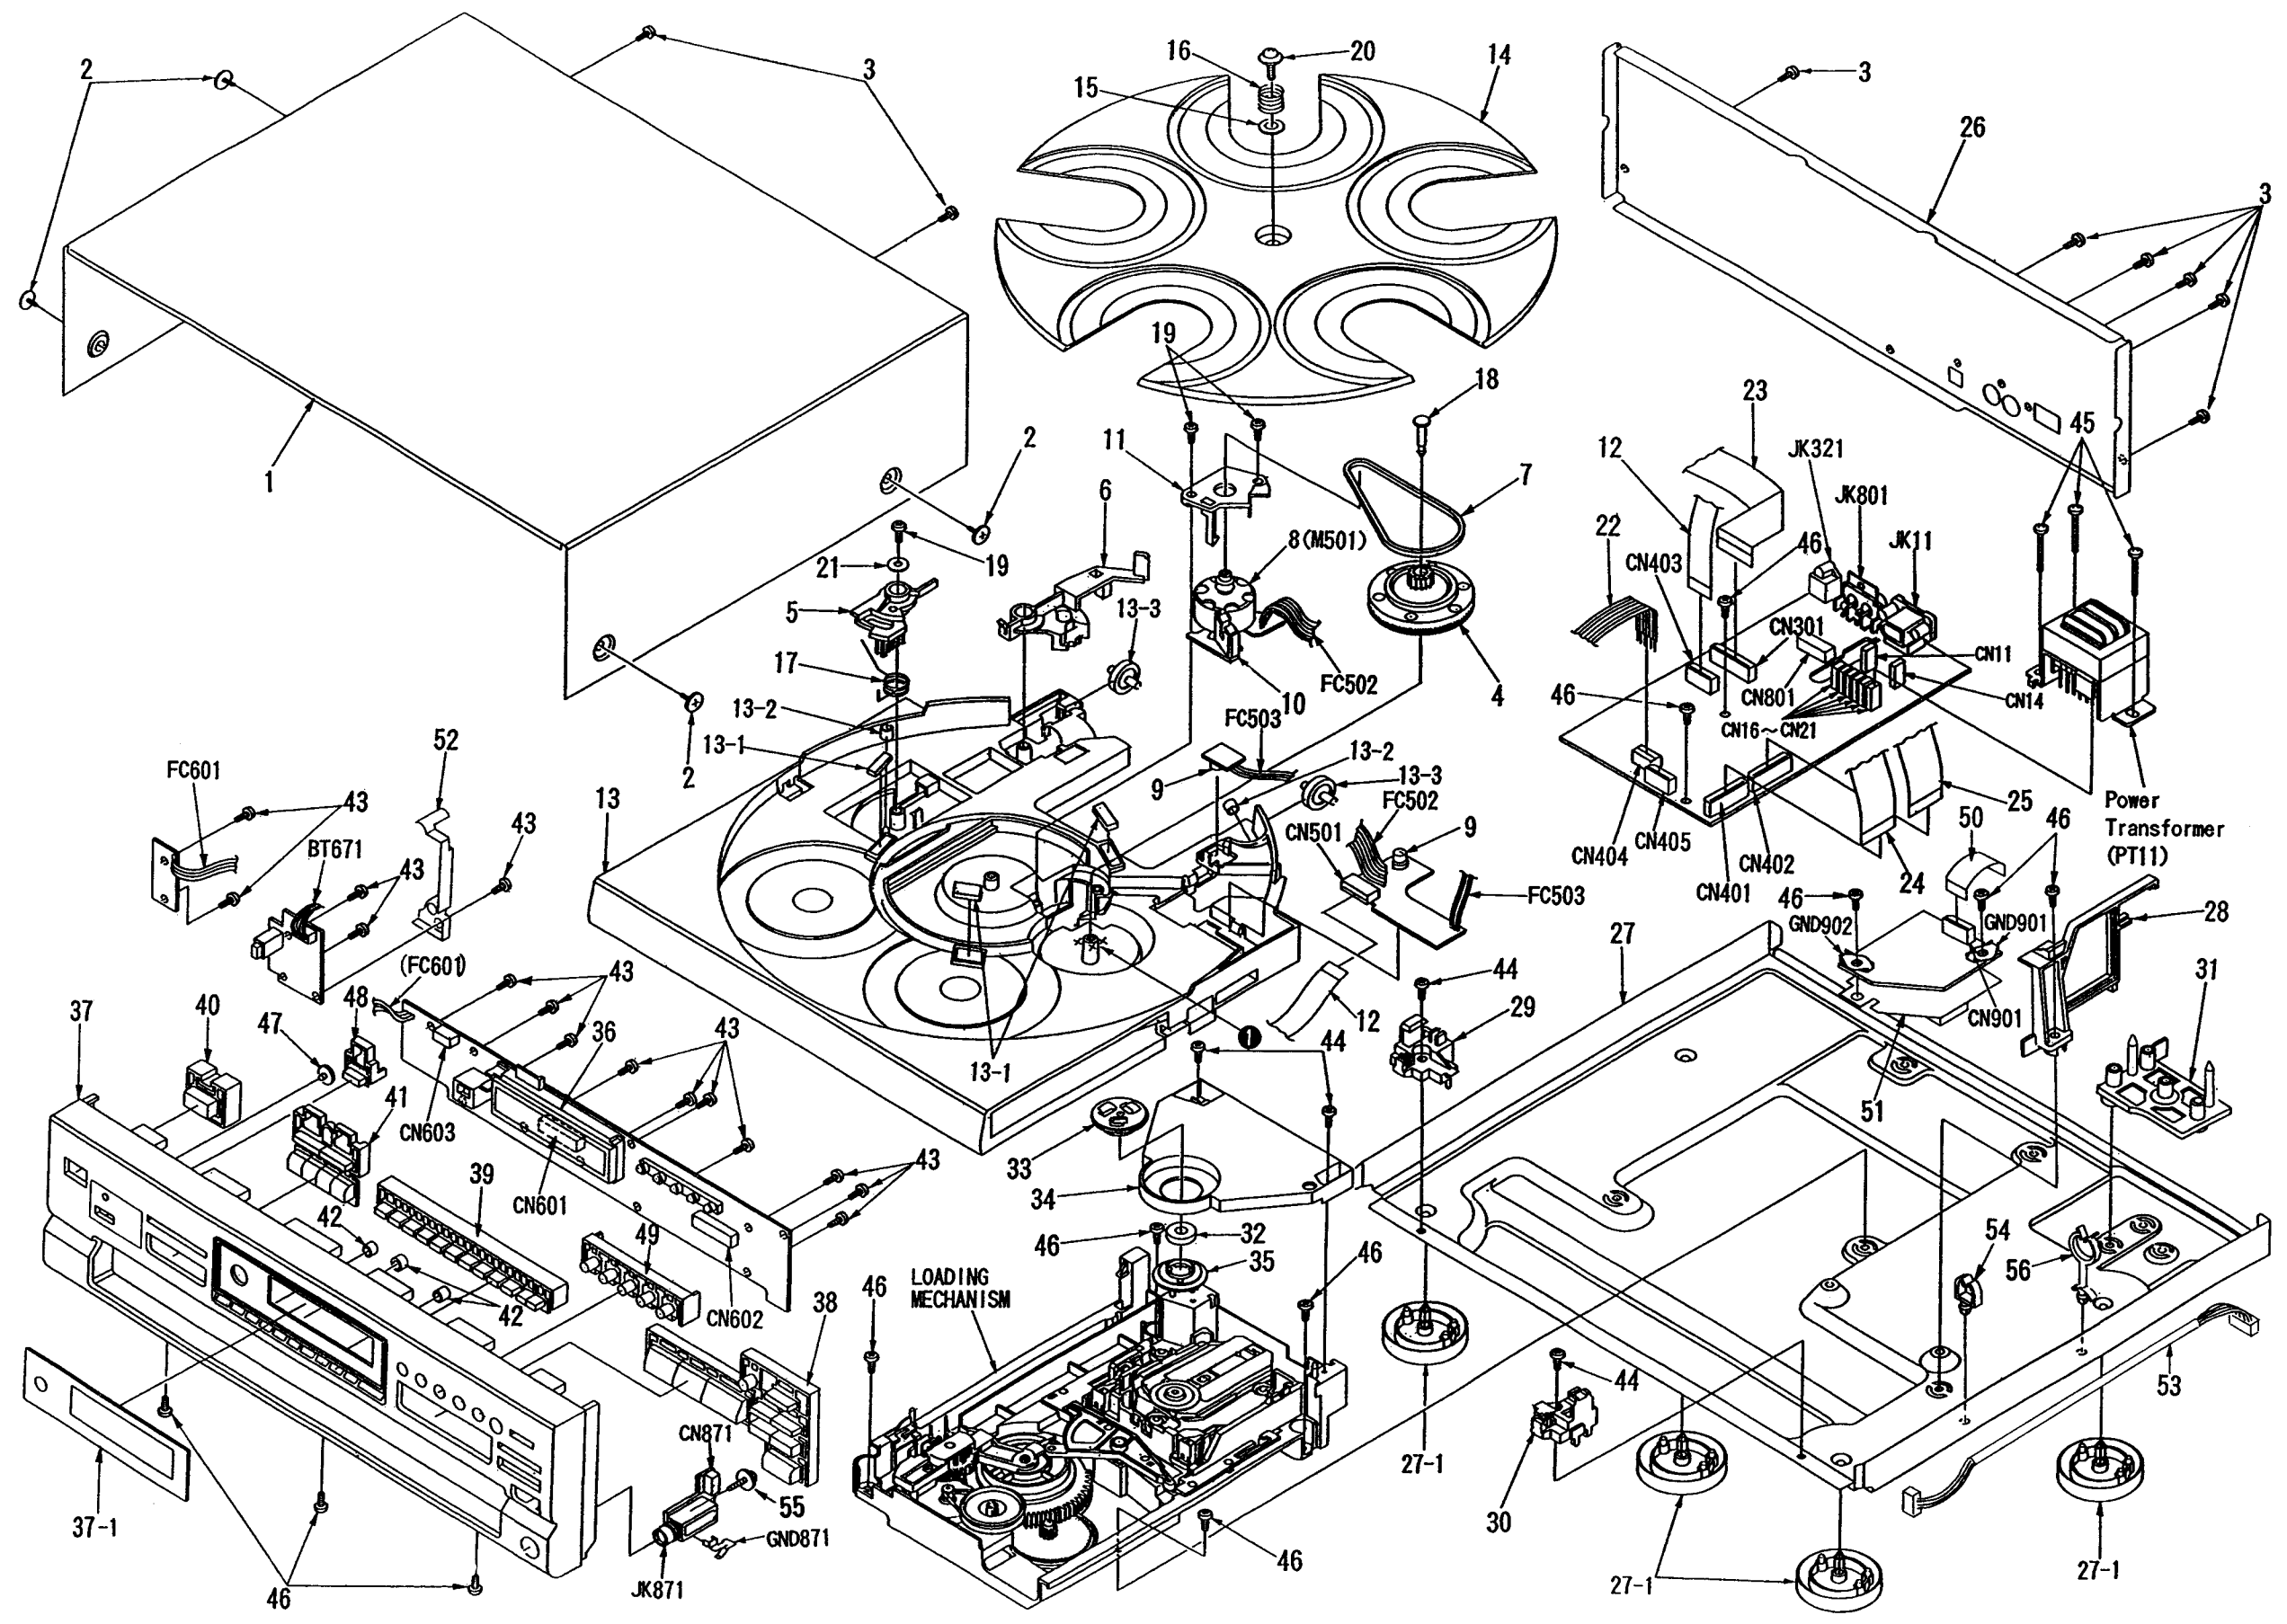

RESISTORS AND CAPACITORS

Notes : * Capacity values are in microfarads (uF) unless specified otherwise, P=Pico-farads (pF) F=Farads (F)
* Resistance values are in ohms, unless specified otherwise, 1 K=1,000 (OHM), 1 M=1,000k (OHM)

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
		RESISTORS						
R11, 12	ERDS2TJ181T	1/4W 180	R901, 902	ERDS2TJ101	1/4W 100	C871, 872	ECEA1AKA220B	10V 22U
R17	ERQ16NWR15E	1/6W 0.15 Δ	R903, 904	ERDS2TJ331	1/4W 330	C873-877	ECBTC103NS5	16V 0.01U
R21, 22	ERDS2TJ122	1/4W 1.2K	R906	ERDS2TJ100	1/4W 10	C901	ECFR1E104ZF5	25V 0.1U
R31	ERDS2TJ123	1/4W 12K	R907	ERDS2TJ681	1/4W 680	C902	ECAQJM471B	6.3V 470U
R32, 33	ERDS2TJ103	1/4W 10K	R908	ERDS2TJ105T	1/4W 1M	C903, 904	ECBT1H47KC5	50V 4.7P
R34	ERDS2TJ101	1/4W 100	R909	ERDS2TJ220T	1/4W 22	C905	ECBTC103NS5	16V 0.01U
R41	ERDS2TJ221	1/4W 220	R910	ERDS2TJ330	1/4W 33	C906, 907	ECFR1E104ZF5	25V 0.1U
R42, 43	ERDS2TJ2R2T	1/4W 2.2	R911-913	ERDS2TJ392T	1/4W 3.9K	C908, 909	ECBTC103NS5	16V 0.01U
R44, 45	ERDS2TJ4R7T	1/4W 4.7				C910	ECAQJM471B	6.3V 470U
R46, 47	ERDS2TJ221	1/4W 220				C911, 912	ECBT1H102KB5	50V 1000P
R51, 52	ERDS2TJ122	1/4W 1.2K				C913	ECBTC103NS5	16V 0.01U
R311	ERDS2TJ471	1/4W 470				C915	ECAQJM471B	6.3V 470U
R401-407	ERDS2TJ472	1/4W 4.7K				C916, 917	ECEA1HKN2R2B	50V 2.2U
R409	ERDS2TJ102	1/4W 1K						<SERVO P. C. B. >
R410	ERDS2TJ103	1/4W 10K						RESISTORS
R411	ERDS2TJ472	1/4W 4.7K	C11	ECBT1E103ZF	25V 0.01U	R701	ERJ6GEYJ100	1/10W 10
R412	ERDS2TJ223	1/4W 22K	C12	ECA1CM332B	16V 3300U Δ	R702	ERJ6GEYJ471V	1/10W 470
R413	ERDS2TJ103	1/4W 10K	C15	ECBT1H102KB5	50V 1000P	R703	ERJ6GEYJ823	1/10W 82K
R414	ERDS2TJ471	1/4W 470	C16	ECA1AM471B	10V 470U	R704	ERJ6GEYJ102A	1/10W 1K
R415	ERDS2TJ103	1/4W 10K	C17	RCE0JKA101BV	6.3V 100U	R705	ERJ6GEYJ103V	1/10W 10K
R416	ERDS2TJ102	1/4W 1K	C20	ECBT1E103ZF	25V 0.01U	R706	ERJ6GEYJ102A	1/10W 1K
R417	ERDS2TJ103	1/4W 10K	C21, 22	ECA1VM101B	35V 100U	R707	ERJ6GEYJ473V	1/10W 47K
R418, 419	ERDS2TJ821	1/4W 820	C25, 26	ECBT1H102KB5	50V 1000P	R708	ERJ6GEYJ104V	1/10W 100K
R421-424	ERDS2TJ472	1/4W 4.7K	C30	ECBT1E103ZF	25V 0.01U	R709	ERJ6GEYJ683V	1/10W 68K
R425, 426	ERDS2TJ681	1/4W 680	C31, 32	ECA1JM470B	63V 47U	R711	ERJ6GEYJ154V	1/10W 150K
R461	ERDS2EJ121	1/4W 120	C33	ECBT1H102KB5	50V 1000P	R712	ERJ6GEYJ221V	1/10W 220
R462	ERDS2TJ221	1/4W 220	C41	ECBT1H102KB5	50V 1000P	R714	ERJ6GEYJ121V	1/10W 120
R463	ERDS2EJ121	1/4W 120	C42	RCE0JKA101BV	6.3V 100U	R717, 718	ERJ6GEYJ101V	1/10W 100
R471	ERDS2TJ103	1/4W 10K	C401	ECBTC103NS5	16V 0.01U	R721	ERJ6GEYJ101V	1/10W 100
R472	ERDS2EJ121	1/4W 120	C402	ECAQJM471B	6.3V 470U	R722	ERJ6GEYJ563V	1/10W 56K
R601-605	ERDS2EJ121	1/4W 120	C403	ECEA1HKA010B	50V 1U	R723	ERJ6GEYJ182V	1/10W 1.8K
R607	ERDS2EJ121	1/4W 120	C404	ECEA1EKA4R7B	25V 4.7U	R724	ERJ6GEYJ333V	1/10W 33K
R608	ERDS2TJ122	1/4W 1.2K	C405	ECBTC103NS5	16V 0.01U	R725	ERJ6GEYJ472V	1/10W 4.7K
R803, 804	ERDS2TJ224T	1/4W 220K	C406	ECEA1HKA010B	50V 1U	R726	ERJ6GEYJ473V	1/10W 47K
R805, 806	ERDS2TJ822	1/4W 8.2K	C421	ECBTC103NS5	16V 0.01U	R727	ERJ6GEYJ103V	1/10W 10K
R807, 808	ERDS2TJ123	1/4W 12K	C461	RCE1AKA470BG	10V 47U	R728	ERJ6GEYJ392V	1/10W 3.9K
R809-812	ERDS2TJ333	1/4W 33K	C462	ECBTC103NS5	16V 0.01U	R731	ERJ6GEYJ392V	1/10W 3.9K
R813-816	ERDS2TJ102	1/4W 1K	C601	ECFR1E104ZF5	25V 0.1U	R735, 736	ERJ6GEYJ101V	1/10W 100
R817, 818	ERDS2TJ473	1/4W 47K	C602	ECBTC103NS5	16V 0.01U	R738	ERJ6GEYJ223V	1/10W 22K
R819, 820	ERDS2TJ100	1/4W 10	C603	ECBT1H331KB5	50V 330P	R744	ERJ6GEYJ103V	1/10W 10K
R851	ERDS2TJ681	1/4W 680	C604	ECBT1H102KB5	50V 1000P	R745	ERJ6GEYJ155V	1/10W 1.5M
R852	ERDS2TJ102	1/4W 1K	C605	ECBTC103NS5	16V 0.01U	R748	ERJ6GEYJ182V	1/10W 1.8K
R853	ERDS2TJ103	1/4W 10K	C671	ECFR1C103KR	16V 0.01U	R749	ERJ8GEYJ103V	1/8W 10K
R871, 872	ERDS2TJ473	1/4W 47K	C801, 802	RCE1AKA470BG	10V 47U	R750	ERJ6GEYJ102A	1/10W 1K
R873, 874	ERDS2TJ221	1/4W 220	C803, 804	RCE1CKA100BG	16V 10U			CHIP JUMPERS
R875, 876	ERDS2TJ102	1/4W 1K	C805-808	ECCRIH391J5	50V 390P			
			C809, 810	RCE0JKA470BG	6.3V 47U			
			C811, 812	ECBT1H102KB5	50V 1000P			

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
J701, 702	ERJ8GEYOR00A	CHIP JUMPER	C705	ECEA1HKA010I	50V 1U	C723	ECEA1AKA221I	10V 220U
J707-709	ERJ8GEYOR00A	CHIP JUMPER	C706	ECUE1H101JCN	50V 100P	C724	ECUV1C104MBM	16V 0.1U
J714	ERJ8GEYOR00A	CHIP JUMPER	C707	ECUV1E273KBN	25V 0.027U	C730	ECUW1E104ZFN	25V 0.1U
J716-719	ERJ8GEYOR00A	CHIP JUMPER	C708	ECUE1H472KBN	50V 4700P	C731, 732	ECEAJK221I	6.3V 220U
J721	ERJ6GEYOR00A	CHIP JUMPER	C709	ECUE1C473KBN	16V 0.047U	C733	ECUZ1E104MBN	25V 0.1U
J724	ERJ6GEYOR00A	CHIP JUMPER	C710	ECUE1H152KBN	50V 1500P	C734	ECEA1AKA221I	10V 220U
J726	ERJ6GEYOR00A	CHIP JUMPER	C711, 712	ECUW1E104ZFN	25V 0.1U	C735-737	ECUW1E104ZFN	25V 0.1U
J731	ERJ6GEYOR00A	CHIP JUMPER	C713	ECUV1C104MBM	16V 0.1U	C738	ECUV1C154KBN	16V 0.15U
		CAPACITORS	C714	ECEAJKA101I	6.3V 100U	C742	ECUV1E273KBN	25V 0.027U
			C715	ECEAJKA470I	6.3V 47U	C743	ECUW1E104ZFN	25V 0.1U
C701	ECEAJKA220	6.3V 22U	C716	ECUE1H561KBN	50V 560P	C744	ECUE1E822KBN	25V 8200P
C702	ECEA1HKA010I	50V 1U	C717	ECUW1E104ZFN	25V 0.1U	C745	ECUE1H102KBN	50V 1000P
C703	ECEAJKA101I	6.3V 100U	C718	ECUV1C224KBM	16V 0.22U	C747	ECUE1H222KBN	50V 2200P
C704	ECUZ1E104MBN	25V 0.1U	C721	ECUV1H070DCN	50V 7P	C748	ECUV1H471KBM	50V 470P
			C722	ECUV1H220JCN	50V 22P			

REPLACEMENT PARTS LIST

Notes: *Important safety notice:
Components identified by Δ mark have special characteristics important for safety. Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.
*The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.)
Parts without these indications can be used for all areas.
*Remote Control Ass'y: Supply period for three years from termination of production.
*The "(SF)" mark denotes the standard part.
*[V] indicates in Remarks columns parts that are supplied by Video Recorder Division.

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
				A4	RJA0036-K	AC POWER SUPPLY CORD	(GN) Δ
				A5	SJP2249-3	STEREO CONNECTION CABLE	
		PACKAGING		A6	RAK-SL122WH	REMOTE CONTROL TRANSMITTER	
P1	RPG2368	PACKING CASE	(E, EG)	A6-1	RKK0057-K	BATTERY COVER	FOR R/C TRANSMITTER
P1	RPG2369	PACKING CASE	(EB)				
P1	RPG2378	PACKING CASE	(GN)			<GREASE OR JIG/TOOL>	
P2	RPN0781	CUSHION	(E, EG)			TEST DISC	
P2	RPN0772	CUSHION	(EB, GN)				
P3	RPQ0535	PAD		SA1	SZZP1054C	PLAYABILITY TEST DISC	
P4	SPP730	PROTECTION BAG (UNIT)		SA2	SZZP1056C	UNEVEN TEST DISC	
P5	RPF0139	PROTECTION BAG (F. B.)					
P6	RPH0032	MIRROR SHEET	(EB, GN)			ALLEN WRENCH	
		ACCESSORIES		SA3	SZZP1101C	ALLEN WRENCH (M2.0)	
A1	RFKSPD1010E	INSTRUCTION MANUAL ASS'Y	(E)			LOCK PAINT	
A1	RQT2784-B	INSTRUCTION MANUAL	(EB, GN)				
A1	RFKSPD1010EG	INSTRUCTION MANUAL ASS'Y	(EG)	SA4	RZZ0L01	LOCK PAINT	
A2	RQA0013	WARRANTY CARD	(E, EB, EG)			GREASE	
A2	RQX74332A	WARRANTY CARD	(GN)				
A3	RQC80169	SERVICENTER LIST					
A4	RJA0019-2K	AC POWER SUPPLY CORD	(E, EG) Δ (SF)	SA5	RFKXPG671	MOLYCOAT GREASE PG671	
A4	VJA0733	AC POWER SUPPLY CORD	(EB) Δ (SF) [V]				

