

# Service Manual

COMPACT  
**disc**  
DIGITAL AUDIO

DIGITAL

Portable CD Player

## SL-XP300



Color

(K)... Black Type

Area

Country Code	Area	Color
(EG)	F.R. Germany & Italy.	(K)
(GC)	Asia, Latin America, Middle Near East and Africa.	
(GN)	Oceania.	

- Please file and use this manual together with the service manual for model No. SL-XP300 order No. AD9008247C2.
- This service manual indicates the main differences between; Original SL-XP300 (E) and SL-XP300 (EG, GC, GN).
- Refer to the Printed Circuit Boards and Wiring Connection Diagram of this Service Manual.

## CHANGES


### REPLACEMENT PARTS LIST

Ref. No.	Change of Parts No.		Part Name & Description	Remarks
	SL-XP300 (E)	→ SL-XP300 (EG, GC, GN)		
<b>COIL(S)</b>				
L201	—	RLB0003	COIL	Addition
<b>RESISTORS</b>				
R221	—	ERJ3GEYJ821V	RESISTOR, 1/16W 820Ω	Addition
<b>CAPACITORS</b>				
C205	—	ECUV1C104ZFN	CAPACITOR, 16V 0.1μF	Addition
<b>PACKING MATERIAL</b>				
P5	RPQ0059	RPQ0059	SPACER	(EG, GN)
		—	SPACER	(GC) Deletion
P6	RPQ0072	RPQ0072	PAD	(EG)
		RPQ0069	PAD	(GC) Change
		RPQ0070	PAD	(GN) Change
<b>ACCESSORIES</b>				
A1	RFKSLXP300E	RQT0719-D	INSTRUCTION MANUAL	(EG) Change
		RQT0716-G	INSTRUCTION MANUAL	(GC) Change
		RQT0718-B	INSTRUCTION MANUAL	(GN) Change
A4	SH-CDA6U-E	SH-CDA6U-E	AC ADAPTOR	(EG) △
		RFEA301Z-W	AC ADAPTOR	(GC) △ Change
		SH-CDA6U-XL	AC ADAPTOR	(GN) △ Change
A6	RQA0013	RQA0013	WARRANTY CARD	(EG)
		—	WARRANTY CARD	(GC) Deletion
		SQX7186	WARRANTY CARD	(GN) Change
A8	SH-CDB8-3	SH-CDB8-3	RECHARGEABLE BATTERY	(EG)
		SH-CDB8-2	RECHARGEABLE BATTERY	(GC, GN) Change
A9	—	RJP120ZDS-K	AC PLUG ADAPTOR	(GC) △ Addition


# Technics

PRINTED CIRCUIT BOARDS AND WIRING CONNECTION DIAGRAM

(FRONT VIEW)

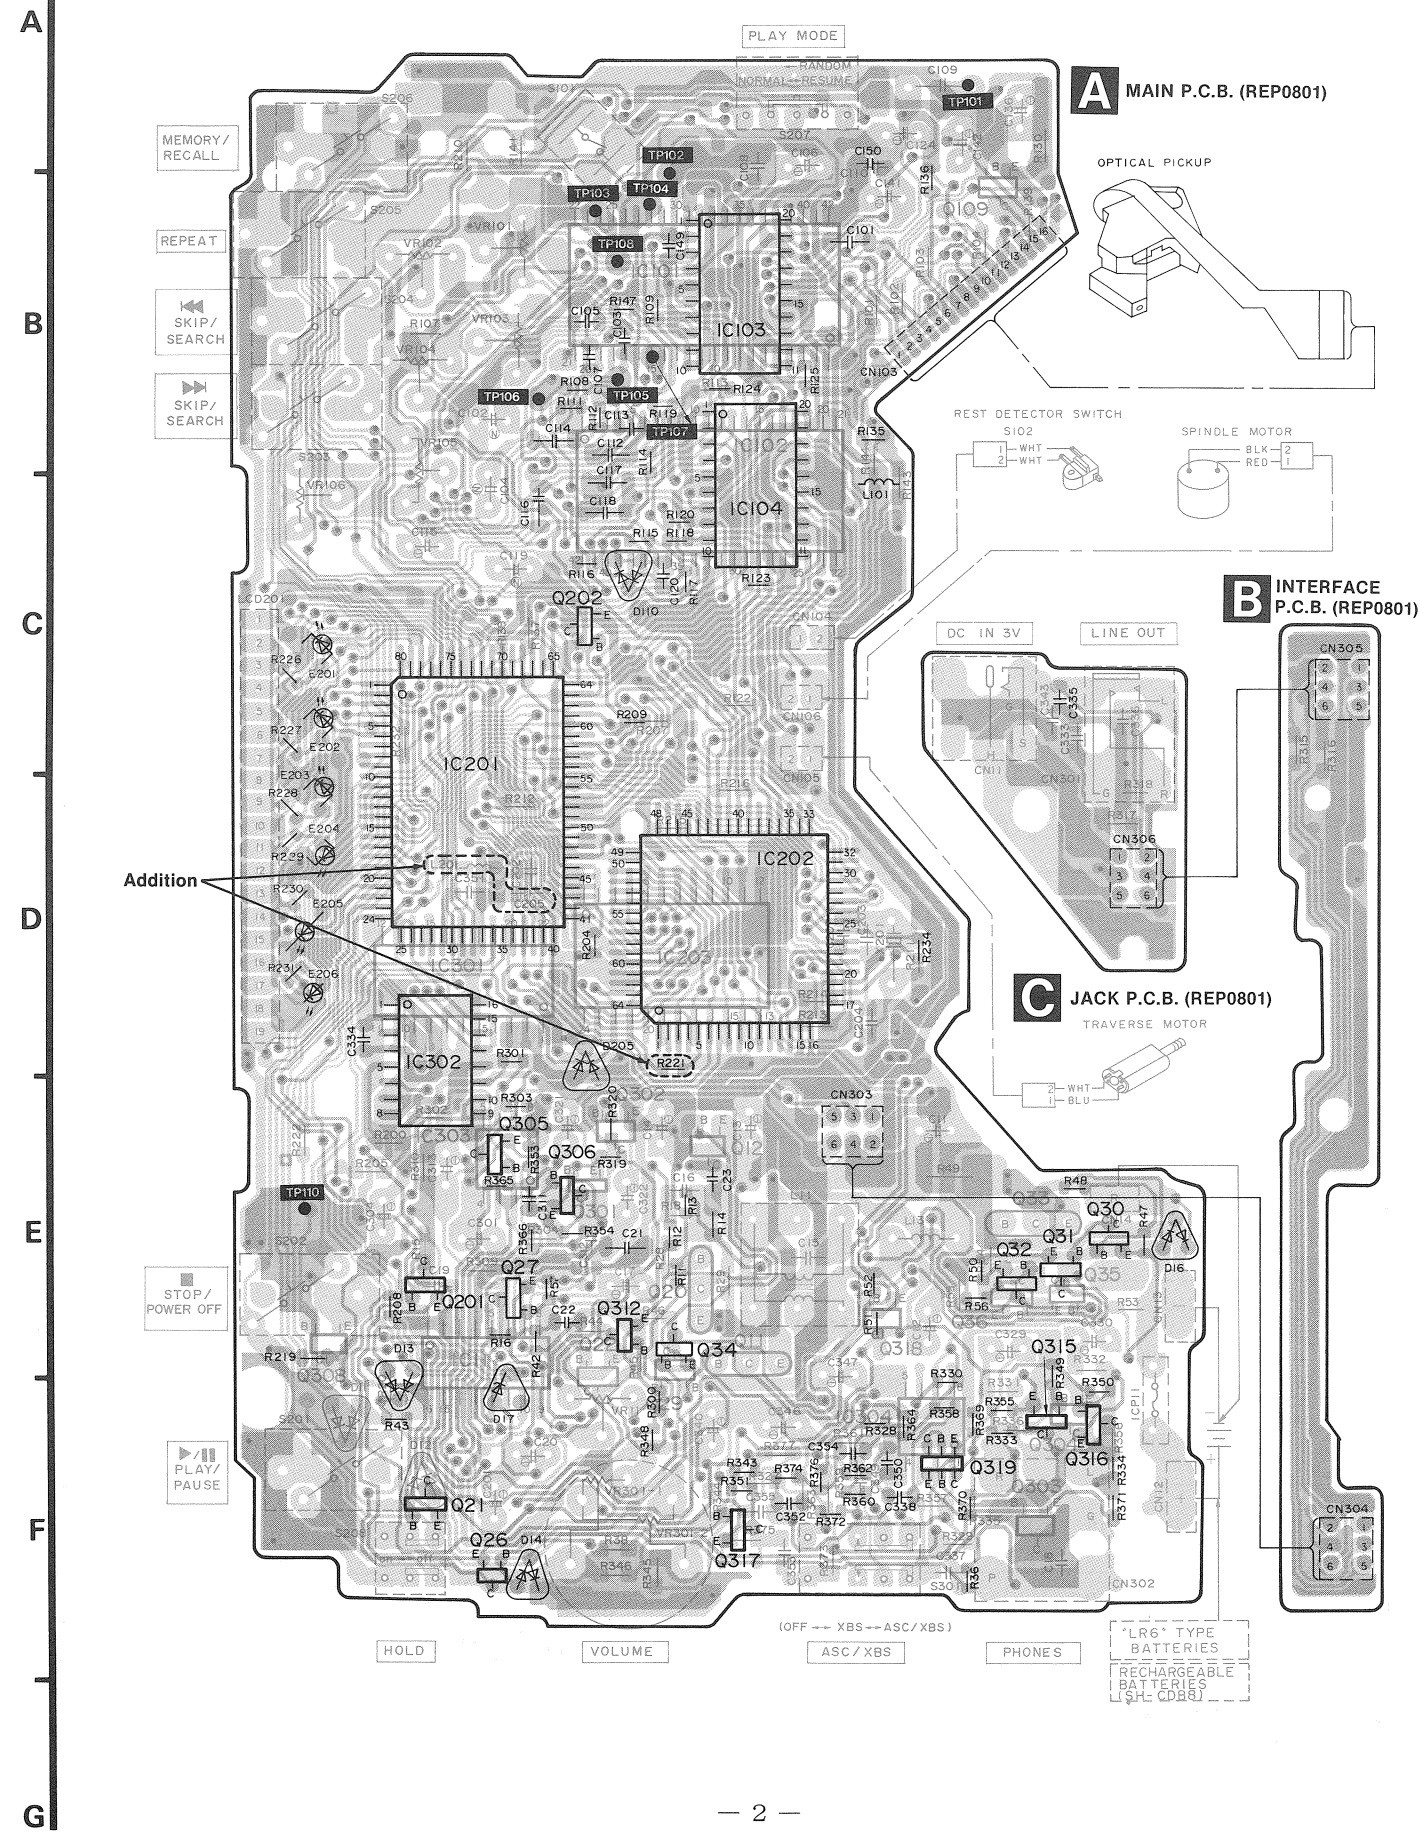

(BACK VIEW)

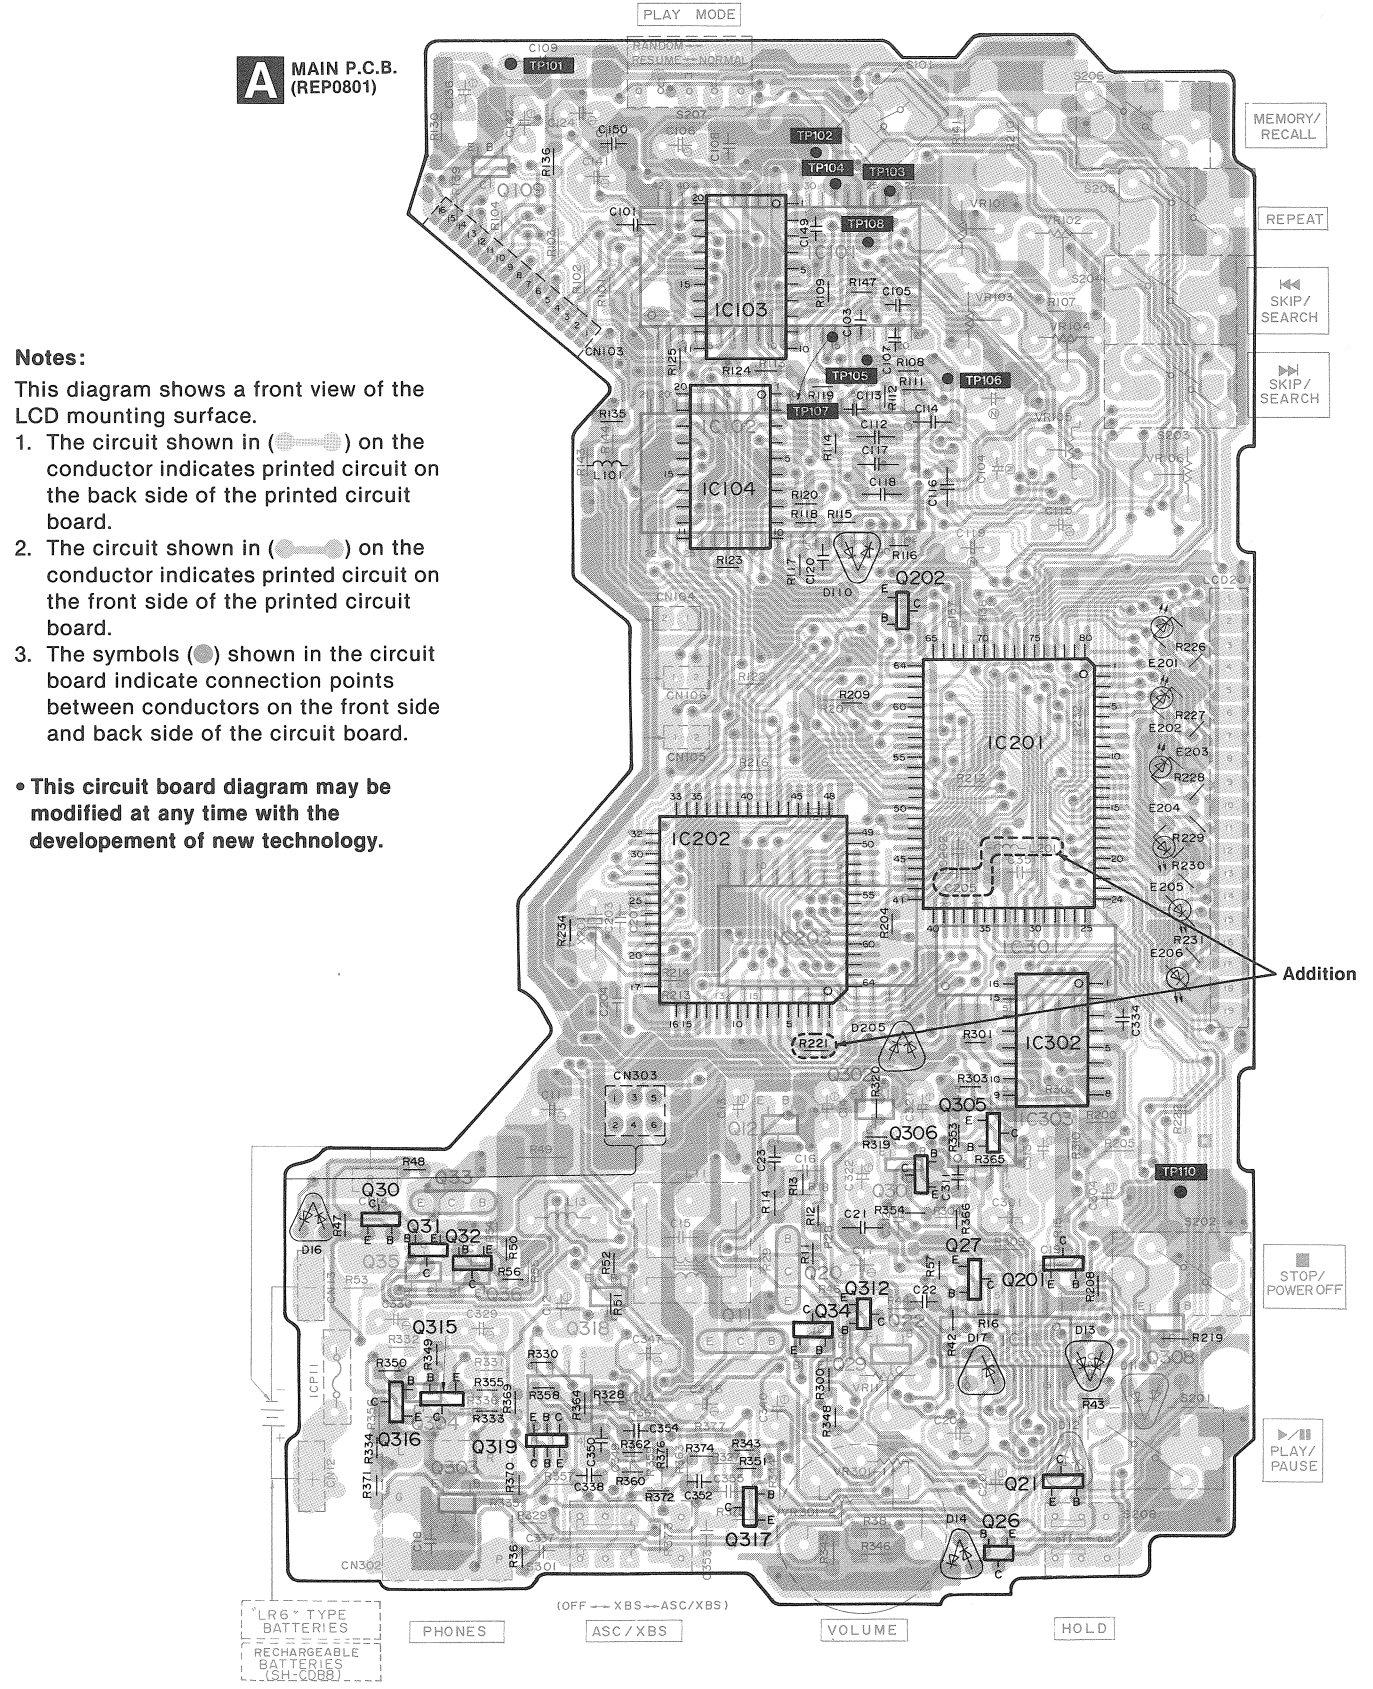

- Notes:**
- This diagram shows a front view of the LCD mounting surface.
  - The circuit shown in (●) on the conductor indicates printed circuit on the back side of the printed circuit board.
  - The circuit shown in (○) on the conductor indicates printed circuit on the front side of the printed circuit board.
  - The symbols (●) shown in the circuit board indicate connection points between conductors on the front side and back side of the circuit board.

• This circuit board diagram may be modified at any time with the development of new technology.

SCHEMATIC DIAGRAM

