

GND

(Lch) PHONO
TUNER
AUX


(Rch) PHONO
TUNER
AUX

(Lch) REC OUT
TAPE 2
L PLAY
BACK
REC OUT
TAPE 1
L PLAY
BACK

(Rch) REC OUT
TAPE 2
L PLAY
BACK
REC OUT
TAPE 1
L PLAY
BACK


REC/PLAY

S1-1 (PHONO)
S1-2 (TUNER)
S1-3 (AUX)
S3-1
S3-2
S3-3
S2 (TAPE MONITOR)
TAPE 1 SOURCE
TAPE 2

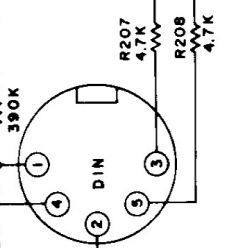


A B C D E F

SUP 18970B

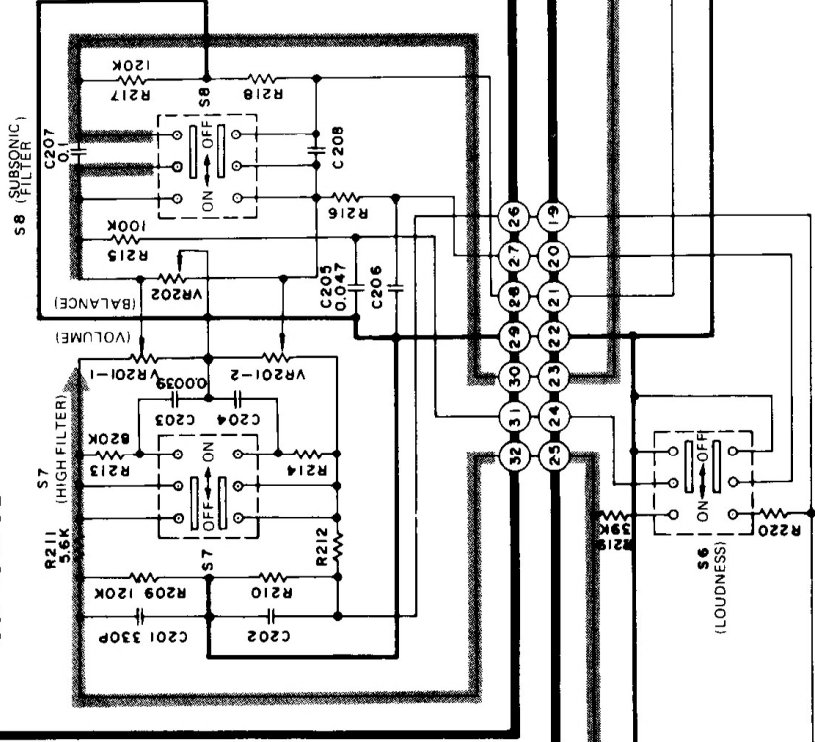

SUP 18970A

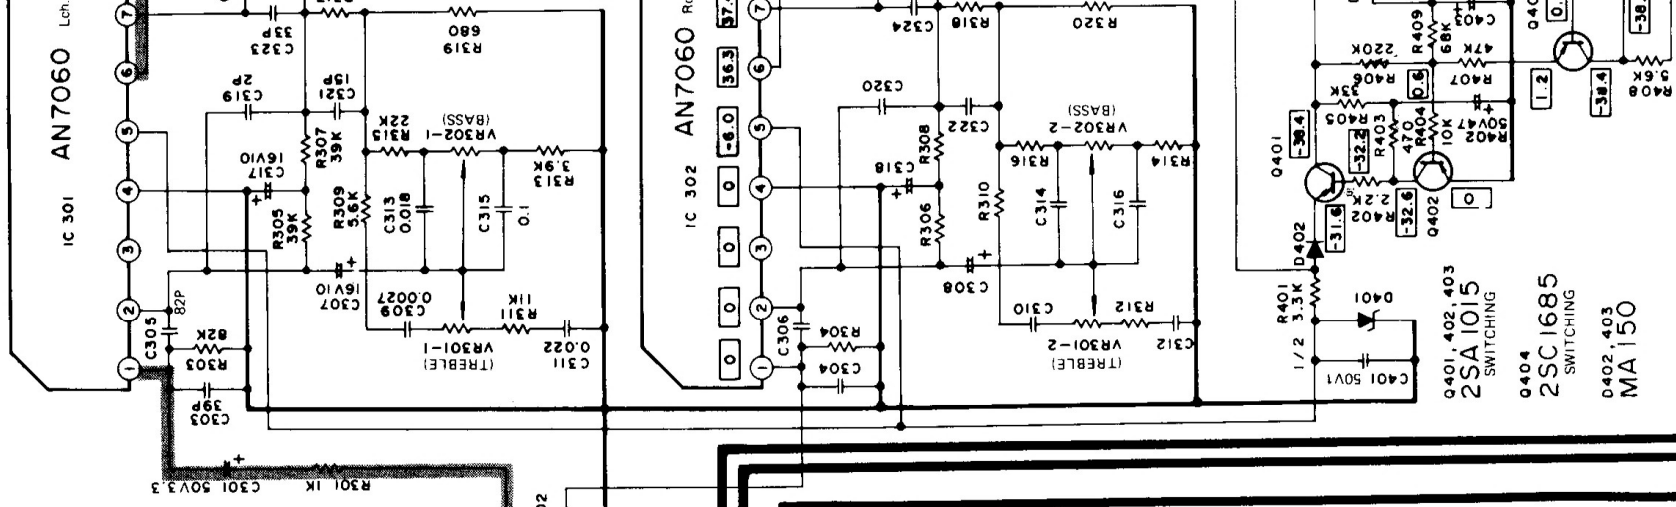

0301.302
2SA1123
PRE DRIVE

0301.302
20A90

0301.304
2-0A99

