

A

B

C

D


E

F

G

H

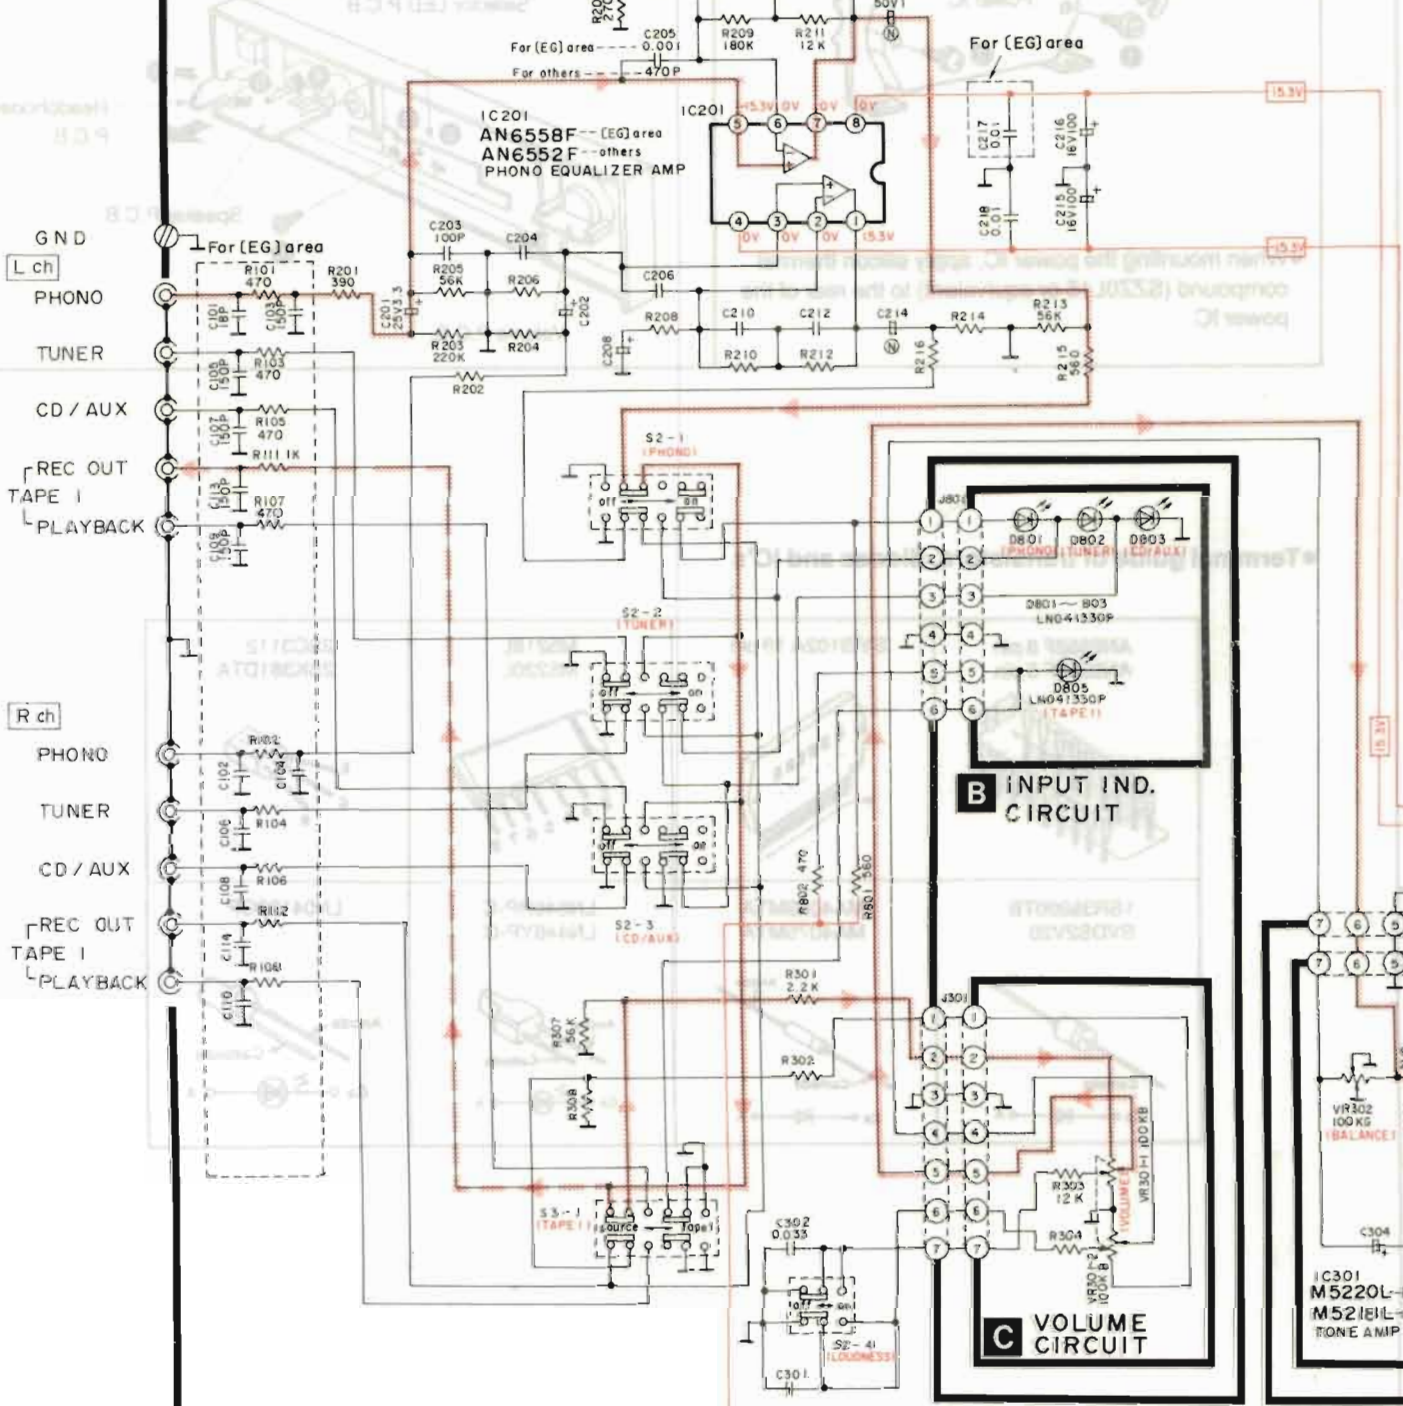


 
**A PHONO EQ. AMP/INPUT SELECT/
POWER AMP/POWER SOURCE
CIRCUIT**






■ SCHEMATIC DIAGRAM



(This schematic diagram may be modified at any time with the development of new technology.)

Notes:

1. **S1:** Power switch in "on" position.
2. **S2-1~S2-3:** Input selector switch in "phono" position.
S2-1: phono S2-2: tuner
S2-3: CD/AUX
3. **S2-4:** Loudness switch in "off" position.
4. **S3-1:** Tape monitor switch in "source" position.
5. **S4-1:** Main speaker switch in "on" position.
6. **S4-2:** Remote speaker switch "off" position.
7. **S6A:** Impedance selector switch in "8~16Ω" position.
8. **S6B:** Voltage selector in "240 V" position.
(For [XA] and [XB] areas only)
9. Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.
10.  Phono signal line (Lch)
 Rec out signal line (Lch)
 Positive and negative voltage lines
11. Important safety notice: Components identified by  mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.

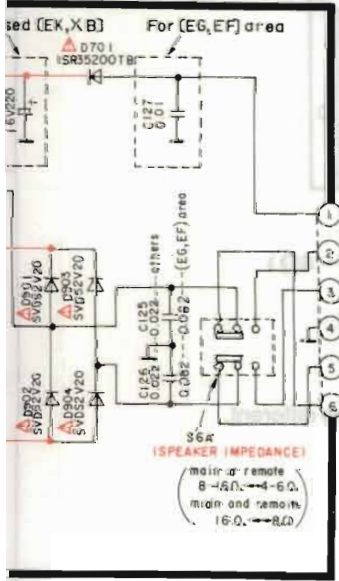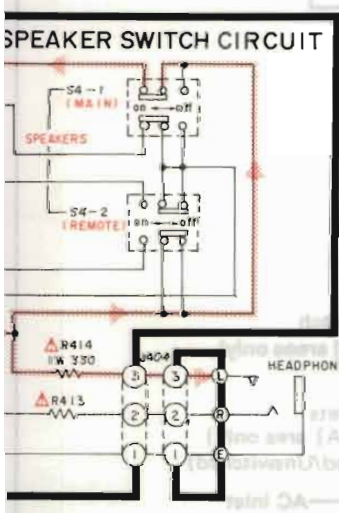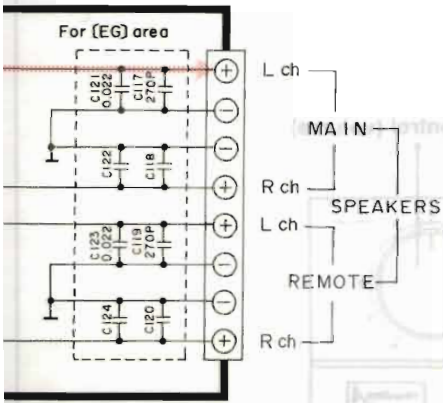

Power Source For [XA, XB] area

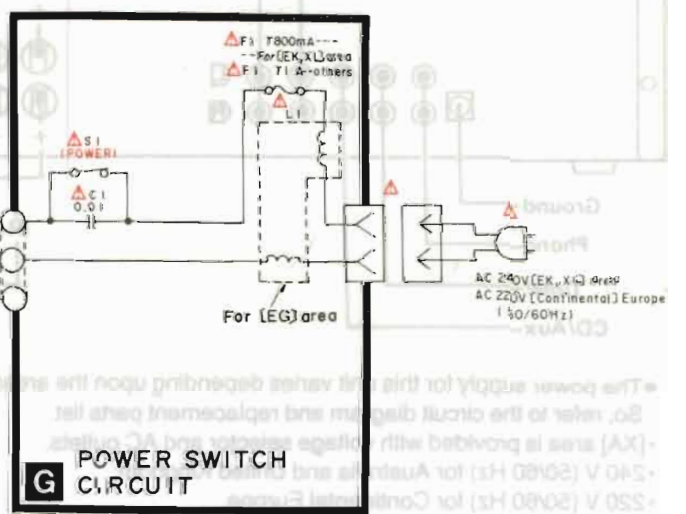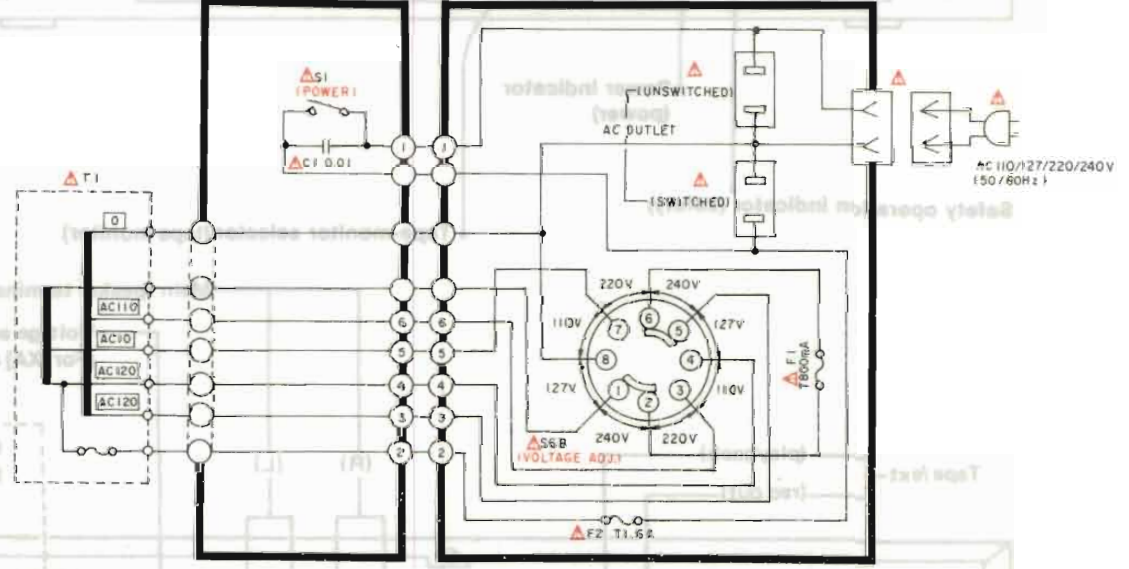

G POWER SWITCH CIRCUIT