


Schematic Diagram ... Model SU-Z1/SU-Z1K

(This schematic diagram may be modified at any time with the development of new technology)



- NOTES**
- S1 Input selector switch in "PHONO" position.
PHONO → TUNER → AUX
 - S2 Tape monitor switch in "SOURCE" position.
TAPE 1 → SOURCE → TAPE 2
 - S3 Rec mode switch in "SOURCE" position.
TAPE 1 ▶ 2 → SOURCE → TAPE 2 ▶ 1
 - S4 Remote speaker switch in "OFF" position.
 - S5 Main speaker switch in "ON" position.
 - S6 Loudness switch in "OFF" position.
 -
 -
 - S9 Voltage adjustment switch in "240V" position.
 - S10 Power switch in "ON" position.
 - All the resistors otherwise noticed are 1/4W or 1/8W ±5%, carbon film resistors.
 - Tolerance J ±10% K ±10% M ±10%
 - ▲ Marks are in safety parts.
 - DC voltage measurements are taken with DC VTVM from chassis ground. □ Standard values.
 - Shorting switch. Non shorting switch.

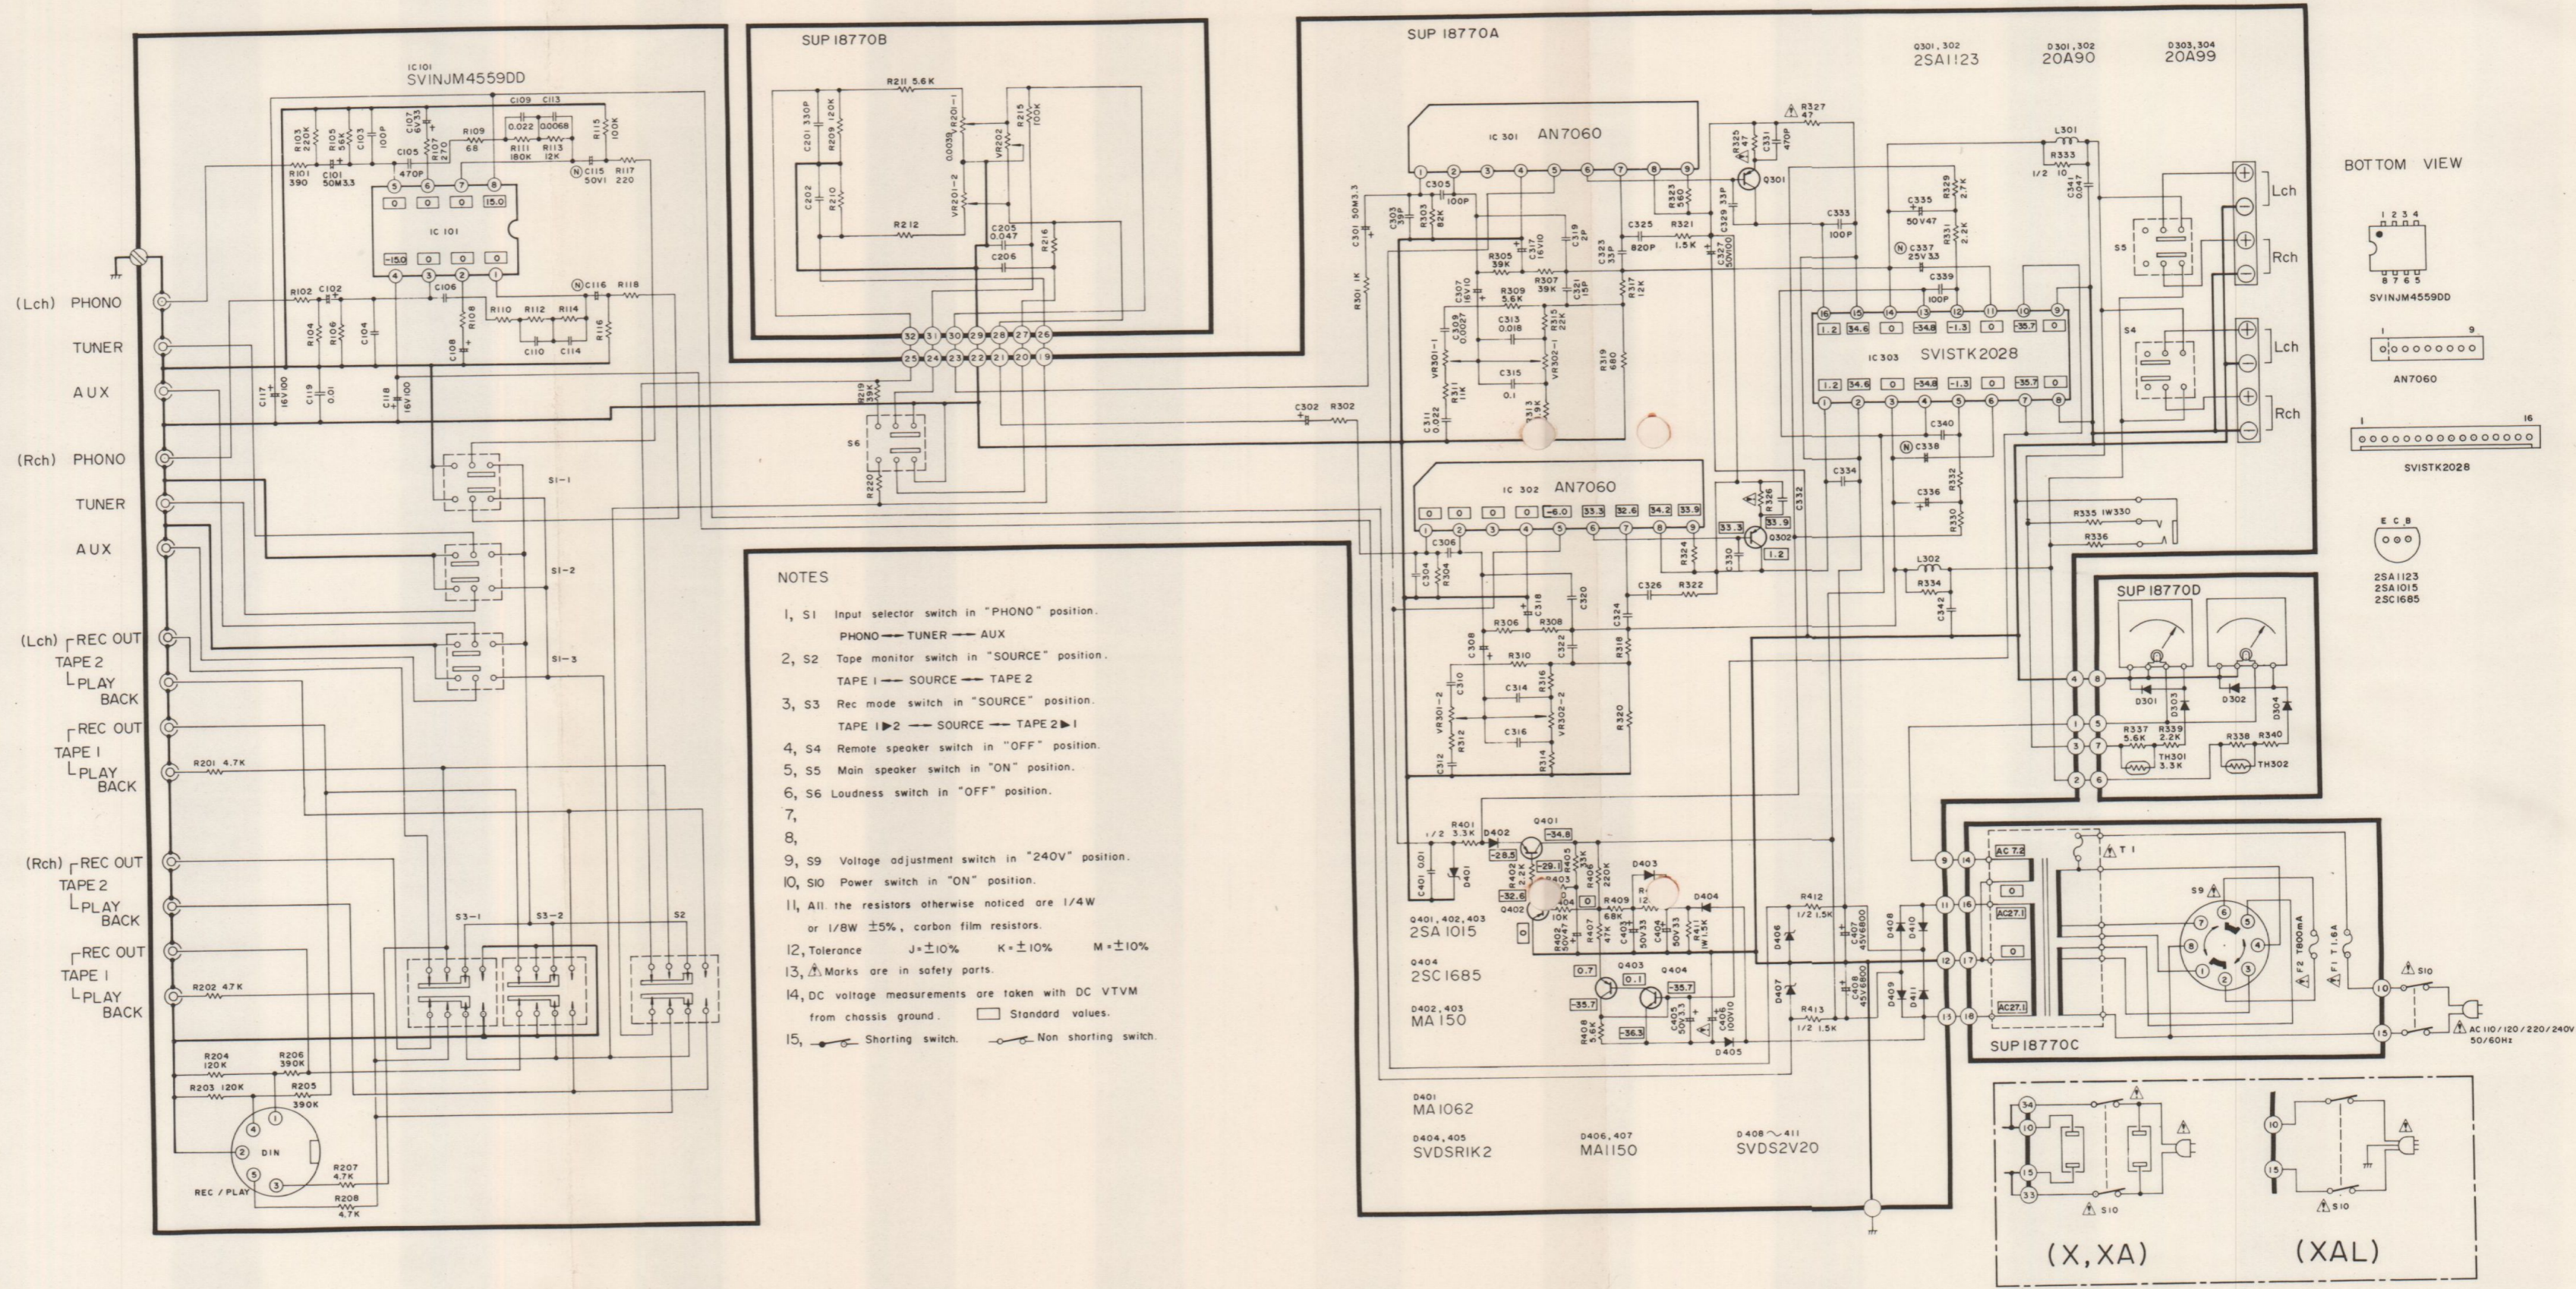