



D Level Meter

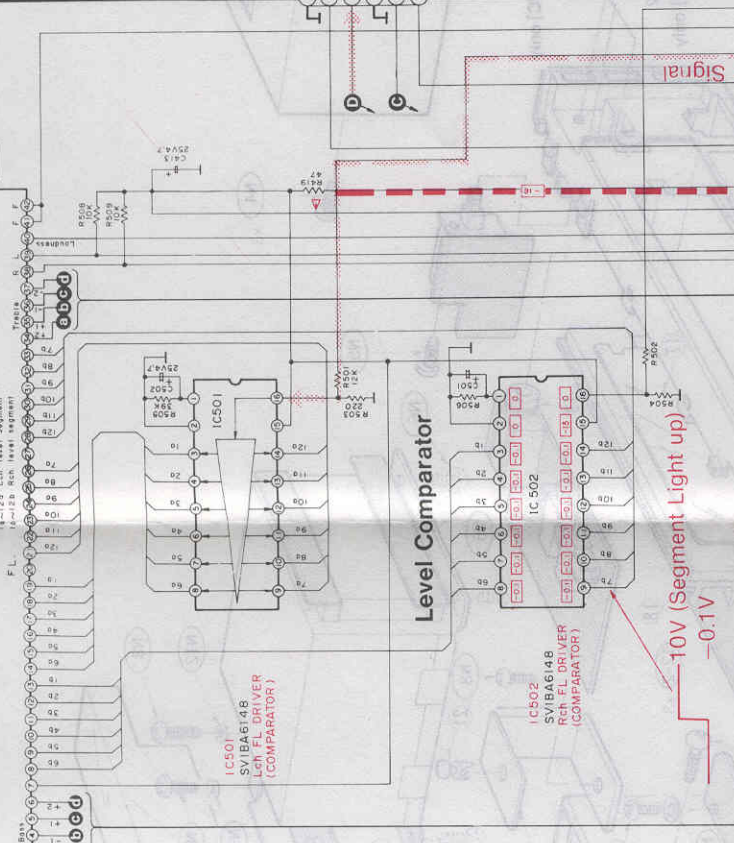


G POWER AMPLIFIER, MUTING AND POWER SUPPLY

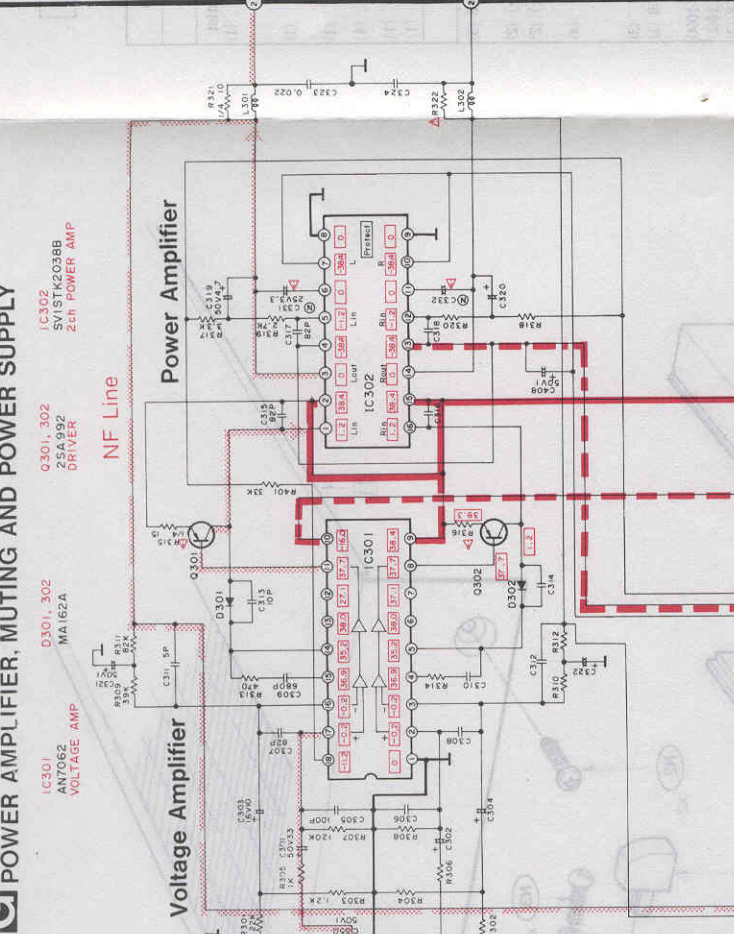


H SPEAKER TERMINAL




E LEVEL METER CONTROL

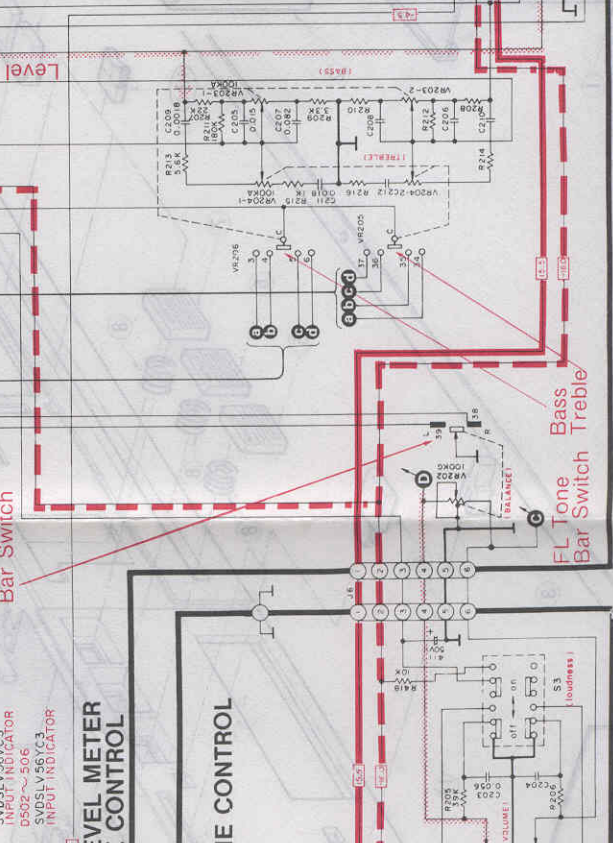

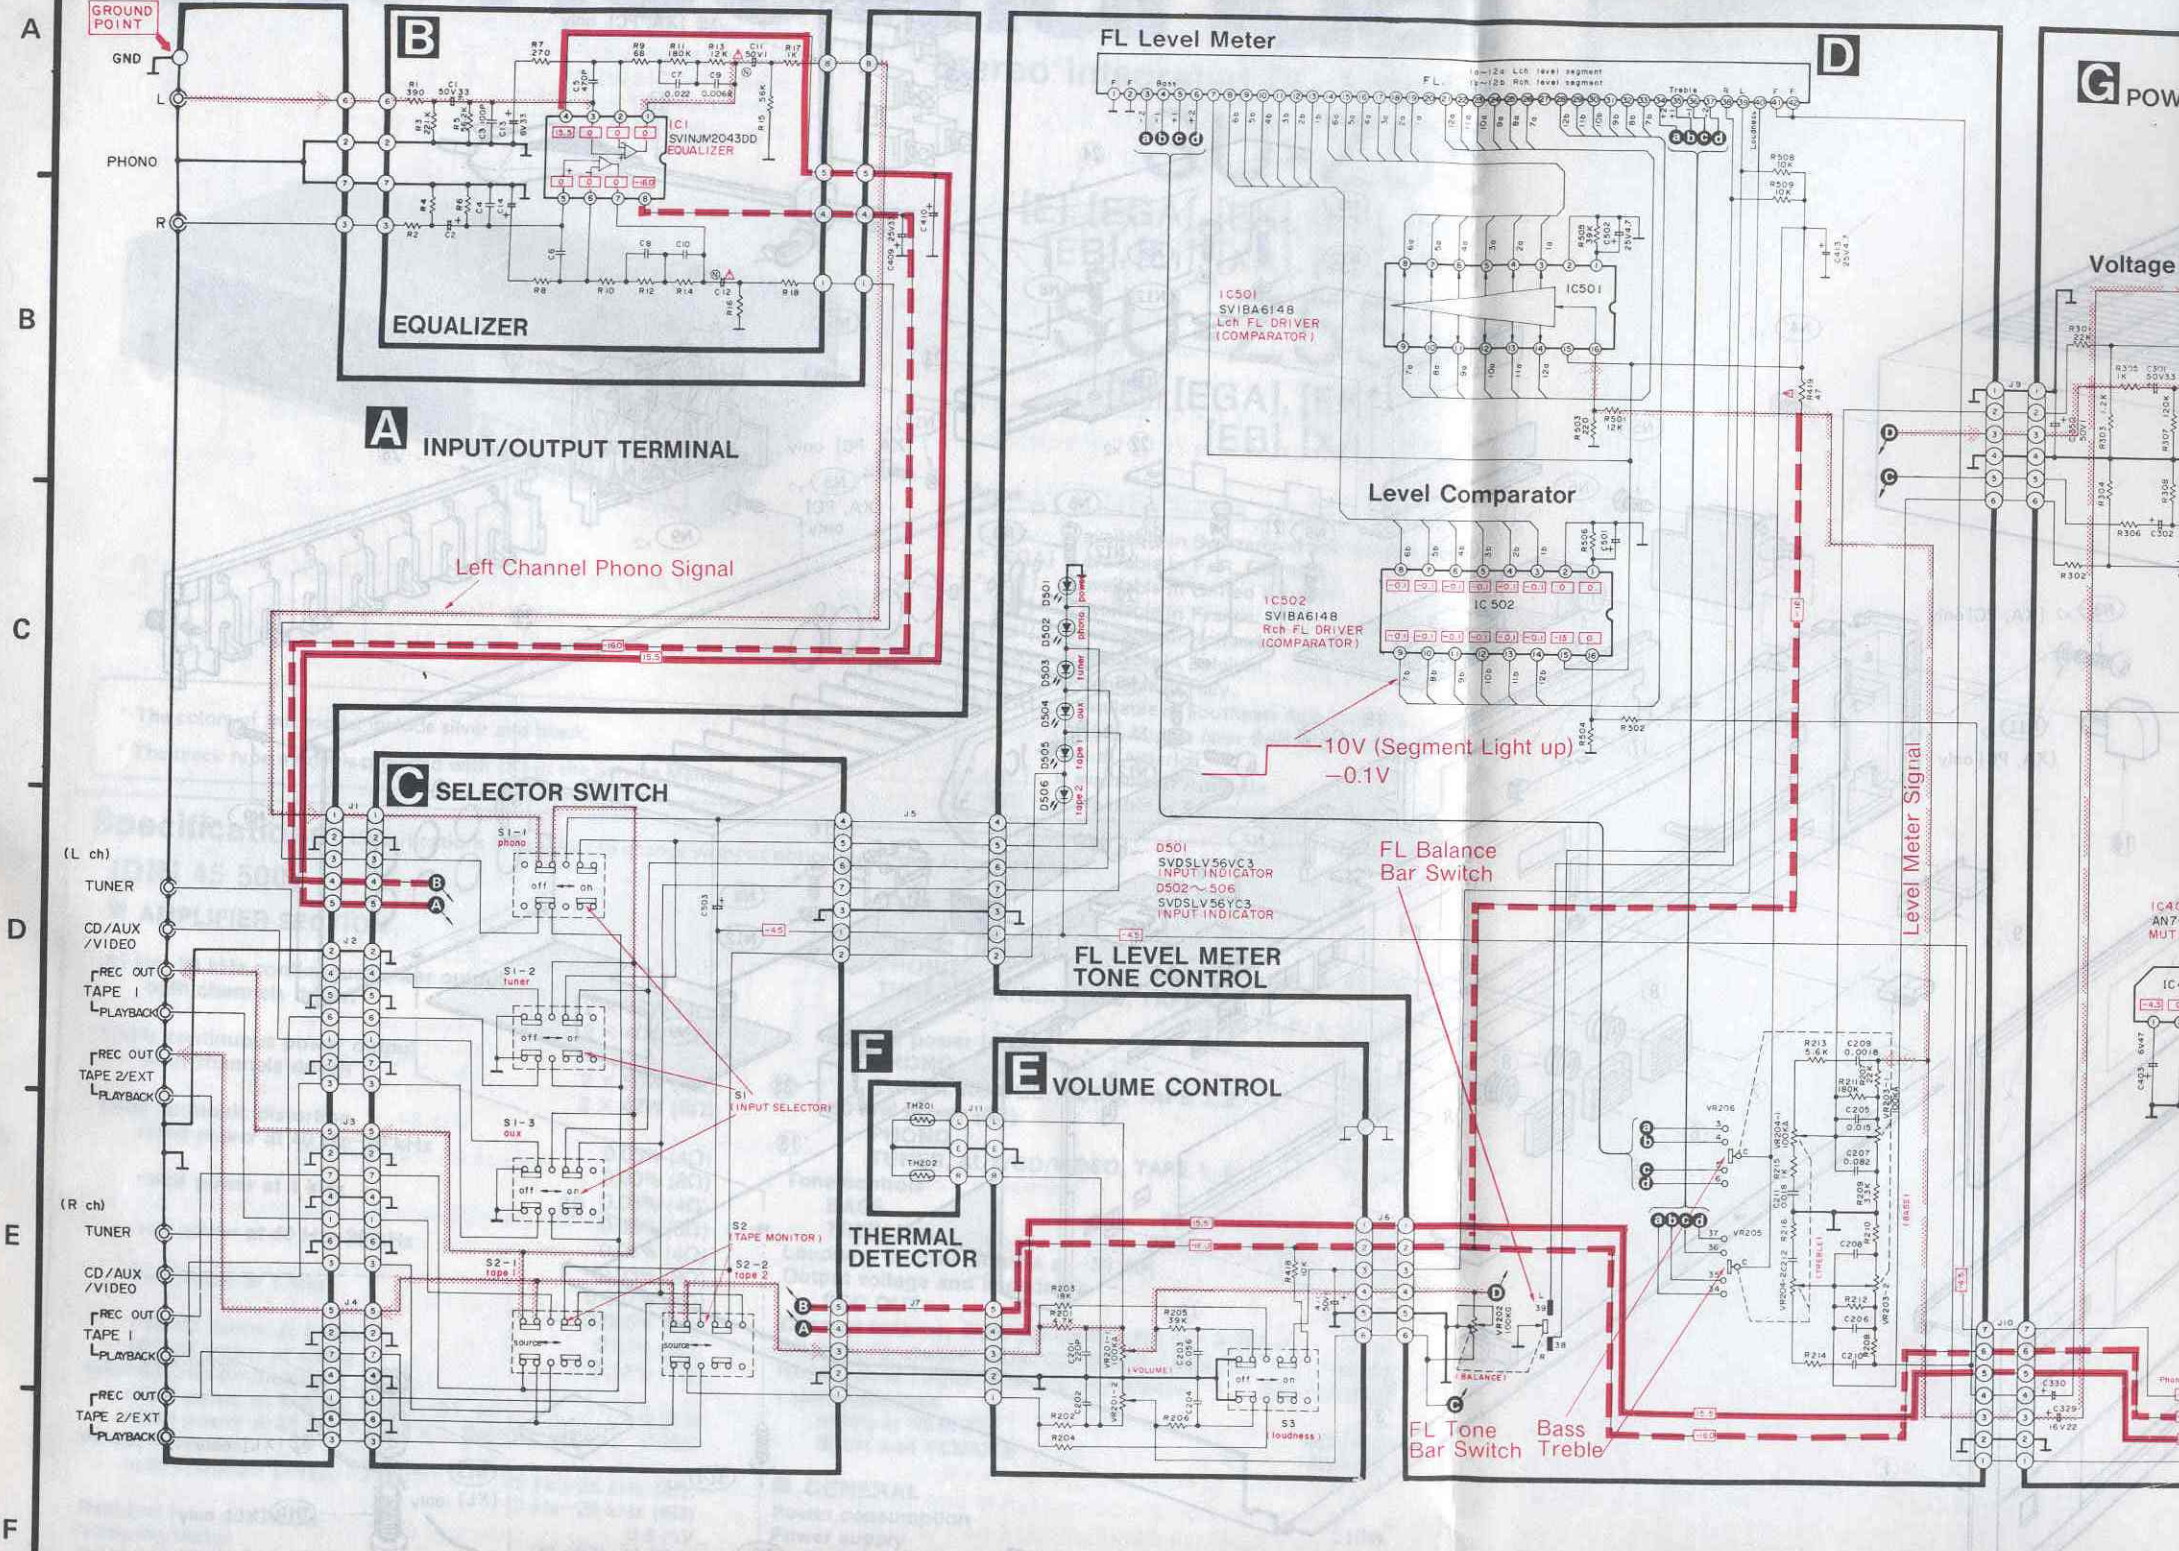

GROUND POINT

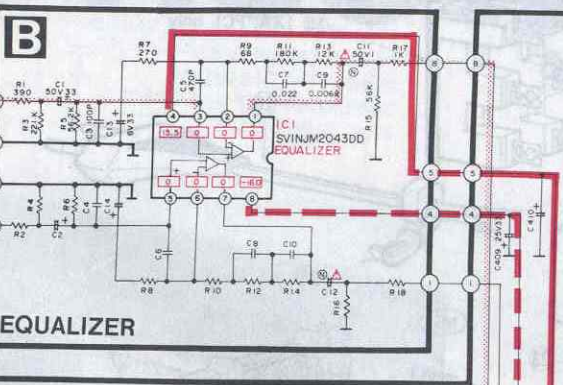

A INPUT/OUTPUT TERMINAL

Left Channel Phono Signal

C SELECTOR SWITCH

(L ch)

TUNER

CD/AUX /VIDEO

REC OUT TAPE 1

PLAYBACK

REC OUT TAPE 2/EXT

PLAYBACK

(R ch)

TUNER

CD/AUX /VIDEO




REC OUT TAPE 1

PLAYBACK


REC OUT TAPE 2/EXT

PLAYBACK

FL Level Meter

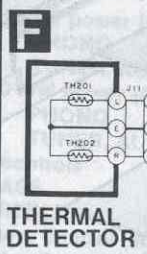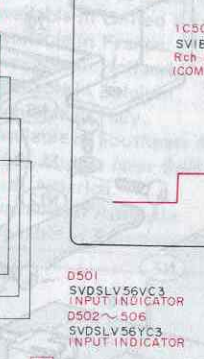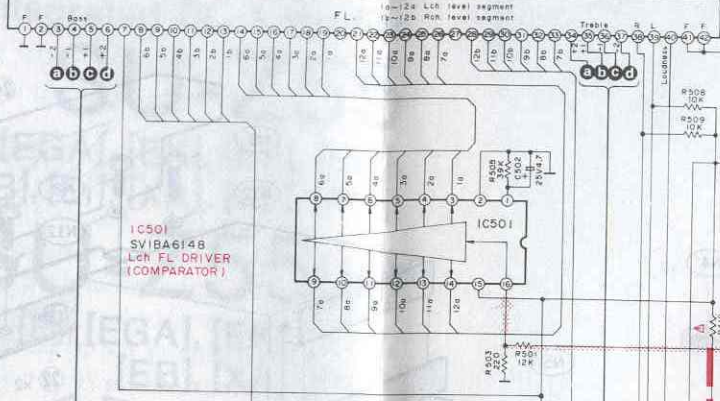

E VOLUME CONTROL

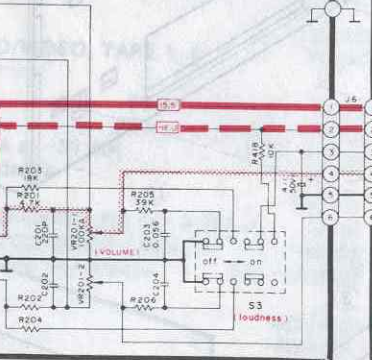

FL Balance Bar Switch

FL Tone Bass Bar Switch Treble

Level Meter Signal

G POWER

Voltage



F