



See Note

Note: For use with Phono. Reproducer strap terminals 4, 5 and G together.

110 V. A.C. 60~

**Western Electric 34-A**