



ZENITH RADIO CORP.

MODEL 4F227
Chassis 5408
Schematic, Socket
Alignment, Parts Trimmers, Voltage

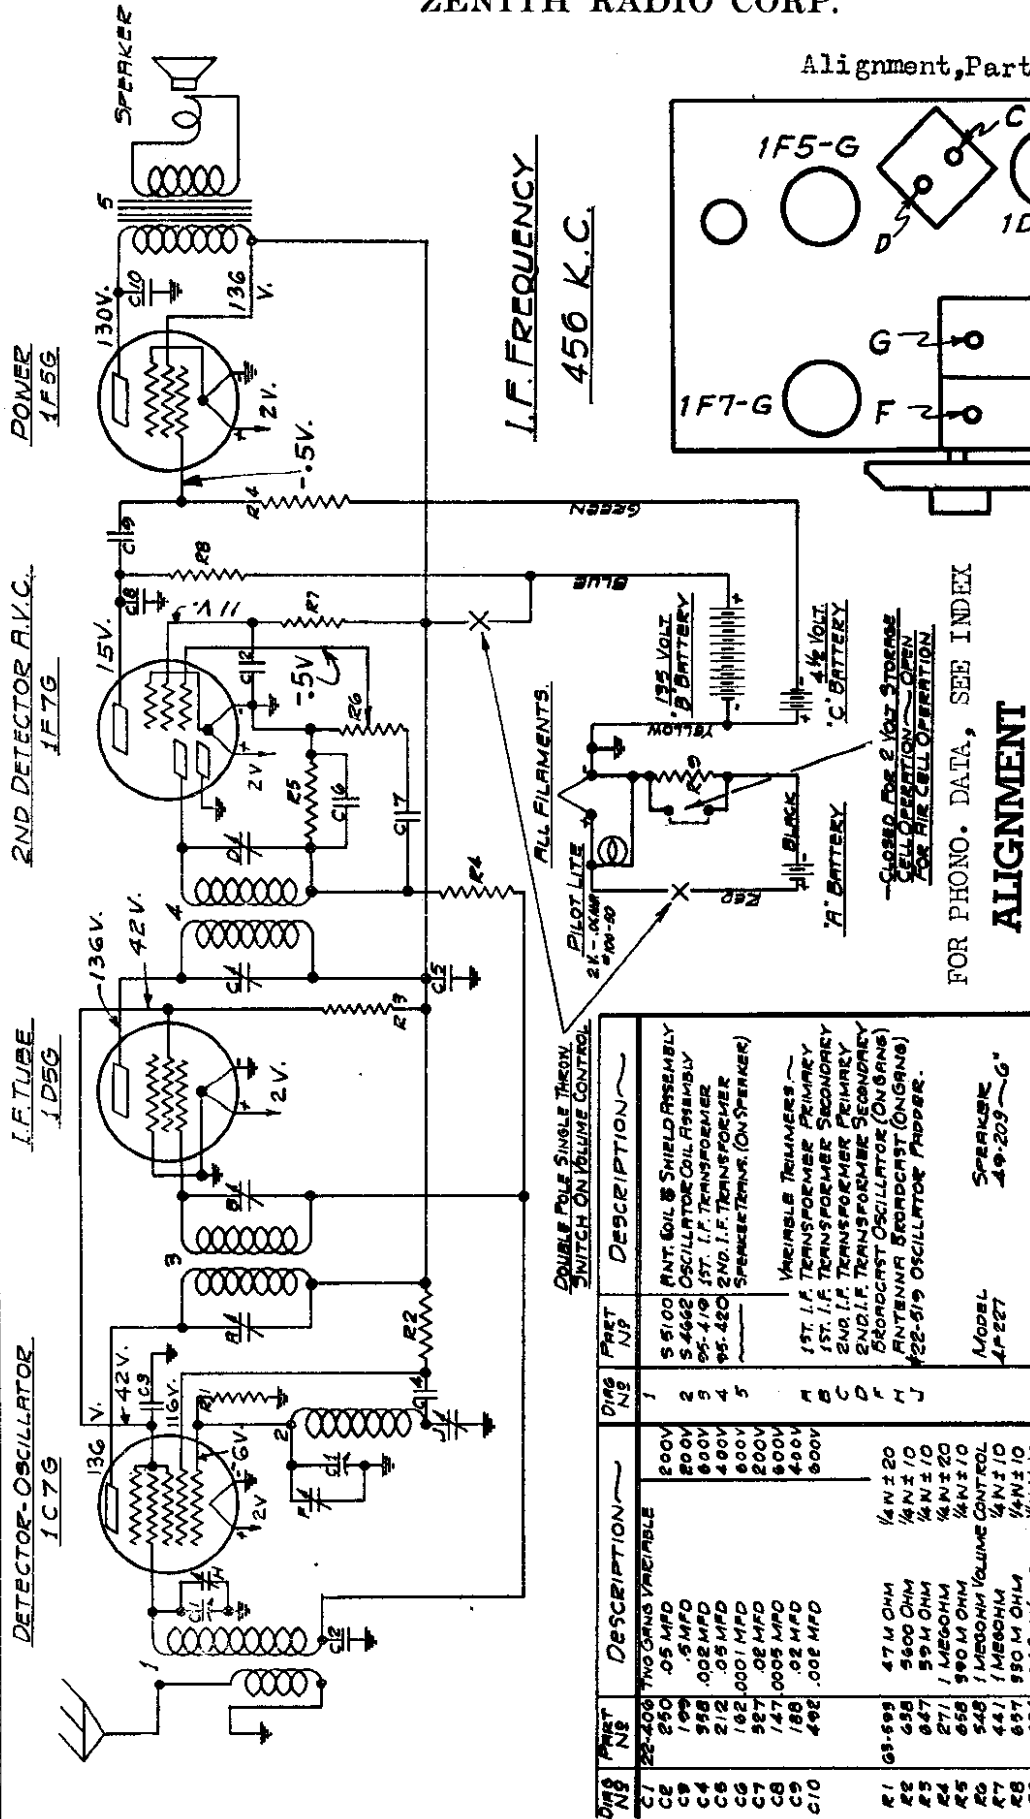

I.F. FREQUENCY
456 K.C.

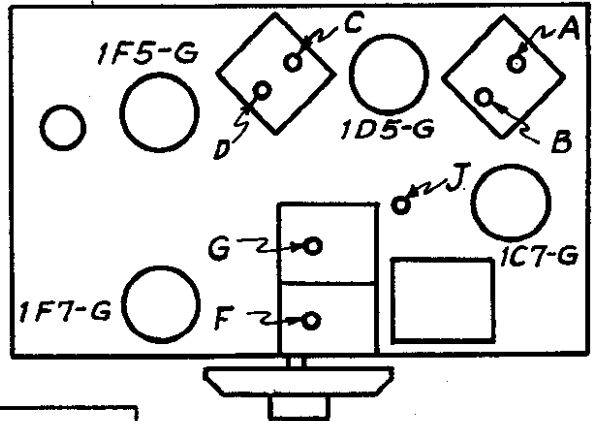

FOR PHONO. DATA, SEE INDEX

ALIGNMENT

Operation	Connect Test Oscillator to—	Dummy Antenna	Set Test Osc. to	Band	Set Dial At	Adjust Trimmers	Purpose
1	1st Det. Grid	1/2 Mfd.	456	Br'dc't	600	ABCD	I. F. Algn't
2	Rec. Ani. Lead	200 Mmfd.	1500	"	1500	F	Set Osc. to Scale
3	"	200 Mmfd.	1500	"	1500	G	Algn't of Ant.
4	"	200 Mmfd.	600	"	600	J	Rock gang & adj. for max. output
5	"	200 Mmfd.	1500	"	1500	FG	Rpt 3 & 4