



CA-W50机壳分解图

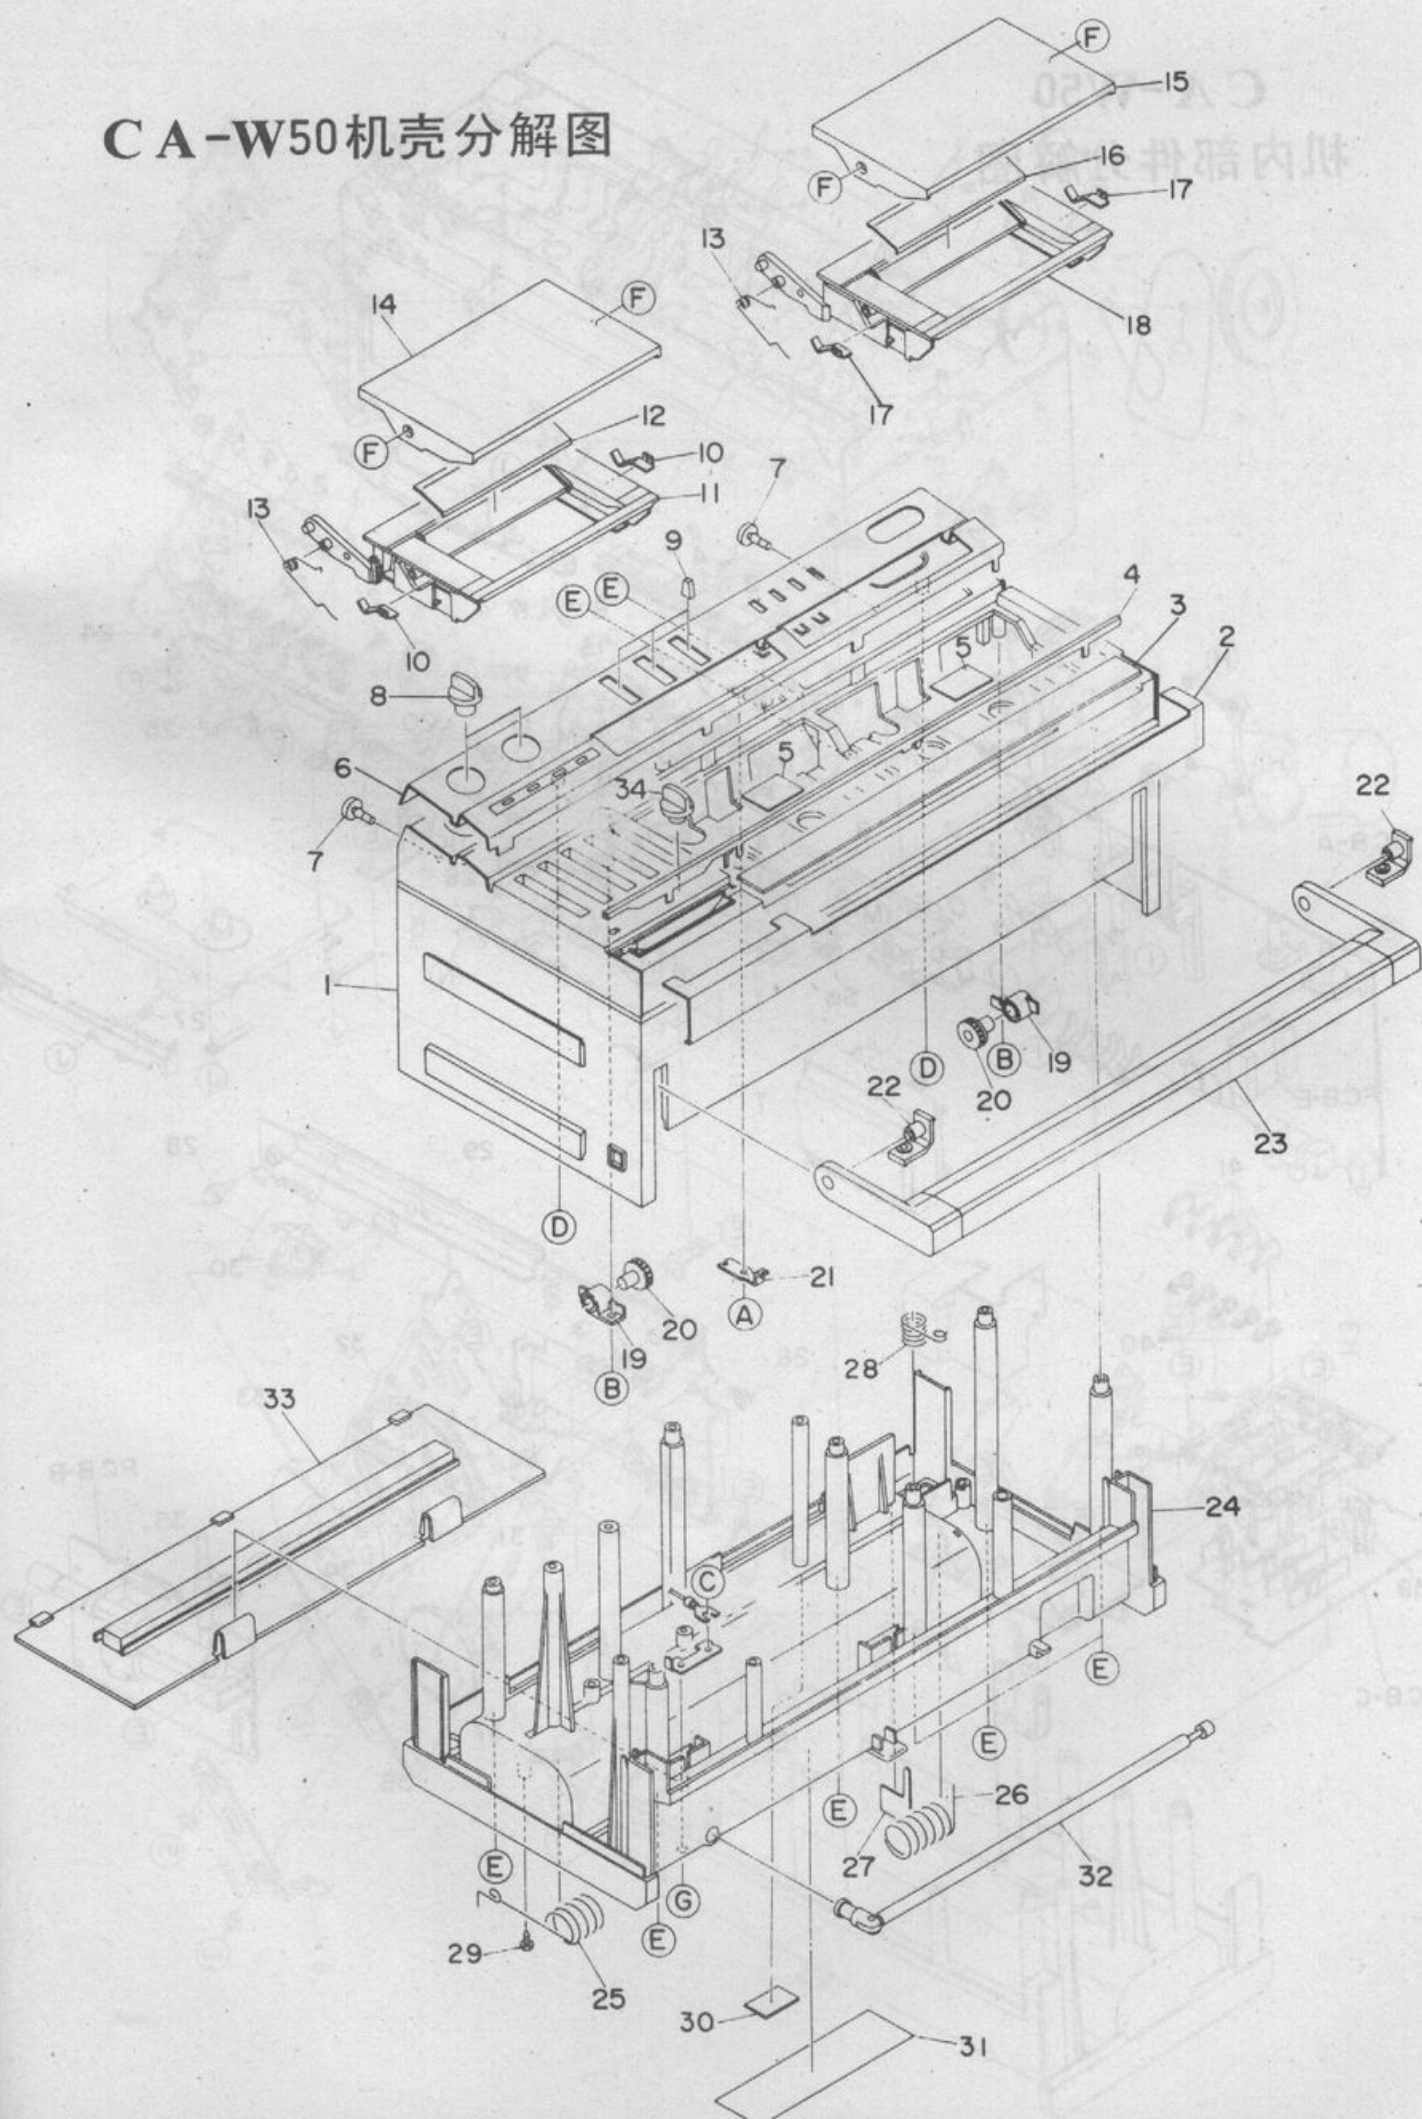

CA-W50(AIWA 公司)

度盘拉线的安装

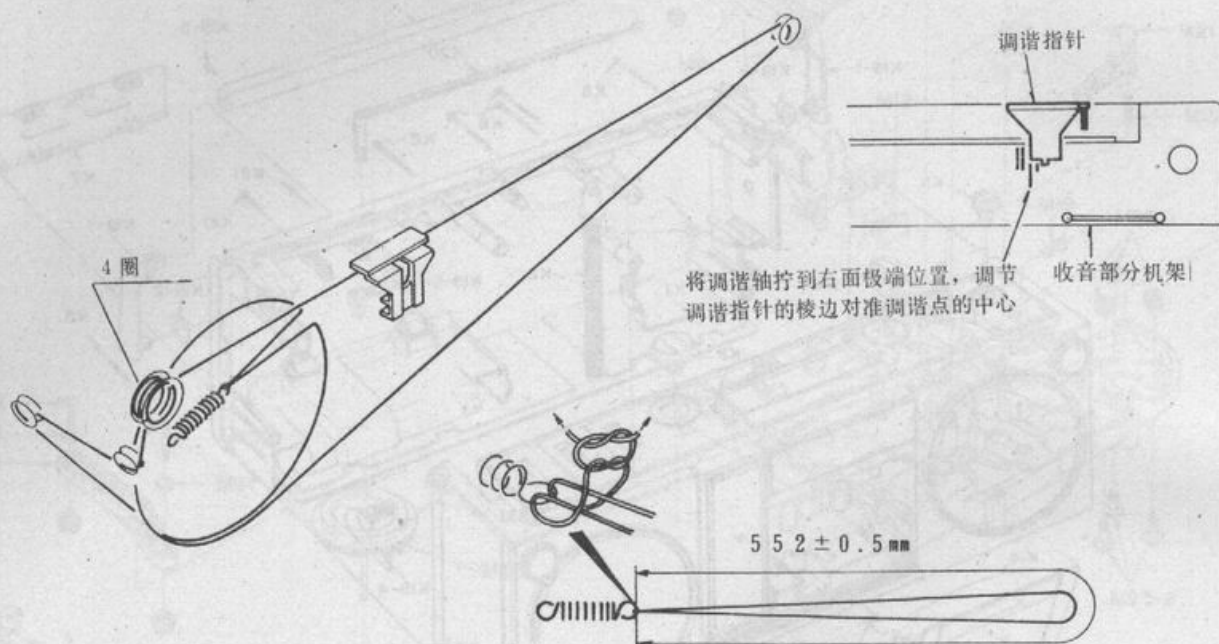

拆卸方法

机壳前脸的拆卸

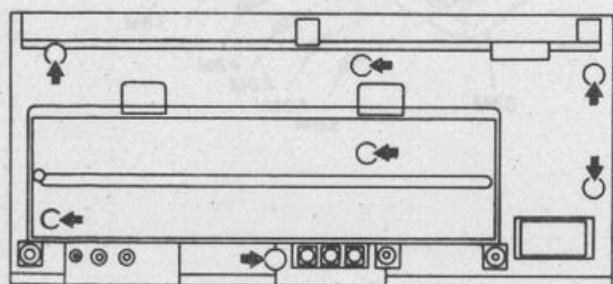
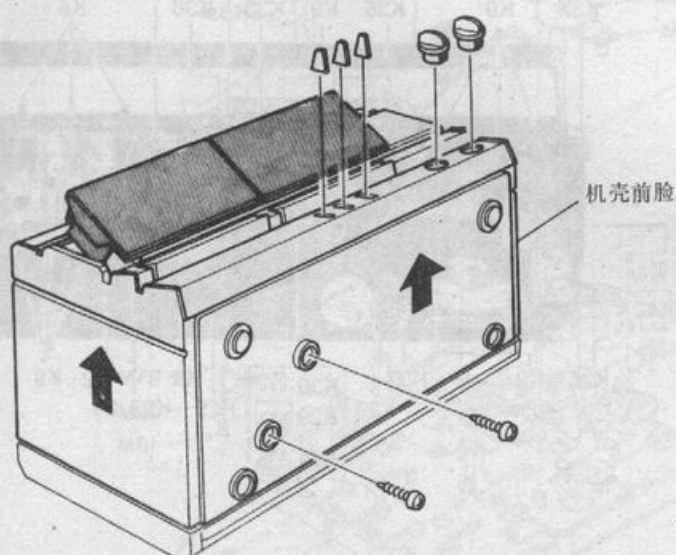


图 1-1

(1) 拆卸去 9 枚螺钉和 5 只旋钮。

(2) 打开带仓门之后，按箭头方向拆卸下机壳前脸（见图 1-1）。

机心及图示均衡器印制板的拆卸

拆卸去四枚螺钉（见图 1-2）。

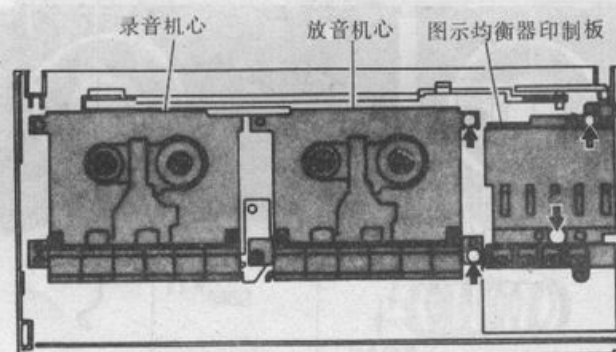


图 1-2

调谐器印制板的拆卸

(1) 拆卸去三枚螺钉（见图 1-3）。

(2) 拆卸去二枚螺钉（见图 1-4）。

均衡器印制板的拆卸

(1) 拆卸去二枚螺钉（见图 1-5）。

主印制板的拆卸

(1) 拧出二枚螺钉，依箭头方向拆卸出主印制板（见图 1-6）。

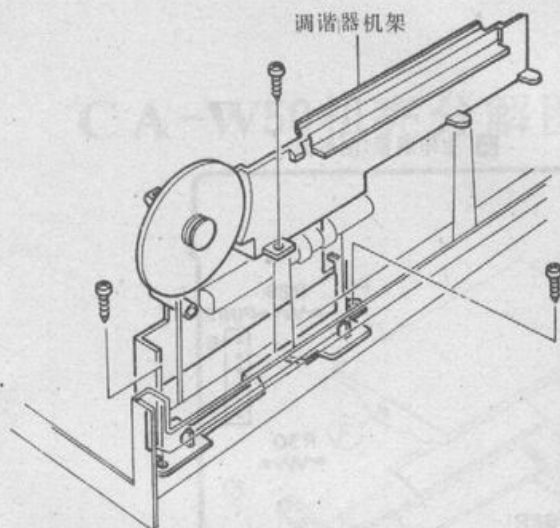


图 1-3

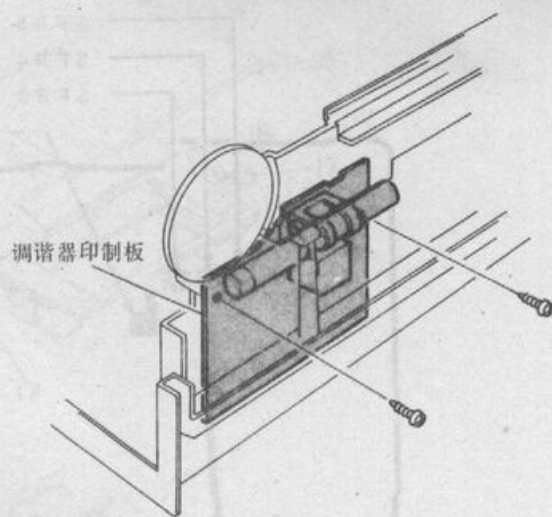


图 1-4

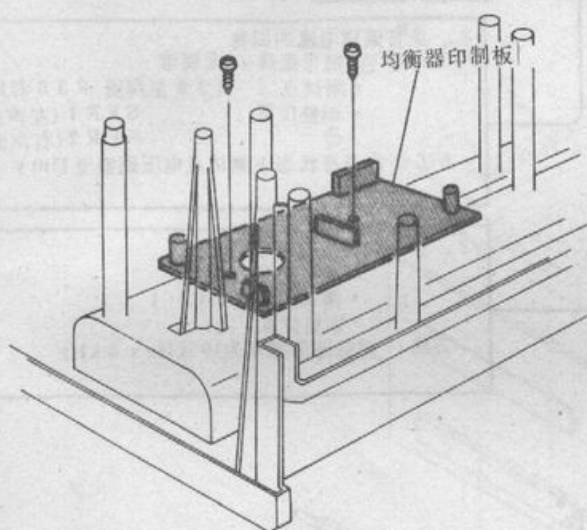


图 1-5

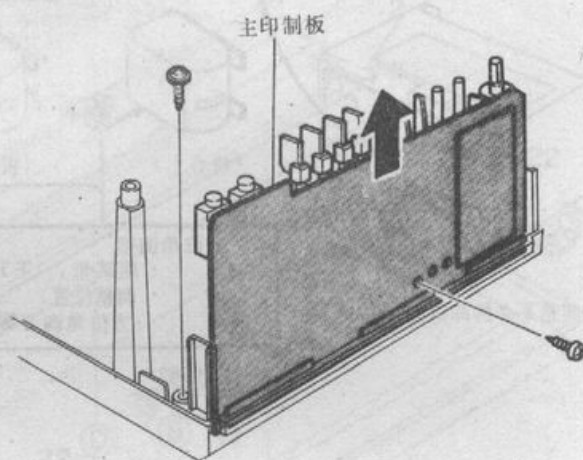


图 1-6



电 气 调 整

1. 带速

带速应按常速至高速的次序调整。


如果按相反的步骤调整可能引起误调。

	测试带	机心	调整位置	调整步骤	方法
常速	TTA-111S	机心 II (录/放)	SFR 5	①	装入 TTA-111S 并按下放音键, 然后调整 SFR5, 使放音频率为 3 kHz。
		机心 I (放音)	SFR 3	②	装入 TTA-111S 并按下放音键, 然后调整 SFR3, 使放音频率为 3 kHz。
高速	TTA-111H	机心 II (录/放)	无调整	③	使测试点 H 接地 装入 TTA-111H 并按下放音键, 然后确定带速。
		机心 I (放音)	SFR 4	④	使测试点 H 接地。 装入 TTA-111H 并按下机心 I 和 II 的放音键, 然后调节 SFR4, 使带速与机心 II 相同。

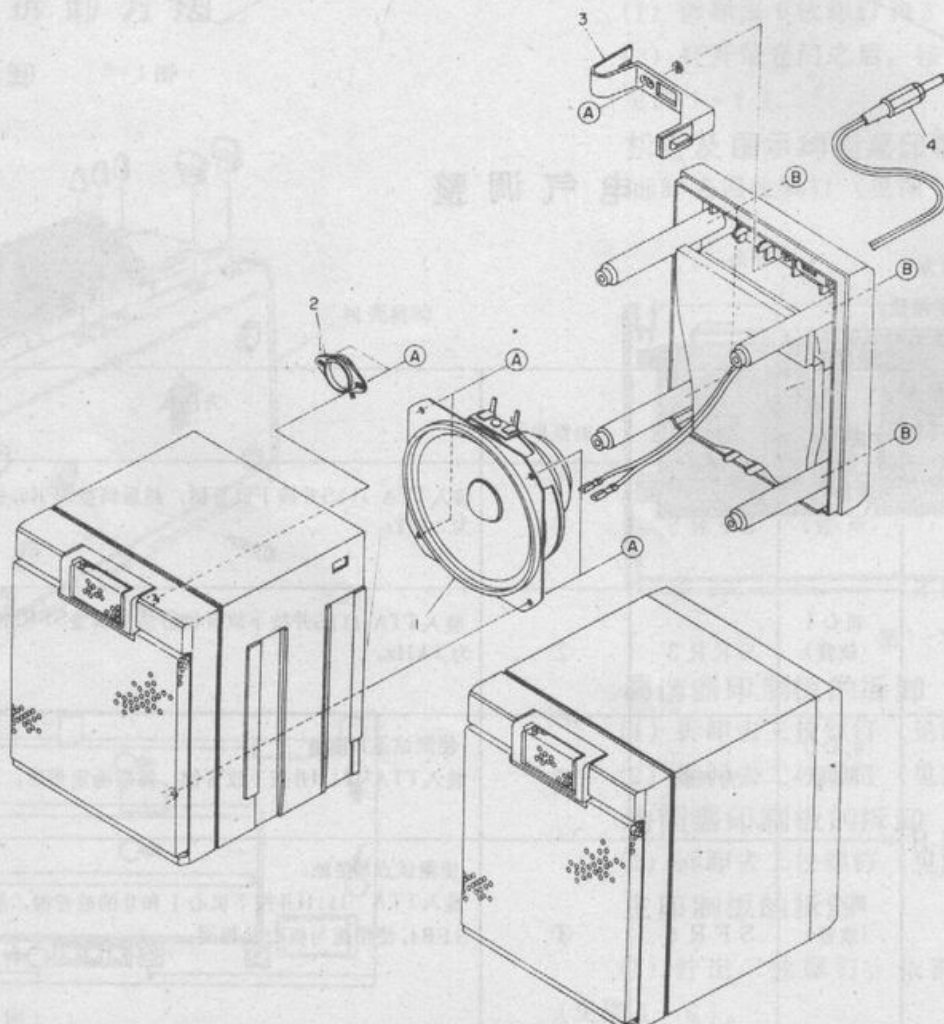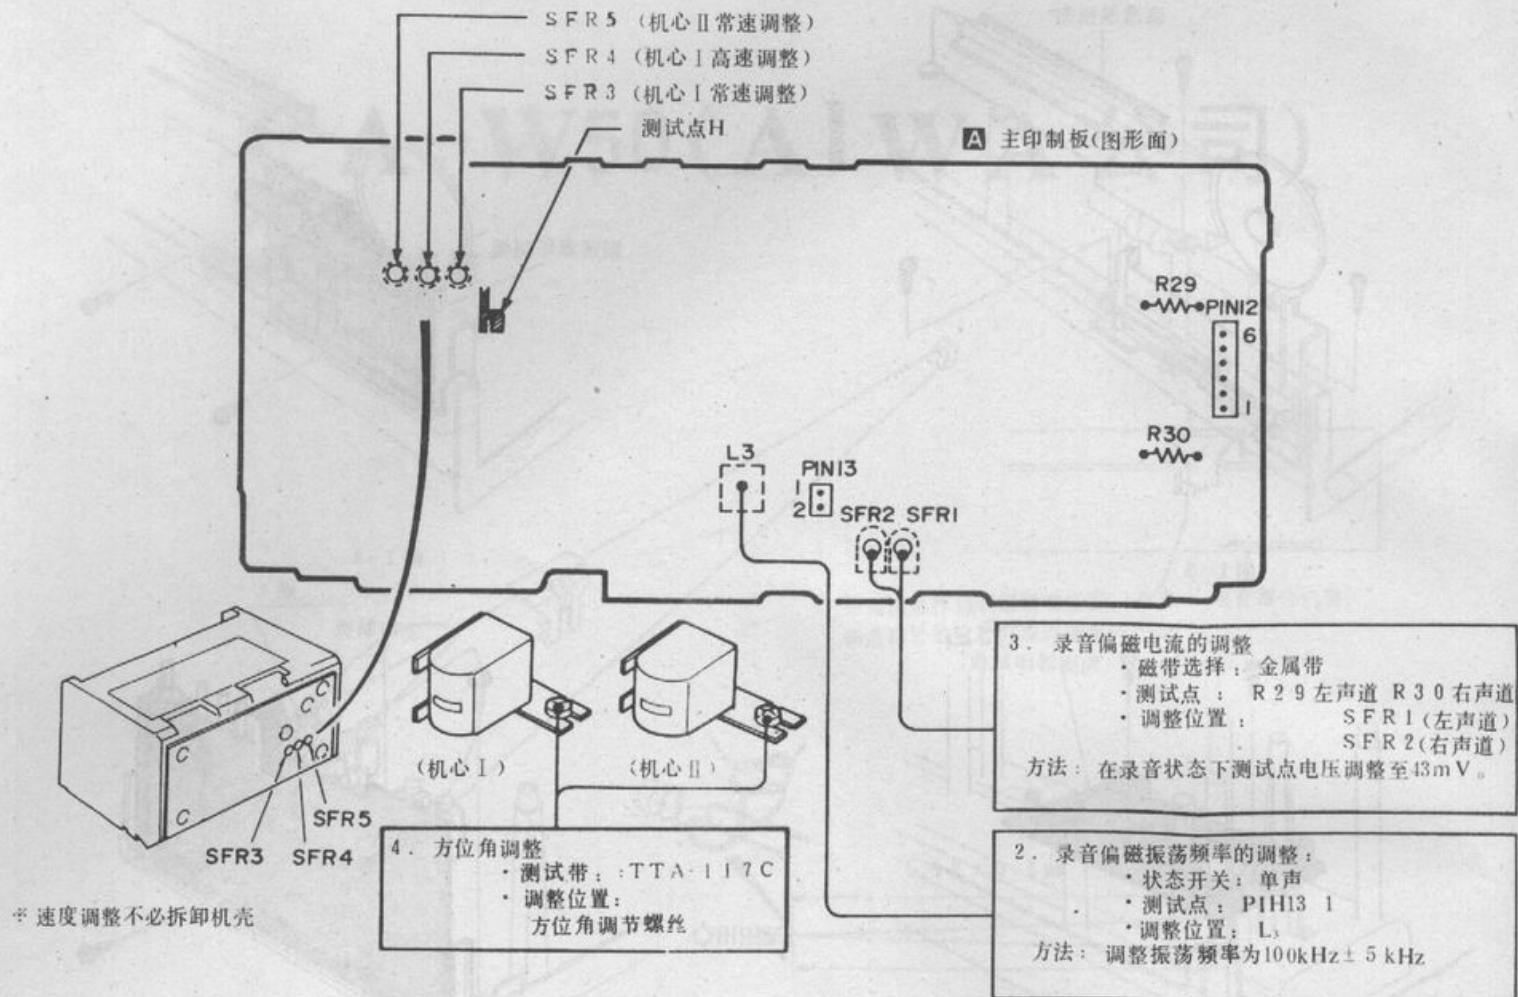


C-A-W50


CA-W50(H、G、F型)调谐器部分电原理

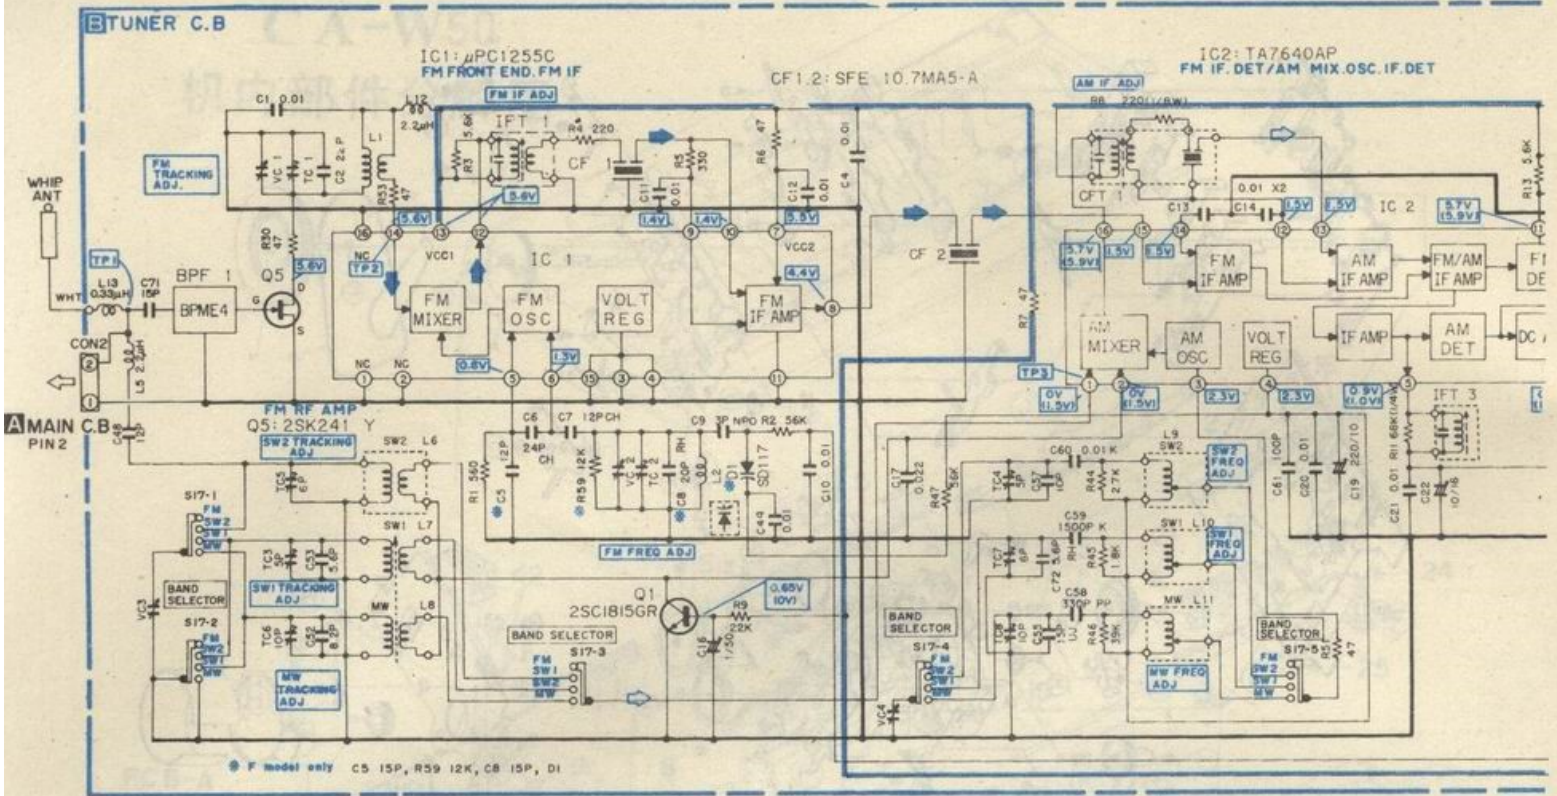


E SUB C.B

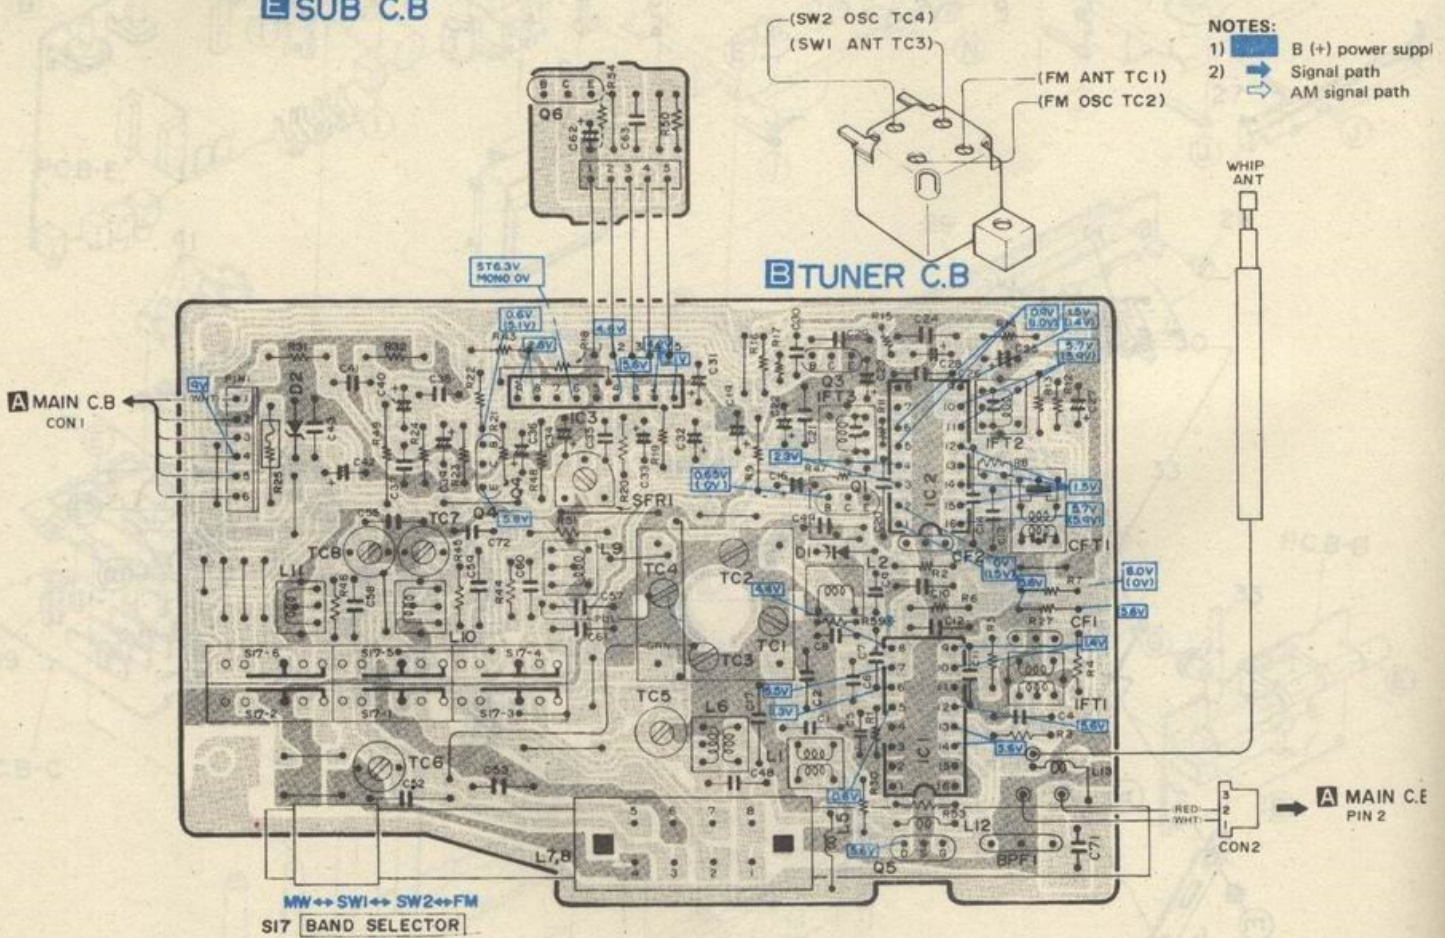


图、印制板接线图及调试说明

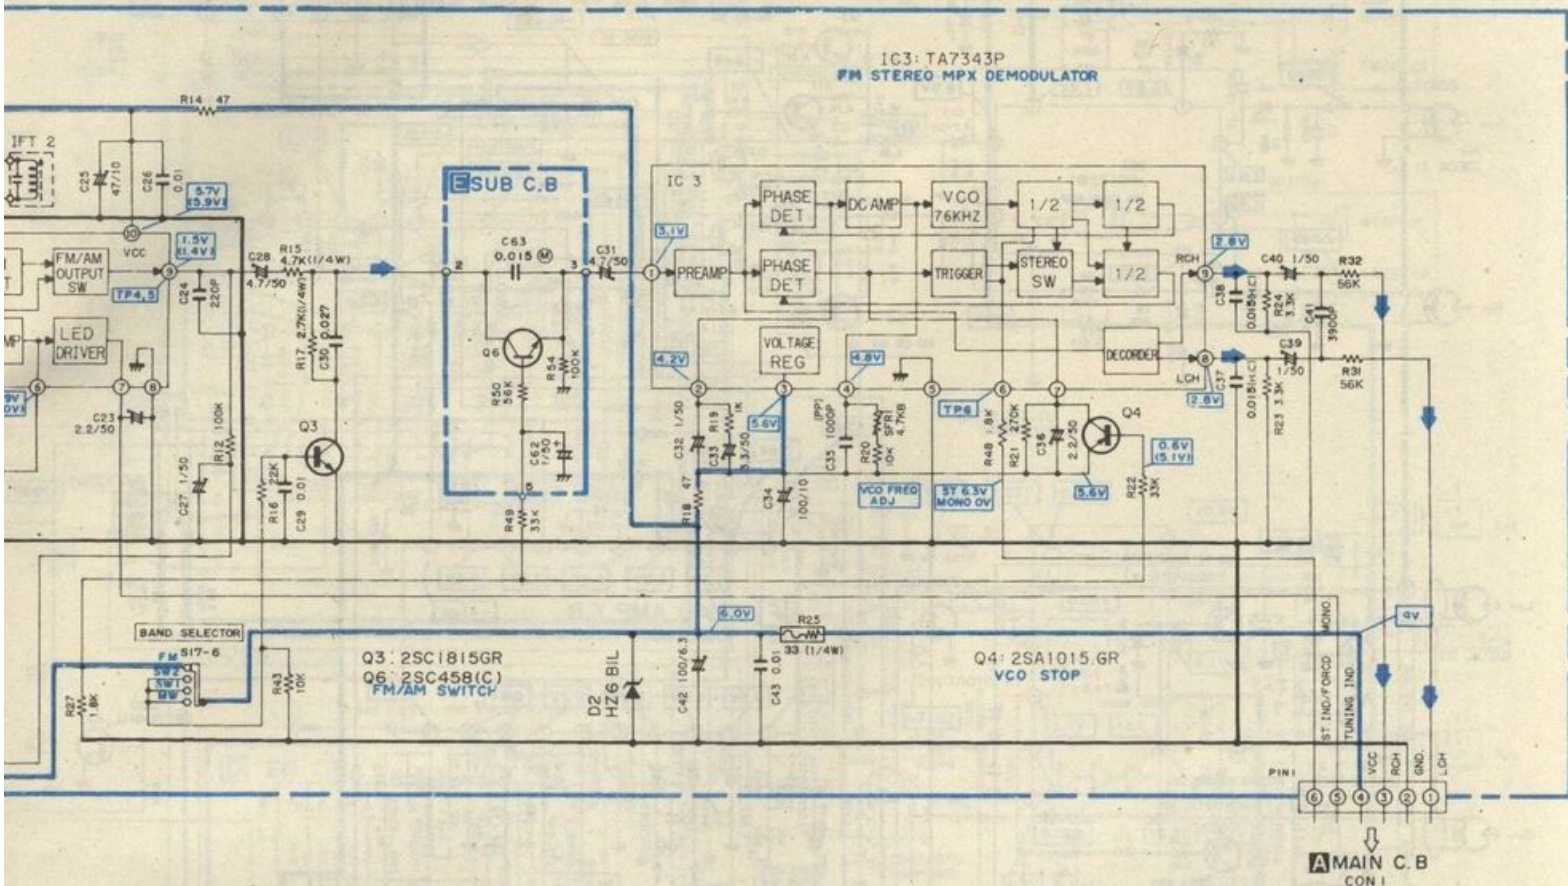


- NOTES (1)  Earth pattern  Others pattern
(2) The voltage is the reference value measured with a tester (20 K ohms/V DC) when there are no signals.
But () is with AM reception.

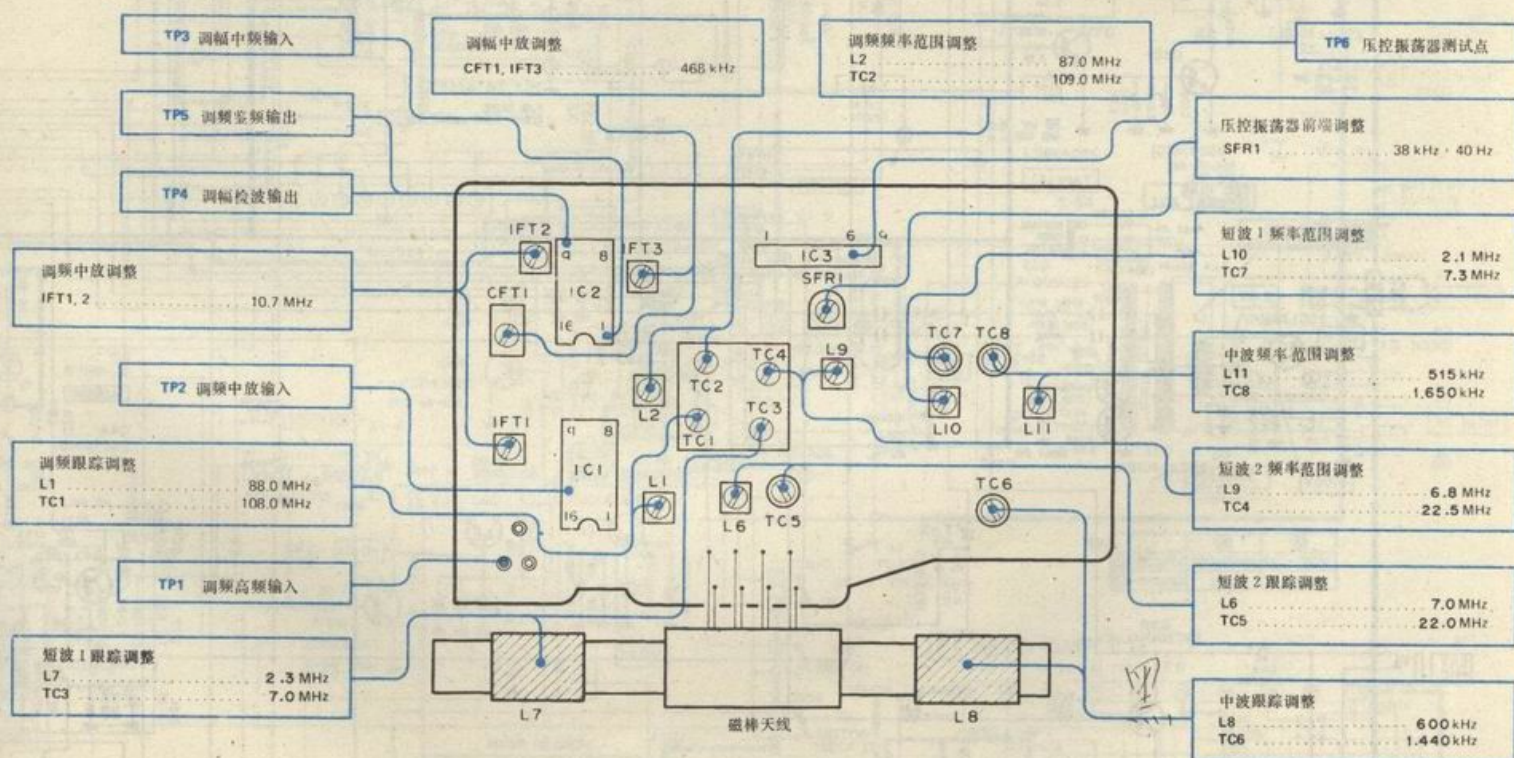


CA-W50 低放部分电原理图

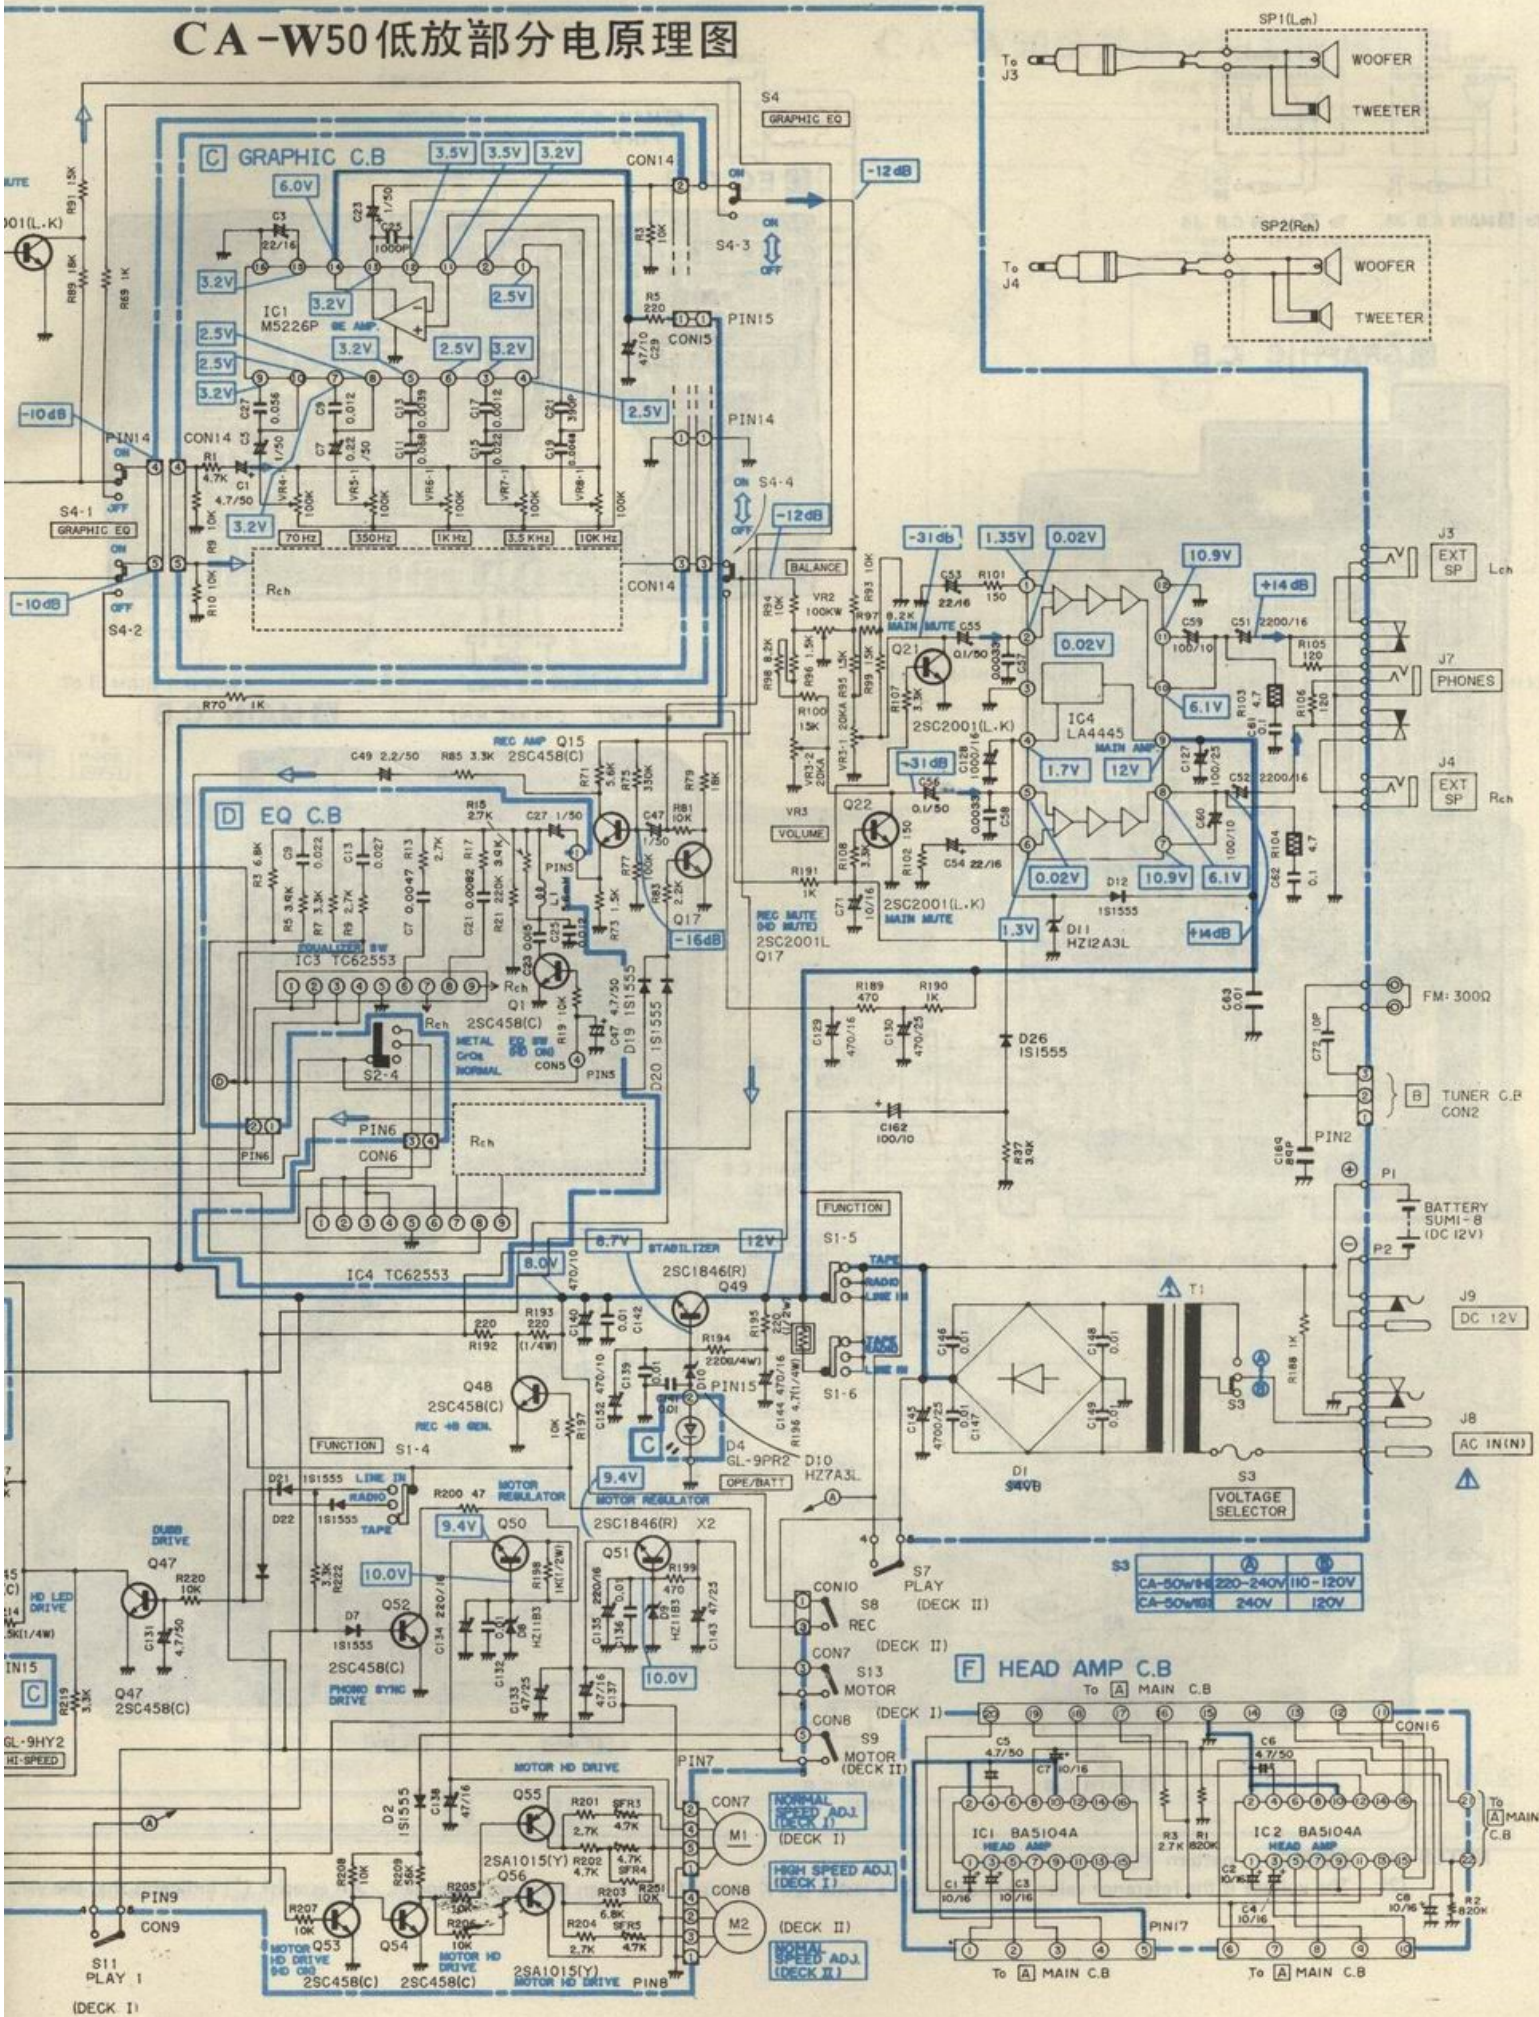

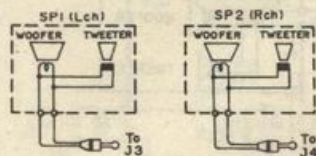


To A MAIN C.B J3 To A MAIN C.B J4

C GRAPHIC C.B


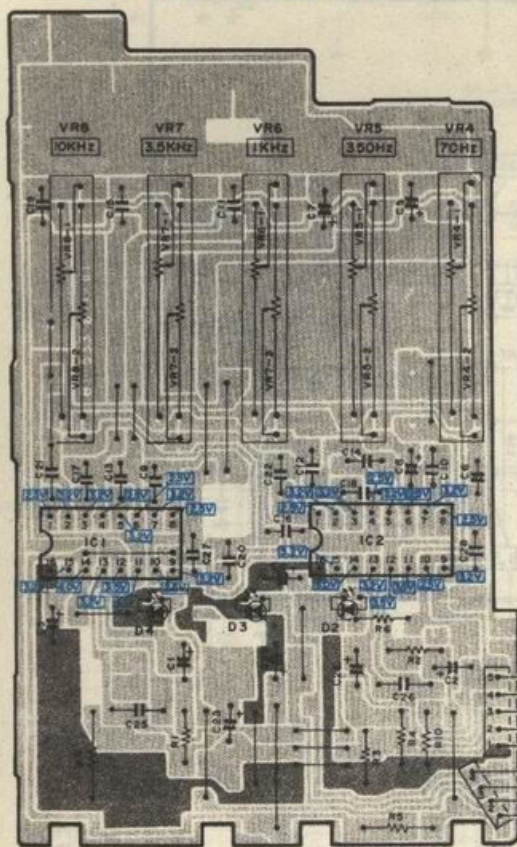


D4 OPE/BATT D3 HI-SPEED D2 DUBBING

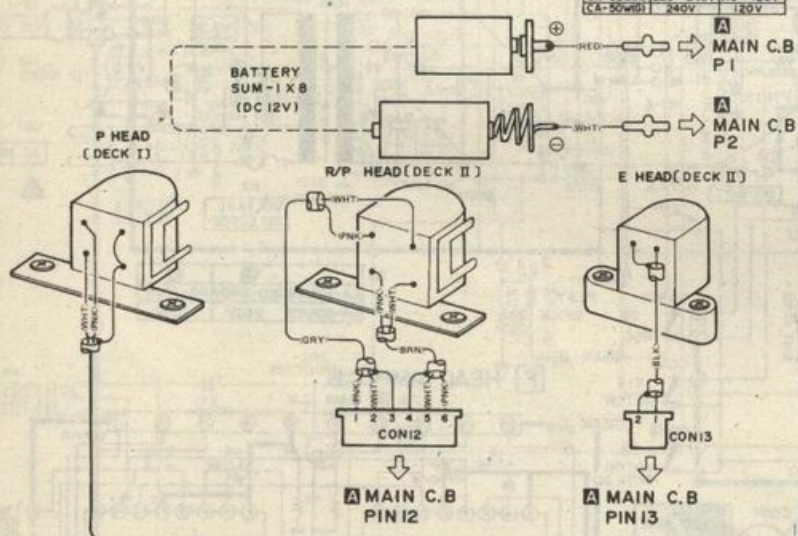


NOTES (1) Earth pattern Others pattern

(2) The voltage is the reference value measured with a tester (20 K ohms/V DC) when there are no signals. An asterisk (*) indicates that the value

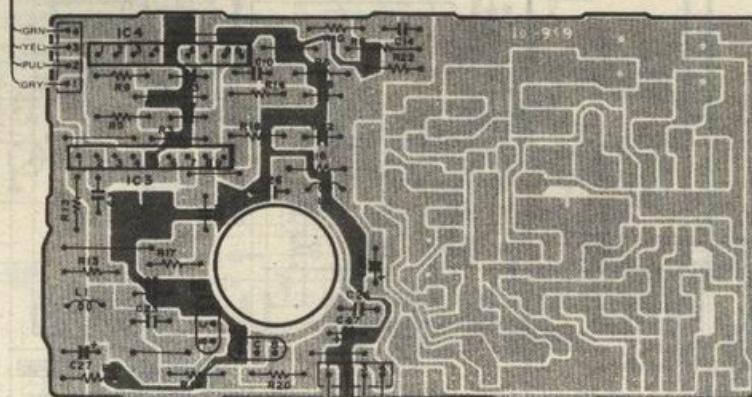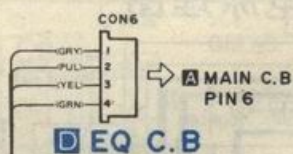

CON5
To A MAIN C.B PIN5
J7 PHONES J6 EXT MIC



A MAIN C.B

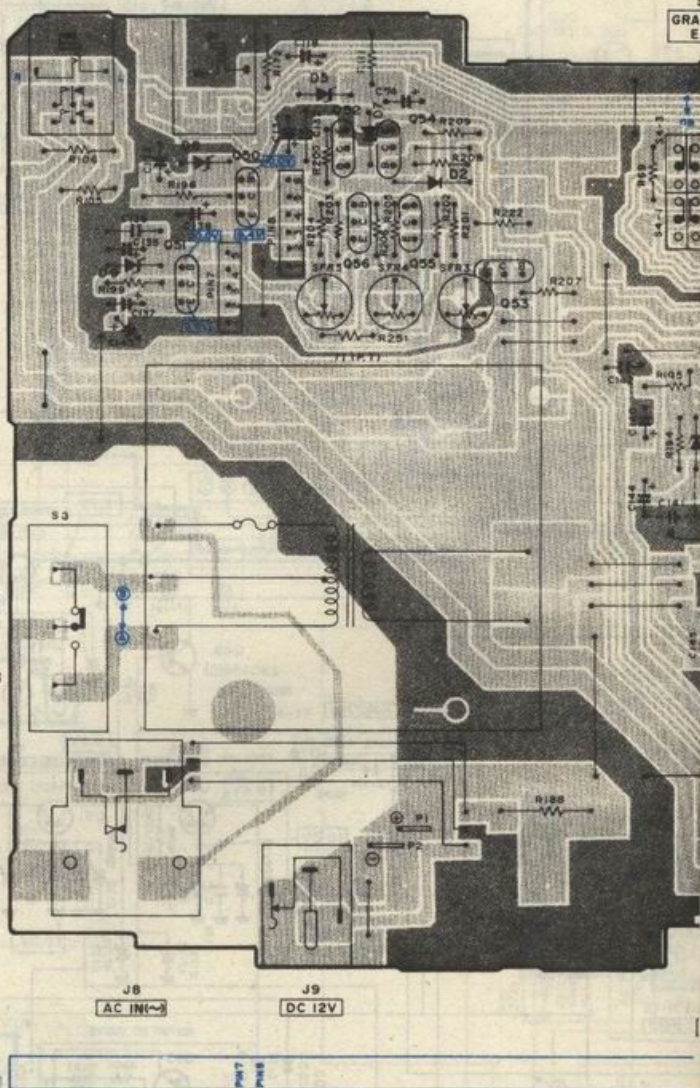

CA-W50低放部分印制板接线图

(DECK I)

(DECK II)

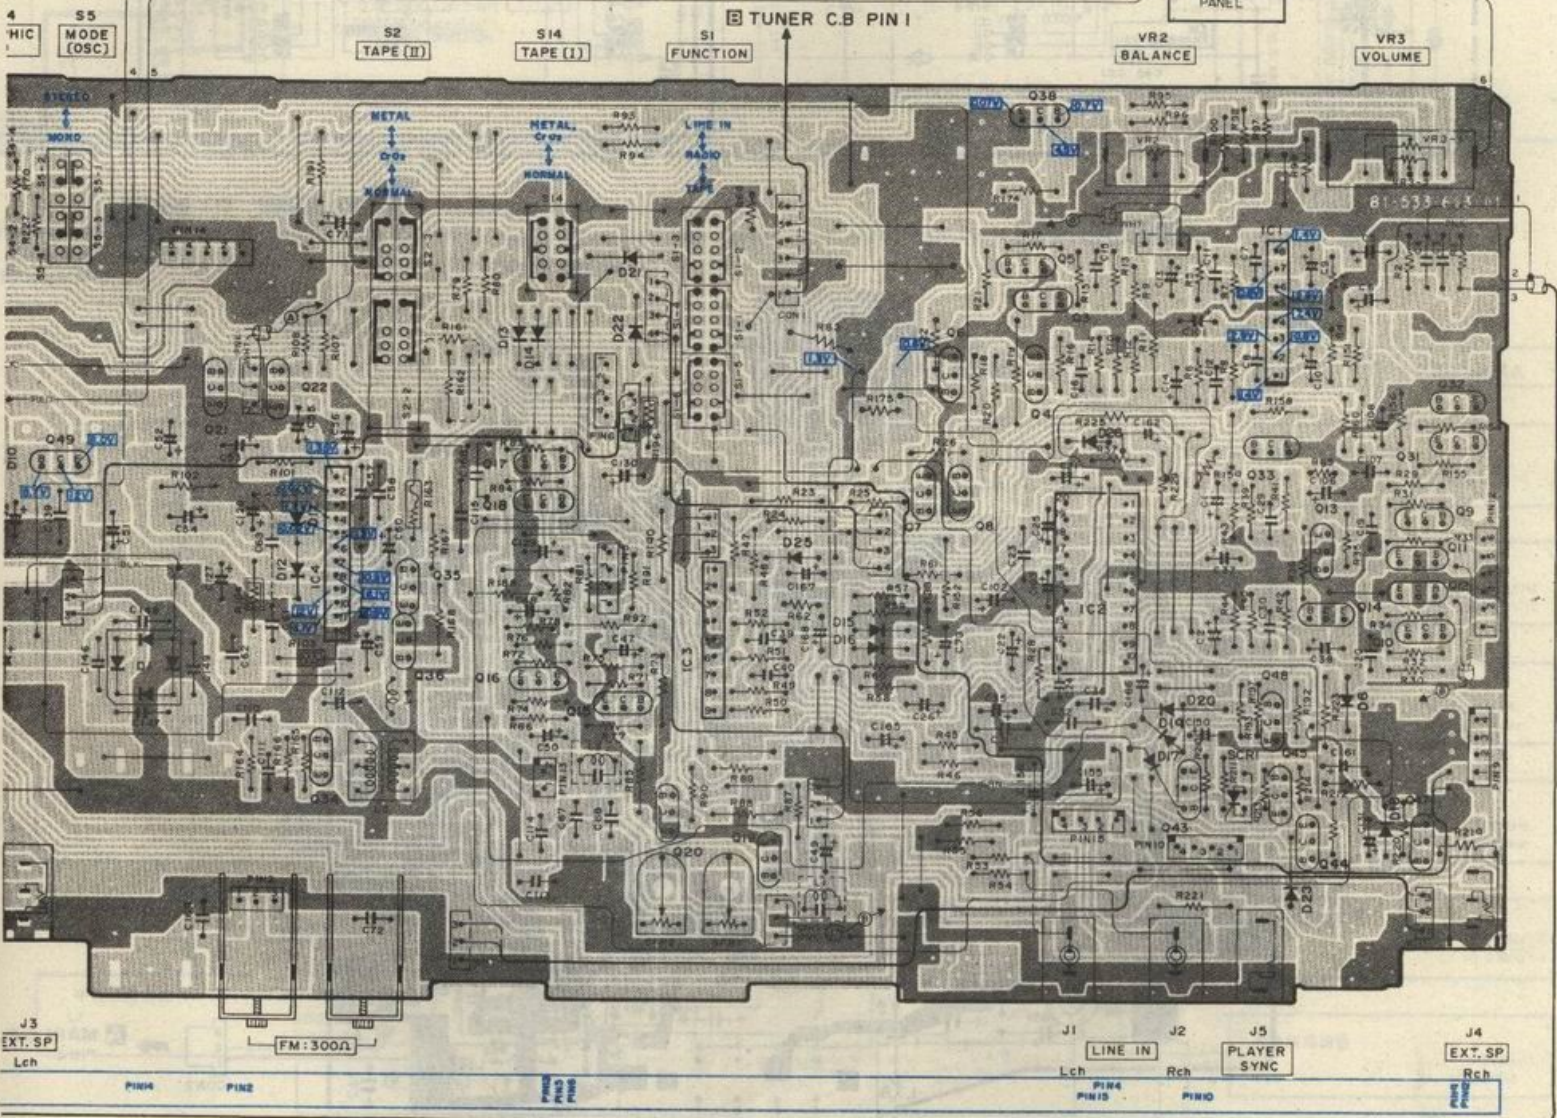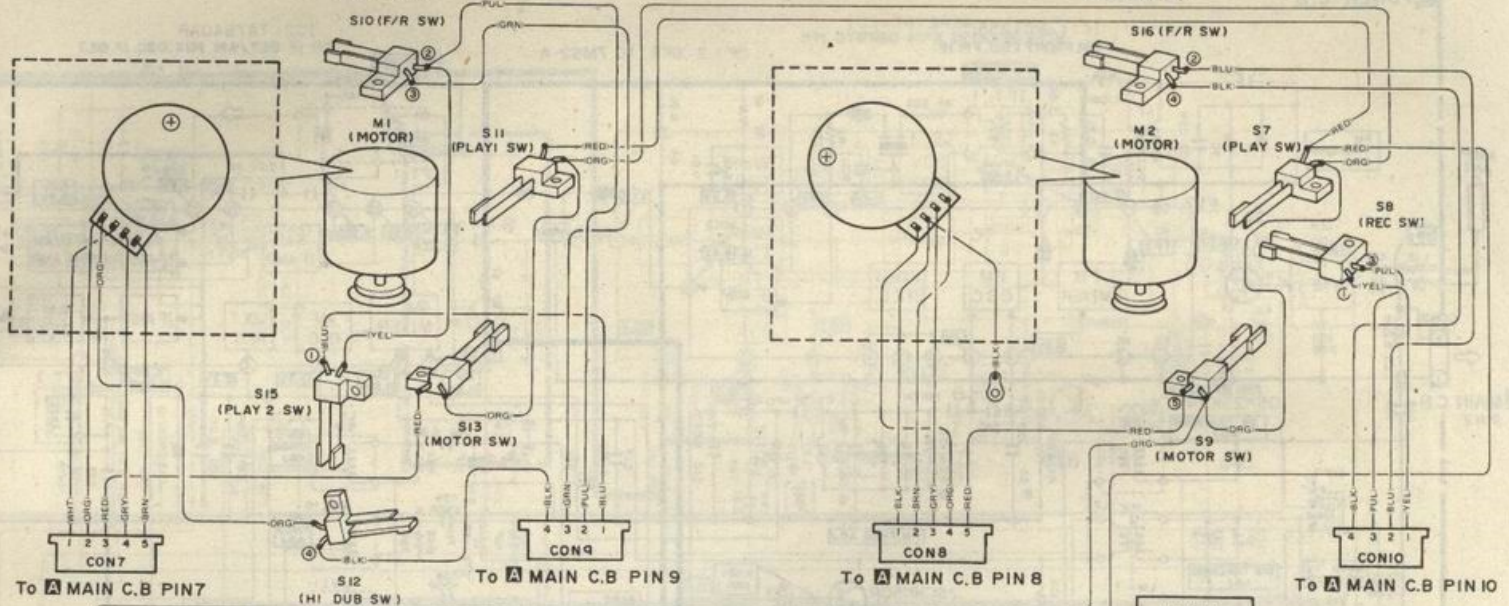

was measured with a vacuum-tube voltmeter during recording.

BTUNER C.B

