

manie In Itz.

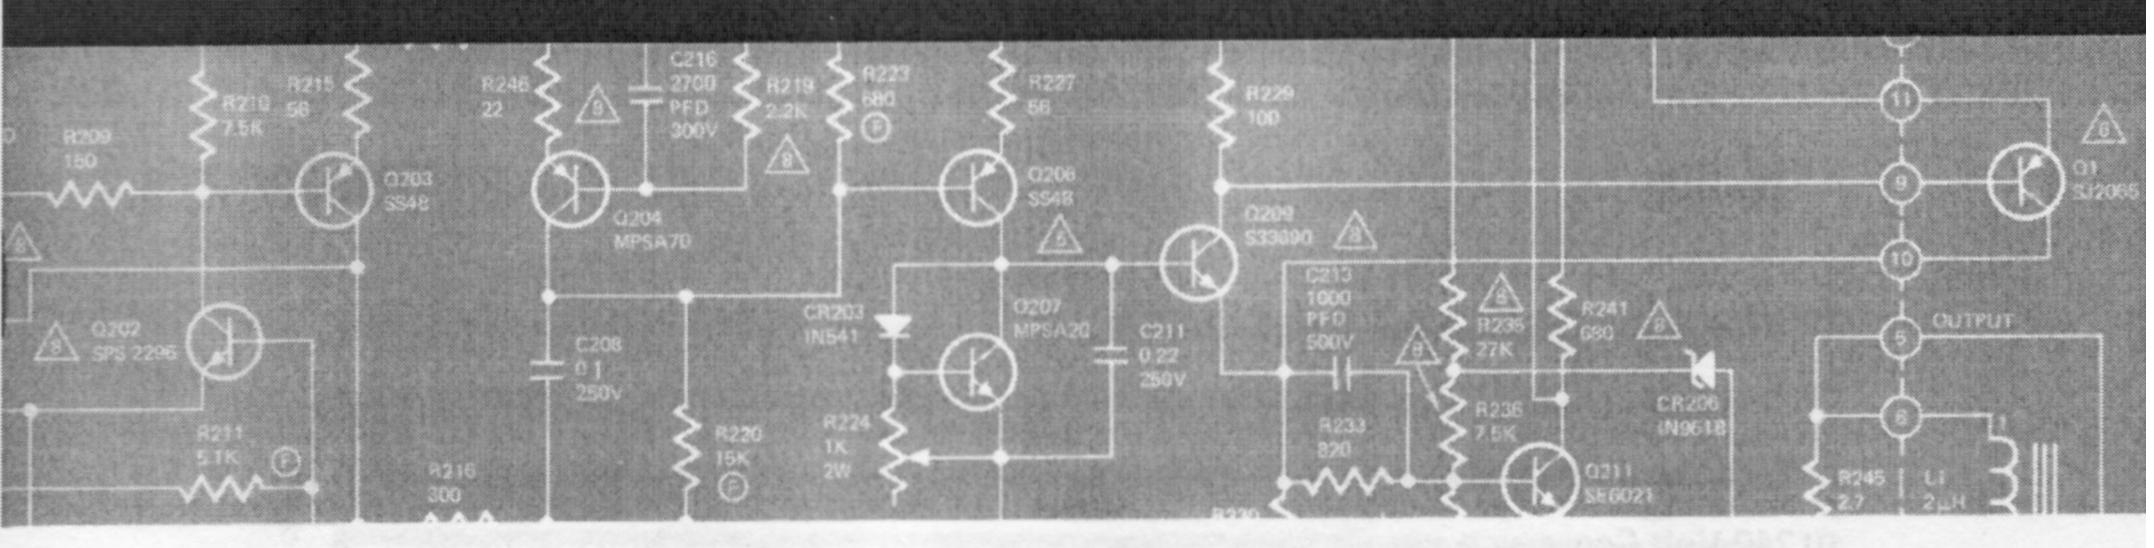

model thirty-two

SERVICE

32

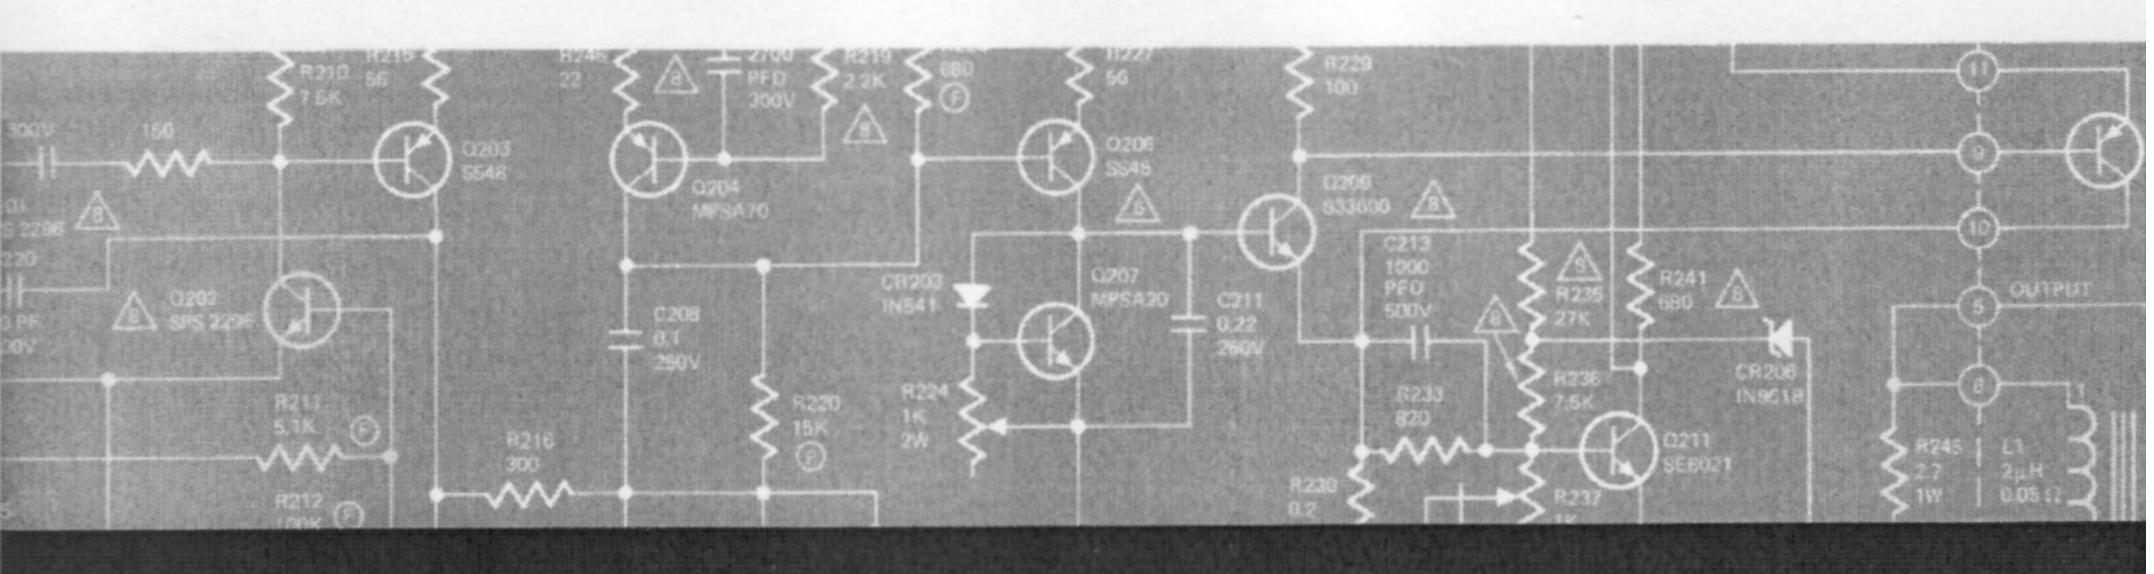

Itereo Console Amplifier

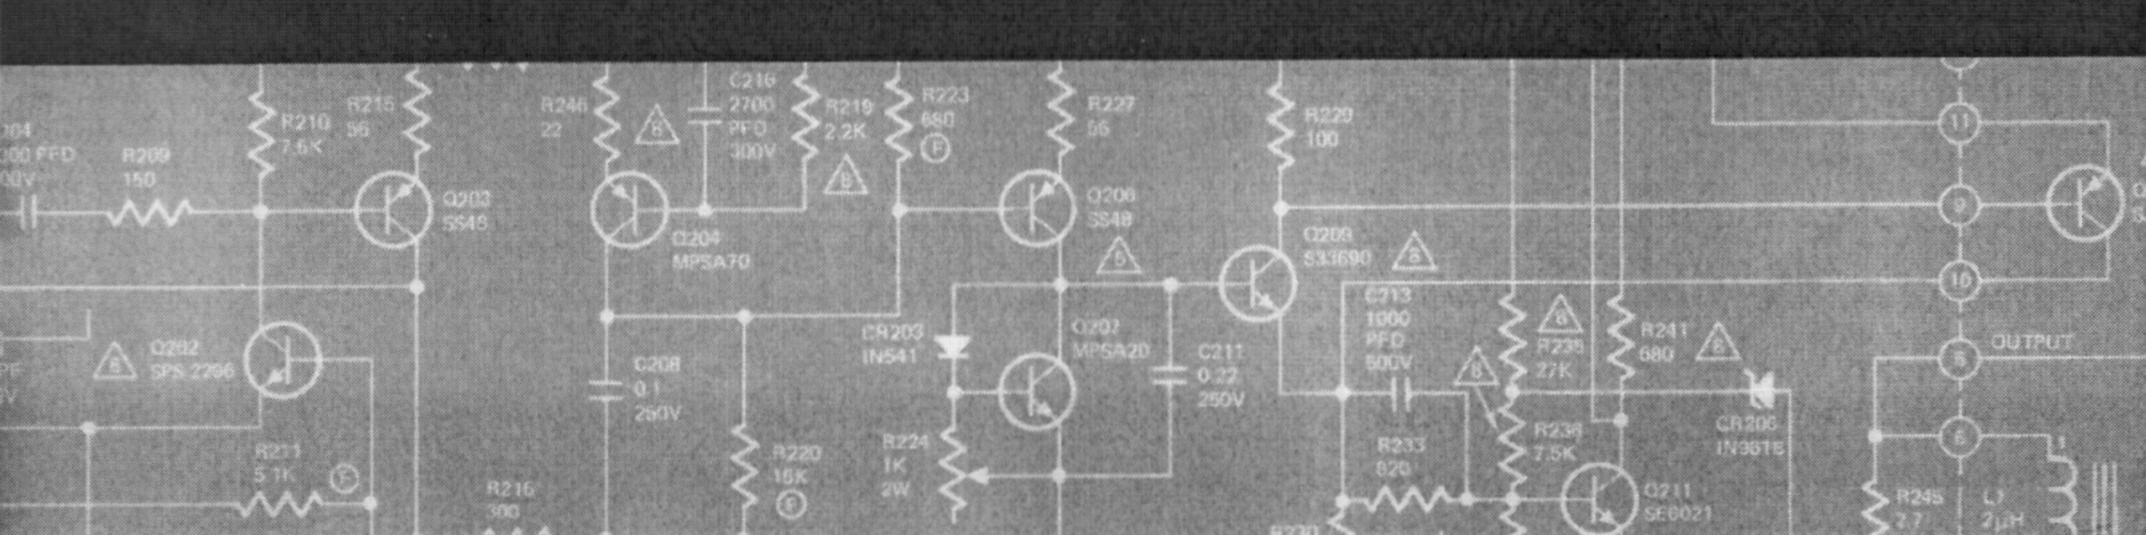


TABLE OF CONTENTS

SECTION	
Introduction	1
Circuit Description	1
Technical Specifications	6
240-Volt Conversion	6
Performance Verification	8
Trouble Analysis	11
Parts List	13
Component Layout Diagrams	15
Schematic	18

LIST OF ILLUSTRATIONS

FIGU	IRE	GE
1.	Amplifier Simplified Schematic	2
2.	Rectifier/Relay Board Simplified Schematic	4
3.	AC Power Control Box Simplified Schematic	10
4.	Amplifier Output Load Box Simplified Schematic	10
5.	Test Equipment Set-Up	12
6.	Power Amplifier Board Component Assembly Diagram Revision 1	15
7.	Power Amplifier Board Component Assembly Diagram Revision 2	16
8.	Rectifier/Relay Board Component Assembly Diagram	17
9.	Model 32 Schematic	18
TAB	LE	GE

Test Equipment Required for Servicing

INTRODUCTION

This service manual is intended for use by authorized warranty stations. The manual contains service information for the Marantz Model 32 Stereo Power Amplifier, manufactured by the Marantz Company, a subsidiary of Superscope Incorporated, Sun Valley, California 91352.

Adjustment, maintenance, and troubleshooting information listed herein should be attempted only by the experienced technician, one knowledgeable in solid state amplifier operation and the use of test equipment. All instructions should be read carefully and understood fully before proceeding with any service.

Symptoms (and their remedies) listed in the trouble-shooting section, are those which might occur in some units. As the Marantz Company becomes aware of other field problems, supplementary service bulletins will be issued to all stations. To improve this service, all problems (and their solutions) not covered in this service manual should be brought to the attention of the National Service Manager at our Sun Valley location.

CIRCUIT DESCRIPTION

The following circuit description will be based on Channel A only. Channel B operates in an identical manner.

AMPLIFIER

The input stage of the amplifier, Figure 1, comprises a differential amplifier (Q201, Q202), and an inverter. The inverter output is applied to the predrivers (Q206, Q208). DC balance between the two pre-drivers is maintained by the dynamic bias network comprising Q207, CR203, R224, and C211.

The output of the pre-drivers is applied to their respective drivers (Q209, Q210). The output from the drivers is applied to their respective power transistors (Q1, Q2).

Output current and voltage regulation are accomplished through a complex network. Excessive voltage levels are detected by Zener diodes CR206 and CR207. Excessive current levels are detected by resistors R230 and R231. Voltages developed by these components are applied to voltage-current (E-1) sensors Q211 and Q212.

When excessive levels are detected, Q211 and Q212 develop clipping signals. These signals are applied to E-1 controls Q204 and Q205. Thus, amplifier limiting is accomplished at approximately 70 watts into 8 ohms.

Feedback for the amplifier is developed at the junction of R230 and R231. The feedback is applied across two loops. Feedback applied across R225 and C210 completes the amplifier loop. Feedback applied across R212 and C206 completes the loop for the entire power amplifier section.

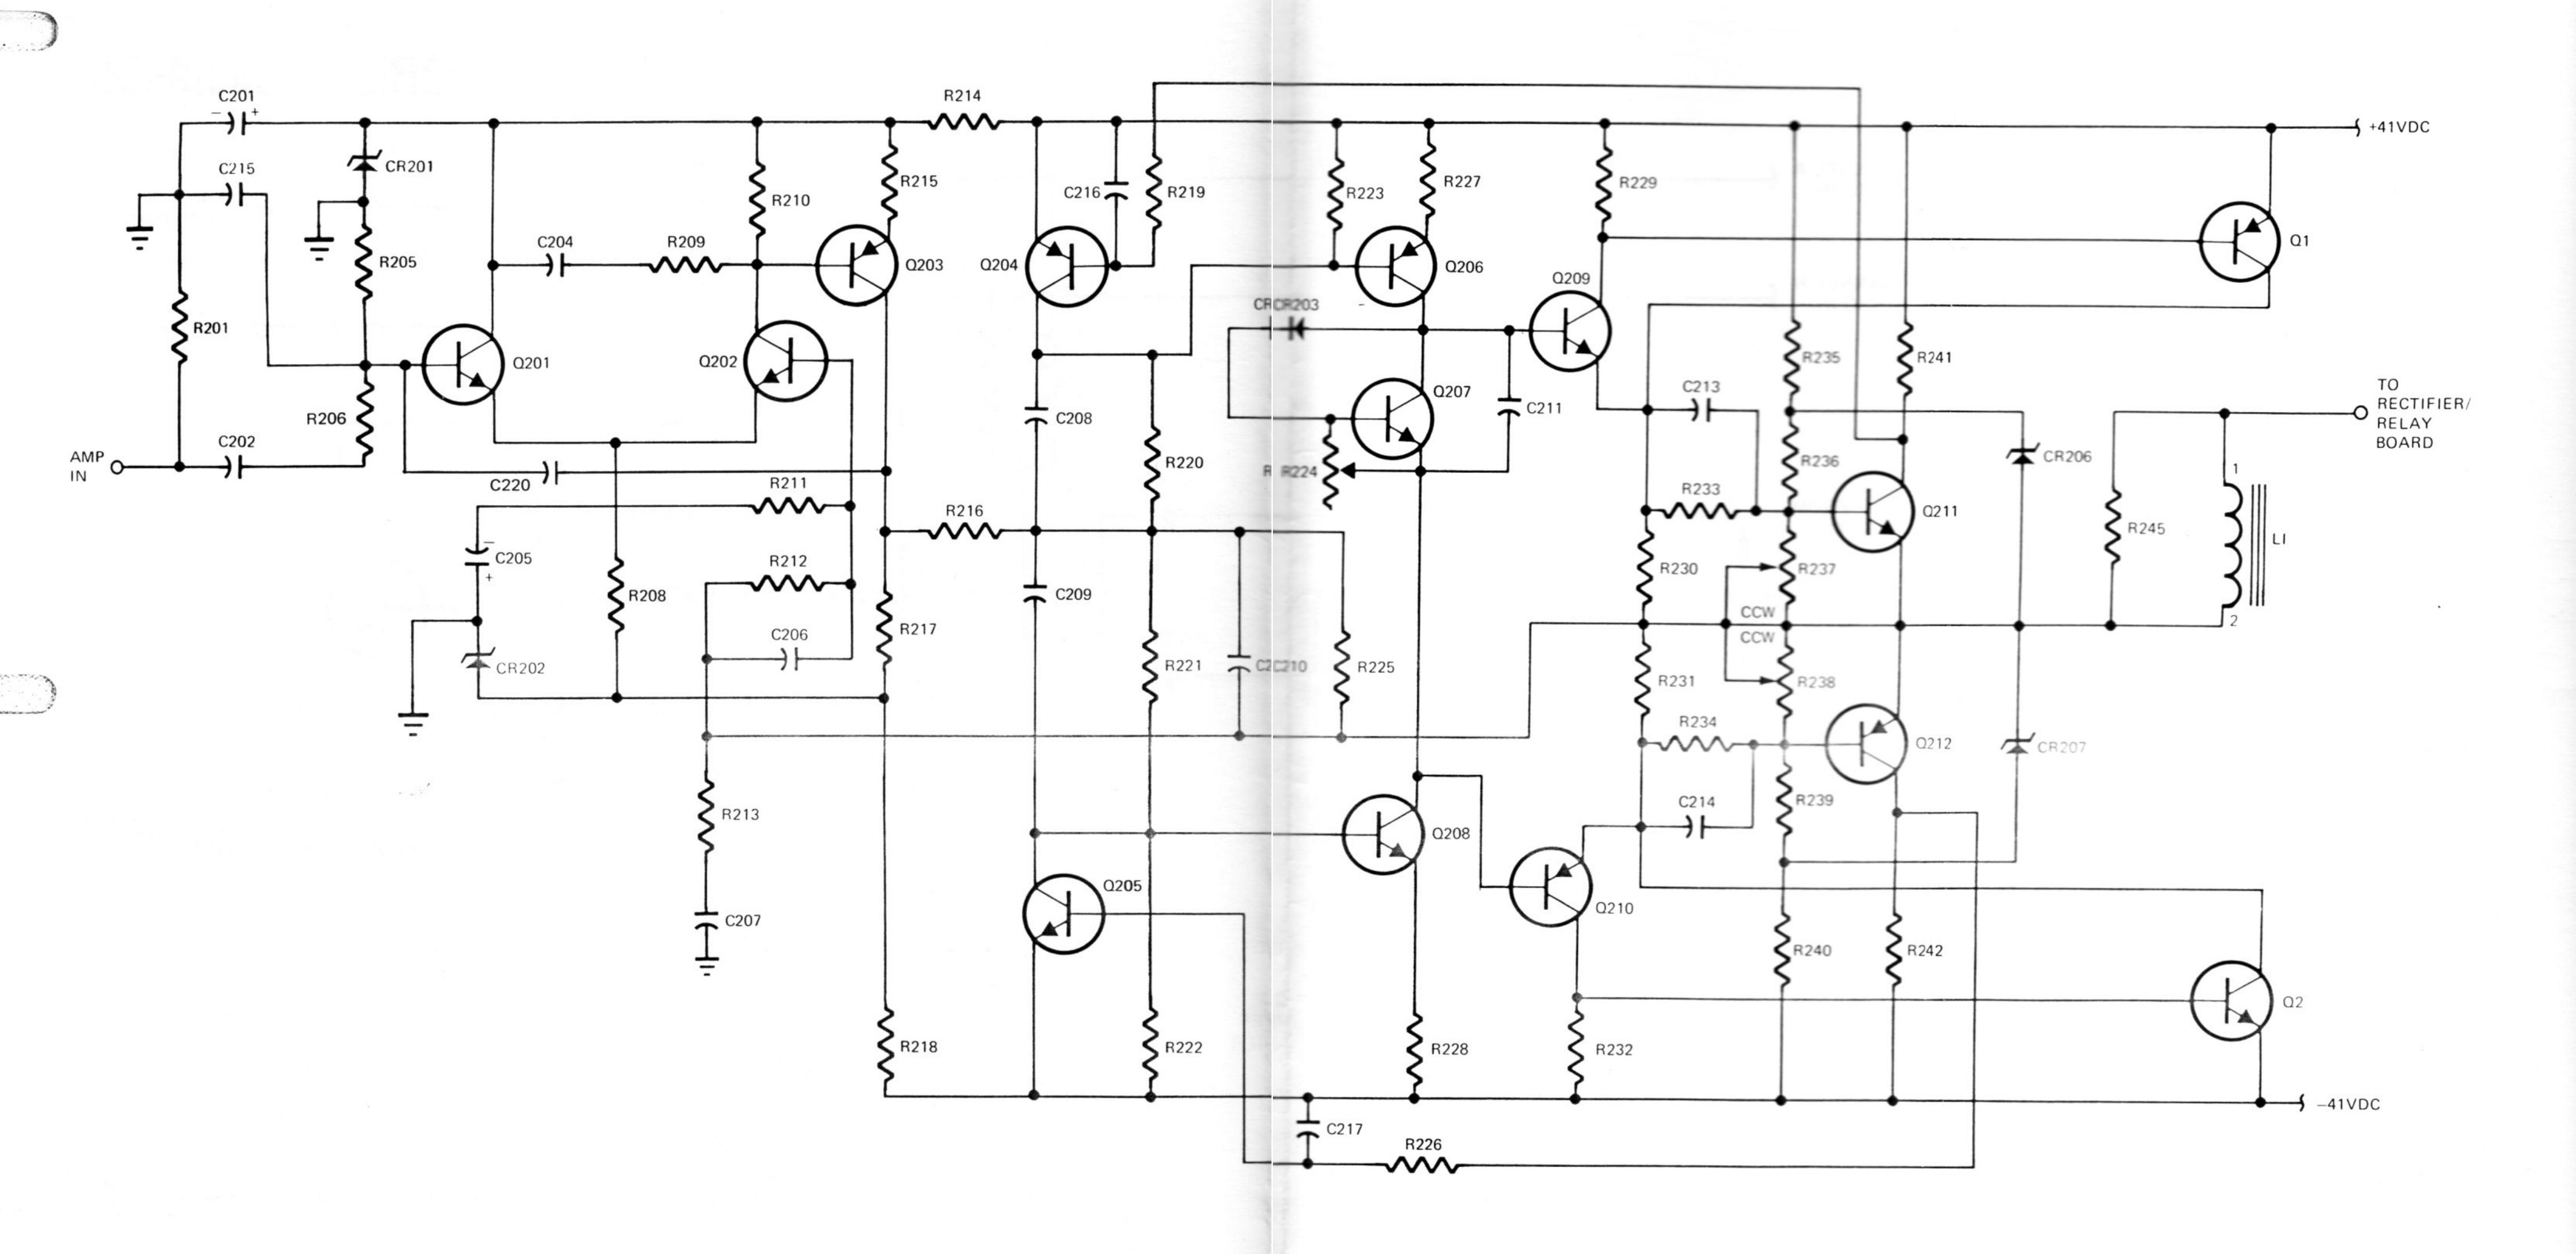



Figure 1. Amplifier Simplified Schematic.

RECTIFIER-RELAY BOARD

menosiny.

The output of the power amplifier is applied to the wipers of relay K301 on the rectifier relay board, Figure 2. Relay K301 energizes after a minimum delay of two seconds after turn on. The length of the delay is a factor of the time constant of R306, R309, and C302. This delay at turn-on is to prevent any transient surges from reaching the output terminals. Additionally, resistors R302 and R305 sample the audio output signals. Should a constant DC level over +4.5 volts, or a high amplitude signal below 10 Hz be present, Q301 will turn on, shorting the base of Q303 to ground. C302 begins to discharge and K301 de-energizes. If a constant DC level over -4.5 volts is present, the voltage drop across R304 bucks the voltage present at the base of Q303 and K301 de-energizes. The output from K301 is applied to the SPEAKER TERMINALS.

Sixty volts AC is applied to CR301 which develops the +41 and -41 volts for the power amplifier board. CR302 and CR303 develop the positive voltage to energize K301.

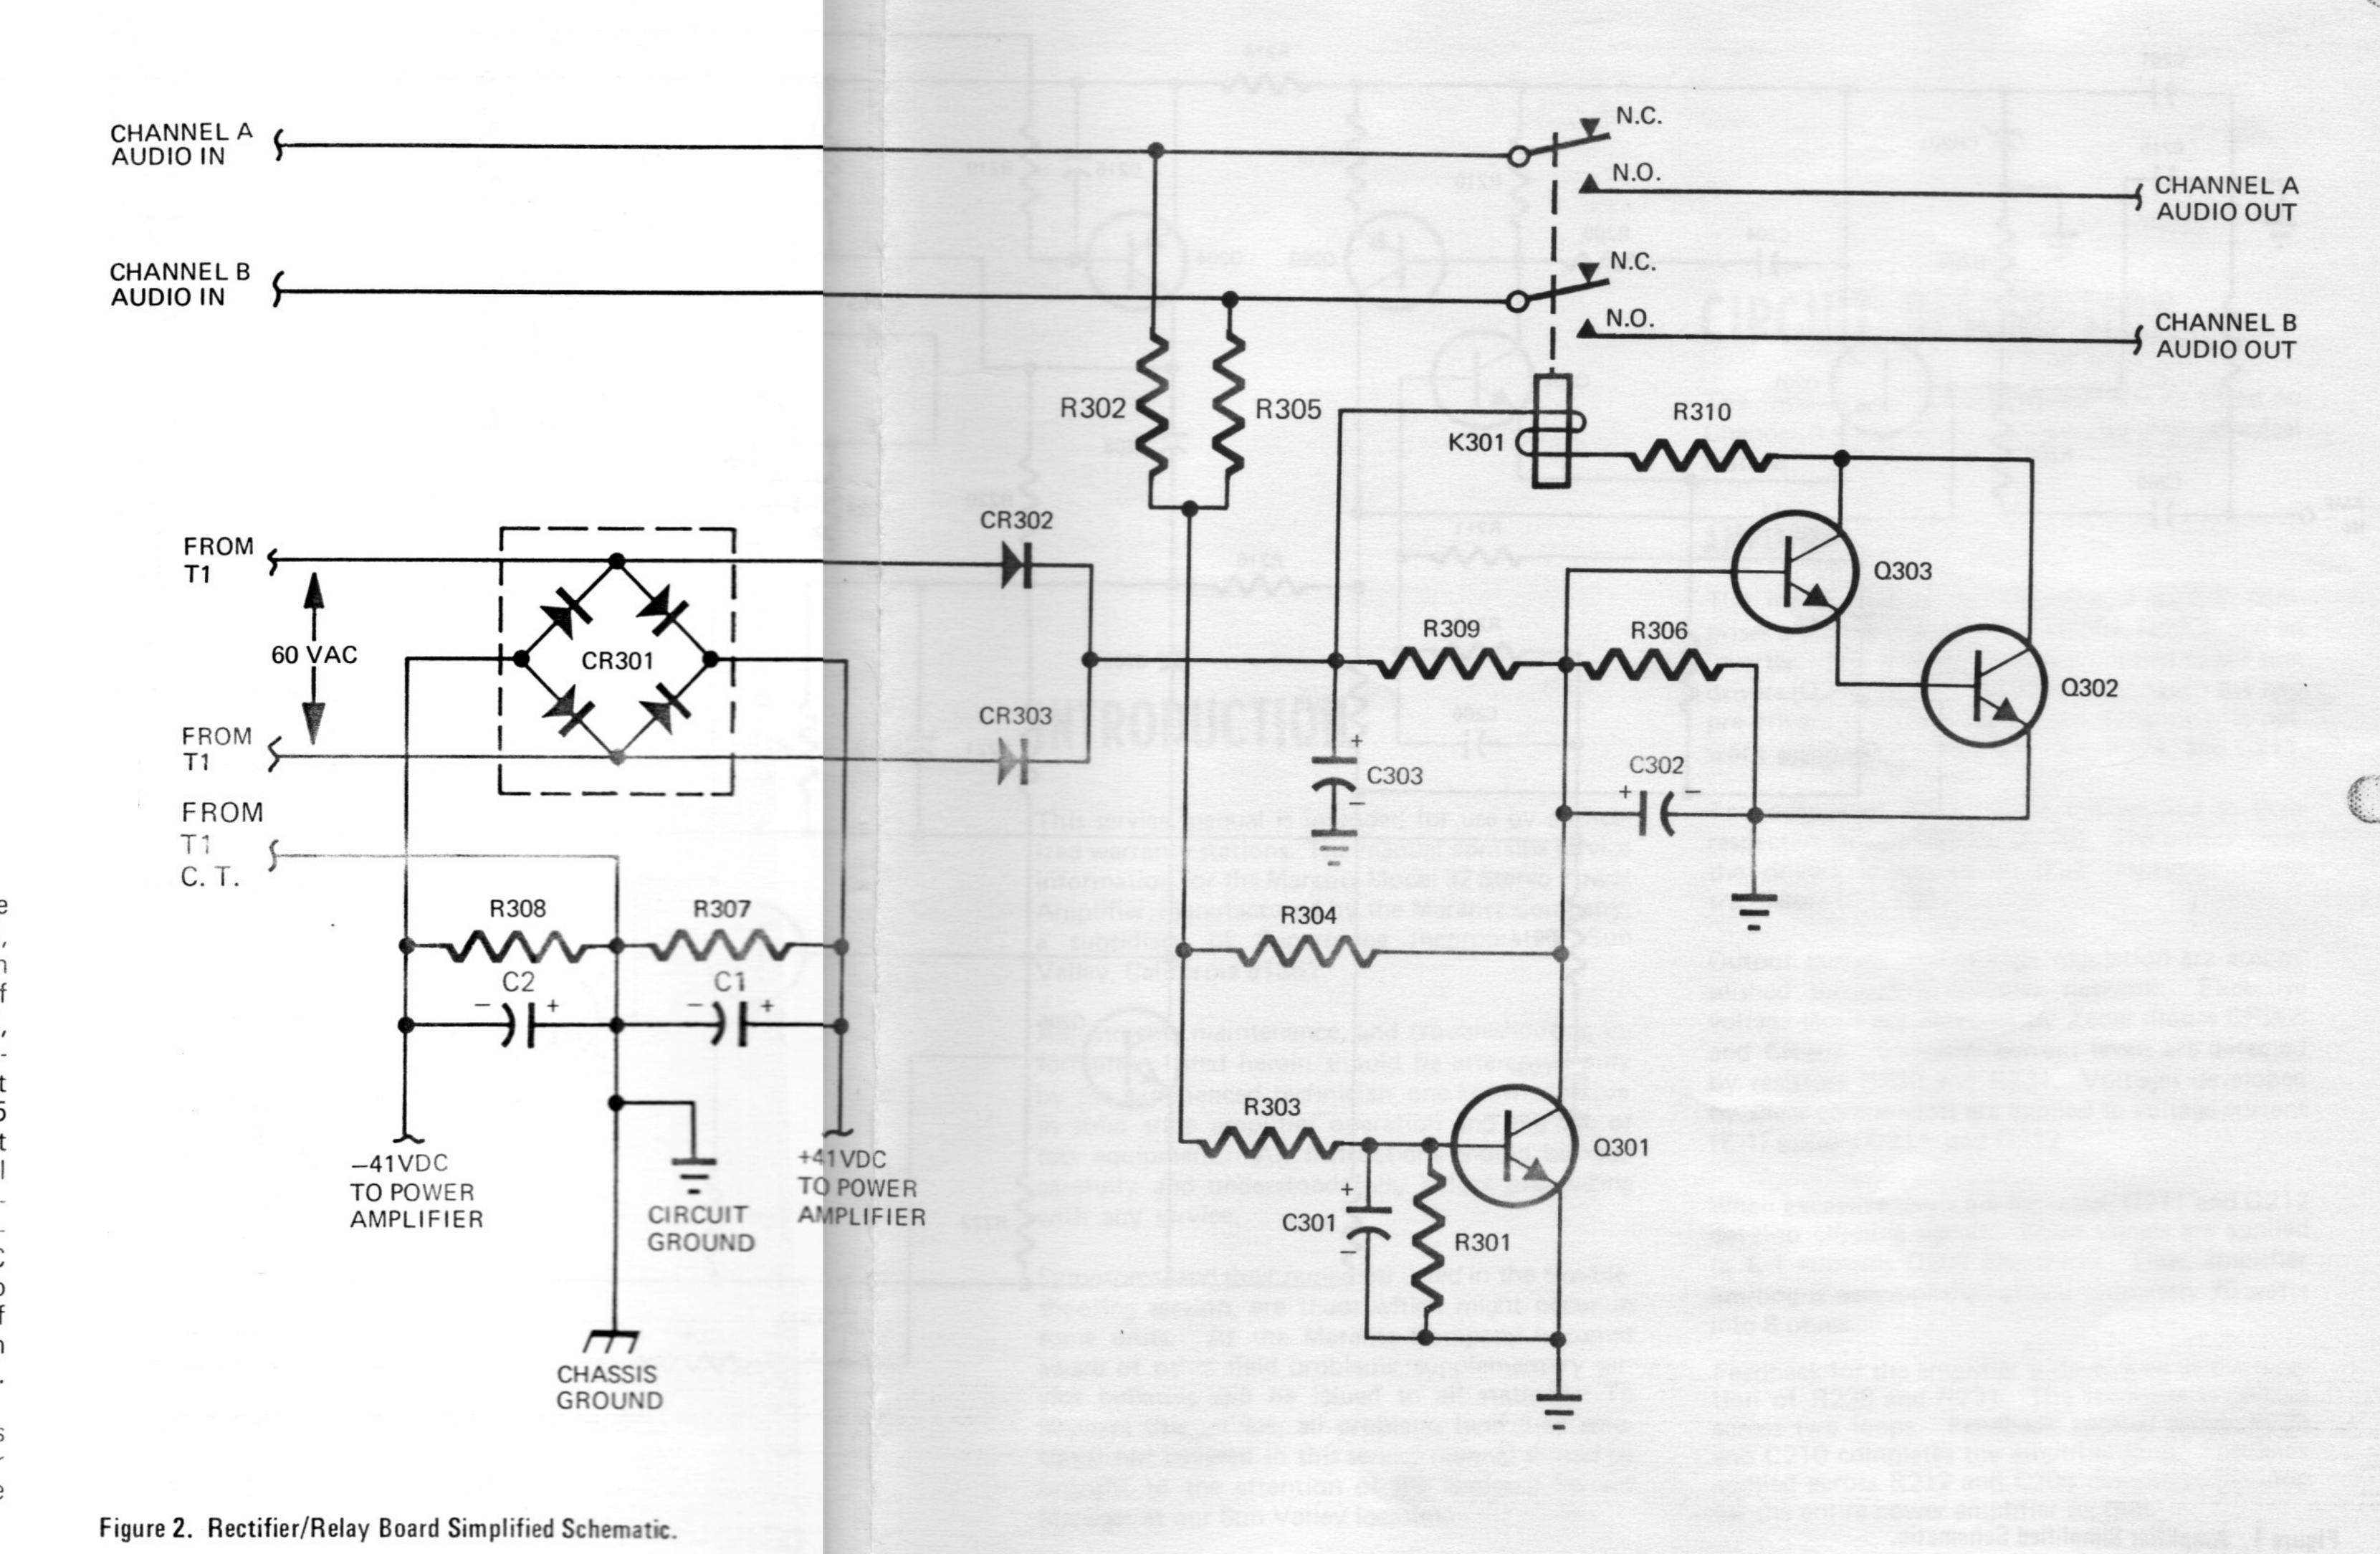

TECHNICAL SPECIFICATIONS

Power Output (each channel, both channels driven, at rated distortion, 20 Hz to 20 KHz) Load RMS IHF 4 ohms 60W 90W 8 ohms 60W 90W				
16 ohms 30W 45W Total Harmonic Distortion at or below rated power,				
20 Hz to 20 KHz.				
less than 0.15% Intermodulation Distortion				
SMPTE, any combination of two frequencies,				
20 Hz to 20 KHz: less than 0.15%				
Frequency Response				
Input Sensitivity · · · · · · · · · · · · · · · · · · ·				
Input Impedance				
Damping Factor · · · · · · · · · · · · · · · · · · ·				
GENERAL				
Total Noise Better than 100 dB below rated power into 8 ohms				
Power Requirements · · · · · · · · · · · · · · · · · · ·				
Dimensions · · · · · · · · · · · · · · · · · · ·				
Unit Weight				
Shipping Weight				
240 volt AC Conversion Split primary windings permit cary conversion				
Split primary windings permit easy conversion from 120 yells to 240 yells operation				
from 120 volt to 240 volt operation.				

240-VOLT AC CONVERSION

To convert the Model 32 to 240-volt operation, perform the following steps:

- Remove the top cover.
- Remove the remaining screws holding the right hand heatsink in place.
- 3. Remove the heatsink.

NOTE: Do not disconnect wires. Simply lay the heatsink next to the unit.

4. Using the 240-volt AC conversion kit, part number 103-1011-1, attach the standoff terminal, part number 359-1002, to the chassis (in the No. 6 hole between the transformer and the chassis edge) using the 6-32 x 1/8 screw supplied.

- Unsolder the white wire from the fuse holder. Unsolder the black/white wire from J3 pin 2.
- Solder the white and black/white wire to the standoff terminal.
- 7. Re-attach the heatsink and top cover.
- Replace the 4 amp, 250V fuse in the unit with the 3 amp, 250V fuse, part number 451-1001, supplied with the conversion kit.
- Remove the protective back from the caution label and place it on the top cover.

The Model 32 is now ready for 240-volt operation.

TEST EQUIPMENT REQUIRED FOR SERVICING

Table 1 lists the test equipment required for servicing the Model 32 Stereo Power Amplifier. The watt-meter, AC voltmeter, and variac may be assembled as a test fixture as shown schematically in Figure 3, and the load resistors and AC ammeter may be assembled into a second test fixture as shown in Figure 4.

Item	Manufacturer and Model No. (or equivalent)	Use
Distortion Analyzer	Hewlett Packard, Model 331A or 333A	Measures distortion and voltage of amplifier output.
Audio Oscillator	Weston Model CVO-100P (NOTE: Less than 0.02 percent residual distortion is required.)	Sinewave and squarewave signal source.
Oscilloscope	Tektronix, Model 503; Data, Model 555	Waveform analysis and troubleshooting
VTVM	RCA Senior Volt-Ohmyst, Model WV-98C	Voltage and resistance measurements.
AC Wattmeter	Simpson, Model 390	Monitors primary power consumption of amplifier.
AC Ammeter (0 to 10 amps)	Commercial Grade	Monitors amplifier output under short circuit condition.
Line Voltmeter (0 to 150 vac)	Commercial Grade	Monitors potential of primary power to amplifier.
Variable Autotransformer (0 to 140 vac, 10 amps)	Powerstat, Model 116B	Adjusts level of primary power to amplifier.
Shorting Plug	Use phono plug with 600 ohms across center pin and shell.	Shorts amplifier input to eliminate noise pickup.
Power Supply Bleeder Resistor (10 ohms at 1 W)	Commercial Grade	Discharges power supply filter capacitors prior to disassembly or resistance measurements.
Output Load Resistor (8 ±0.5%, 250 W)	Commercial Grade	Provides 8-ohm load for amplifier output termination.
Output Load Resistor (4 ±0.5%, 250 W)	Commercial Grade	Provides 4-ohm load for amplifier output termination.
Output Load Capacitor (0.5 mfd)	Mylar	Provides capacitive load for instability checks.
AC Power Control Box	Optional Item, Fabricate in accordance with Figure 3.	Monitors and controls primary power for amplifier.
Amplifier Output Load Box	Optional item. Fabricate in accordance with Figure 4.	Provides various amplifier loads and can monitor shorted output.

PERFORMANCE VERIFICATION

TEST PROCEDURE

A. Test Equipment

Refer to Table 1 for required test equipment.

B. Preliminary Procedures

 Set up the test equipment as shown in Figure 5, with the instrument controls set in the following positions:

Off Line Switch Variable-Line Switch Variable Watt Meter Switch On Variac 0 (Fully CCW) Load - Resistive Off Off Load — Capacitive Scope Output 5V Range Minimum Scope Gain AC Voltmeter 30V Range 20 mv/cm Scope Vertical Scope Horizontal, 1 ms/cm Line Sync DC Scope Input Scope Trace Centered (Input Shorted)

- Connections, between the output terminals of the Model 32 and the resistive load, must have negligible resistance with respect to the resistance of the load itself. Applicable resistance adds to the total load, resulting in inaccurate measurement of output power.
- 3. Insert a shorting plug in each input jack of the Model 32.
- 4. Remove the top cover of the Model 32.

C. DC Balance Test

- Connect oscilloscope to Channel A output terminals of the Model 32.
- Turn Line Switch to ON and adjust variac to 120 vac.

- After relay energizes, adjust Channel A (Left Hand Heatsink) amplifier board potentiometer for an indication of a "line" zero (i.e., 0V ±50 mv) as indicated on the oscilloscope.
- 4. Repeat test for Channel B (Right Hand Heatsink).

D. Total Hum and Noise Test

- Connect the voltmeter across the Channel A output terminals of the Model 32.
- With shorting plugs in the input jacks, the meter should read 0.5 mv or less.
- 3. Repeat test for Channel B.
- 4. Turn Line Switch to OFF and adjust variac to 0 (fully CCW).

E. Bias Adjustment Test

- Preset the bias adjust potentiometer R224
 on each amplifier board fully CCW.
- After discharging the filter capacitors using the bleeder resistor, disconnect all red and blue wires from the capacitor terminals.
- Turn Line Switch to ON and slowly advance variac while observing the voltmeter and wattmeter. The relay K301 should energize at 105 volts or less.
- 4. Turn Line Switch to OFF. Reconnect all red and blue wires to filter capacitors.
- Turn Line Switch to ON and advance variac to 120 volts.
- Observe wattmeter reading. Adjust the Channel A amplifier board potentiometer R224 to increase wattmeter reading to a point halfway between the initial reading and 20 watts.
- Adjust the Channel B amplifier board potentiometer R224 to increase wattmeter reading to 20 watts.
- 8. Turn the Line Switch to OFF. Remove shorting plugs from the input jacks.

NOTE: AC line voltage must be maintained at 120 volts at all times during remaining tests.

F. Maximum Power Output

- Connect the audio oscillator to the input jacks of the Model 32. Set the audio oscillator frequency to 20 KHz.
- Connect the distortion analyzer across the Channel A output load (4 ohms), set the analyzer on the 30 vac scale.
- 3. Turn the amplifier board potentiometers R237 and R238 fully CCW.
- Turn Line Switch to ON. Turn the analyzer and audio generator to ON. Increase the audio oscillator output until the analyzer indicates 20.0 vac.
- Adjust potentiometer R237 clockwise until the positive peak of the waveform, as observed on the oscilloscope, just begins to clip.
- 6. Adjust potentiometer R238 clockwise until the negative peak just begins to clip.
- 7. Change output load to 8 ohms. Set analyzer sequentially to 20 Hz, 2 KHz, and 20 KHz. Output voltage should not be less than 21.9 volts.
- Turn Line Switch to OFF. Arrange setup for Channel B and repeat steps 4 through 7.

G. Relay Operation

- Turn Line Switch to OFF. Wait approximately 2 minutes.
- 2. Turn Line Switch to ON. The elapsed time between the instant the power is applied until the relay energizes should be between two and ten seconds.
- 3. Set Audio Oscillator to 5 Hz with output reduced to minimum.
- Increase Audio Oscillator output slowly, watching the voltmeter. The relay should de-energize between 10 and 22 volts.

H. Harmonic Distortion Test

- Set Audio Oscillator frequency to 20 Hz and adjust level for 22V output. Set Distortion Analyzer to SET LEVEL — MANUAL mode. Adjust sensitivity for full scale reading on 0-1 scale.
- 2. Switch Distortion Analyzer to DISTOR-TION mode and monitor Channel A output. Total harmonic distortion should be no greater than 0.1%.
- 3. Repeat test for Channel A with Audio Oscillator frequency set at 20 KHz.
- Repeat test for Channel A at 20 Hz and 20 KHz with 0.5 MFD across load. Total harmonic distortion should not exceed 0.15%. Verify absence of parasitic oscillation.
- 5. Perform steps 2, 3, and 4 for Channel B.

J. Short Circuit Test

CAUTION: Do not perform this test if amplifier shows any sign of parasitic oscillation.

- With amplifier working into an 8 ohm load, set Audio Oscillator level to 22 volts at 200 Hz.
- Short out each channel with Ammeter.
 Reading should not exceed 4.5 amperes.

K. Frequency Response Test

- Using 8 ohm load and Audio Oscillator level at 22 volts, sweep frequency from 20 Hz through 20 KHz.
- 2. Output voltage should stay between 20.67 vac and 23.61 vac.

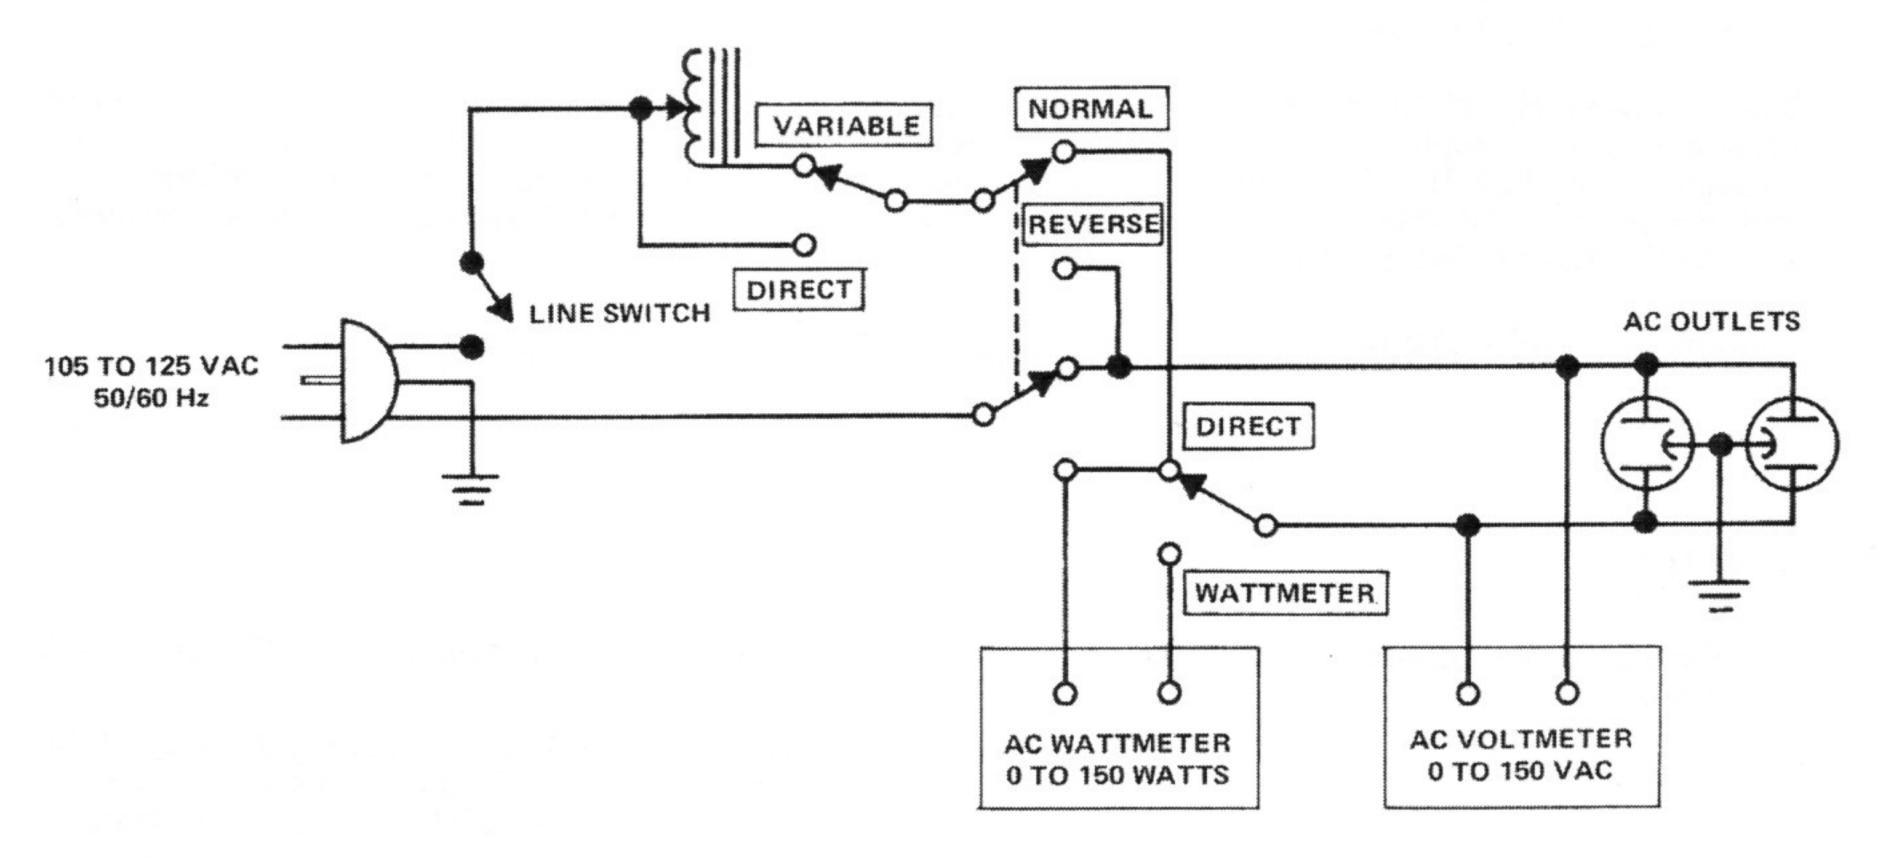


Figure 3. AC Power Control Box Simplified Schematic.

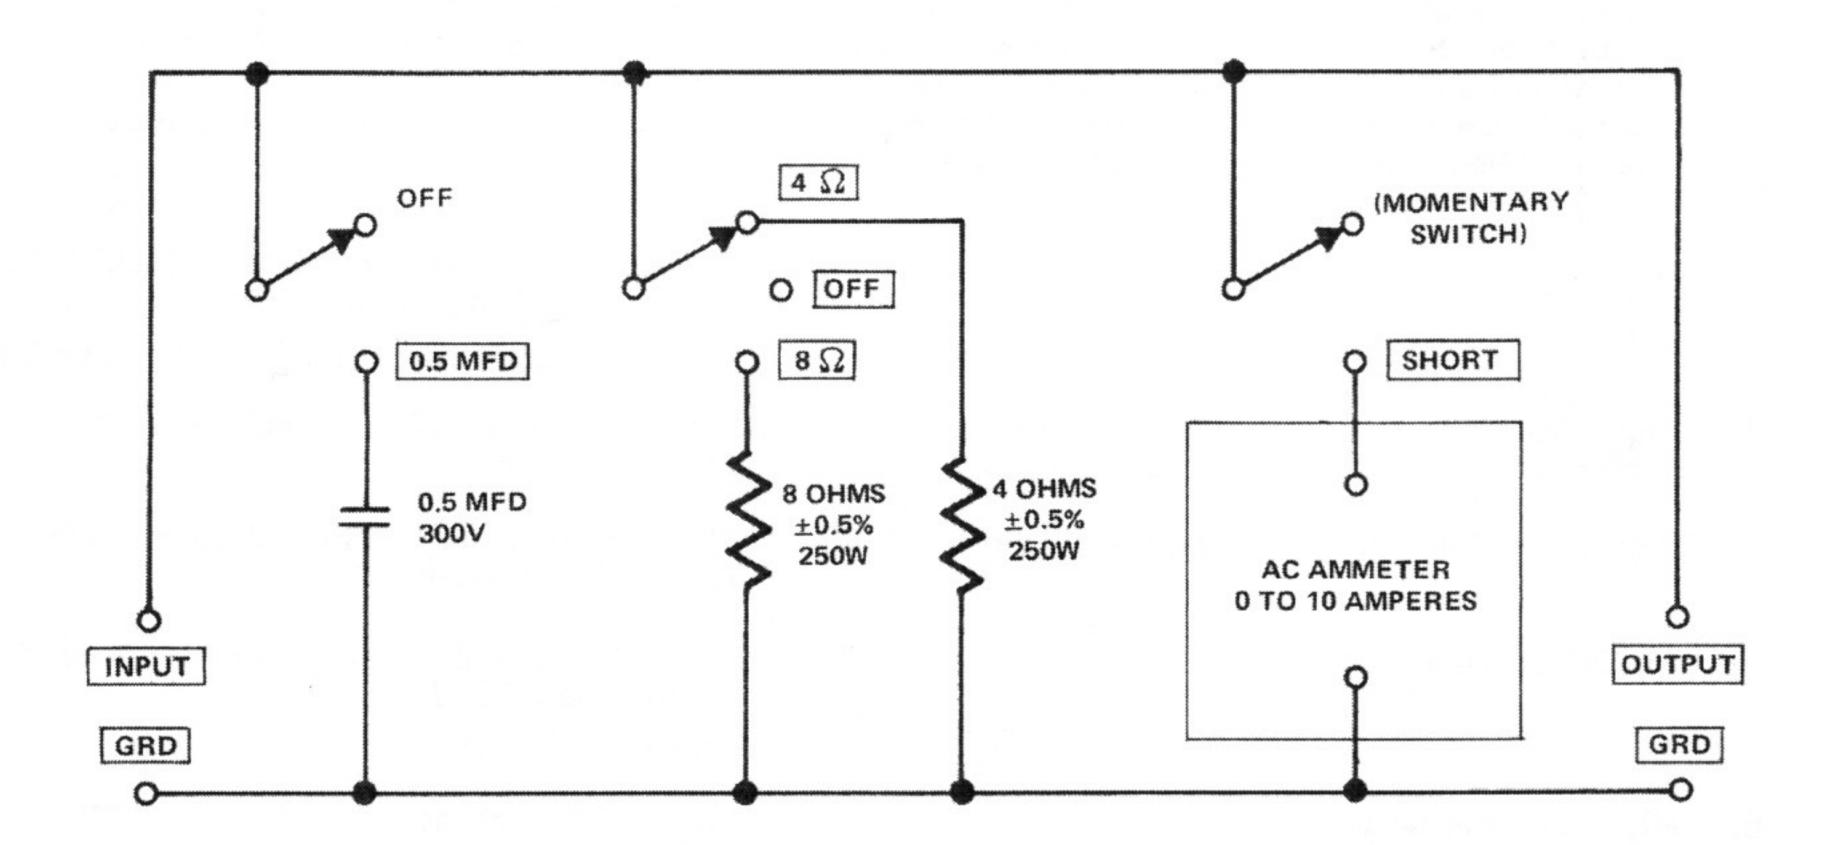


Figure 4. Amplifier Output Load Box Simplified Schematic.

TROUBLE ANALYSIS

The following section is designed to assist in locating troubles. The information given is to help in situations where problems may be difficult to isolate. Any field problems that arise will be covered through service bulletins (supplementary to this manual) that will be issued to all service stations. It is assumed that normal trouble-shooting techniques (i.e., point-to-point signal tracing, oscilloscope analysis, etc.) will be used to isolate problems.

NOTE: Performance verification is necessary following any repair.

SYMPTOM

1. Excessive line consumption (100 watts or more

PROCEDURE

- Check for shorted rectifier CR301, also check
 C1, C2.
- b. Check for shorted transistors Q1, Q2, Q206 through Q210. Check for open control R224 and bias diode CR203. Check T1 for short.

CAUTION: Because the driver and output stages are direct coupled, components may fail as a direct result of an initial component failure. If a shorted transistor or Zener diode is found, or control, or bias diode, be sure to check the remaining driver and output components for short or open circuits before re-energizing the amplifier. After replacement of any of these components, increase the Variac voltage slowly while monitoring the wattmeter as described in paragraph C of Performance Verification.

- 2. No line consumption or zero bias.
- 3. High DC voltage at loudspeaker terminals before time delay circuit is deactivated.
- 4. High DC voltage at loudspeaker at all times.
- 5. No DC Balance.
- 6. High hum and noise level.
- 7. Parasitic Oscillation.

- a. Check line cord, fuse, transistors Q1, Q2, Q206 through Q212, bias diode CR203.
- b. Check for open rectifier CR301 or open T1.
- a. Check transistors Q301 through Q303 for leakage, shorted, or open.
- Check R301 through R305 for open and Q301 for leakage, or open.
- a. Check Q201, Q202, R203, and Zener diodes CR201 and CR202.
- b. Check R202, R204.
- a. Check filter capacitors C1, C2, C201 and C203.
- a. Check for defective C204, C206, C207, and C215.

- 8. Improper clipping.
- 9. Relay Latching

- a. Check for proper adjustment of R237, R238.
- b. Check Zener diodes CR206 and CR207.
- c. Check transistors Q1 and Q2.
- a. Check Q301 through Q303.
- b. Check output for proper clipping (positive and negative levels must not vary more than 1 volt at 2 KHz).
- c. Check for high level DC offset at junction of R302 and R305.

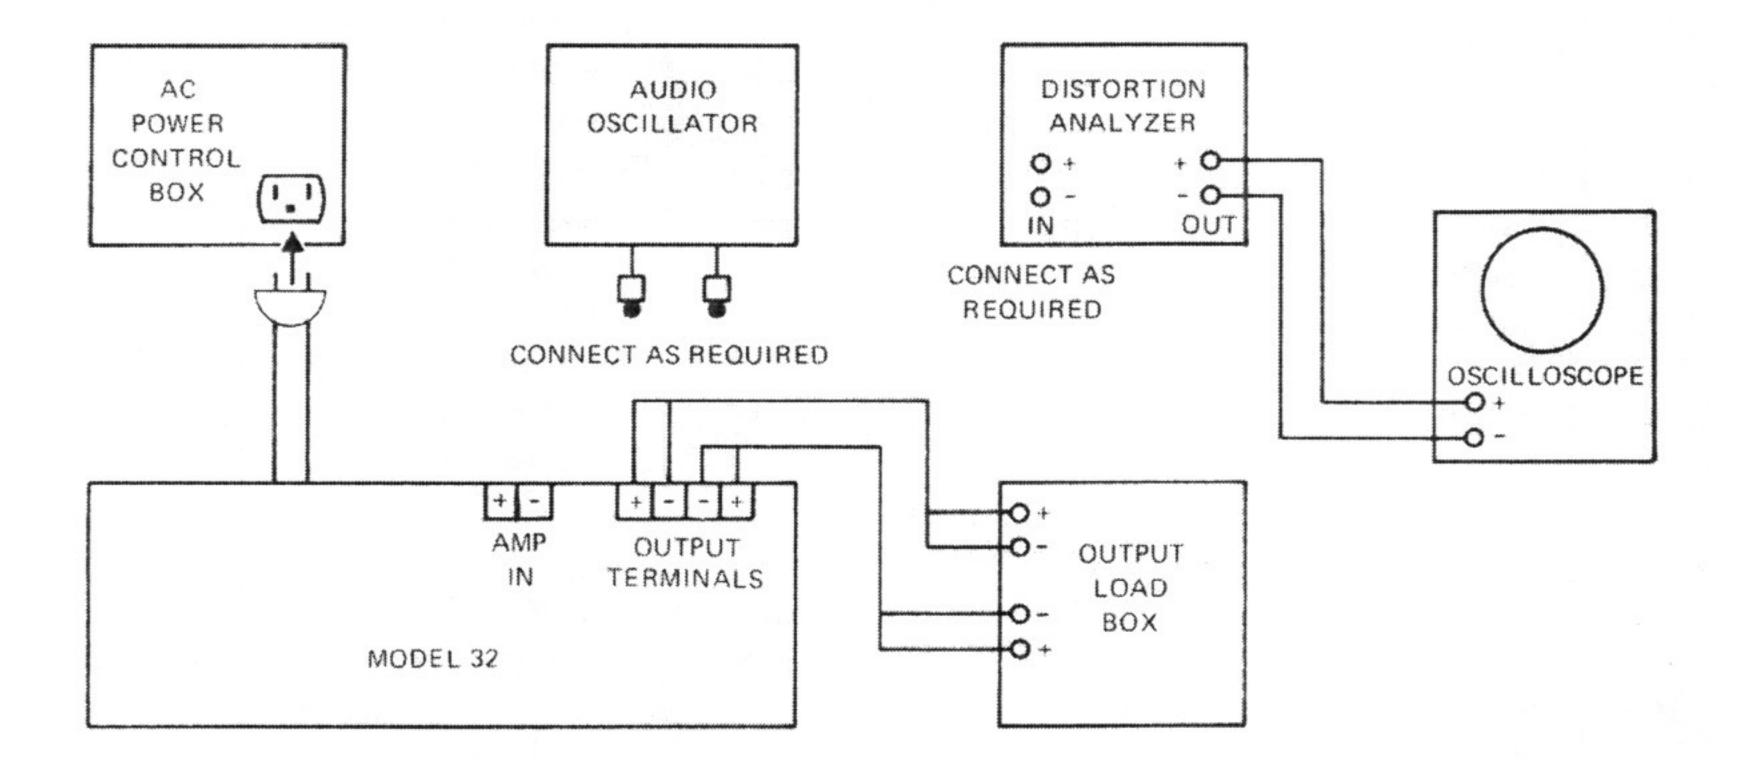


Figure 5. Test Equipment Set-Up.

PARTS LIST


Reference Description and/or Remarks Designation		Marantz Part Number
A1	Heatsink Assembly	215-1002-3
A2	Heatsink Assembly	215-1002-3
100,1000	Power Amp Brd Com Assy	200-1006-3
A3	Power Amp Brd Com Assy	200-1006-3
A4		200-1000-3
A5	Rect/Relay Brd Com Assy	
C1	Cap. Elect. 6800 mfd, 50V	381-1007
C2	Cap. Elect. 6800 mfd, 50V	381-1007
C201	Cap. Elect. 10 mfd, 16V	381-1015
C202	Cap. 1.0 mfd, ±10%, 250V	386-1003
C203	Cap. Elect., 10 mfd, 16V	381-1015
C204	Cap. 1300 pfd, 10%, 300V	385-1033
C205	Cap. Elect. 50 mfd, 6.4V	381-1012
C206	Cap. 5 pfd, ±10%, 300V	385-1009
C207	Cap. 0.1 mfd, ±10%, 250V	386-1000
C208	Cap. 0.1 mfd, ±10%, 250V	386-1000
C209	Cap. 0.1 mfd, ±10%, 250V	386-1000
C210	Cap. 120 pfd, ±10%, 300V	385-1017
C211	Cap.0.22 mfd, ±10%, 250V	386-1001
C212	Not Used	
C213	Cap. 1000 pfd, ±10%, 500V	385-1007
C214	Cap. 1000 pfd, ±10%, 500V	385-1007
C215	Cap. 150 pfd, ±10%, 500V	385-1002
C216	Cap. 2700 pfd, ±10%, 300V	385-1015
C217	Cap. 2700 pfd, ±10%, 300V	385-1015
C218	Not Used	
C219	Not Used	
C220	Cap. 39 pfd, ±10%, 500V	385-1035
C301	Cap. Elect., 33 mfd, 10V	381-1021
C302	Cap. Elect., 125 mfd, 16V	381-1005
C303	Cap. Elect., 10 mfd, 64V	381-1010
CR201	Diode, Zener	459-1000
CR202	Diode, Zener	459-1000
CR203	Diode, Rectifier	460-1010
CR204	Not Used	
CR205	Not Used	
CR206	Diode, Zener, 10V	459-1003
CR207	Diode, Zener, 10V	459-1003

Reference Designation	Description and/or Remarks	Marantz Part Number
CR301 CR302 CR303	Bridge Assy, Rectifier Diode, Rectifier Diode, Rectifier	468-1000 460-1006 460-1006
DS1 DS2	Lamp, Minature Bayonet Lamp, Minature Bayonet	153-1000 153-1000
F1	Fuse, 4A, 250V	451-1003
K301	Relay, DPDT, 24V DC	410-1000
L1	Toroid	147-1000
Q1 Q2	Transistor, PNP Transistor, NPN	461-1011 462-1015
Q201* Q203 Q204 Q205 Q206 Q207 Q208 Q209* Q210* Q211 Q212	Transistor, NPN Transistor, NPN Transistor, PNP (Beta>111) Transistor, PNP Transistor, NPN	462-1020-4 462-1020-4 461-1007 461-1009-1 462-1009-4 462-1007 462-1021 461-1015 462-1016 461-1012
Q301 Q302 Q303	Transistor, NPN Transistor, NPN Transistor, NPN	462-1000 462-1007 462-1000
R201 R202 R203	Res C/F, 470K, 1/2W, 5% Res Prec 10K, 1/2W, 2% Res Var, 2K, 2W, 10%	433-6472 432-5101 420-1000

7		
Reference	Description and/or Remarks	Marantz
Designation	Description and/or nemarks	Part Number
R204*	Res C/F, 7.5K, 1/2W, 5%	433-4752
R205	Res C/F, 100K, 1/2W, 5%	433-6102
R206	Res C/F, 1K, 1/2W, 5%	433-4102
R207	Res C/F, 240K, 1/2W, 5%	433-6242
R208	Res C/F, 22K, 1/2W, 5%	433-5222
R209	Res C/F, 150 ohms, 1/2W, 5%	433-3152
R210	Res C/F, 7.5K, 1/2W, 5%	433-4752
R211	Res Prec 5.1K, 1/2W, 2%	432-4511
R212	Res Prec 100K, 1/2W, 2%	432-6101
R213	Res C/C, 27 ohms, 2W, 10%	424-2273
R214	Res C/F, 1.8K, 1/2W, 5%	433-4182
R215	Res C/F, 56 ohms, 1/2W, 5%	433-4162
		433-2302
R216	Res C/F, 300 ohms, 1/2W, 5%	
R217	Res C/F, 5.1K, 1/2W, 5%	433-4512 433-4182
R218 R219*	Res C/F, 1.8K, 1/2W, 5%	433-4102
	Res C/F, 2.2K, 1/2W, 5%	
R220	Res Prec 15K, 1/2W, 2%	432-5151
R221	Res Prec 15K, 1/2W, 2%	432-5151
R222	Res Prec 680 ohms, 1/2W, 2%	432-3681
R223	Res Prec 680 ohms, 1/2W, 2%	432-3681
R224	Res Var, 1K, 2W, 10%	420-1011
R225	Res C/F, 47K, 1/2W, 5%	433-5472
R226*	Res C/F, 2.2K, 1/2W, 5%	433-4222
R227	Res C/F, 56 ohms, 1/2W, 5%	433-2562
R228 R229	Res C/F, 56 ohms, 1/2W, 5%	433-2562 433-3102
	Res C/F, 100 ohms, 1/2W, 5%	439-1000
R230	Res W/W, 0.2 ohms, 5W, 5%	439-1000
R231	Res W/W, 0.2 ohms, 5W, 5%	433-1000
R232	Res C/F, 100 ohms, 1/2W, 5%	
R233	Res C/F, 820 ohms, 1/2W, 5%	433-3822
R234	Res C/F, 820 ohms, 1/2W, 5%	433-3822
R235*	Res C/F, 27K, 1/2W, 5%	433-5272
R236*	Res C/F, 7.5K, 1/2W, 5%	433-4752
R237	Res Var, 1K, 1/4W	420-1013
R238	Res Var, 1K, 1/4W	420-1013
R239*	Res C/F, 7.5K, 1/2W, 5%	433-4752
R240*	Res C/F, 27K, 1/2W, 5%	433-5272
R241*	Res C/F, 680 ohms, 1/2W, 5%	433-3682

Reference Designation	Description and/or Remarks	Marantz Part Number
R242*	Res C/F, 680 ohms, 1/2W, 5%	433-3682
R243	Not Used	
R244	Not Used	
R245	Res C/C, 2.7 ohms, 1W, 10%	423-1273
R246*	Res C/F, 22 ohms, 1/2W, 5%	433-2222
R247*	Res C/F, 22 ohms, 1/2W, 5%	433-2222
R301	Res C/F, 3.3K, k/2W, 5%	433-4332
R302	Res C/F, 10K, 1/2W, 5%	433-5102
R303	Res C/F, 27K, 1/2W, 5%	433-5272
R304	Res C/F, 75K, 1/2W, 5%	433-5752
R305	Res C/F, 7.5K, 1/2W, 5%	433-4752
R306	Res C/F, 39K, 1/2W, 5%	433-5392
R307	Res C/C, 1.5K, 2W, 10%	424-4153
R308	Res C/C, 1.5K, 2W, 10%	424-4153
R309	Res C/F, 510K, 1/2W, 5%	433-6512
R310	Res W/W, 180 ohms, 2W, 5%	436-3182
T1	Transformer, Power	440-1003
TB1	Terminal Board, 4 Position	362-1002
XDS1	Socket Assy, Pilot Lamp	481-1003
XDS2	Socket Assy, Pilot Lamp	481-1003
XF1	Fuseholder (W/Mtg Hdwe)	367-1001
XQ1	Socket, Transistor	368-1000
XQ2	Socket, Transistor	368-1000
None	Front Panel Assembly Consisting of	206-1001-1
	Panel, Front	134-1006-1
	Mask, Window	159-1000
	Window, Marked	170-1000-1
	Lens, Light Deflector	170-1003-1
	Bezel, Front Panel	172-1000
None	Foot	567-1000

*See ECN Change Record

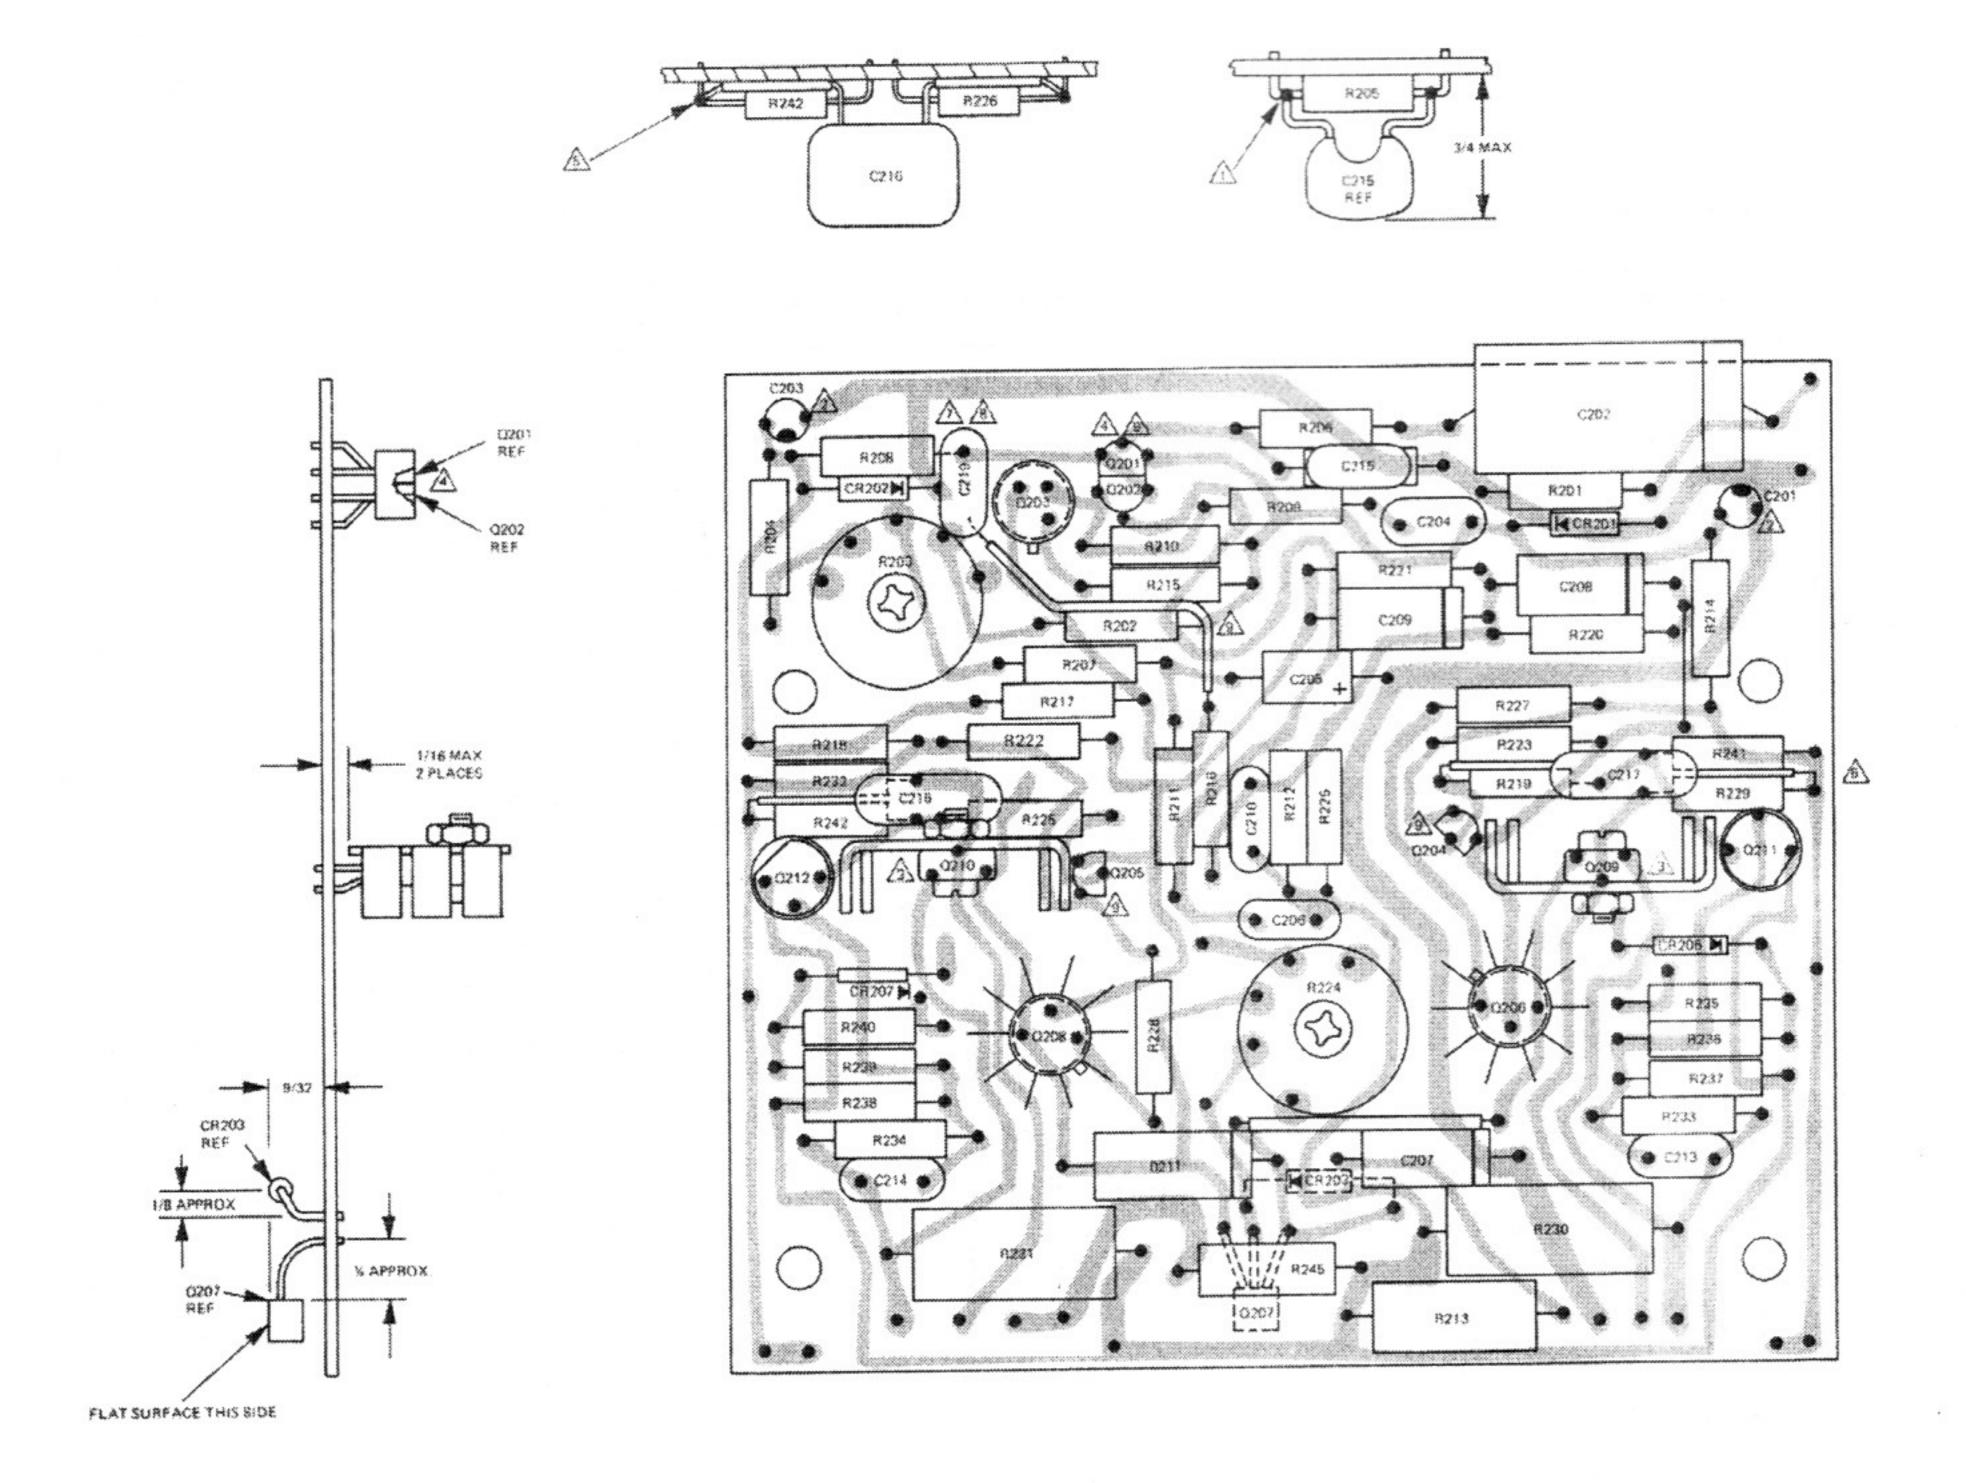

1.

INSTALL C215 APPROX. AS SHOWN, WITH LEADS SOLDERED TO R205 LEADS.

/2.

C201 AND C203 POLARITY IS INDICATED BY COLORED DOT ON ONE SIDE, HOLDING THE CAPACITOR WITH THE COLORED DOT TOWARD THE VIEWER, THE POSITIVE LEAD IS ON THE RIGHT.



METAL SIDE OF Q209 AND Q210 TO BE NEXT TO HEAT DISSIPATER.



Q201 AND Q202 LOCATED AS SHOWN, WITH CASES TOUCHING. INSTALL HEAT SHRINKABLE TUBING OVER Q201 AND Q202 AND SHRINK.



INSTALL C216 APPROX. AS SHOWN, WITH LEADS SOLDERED TO R226 AND R242. C216 LEADS TO BE SLEEVED.



INSTALL C217 IN SIMILAR MANNER AS SHOWN FOR C216 WITH LEADS SOLDERED TO R219 AND R229. C217 LEADS TO BE SLEEVED.



C219 OPTIONAL ITEM.




INSTALL C219 AS SHOWN (BETWEEN R208 AND R216 SLEEVE LEADS).



Q201, Q202, Q204, AND Q205 ARE TO BE INSTALLED WITHOUT CUTTING TRANSISTOR LEAD. HEIGHT OF THE TRANSISTOR OFF THE BOARD NOT TO EXCEED 1/2".

Figure 6. Power Amplifier Board Component Assembly Diagram Revision 1.

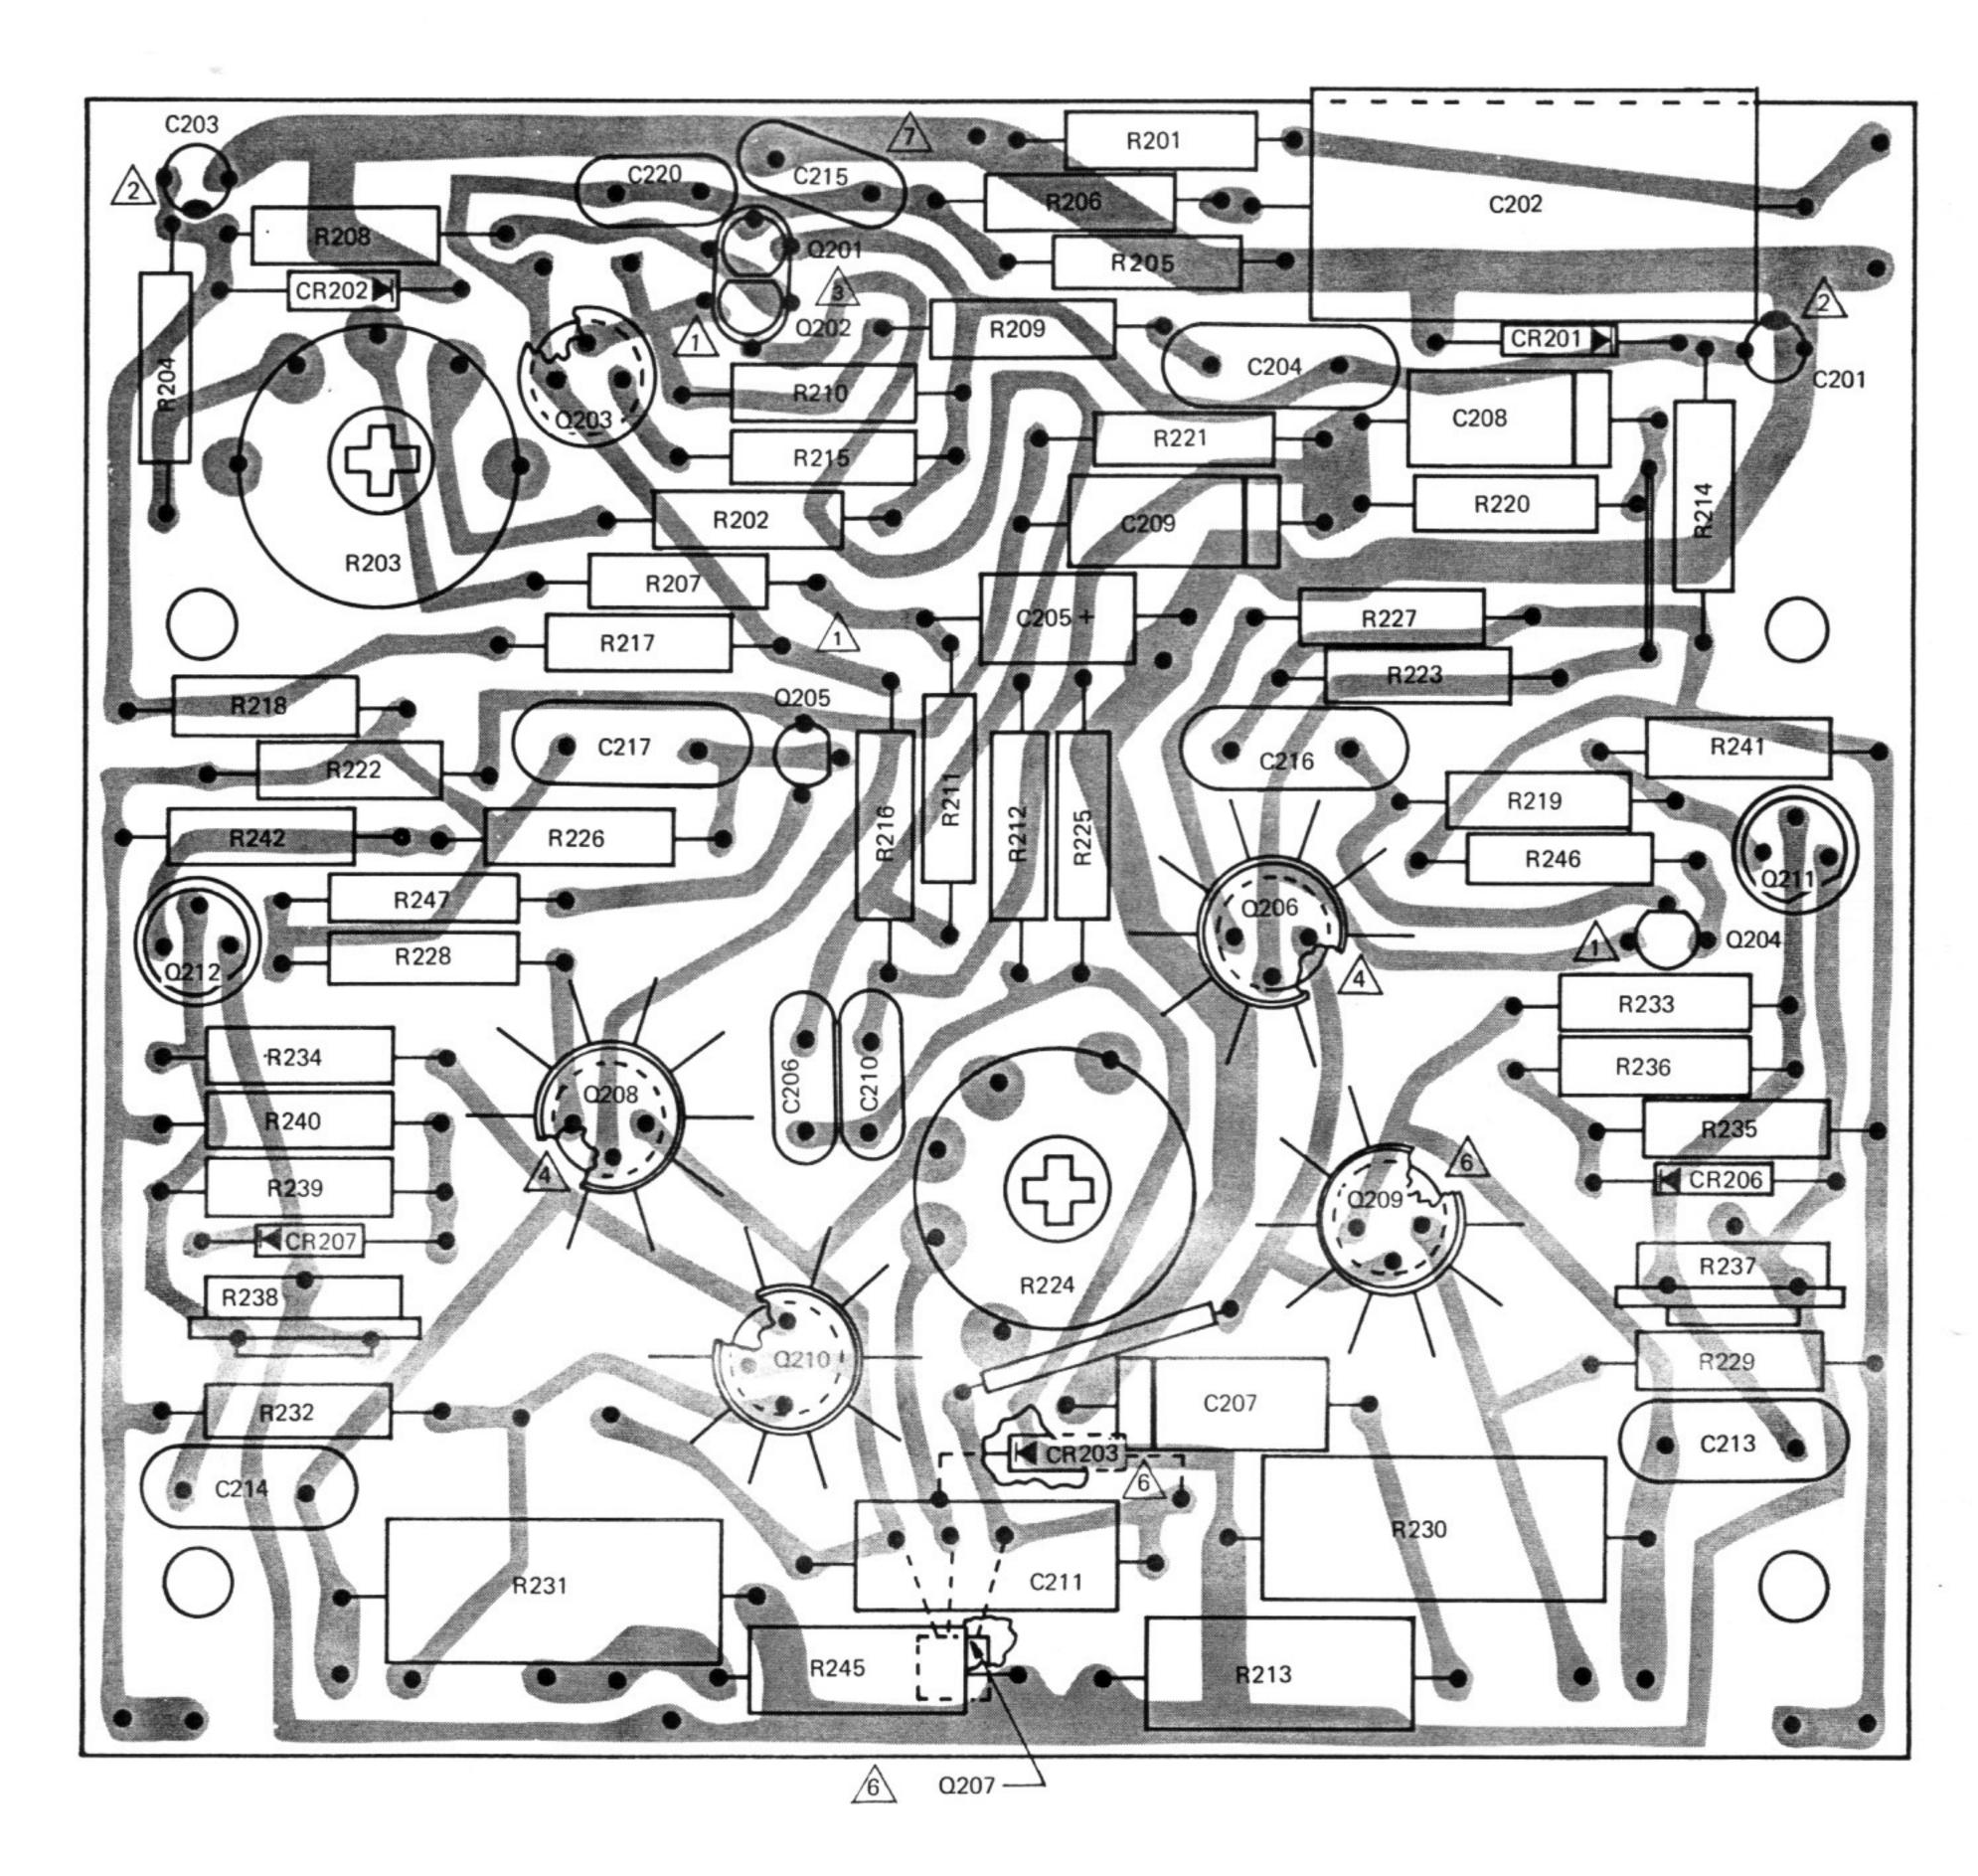

1.

Q201, Q202, Q204, AND Q205 ARE TO BE INSTALLED WITHOUT CUTTING TRANSISTOR LEADS. HEIGHT OF THE TRANSISTOR OFF THE BOARD NOT TO EXCEED 1/2".

2.

C201 AND C203 POLARITY IS INDICATED BY COLORED DOT ON ONE SIDE, HOLDING THE CAPACITOR WITH THE LEADS DOWN AND THE COLORED DOT TOWARD THE VIEWER, THE POSITIVE LEAD IS ON THE RIGHT.

3.

Q201 AND Q202 LOCATED AS SHOWN, WITH CASES TOUCHING. INSTALL HEAT SHRINKABLE TUBING OVER Q201 AND Q202 AND SHRINK.

4.

Q206 AND Q208 TO BE MATCHED WITHIN 1 (ONE) BETA RANGE. Q209 AND Q210 TO BE MATCHED IN SAME BETA RANGE. BETA RANGES ARE 40-99, 100-149, 150-199, 200-399 AND 400 OR GREATER.

USE BOARDS FABRICATED FROM A/W 115-1006 REV G ONLY FOR ASSEMBLY CONFIGURATION SHOWN.


6.

CR203 AND Q207 ARE INSTALLED IN SAME MANNER AS SHOWN IN FIGURE 6.

/7.

C215 OPTIONAL ITEM.

Figure 7. Power Amplifier Board Component Assembly Diagram Revision 2.

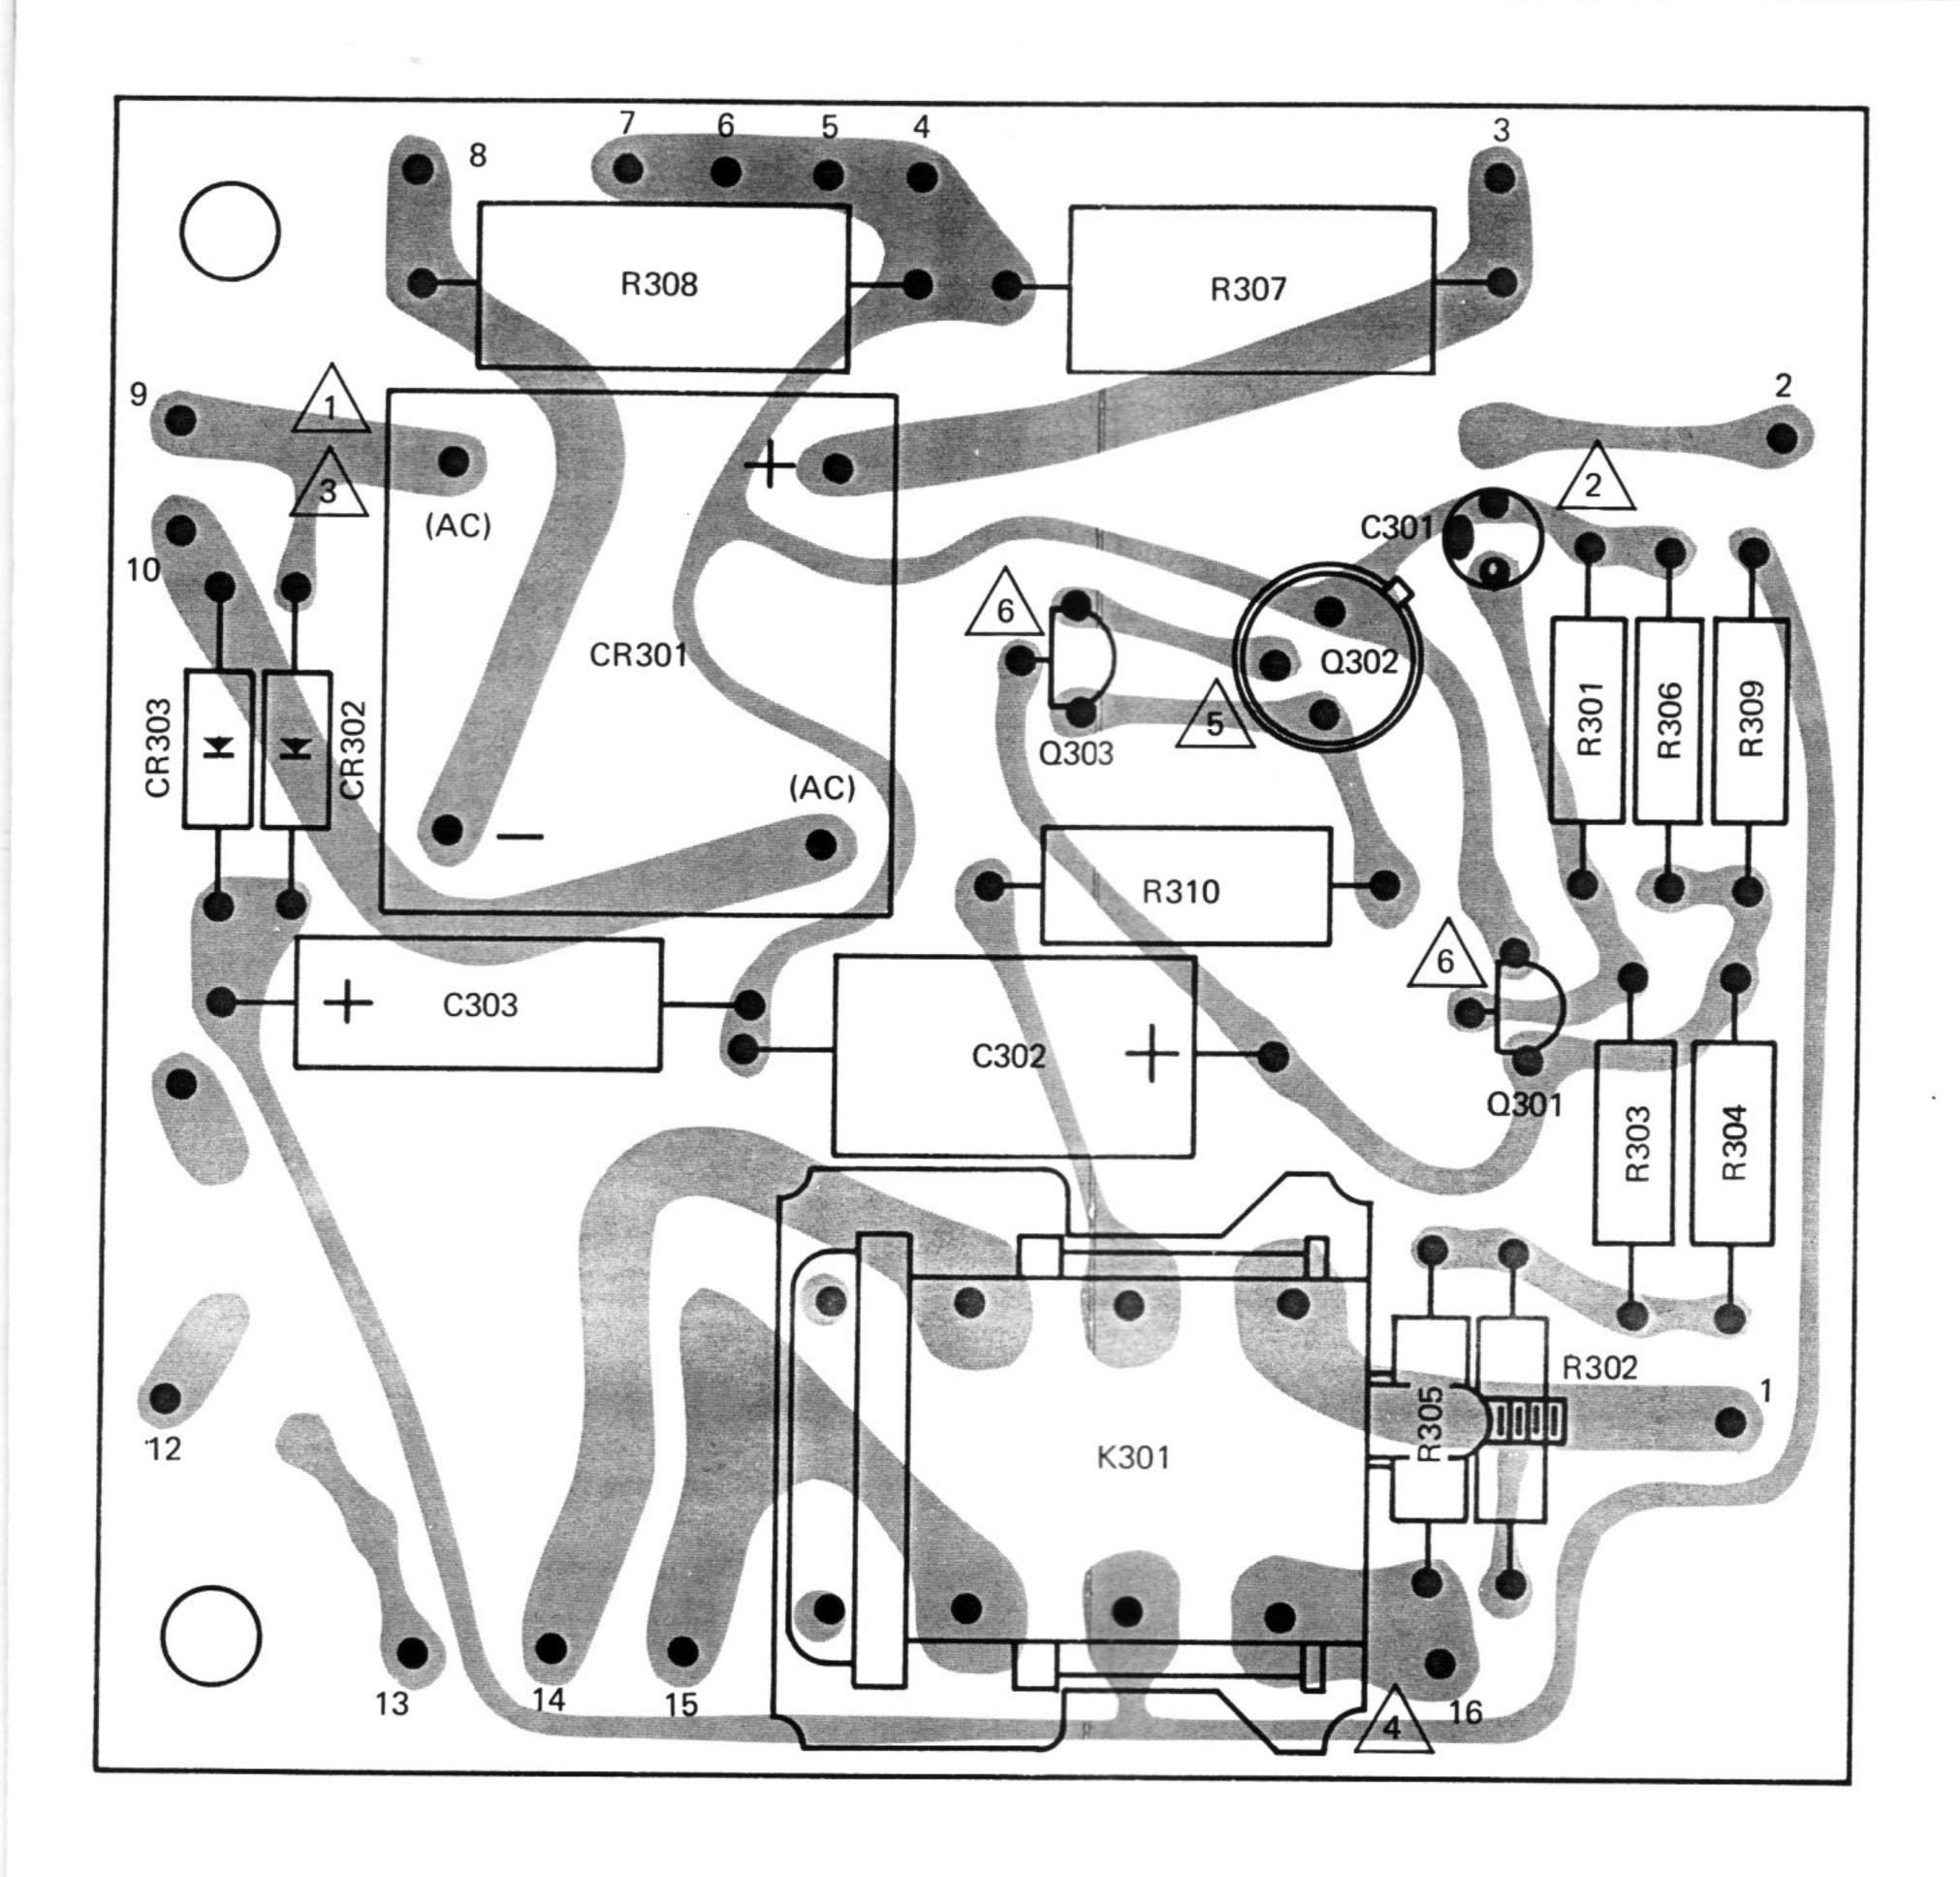



RED DOT INDICATES POSITIVE LEAD OF CR301 AND MAY BE LOCATED ON LEAD SIDE OR OPPOSITE LEAD SIDE OF COMPONENT.



C301 POLARIZATION IS DETERMINED BY HOLDING COMPONENT WITH THE BLACK MARKING TOWARD VIEWER - IN THIS POSITION THE POSITIVE LEAD IS ON THE RIGHT.



CR301 TO BE INSTALLED FLUSH TO 1/8" ABOVE BOARD.




RELAY TERMINALS NEED NOT BE TRIMMED.



Q302 TO HAVE A BETA GREATER THAN 30.

Q301 AND Q303 ARE TO BE INSTALLED WITHOUT CUT-TING TRANSISTOR LEADS. HEIGHT OF THE TRANSIS-TOR OFF THE BOARD NOT TO EXCEED 1/2".

Figure 8. Rectifier/Relay Board Component Assembly Diagram.

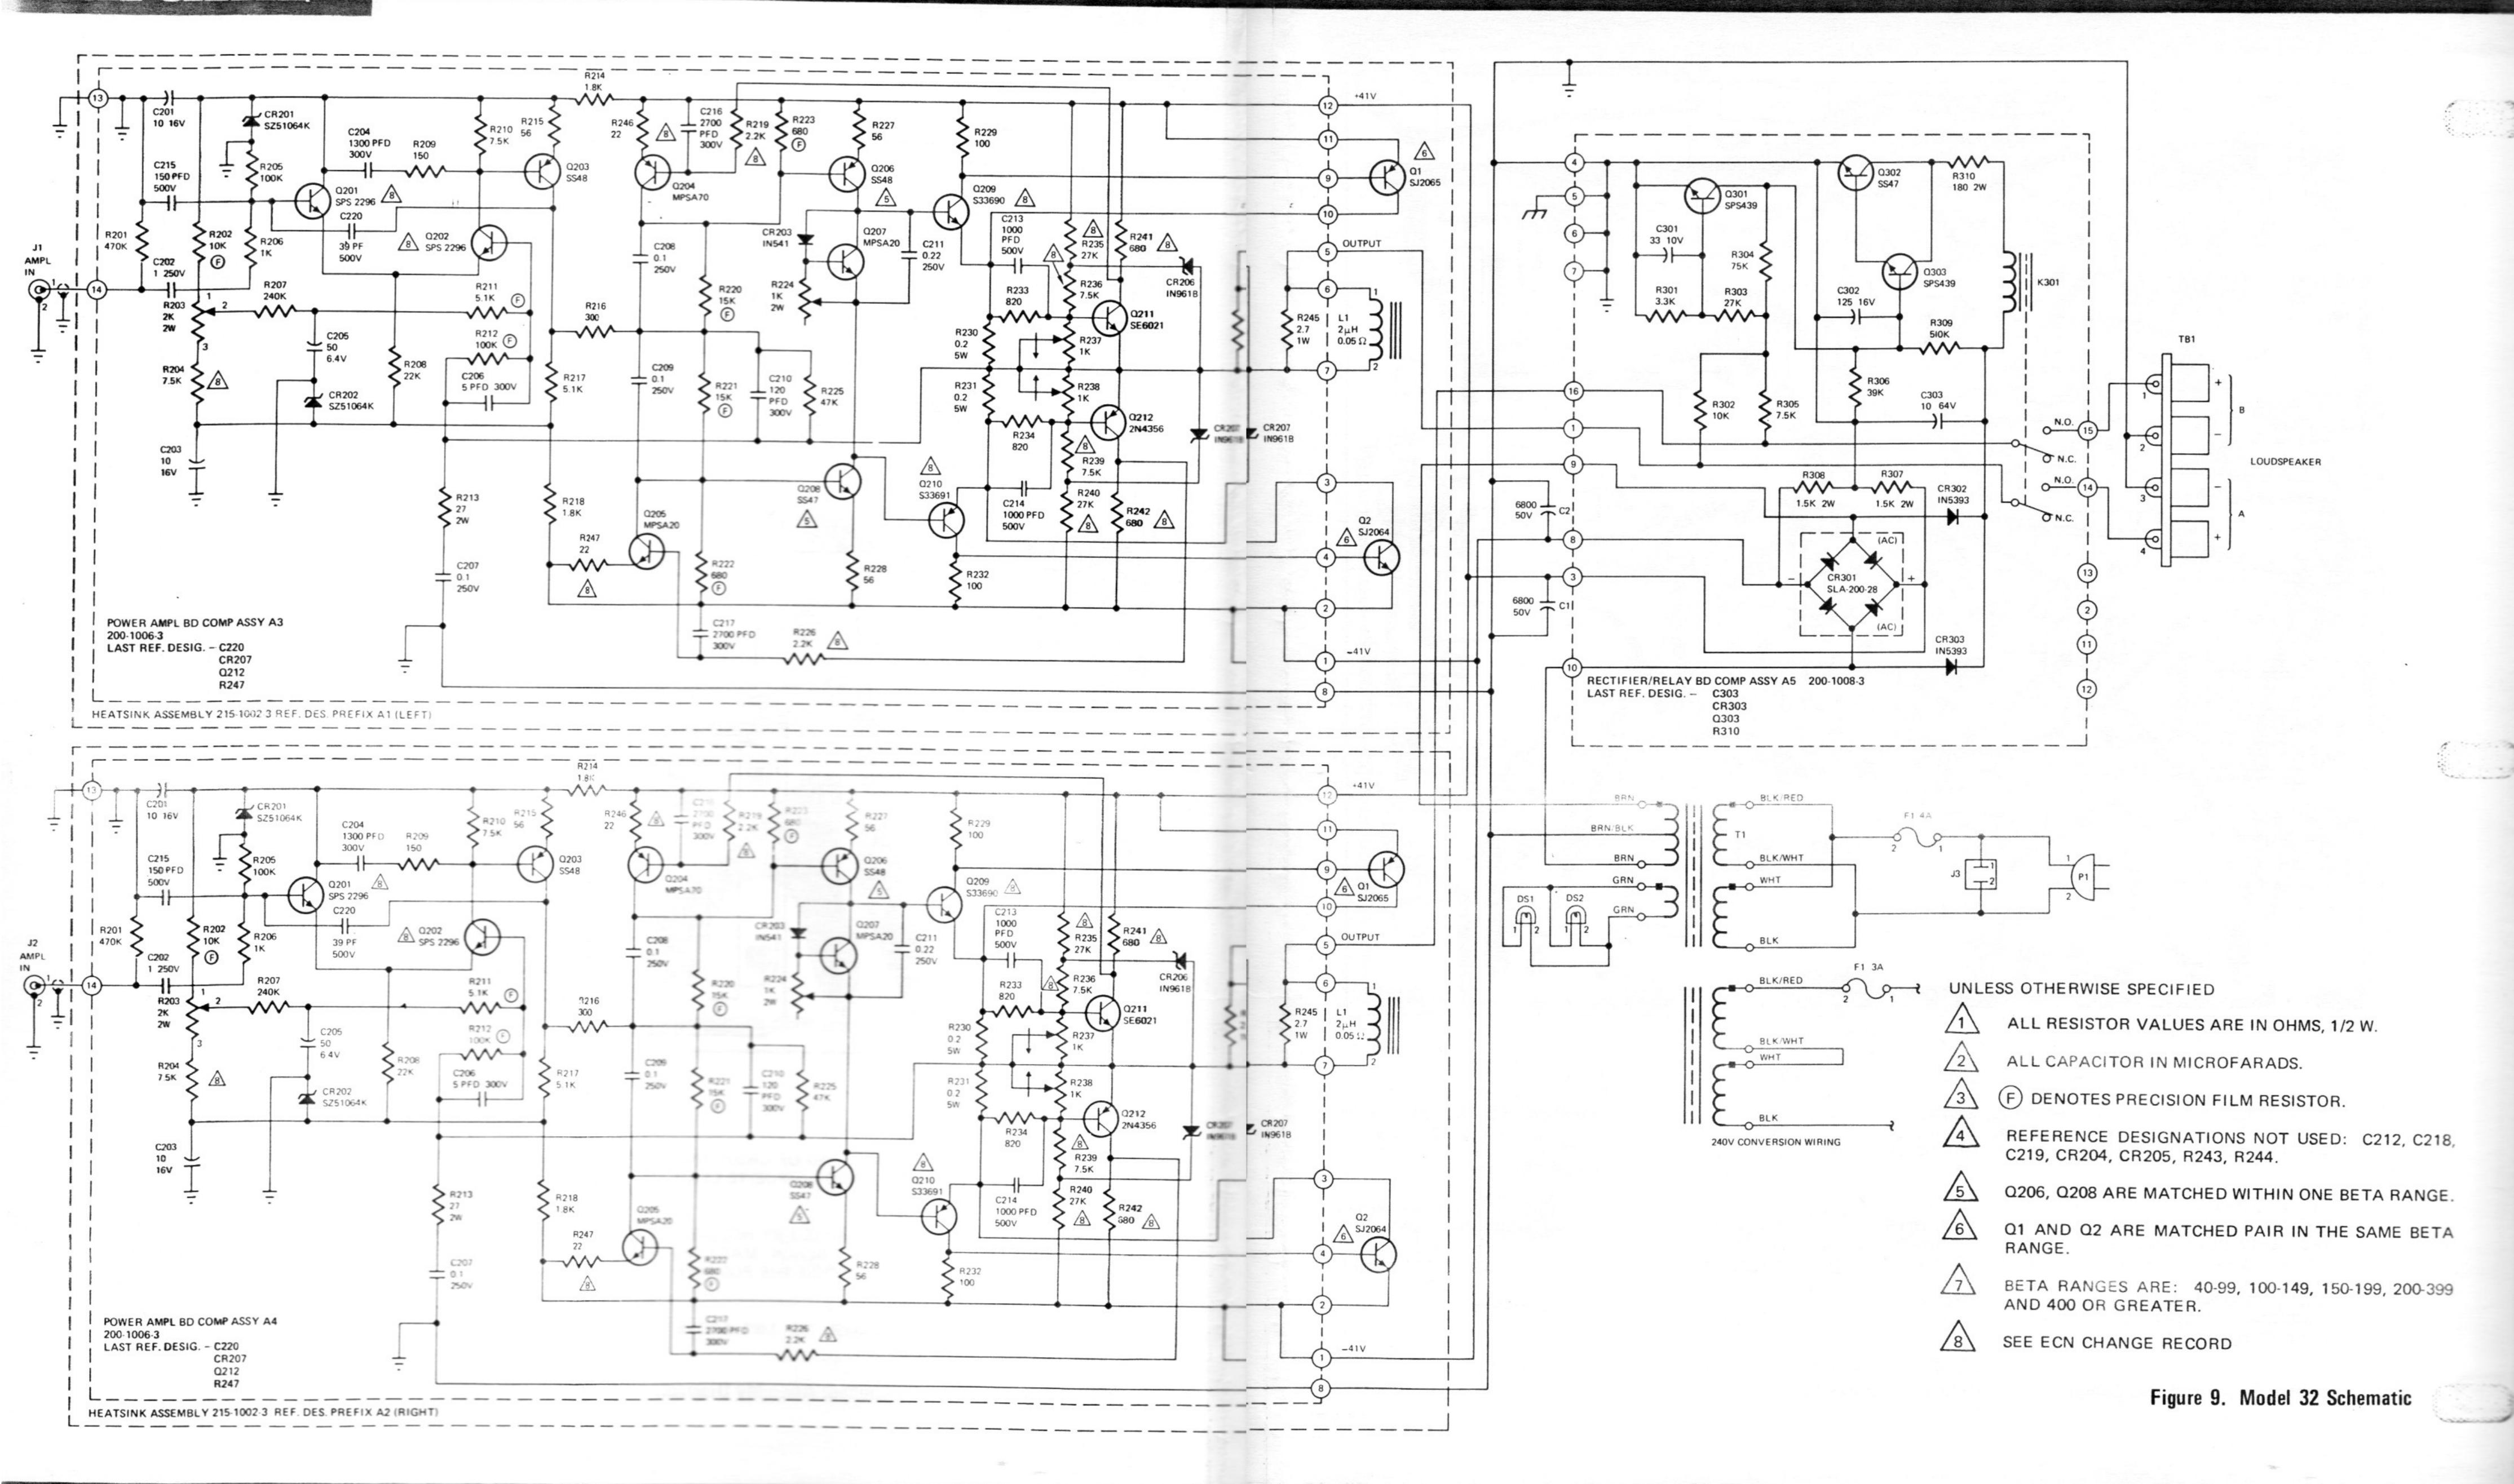

CHANGE RECORD

Enter changes on the Model 32 here for a permanent record. Insert pages into manual. Retain or discard old pages, as instructed.

ECN NO.	DATED	DESCRIPTION	INSERTED BY	DATE
1362	5/14/70	Added R246, R247 10 ohm, ½W, 5%	KFH	1 December 1970
1410	6/30/70	Q201, Q202 was MPSA09 is SPS2296	KFH	1 December 1970
1435	8/14/70	Q210 was SJE569 is S33691	KFH	1 December 1970
		Q209 was SJE570 is S33690		
		R246, R247 was 10 ohm is 22 ohm		
		R236, R239 was 5.6K is 7.5K		
		R219, R226 was 5.6K is 2.2K		
		R235, R240 was 43K is 27K		
		R241, R242 was 5.6K is 1.5K		
		R204 was PREC. 10K, 2% is 7.5K, 5%		
1509	8/19/70	R241, R242 was 1.5K is 680 ohm	KFH	1 December 1970

MARANTZ CO., INC. • P.O. BOX 99 • SUN VALLEY, CALIFORNIA • 91352 A WHOLLY-OWNED SUBSIDIARY OF SUPERSCOPE INC., SUN VALLEY, CALIFORNIA 91352