

Pioneer

Service Manual



VSX-1127-K

ORDER NO.
RRV4307

AV Receiver

VSX-1127-K

VSX-1122-K

VSX-60

VSX-1027-K

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Remarks
VSX-1127-K	CUXE	AC 120 V	
VSX-1122-K	CUXESM	AC 120 V	
VSX-60	UXECB	AC 120 V	
VSX-1027-K	CUXE	AC 120 V	



PIONEER CORPORATION 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan

PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.

PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium

PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936

©PIONEER CORPORATION 2012

K-MZV MAR. 2012 Printed in Japan

SAFETY INFORMATION



This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product may contain a chemical known to the State of California to cause cancer, or birth defects or other reproductive harm.

Health & Safety Code Section 25249.6 - Proposition 65


(FOR USA MODEL ONLY)

1. SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester such as Simpson Model 229-2 or equivalent between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120 V AC 60 Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5 mA.

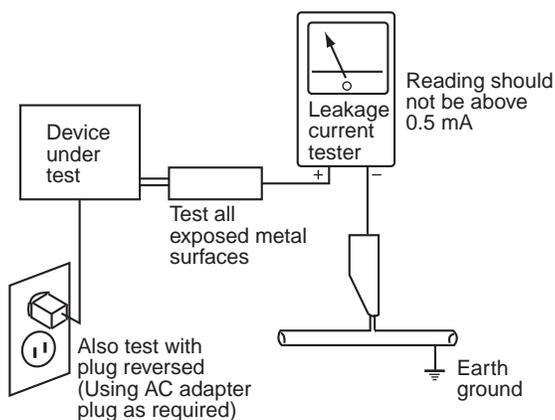

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

2. PRODUCT SAFETY NOTICE

Many electrical and mechanical parts in the appliance have special safety related characteristics. These are often not evident from visual inspection nor the protection afforded by them necessarily can be obtained by using replacement components rated for voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in this Service Manual.

Electrical components having such features are identified by marking with a ⚠ on the schematics and on the parts list in this Service Manual.

The use of a substitute replacement component which does not have the same safety characteristics as the PIONEER recommended replacement one, shown in the parts list in this Service Manual, may create shock, fire, or other hazards.

Product Safety is continuously under review and new instructions are issued from time to time. For the latest information, always consult the current PIONEER Service Manual. A subscription to, or additional copies of, PIONEER Service Manual may be obtained at a nominal charge from PIONEER.

5 6 7 8

CONTENTS

- SAFETY INFORMATION..... 2
- 1. SERVICE PRECAUTIONS..... 5
 - 1.1 NOTES ON SOLDERING 5
 - 1.2 NOTES ON REPLACING PARTS 5
 - 1.3 SERVICE NOTICE..... 5
- 2. SPECIFICATIONS..... 6
- 3. BASIC ITEMS FOR SERVICE 9
 - 3.1 CHECK POINTS AFTER SERVICING 9
 - 3.2 JIGS LIST 9
 - 3.3 PCB LOCATIONS 10
- 4. BLOCK DIAGRAM 12
 - 4.1 OVERALL WIRING DIAGRAM 12
 - 4.2 AUDIO BLOCK DIAGRAM..... 14
 - 4.3 D-AUDIO BLOCK DIAGRAM 16
 - 4.4 D-VIDEO BLOCK DIAGRAM 18
 - 4.5 VIDEO BLOCK DIAGRAM..... 20
 - 4.6 POWER SUPPLY BLOCK DIAGRAM..... 22
- 5. DIAGNOSIS 24
 - 5.1 TROUBLESHOOTING 24
 - 5.2 ERROR INDICATIONS 32
 - 5.3 DETECTION CIRCUIT 33
 - 5.4 IC INFORMATION 35
- 6. SERVICE MODE 38
 - 6.1 TEST MODE 38
 - 6.2 DEFAULT SETTINGS 40
- 7. DISASSEMBLY 41
- 8. EACH SETTING AND ADJUSTMENT 48
 - 8.1 ADJUSTMENT REQUIRED WHEN THE UNIT IS REPAIRED OR REPLACED 48
 - 8.2 USB BACKUP..... 49
 - 8.3 UPDATING OF THE FIRMWARE 51
 - 8.4 IDLE CURRENT ADJUSTMENT 54
- 9. EXPLODED VIEWS AND PARTS LIST..... 56
 - 9.1 PACKING SECTION 56
 - 9.2 EXTERIOR SECION..... 58
- 10. SCHEMATIC DIAGRAM 62
 - 10.1 AUDIO ASSY 62
 - 10.2 AMP7 ASSY (1/2)..... 64
 - 10.3 AMP7 ASSY (2/2)..... 66
 - 10.4 MAIN ASSY 68
 - 10.5 D-MAIN ASSY (1/10) 70
 - 10.6 D-MAIN ASSY (2/10) 72
 - 10.7 D-MAIN ASSY (3/10) 74
 - 10.8 D-MAIN ASSY (4/10) 76
 - 10.9 D-MAIN ASSY (5/10) 78
 - 10.10 D-MAIN ASSY (6/10) 80
 - 10.11 D-MAIN ASSY (7/10) 82
 - 10.12 D-MAIN ASSY (8/10) 84
 - 10.13 D-MAIN ASSY (9/10) 86
 - 10.14 D-MAIN ASSY (10/10) 88
 - 10.15 IR ASSY..... 90
 - 10.16 VIDEO ASSY 92
 - 10.17 BRG ASSY 94
 - 10.18 FRONT and POWER ASSYS 96
 - 10.19 MIC, FVIDEO and HP ASSYS 98
 - 10.20 G-L, G-R, WG-A, WG-B, CCG and BTCNT ASSYS..... 99
 - 10.21 FHDMI and F-USB ASSYS..... 100
 - 10.22 SMPS ASSY 102
 - 10.23 BT ASSY..... 104

VSX-1127-K

5 6 7 8

3

11. PCB CONNECTION DIAGRAM106

11.1 AUDIO ASSY106

11.2 AMP7 ASSY108

11.3 MAIN ASSY.....110

11.4 D-MAIN ASSY114

11.5 IR ASSY118

11.6 VIDEO ASSY120

11.7 BRG ASSY.....122

11.8 FRONT, POWER, MIC, FVIDEO and HP ASSYS124

11.9 G-L, G-R, WG-A and WG-B ASSYS128

11.10 CCG and BTCNT ASSYS129

11.11 FHDMI and F-USB ASSYS130

11.12 BT ASSY131

11.13 SMPS ASSY132

12. PCB PARTS LIST134

A

B

C

D

E

F

1. SERVICE PRECAUTIONS

1.1 NOTES ON SOLDERING

- For environmental protection, lead-free solder is used on the printed circuit boards mounted in this unit.
Be sure to use lead-free solder and a soldering iron that can meet specifications for use with lead-free solders for repairs accompanied by reworking of soldering.
- Compared with conventional eutectic solders, lead-free solders have higher melting points, by approximately 40 °C.
Therefore, for lead-free soldering, the tip temperature of a soldering iron must be set to around 373 °C in general, although the temperature depends on the heat capacity of the PC board on which reworking is required and the weight of the tip of the soldering iron.

Do NOT use a soldering iron whose tip temperature cannot be controlled.

Compared with eutectic solders, lead-free solders have higher bond strengths but slower wetting times and higher melting temperatures (hard to melt/easy to harden).

The following lead-free solders are available as service parts:

- Parts numbers of lead-free solder:
GYP1006 1.0 in dia.
GYP1007 0.6 in dia.
GYP1008 0.3 in dia.

1.2 NOTES ON REPLACING PARTS

The part listed below is difficult to replace as a discrete component part.
When the part listed in the table is defective, replace whole Assy.

Assy Name	Parts that is Difficult to Replace			
	Ref No.	Function	Part No.	Remarks
D-MAIN Assy	JA1601, JA9601-JA9607	HDMI Connector	—————	JACK with Cu-through-hole & SMD type
	JA9201	USB Connector	—————	JACK with Cu-through-hole & 6 pin
	JA9202	LAN Connector	—————	JACK with Cu-through-hole & 10 pin
	IC9520	D-MAIN 3.3V Power Supply IC	—————	IC with heat-pad
	IC9521	D-MAIN 3.3V Power Supply IC	—————	IC with heat-pad
	IC9522	D-MAIN 1.8V Power Supply IC	—————	IC with heat-pad
	IC9002	DSP IC	—————	IC with heat-pad
	IC1204	VIDEO FORMAT CONVERTER	—————	IC BGA type
	IC1212	DDR IC	—————	IC BGA type
	IC9203	LAN PHY IC	—————	IC with heat-pad
	IC9204	NETWORK MEDIA PROCESSOR	—————	IC BGA type
	IC1602	HDMI Tx	—————	IC with heat-pad
	IC903	HDMI Rx	—————	IC with heat-pad
IC9602	HDMI SW IC	—————	IC with heat-pad	
F-USB Assy	IC805	USB 5V SW IC	—————	IC with heat-pad
	IC1307	USB 5V SW Power Supply IC	—————	IC with heat-pad

1.3 SERVICE NOTICE

• Discharging

For more detail, please refer to "7. DISASSEMBLY - 1. Discharging".

• Notes on Ground Points Connection

For more detail, please refer to "7. DISASSEMBLY - 2. Notes on Ground Points Connection".

2. SPECIFICATIONS

■ VSX-1127-K, VSX-1027-K

Amplifier section

Continuous average power output of 90 watts* per channel, min., at 8 ohms, from 20 Hz to 20 000 Hz with no more than 0.08 %** total harmonic distortion.

Front (stereo)..... 90 W + 90 W
Power output (1 kHz, 6 Ω, 1 %, 1 ch driven)165 W
Guaranteed speaker impedance 6 Ω to 16 Ω

* Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifiers
** Measured by Audio Spectrum Analyzer

Audio Section

Input (Sensitivity/Impedance)
LINE..... 315 mV/47 kΩ
Signal-to-Noise Ratio (IHF, short circuited, A network)
LINE..... 100 dB
Signal-to-Noise Ratio [EIA, at 1 W (1 kHz)]
LINE..... 81 dB

Tuner Section

Frequency Range (FM) 87.5 MHz to 108 MHz
Antenna Input (FM)..... 75 Ω unbalanced
Frequency Range (AM) 530 kHz to 1700 kHz
Antenna (AM) Loop antenna (balanced)

Video Section

Signal level
Composite Video 1 Vp-p (75 Ω)
Component Video..... Y: 1.0 Vp-p (75 Ω), PB/PR: 0.7 Vp-p (75 Ω)
Corresponding maximum resolution
Component Video..... 1080p (1125p) (Video convert off)

Digital In/Out Section

HDMI terminal 19-pin (Not DVI)
HDMI output type..... 5 V, 100 mA
USB terminal USB2.0 High Speed (Type A) 5 V, 2.1 A
iPod terminal..... USB, and Video (Composite)
ADAPTER PORT terminal..... 5 V, 100 mA
WIRELESS LAN ADAPTER terminal 5 V, 600 mA

Integrated Control Section

Control (IR) terminal ø 3.5 Mini-jack (MONO)
IR signal..... High Active (High Level: 2.0 V)

Network Section

LAN terminal..... 10 BASE-T/100 BASE-TX

Miscellaneous

Power requirements..... AC 120 V, 60 Hz
Power consumption 550 W
In standby..... 0.2 W (HDMI Setup – Control : OFF)
0.3 W (HDMI Setup – Control : ON)
Dimensions..... 435 mm (W) x 168 mm (H) x 362.5 mm (D)
(17 3/16 in. (W) x 6 5/8 in. (H) x 14 5/16 in. (D))
Weight (without package)
VSX-1127 9.9 kg (21.8 lb)
VSX-1027 9.8 kg (21.6 lb)

Note

- Specifications and the design are subject to possible modifications without notice, due to improvements.
- This product includes FontAvenue® fonts licensed by NEC Corporation. FontAvenue is a registered trademark of NEC Corporation.

■ VSX-60

Amplifier section

Continuous average power output of 90 watts* per channel, min., at 8 ohms, from 20 Hz to 20 000 Hz with no more than 0.08 %** total harmonic distortion.

Front (stereo)..... 90 W + 90 W
Guaranteed speaker impedance 6 Ω to 16 Ω

* Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifiers
** Measured by Audio Spectrum Analyzer

Audio Section

Input (Sensitivity/Impedance)
LINE..... 315 mV/47 kΩ
Output (Level/Impedance)
REC..... 315 mV/2.2 kΩ
Signal-to-Noise Ratio (IHF, short circuited, A network)
LINE..... 100 dB
Signal-to-Noise Ratio [EIA, at 1 W (1 kHz)]
LINE..... 81 dB

Tuner Section

Frequency Range (FM) 87.5 MHz to 108 MHz
Antenna Input (FM)..... 75 Ω unbalanced
Frequency Range (AM) 530 kHz to 1700 kHz
Antenna (AM) Loop antenna (balanced)

Video Section

Signal level
Composite Video 1 Vp-p (75 Ω)
Component Video..... Y: 1.0 Vp-p (75 Ω), PB/PR: 0.7 Vp-p (75 Ω)
Corresponding maximum resolution
Component Video..... 1080p (1125p) (Video convert off)

Digital In/Out Section

HDMI terminal 19-pin (Not DVI)
HDMI output type..... 5 V, 100 mA
USB terminal USB2.0 High Speed (Type A) 5 V, 2.1 A
iPod terminal..... USB, and Video (Composite)
ADAPTER PORT terminal..... 5 V, 100 mA
WIRELESS LAN ADAPTER terminal 5 V, 600 mA

Integrated Control Section

Control (IR) terminal ø 3.5 Mini-jack (MONO)
IR signal..... High Active (High Level: 2.0 V)
12 V Trigger terminal..... ø 3.5 Mini-jack (MONO)
12 V Trigger output type..... 12 V, Total 150 mA
RS-232C cable type 9-pin, cross type, female-female

Network Section

LAN terminal..... 10 BASE-T/100 BASE-TX

Miscellaneous

Power requirements.....AC 120 V, 60 Hz
 Power consumption550 W
 In standby.....0.2 W (HDMI Setup – Control : OFF)
 0.3 W (HDMI Setup – Control : ON)
 Dimensions..... 435 mm (W) x 168 mm (H) x 362.5 mm (D)
 (17 3/16 in. (W) x 6 5/8 in. (H) x 14 5/16 in. (D))
 Weight (without package)9.9 kg (22 lb)

Note

- Specifications and the design are subject to possible modifications without notice, due to improvements.
- This product includes FontAvenue® fonts licensed by NEC Corporation. FontAvenue is a registered trademark of NEC Corporation.

■ VSX-1122-K

Amplifier section

Continuous average power output of 90 watts* per channel, min., at 8 ohms, from 20 Hz to 20 000 Hz with no more than 0.08 %** total harmonic distortion.

Front (stereo) 90 W + 90 W
 Power output (1 kHz, 6 Ω, 1 %, 1 ch driven)165 W
 Guaranteed speaker impedance 6 Ω to 16 Ω

* Measured pursuant to the Federal Trade Commission's Trade Regulation rule on Power Output Claims for Amplifiers

** Measured by Audio Spectrum Analyzer

Audio Section

Input (Sensitivity/Impedance)

LINE.....315 mV/47 kΩ

Signal-to-Noise Ratio (IHF, short circuited, A network)

LINE..... 100 dB

Signal-to-Noise Ratio [EIA, at 1 W (1 kHz)]

LINE..... 81 dB

Tuner Section

Frequency Range (FM)87.5 MHz to 108 MHz

Antenna Input (FM)..... 75 Ω unbalanced

Frequency Range (AM) 530 kHz to 1700 kHz

Antenna (AM)Loop antenna (balanced)

Video Section

Signal level

Composite Video 1 Vp-p (75 Ω)

Component Video..... Y: 1.0 Vp-p (75 Ω), PB/PR: 0.7 Vp-p
 (75 Ω)

Corresponding maximum resolution

Component Video..... 1080p (1125p) (Video convert off)

Digital In/Out Section

HDMI terminal 19-pin (Not DVI)

HDMI output type.....5 V, 100 mA

USB terminal USB2.0 High Speed (Type A) 5 V, 2.1 A

iPod terminal.....USB, and Video (Composite)

ADAPTER PORT terminal5 V, 100 mA

WIRELESS LAN ADAPTER terminal5 V, 600 mA

Integrated Control Section

Control (IR) terminalø 3.5 Mini-jack (MONO)
 IR signal..... High Active (High Level: 2.0 V)

Network Section

LAN terminal..... 10 BASE-T/100 BASE-TX

Miscellaneous

Power requirements.....AC 120 V, 60 Hz
 Power consumption550 W
 In standby.....0.2 W (HDMI Setup – Control : OFF)
 0.3 W (HDMI Setup – Control : ON)

Dimensions..... 435 mm (W) x 168 mm (H) x 362.5 mm (D)
 (17 3/16 in. (W) x 6 5/8 in. (H) x 14 5/16 in. (D))

Weight (without package)9.9 kg (22 lb)


Note

- Specifications and the design are subject to possible modifications without notice, due to improvements.
- This product includes FontAvenue® fonts licensed by NEC Corporation. FontAvenue is a registered trademark of NEC Corporation.


Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", "Surround EX", and the double-D symbol are trademarks of Dolby Laboratories.

Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,226,616; 6,487,535; 7,212,872; 7,333,929; 7,392,195; 7,272,567 & other U.S. and worldwide patents issued & pending. DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks & DTS-HD Master Audio is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.


Accessories

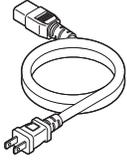

Power cord
(L068125130010-IL)
(VSX-60 only)

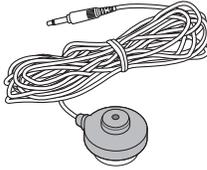

Microphone
(for Auto MCACC setup)
(APM7010)



iPod cable
(L308102013030-IL)



AM loop antenna
(E601019000010-IL)



FM wire antenna
(E605010140010-IL)



Remote control (AXD7664)
(8300766400010-IL)



Dry cell batteries
(AAA size IEC R03) x2

Warranty card

Quick start guide
(VSX-1127-K, VSX-1027-K: 5707000006590-IL)
(VSX-1122-K: 5707000006580-IL)
(VSX-60: 5707000006600-IL)

Safety Brochure

Operating instructions (CD-ROM)
(VSX-1127-K, VSX-1027-K: 6517000000550-IL)
(VSX-1122-K: 6517000000540-IL)
(VSX-60: 6517000000560-IL)

3. BASIC ITEMS FOR SERVICE

3.1 CHECK POINTS AFTER SERVICING

Items to be checked after servicing

To keep the product quality after servicing, confirm recommended check points shown below.

No.	Procedures	Check points
1	Confirm whether the customer complain has been solved. If the customer complain occurs with the particular source, such as Dolby Digital, DTS, AAC, DVD-A and HDMI, input it for the operation check.	The customer complain must not be reappeared. Video, Audio and operations must be normal.
2	Check the analog audio playback. (Make the analog connections with a DVD player.)	Each channel audio and operations must be normal.
3	Check the digital audio playback. (Make the digital connections with a DVD player.)	Each channel audio and operations must be normal.
4	Check surround playback. (Select Surround mode and check the multichannel operations via the DSP circuit.)	Each channel audio and operations must be normal.
5	Check the video outputs. (Connect with a DVD player.)	Video and operations must be normal.
6	Check the tuner (AM and FM) operations.	Audio and operations must be normal.
7	Check the sound from headphone output.	Sound must be normal, without noise.
8	Check the appearance of the product.	No scratches or dirt on its appearance after receiving it for service.

See the table below for the items to be checked regarding video and audio.

Item to be checked regarding video	Item to be checked regarding audio
Block noise	Distortion
Horizontal noise	Noise
Flicker	Volume too low
Disturbed image (video jumpiness)	Volume too high
Too dark	Volume fluctuating
Too bright	Sound interrupted
Mottled color	

3.2 JIGS LIST

Jigs List




Jig Name	Part No.	Remarks
13P extension jig cable	GGD1740	Diagnosis (AMP7 Assy ↔ AUDIO Assy)
3P extension jig cable	GGD1741	Diagnosis (AMP7 Assy ↔ MAIN Assy)
Board to board extension jig cable	GGD1736	Diagnosis (D-MAIN Assy ↔ BRG Assy)
Board to board extension jig cable	GGD1798	Diagnosis (D-MAIN Assy ↔ IR Assy)
Board to board extension jig cable	GGD1799	Diagnosis (D-MAIN Assy ↔ IR Assy)
Conversion jig	GGD1802	Diagnosis (D-MAIN Assy ↔ BRG Assy)
Conversion jig	GGD1803	Diagnosis (D-MAIN Assy ↔ IR Assy)

Lubricants and Glues List



Name	Part No.	Remarks
Silicon grease	GEM1057	Refer to "9.2 EXTERIOR SECTION".
Silicon adhesive	GYA1011 (KE40RTV-W)	Refer to "9.2 EXTERIOR SECTION".

3.3 PCB LOCATIONS

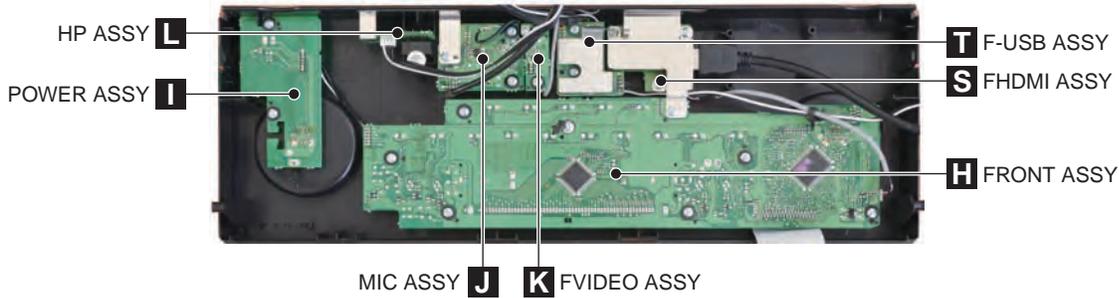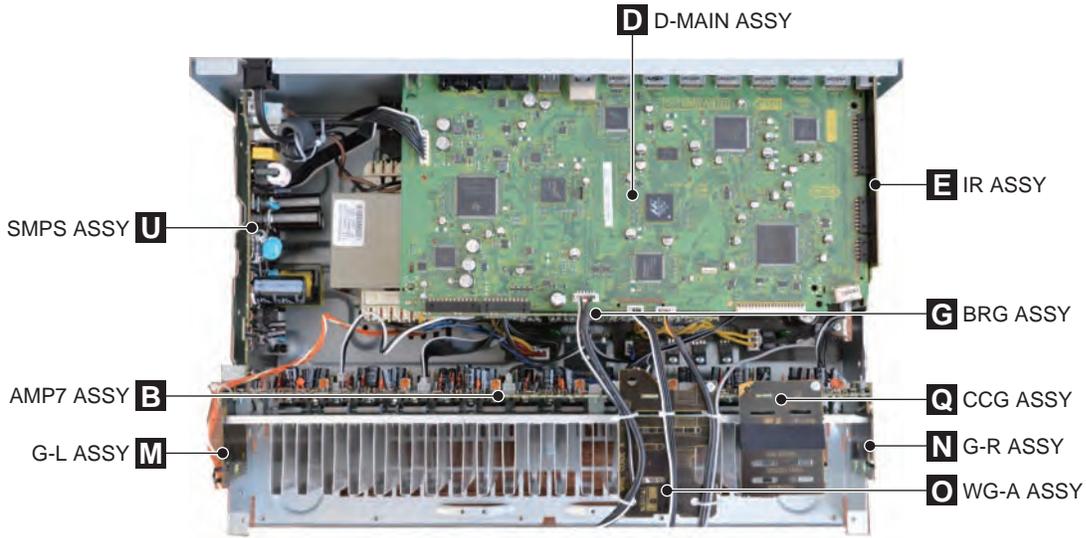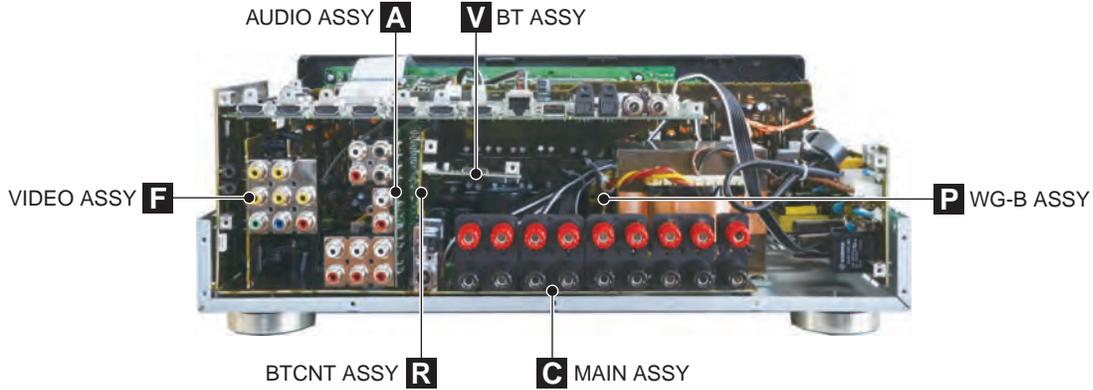


NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.
 ● The \triangle mark found on some component parts indicates the importance of the safety factor of the part.
 Therefore, when replacing, be sure to use parts of identical designation.

LIST OF ASSEMBLIES


Mark	Symbol and Description	VSX-1127-K/CUXE	VSX-1122-K/CUXESM	VSX-60/UXECB	VSX-1027-K/CUXE
NSP	1..PCB TTL ASSY MAIN	7025HK1110020-IL	7025HK1110010-IL	7025HK1110030-IL	7025HK1109010-IL
	2..MAIN ASSY	7028071711010-IL	7028071711010-IL	7028071711040-IL	7028071711010-IL
	2..VIDEO ASSY	7028071712020-IL	7028071712070-IL	7028071712040-IL	7028071712070-IL
	2..G-L ASSY	7028071713040-IL	7028071713040-IL	7028071713040-IL	7028071713040-IL
	2..G-R ASSY	7028071714040-IL	7028071714040-IL	7028071714040-IL	7028071714040-IL
	2..WG-A ASSY	7028071715040-IL	7028071715040-IL	7028071715040-IL	7028071715040-IL
	2..WG-B ASSY	7028071716040-IL	7028071716040-IL	7028071716040-IL	7028071716040-IL
NSP	1..PCB TTL ASSY DMAIN	7025HK1110021-IL	7025HK1110011-IL	7025HK1110031-IL	7025HK1109011-IL
	2..D-MAIN ASSY	7028071752020-IL	7028071752040-IL	7028071752040-IL	7028071752070-IL
NSP	1..PCB TTL ASSY FRONT	7025HK1110022-IL	7025HK1110012-IL	7025HK1110032-IL	7025HK1109012-IL
	2..FRONT ASSY	7028071721050-IL	7028071721010-IL	7028071721040-IL	7028071721060-IL
	2..POWER ASSY	7028071722010-IL	7028071722010-IL	7028071722040-IL	7028071722010-IL
	2..MIC ASSY	7028071723040-IL	7028071723040-IL	7028071723040-IL	7028071723040-IL
	2..FVIDEO ASSY	7028071724040-IL	7028071724040-IL	7028071724040-IL	7028071724040-IL
	2..HP ASSY	7028071725040-IL	7028071725040-IL	7028071725040-IL	7028071725040-IL
NSP	1..PCB TTL ASSY AUDIO	7025HK1110023-IL	7025HK1110013-IL	7025HK1110033-IL	7025HK1109013-IL
	2..AUDIO ASSY	7028071741050-IL	7028071741010-IL	7028071741040-IL	7028071741010-IL
NSP	1..PCB TTL ASSY IR	7025HK1110024-IL	7025HK1110014-IL	7025HK1110034-IL	7025HK1109014-IL
	2..IR ASSY	7028071771010-IL	7028071771010-IL	7028071771040-IL	7028071771010-IL
	2..SMPS ASSY	7028071772010-IL	7028071772010-IL	7028071772040-IL	7028071772010-IL
	2..BRG ASSY	7028071773040-IL	7028071773040-IL	7028071773040-IL	7028071773070-IL
	2..BTCNT ASSY	7028071774040-IL	7028071774040-IL	7028071774040-IL	7028071774040-IL
	2..CCG ASSY	7028071775040-IL	7028071775040-IL	7028071775040-IL	7028071775040-IL
NSP	1..PCB TTL ASSY AMP7	7025HK1110025-IL	7025HK1110015-IL	7025HK1110035-IL	7025HK1109015-IL
	2..AMP7 ASSY	7028071731040-IL	7028071731040-IL	7028071731040-IL	7028071731040-IL
NSP	1..PCB TTL ASSY FHDMI	7025HK1110026-IL	7025HK1110016-IL	7025HK1110036-IL	Not used
	2..FHDMI ASSY	7028071791040-IL	7028071791040-IL	7028071791040-IL	Not used
NSP	1..PCB TTL ASSY F-USB	7025HK1110027-IL	7025HK1110017-IL	7025HK1110037-IL	7025HK1109017-IL
	2..F-USB ASSY	7028071761020-IL	7028071761020-IL	7028071761020-IL	7028071761020-IL
NSP	1..PCB TTL ASSY BT	7025HK1110028-IL	7025HK1110018-IL	7025HK1110038-IL	7025HK1109018-IL
	2..BT ASSY	7028070231010-IL	7028070231010-IL	7028070231010-IL	7028070231010-IL

4. BLOCK DIAGRAM

4.1 OVERALL WIRING DIAGRAM

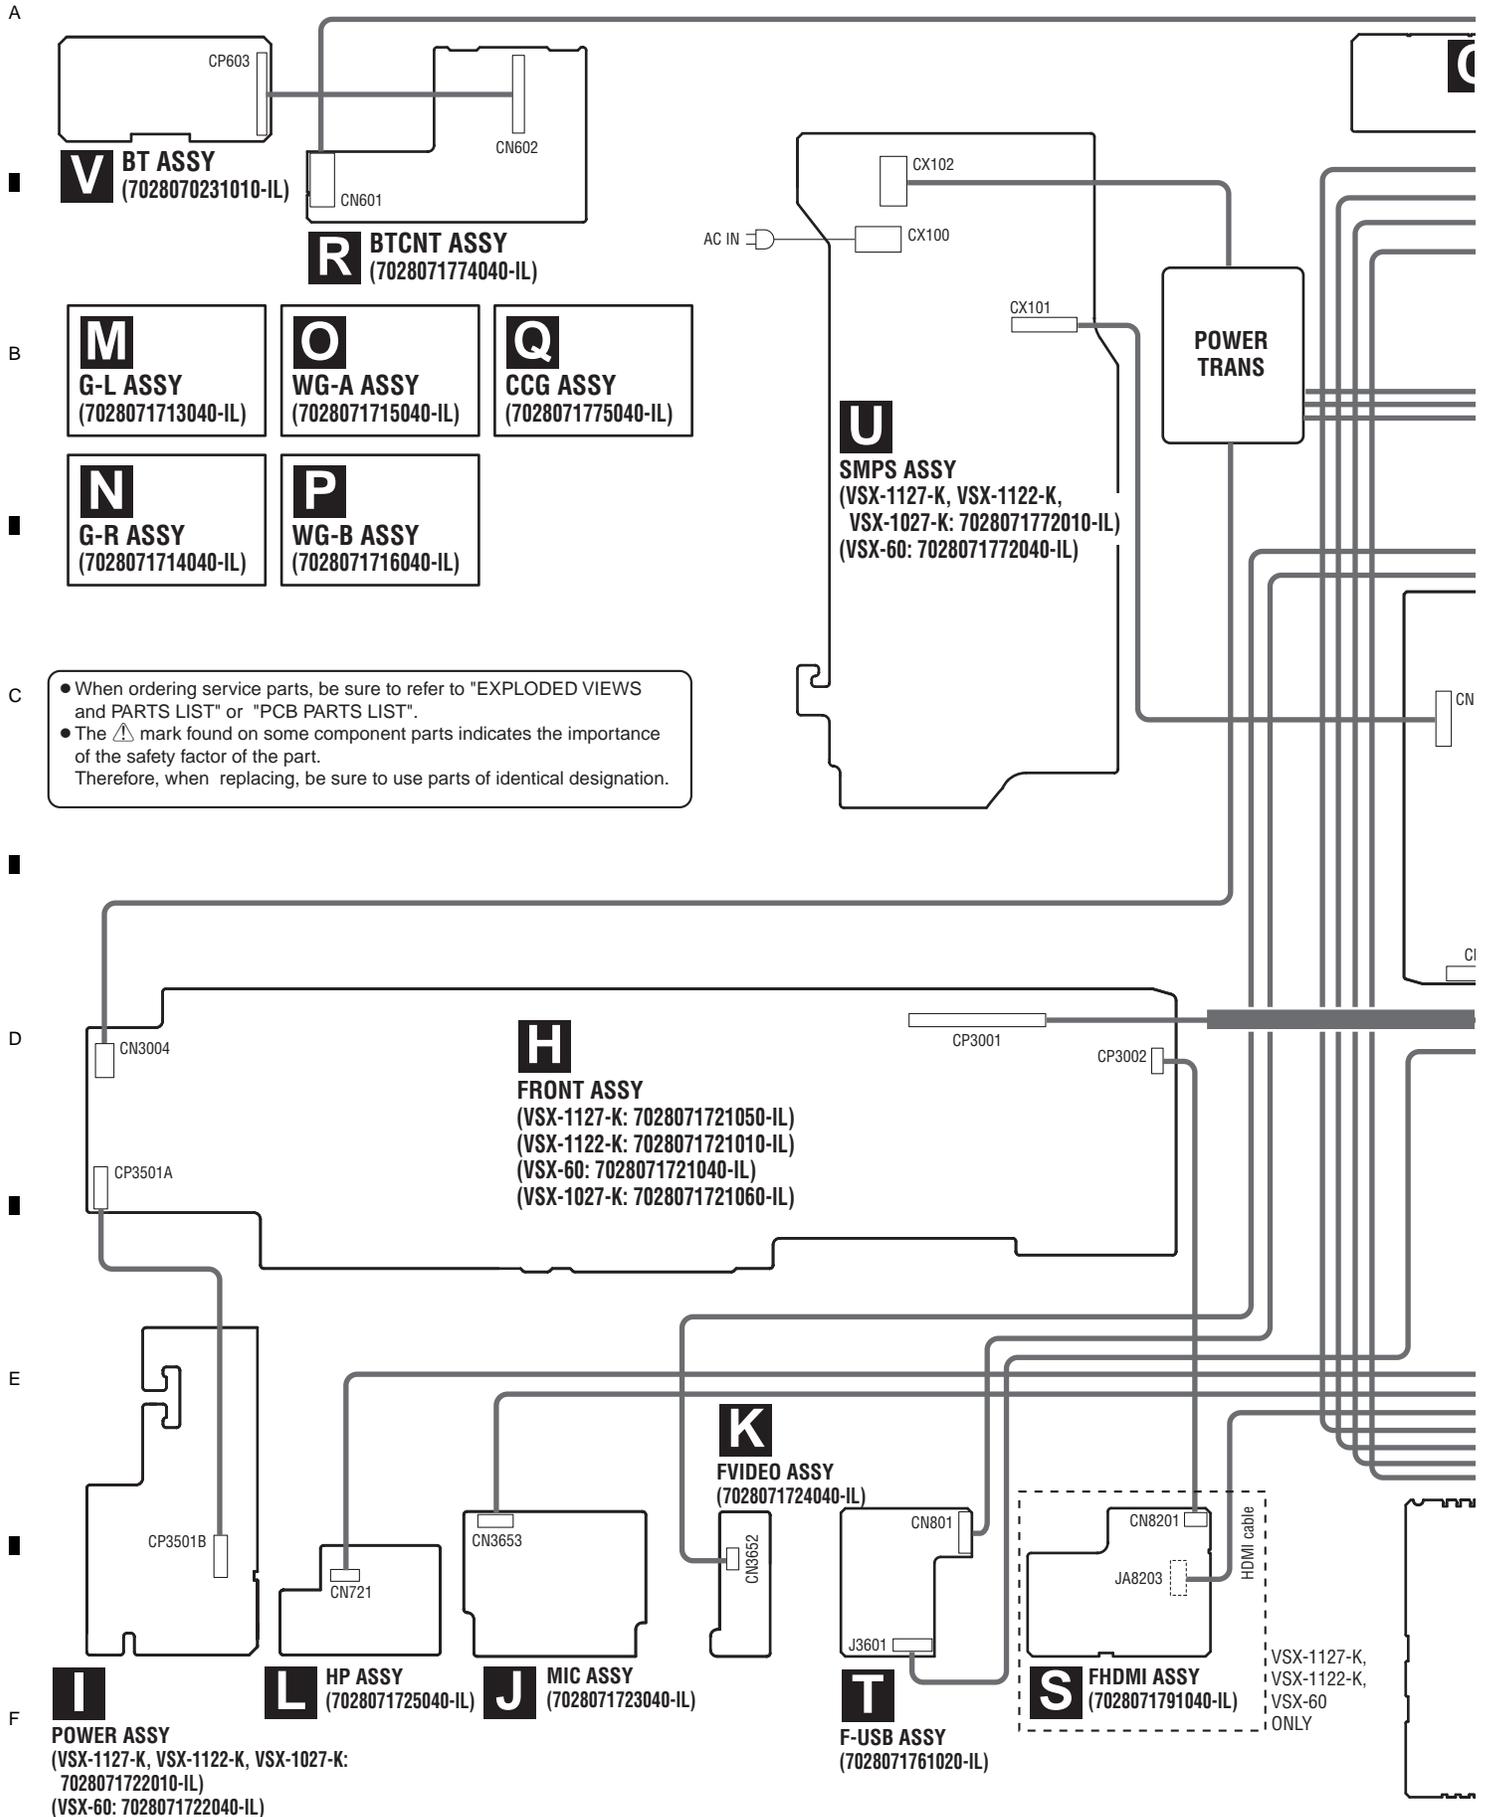


A
B
C
D
E
F

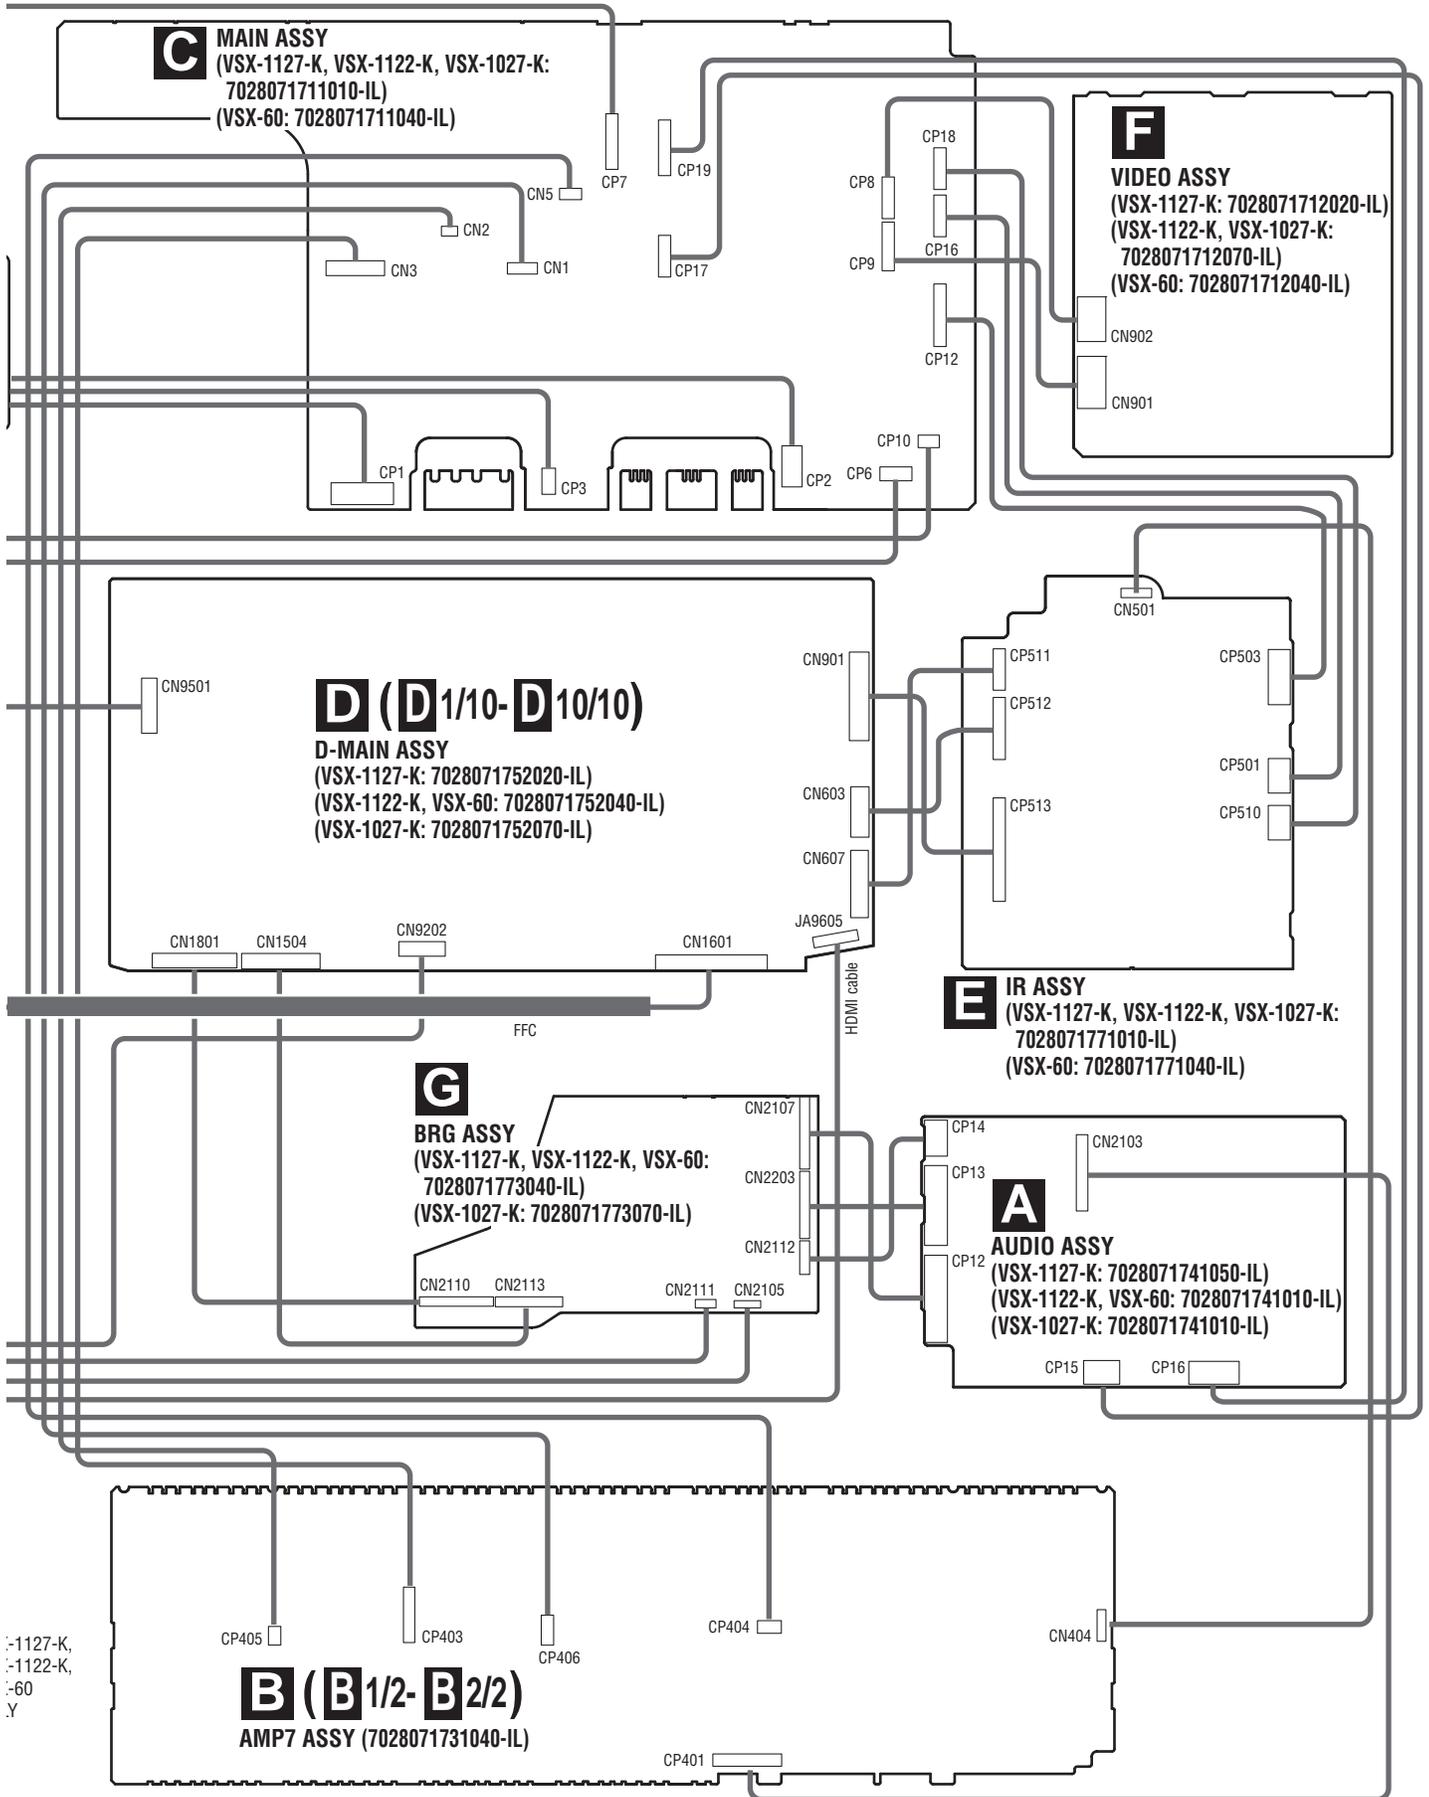


-1127-K,
-1122-K,
-60
Y

4.2 AUDIO BLOCK DIAGRAM

1 2 3 4

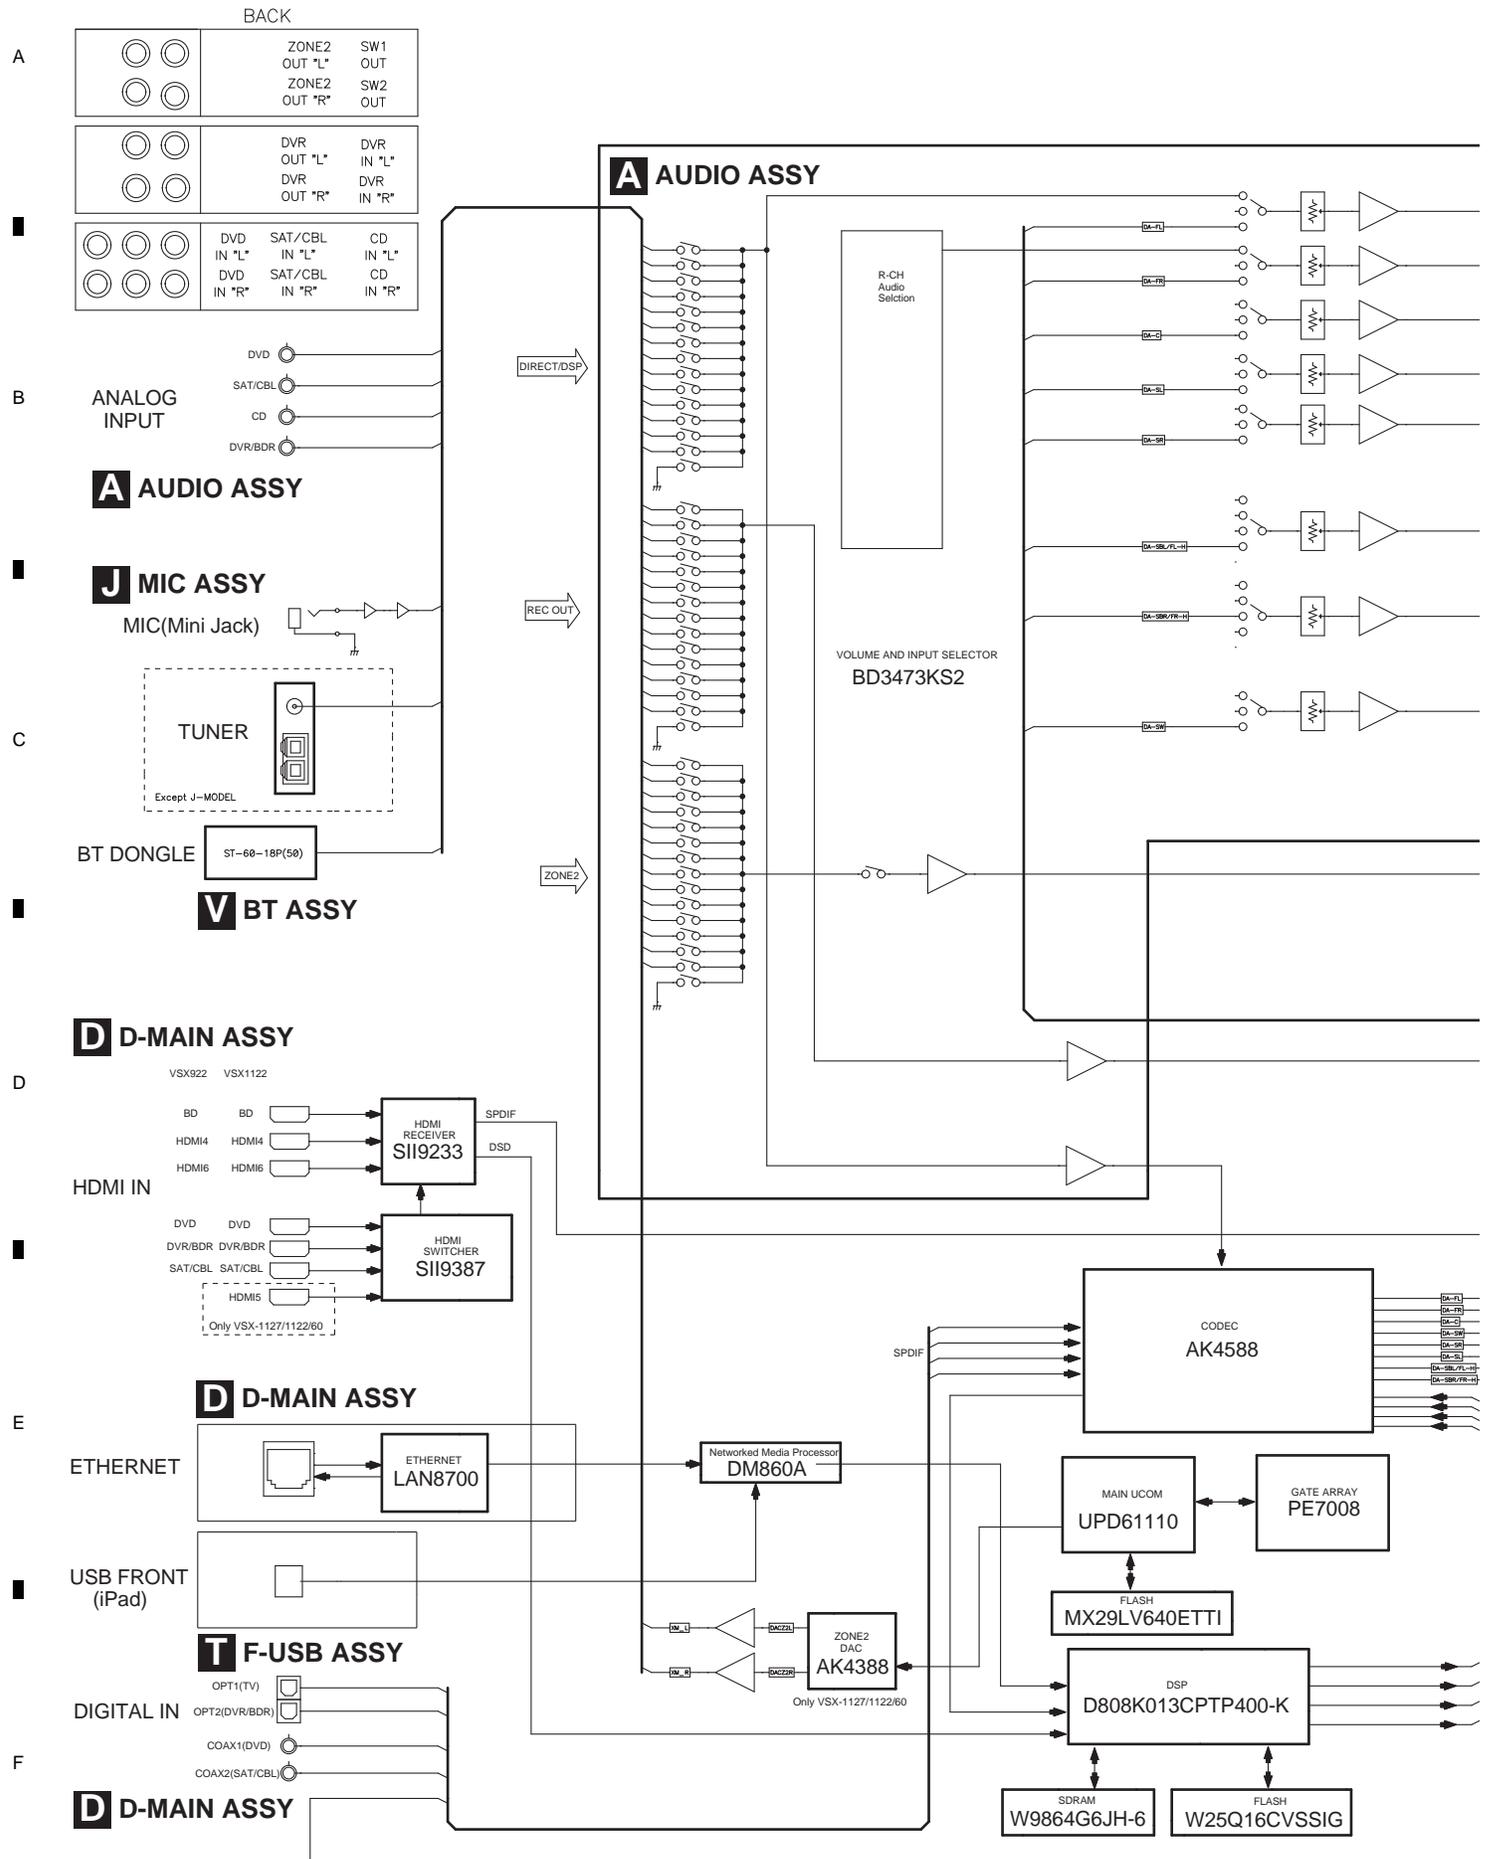


1 2 3 4

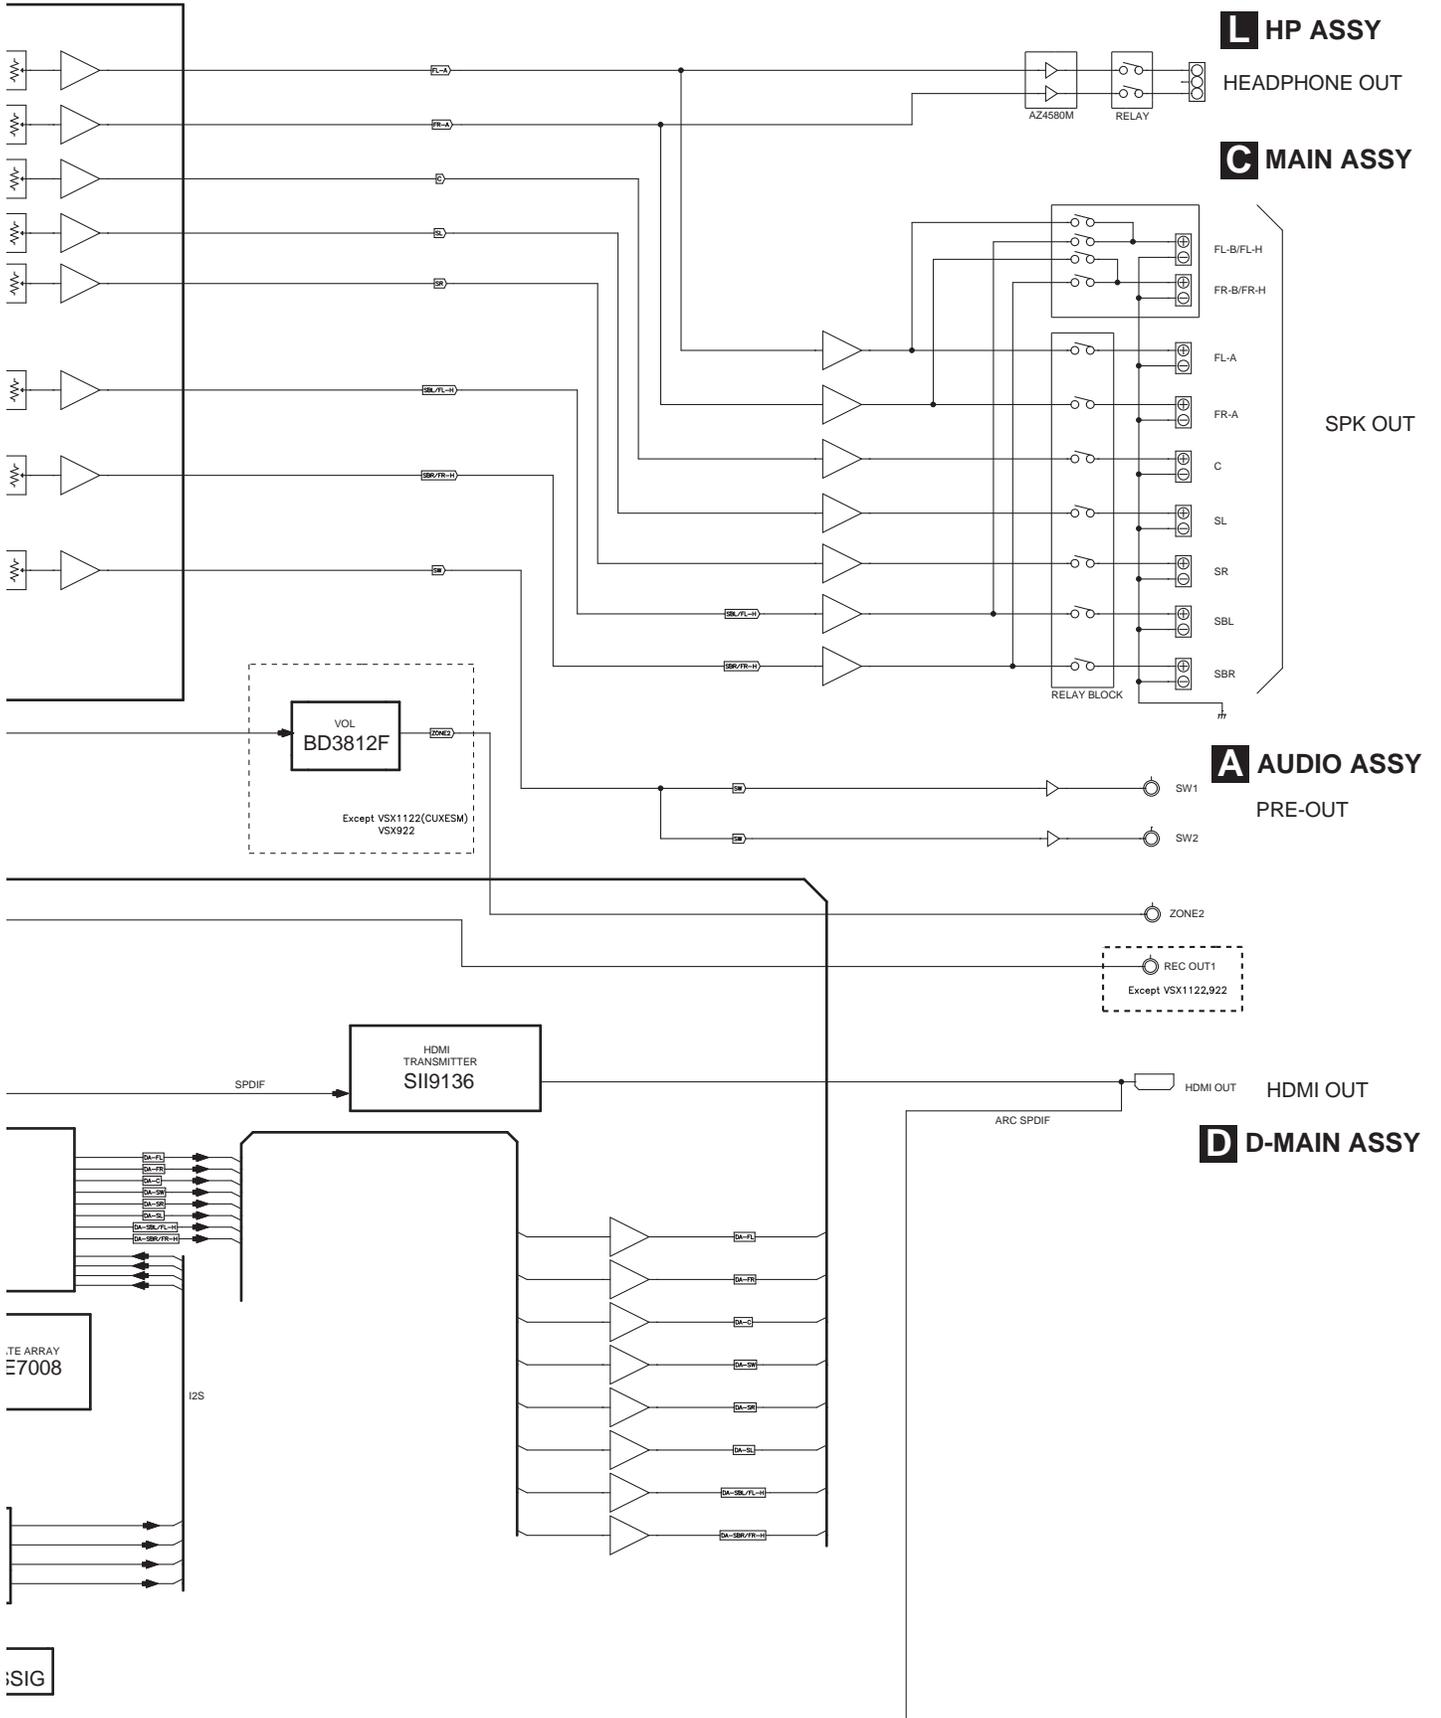


4.3 D-AUDIO BLOCK DIAGRAM


D-MAIN ASSY


A
B
C
D
E
F

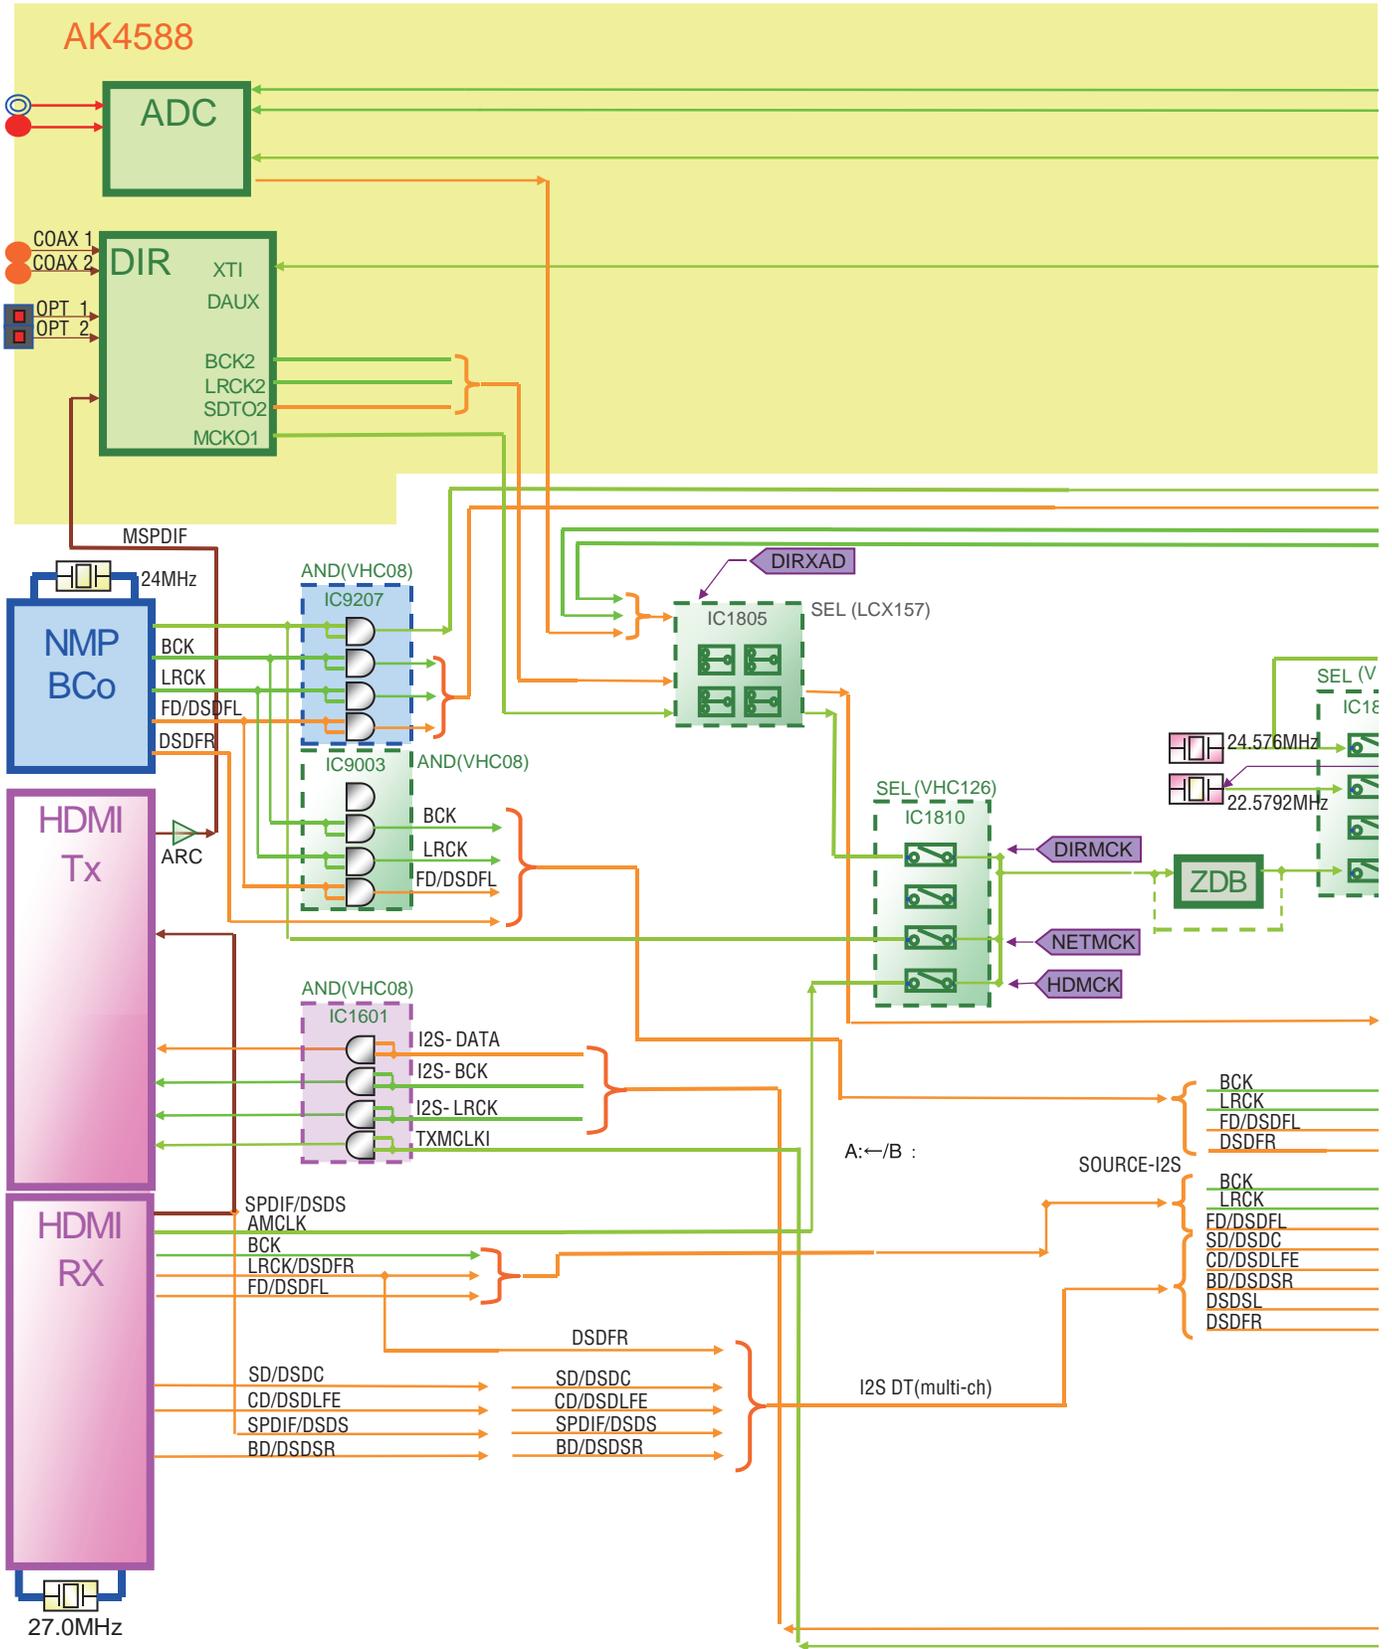

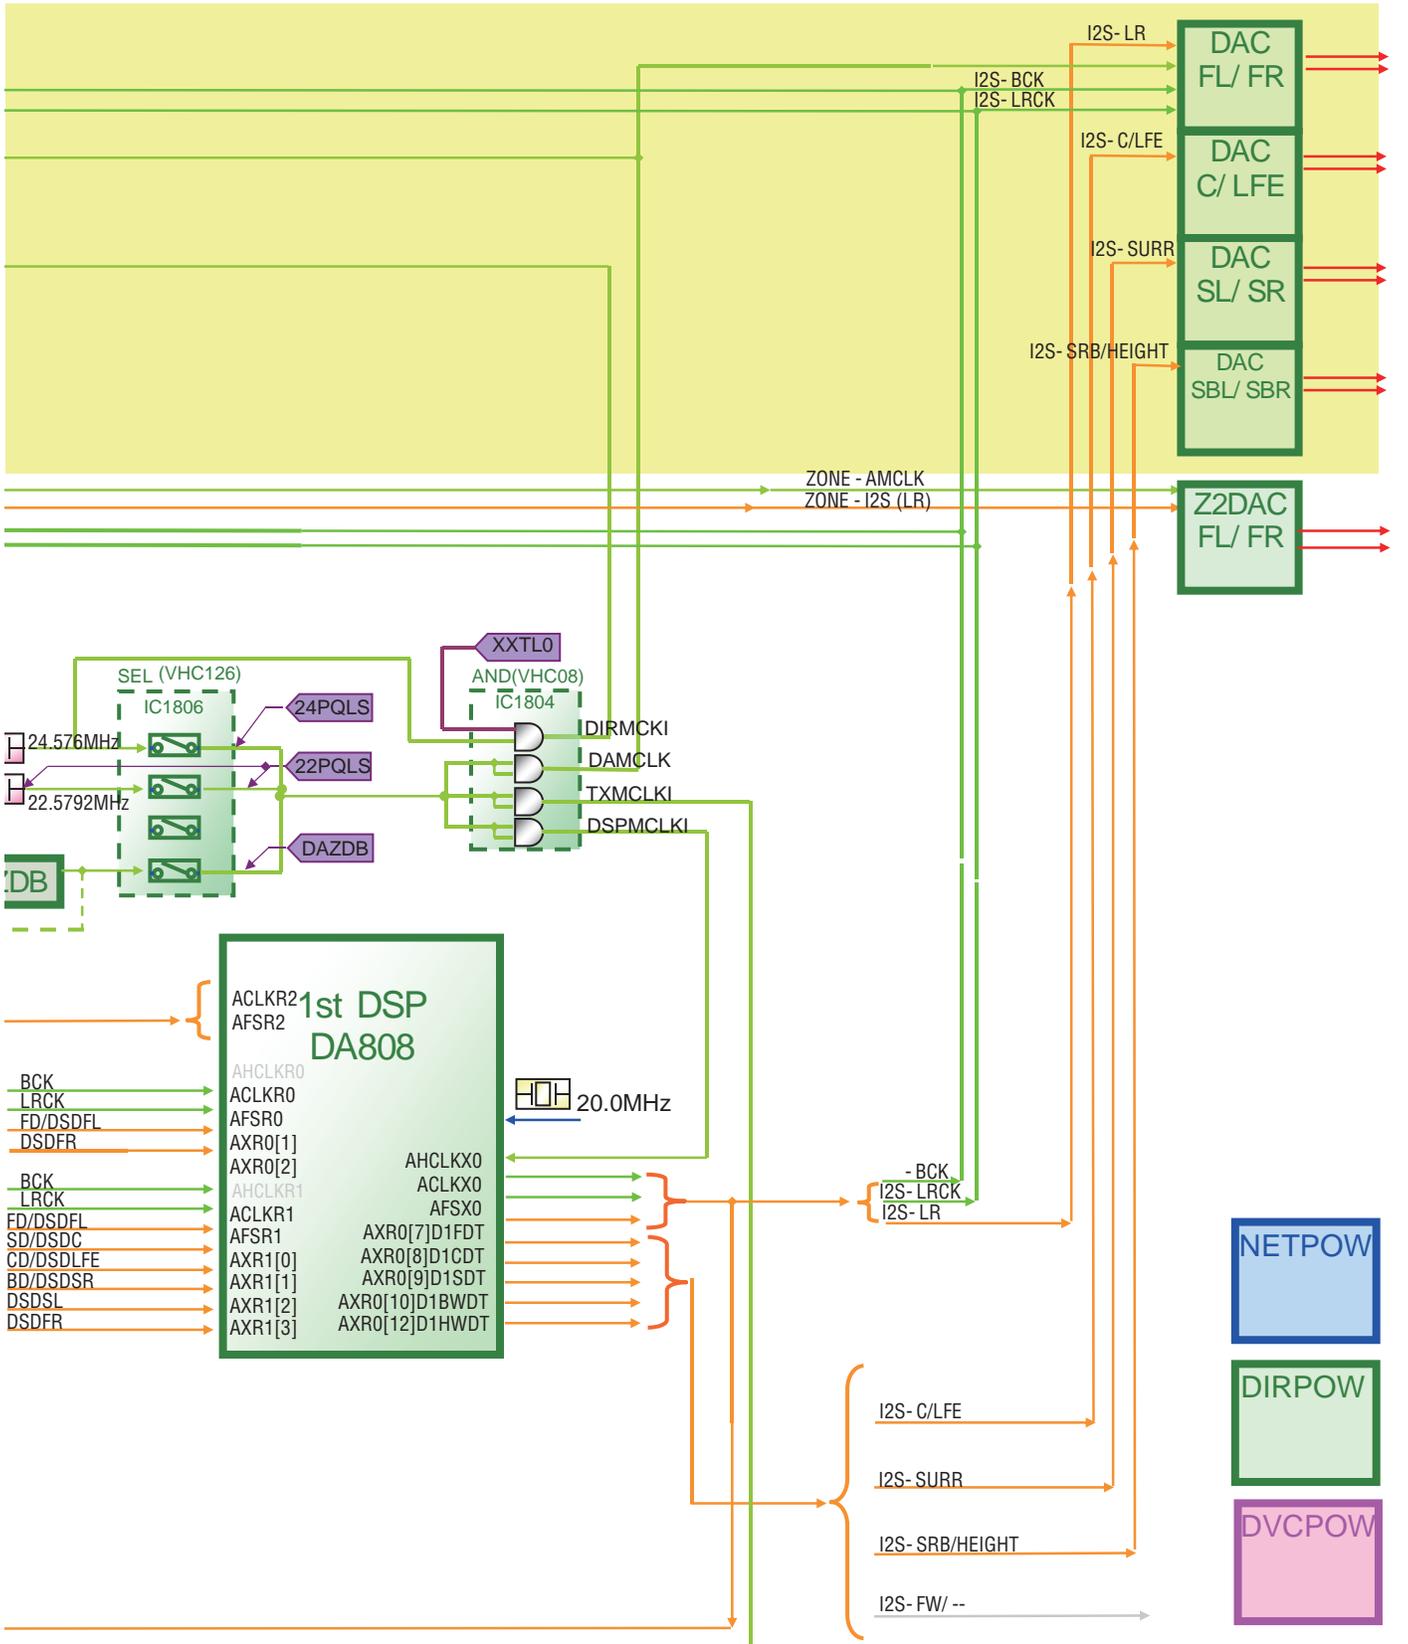


4.4 D-VIDEO BLOCK DIAGRAM

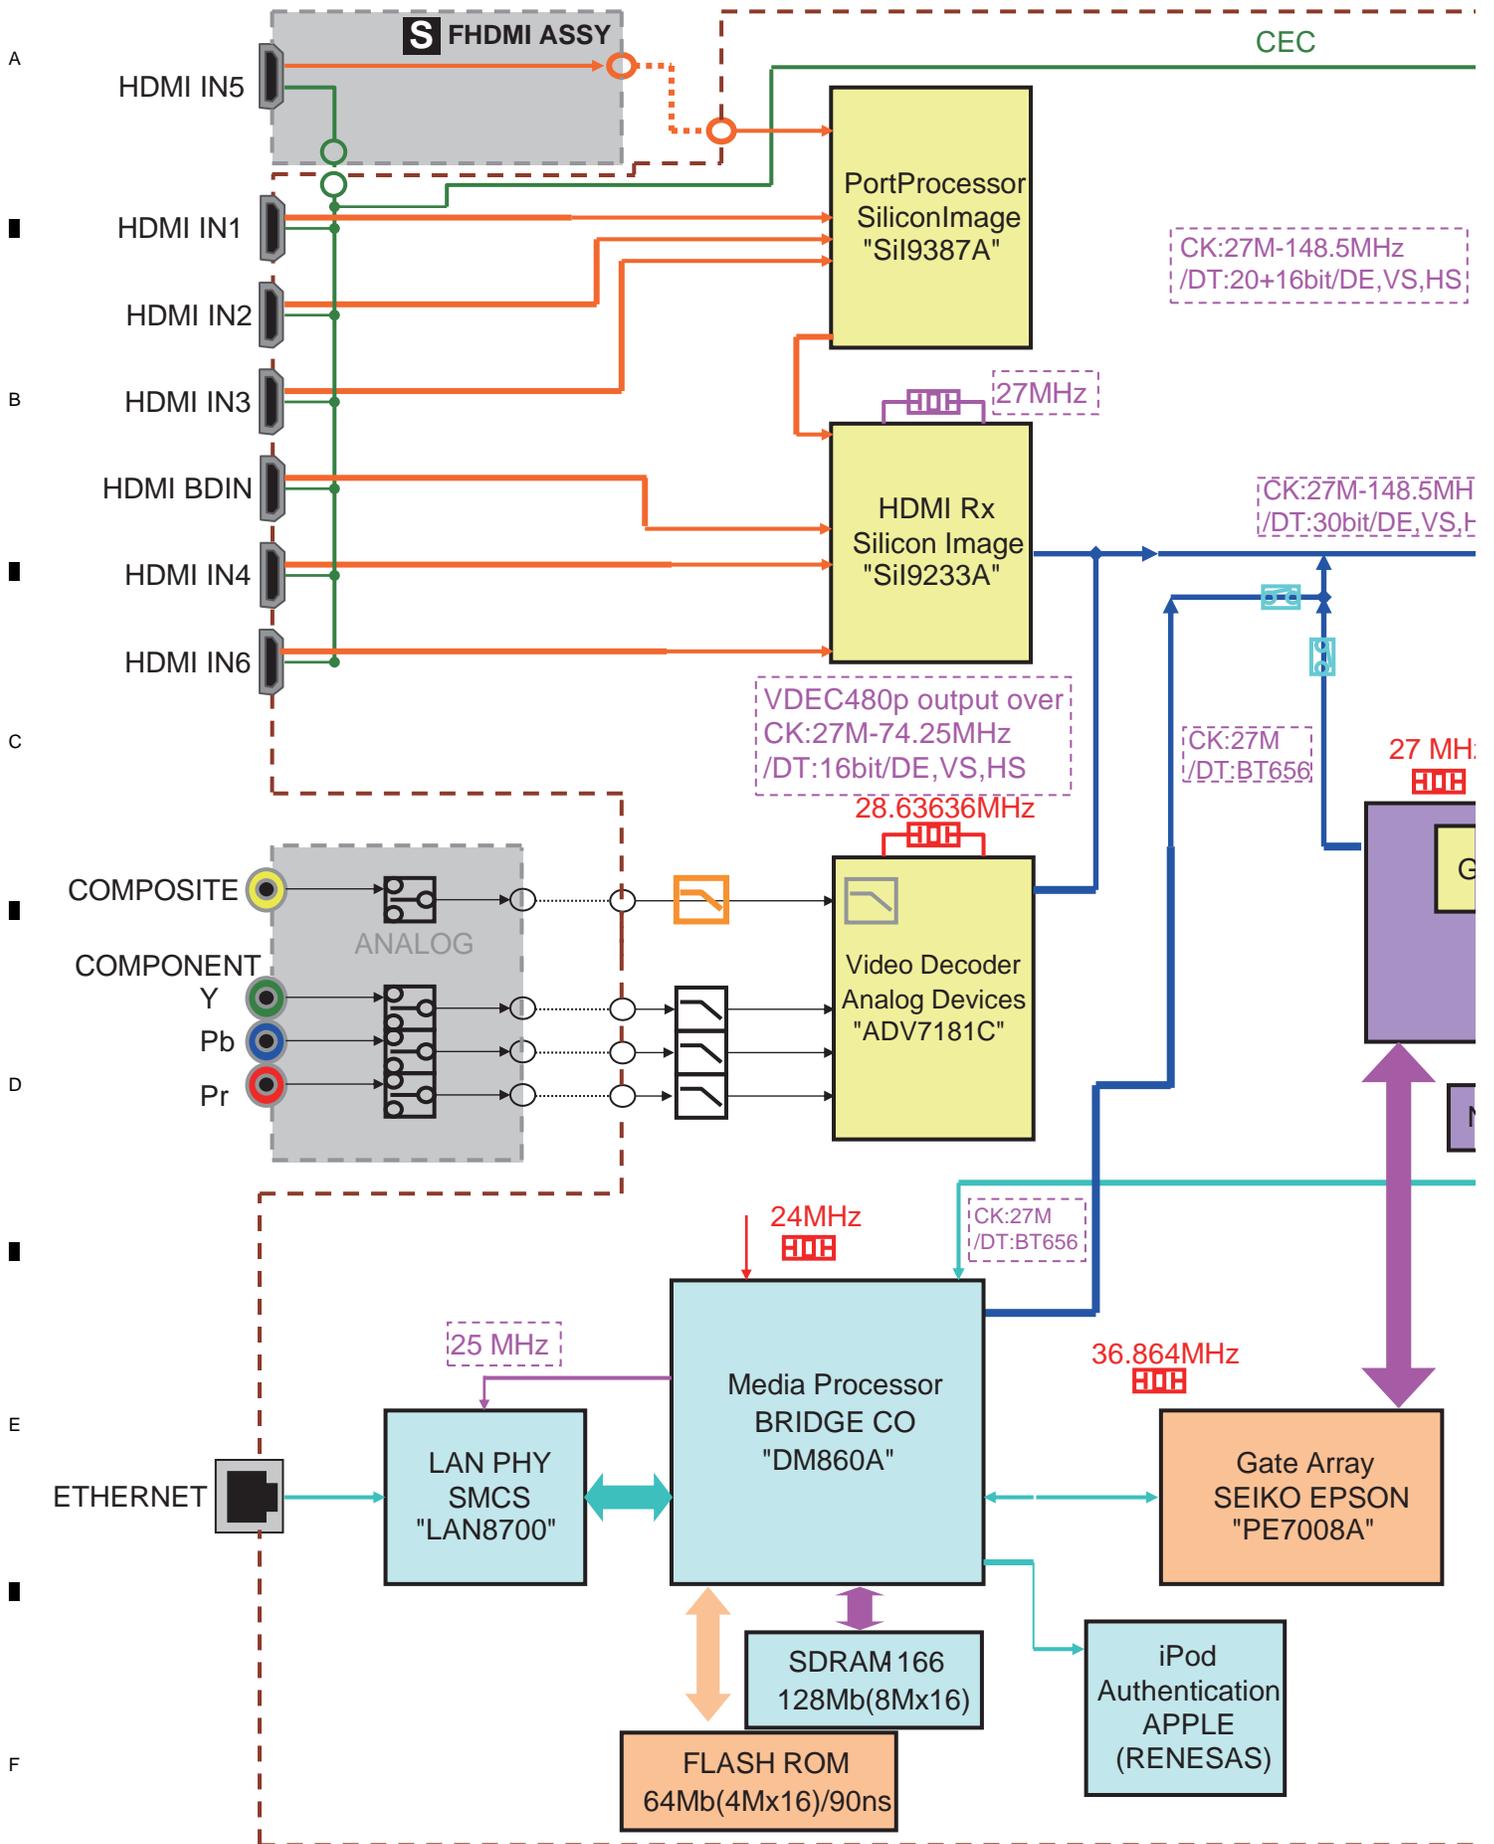


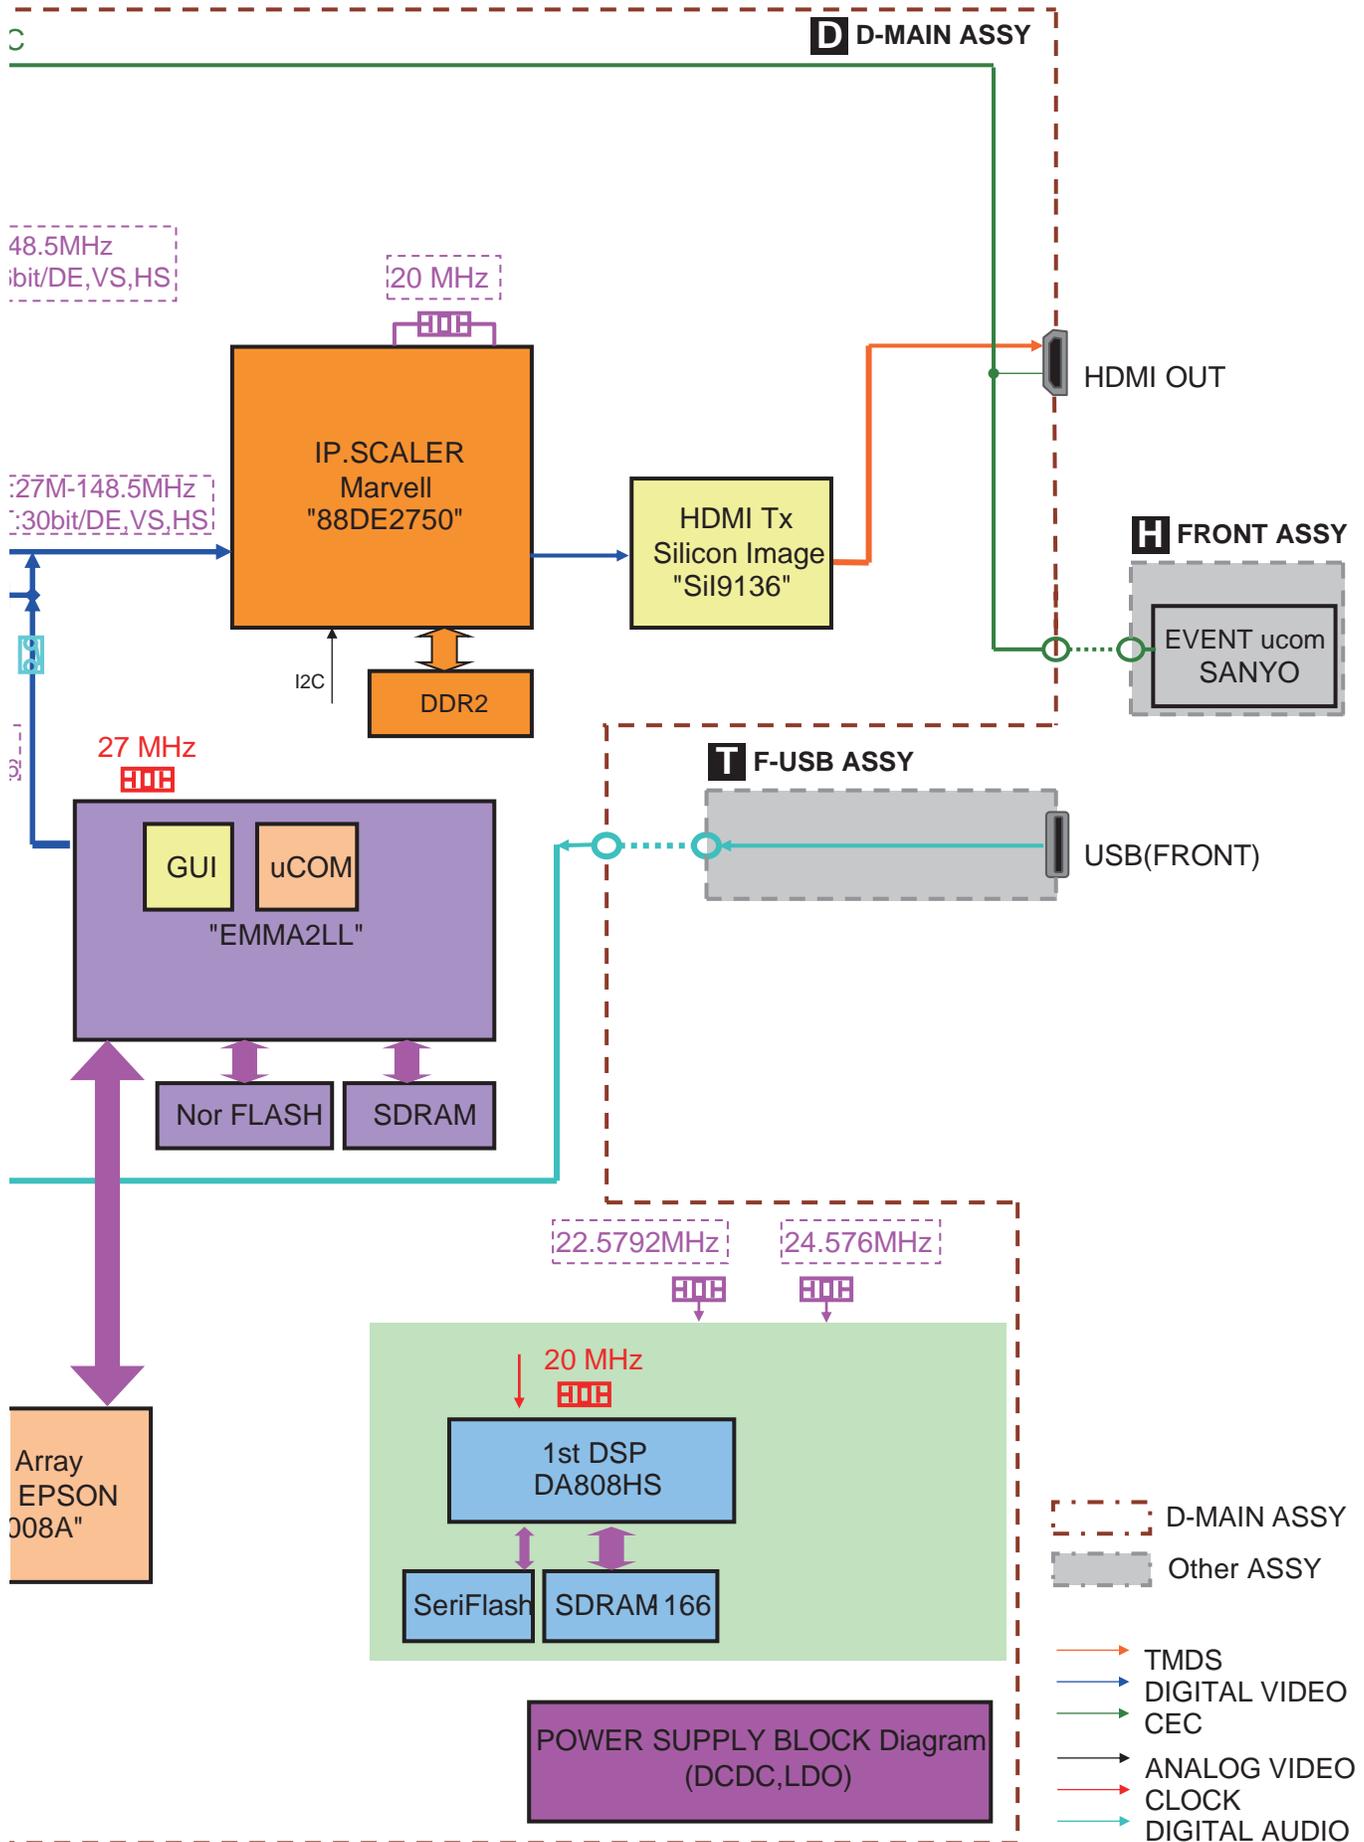


4.5 VIDEO BLOCK DIAGRAM


D D-MAIN ASSY

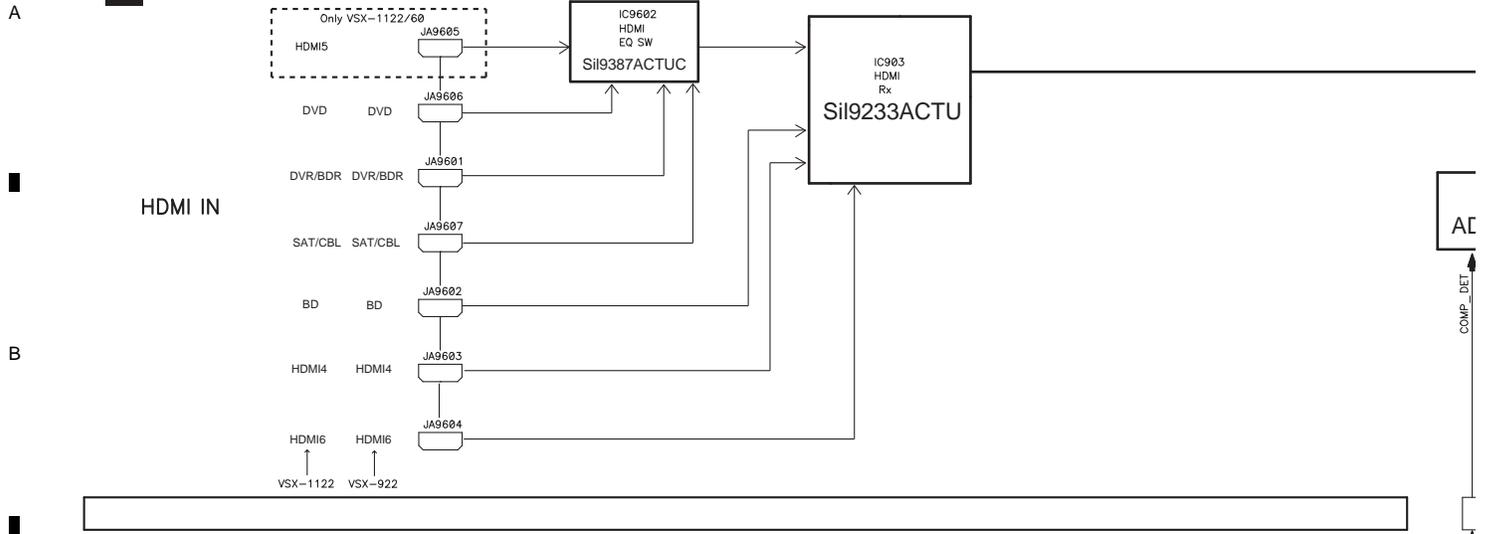

BACK

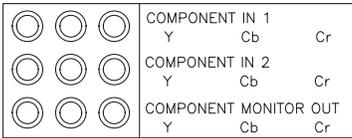

K FVIDEO ASSY

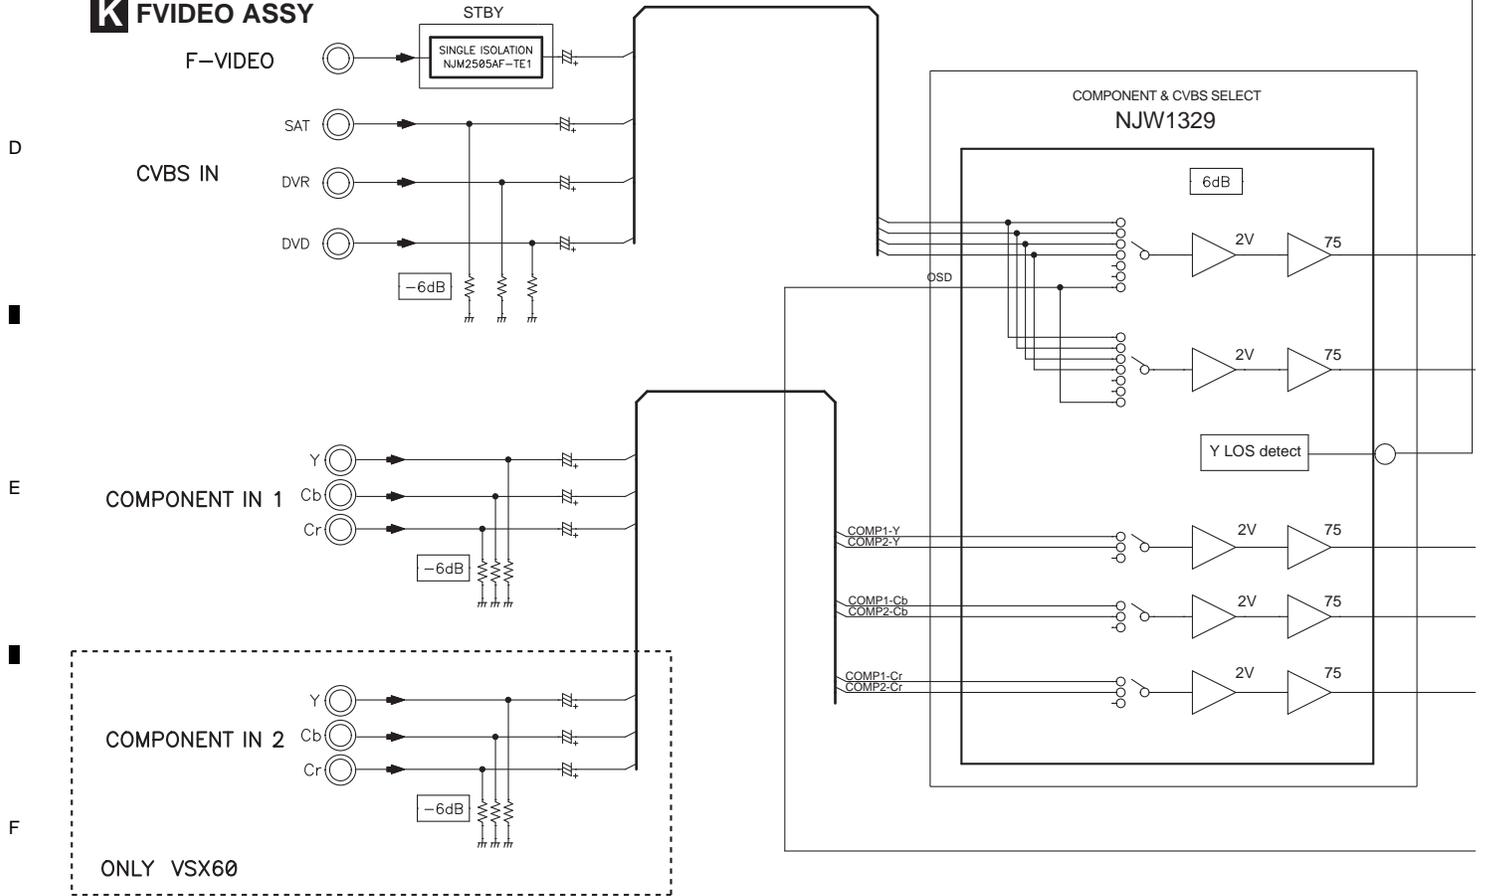

 TMS
 Video BUS
 Analog Video

A


B

C

D


E


F

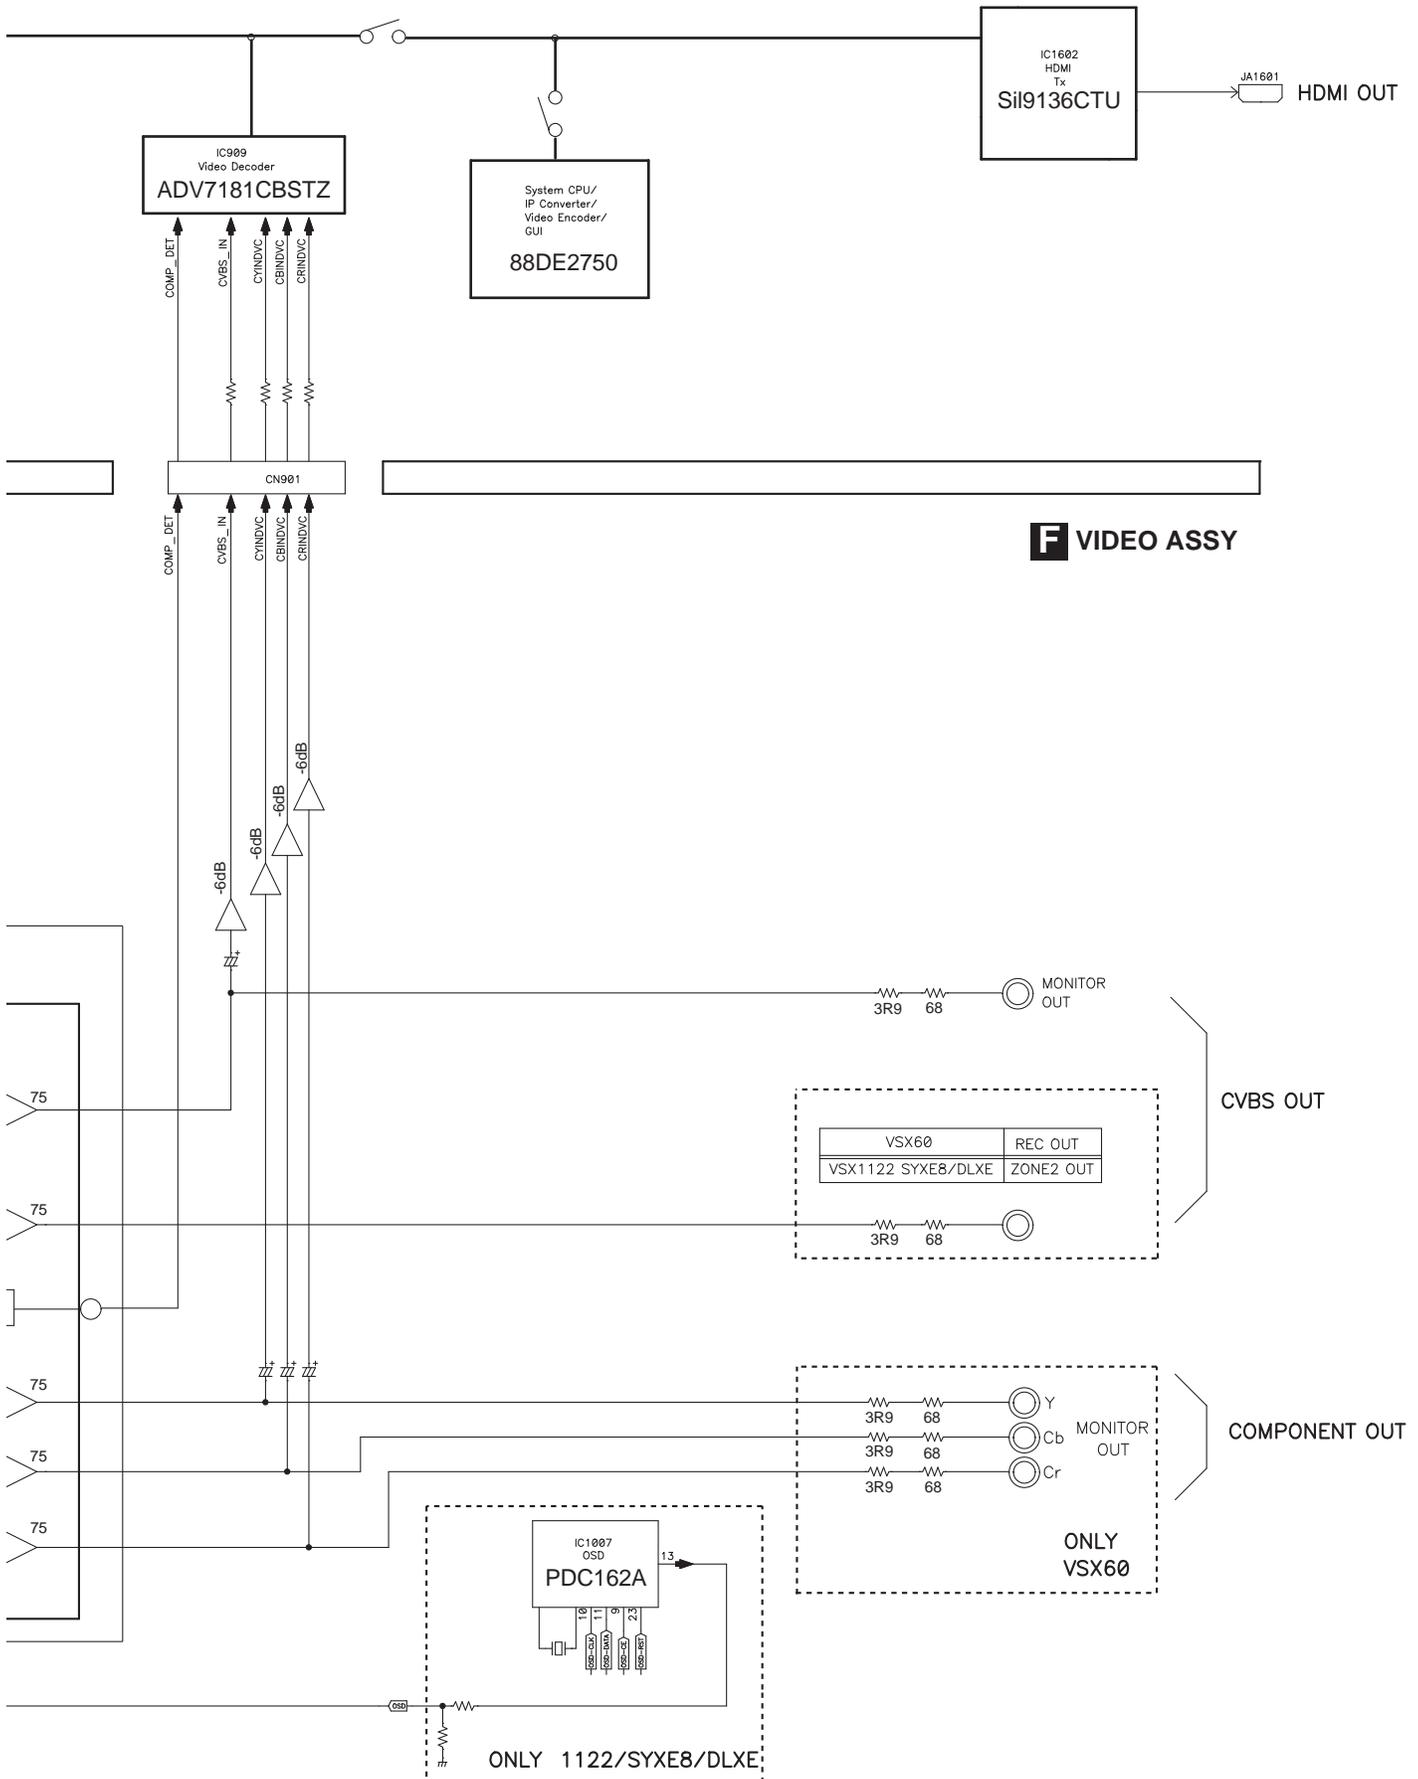

4.6 POWER SUPPLY BLOCK DIAGRAM

A
B
C
D
E
F

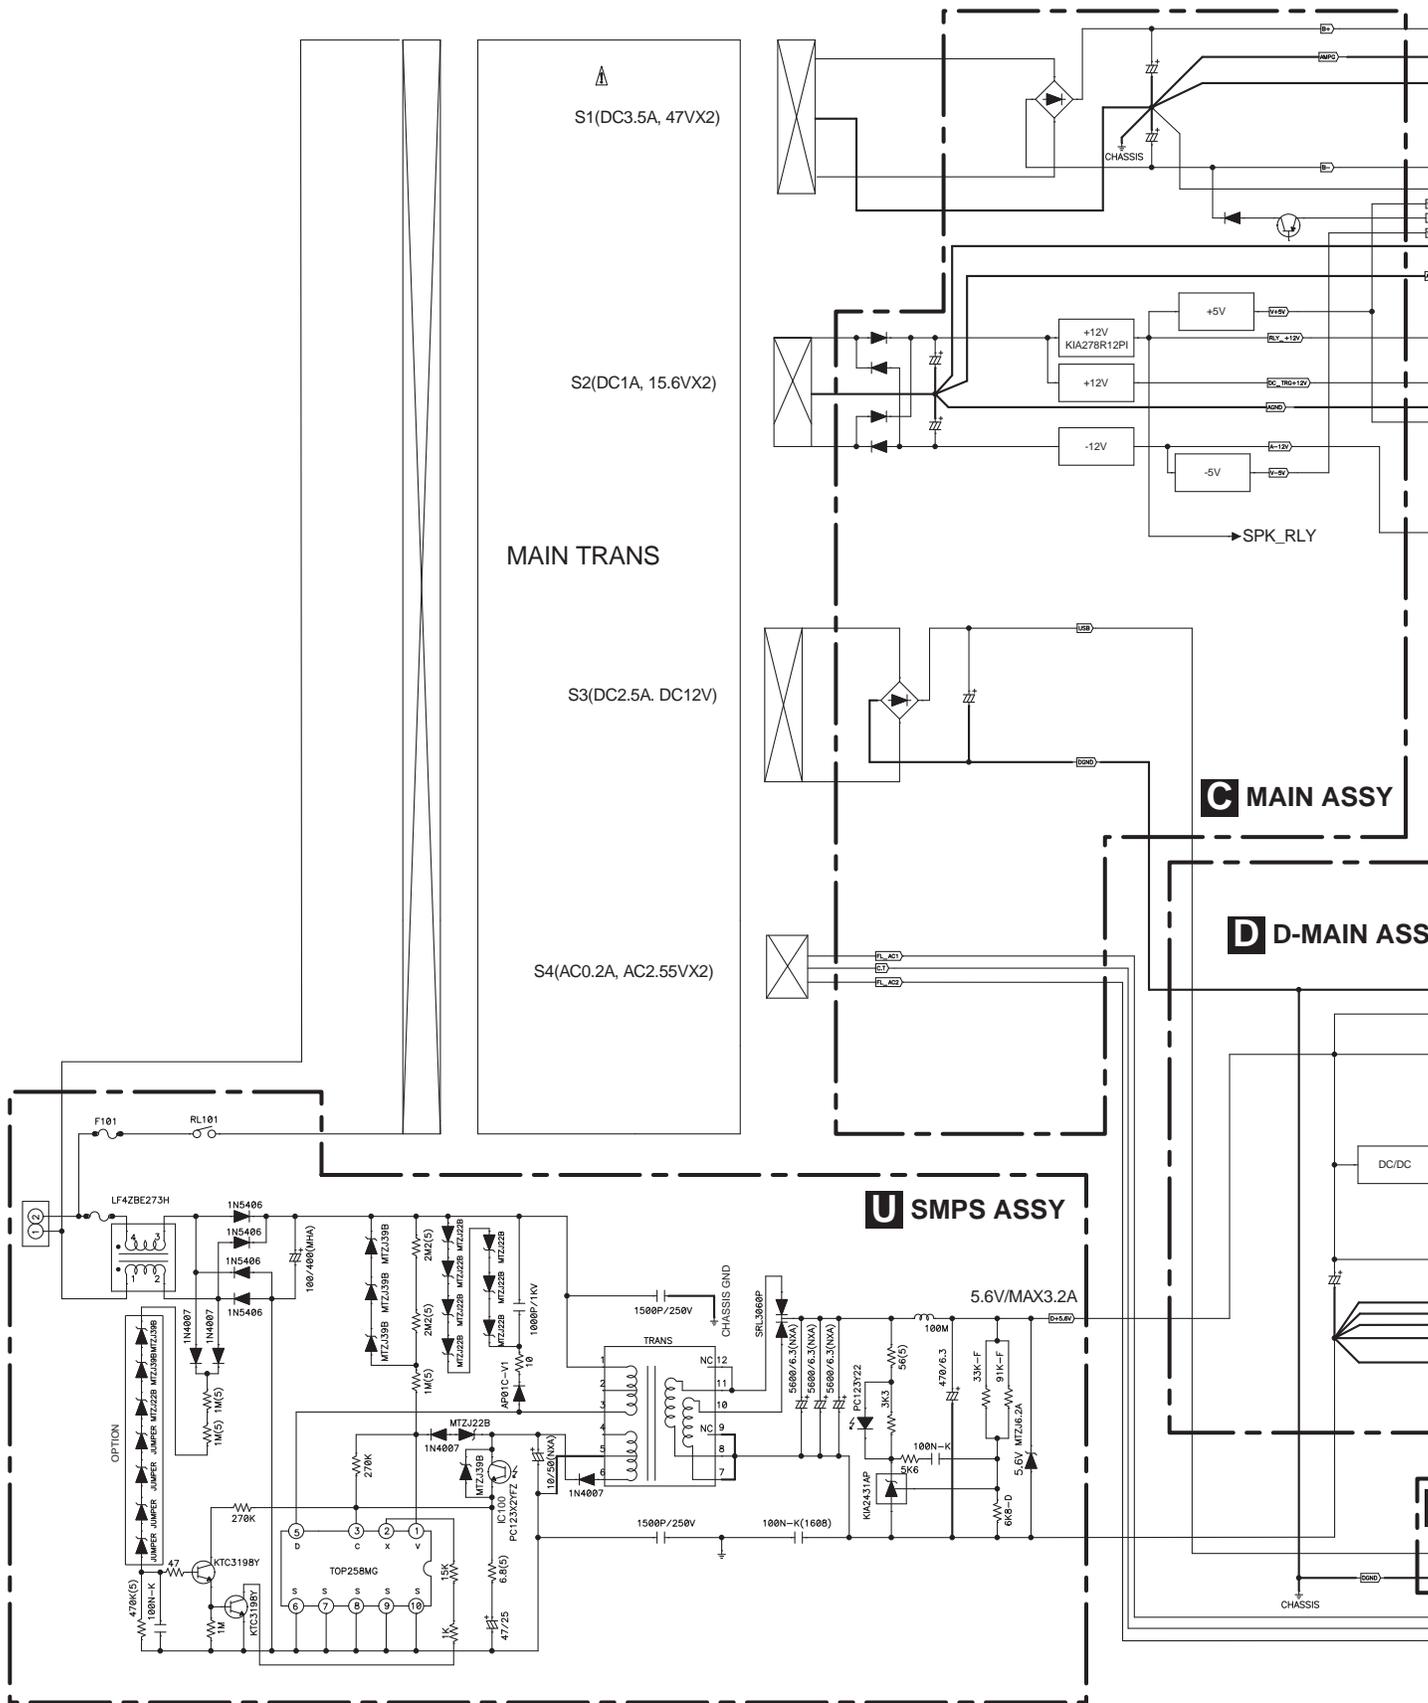


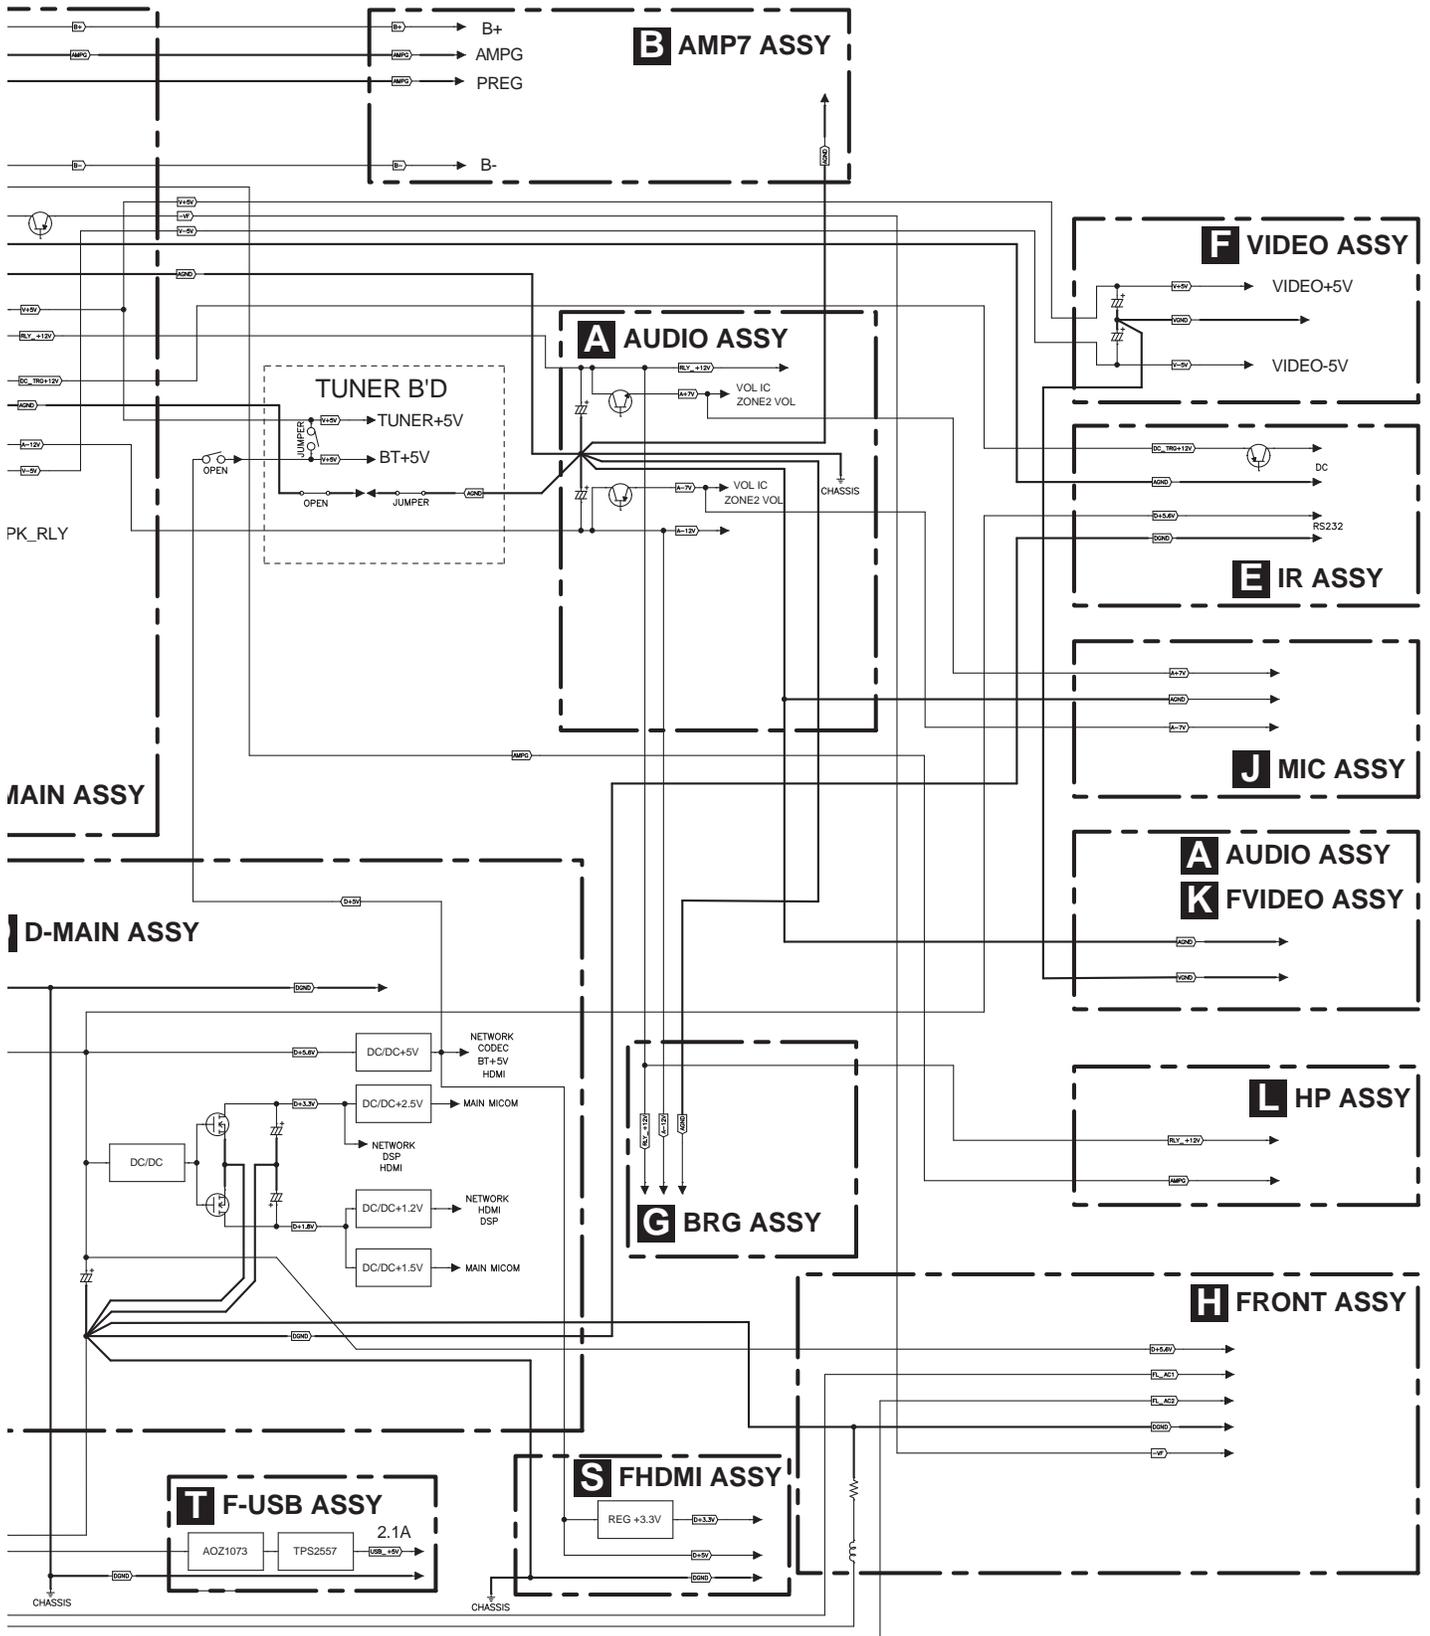


5. DIAGNOSIS

5.1 TROUBLESHOOTING


A No Power

This is just for general reference and does not including every single case.

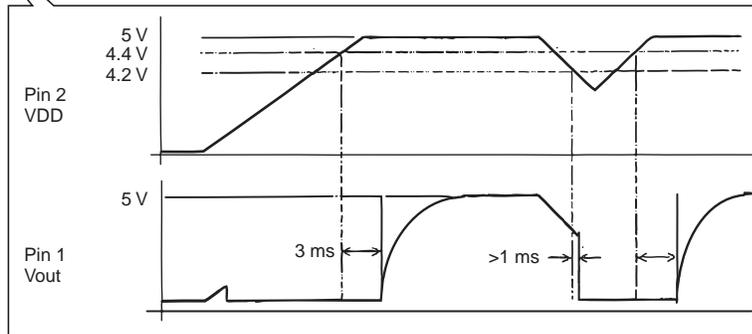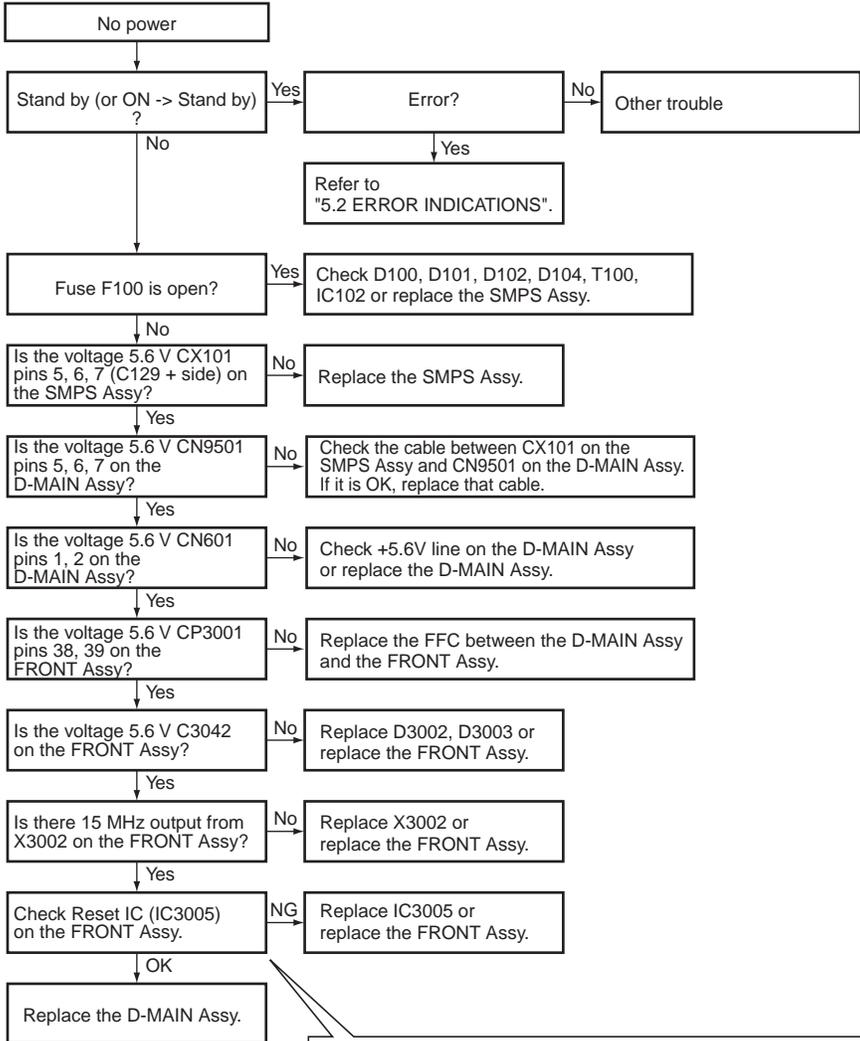


No FL Display


This is just for general reference and does not including every single case.

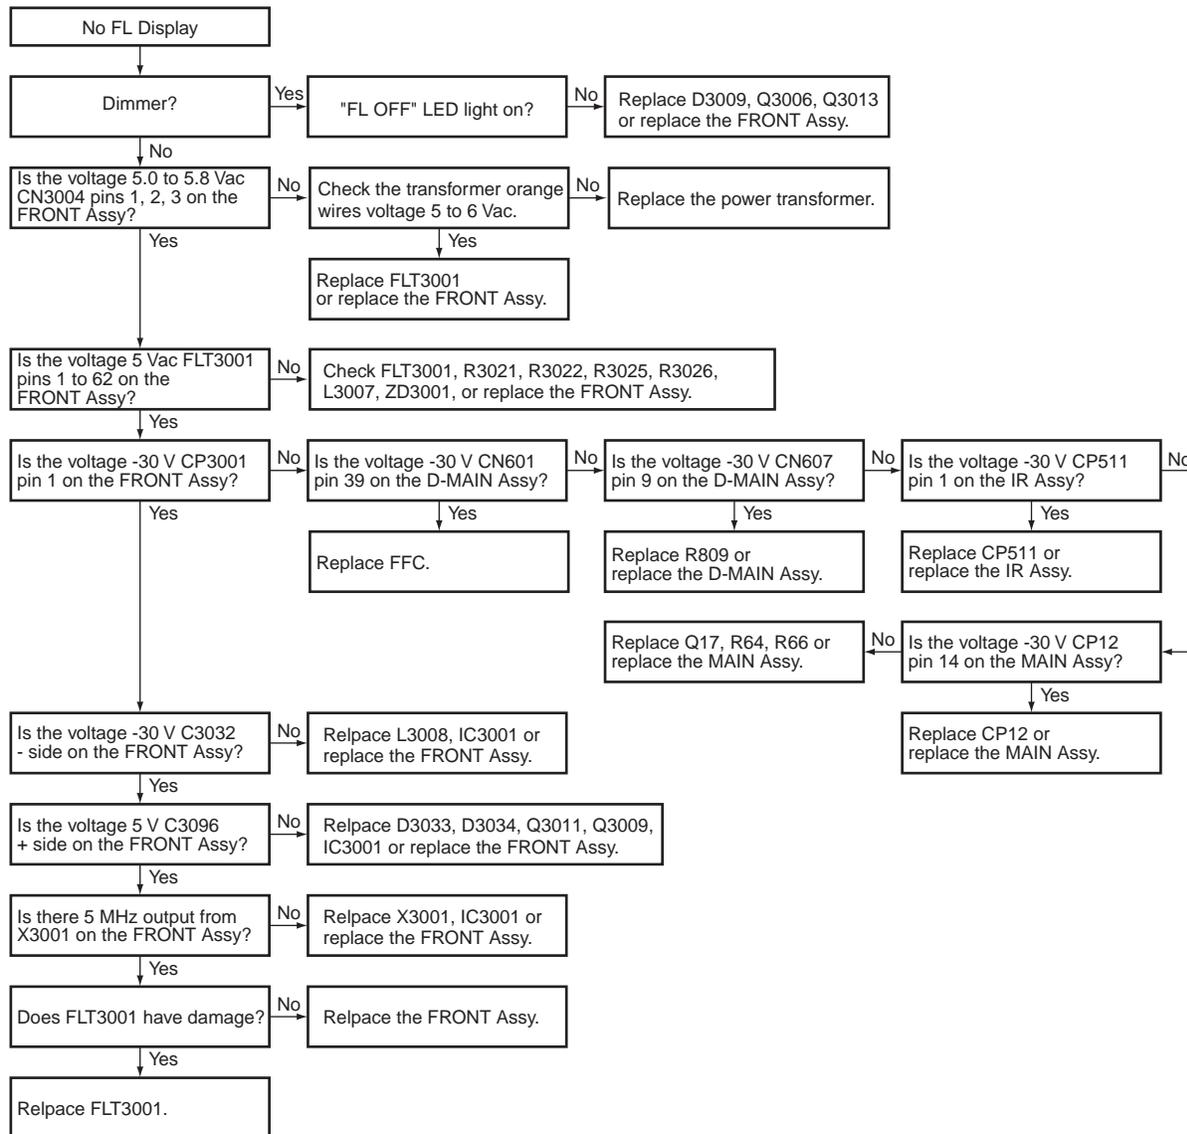

A No Sound

This is just for general reference and does not including every single case.

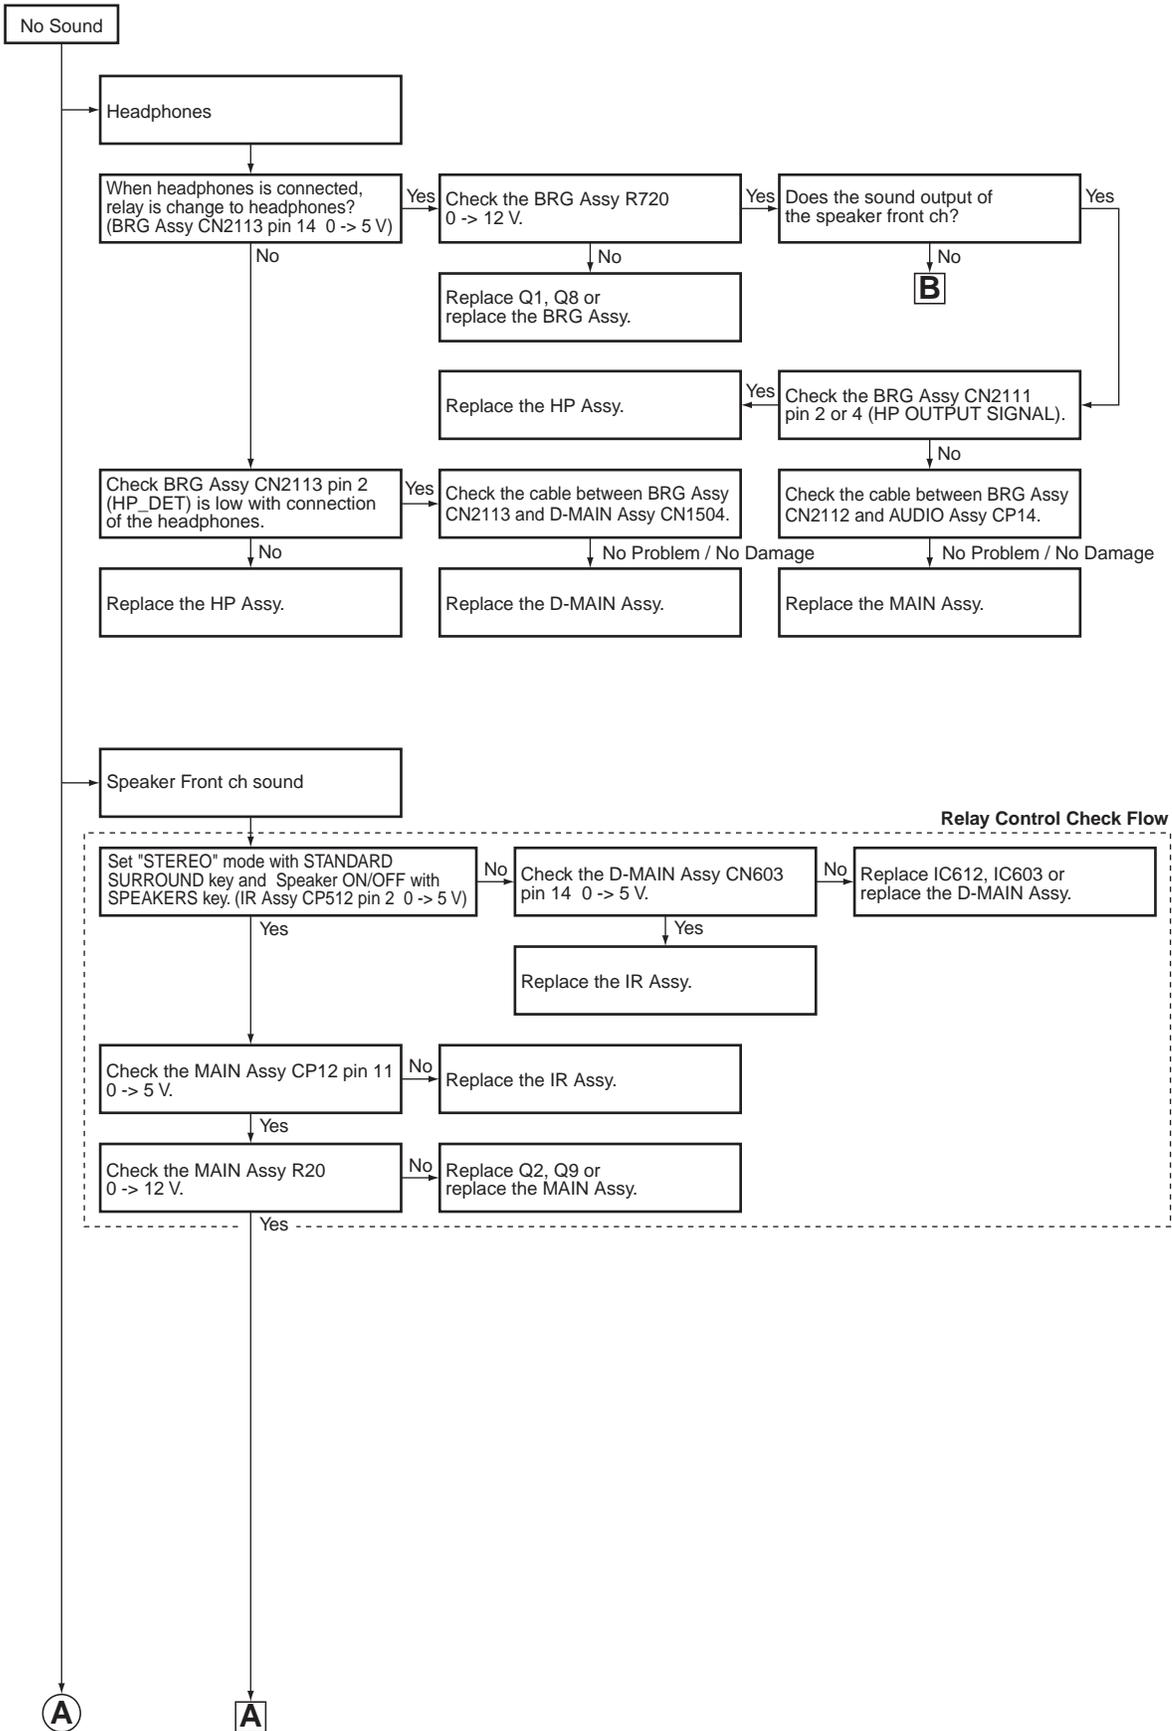

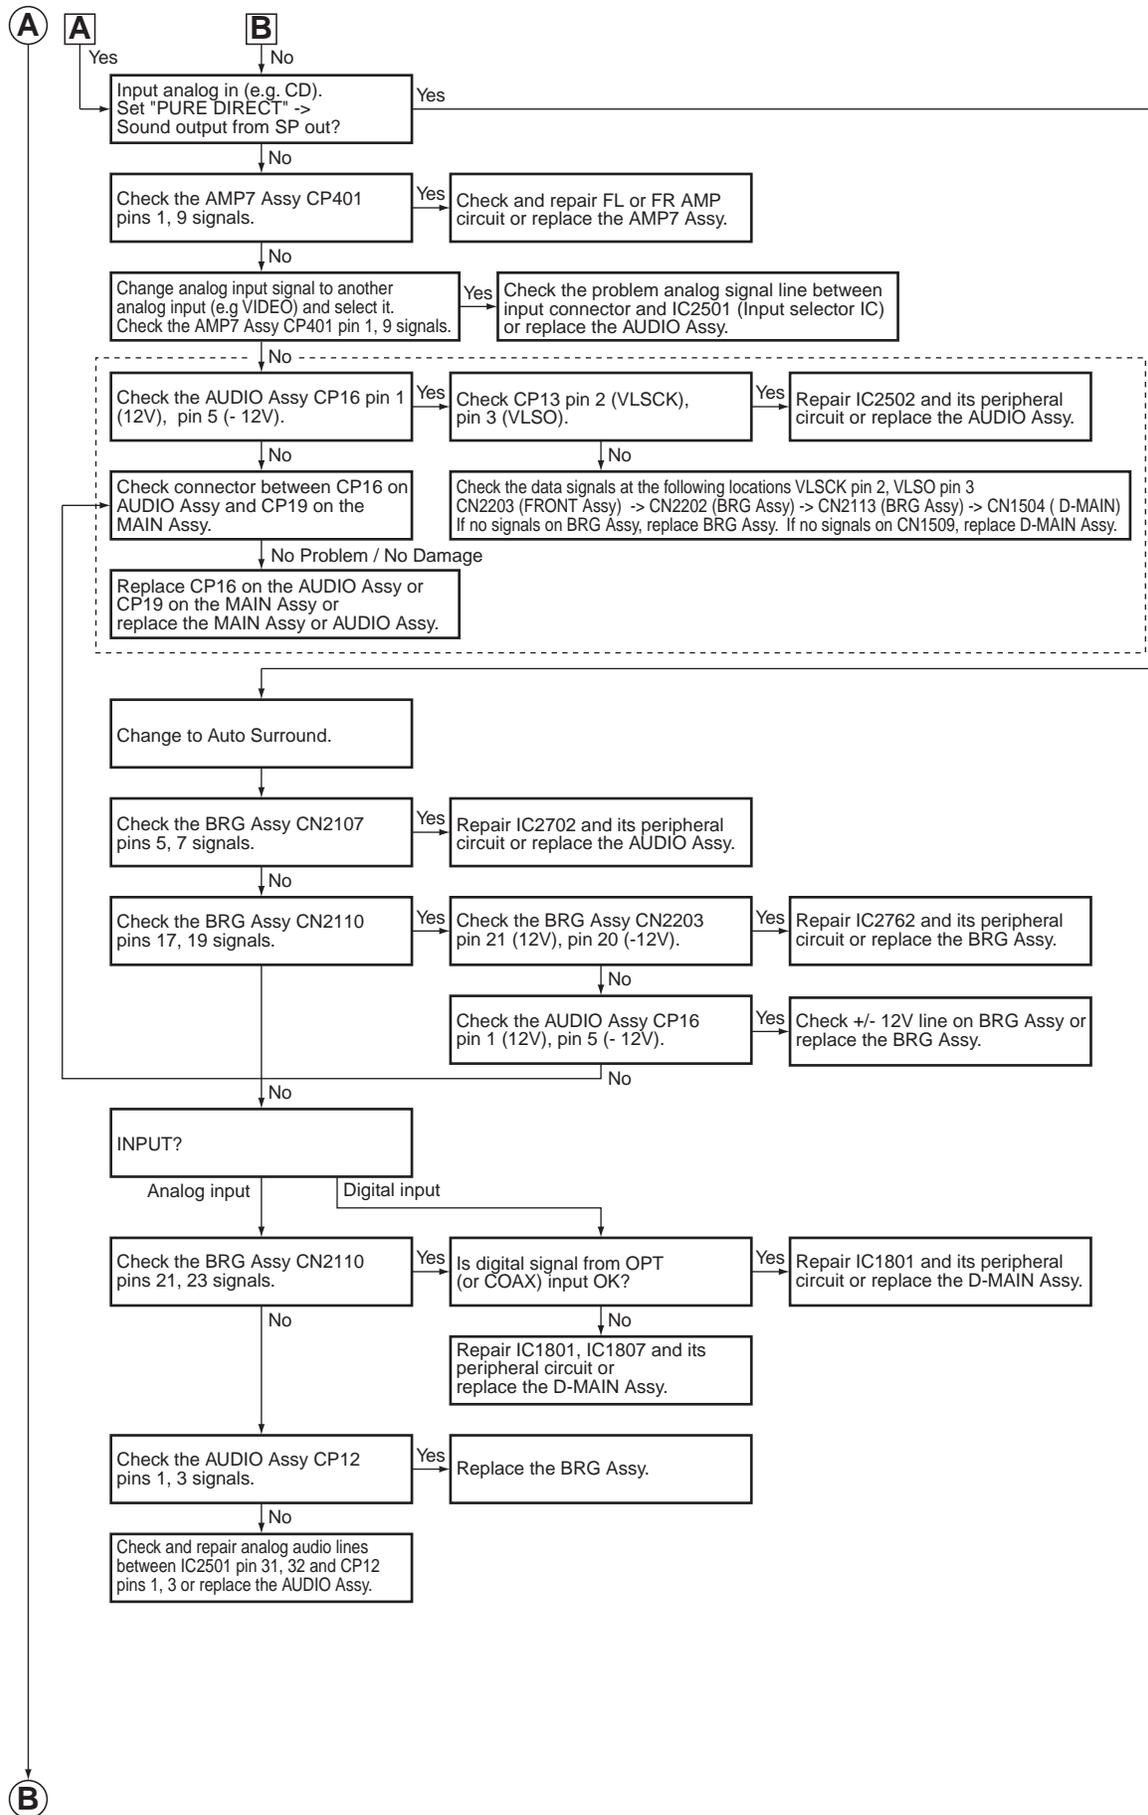

A
B
C
D
E
F

B

Speaker C (S SB SP-B etc) ch
(Front LR is OK)

Check SP System menu is appropriate
and connected speakers are not
selected [No] on SP Setting menu.

No
Change SP System and SP
Setting to correct setting.

Check Selection of Speaker system
by [SPEAKERS] key on front panel
is correct.

No
Change SP selection to correct
setting by [SPEAKER] key.

Speaker System Menu	
Setup name	Output sound
Speaker B	SP-B
Normal (SB/FH)	Front High or SB
Normal (SB/FW)	Front Wide or SB

If Speaker System is "Normal (SB/FH)" or "Normal (SB/FW)" and speaker setting by SPEAKER key is "SP: SB ON", there is no sound from FH or FW.

Check relay operating of problem ch.
(refer to schematic diagram and Relay
Control Check flow for Front ch)

SP-B no sound

Select Surround mode to
EX. STEREO in Advanced Surround.

Input analog signals to analog in
(e.g. CD), SP selection should be
"SP:B ON", check SBR, SBL channels.

Check signals of problem channel on
AMP7 Assy CP401 pins 3 (SL), 5 (C),
7 (SR), 11 (SBL), 13 (SBR) signals.

Yes
Check and repair AMP circuit of
problem channels
or replace the AMP7 Assy.

Check signals on BRG Assy CN2107
pins 9 (SR), 11 (SL), 13 (SW),
15 (C), 17 (SBR), 19 (SBL) signals.

Yes
Replace AUDIO Assy or
their peripheral circuit.

Check signals on BRG Assy CN2110
pins 5, 7, 9, 11, 13, 15 signals.
(Pin assign is same as CN2107)

Yes
Repair IC2742, IC2704, IC2782
and their peripheral circuit
or replace the BRG Assy.


Input PCM to COAX in or OPT in,
set Auto Surround.
Is Front LR SP output sound is OK?

Yes
Replace the D-MAIN Assy.

Repair IC1801 and its peripheral
circuit or replace the D-MAIN Assy.


C

C

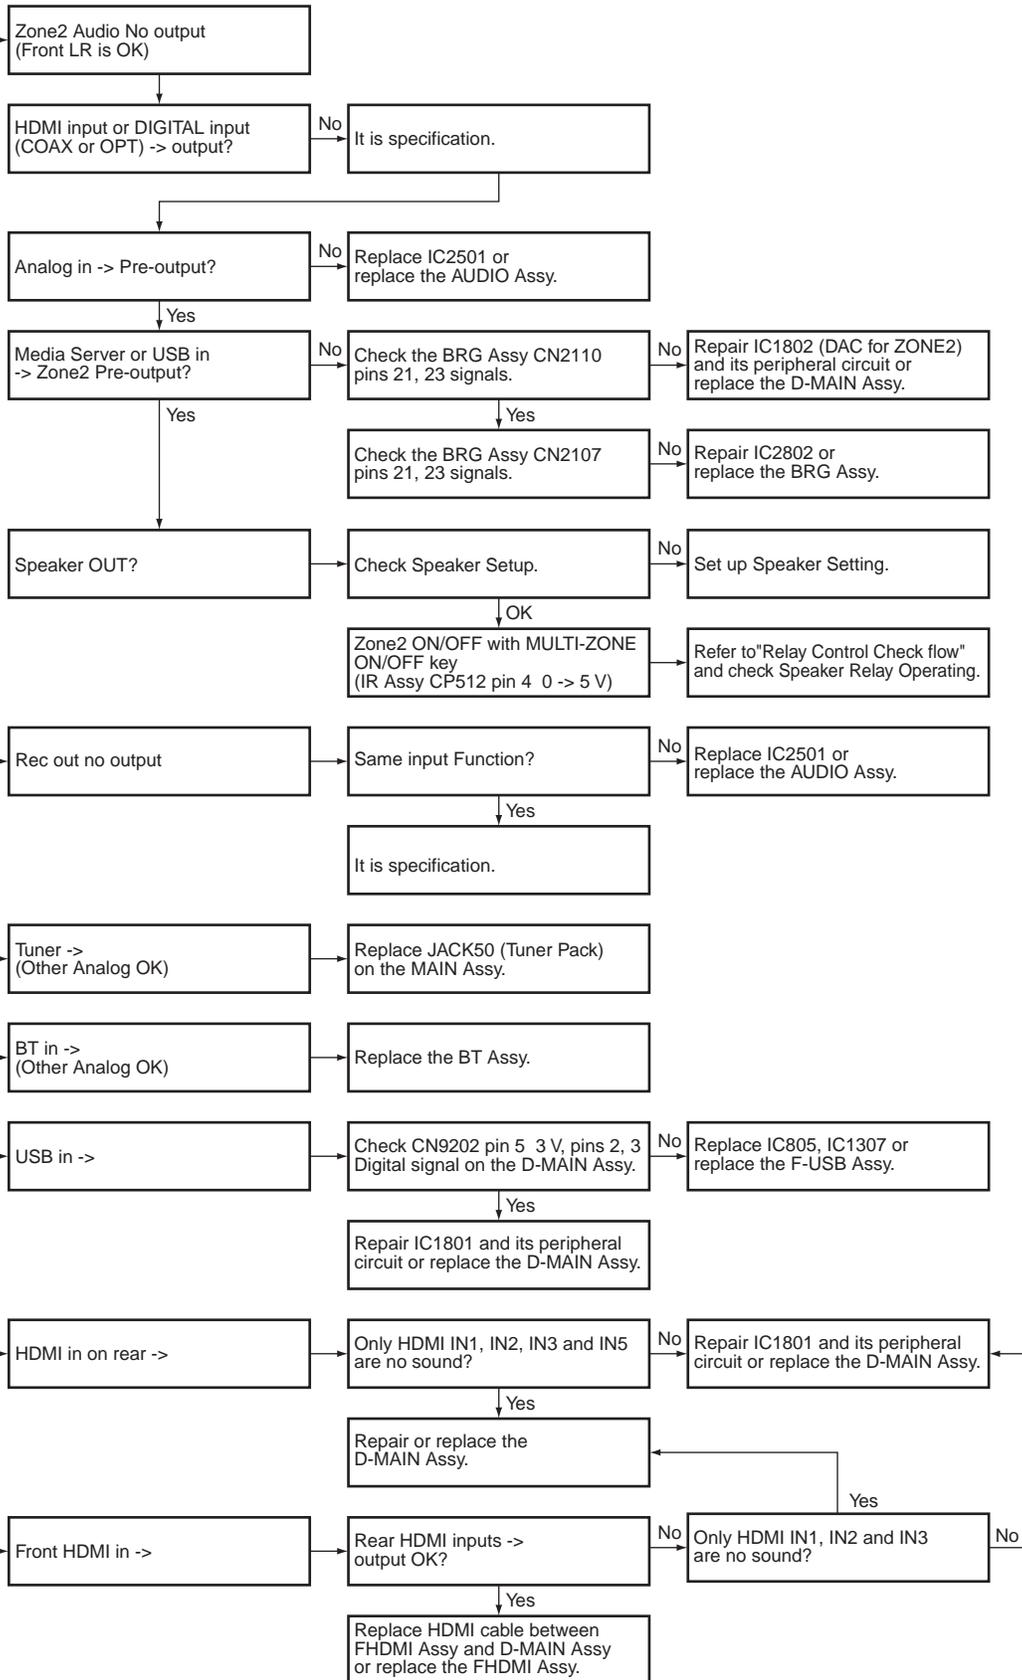

D

A

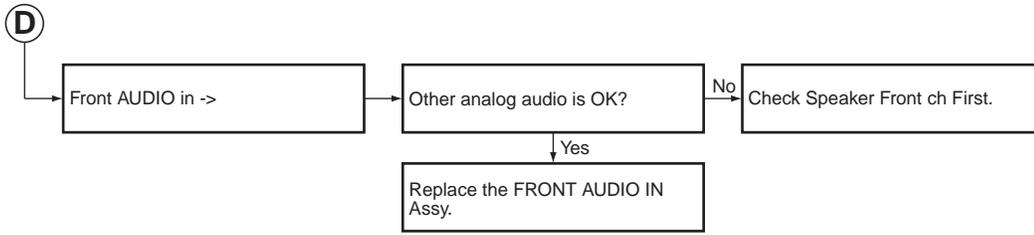


B

No Picture

This is just for general reference and does not including every single case.

C

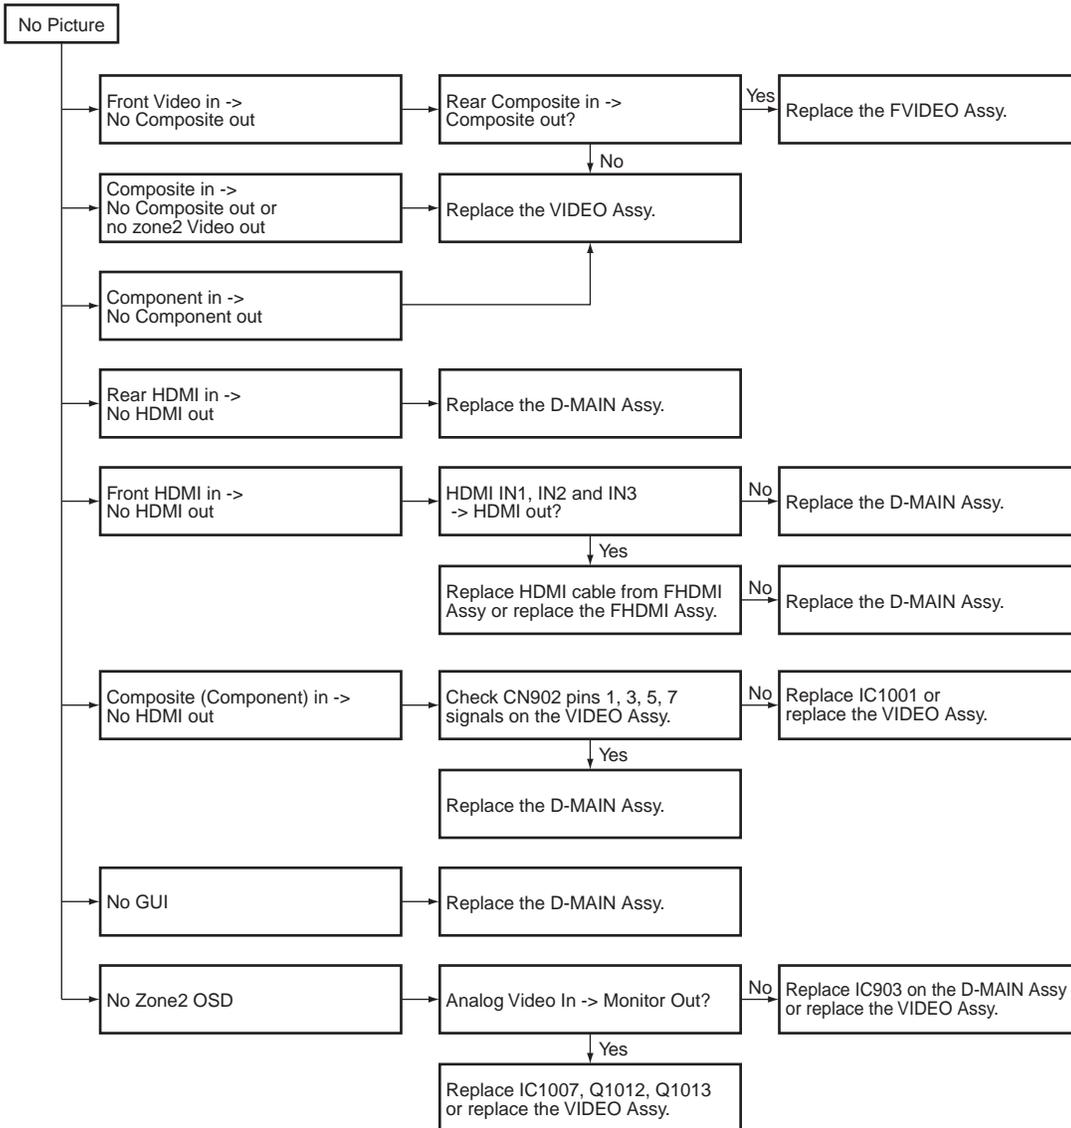

D

E

F

Others

This is just for general reference and does not including every single case.

12V Trig




No

RS-232C





No

IR



Yes

No

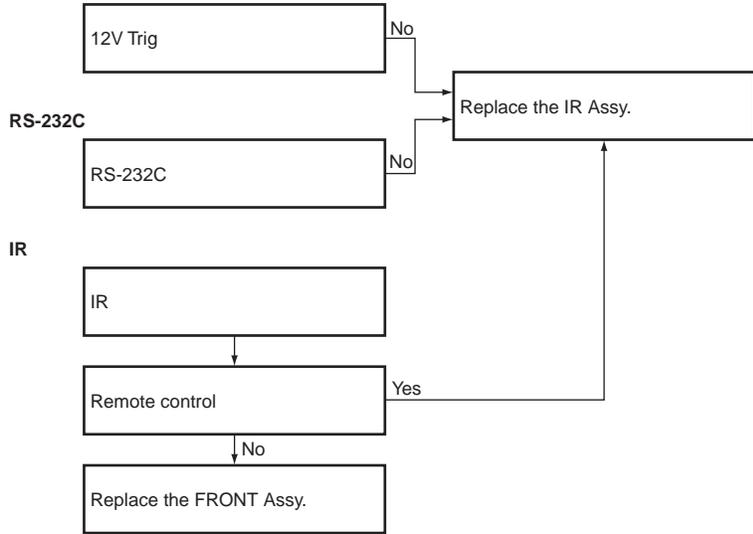

A

B

C

D

E

F

5.2 ERROR INDICATIONS

Error Indications When an Abnormality in The Amplifier System is Detected

[Purpose]

Errors upon detection of abnormalities in the amp system are indicated.

[Error Indications]


Item	FL Display	LED Flashes	NG Count.	Detection Method	Process After Detection	Description / Remarks
"AMP DC" ("DC output from SP term") detection	Flashing "AMP ERR" for 3 seconds	ADVANCED MCACC LED	DC	XDCERR (Pin 80 of IC3004) Detect "L"	1) Muting on, speaker relay off. 2) "AMP ERR" flashing 3) Shutdown after 3 seconds. 4) "ADVANCED MCACC" LED flashing 5) Power on is not acceptable.	To detect high DC output from amplifier damage (defect status). A process to protect speakers (for protection of connected external devices). For checking, refer to "How to enter release mode" below. If the DC detection port become "H" for 3 seconds, the unit will returns to normal condition automatically.
"AMP overload" detection.	N/A	iPod iPhone iPad LED	OL	XOLERR (Pin 71 of IC3004) Detect "L"	1) Muting on, speaker relay off. 2) Shutdown immediately. 3) "iPod iPhone iPad" LED flashing 4) Power on is acceptable.	To detect overloading (abnormal status) with low-load driving or a short circuit of the speaker terminals (for protection of the amplifier).
"Over Heat" detection.	Flashing "AMP OVERHEAT" for 3 seconds	FL OFF LED	STMP	TEMPERR5 (Pin 72 of IC3004) Detect "H" (REDI_DET)	1) Muting on, speaker relay off, 2) "OVERHEAT" flashing 3) Shutdown after 3 seconds. 4) "FL OFF" LED flashing 5) Power on is acceptable after 1 minute.	To detect overheat of inner temperature.
"Abnormality DC voltage of the Digital power supply" detection	N/A	iPod iPhone iPad LED	DERR	XVDDERR (Pin 70 of IC3004) Detect "L"	1) Muting on, speaker relay off. 2) Shutdown immediately. 3) "iPod iPhone iPad" LED flashing 4) Power on is acceptable.	To detect the abnormality voltage of Digital power supply circuit for the D-MAIN Assy.
"USB Overload" detection	"Over Current" No Flashing	N/A	N/A	USB ERR (VCO0) (Pin K2 of IC9204 (DM860A)) Detect "H"	1) Bass Power off 2) Display "Over Current"	To detect the connected USB device is overload. (over 2.1 A)
"BT Adapter overload" detection.	"ADP OVERLOAD" No Flashing	N/A	N/A	BTOL (MIL_CRS) (Pin R14 of IC9204 (DM860A)) Detect "H"	1) Adapter port power off 2) Display "ADP OVERLOAD"	To detect the connected Blue Tooth Adapter device is overload. (over 100 mA)
"HDCP of HDMI Error" detection	Flashes "HDCP ERROR" for 5 seconds	N/A	N/A	Read Register value	1) Display "HDCP ERROR"	The monitor does not support HDCP type or is in standby mode. (Warning indication for HDMI Simplay)
"Analog Input Over" detection	"OVER" Icon lights 1 second	N/A	N/A	DSP firmware Detect	While the Icon lights 1 second, when there is no ANALOG INPUT OVER detection, the Icon stops lighting and returns to normal display.	To detect the over-input of the analog audio to the A/D converter. When the Icon lights frequently, output level of the source equipment is high and a sound is distorted. Turn on the Analog Att switch.
Analog POWER SUPPLY Error	N/A	FL OFF LED	XPRT	XPROTECT (Pin 83 of IC3004)	1) Muting on, speaker relay off. 2) Shutdown immediately. 3) "FL OFF" LED flashing 4) Power on is acceptable after 1 minute.	Power-on impossible for 1 min.
"Over Heat" detection	N/A (VOL LEVEL)	N/A	N/A	TEMP L (TR_DET) (Pin 81 of IC3004)	VOL 3 dB down	After this error is detected, the system interrupts the OVER HEAT detection for 2 minutes.
"WiFi Over Current" detection	WLAN POW ERR	N/A	N/A	XWUSB ERR (Pin 45 of IC3004)	WUSBPOW is set to L.	To detect the connected WiFi Adapter device is overload. (over 600 mA)

[How to Enter Release Mode]


During Standby mode, simultaneously press and hold the "TUNE ↓" and "MULTI-ZONE ON/OFF" keys for 5 seconds.

5.3 DETECTION CIRCUIT

[1] Overload and DC Protection Circuit

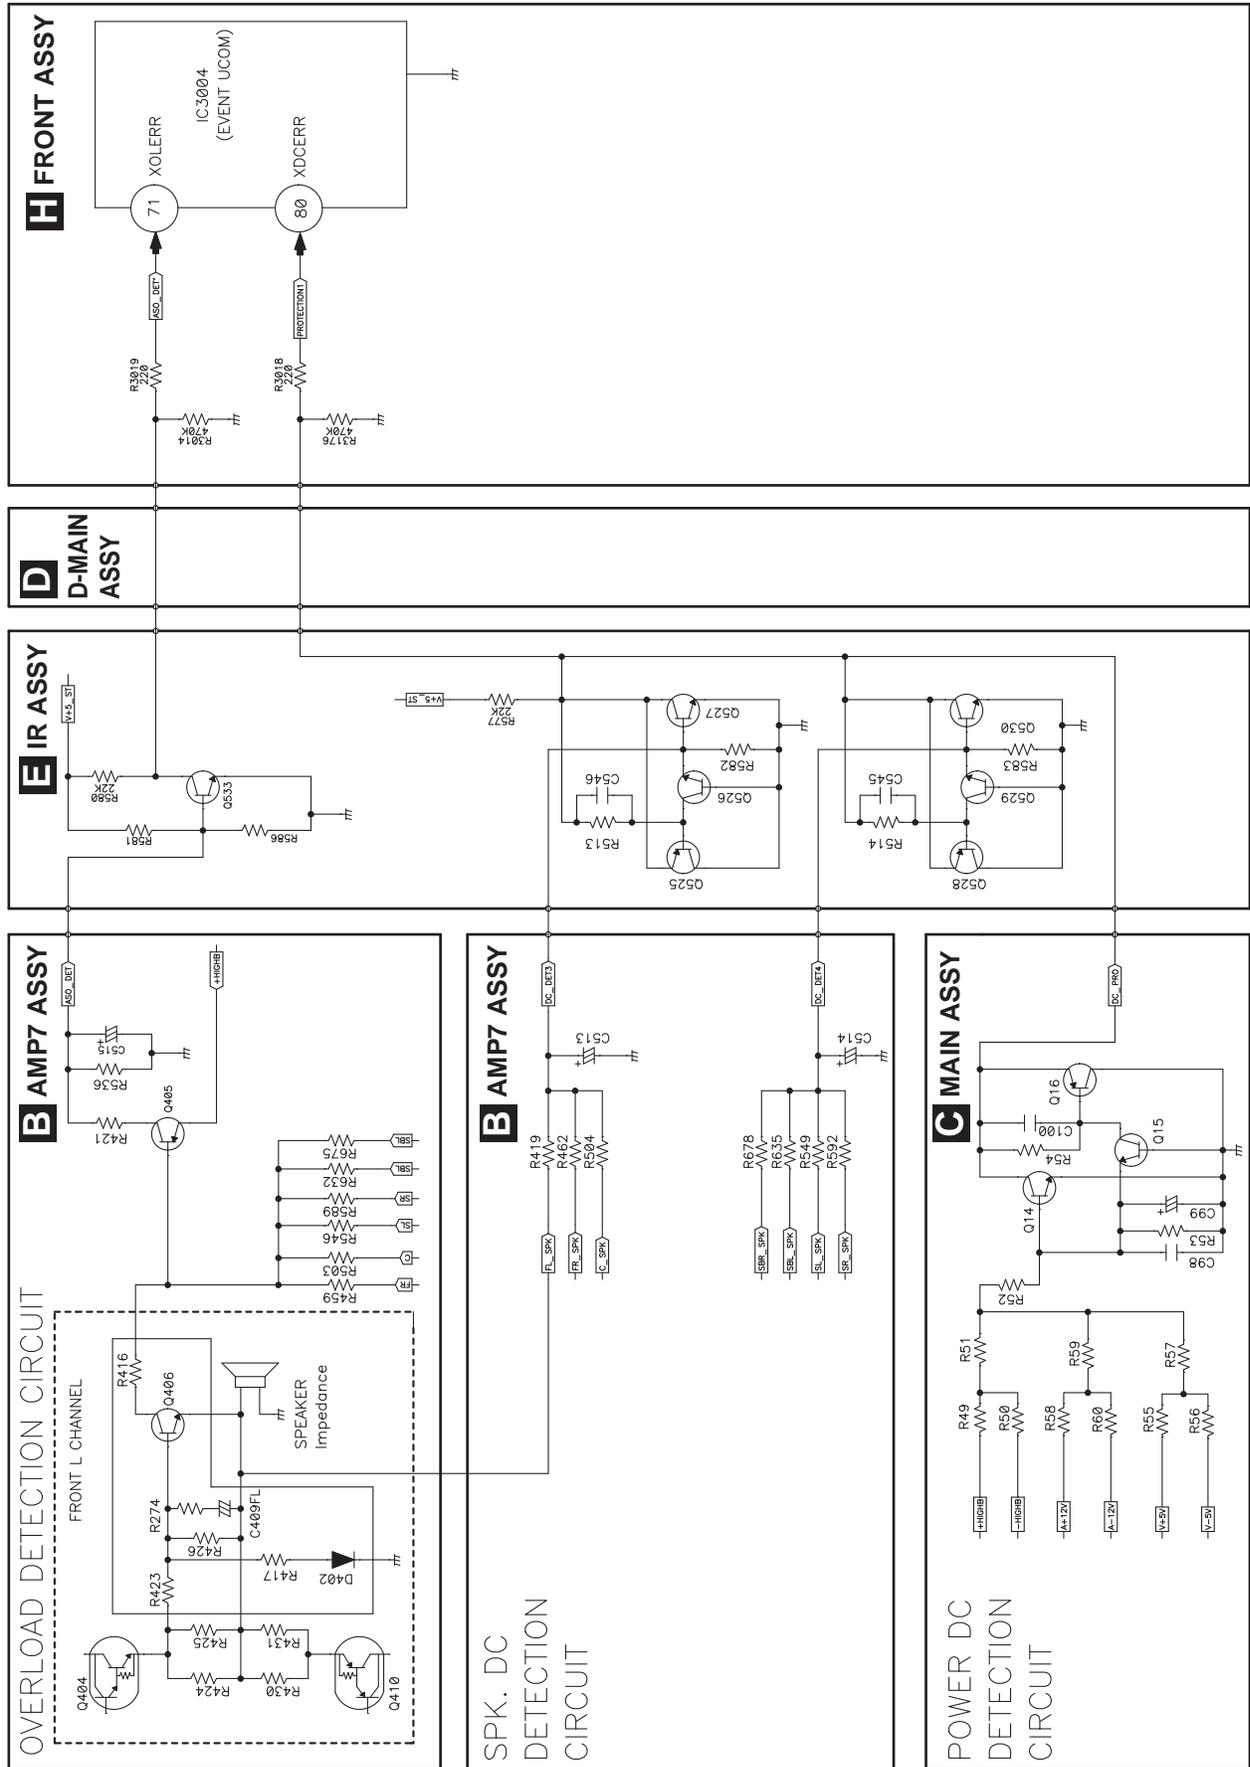

A [2] TEMP Protection Circuit

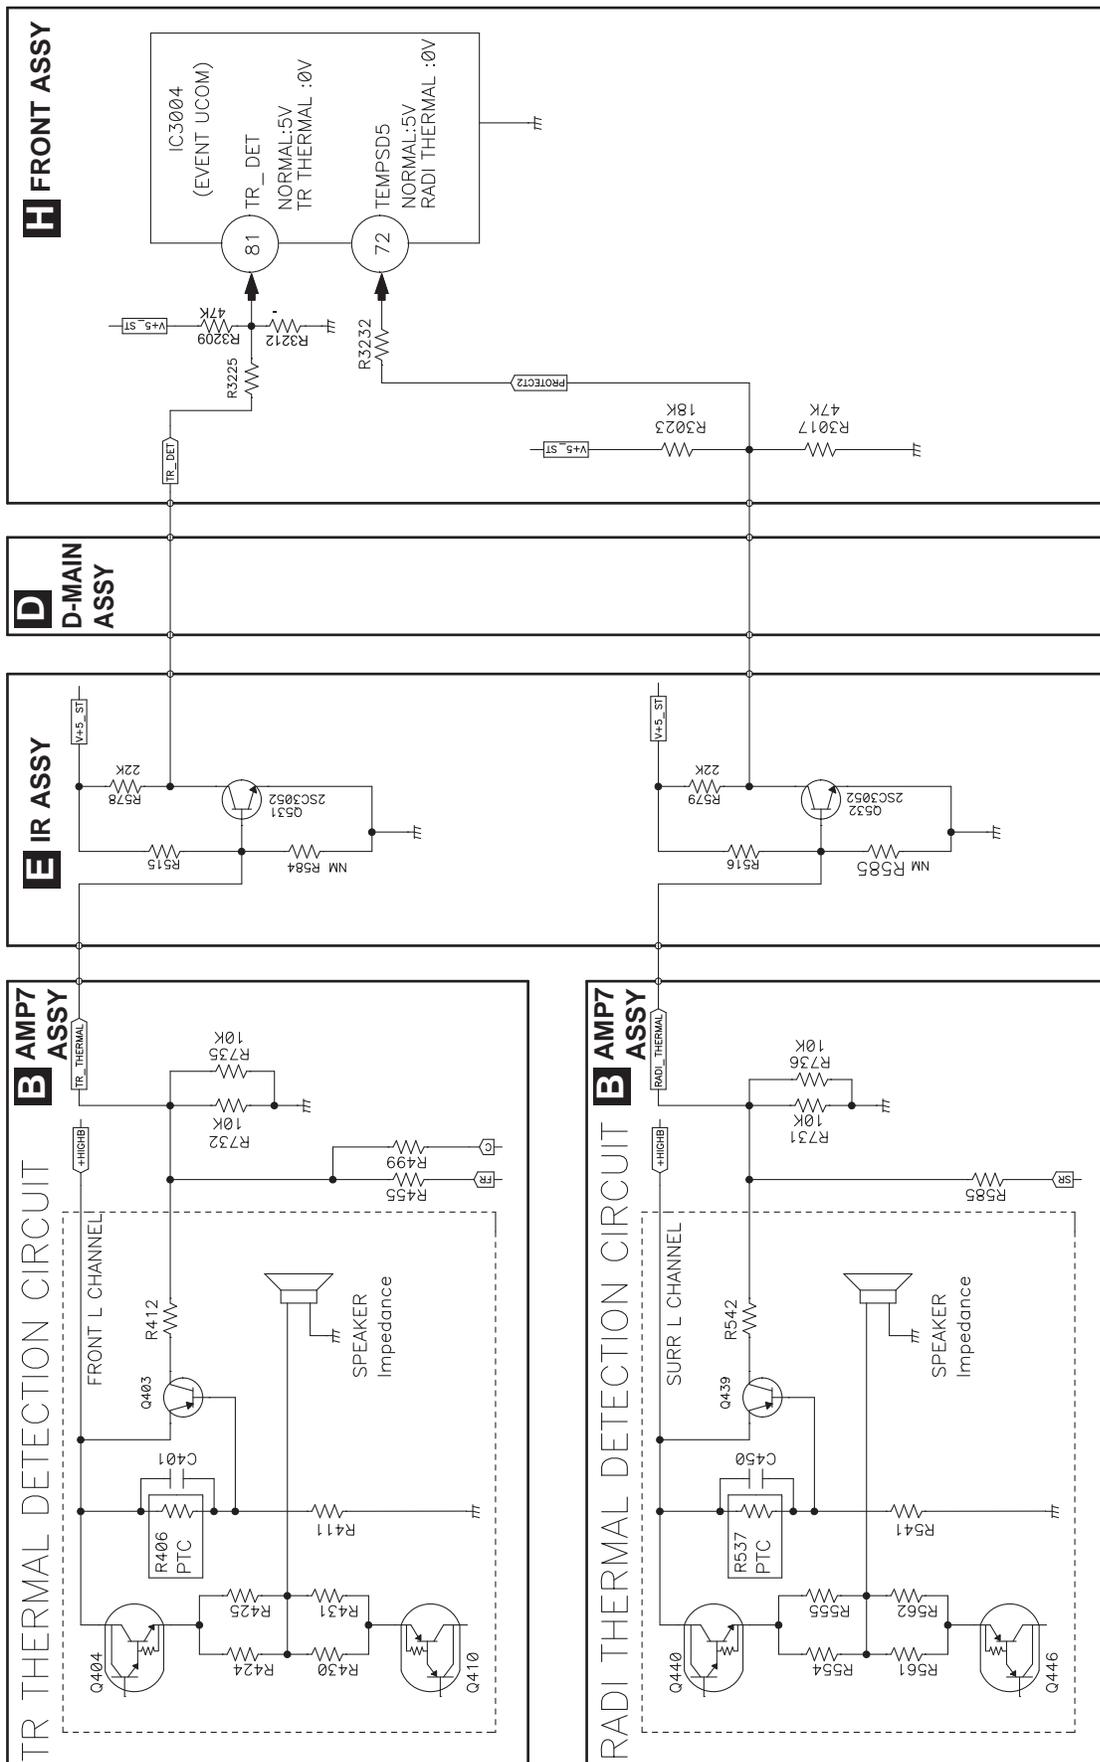

B

C

D

E


F

5.4 IC INFORMATION


J171132900010-IL (VIDEO ASSY: IC1001)

IC, MONITOR SW

• Pin Arrangement (Top view)

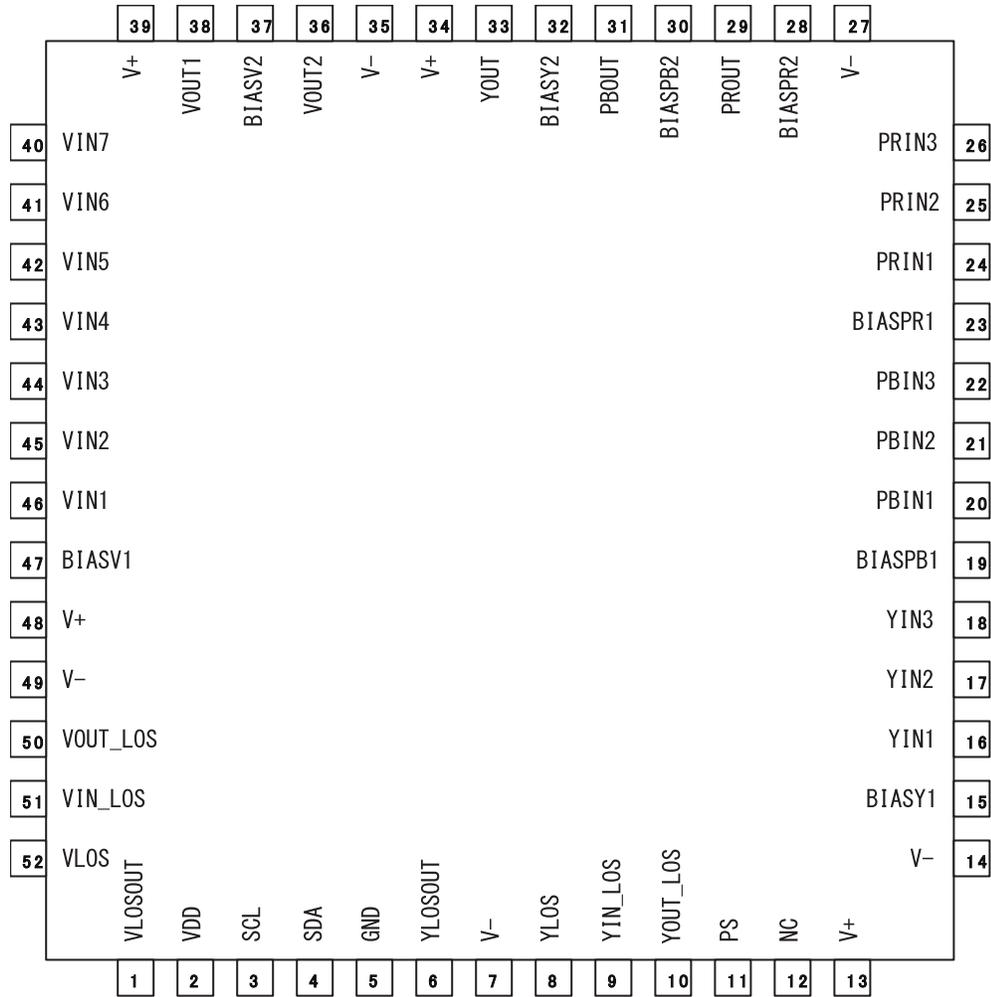

A • Block Diagram

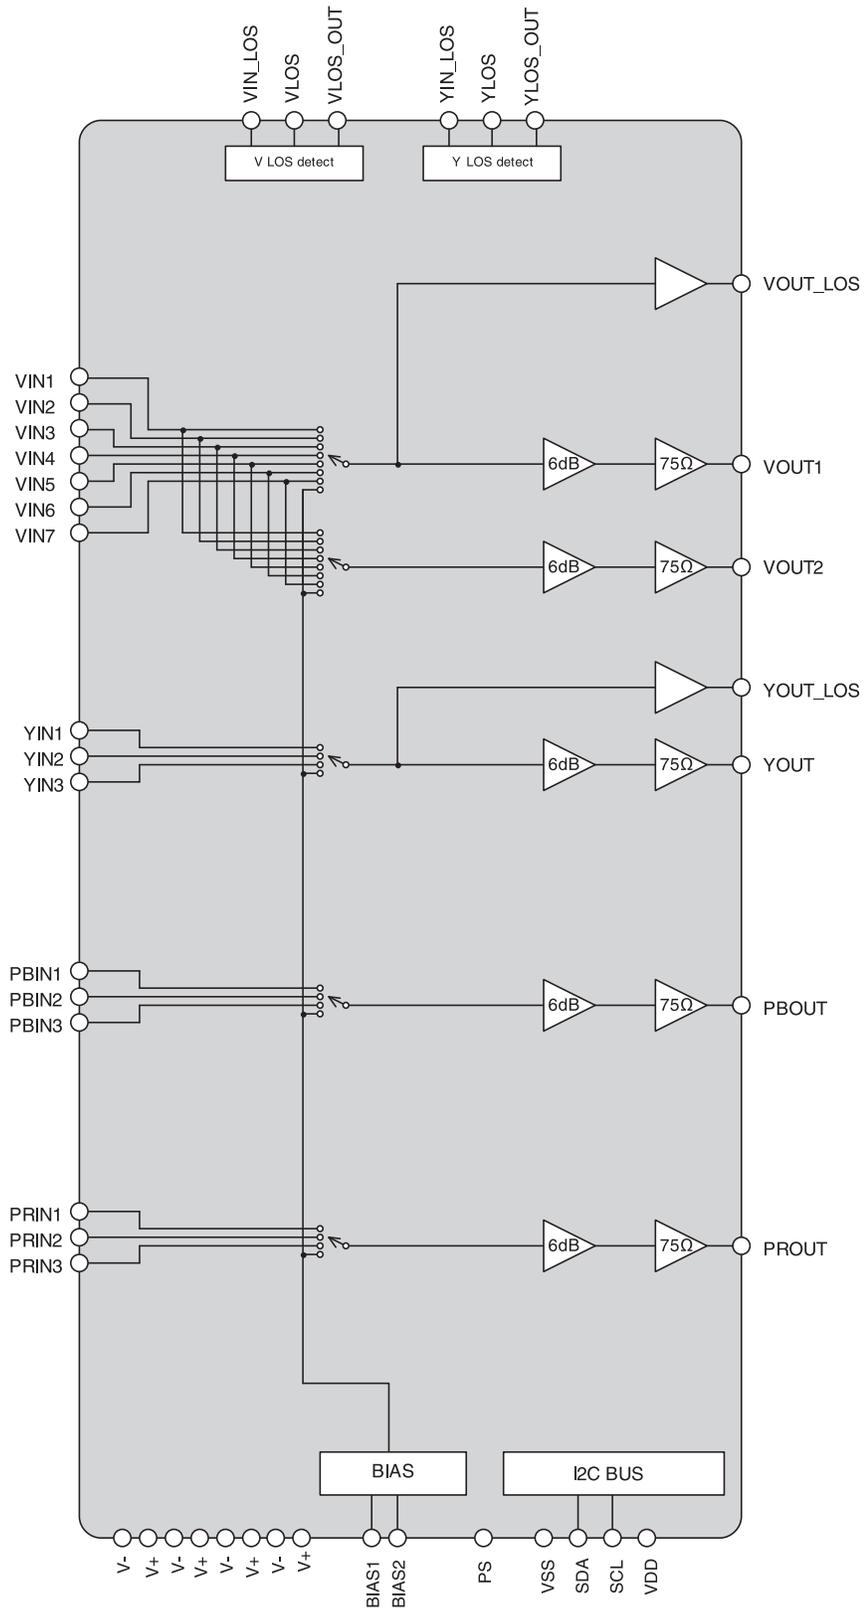

B

C

D


E

F

■ (J005251601010S-IL) (D-MAIN ASSY: IC9004)

IC, MEMORY FLASH

• Pin Arrangement (Top view)

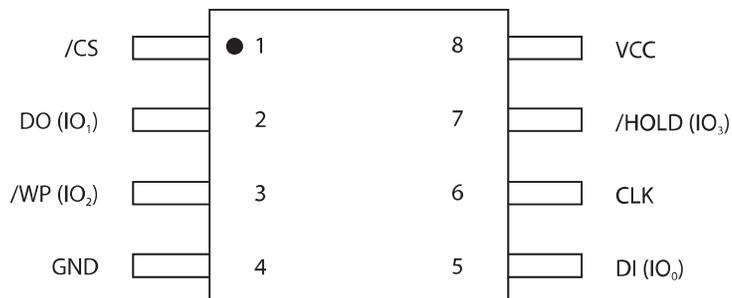

• Pin Function

PIN NO.	PIN NAME	I/O	FUNCTION
1	/CS	I	Chip Select Input
2	DO (IO1)	I/O	Data Output (Data Input Output 1)* ¹
3	/WP (IO2)	I/O	Write Protect Input (Data Input Output 2)* ²
4	GND		Ground
5	DI (IO0)	I/O	Data Input (Data Input Output 0)* ¹
6	CLK	I	Serial Clock Input
7	/HOLD (IO3)	I/O	Hold Input (Data Input Output 3)* ²
8	VCC		Power Supply

*1 IO0 and IO1 are used for Dual and Quad instructions

*2 IO0 – IO3 are used for Quad instructions

6. SERVICE MODE

6.1 TEST MODE

A [1] Detected protection history

[Purpose]

The numbers of detections for various protection processes are displayed.

[How to enter]

During Standby mode, simultaneously press and hold "MULTI-ZONE ON/OFF" and "ENTER" keys for 5 seconds to enter this mode. Turn off the power to this unit by setting the main volume level to "---dB" and Multi-zone to "OFF".

[How to exit]

Turning off the power or pressing the RETURN key returns to the normal mode.

[Basic operations]

Key operation	FL display
Display number of times DC is detected. [↓] [↑]	DC : ***
Display number of times OVERLOAD is detected. [↓] [↑]	OL : ***
Display number of times COMBINATION is detected. (Detects DC and OVERLOAD simultaneously) [↓] [↑]	COM : ***
Display number of times Power abnormality is detected. [↓] [↑]	XPRT : ***
Display number of times AMP overheat is detected. [↓] [↑]	STMP : ***
Display number of times Digital Power abnormality is detected. [↓] [↑]	DERR : ***
Resetting the number of times error is detected. [↓] [↑]	RESET ◀HOLD▶

Front Panel Key

- [↓] : TUNE key
- [↑] : TUNE key
- [←] : PRESET key
- [→] : PRESET key

Resetting the number of times error is detected

Key operation	FL display
[←][→]	RESET ◀CLEAR?▶
[ENTER]	RESET ◀RESET▶

Continued

Key operation	FL display
Display accumulated time & RESET. [↓] [↑]	1 2 3 4 5 h 2 0 m ◀ H L D ▶
Display CEC(TEST) state. [↓] [↑]	CEC ◀ OFF ▶
Display FAN(TEST) state. This function does not work on this model. [↓] [↑]	FAN ◀ OFF ▶
USB Backup state [↓] [↑]	USB BAK ◀ HOLD ▶
Display Model Name/Destination state. [↓] [↑]	V S X - 1 1 2 7 / C U X E
Change cyclically	

Resetting the accumulated time

Key operation	FL display
[←][→]	1 2 3 4 5 h 2 0 m ◀ C L ? ▶
[ENTER]	0 h 0 0 m ◀ R S T ▶
Continued	

Display CEC(TEST) state.

Key operation	FL display
[←][→]	CEC ◀ ON ▶
Change cyclically	

Note:

In case of US models, [USB Backup] function is not implemented with the first firmware. Before performing the backup function, please check the unit version. If small version number of Main com (EMMA) is smaller than 157, please update to the latest version. If that is 157 or over (e.g. [1-157076014091]), the backup function is implemented.

Saving and Loading of USB backup state.

Key operation	FL display
[←][→]	(A/V Receiver → USB) USB BAK ◀ SAVE ? ▶
[←][→]	(USB → A/V Receiver) USB BAK ◀ LOAD ? ▶
Change cyclically	

Key operation	FL display
[ENTER]	PLEASE WAIT
SAVE or LOAD is completed. ↓ 5 sec Power OFF (All zone OFF)	COMPLETE

[Description]

CEC TEST : The function for making the HDMI output terminal to output 4 Hz square wave. If the square wave is output, the CEC line is considered to be normal.

FAN TEST : The function for making the FAN to be forced to rotate.

6.2 DEFAULT SETTINGS

A Default system settings

Setting	Default	
Digital Video Converter	ON	
SPEAKERS	SB/FH	
Speaker System	Normal(SB/FH)	
Speaker Setting	Front	SMALL
	Center	SMALL
	FH/FW	SMALL
	Surr	SMALL
	SB	SMALLx2
	SW	YES
Surround Position	IN REAR	
Crossover	80 Hz	
X-Curve	OFF	
DIMMER	Brightest	
HDMI		
HDMI Audio	Amp	
Control	OFF	
Control Mode	--- (OFF)	
ARC (Audio Return Channel)	--- (OFF)	
PQLS	--- (AUTO)	
Standby Through	OFF	
DSP		
Power On Level	LAST	
Volume Limit	OFF	
Mute Level	FULL	
Phase Control	ON	
Auto Sound Retriever	iPod/USB, INTERNET RADIO, SiriusXM, PANDORA, MEDIA SERVER, FAVORITES, ADAPTER PORT input function	ON
	Other input functions	OFF
Sound Delay	0.0 frame	
Dual Mono	CH1	
DRC	AUTO	
SACD Gain	0 dB	
LFE Attenuate	0 dB	
Auto delay	OFF	
Digital Safety	OFF	
Effect Level	ExtendedStereo	90
	Other modes	50
PL II Music Options	Center Width	3
	Dimension	0
	Panorama	OFF
Neo:6 Options	Center Image	Neo:6 CINEMA: 10 Neo:6 MUSIC: 3
	Height Gain	MID
All Inputs	Listening Mode (2 ch/multi ch)	AUTO SURROUND
	Listening Mode (Headphones)	STEREO
MCACC		
MCACC Position Memory	M1: MEMORY 1	
Channel Level (M1 to M6)	0.0 dB	
Speaker Distance (M1 to M6)	10'00"	
Standing Wave (M1 to M6)	ATT of all channels/filters	0.0 dB
	SWch Wide Trim	0.0 dB
EQ Data (M1 to M6)	All channels/bands	0.0 dB
	EQ Wide Trim	0.0 dB

Default input settings

Input function	Input Terminals		
	HDMI	Audio	Component
BD	(BD)		
DVD	IN 1	COAX-1	IN 1
SAT/CBL	IN 2	COAX-2 <a>	●
DVR/BDR	IN 3	OPT-2 <a>	●
HDMI 4	IN 4		
HDMI 5	IN 5 		
HDMI 6 <a>	IN 6		
INTERNET RADIO			
SiriusXM			
PANDORA			
MEDIA SERVER			
FAVORITES			
iPod/USB			
TV		OPT-1	
CD		ANALOG-1 <c>	
TUNER			
ADAPTER PORT			

- a VSX-1127 only.
 b Located on the front panel for the VSX-1127.
 c Only the **TV** and **CD** inputs can be assigned to **ANALOG-1**.

Resetting the system

Use this procedure to reset all the receiver's settings to the factory default. Use the front panel controls to do this.

Set MULTI-ZONE to **MULTI ZONE OFF**.

- Disconnect the iPod and USB memory device from the receiver beforehand.
- Set the **Control** with HDMI to **OFF**.

- 1 **Switch the receiver into standby.**
- 2 **While holding down ENTER on the front panel, press \odot STANDBY/ON.**

The display shows **RESET ◀ NO ▶**.

- 3 **Select 'RESET' using PRESET \leftarrow/\rightarrow , then press ENTER on the front panel.**

The display shows **RESET? OK**.

- 4 **Press ENTER to confirm.**

OK appears in the display to indicate that the receiver has been reset to the factory default settings.

- Note that all settings will be saved, even if the receiver is unplugged.

7. DISASSEMBLY

Note:



- (1) Even if the unit shown in the photos and illustrations in this manual may differ from your product, the procedures described here are common.
- (2) For performing the diagnosis shown below, the following jigs for service is required:
 - 13P extension jig cable (GGD1740)
 - 3P extension jig cable (GGD1741)
 - Board to board extension jig cable (GGD1736) + Conversion jig (GGD1802)
 - Board to board extension jig cable (GGD1798) + Conversion jig (GGD1803)
 - Board to board extension jig cable (GGD1799)

1. Discharging

[1] MAIN Assy Capacitor (C55, C58)

[Procedures]


- (1) Unplug the power cord.
- (2) Disconnect the 10P connector from CP403 of the AMP7 Assy between CN3 of the MAIN Assy.
- (3) Connect +B and -B terminal of the D7, using resistor leads with 47 - 100 ohms (2 W or higher), for discharging.
 - * Discharging time: 30 - 60 seconds, depending on the level of resistance.
- (4) Check that the voltage between the +B and -B terminals is less than 1 V, using a tester.
 - * Be sure to connect the GND terminal of the tester to the chassis.
 - * If the voltage is still 1 V or higher, repeat Step (3).

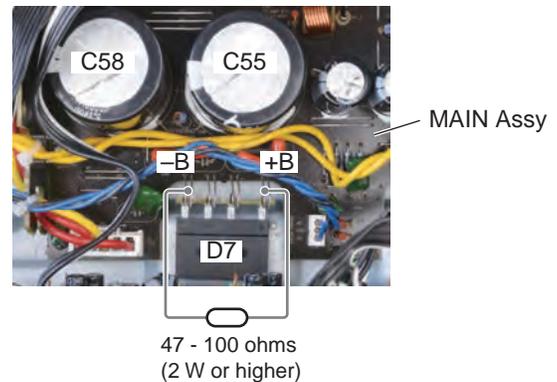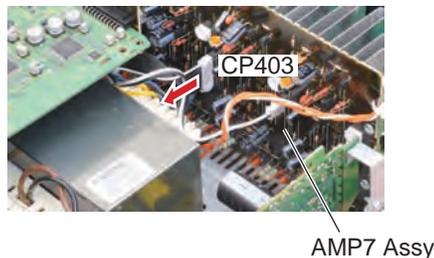

[2] FL-30 V Capacitor

[Procedures]

- (1) Unplug the power cord.
- (2) Connect pin 1 (-30V) and GND terminal (A) of CP3001 on the FRONT Assy, using resistor leads with 47-100 ohms (2 W or higher), for discharging.
 - * Discharging time: 5 - 10 seconds, depending on the level of resistance.
- (3) Check that the voltage between the -30V terminal is less than 1 V, using a tester.
 - * Be sure to connect the GND terminal of the tester to the chassis.
 - * If the voltage is still 1 V or higher, repeat Step (2).

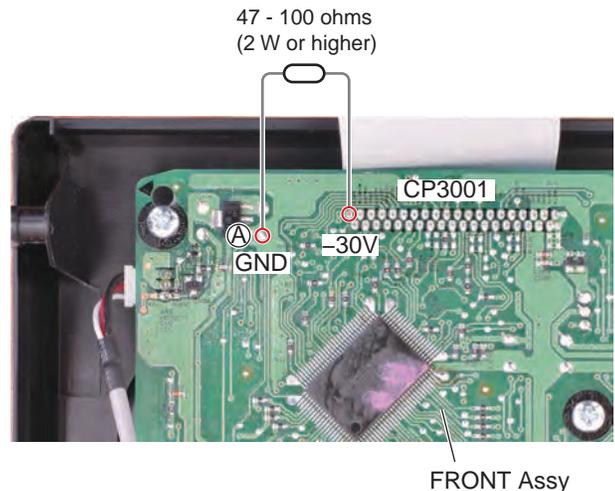


2. Notes on Ground Points Connection

[Note]

During repair, before checking the MAIN Assy, etc., with the rear chassis removed, be sure to connect the GND terminal of the main capacitor to the back chassis (speaker chassis), as shown below, then connect the power cord.

**Without grounding connection, the protection circuit will be activated.
After repairing, be sure to remove the ground wire before reassembling.**

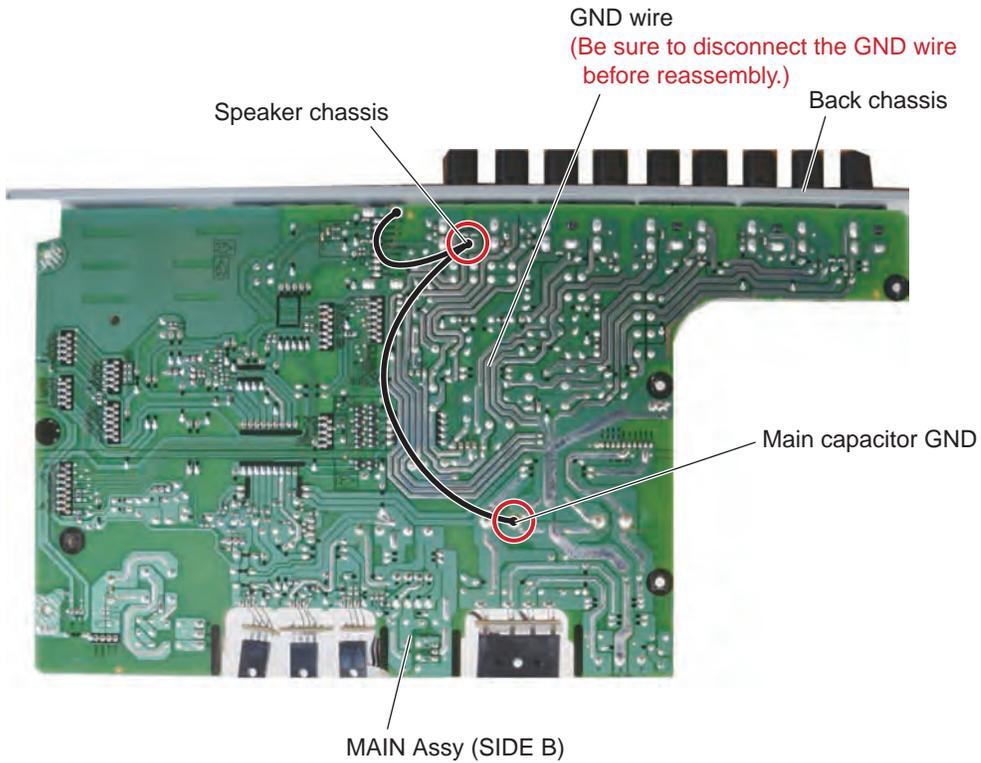


3. Disassembly

[1] Front Panel Section

Remove the cabinet by removing the 10 screws.

(1) Remove the five screws. (BBZ30P080FTB)

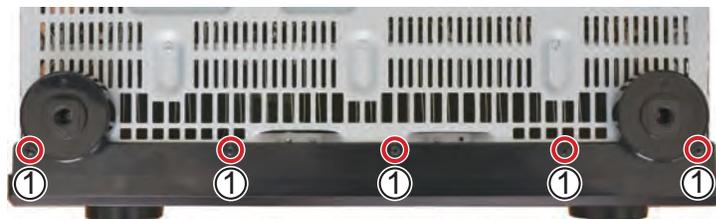


• Bottom view

(2) Remove the one screw.


(BBZ30P080FTC)

(3) Remove the three screws.

(1500001206010-IL)

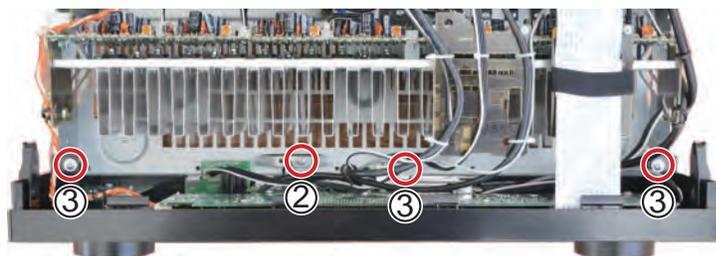


(4) Unhook the two hooks.

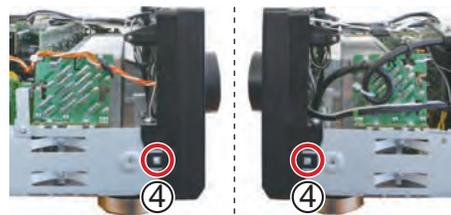

(5) Arrange the front panel section as shown in the photo below.

Front panel section

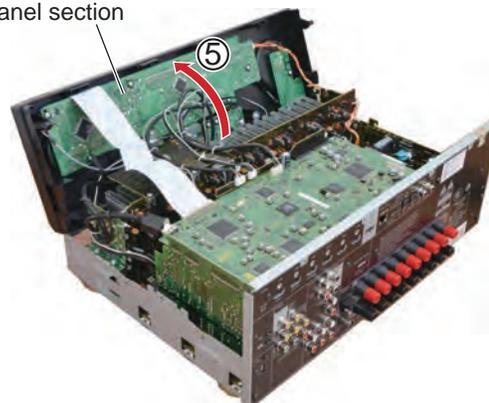


A [2] Heatsink Section

Caution: Heatsink section in work becomes hot, and be careful with it.

Remove the cabinet by removing the 10 screws.

(1) Remove the three screws. (BBZ30P080FTC)

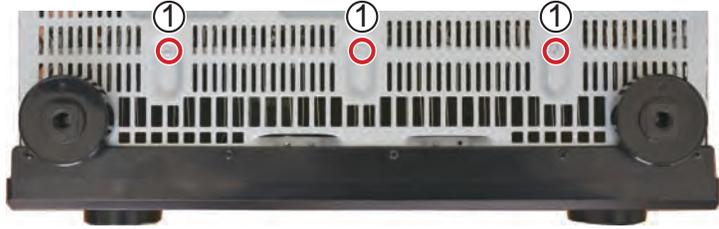


• Bottom view




(2) Remove the four screws. (BBZ30P080FTC)

(3) Cut the two binders.


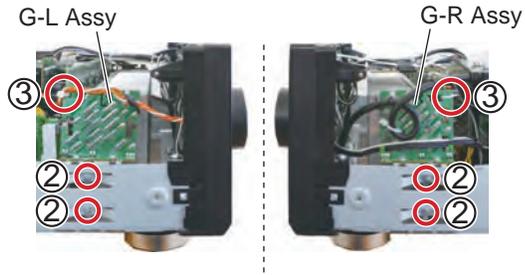


(4) Remove the two screws. (BBZ30P080FTC)



(5) Remove the WG-A and CCG Assemblies.

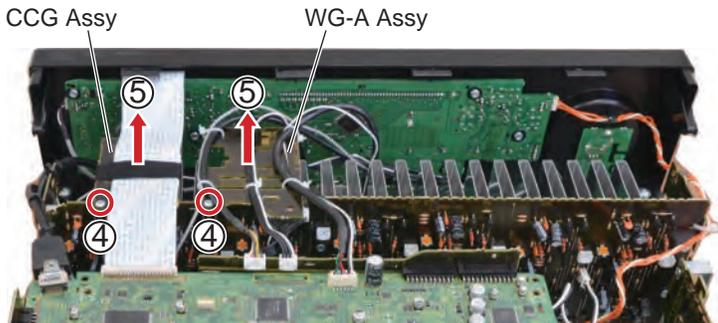

- (6) Disconnect the six connectors.
- (7) Remove the Heatsink section.

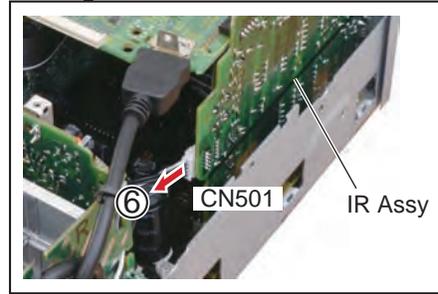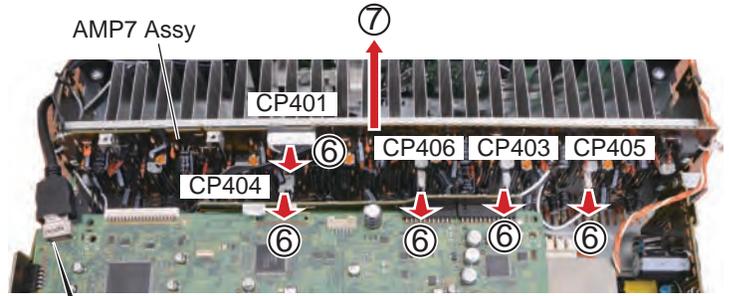

- (8) As shown, arrange the Heatsink section over the WG-A Assy.
- (9) Re-connect the four connectors.
- (10) Connect the two extension jig cables.

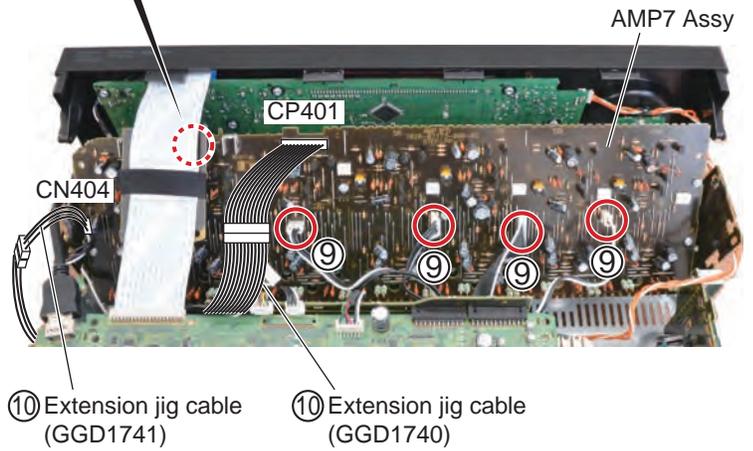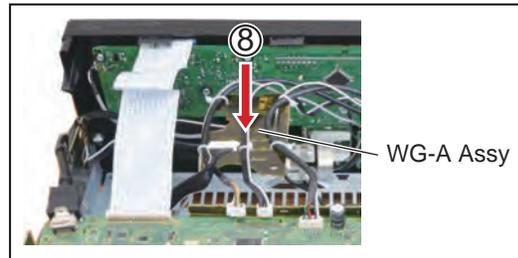

A [3] D-MAIN Assy

Remove the cabinet by removing the 10 screws.

- (1) Remove the five screws. (BBT30P100FTB)
- (2) Remove the seven screws. (BSZ30P040FTB)




• Rear view

B

- (3) Disconnect the five B to B connectors. (CN603, 607, 901, 1504, 1801)
- (4) Remove the D-MAIN Assy.


• HDMI cable styling

C

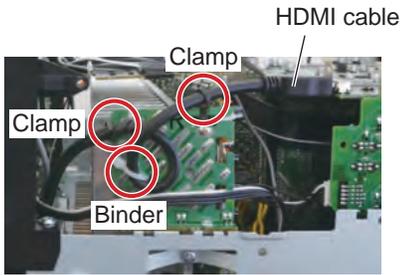

Note:
Make styling so that tension does not hang to the HDMI connector.

D

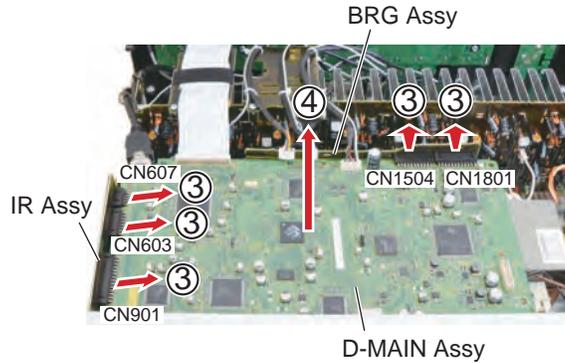


- (5) Connect the five extension jig cables.
- (6) Arrange the D-MAIN Assy in the photo below.
- (7) Insert any insulation sheet.

E

Note:
Confirm that a B to B connector of BRG Assy is connected to AUDIO Assy tightly.



F

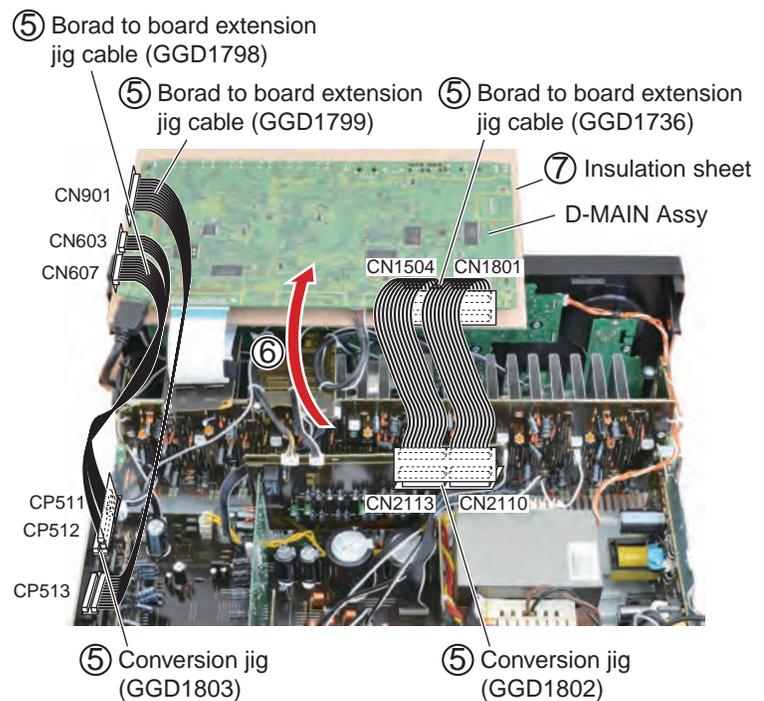


[4] MAIN Assy

Remove the cabinet by removing the 10 screws.


[4-1] Back chassis, D-MAIN Assy

- (1) Remove the 15 screws. (BBT30P100FTB)
- (2) Remove the seven screws. (BSZ30P040FTB)
- (3) Remove the D-MAIN Assy.
(See procedure [3].)

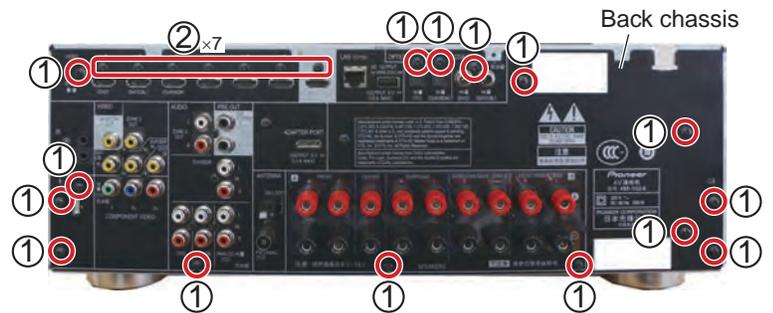

[4-2] MAIN Assy

- (1) Remove the four screws. (BBZ30P180FTC)
- (2) Remove the six screws. (BBZ30P080FTC)
- (3) Cut the four binders.
- (4) Remove the MAIN Assy with back chassis.

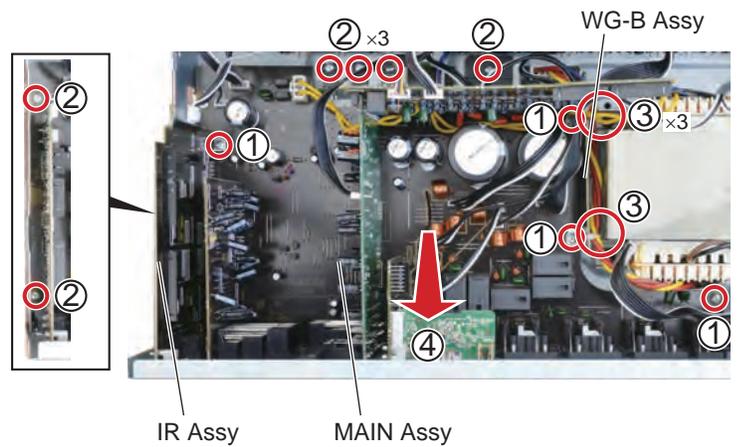

8. EACH SETTING AND ADJUSTMENT

A



- If the adjustment is shifted or if it becomes necessary to readjust because of part replacement, etc., perform the adjustment as described below.
- Any value changed in Adjustment mode will be stored in memory as soon as it is changed. Before readjustment, take note of the original values for reference in case you need to restore the original settings.
- Use a stable AC power supply.

B

8.1 ADJUSTMENT REQUIRED WHEN THE UNIT IS REPAIRED OR REPLACED

When any of the following assemblies is replaced

C

AMP7 Assy	➔	"8.4 IDLE CURRENT ADJUSTMENT" (All channel)
D-MAIN Assy	➔	"8.2 USB BACKUP"
Other assemblies	➔	No adjustment required

When any of the following parts is replaced

D

AMP7 Assy	➔	"8.4 IDLE CURRENT ADJUSTMENT" (Only channel of replacement parts)
Other assemblies	➔	No adjustment required

E

Note:
Some parts on D-MAIN and F-USB Assemblies can not be replaced due to using heat-pad connection between the board. Please refer to [1.2 NOTES ON REPLACING PARTS], when the parts listed in the table is defective, replace whole Assy.

F

8.2 USB BACKUP

[Introduction]

This model is capable of saving the set values stored in the MAIN Ucom of D-MAIN Assy in the USB and loading them in a new D-MAIN Assy. (Note that MAIN Ucom should normally operate to enable this function.)
When replacing D-MAIN Assy, execute the above mentioned processes.

[Data that can be saved/cannot be saved]

The following **data can not be saved**. Data other than these can be saved.

Contents to save	Destination to save
Last memory for turning ON/OFF the Main power and power supply for ZONE2 Last memory for inputting the Main power, ZONE2 Setting for controlling HDMI Remote control ID Setting for Network Standby Data to be save upon the operation of protection circuit Standby Through setting	EVENT Ucom
Settings for HMG Favorite, Recently played, Repeat	BridgeCo IC

(As the data saved by EVENT Ucom is on the FRONT Assy, the data cannot be deleted unless Assy is replaced at the same time.)

[Requirements for USB memory]

USB memory to be used should meet the following requirements.

- Compatible with USB Mass storage Class
- With a file system of FAT (FAT32)

[File saving format]

Files are to be saved in the following format:

Example: VSX-1127_BK01.avr

[How to save in the USB memory from AV amplifier]

1. Insert the usable USB memory into the USB terminal when the main device is off.
2. Enter the SERVICE MODE and select [USB BAK ◀ HOLD ▶] with ↑↓ keys.
(See [6.1 TEST MODE] for how to enter the SERVICE MODE.)
3. Select [USB BAK ◀ SAVE? ▶] with ⇄ keys and press [ENTER].
Note: The system cannot execute SAVE, LOAD until start is completed of BridgeCo.
4. Saving in the USB starts and the main device automatically goes off after the normal completion ([COMPLETE] is displayed.).
5. Remove the USB and saving is finished.

*1. If the following errors occur after "SAVE" is executed, error message will be displayed and "SAVE" will be stopped and the power will be turned off.

- Ejecting of USB device
- Short capacity of USB device
- Error during writing in the USB device (Read Only or defective Sector, etc.)

*2. If the same file name exists in the USB, overwriting will be automatically executed.

[How to write into AV amplifier from the USB memory]

1. Insert the USB with the saved file into the USB terminal when the main device is off.
2. Enter the TEST MODE and select [USB BAK ◀ HOLD ▶] with ↑↓ keys.
(See [6.1 TEST MODE] for how to enter the TEST MODE.)
3. Select [USB BAK ◀ LOAD? ▶] with ⇄ keys and press [ENTER].
4. Saving in the main device starts and it automatically goes off after the normal completion ([COMPLETE] is displayed.).
5. Remove the USB and loading is finished.

* If the following errors occur after "LOAD" is executed, error message will be displayed and "LOAD" will be stopped and the power will be turned off.

- No setting file
- Mismatching between the setting file and the specification of the A/V RECEIVER type to be loaded back
- Error due to Checksum, Signature Check, and Size Check
- Ejecting of USB device (during reading of the setting file)

A Precautions

- Files are stored in Root of USB memory.
- Files are read from Root of USB memory.
 - ⇒ To make operations such as moving files, be sure to assign the saved file in Root of the USB memory.
Also please be careful not to assign *.avr in multiple numbers.
- The time and date of updating for saved file is fixed to "2006/03/08 20:01."
- In principle, please implement Load without making of factory default settings.
To Load from factory default settings status, please take caution on the following points;

Please be sure to check the HDMI control setting for the user before performing of factory default settings.
Since the HDMI control setting of default settings is ON, turn OFF the HDMI control setting and Load after performing of factory default settings if the checked user setting is OFF.

(If Load is executed with the setting ON, the assignment information for each HDMI input will be cleared.)

B

Procedures for turning OFF the HDMI control setting

⇒ HOME MENU ⇒ 4.System Setup ⇒ e.HDMI Setup ⇒ Control OFF


Note:

In case of US models, [USB Backup] function is not implemented with the first firmware.
Before performing the backup function, please check the unit version. If small version number of Main com (EMMA) is smaller than 157, please update to the latest version.
If that is 157 or over (e.g. [1-157076014091]), the backup function is implemented.

C**D****E****F**

8.3 UPDATING OF THE FIRMWARE

Workflow

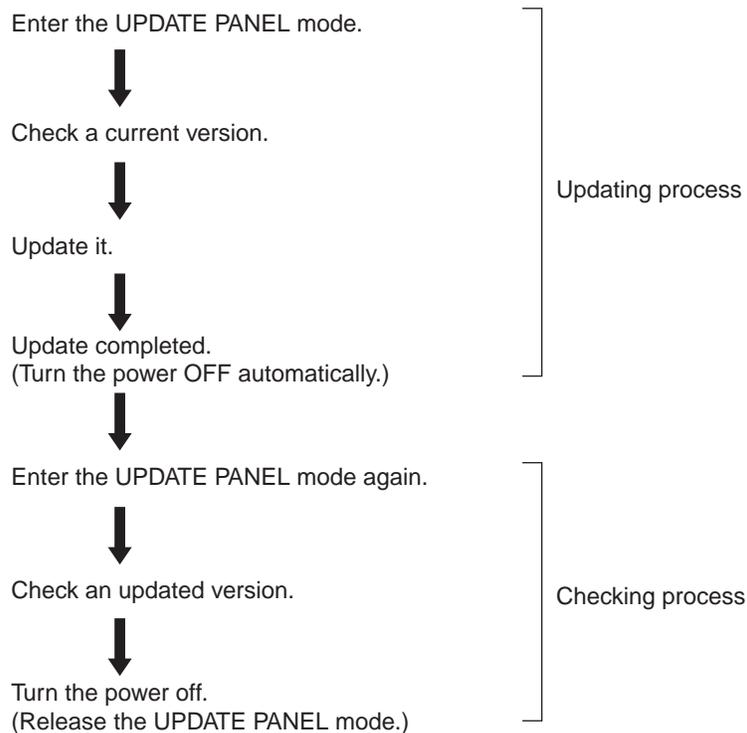

MAIN com (EMMA), SUB com (EVENT), DSP Flash ROM and BridgeCo IC Update by USB Memory and the Confirmation of the Version

● UPDATE PANEL Mode (Version update)


[Preparations]

1. Copy the UPDATE FILE to the root directory of the USB Memory.
Note: NEVER copy several UPDATE FILES to the root directory of the USB Memory.
 Copy only the corresponding UPDATE FILE.
2. Turn off the power to this unit by setting Multi-Zone to "OFF".
3. Connect the USB Memory to the USB terminal (A type) of the front panel.

[Procedure]


1. While holding down "TUNE↑" key on the front panel, press "STANDBY ON/OFF" key and moves to the **UPDATE PANEL mode**.
2. The updating process is as follows.

A

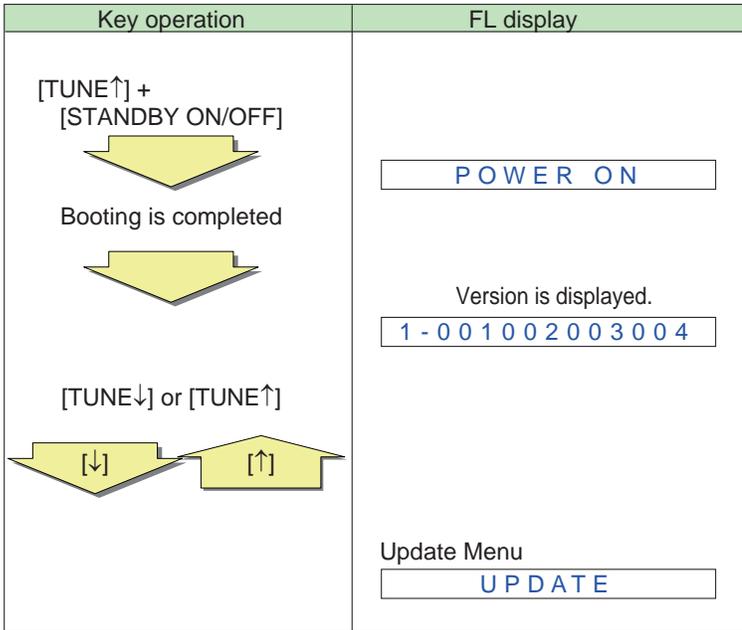

Front Panel Key

- [↓] : TUNE key
- [↑] : TUNE key
- [←] : PRESET key
- [→] : PRESET key

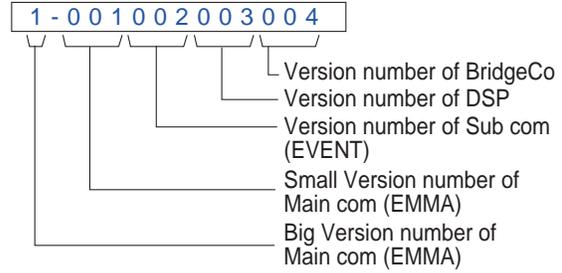


B

C


Do not do time-out during update panel indication.
 It takes about 45 seconds till version of the BridgeCo is displayed.
 Meanwhile, version of the BridgeCo is displayed with ***.

D

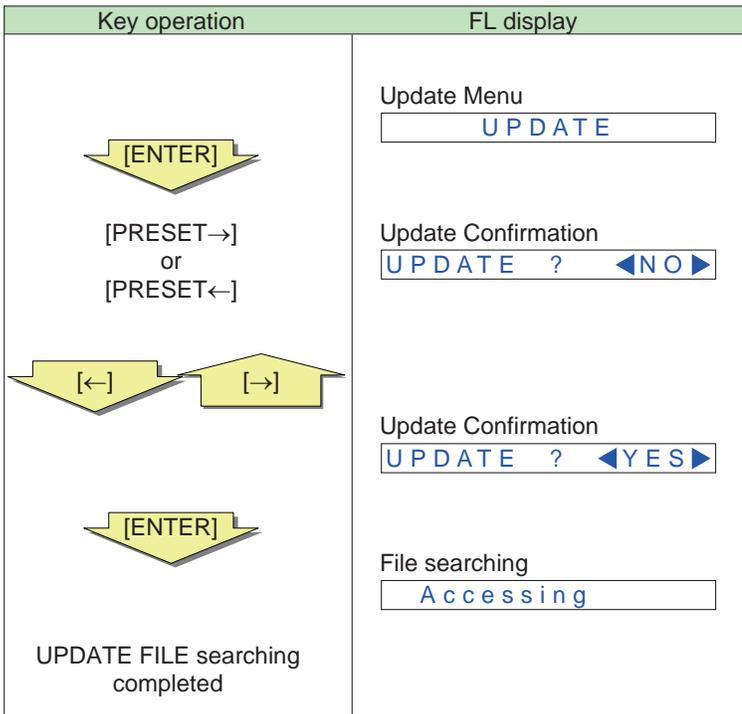

E

F

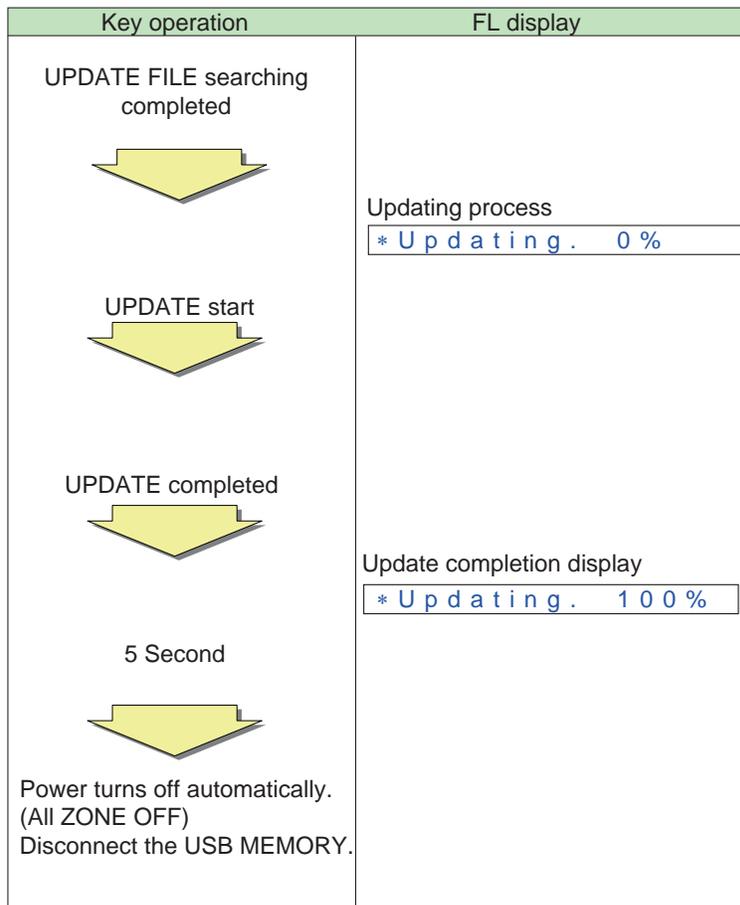

Update time is fluctuated by contents of the update. It will take about 26 minutes at the maximum.
(Actual time is from 3 minutes to 26 minutes.)

Time required for updating varies, because only the programs that require updating will be updated.

[Confirmation]

Enter UPDATE PANEL mode and check that the programs have been updated.


8.4 IDLE CURRENT ADJUSTMENT



When any component parts which are within the red square on the following circuit diagram are replaced, the idle current adjustment of that channel is required. (Idle current adjustment for another channel is not required.)

However, when any capacitors are replaced, the adjustment is not required.

(The following circuit diagram is for SL channel, but another channel also has same circuit diagram and same adjustment is required)

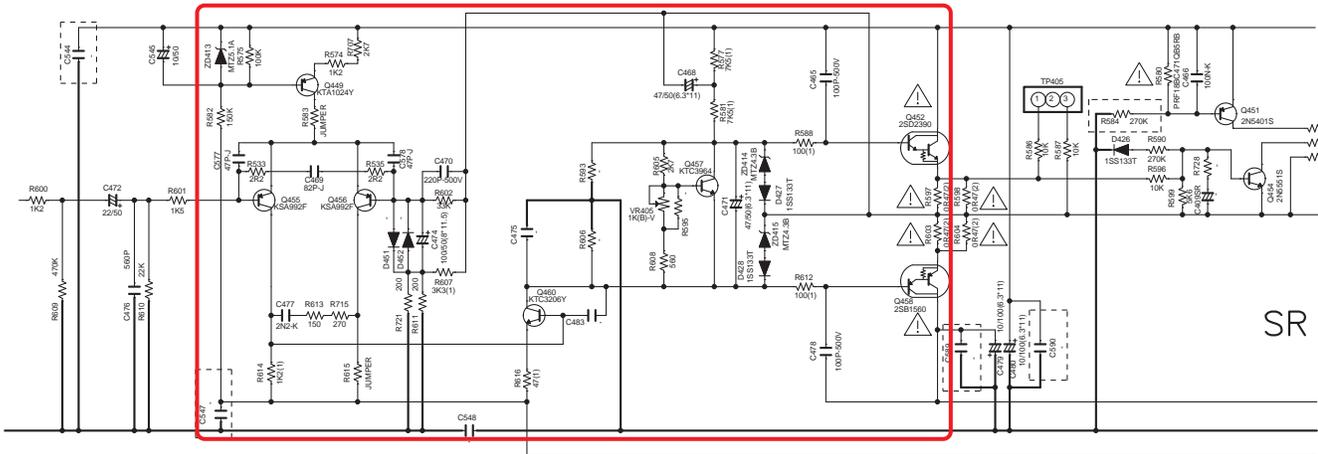

Channel	Measurement Points	Adjustment Points	Procedure
FL	TP404 pin 1 (+) TP404 pin 3 (-)	VR404	① Turn on the power. ② Perform aging for one minute. ③ Connect a digital voltmeter to the measurement point. ④ Turn the adjustment VR so that the voltage becomes in $2.0\text{ mV} \pm 0.2\text{ mV}$. (Condition : No signal and no load)
FR	TP402 pin 1 (+) TP402 pin 3 (-)	VR402	
C	TP403 pin 1 (+) TP403 pin 3 (-)	VR403	
SL	TP401 pin 1 (+) TP401 pin 3 (-)	VR401	
SR	TP405 pin 1 (+) TP405 pin 3 (-)	VR405	
SBL	TP406 pin 1 (+) TP406 pin 3 (-)	VR406	
SBR	TP407 pin 1 (+) TP407 pin 3 (-)	VR407	

• Adjustment points and measurement points.... see fig.1.

B AMP7 ASSY

SIDE A

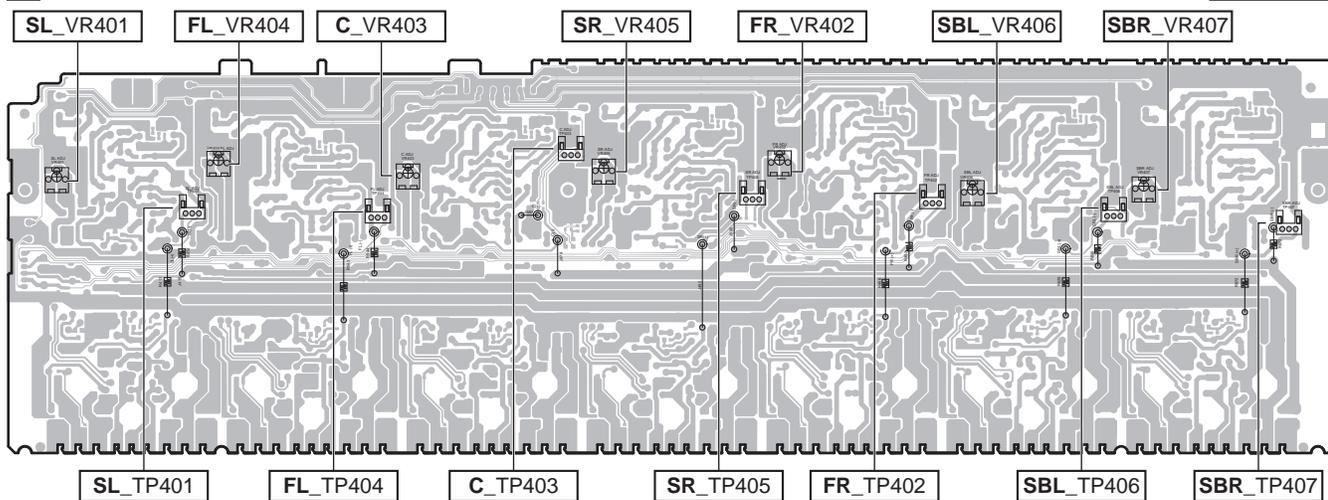


Fig.1



5



6



7



8



A



B



C



D



E



F



5



6

VSX-1127-K



7



8





9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.

- The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to ∇ mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING SECTION

Poly bag packing style

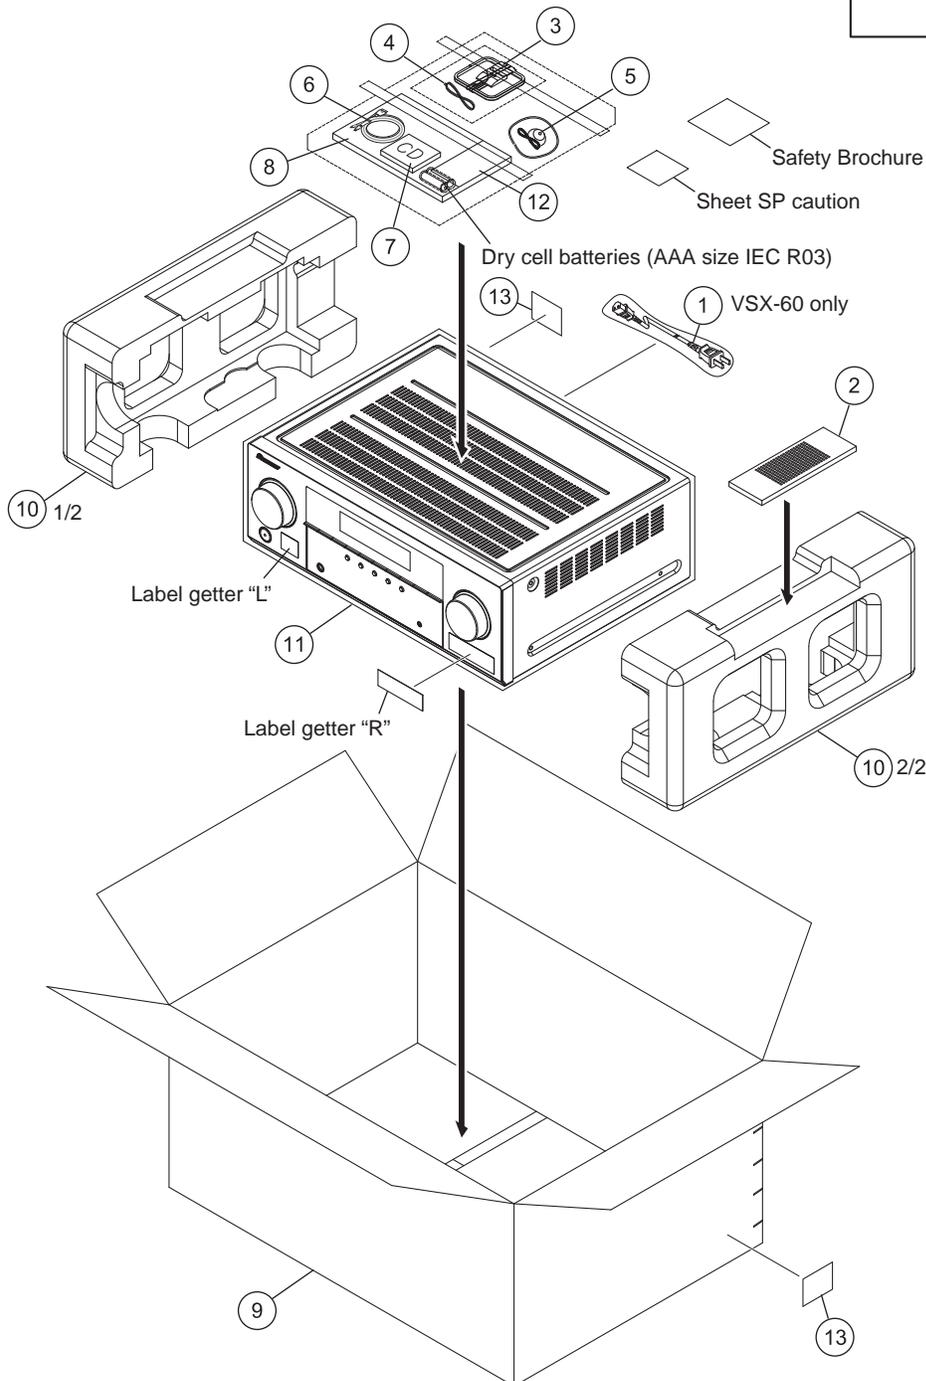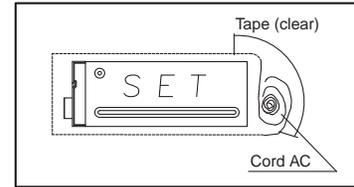

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.
⚠	1 Power Cord	See Contrast table (2)
	2 Remote Control	8300766400010-IL
	3 AM Loop Antenna	E601019000010-IL
	4 FM Wire Antenna	E605010140010-IL
	5 Microphone (for Auto MCACC setup)	APM7010
	6 iPod Cable	L308102013030-IL
	7 Operating Instructions (CD-ROM)	See Contrast table (2)
	8 Quick Start Guide	See Contrast table (2)
	9 Box, Gift	See Contrast table (2)
	10 Cushion, Snow	6230212914000-IL
	11 PE, Sheet	6327040059000-IL
NSP	12 Warranty Sheet	See Contrast table (2)
NSP	13 Label	VRW1629

(2) CONTRAST TABLE

VSX-1127-K/CUXE, VSX-1122-K/CUXESM, VSX-60/UXECB and VSX-1027-K/CUXE are constructed the same except for the following:

Mark	No.	Symbol and Description	VSX-1127-K /CUXE	VSX-1122-K /CUXESM	VSX-60 /UXECB	VSX-1027-K /CUXE
⚠	1	Power Cord	Not used	Not used	L068125130010-IL	Not used
	7	Operating Instructions (CD-ROM)	6517000000550-IL	6517000000540-IL	6517000000560-IL	6517000000550-IL
	8	Quick Start Guide	57070000006590-IL	57070000006580-IL	57070000006600-IL	57070000006590-IL
	9	Box, Gift	6007211820110-IL	6007211820100-IL	6007211820120-IL	6007211820150-IL
NSP	12	Warranty Sheet	ARY7156	ARY7156	ARY7007	ARY7156

9.2 EXTERIOR SECTION

1

2

3

4

A


B

C

D

E

F

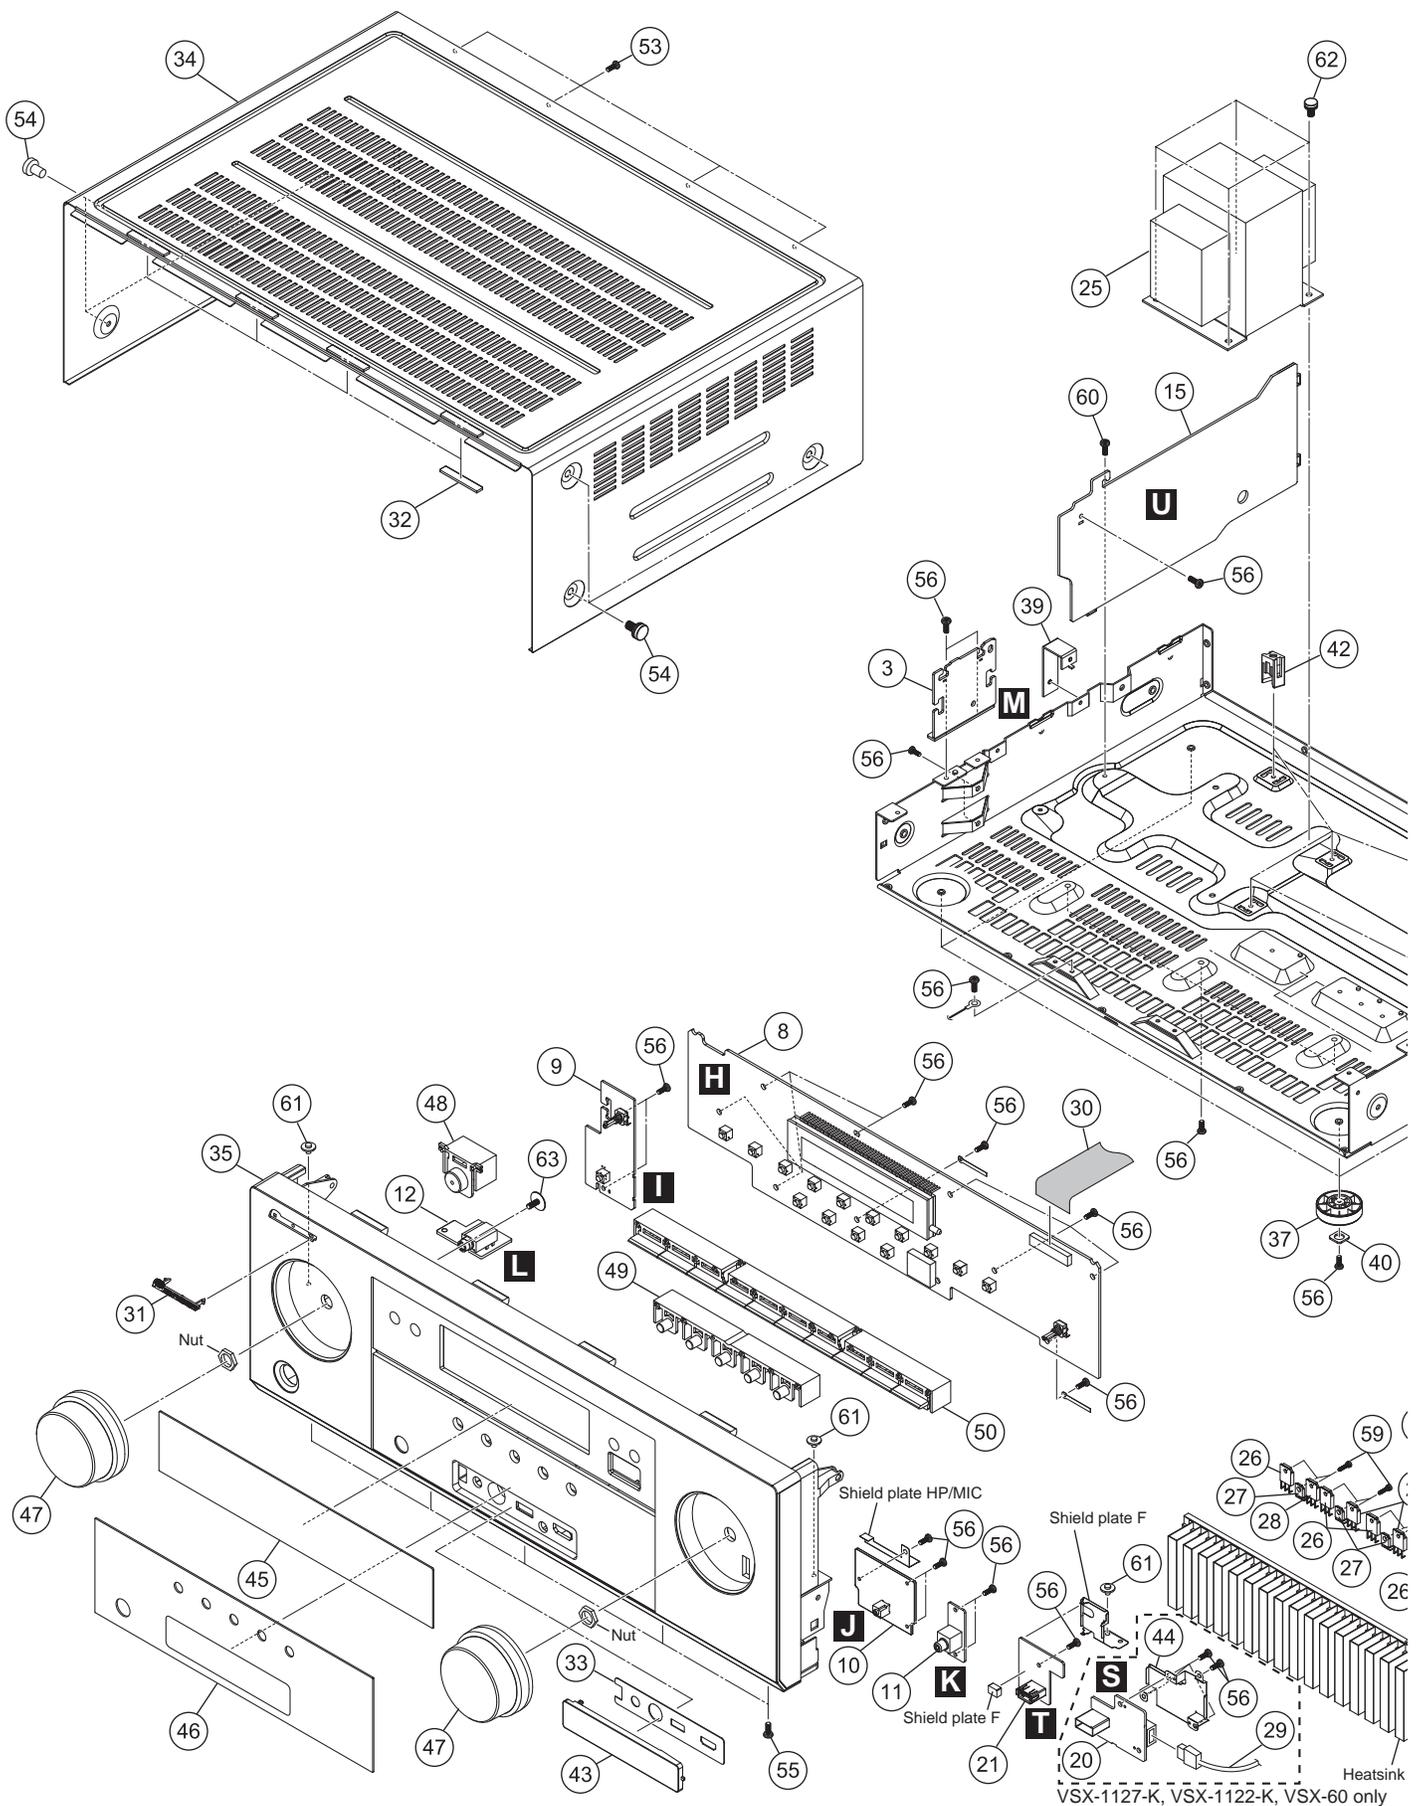

1

2

3

4

(1) EXTERIOR SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
A	1 MAIN Assy	See Contrast table (2)	46	Window Lower	See Contrast table (2)
	2 VIDEO Assy	See Contrast table (2)	47	Knob	5080212431000-IL
	3 G-L Assy	7028071713040-IL	48	Button	See Contrast table (2)
	4 G-R Assy	7028071714040-IL	49	5 Key Button	5090214561000-IL
	5 WG-A Assy	7028071715040-IL	50	10 Key Button	5090214571000-IL
	6 WG-B Assy	7028071716040-IL	51	CN, Wire	See Contrast table (2)
	7 D-MAIN Assy	See Contrast table (2)	52	•••••	
	8 FRONT Assy	See Contrast table (2)	53	Screw	BBT30P100FTB
	9 POWER Assy	See Contrast table (2)	54	Screw	BBT40P080FTB
	10 MIC Assy	7028071723040-IL	55	Screw	BBZ30P080FTB
B	11 FVIDEO Assy	7028071724040-IL	56	Screw	BBZ30P080FTC
	12 HP Assy	7028071725040-IL	57	Screw	BBZ30P180FTC
	13 AUDIO Assy	See Contrast table (2)	58	Screw	BSZ30P040FTB
	14 IR Assy	See Contrast table (2)	59	Screw Tapping Assy	B018230141H11-IL
	15 SMPS Assy	See Contrast table (2)	60	Screw, Tap Tite	B020230063B10-IL
	16 BRG Assy	See Contrast table (2)	61	Screw, Tap Tite	1500001206010-IL
	17 BTCNT Assy	7028071774040-IL	62	Screw	B028940101B11-IL
	18 CCG Assy	7028071775040-IL	63	Screw	1500001456010-IL
	19 AMP7 Assy	7028071731040-IL	64	Screw	See Contrast table (2)
C	20 FHDMI Assy	See Contrast table (2)			
	21 F-USB Assy	7028071761020-IL			
	22 BT Assy	7028070231010-IL			
	⚠ 23 Cord Assy	See Contrast table (2)			
	⚠ 24 Socket, power AC	See Contrast table (2)			
	⚠ 25 Power Trans 1021U	8200960611050-IL			
	⚠ 26 Transistor	J5011560Y0000-IL			
	⚠ 27 Semi, TR/GE NPN 2SC	J502396400010-IL			
	⚠ 28 Transistor	J5032390Y0000-IL			
D	⚠ 29 HDMI Conn-Cable	See Contrast table (2)			
	30 Cable, Flat Card 1.0M	N711392412880-IL			
	31 Pioneer Badge	See Contrast table (2)			
	32 Sheet	1210210235000-IL			
	33 F Input Sheet	See Contrast table (2)			
	34 Cabinet	3007211846000-IL			
	35 Front Panel	See Contrast table (2)			
	36 Back Chassis	See Contrast table (2)			
	37 Foot (PLS)	4000210391000-IL			
E	38 Bracket	4010056906010-IL			
	39 Bracket SMPS	4010214886000-IL			
	40 Cushion	4050211605000-IL			
	41 Screw Cover	4050211745100-IL			
	42 Support	4070001601010-IL			
	43 Front Input Cover	4317215111030-IL			
	44 Front HDMI Plate1122	See Contrast table (2)			
	45 Window Display U	See Contrast table (2)			

(2) CONTRAST TABLE


VSX-1127-K/CUXE, VSX-1122-K/CUXESM, VSX-60/UXECB and VSX-1027-K/CUXE are constructed the same except for the following:

Mark	No.	Symbol and Description	VSX-1127-K /CUXE	VSX-1122-K /CUXESM	VSX-60 /UXECB	VSX-1027-K /CUXE
	1	MAIN Assy	7028071711010-IL	7028071711010-IL	7028071711040-IL	7028071711010-IL
	2	VIDEO Assy	7028071712020-IL	7028071712070-IL	7028071712040-IL	7028071712070-IL
	7	D-MAIN Assy	7028071752020-IL	7028071752040-IL	7028071752040-IL	7028071752070-IL
	8	FRONT Assy	7028071721050-IL	7028071721010-IL	7028071721040-IL	7028071721060-IL
	9	POWER Assy	7028071722010-IL	7028071722010-IL	7028071722040-IL	7028071722010-IL
	13	AUDIO Assy	7028071741050-IL	7028071741010-IL	7028071741040-IL	7028071741010-IL
	14	IR Assy	7028071771010-IL	7028071771010-IL	7028071771040-IL	7028071771010-IL
	15	SMPS Assy	7028071772010-IL	7028071772010-IL	7028071772040-IL	7028071772010-IL
	16	BRG Assy	7028071773040-IL	7028071773040-IL	7028071773040-IL	7028071773070-IL
	20	FHDMI Assy	7028071791040-IL	7028071791040-IL	7028071791040-IL	Not used
	23	Cord Assy	L068125101710-IL	L068125101710-IL	Not used	L068125101710-IL
⚠	24	Socket, power AC	Not used	Not used	G430040560021-IL	Not used
⚠	29	HDMI Conn-Cable	ADX7777	ADX7777	ADX7777	Not used
	31	Pioneer Badge	XAM3006	XAM3006	PAM1791	XAM3006
	33	F Input Sheet	1217211162040-IL	1217211162040-IL	1217211162050-IL	1217211792000-IL
	35	Front Panel	3067215111020-IL	3067215111010-IL	3067215121010-IL	3067215491000-IL
	36	Back Chassis	3207214216200S-IL	3207214216000S-IL	3207214216300S-IL	3207214206100S-IL
	44	Front HDMI Plate1122	4470212466000-IL	4470212466000-IL	4470212466000-IL	Not used
	45	Window Display U	5077213113040-IL	5077213113040-IL	5077213113050-IL	5077213113040-IL
	46	Window Lower	5077213123090-IL	5077213123090-IL	50772131230B0-IL	5077213123090-IL
	48	Button	5090213741100-IL	5090213741100-IL	5098214551000-IL	5090213741100-IL
	51	CN, Wire	Not used	Not used	L000800020220-IL	Not used
	64	Screw	Not used	Not used	CBZ30P080FTB	Not used

10. SCHEMATIC DIAGRAM

10.1 AUDIO ASSY

- When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".
- The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
-  : The power supply is shown with the marked box.

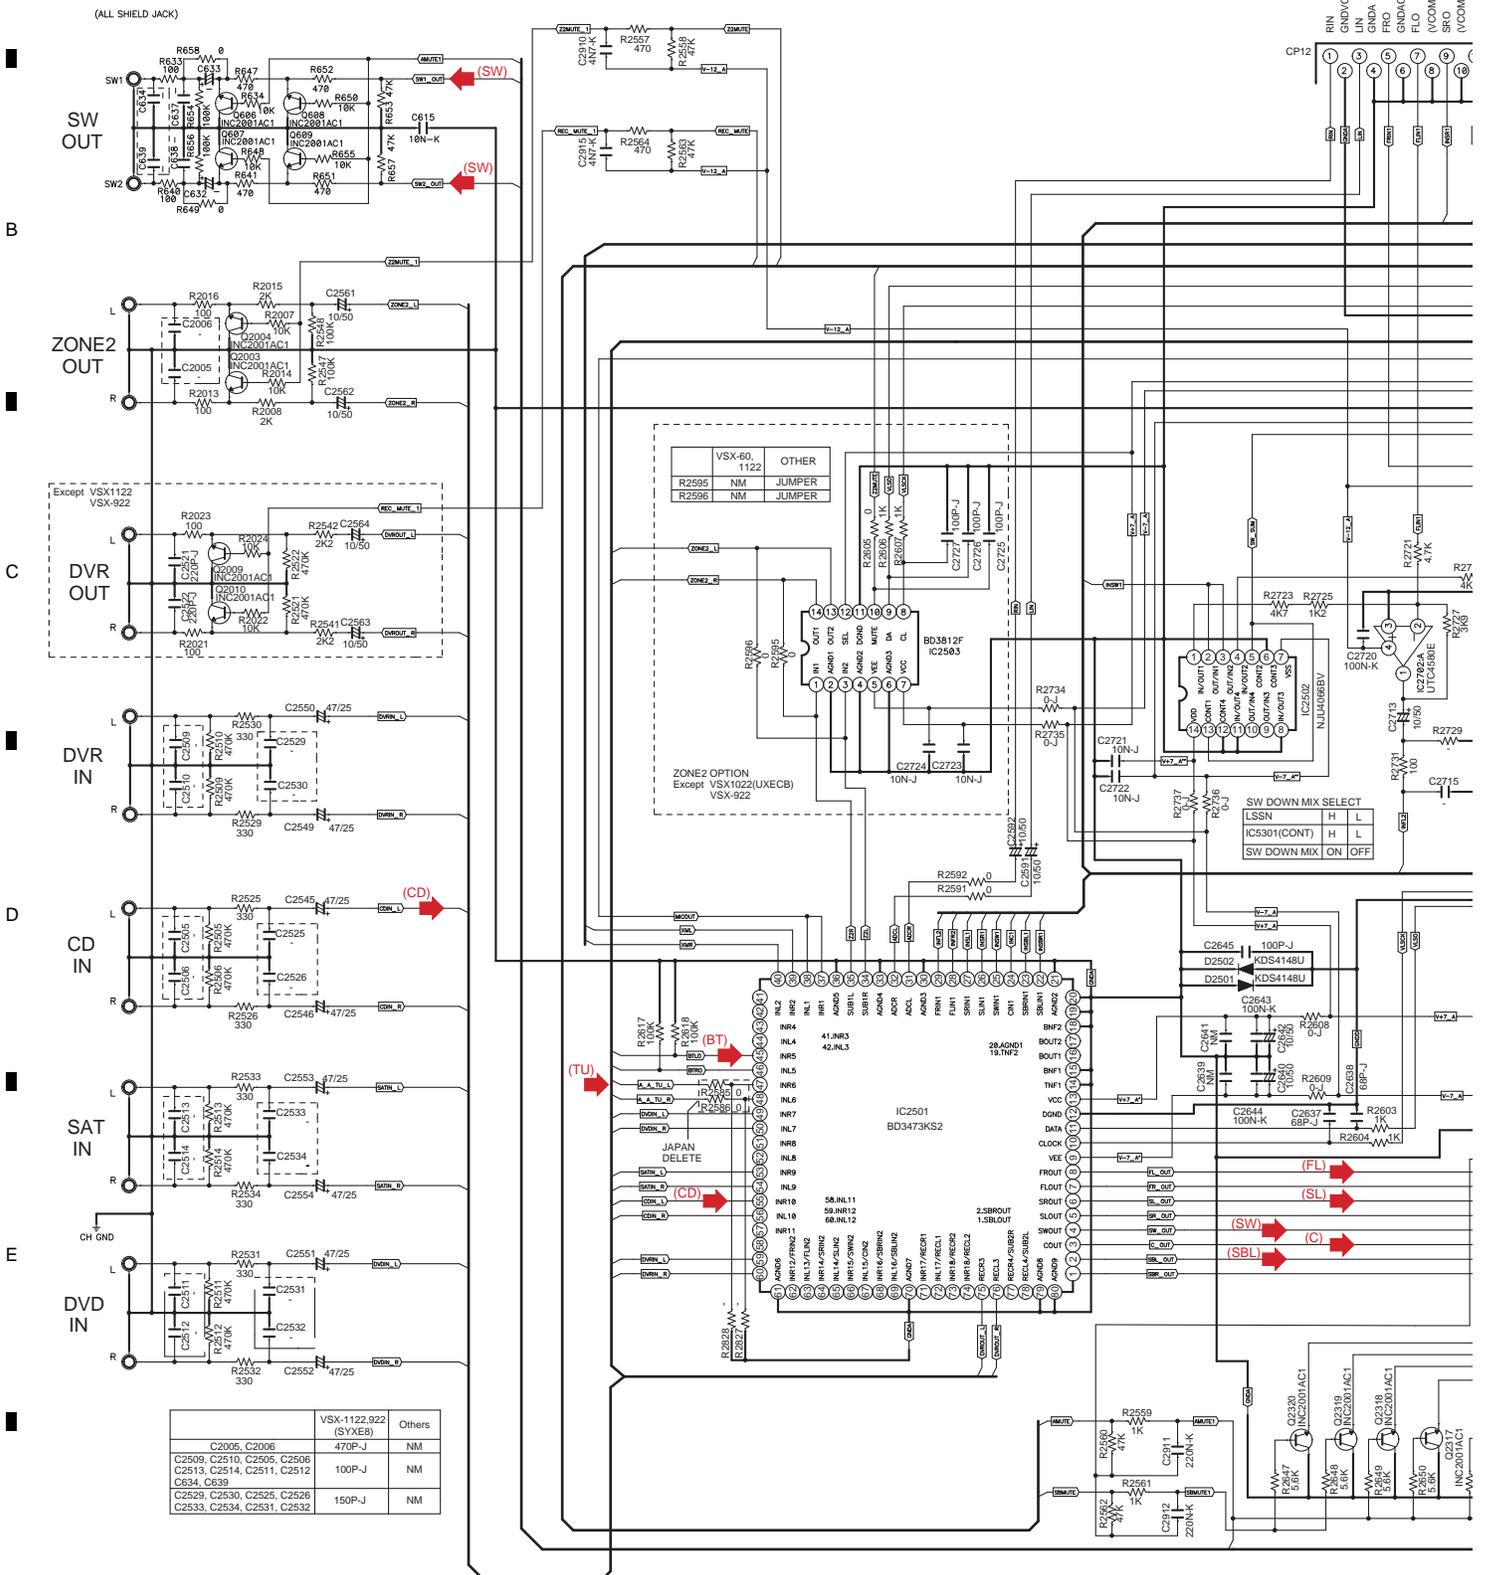

VSX-60, 1122	OTHER
R2595 NM	JUMPER
R2596 NM	JUMPER

SW DOWN MIX SELECT	
LSSN	H L
IC301(CONT)	H L
SW DOWN MIX	ON OFF

	VSX-1122,922 (SYXEB)	Others
C2005, C2006	470P-J	NM
C2509, C2510, C2505, C2506	100P-J	NM
C2513, C2514, C2511, C2512	100P-J	NM
C634, C639	150P-J	NM
C2529, C2530, C2525, C2526		
C2533, C2534, C2531, C2532		




G CN2107

G CN2203

G CN2112

A AUDIO ASSY

(VSX-1127-K: 7028071741050-IL)
 (VSX-1122-K: 7028071741010-IL)
 (VSX-60: 7028071741040-IL)
 (VSX-1027-K: 7028071741010-IL)

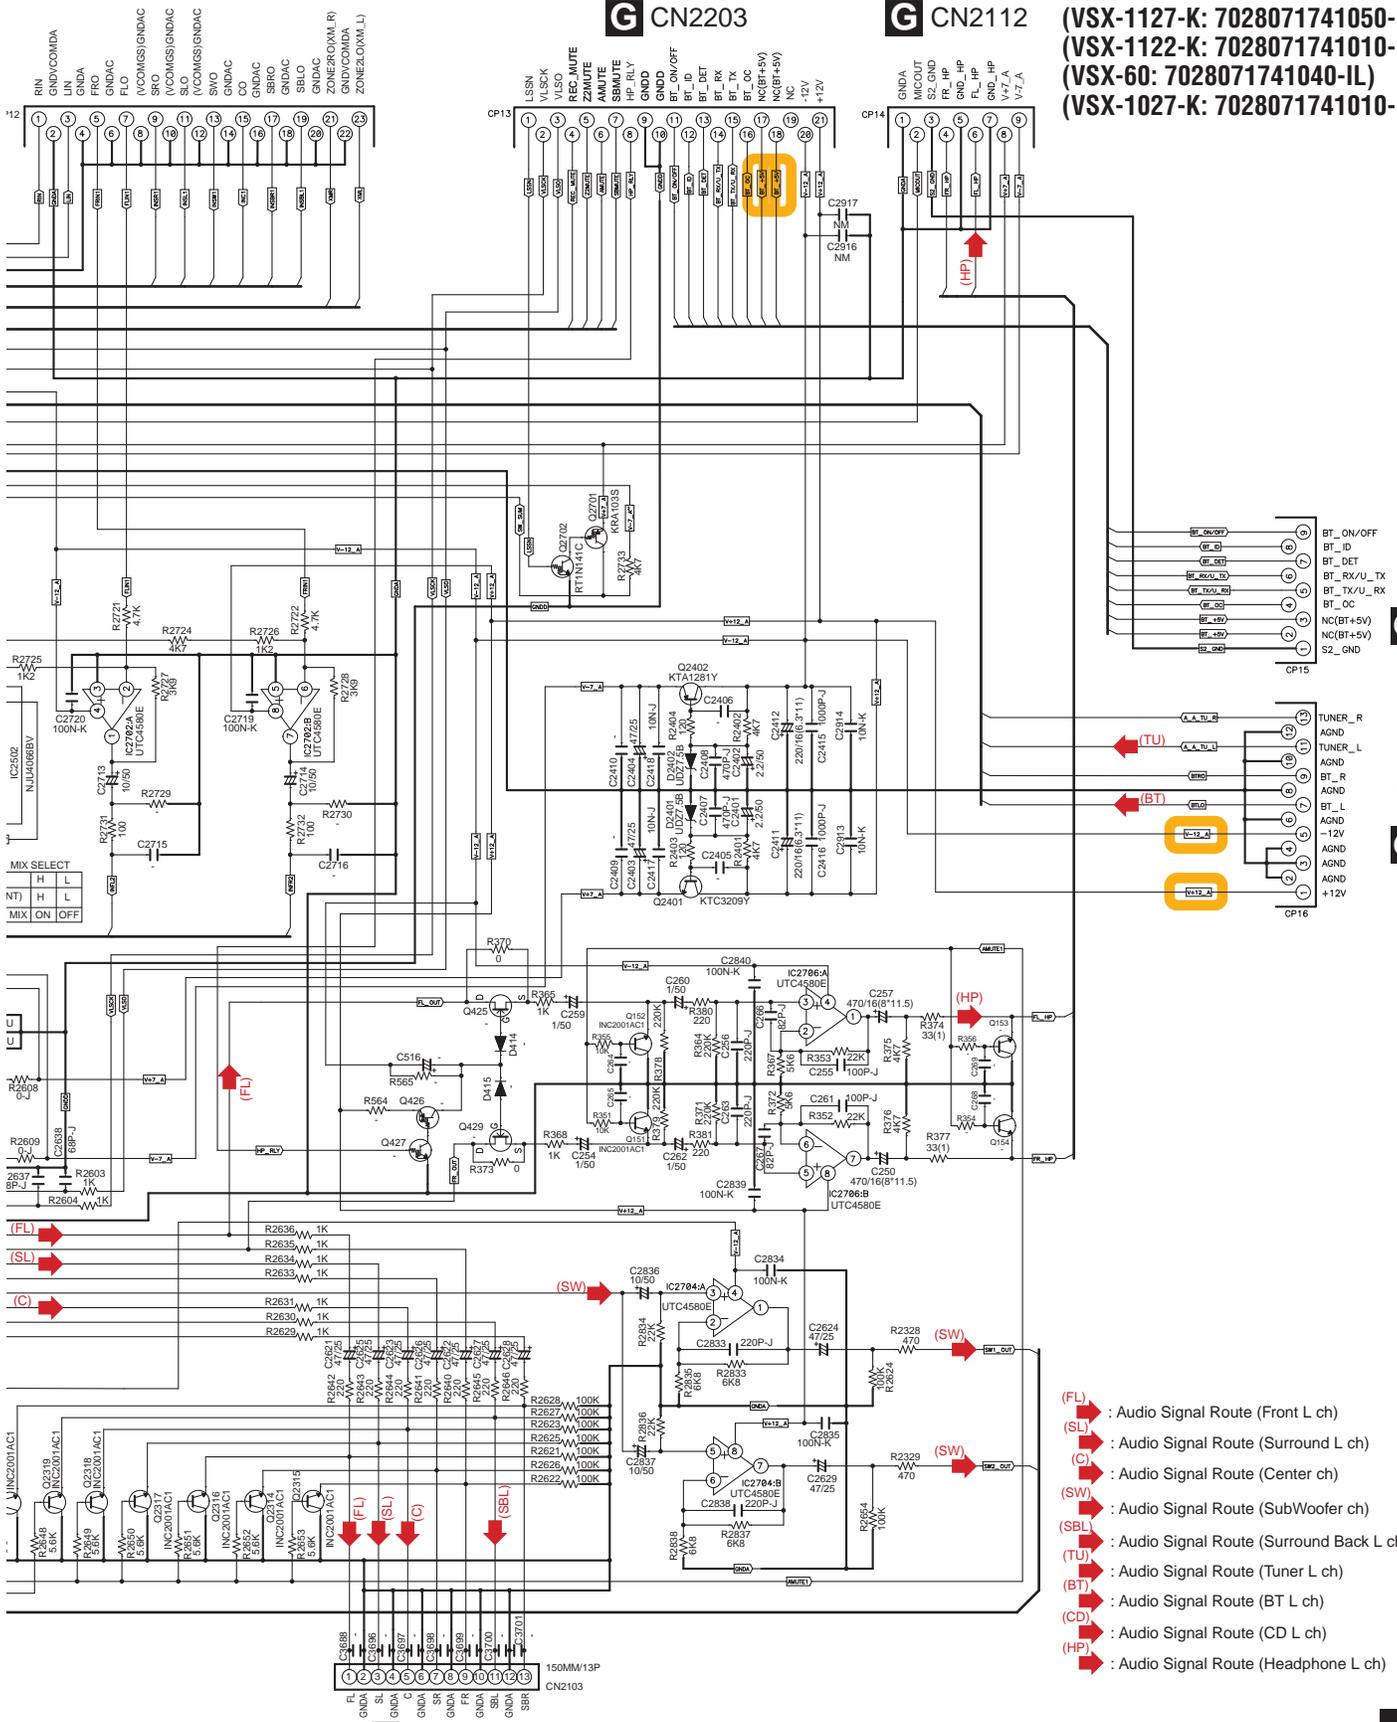


B 1/2 CP401

VSX-1127-K


A

10.2 AMP7 ASSY (1/2)

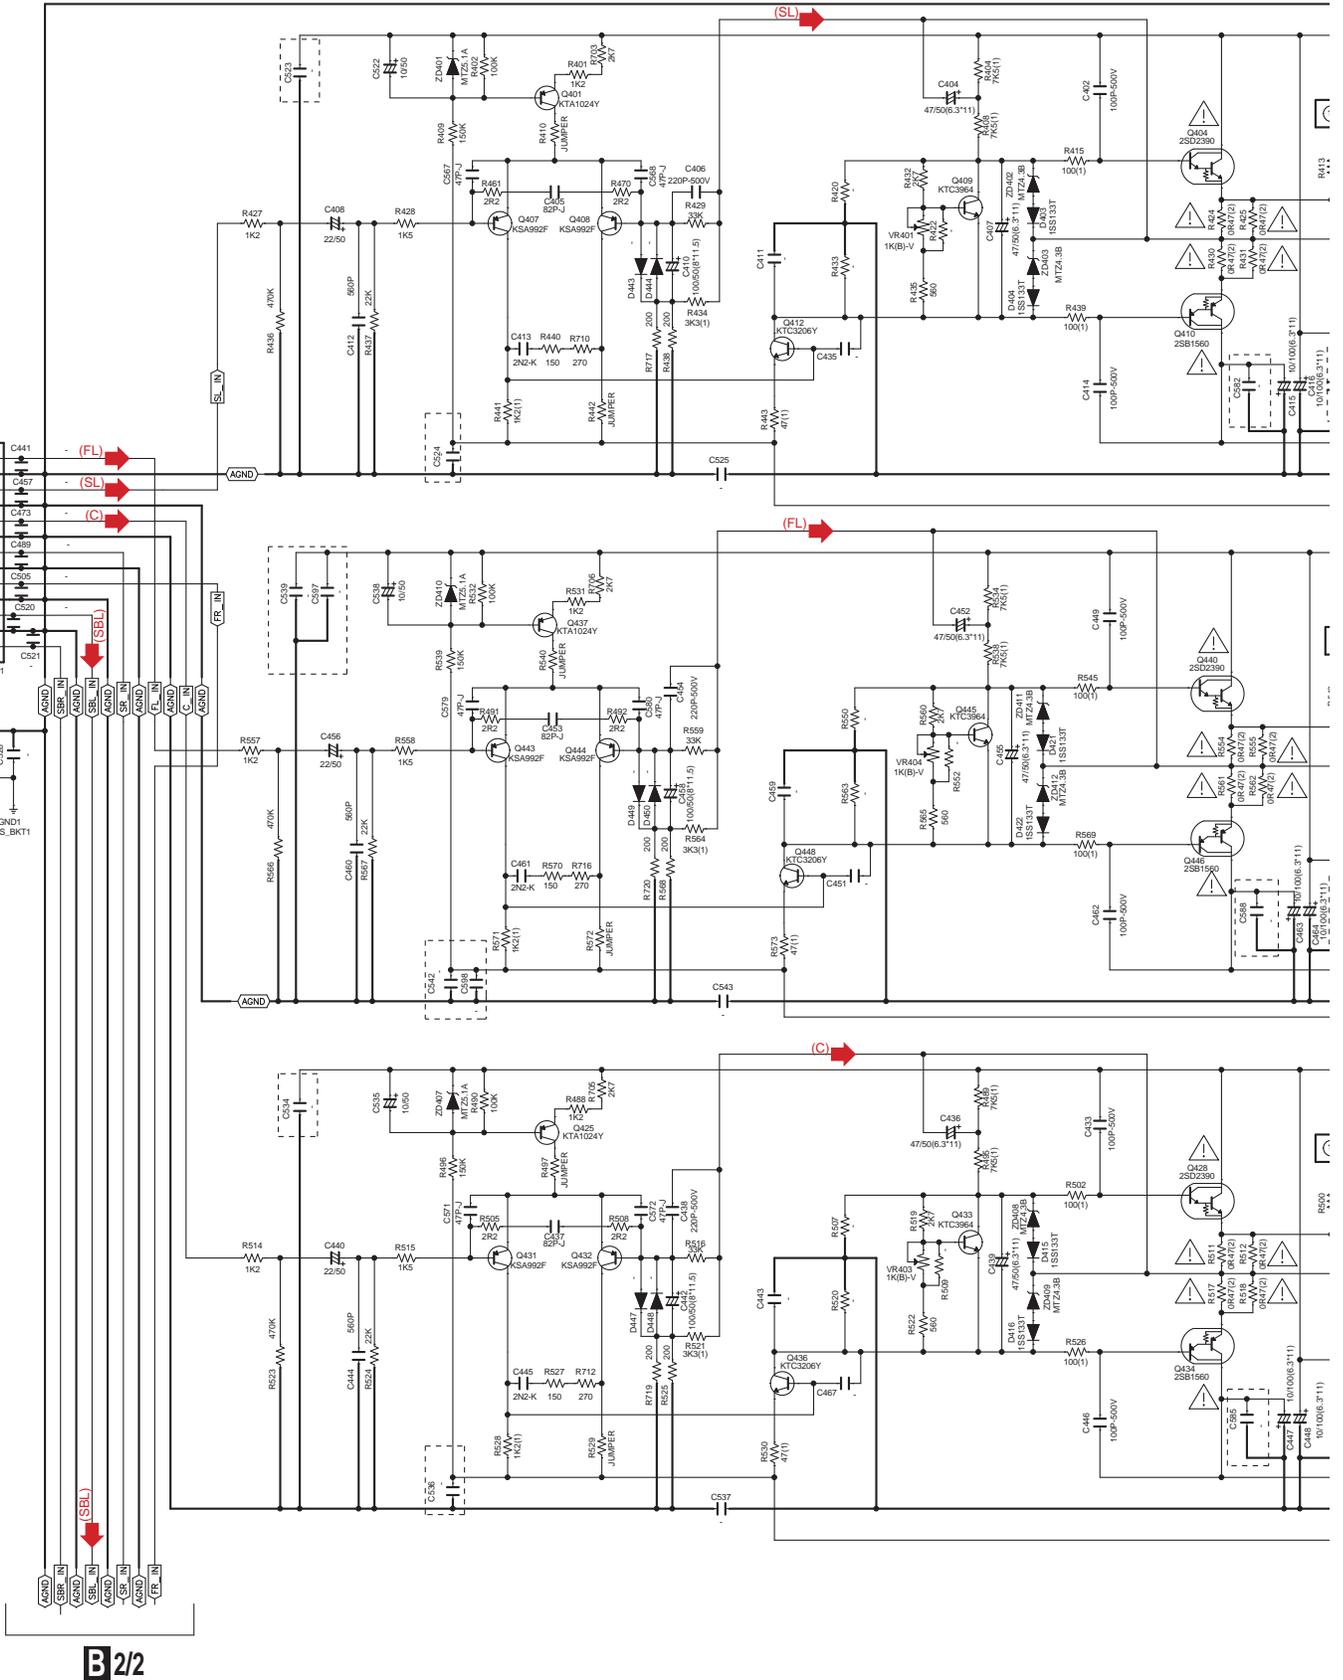

B 1/2

B 1/2 AMP7 ASSY (7028071731040-IL)

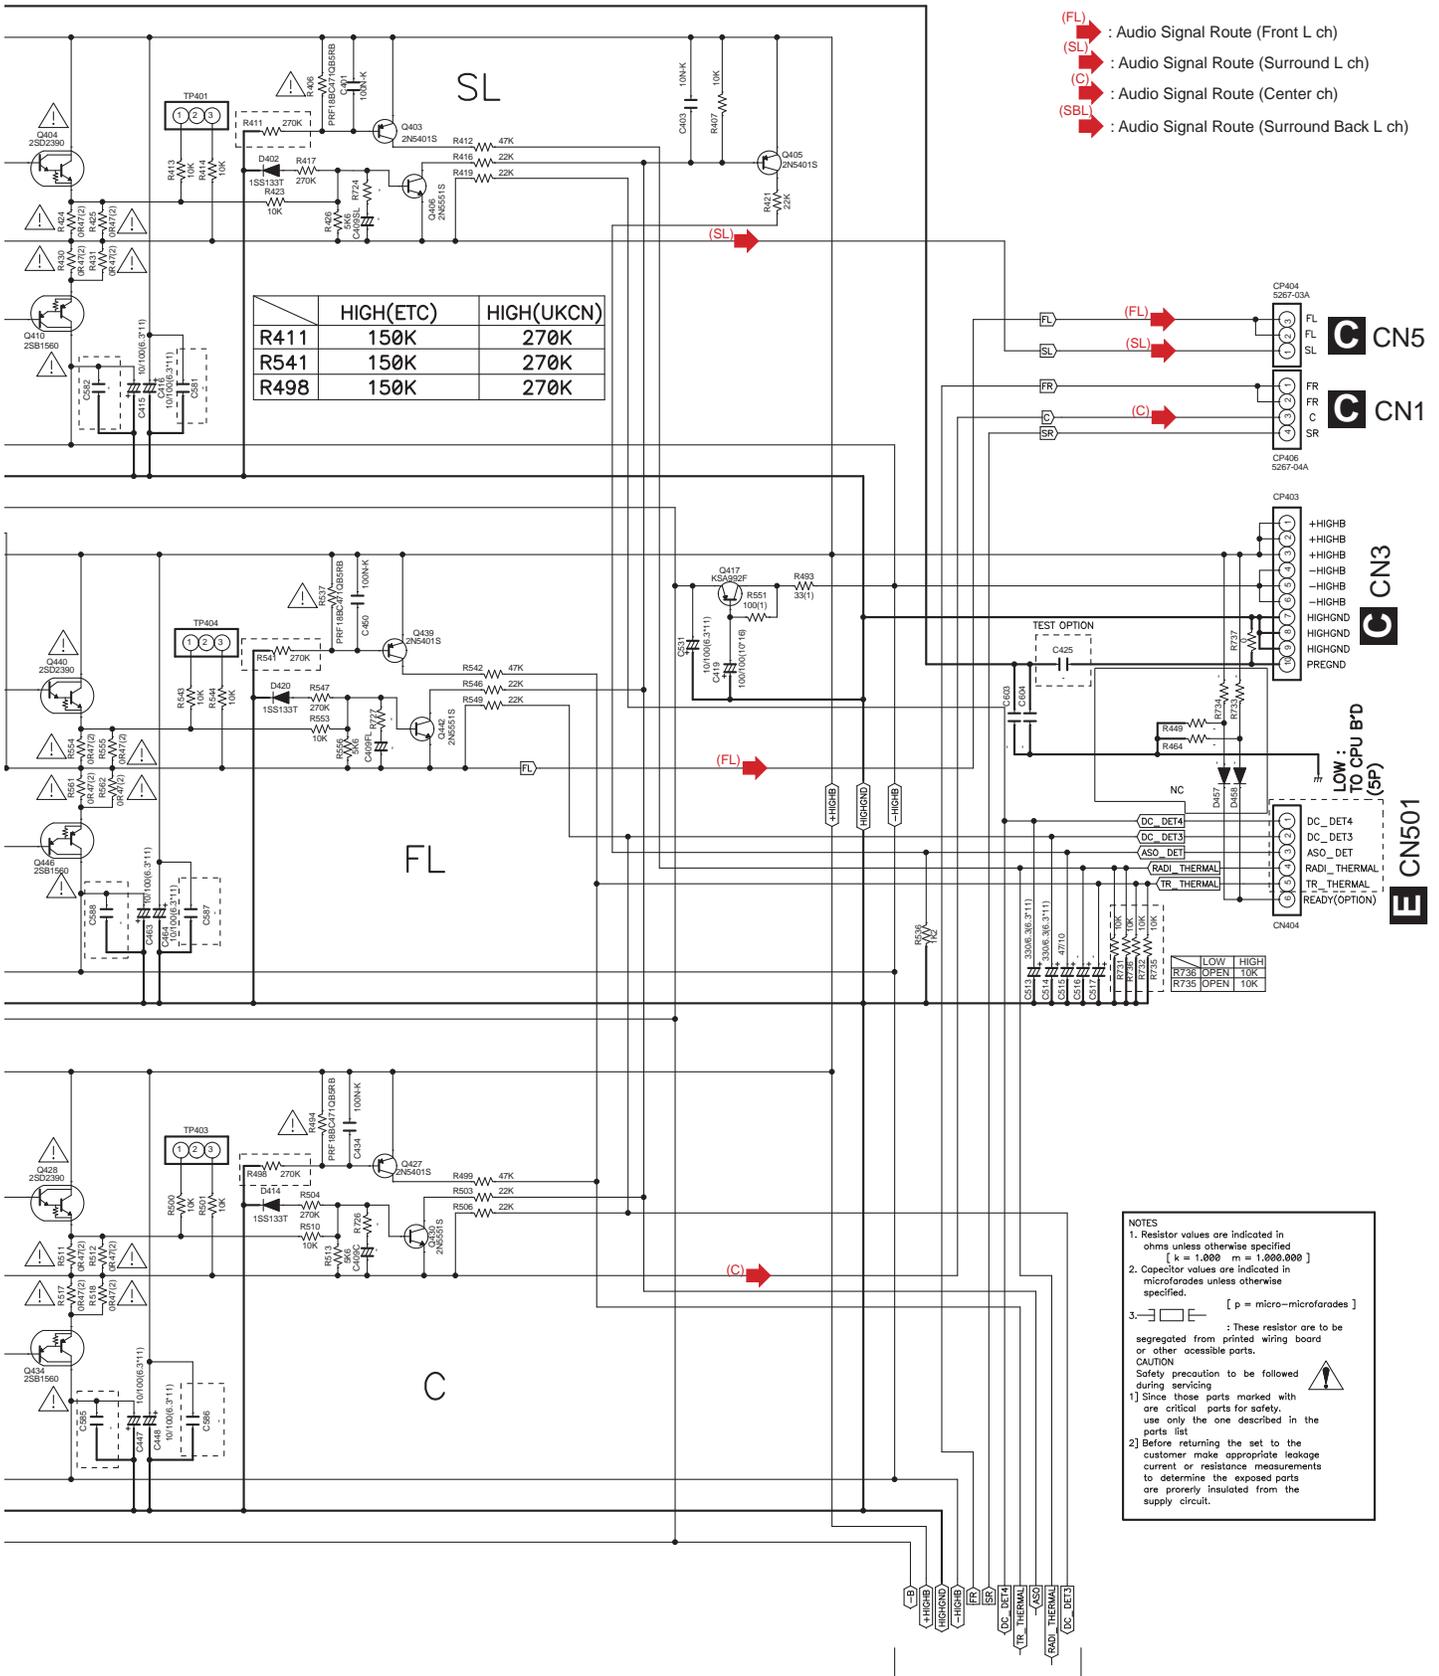


B 2/2

VSX-1127-K

B 1/2

10.3 AMP7 ASSY (2/2)

A
B
C
D
E
F

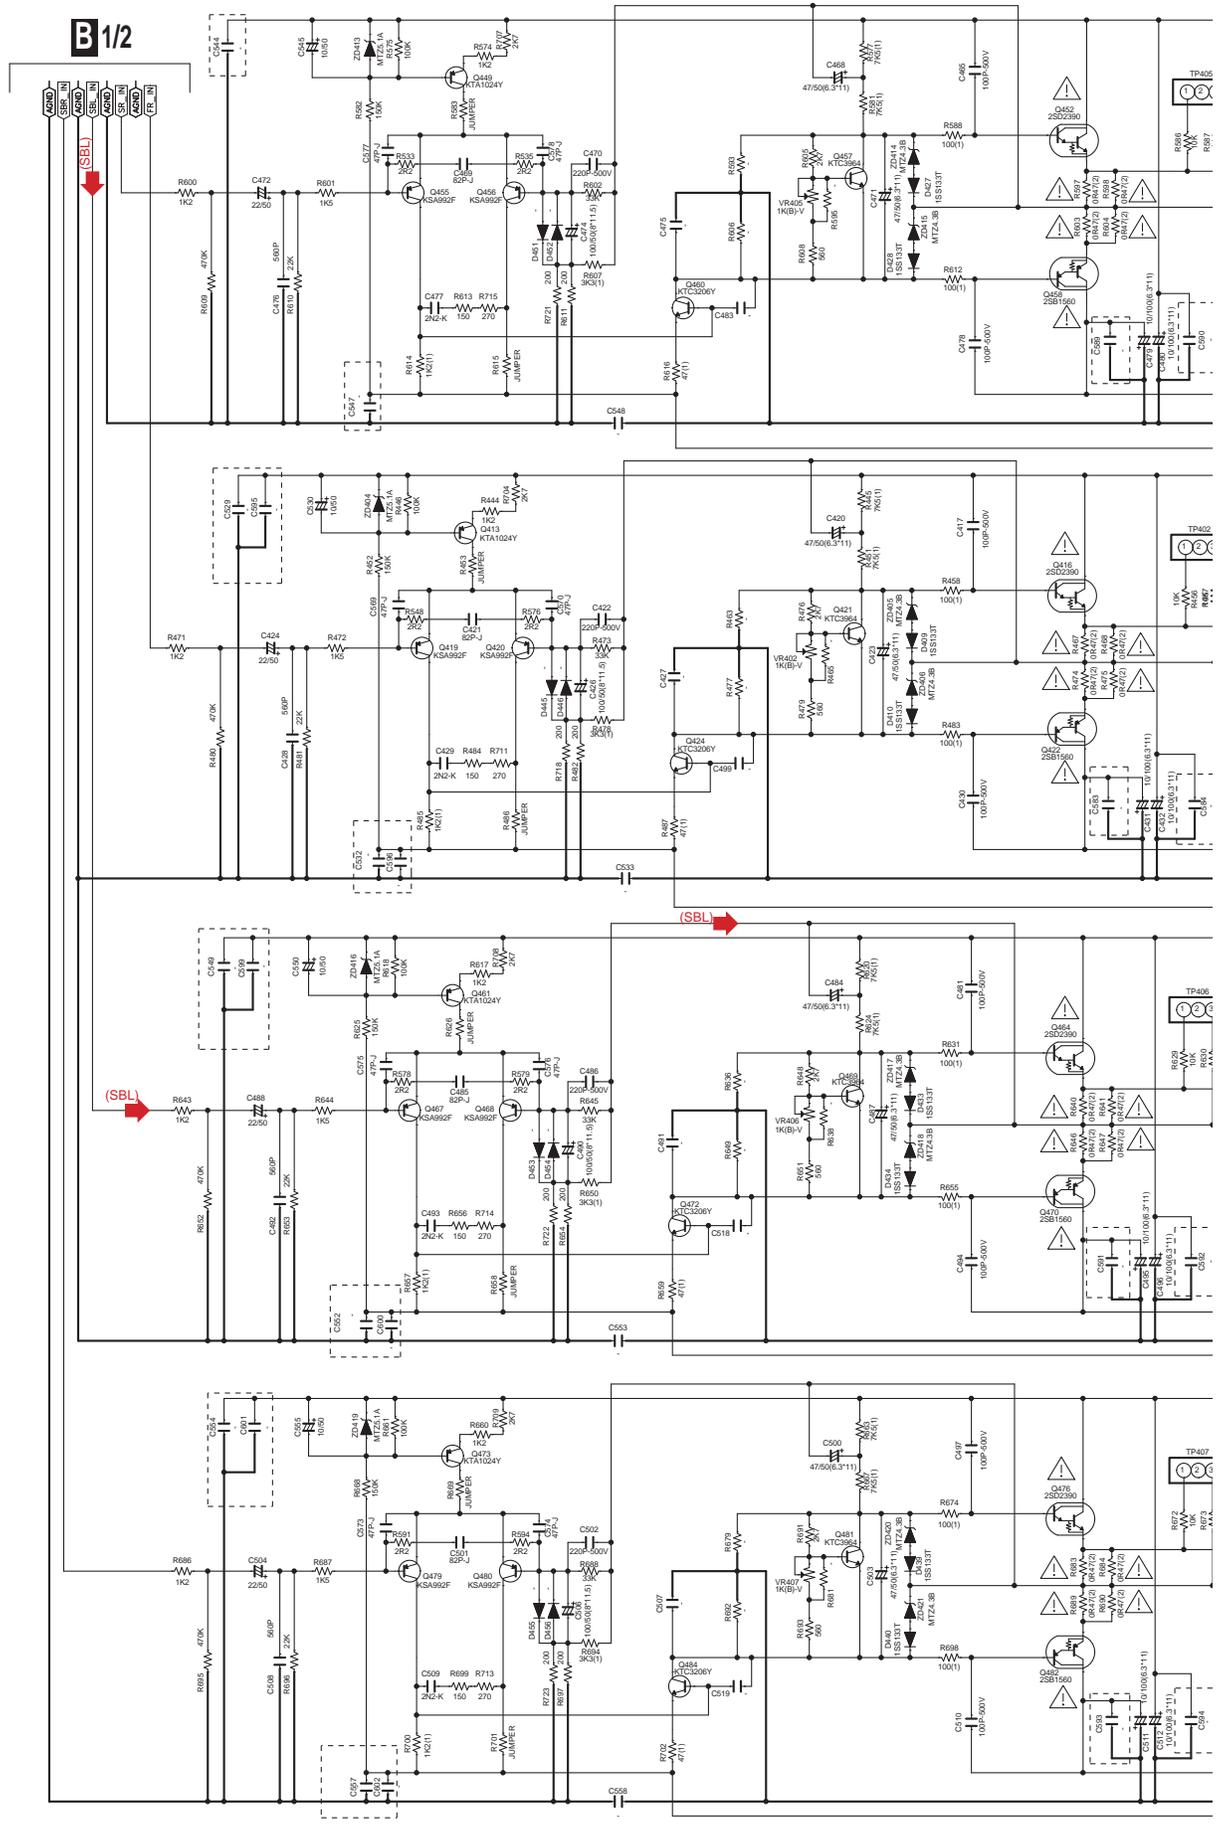

VSX-1127-K

1 2 3 4

B 2/2 AMP7 ASSY (7028071731040-IL)

A


B

C

D

E

F

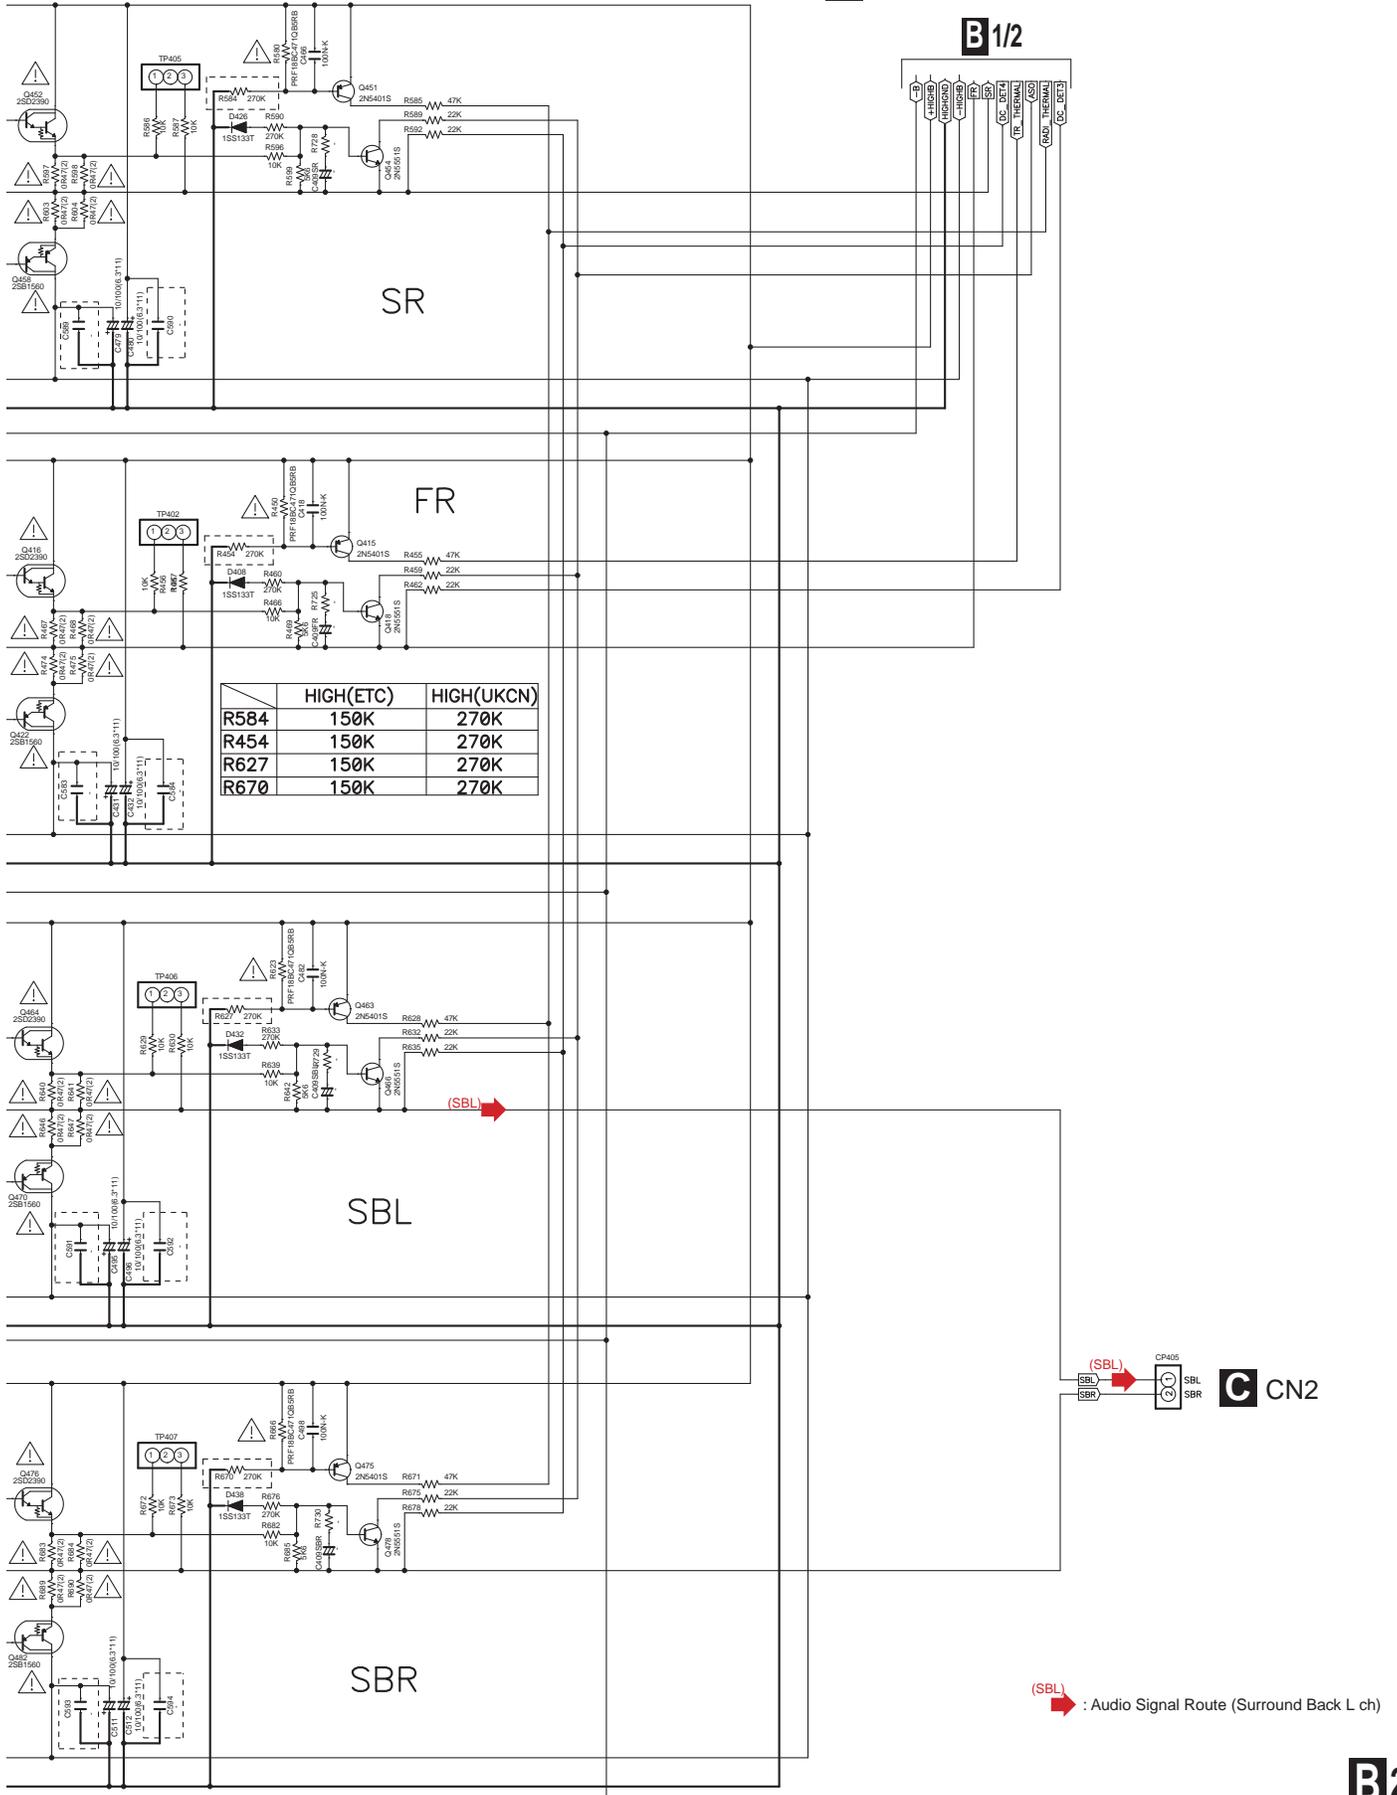

10.4 MAIN ASSY

1

2

3

4

A

B

C

D

E

F




SPEAKER TERMINAL

NOTES

1. Resistor values are indicated in ohms unless otherwise specified [k = 1,000 m = 1,000,000]
2. Capacitor values are indicated in microfarads unless otherwise specified. [p = micro-microfarads]
3.  Segregated from this resistor are to be used on critical parts for safety use only the one described in the parts list.

CAUTION
Safety precaution to be followed during servicing

- 1] Since those parts marked with one critical parts for safety use only the one described in the parts list.
- 2] Before returning the set to the customer make appropriate leakage current or resistance measurements to determine the exposed parts are properly insulated from the supply circuit.

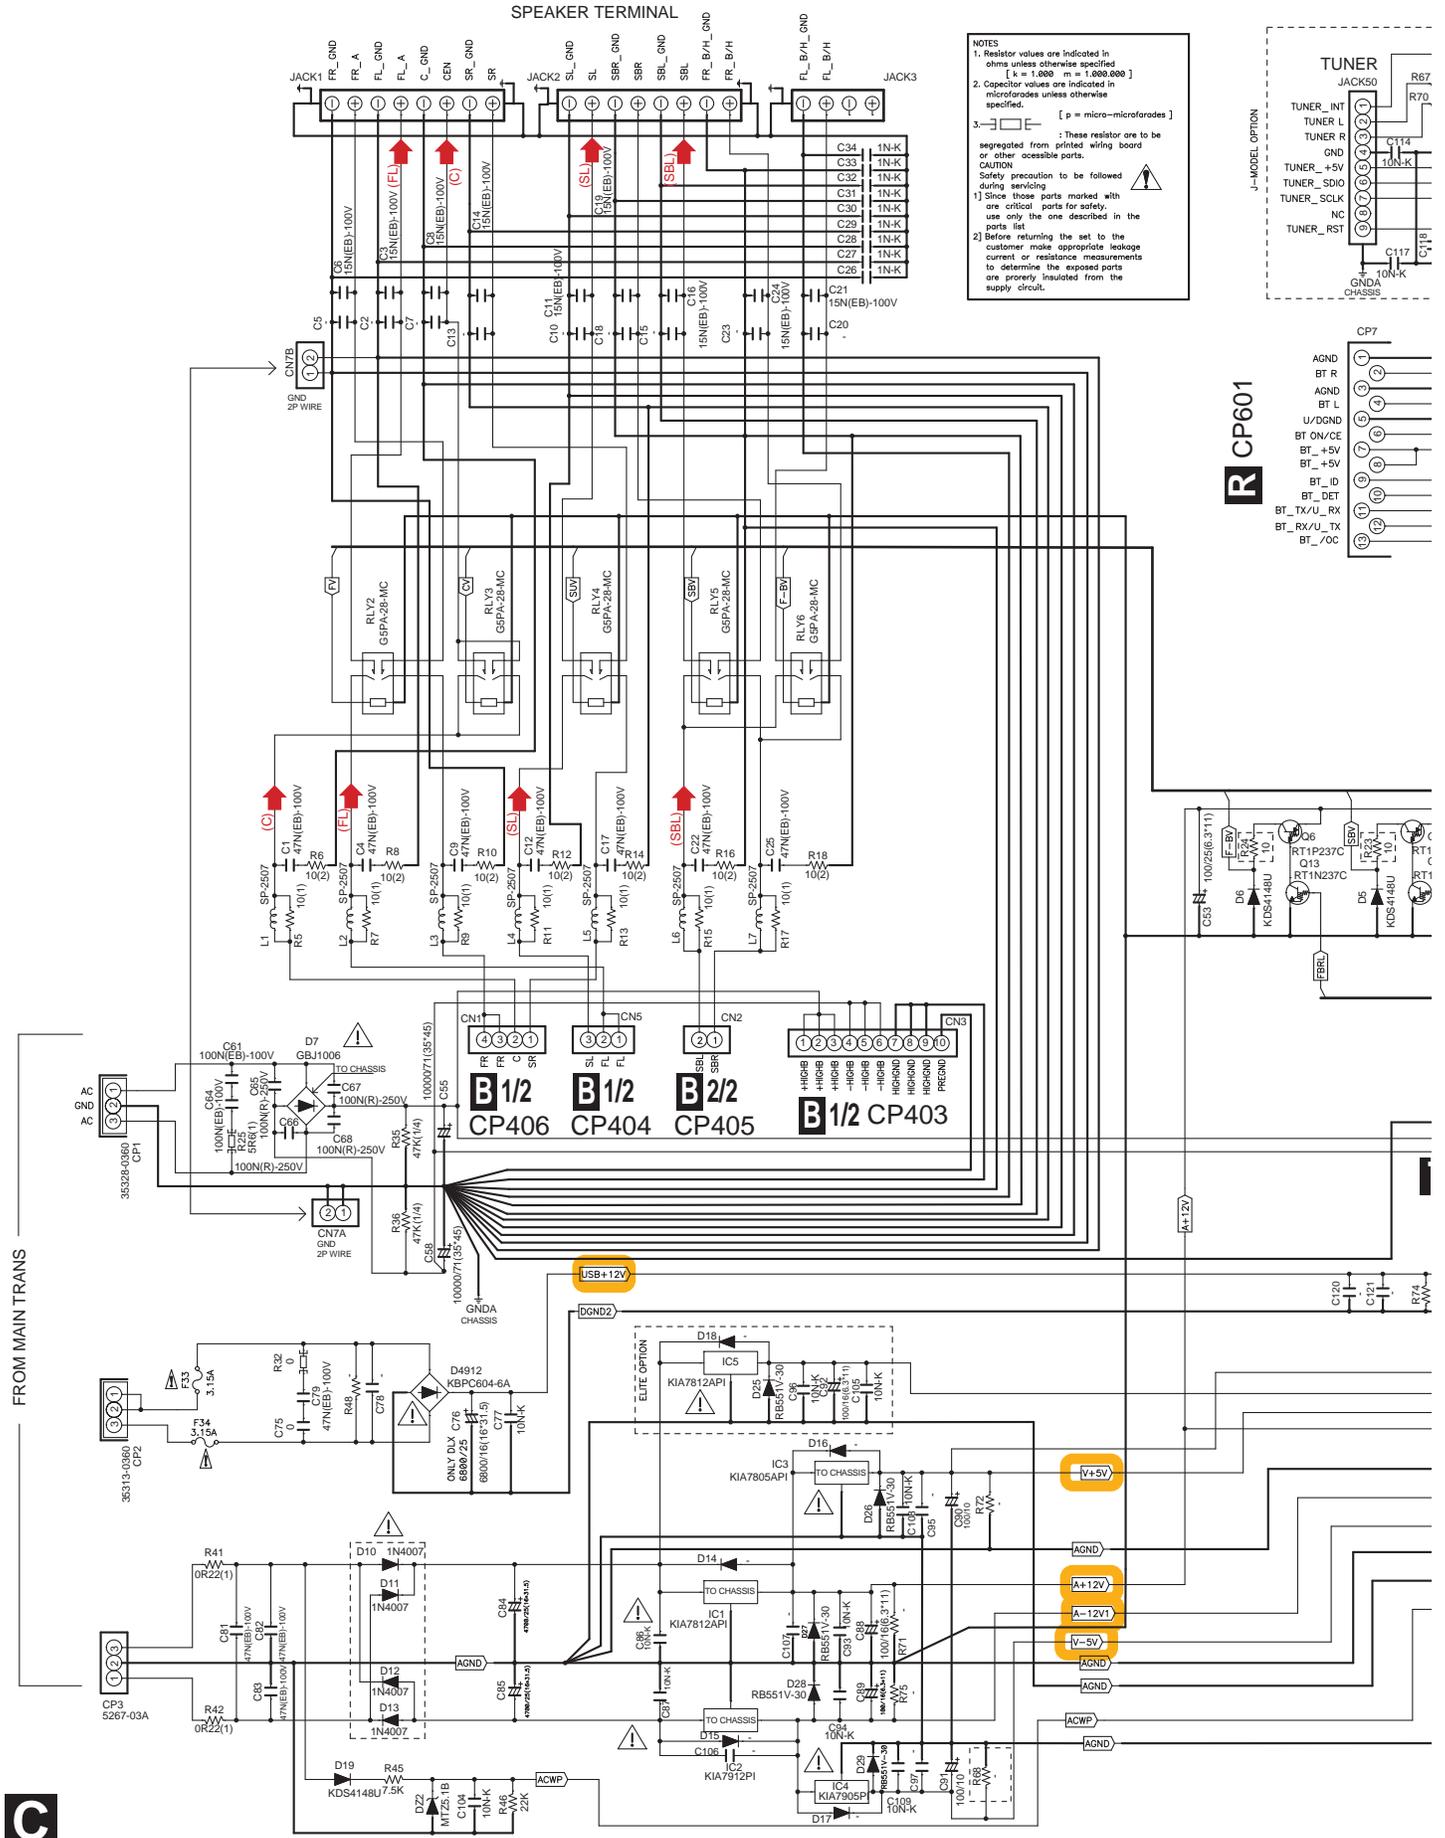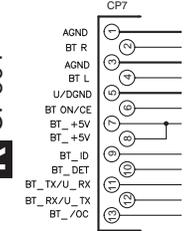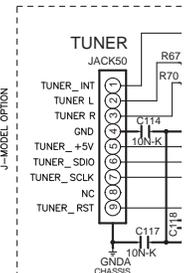


FROM MAIN TRANS

1

2

3

4

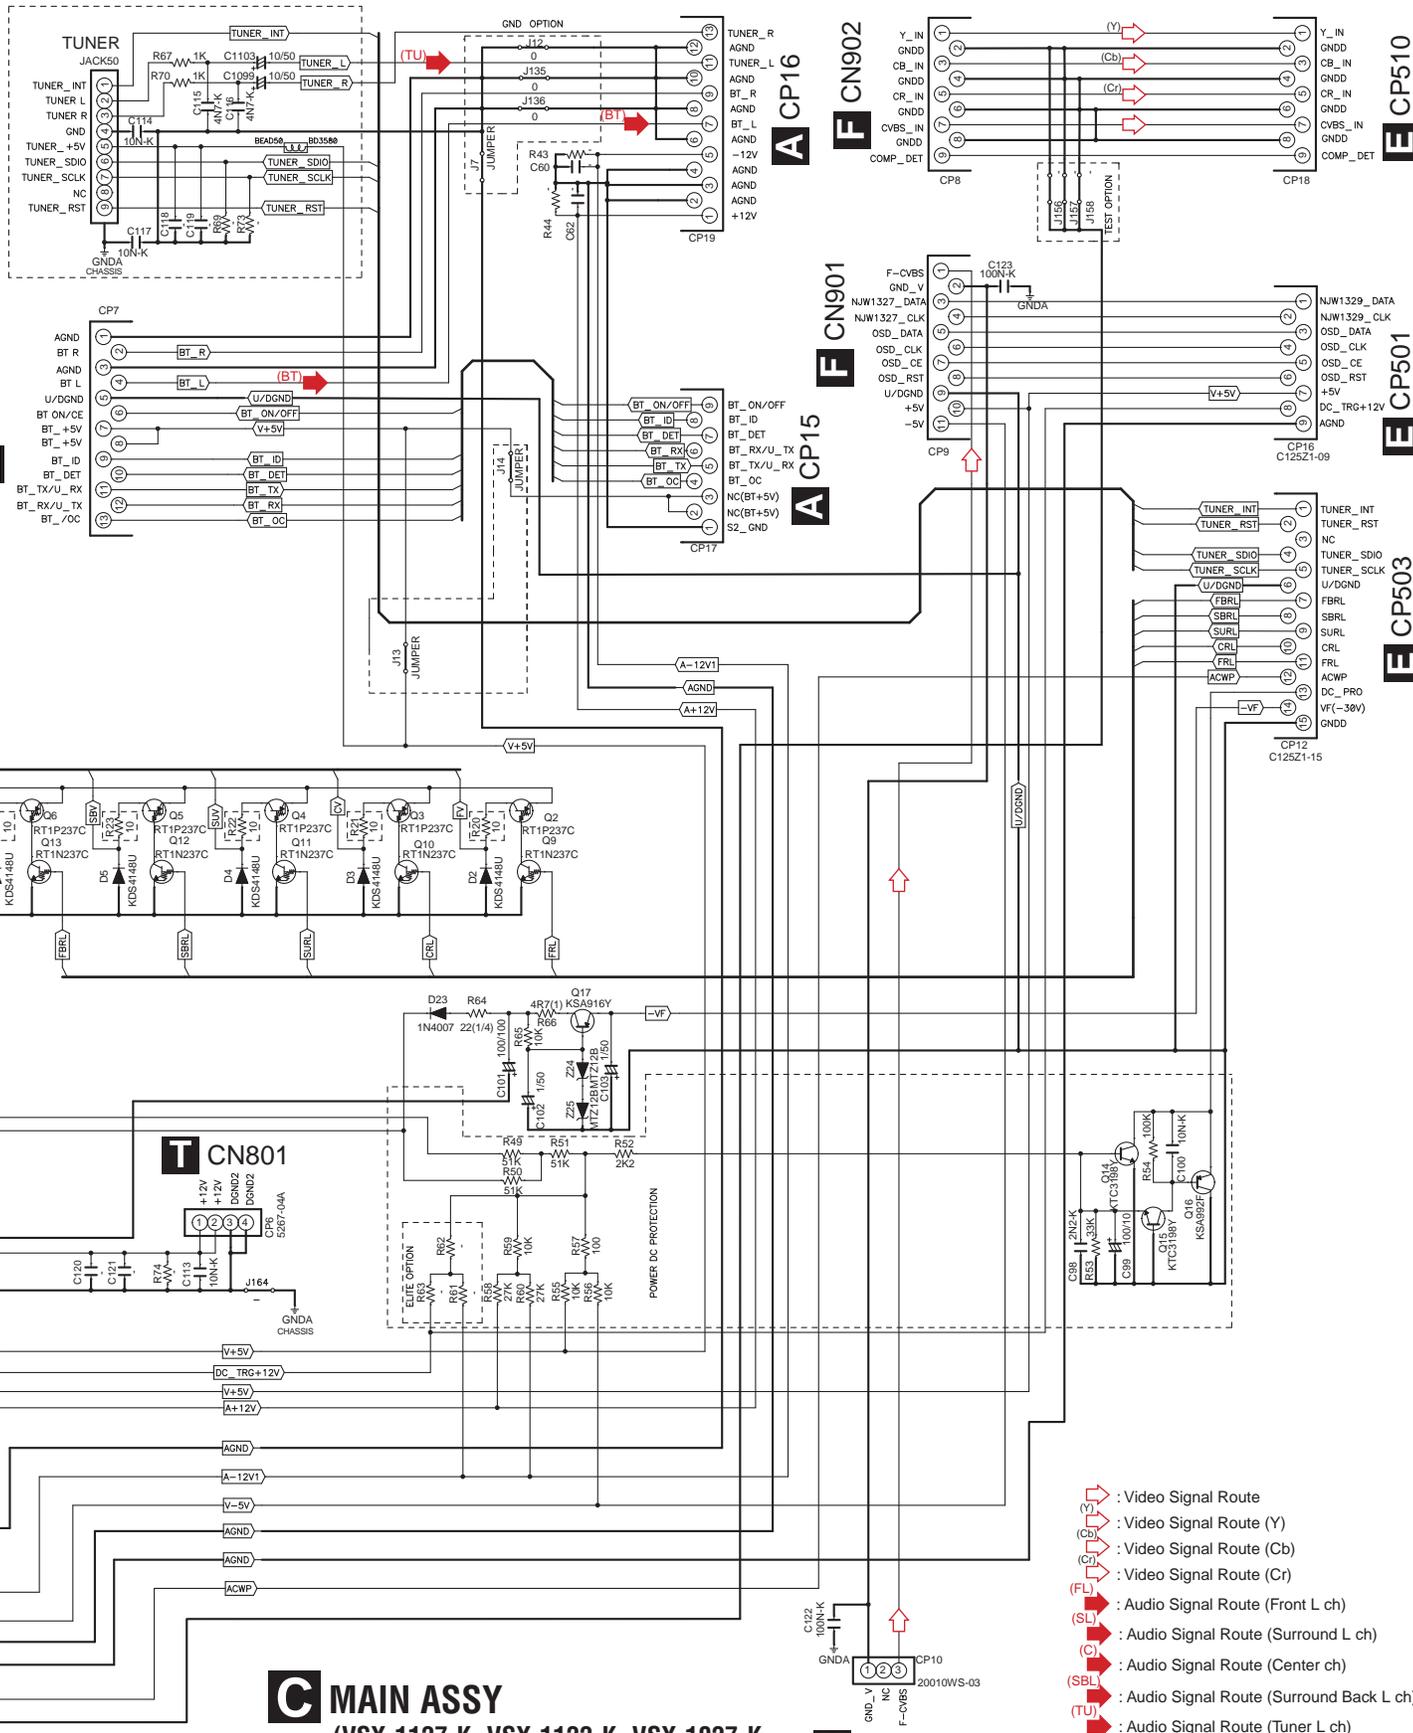

C MAIN ASSY
 (VSX-1127-K, VSX-1122-K, VSX-1027-K
 : 7028071711010-IL)
 (VSX-60: 7028071711040-IL)

K CN3652

VSX-1127-K

E CP510

E CP501

E CP503



C CP12

D CP10

E CP10

F CP10

C

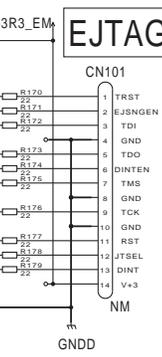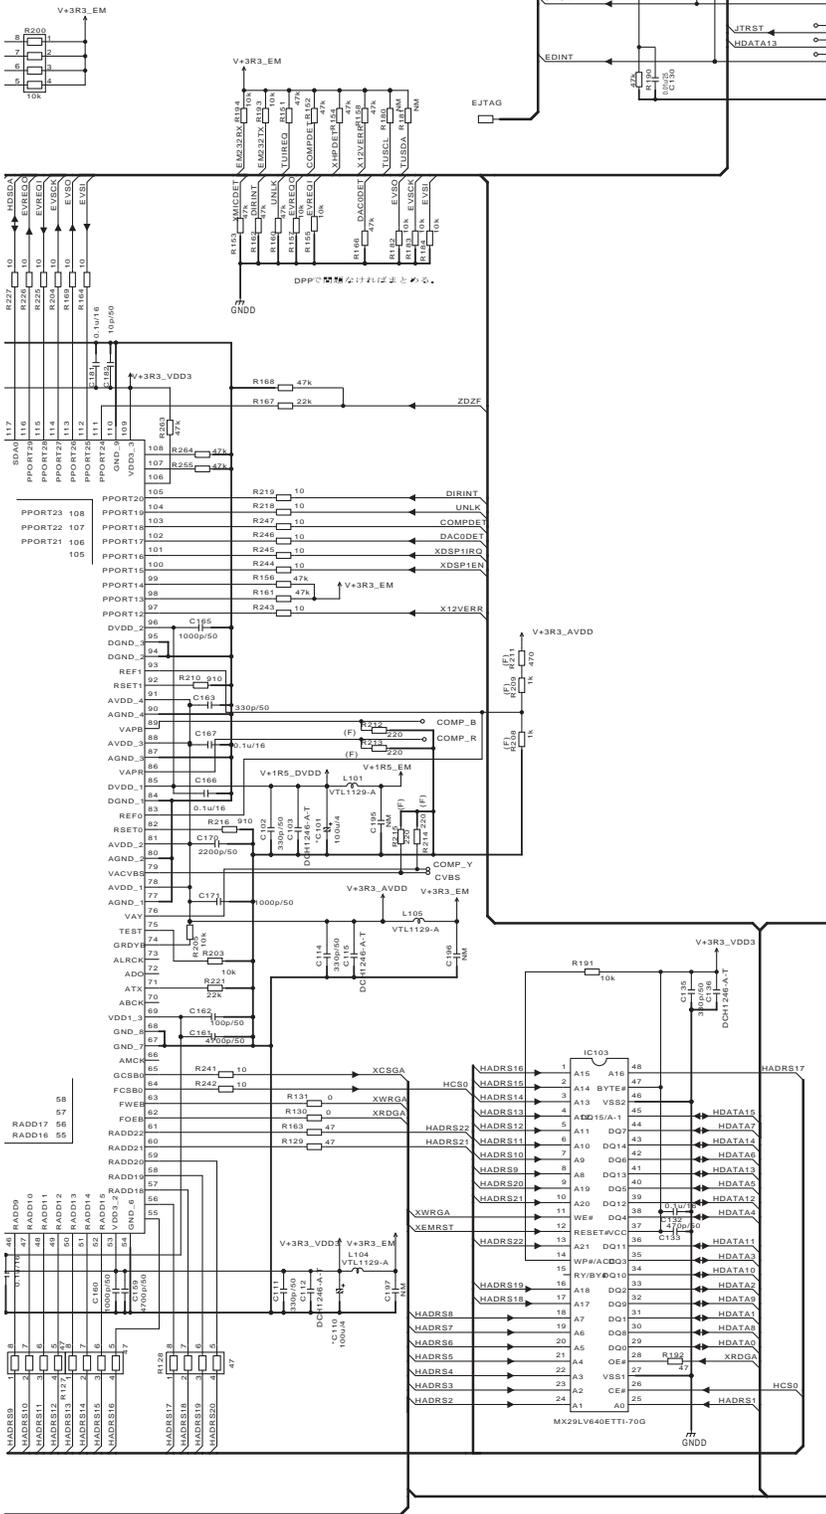

D/1/10 D-MAIN ASSY
 (VSX-1127-K: 7028071752020-IL)
 (VSX-1122-K: 7028071752040-IL)
 (VSX-60: 7028071752040-IL)
 (VSX-1027-K: 7028071752070-IL)

AWX1200: FY13 AVR SEL-LOW
 AWX9957: VSX-1127/CU,VSX-1122/SY/,DL
 AWX1223: VSX-1027/CU,VSX-922/SY/,F/,DL/,PW/,A,VSA-922/J
 AWX1228: VSX-1122/CU,VSX-60/U

AWX1200	AWX9957	AWX1223	AWX1228
C101	1000/4	ACR7352-1	ACR7352-1
C102	1000/4	ACR7352-1	ACR7352-1
C103	1000/4	ACR7352-1	ACR7352-1
C104	1000/4	ACR7352-1	ACR7352-1
C105	1000/50	1000p/50	1000p/50
C106	1000/50	1000p/50	1000p/50
C107	1000/4	ACR7352-1	ACR7352-1
C108	1000p/50	1000p/50	1000p/50
C109	1000/50	1000p/50	1000p/50
C110	1000/4	ACR7352-1	ACR7352-1
C111	1000/4	ACR7352-1	ACR7352-1
C112	1000/4	ACR7352-1	ACR7352-1
C113	1000/50	1000p/50	1000p/50
C114	1000/50	1000p/50	1000p/50
C115	1000/50	1000p/50	1000p/50
C116	1000/4	ACR7352-1	ACR7352-1
C117	1000/50	1000p/50	1000p/50
C118	1000/50	1000p/50	1000p/50
C119	1000/50	1000p/50	1000p/50
C120	0.01u/25	0.01u/25	0.01u/16
C121	0.01u/25	4700p/50	4700p/50
C122	470p/50	1000p/50	1000p/50
C123	0.1u/16	0.047u/16	0.047u/16
C124	0.01u/25	0.01u/25	0.01u/16
C125	1000/50	1000p/50	1000p/50
C126	1000/50	1000p/50	1000p/50
C127	0.1u/16	0.01u/25	0.01u/25
C128	470p/50	1000p/50	1000p/50
C129	470p/50	1000p/50	1000p/50
C130	1000/50	1000p/50	1000p/50
C131	1000/50	1000p/50	1000p/50
C132	1000/50	1000p/50	1000p/50
C133	1000/50	1000p/50	1000p/50
C134	1000/50	1000p/50	1000p/50
C135	1000/50	1000p/50	1000p/50
C136	1000/50	1000p/50	1000p/50
C137	1000/50	1000p/50	1000p/50
C138	1000/50	1000p/50	1000p/50
C139	1000/50	1000p/50	1000p/50
C140	1000/50	1000p/50	1000p/50
C141	1000/50	1000p/50	1000p/50
C142	1000/50	1000p/50	1000p/50
C143	1000/50	1000p/50	1000p/50
C144	1000/50	1000p/50	1000p/50
C145	1000/50	1000p/50	1000p/50
C146	1000/50	1000p/50	1000p/50
C147	1000/50	1000p/50	1000p/50
C148	1000/50	1000p/50	1000p/50
C149	1000/50	1000p/50	1000p/50
C150	1000/50	1000p/50	1000p/50
C151	1000/50	1000p/50	1000p/50
C152	1000/50	1000p/50	1000p/50
C153	1000/50	1000p/50	1000p/50
C154	1000/50	1000p/50	1000p/50
C155	1000/50	1000p/50	1000p/50
C156	1000/50	1000p/50	1000p/50
C157	1000/50	1000p/50	1000p/50
C158	1000/50	1000p/50	1000p/50
C159	1000/50	1000p/50	1000p/50
C160	1000/50	1000p/50	1000p/50
C161	1000/50	1000p/50	1000p/50
C162	1000/50	1000p/50	1000p/50
C163	1000/50	1000p/50	1000p/50
C164	1000/50	1000p/50	1000p/50
C165	1000/50	1000p/50	1000p/50
C166	1000/50	1000p/50	1000p/50
C167	1000/50	1000p/50	1000p/50
C168	1000/50	1000p/50	1000p/50
C169	1000/50	1000p/50	1000p/50
C170	1000/50	1000p/50	1000p/50
C171	1000/50	1000p/50	1000p/50
C172	1000/50	1000p/50	1000p/50
C173	1000/50	1000p/50	1000p/50
C174	1000/50	1000p/50	1000p/50
C175	1000/50	1000p/50	1000p/50
C176	1000/50	1000p/50	1000p/50
C177	1000/50	1000p/50	1000p/50
C178	1000/50	1000p/50	1000p/50
C179	1000/50	1000p/50	1000p/50
C180	1000/50	1000p/50	1000p/50
C181	1000/50	1000p/50	1000p/50
C182	1000/50	1000p/50	1000p/50
C183	1000/50	1000p/50	1000p/50
C184	1000/50	1000p/50	1000p/50
C185	1000/50	1000p/50	1000p/50
C186	1000/50	1000p/50	1000p/50
C187	1000/50	1000p/50	1000p/50
C188	1000/50	1000p/50	1000p/50
C189	1000/50	1000p/50	1000p/50
C190	1000/50	1000p/50	1000p/50
C191	1000/50	1000p/50	1000p/50
C192	1000/50	1000p/50	1000p/50
C193	1000/50	1000p/50	1000p/50
C194	1000/50	1000p/50	1000p/50
C195	1000/50	1000p/50	1000p/50
C196	1000/50	1000p/50	1000p/50
C197	1000/50	1000p/50	1000p/50
C198	1000/50	1000p/50	1000p/50
C199	1000/50	1000p/50	1000p/50
C200	1000/50	1000p/50	1000p/50
C201	1000/50	1000p/50	1000p/50
C202	1000/50	1000p/50	1000p/50
C203	1000/50	1000p/50	1000p/50
C204	1000/50	1000p/50	1000p/50
C205	1000/50	1000p/50	1000p/50
C206	1000/50	1000p/50	1000p/50
C207	1000/50	1000p/50	1000p/50
C208	1000/50	1000p/50	1000p/50
C209	1000/50	1000p/50	1000p/50
C210	1000/50	1000p/50	1000p/50
C211	1000/50	1000p/50	1000p/50
C212	1000/50	1000p/50	1000p/50
C213	1000/50	1000p/50	1000p/50
C214	1000/50	1000p/50	1000p/50
C215	1000/50	1000p/50	1000p/50
C216	1000/50	1000p/50	1000p/50
C217	1000/50	1000p/50	1000p/50
C218	1000/50	1000p/50	1000p/50
C219	1000/50	1000p/50	1000p/50
C220	1000/50	1000p/50	1000p/50
C221	1000/50	1000p/50	1000p/50
C222	1000/50	1000p/50	1000p/50
C223	1000/50	1000p/50	1000p/50
C224	1000/50	1000p/50	1000p/50
C225	1000/50	1000p/50	1000p/50
C226	1000/50	1000p/50	1000p/50
C227	1000/50	1000p/50	1000p/50
C228	1000/50	1000p/50	1000p/50
C229	1000/50	1000p/50	1000p/50
C230	1000/50	1000p/50	1000p/50
C231	1000/50	1000p/50	1000p/50
C232	1000/50	1000p/50	1000p/50
C233	1000/50	1000p/50	1000p/50
C234	1000/50	1000p/50	1000p/50
C235	1000/50	1000p/50	1000p/50
C236	1000/50	1000p/50	1000p/50
C237	1000/50	1000p/50	1000p/50
C238	1000/50	1000p/50	1000p/50
C239	1000/50	1000p/50	1000p/50
C240	1000/50	1000p/50	1000p/50
C241	1000/50	1000p/50	1000p/50
C242	1000/50	1000p/50	1000p/50
C243	1000/50	1000p/50	1000p/50
C244	1000/50	1000p/50	1000p/50
C245	1000/50	1000p/50	1000p/50
C246	1000/50	1000p/50	1000p/50
C247	1000/50	1000p/50	1000p/50
C248	1000/50	1000p/50	1000p/50
C249	1000/50	1000p/50	1000p/50
C250	1000/50	1000p/50	1000p/50



VSX-1127-K




10.6 D-MAIN ASSY (2/10)

D 2/10 D-MAIN ASSY

- (VSX-1127-K: 7028071752020-IL)
- (VSX-1122-K: 7028071752040-IL)
- (VSX-60: 7028071752040-IL)
- (VSX-1027-K: 7028071752070-IL)

D 1/10,7/10,8/10



D 3/10-10/10

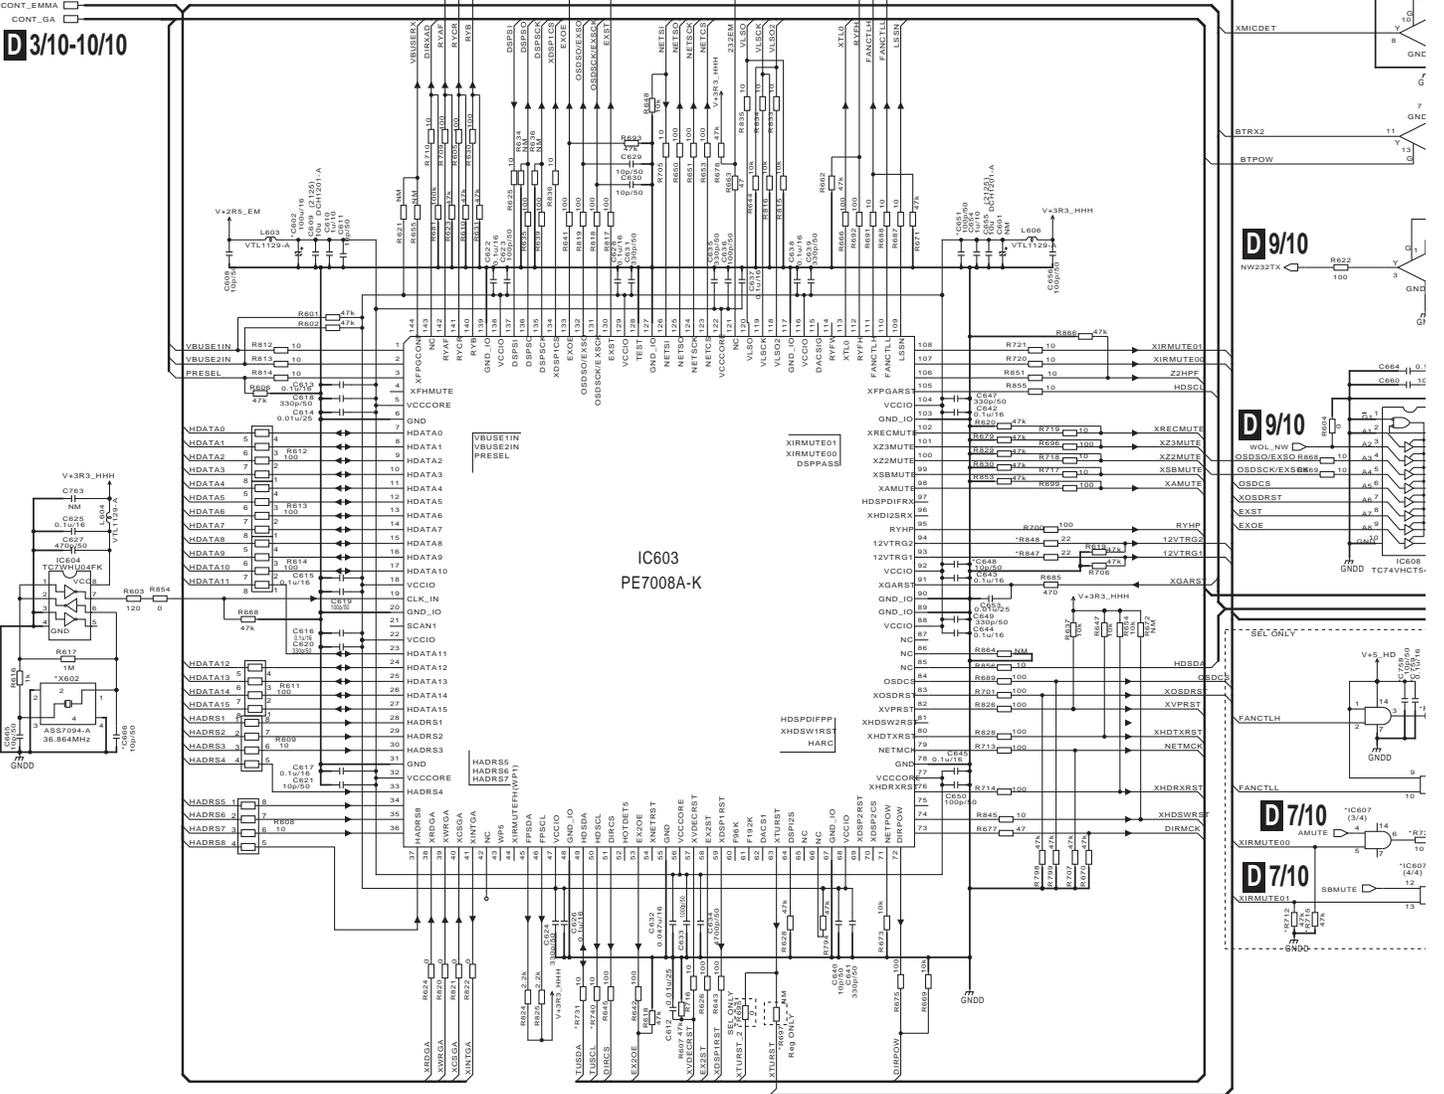



The \triangle mark found on some component parts should be replaced with same parts (safety regulation authorized) of identical designation.
 \triangle 印の部品は、指定部品（安全規格適合部品）を必ず使用すること。

AKW1200	AKW9057	AKW1223
IC602	1000u/16	ACOP737-1
IC604	1000u/50	1000u/50
IC605	1000u/50	1000u/50
IC606	1000u/50	1000u/50
IC607	1000u/50	1000u/50
IC608	1000u/50	1000u/50
IC609	1000u/50	1000u/50
IC610	1000u/50	1000u/50
IC611	1000u/50	1000u/50
IC612	1000u/50	1000u/50
IC613	1000u/50	1000u/50
IC614	1000u/50	1000u/50
IC615	1000u/50	1000u/50
IC616	1000u/50	1000u/50
IC617	1000u/50	1000u/50
IC618	1000u/50	1000u/50
IC619	1000u/50	1000u/50
IC620	1000u/50	1000u/50
IC621	1000u/50	1000u/50
IC622	1000u/50	1000u/50
IC623	1000u/50	1000u/50
IC624	1000u/50	1000u/50
IC625	1000u/50	1000u/50
IC626	1000u/50	1000u/50
IC627	1000u/50	1000u/50
IC628	1000u/50	1000u/50
IC629	1000u/50	1000u/50
IC630	1000u/50	1000u/50
IC631	1000u/50	1000u/50
IC632	1000u/50	1000u/50
IC633	1000u/50	1000u/50
IC634	1000u/50	1000u/50
IC635	1000u/50	1000u/50
IC636	1000u/50	1000u/50
IC637	1000u/50	1000u/50
IC638	1000u/50	1000u/50
IC639	1000u/50	1000u/50
IC640	1000u/50	1000u/50
IC641	1000u/50	1000u/50
IC642	1000u/50	1000u/50
IC643	1000u/50	1000u/50
IC644	1000u/50	1000u/50
IC645	1000u/50	1000u/50
IC646	1000u/50	1000u/50
IC647	1000u/50	1000u/50
IC648	1000u/50	1000u/50
IC649	1000u/50	1000u/50
IC650	1000u/50	1000u/50
IC651	1000u/50	1000u/50
IC652	1000u/50	1000u/50
IC653	1000u/50	1000u/50
IC654	1000u/50	1000u/50
IC655	1000u/50	1000u/50
IC656	1000u/50	1000u/50
IC657	1000u/50	1000u/50
IC658	1000u/50	1000u/50
IC659	1000u/50	1000u/50
IC660	1000u/50	1000u/50
IC661	1000u/50	1000u/50
IC662	1000u/50	1000u/50
IC663	1000u/50	1000u/50
IC664	1000u/50	1000u/50
IC665	1000u/50	1000u/50
IC666	1000u/50	1000u/50
IC667	1000u/50	1000u/50
IC668	1000u/50	1000u/50
IC669	1000u/50	1000u/50
IC670	1000u/50	1000u/50
IC671	1000u/50	1000u/50
IC672	1000u/50	1000u/50
IC673	1000u/50	1000u/50
IC674	1000u/50	1000u/50
IC675	1000u/50	1000u/50
IC676	1000u/50	1000u/50
IC677	1000u/50	1000u/50
IC678	1000u/50	1000u/50
IC679	1000u/50	1000u/50
IC680	1000u/50	1000u/50
IC681	1000u/50	1000u/50
IC682	1000u/50	1000u/50
IC683	1000u/50	1000u/50
IC684	1000u/50	1000u/50
IC685	1000u/50	1000u/50
IC686	1000u/50	1000u/50
IC687	1000u/50	1000u/50
IC688	1000u/50	1000u/50
IC689	1000u/50	1000u/50
IC690	1000u/50	1000u/50
IC691	1000u/50	1000u/50
IC692	1000u/50	1000u/50
IC693	1000u/50	1000u/50
IC694	1000u/50	1000u/50
IC695	1000u/50	1000u/50
IC696	1000u/50	1000u/50
IC697	1000u/50	1000u/50
IC698	1000u/50	1000u/50
IC699	1000u/50	1000u/50
IC700	1000u/50	1000u/50

D 2/10

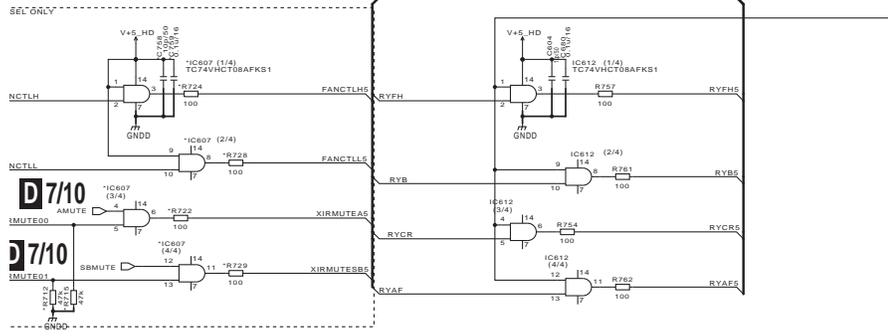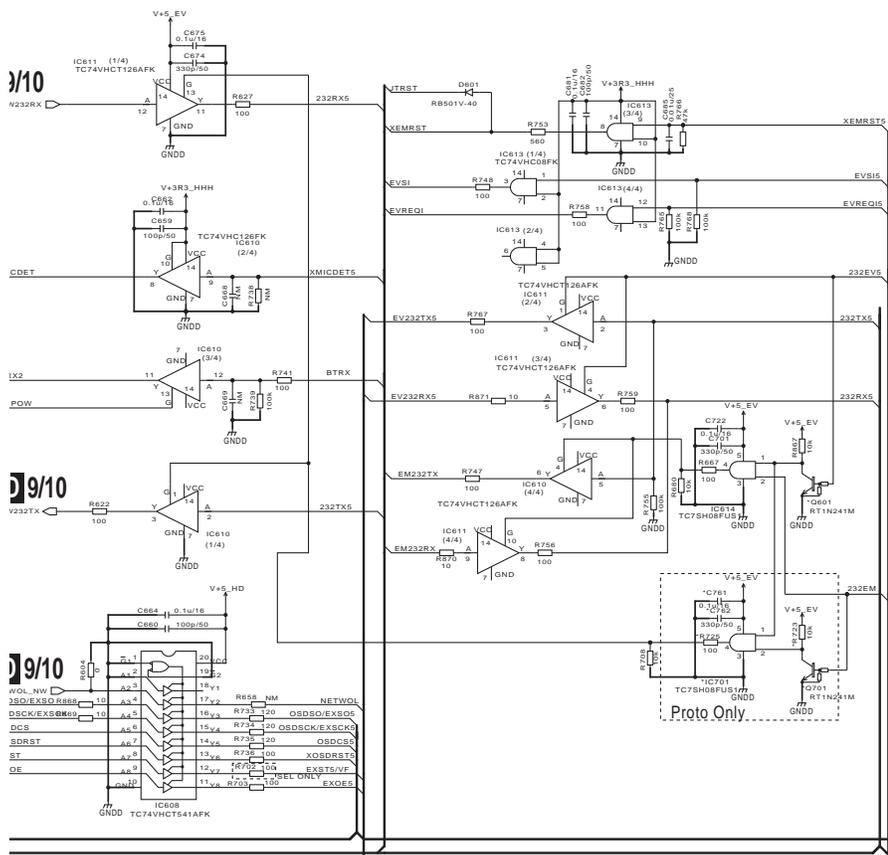


AWX1200	AWX9957	AWX1223	AWX1228
0605	0605	0605	0605
0606	0606	0606	0606
0607	0607	0607	0607
0608	0608	0608	0608
0609	0609	0609	0609
0610	0610	0610	0610
0611	0611	0611	0611
0612	0612	0612	0612
0613	0613	0613	0613
0614	0614	0614	0614
0615	0615	0615	0615
0616	0616	0616	0616
0617	0617	0617	0617
0618	0618	0618	0618
0619	0619	0619	0619
0620	0620	0620	0620
0621	0621	0621	0621
0622	0622	0622	0622
0623	0623	0623	0623
0624	0624	0624	0624
0625	0625	0625	0625
0626	0626	0626	0626
0627	0627	0627	0627
0628	0628	0628	0628
0629	0629	0629	0629
0630	0630	0630	0630
0631	0631	0631	0631
0632	0632	0632	0632
0633	0633	0633	0633
0634	0634	0634	0634
0635	0635	0635	0635
0636	0636	0636	0636
0637	0637	0637	0637
0638	0638	0638	0638
0639	0639	0639	0639
0640	0640	0640	0640
0641	0641	0641	0641
0642	0642	0642	0642
0643	0643	0643	0643
0644	0644	0644	0644
0645	0645	0645	0645
0646	0646	0646	0646
0647	0647	0647	0647
0648	0648	0648	0648
0649	0649	0649	0649
0650	0650	0650	0650
0651	0651	0651	0651
0652	0652	0652	0652
0653	0653	0653	0653
0654	0654	0654	0654
0655	0655	0655	0655
0656	0656	0656	0656
0657	0657	0657	0657
0658	0658	0658	0658
0659	0659	0659	0659
0660	0660	0660	0660
0661	0661	0661	0661
0662	0662	0662	0662
0663	0663	0663	0663
0664	0664	0664	0664
0665	0665	0665	0665
0666	0666	0666	0666
0667	0667	0667	0667
0668	0668	0668	0668
0669	0669	0669	0669
0670	0670	0670	0670
0671	0671	0671	0671
0672	0672	0672	0672
0673	0673	0673	0673
0674	0674	0674	0674
0675	0675	0675	0675
0676	0676	0676	0676
0677	0677	0677	0677
0678	0678	0678	0678
0679	0679	0679	0679
0680	0680	0680	0680
0681	0681	0681	0681
0682	0682	0682	0682
0683	0683	0683	0683
0684	0684	0684	0684
0685	0685	0685	0685
0686	0686	0686	0686
0687	0687	0687	0687
0688	0688	0688	0688
0689	0689	0689	0689
0690	0690	0690	0690
0691	0691	0691	0691
0692	0692	0692	0692
0693	0693	0693	0693
0694	0694	0694	0694
0695	0695	0695	0695
0696	0696	0696	0696
0697	0697	0697	0697
0698	0698	0698	0698
0699	0699	0699	0699
0700	0700	0700	0700

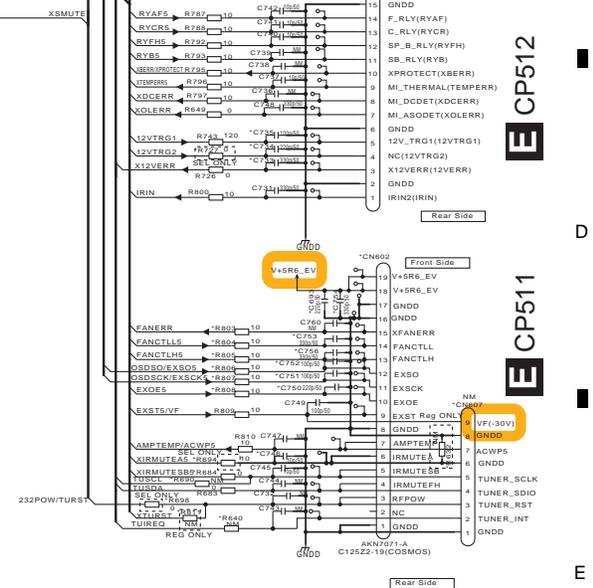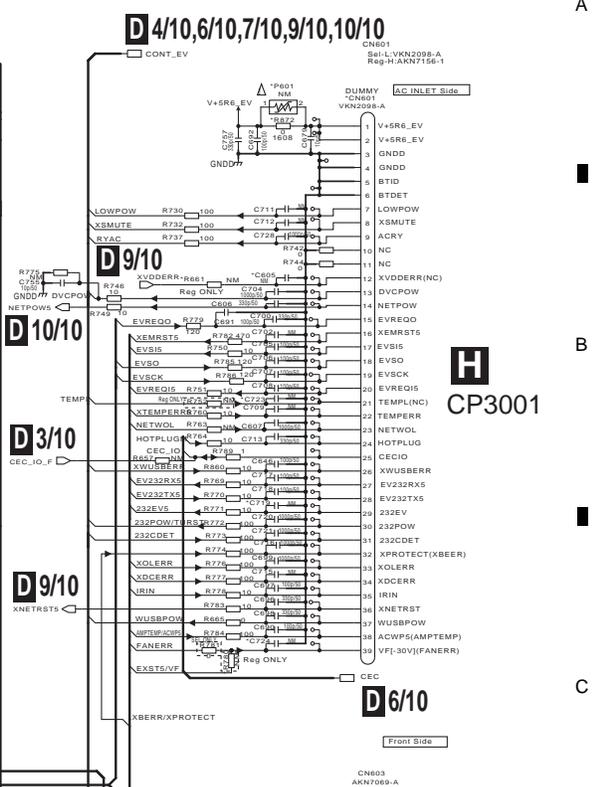


AWX1200: FY13 AVR SEL-LOW
 AWX9957: VSX-1127/CU,VSX-1122/SY,DL
 AWX1223: VSX-1027/CU,VSX-922/SY,F,DL,PW/A,VSA-922/J
 AWX1228: VSX-1122/CU,VSX-60/U

10.7 D-MAIN ASSY (3/10)

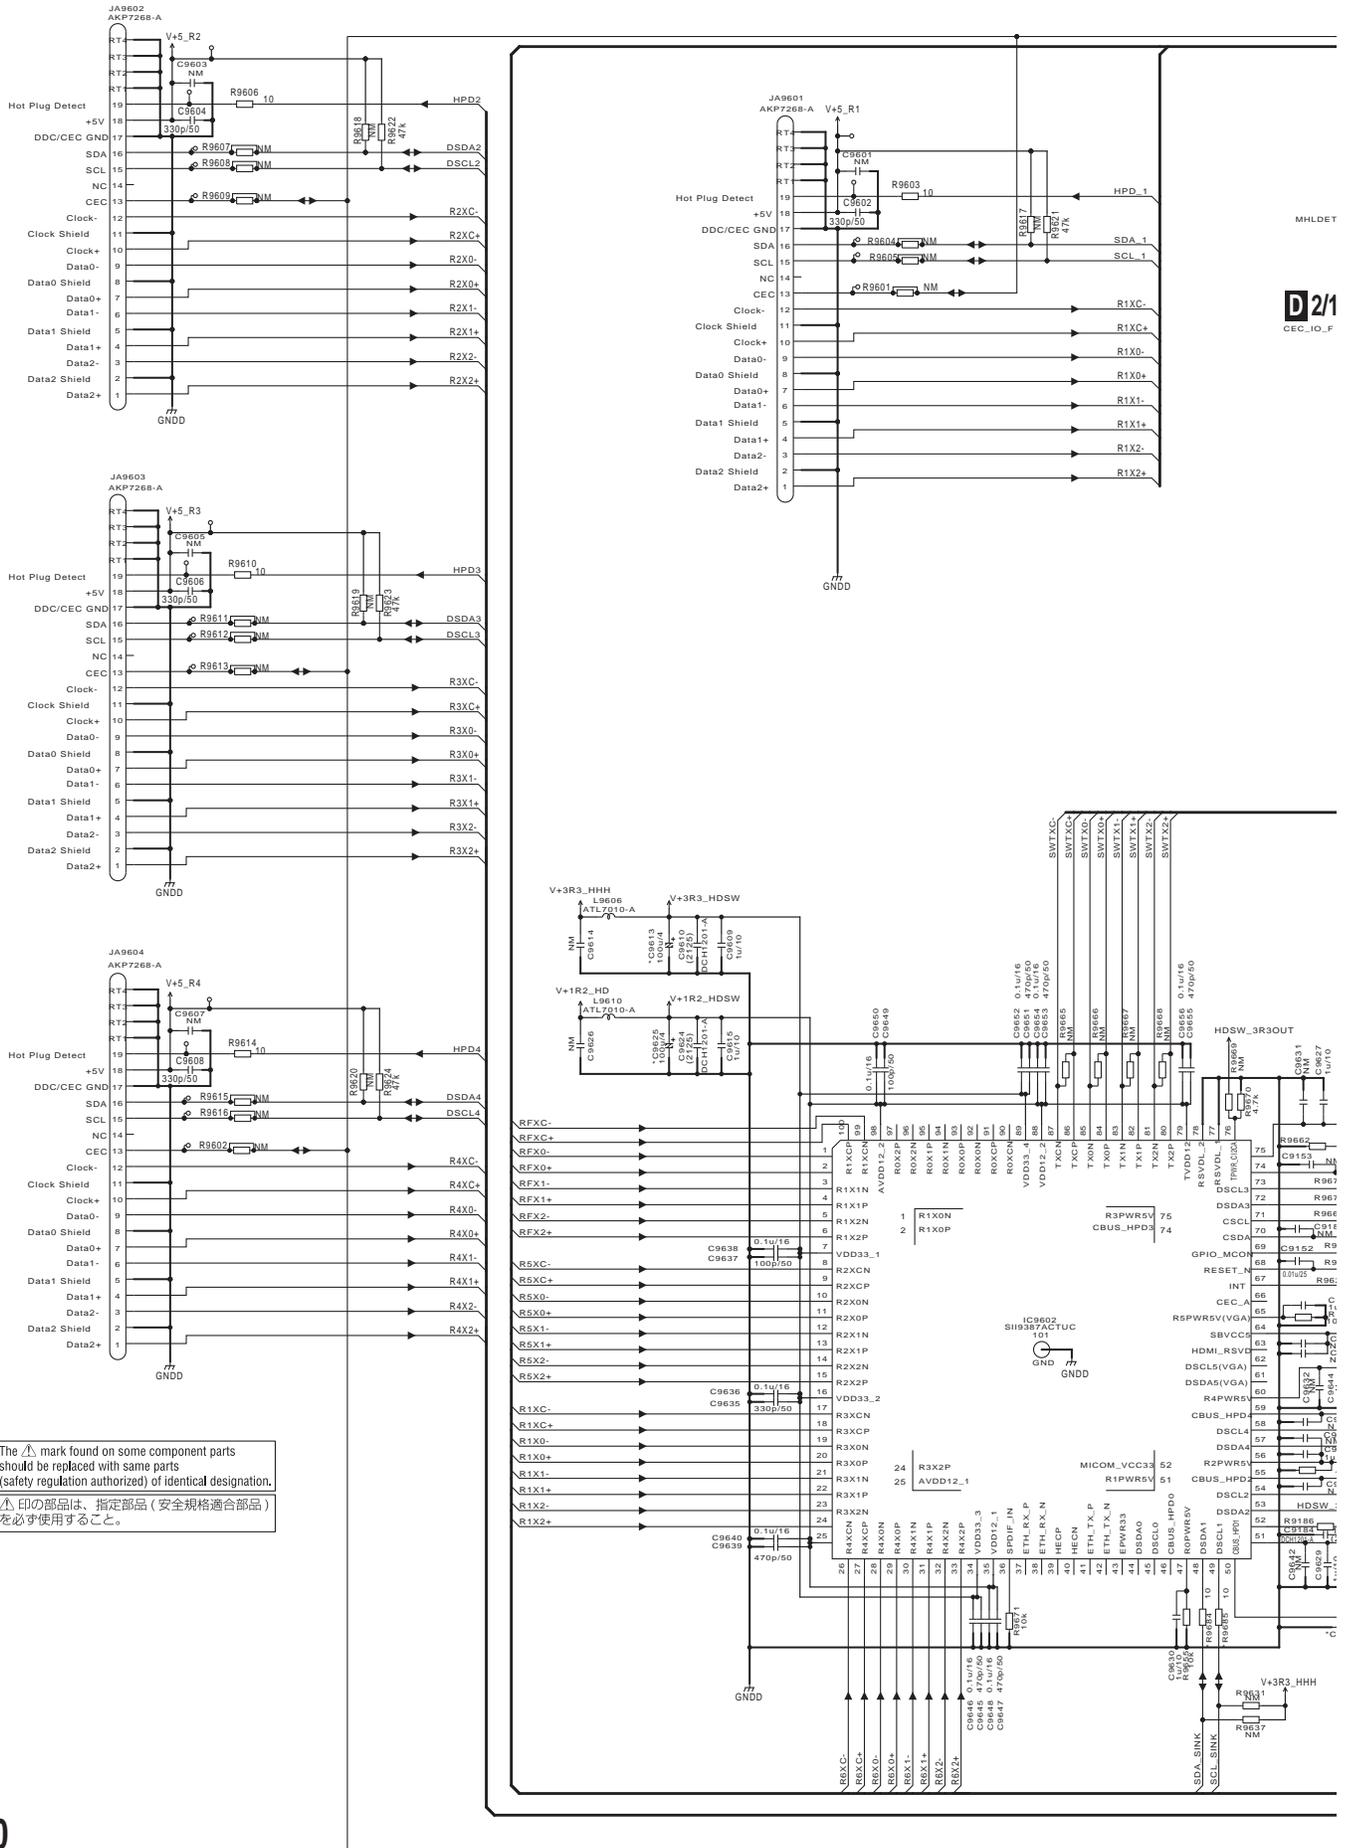

The Δ mark found on some component parts should be replaced with same parts (safety regulation authorized) of identical designation.
 Δ 印の部品は、指定部品（安全規格適合部品）を必ず使用すること。



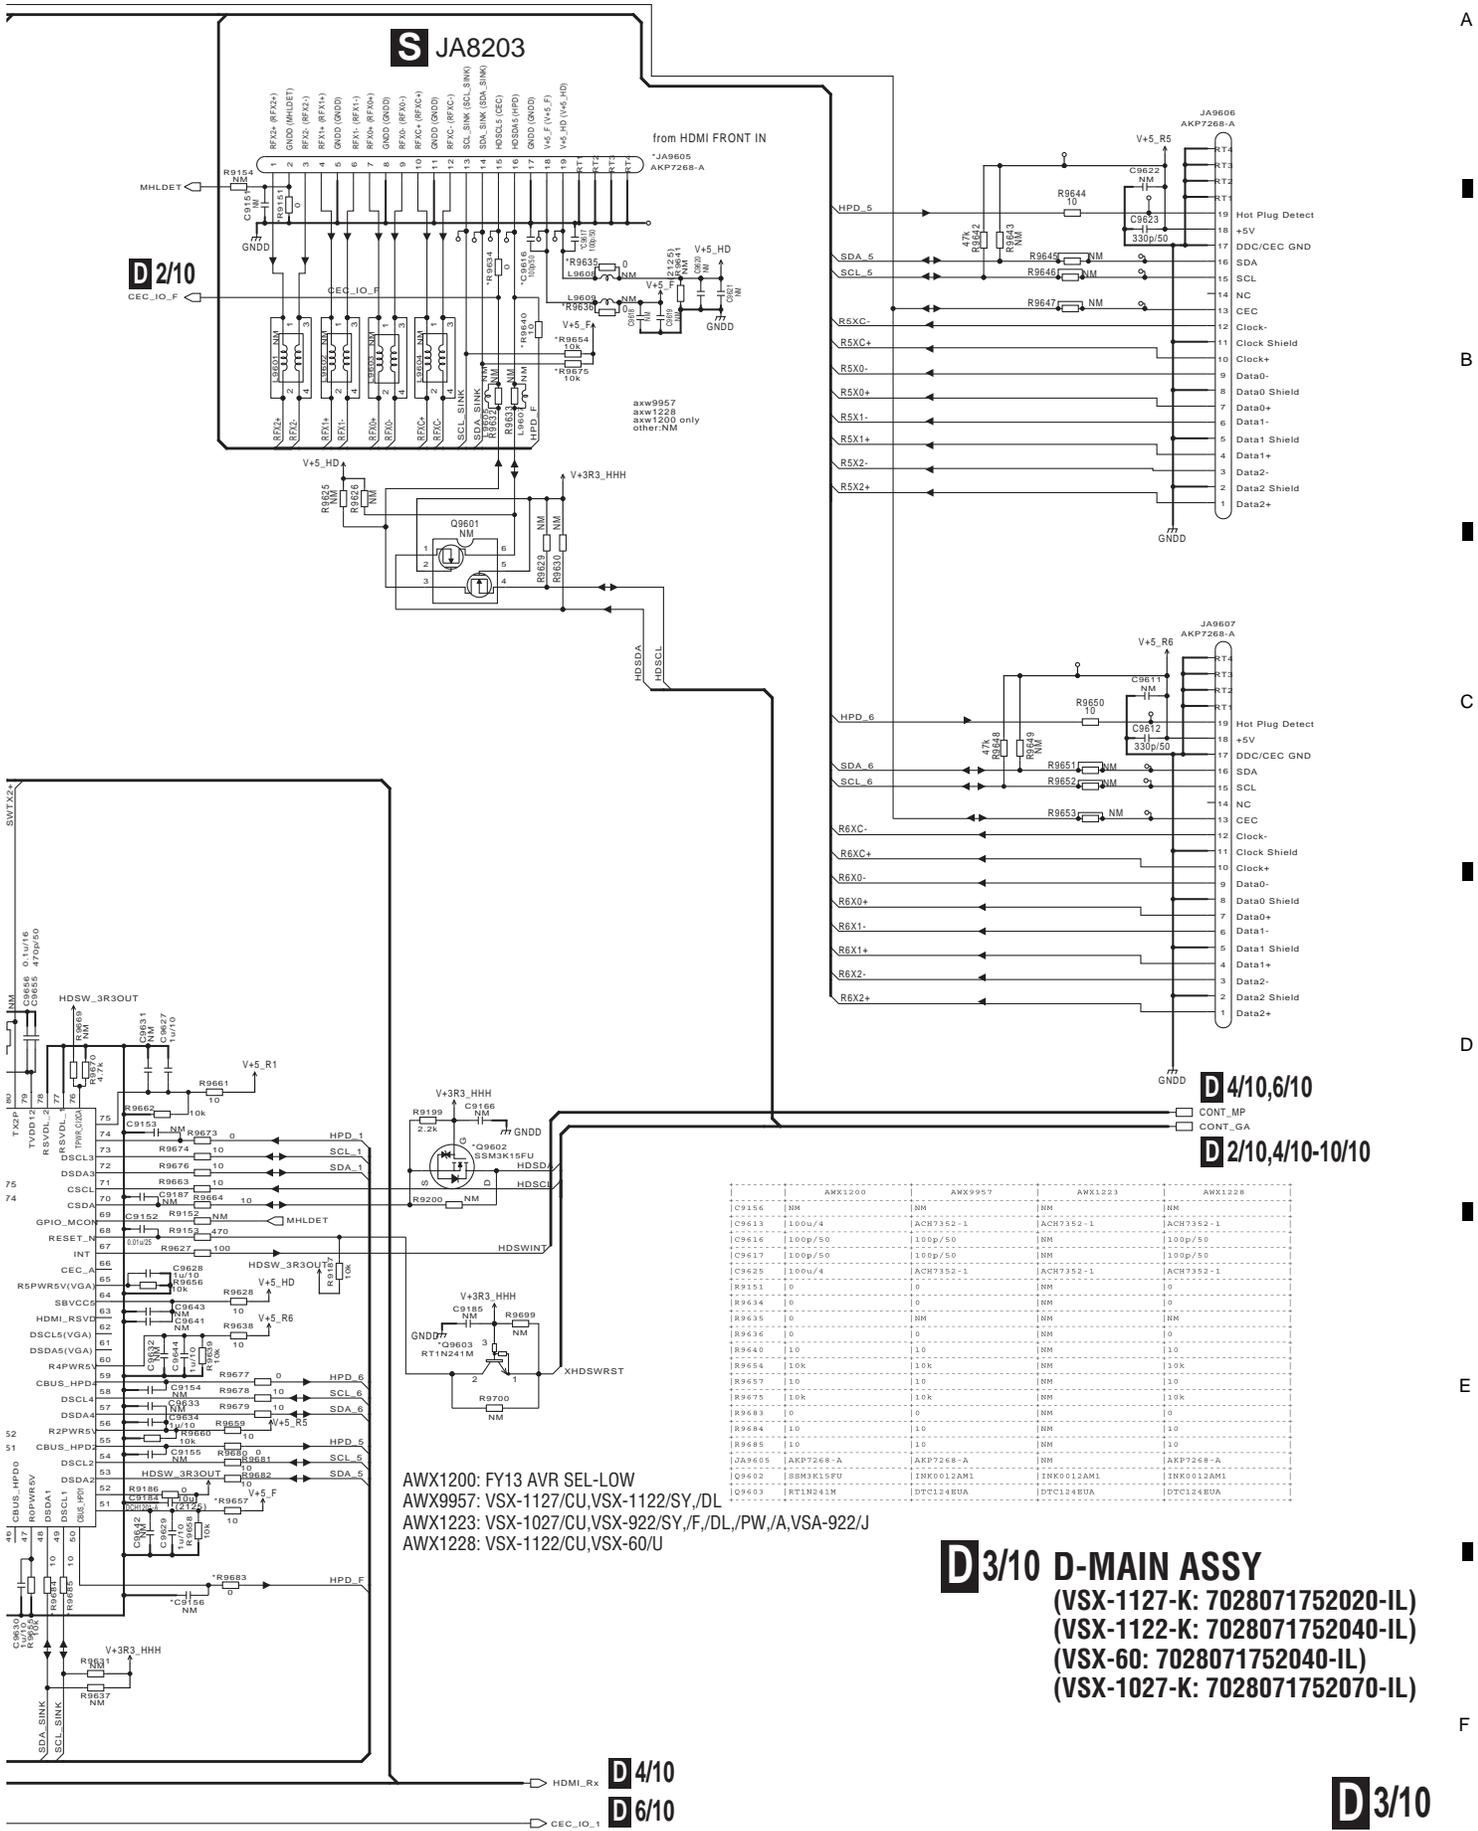

AWX1200: FY13 AVR SEL-LOW
 AWX9957: VSX-1127/CU,VSX-1122/SY/DL
 AWX1223: VSX-1027/CU,VSX-922/SY,F/DL,PW/A,VSA-922/J
 AWX1228: VSX-1122/CU,VSX-60/U

	AWX1200	AWX9957	AWX1223	AWX1228
C9156	NM	NM	NM	NM
C9613	1000u/4	ACR7352-1	ACR7352-1	ACR7352-1
C9616	100pf/50	100pf/50	NM	100pf/50
C9617	100pf/50	100pf/50	NM	100pf/50
C9625	1000u/4	ACR7352-1	ACR7352-1	ACR7352-1
R9151	0	0	0	0
R9634	0	0	0	0
R9635	0	0	0	0
R9636	0	0	0	0
R9640	10	10	10	10
R9654	10k	10k	10k	10k
R9657	10	10	10	10
R9675	10k	10k	10k	10k
R9683	0	0	0	0
R9684	10	10	10	10
R9685	10	10	10	10
J7A9605	AKP2268-A	AKP2268-A	NM	AKP2268-A
Q9602	S8M3K1S9U	INR6012AM1	INR6012AM1	INR6012AM1
Q9603	RT1N241M	DTCL1248UA	DTCL1248UA	DTCL1248UA

D3/10 D-MAIN ASSY
 (VSX-1127-K: 7028071752020-IL)
 (VSX-1122-K: 7028071752040-IL)
 (VSX-60: 7028071752040-IL)
 (VSX-1027-K: 7028071752070-IL)

D4/10
 D6/10

D3/10

VSX-1127-K

10.8 D-MAIN ASSY (4/10)

1

2

3

4

A

B

C

D


E

F

E CP513

D 4/10

76

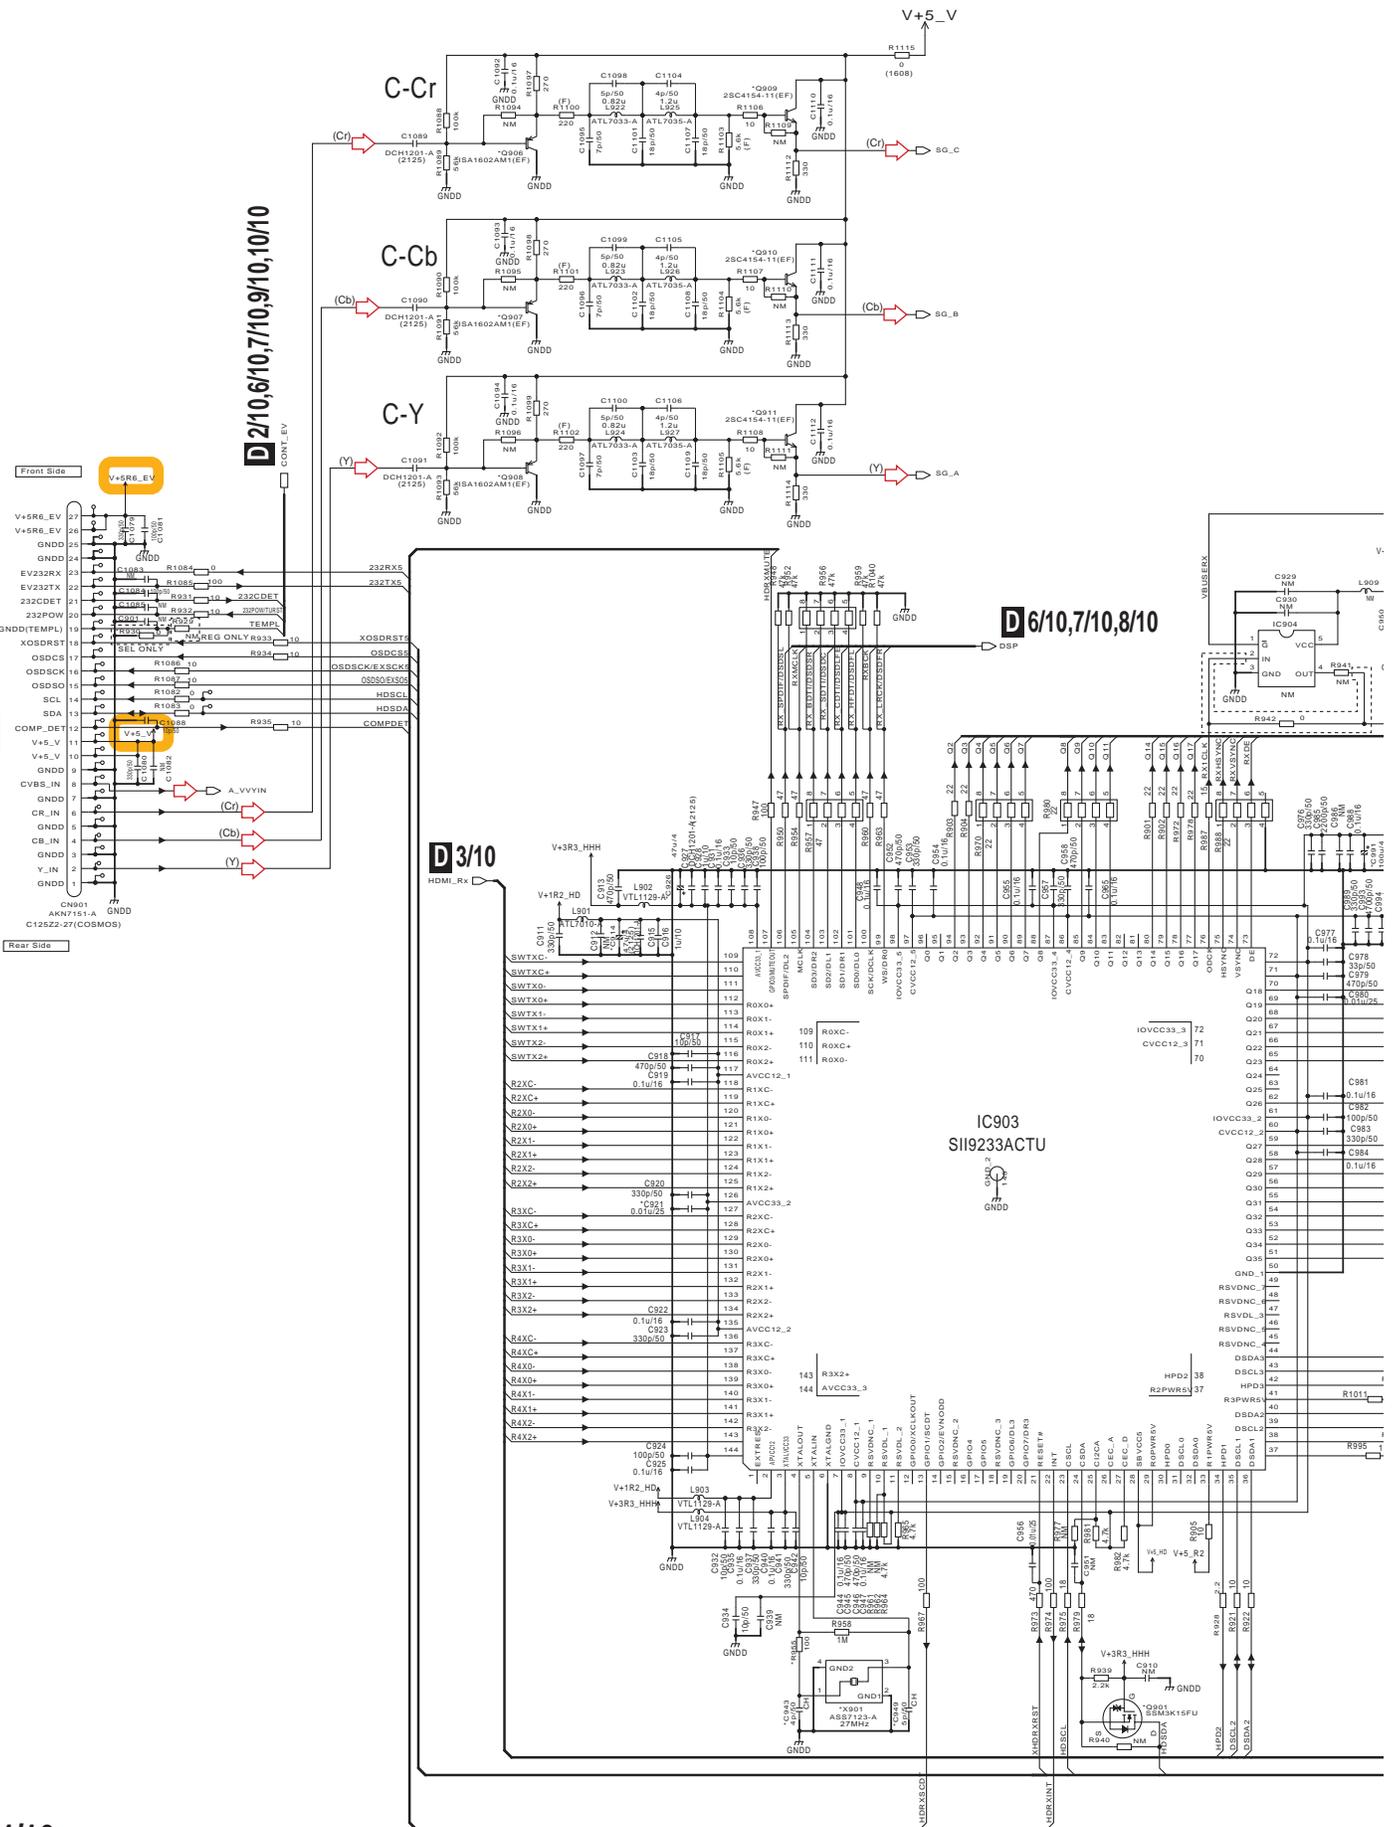

D 2/10,6/10,7/10,9/10,10/10

D 6/10,7/10,8/10

D 3/10

IC903
SI9233ACTU

VSX-1127-K

10.9 D-MAIN ASSY (5/10)

D4/10

DV-Rx

A

R1343

R1344

R1351

R1352

R1345

R1346

R1353

R1354

R1347

R1348

R1355

R1356

R1349

R1350

R1357

R1378

R1379

R1211

R1341

R140

R1366

R1367

R1368

R1205

R1369

R1370

R1371

R1372

R1373

R1374

R1207

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342

R1343

R1211

R1357

R1213

R1338

R1337

R1336

R1203

R1342


R1343

R1211

AWX1200: FY13 AVR SEL-LOW
 AWX9957: VSX-1127/CU,VSX-1122/SY,DL
 AWX1223: VSX-1027/CU,VSX-922/SY,F,DL,/PW,/A,VSA-922/J
 AWX1228: VSX-1122/CU,VSX-60/U


D5/10 D-MAIN ASSY

(VSX-1127-K: 7028071752020-IL)
 (VSX-1122-K: 7028071752040-IL)
 (VSX-60: 7028071752040-IL)
 (VSX-1027-K: 7028071752070-IL)



	AWX1200	AWX9957	AWX1223	AWX1228
C1203	100u/4	ACR7354-1	ACH7354-1	ACH7354-1
C1207	220u/4	ACH7354-1	ACH7354-1	ACH7354-1
C1208	220u/4	ACH7354-1	ACH7354-1	ACH7354-1
C1209	0.01u/25	0.1u/16	0.1u/16	0.1u/16
C1210	220u/4	ACH7354-1	ACH7354-1	ACH7354-1
C1215	100u/4	ACH7354-1	ACH7354-1	ACH7354-1
C1218	220u/4	ACH7354-1	ACH7354-1	ACH7354-1
C1219	0.01u/25	100p/50	100p/50	100p/50
C1227	220u/4	ACH7354-1	ACH7354-1	ACH7354-1

D6/10

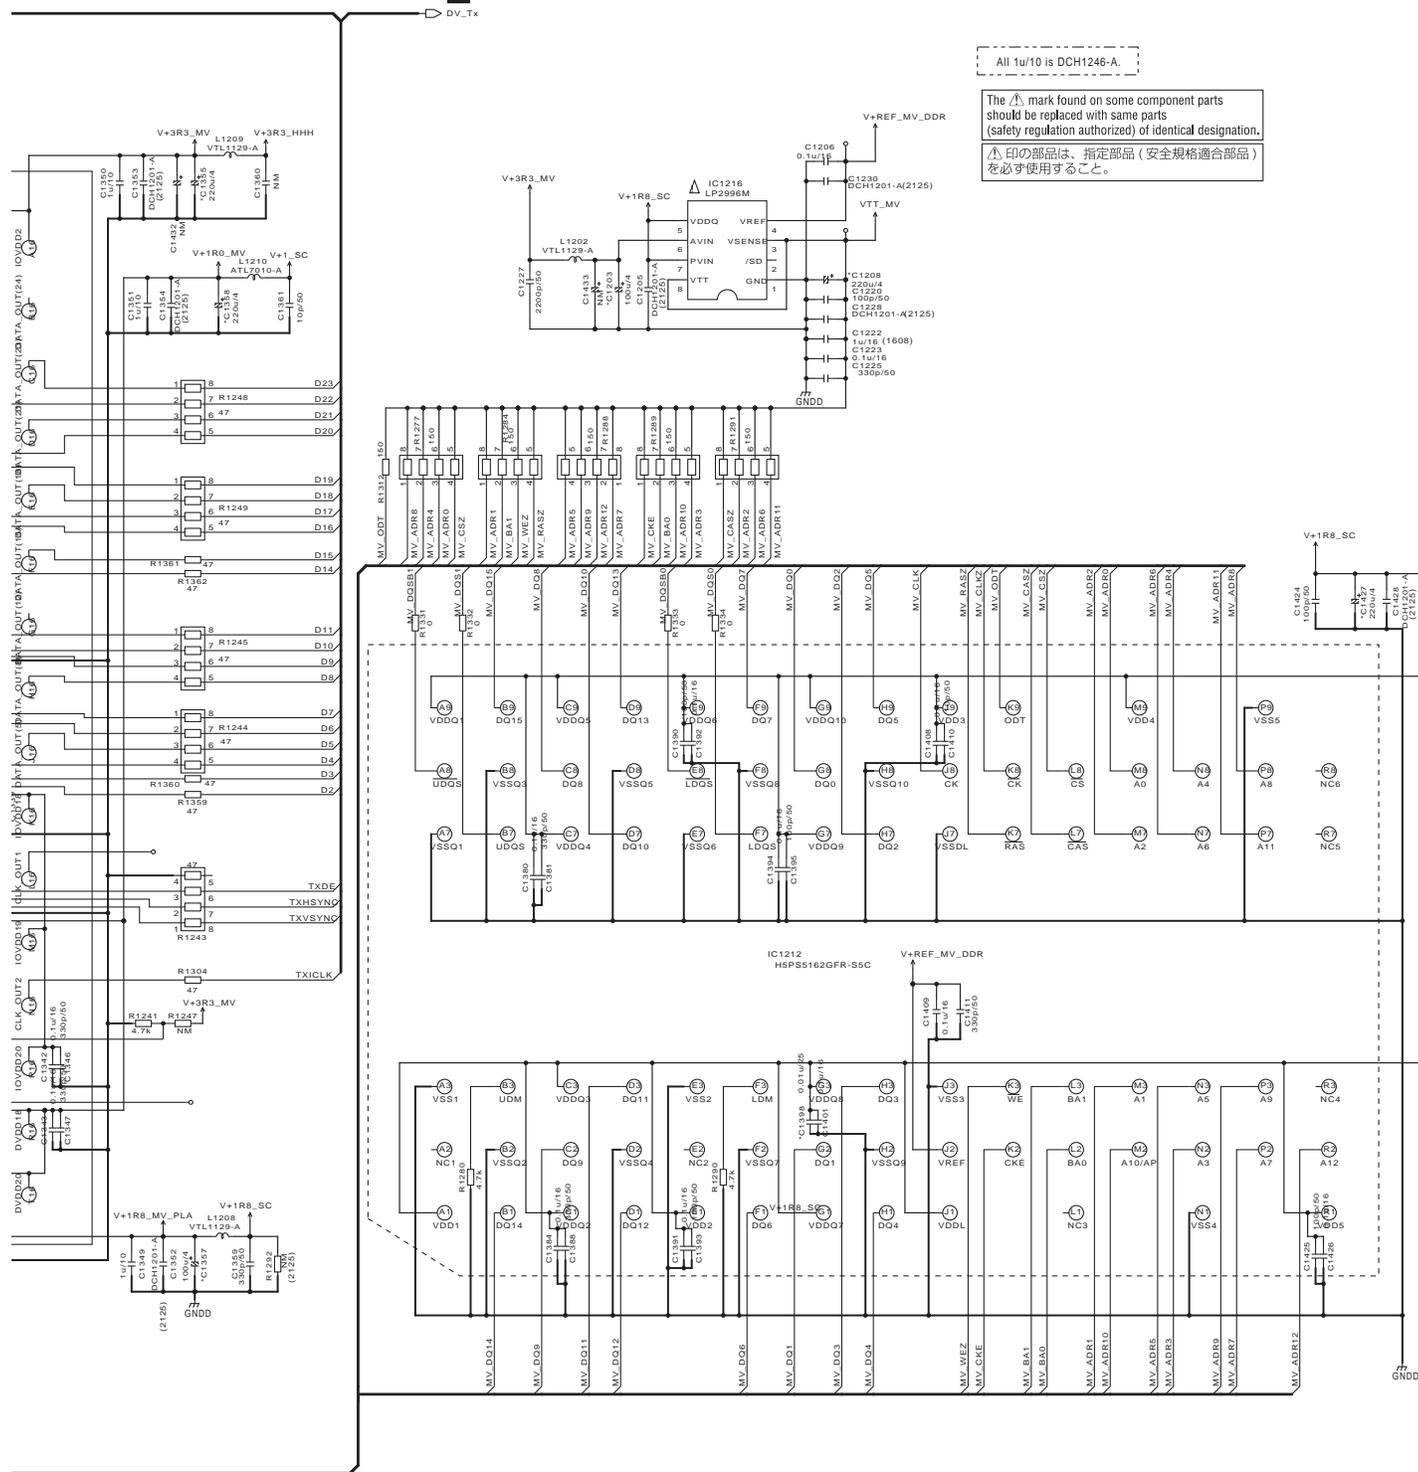

All 1u/10 is DCH1246-A.

The Δ mark found on some component parts should be replaced with same parts (safety regulation authorized) of identical designation.

Δ 印の部品は、指定部品（安全規格適合部品）を必ず使用すること。

10.10 D-MAIN ASSY (6/10)

1

2

3

4

A

B

C

D

E

F

D 5/10

DV_TX

D 4/10,7/10,8/10


DSP

D 7/10

TXMCLKI

D 6/10

80

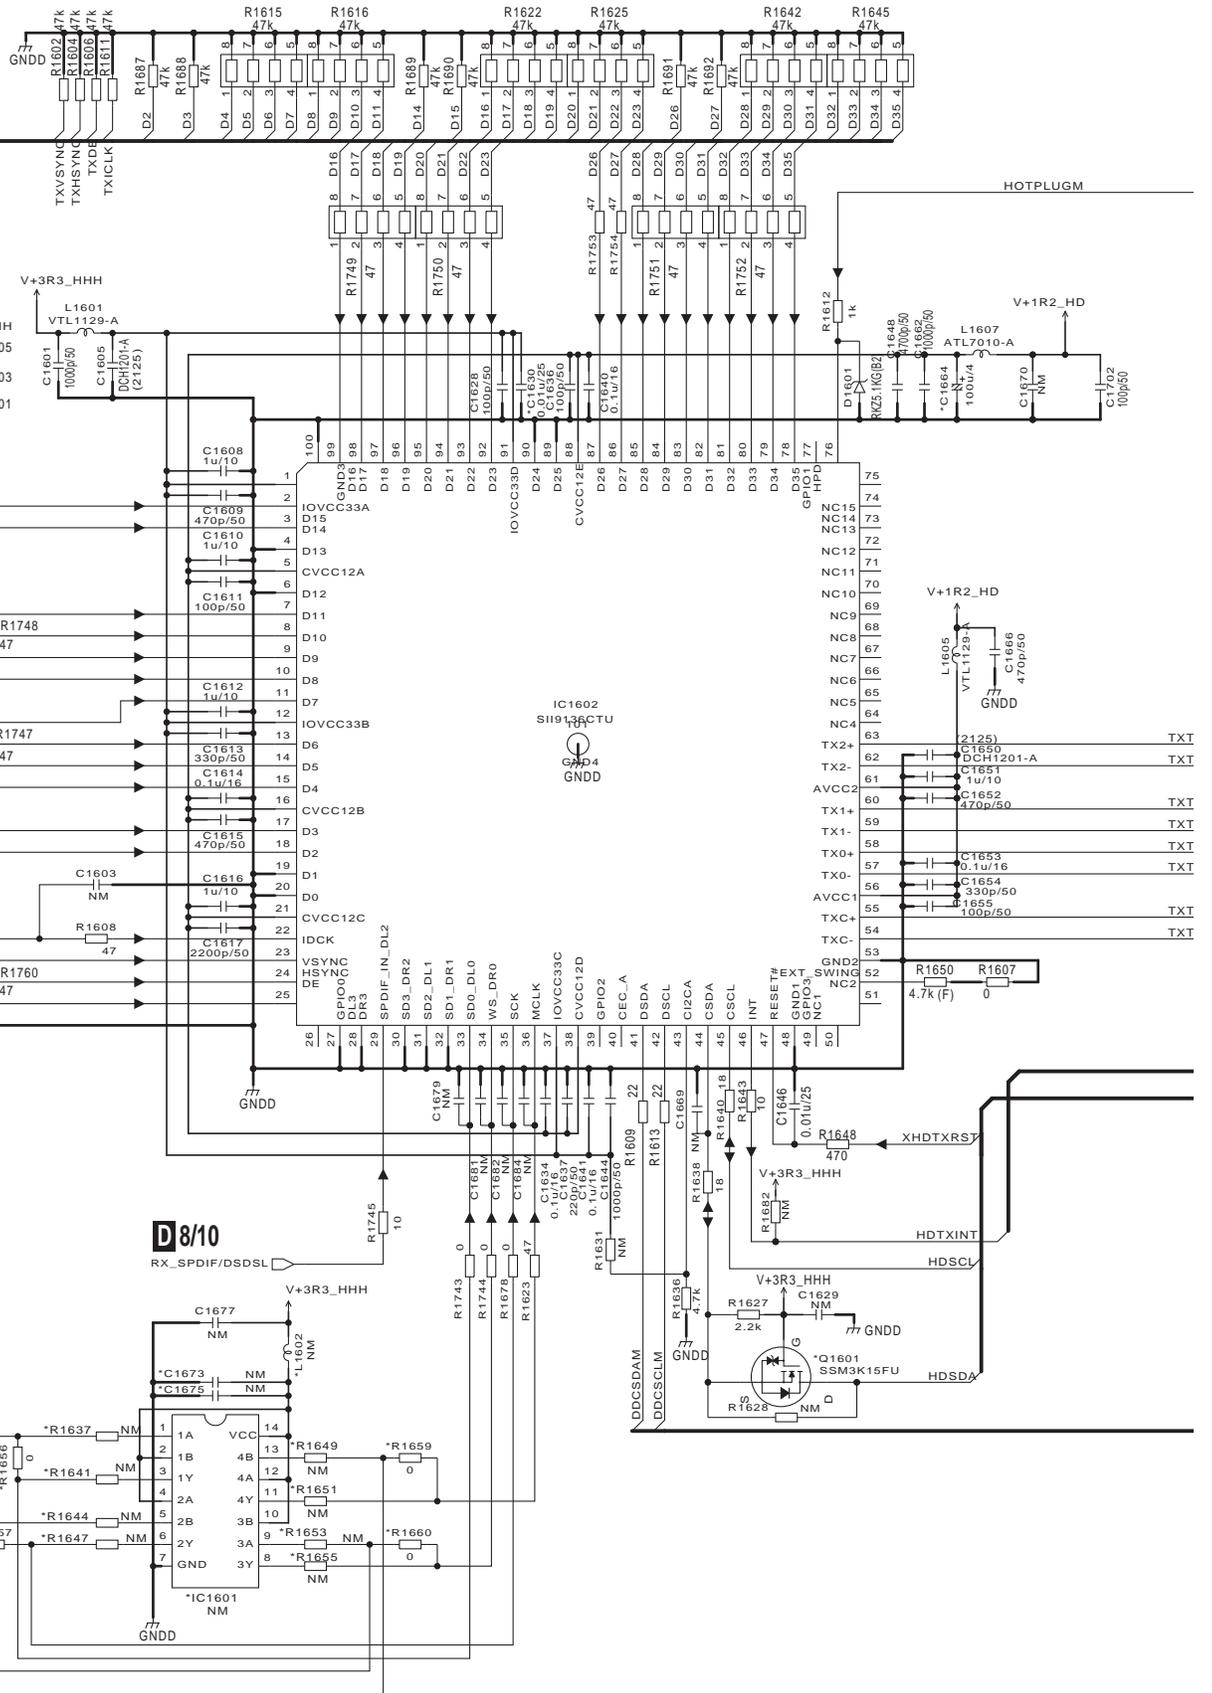

VSX-1127-K

1

2

3

4

10.11 D-MAIN ASSY (7/10)

1 2 3 4

A

D 2/10-6/10,8/10-10/10

MASTER CLOCK SELECTOR

D 2/


B

C

D

E


F

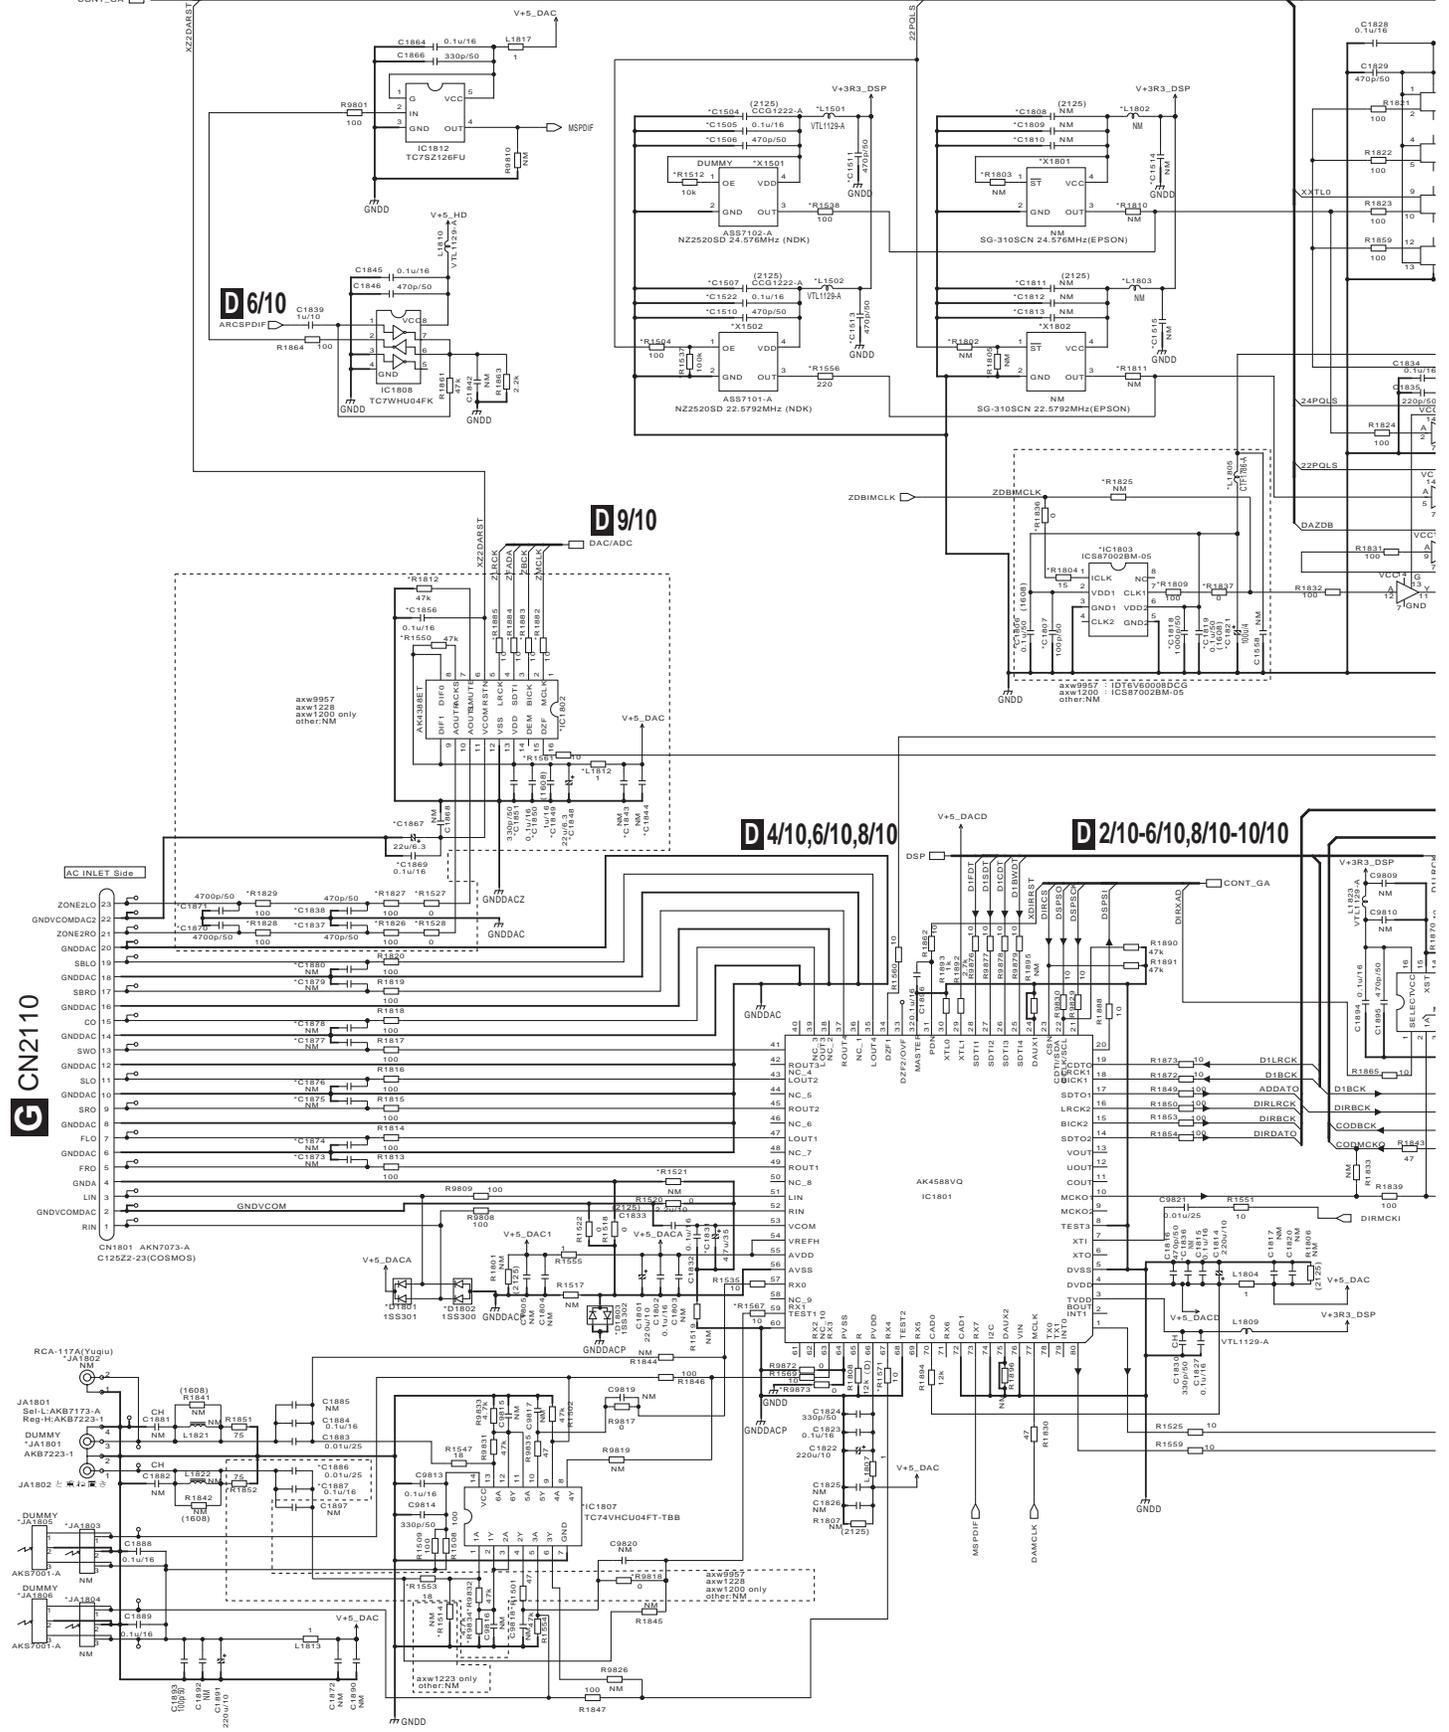

G CN2110

D 7/10

1 2 3 4

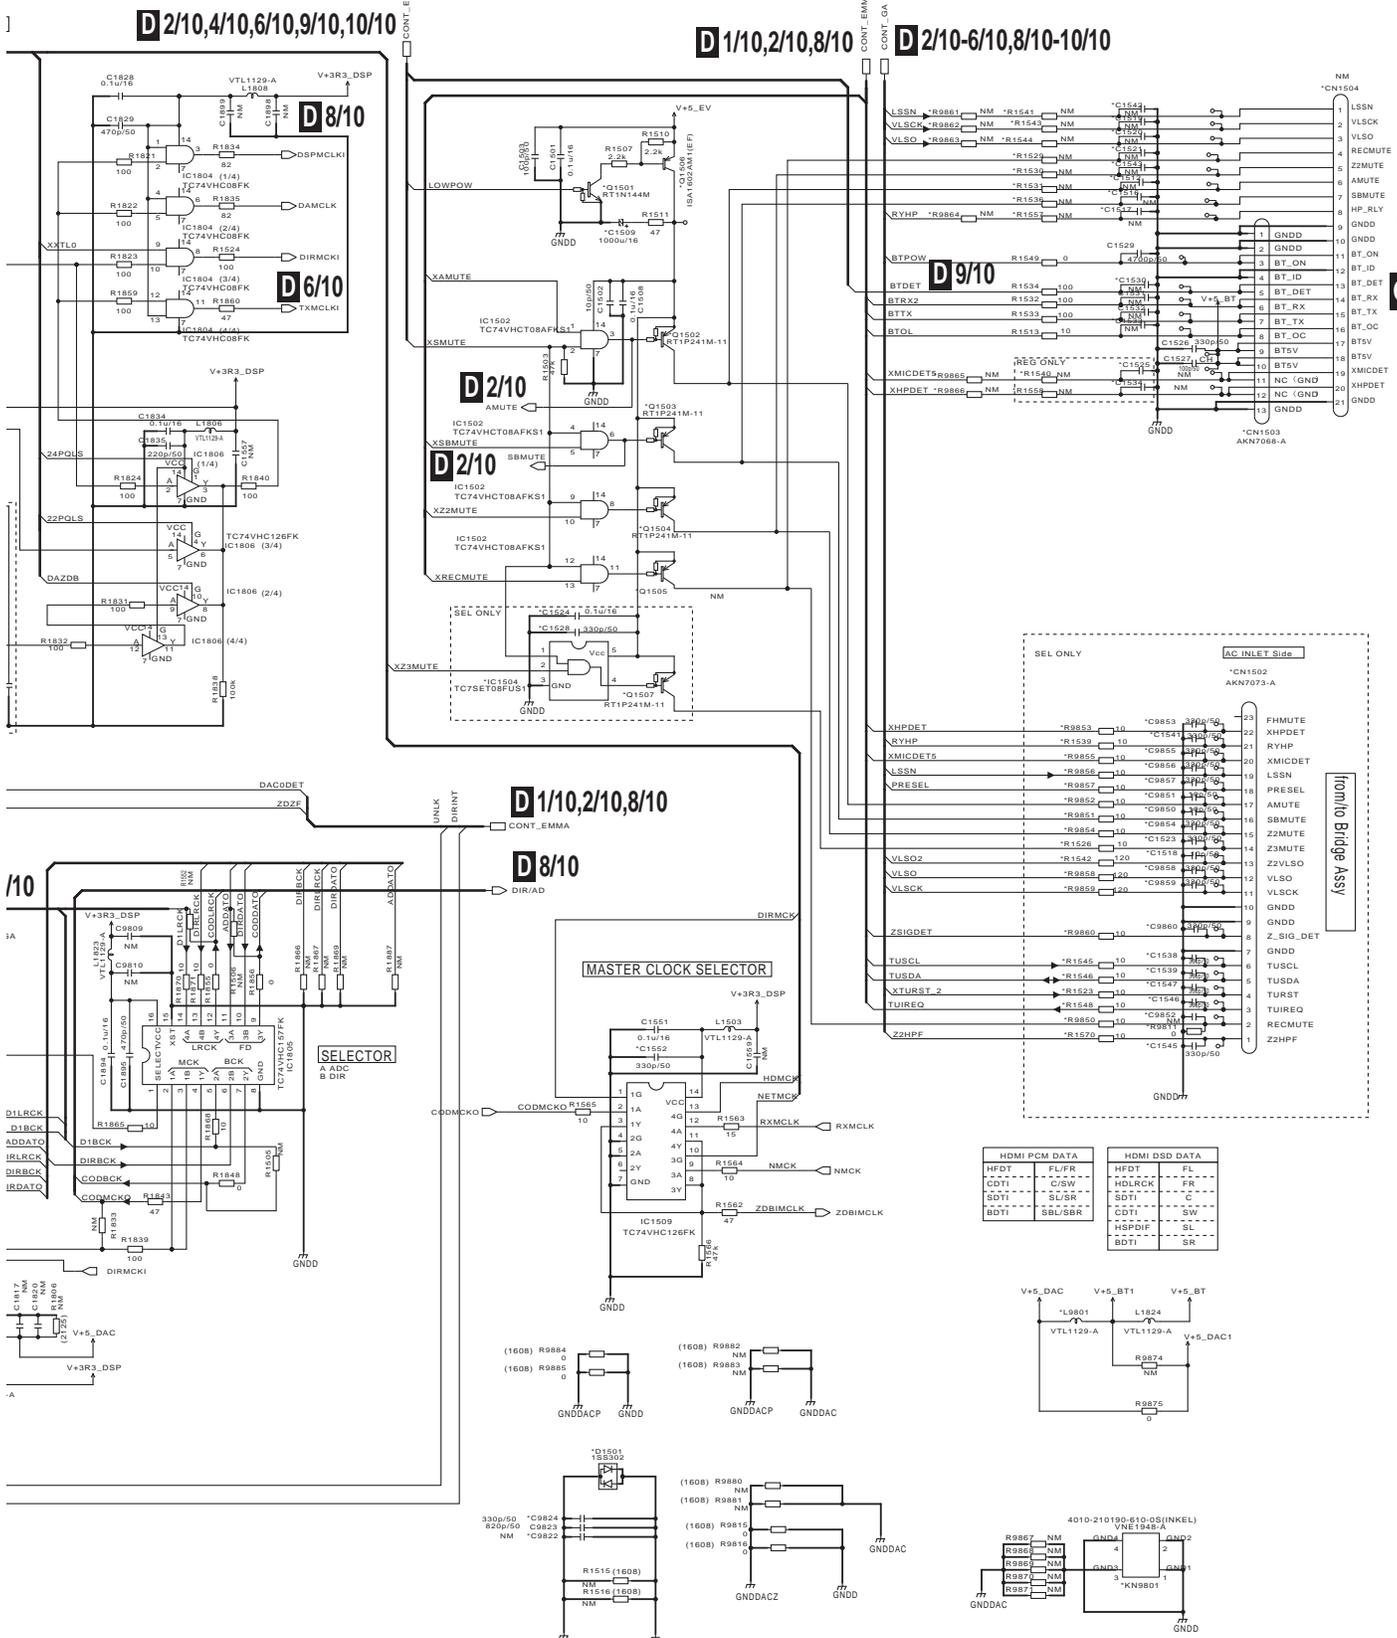

CN2113

G

C

D

E

F


AWX1200: FY13 AVR SEL-LOW
 AWX9957: VSX-1127/CU,VSX-1122/SY,DL
 AWX1223: VSX-1027/CU,VSX-922/SY,F,DL,PLW,/A,VSA-922/J
 AWX1228: VSX-1122/CU,VSX-60/J

VSX-1127-K

D 7/10 D-MAIN ASSY
 (VSX-1127-K: 7028071752020-IL)
 (VSX-1122-K: 7028071752040-IL)
 (VSX-60: 7028071752040-IL)
 (VSX-1027-K: 7028071752070-IL)

D 7/10

10.12 D-MAIN ASSY (8/10)

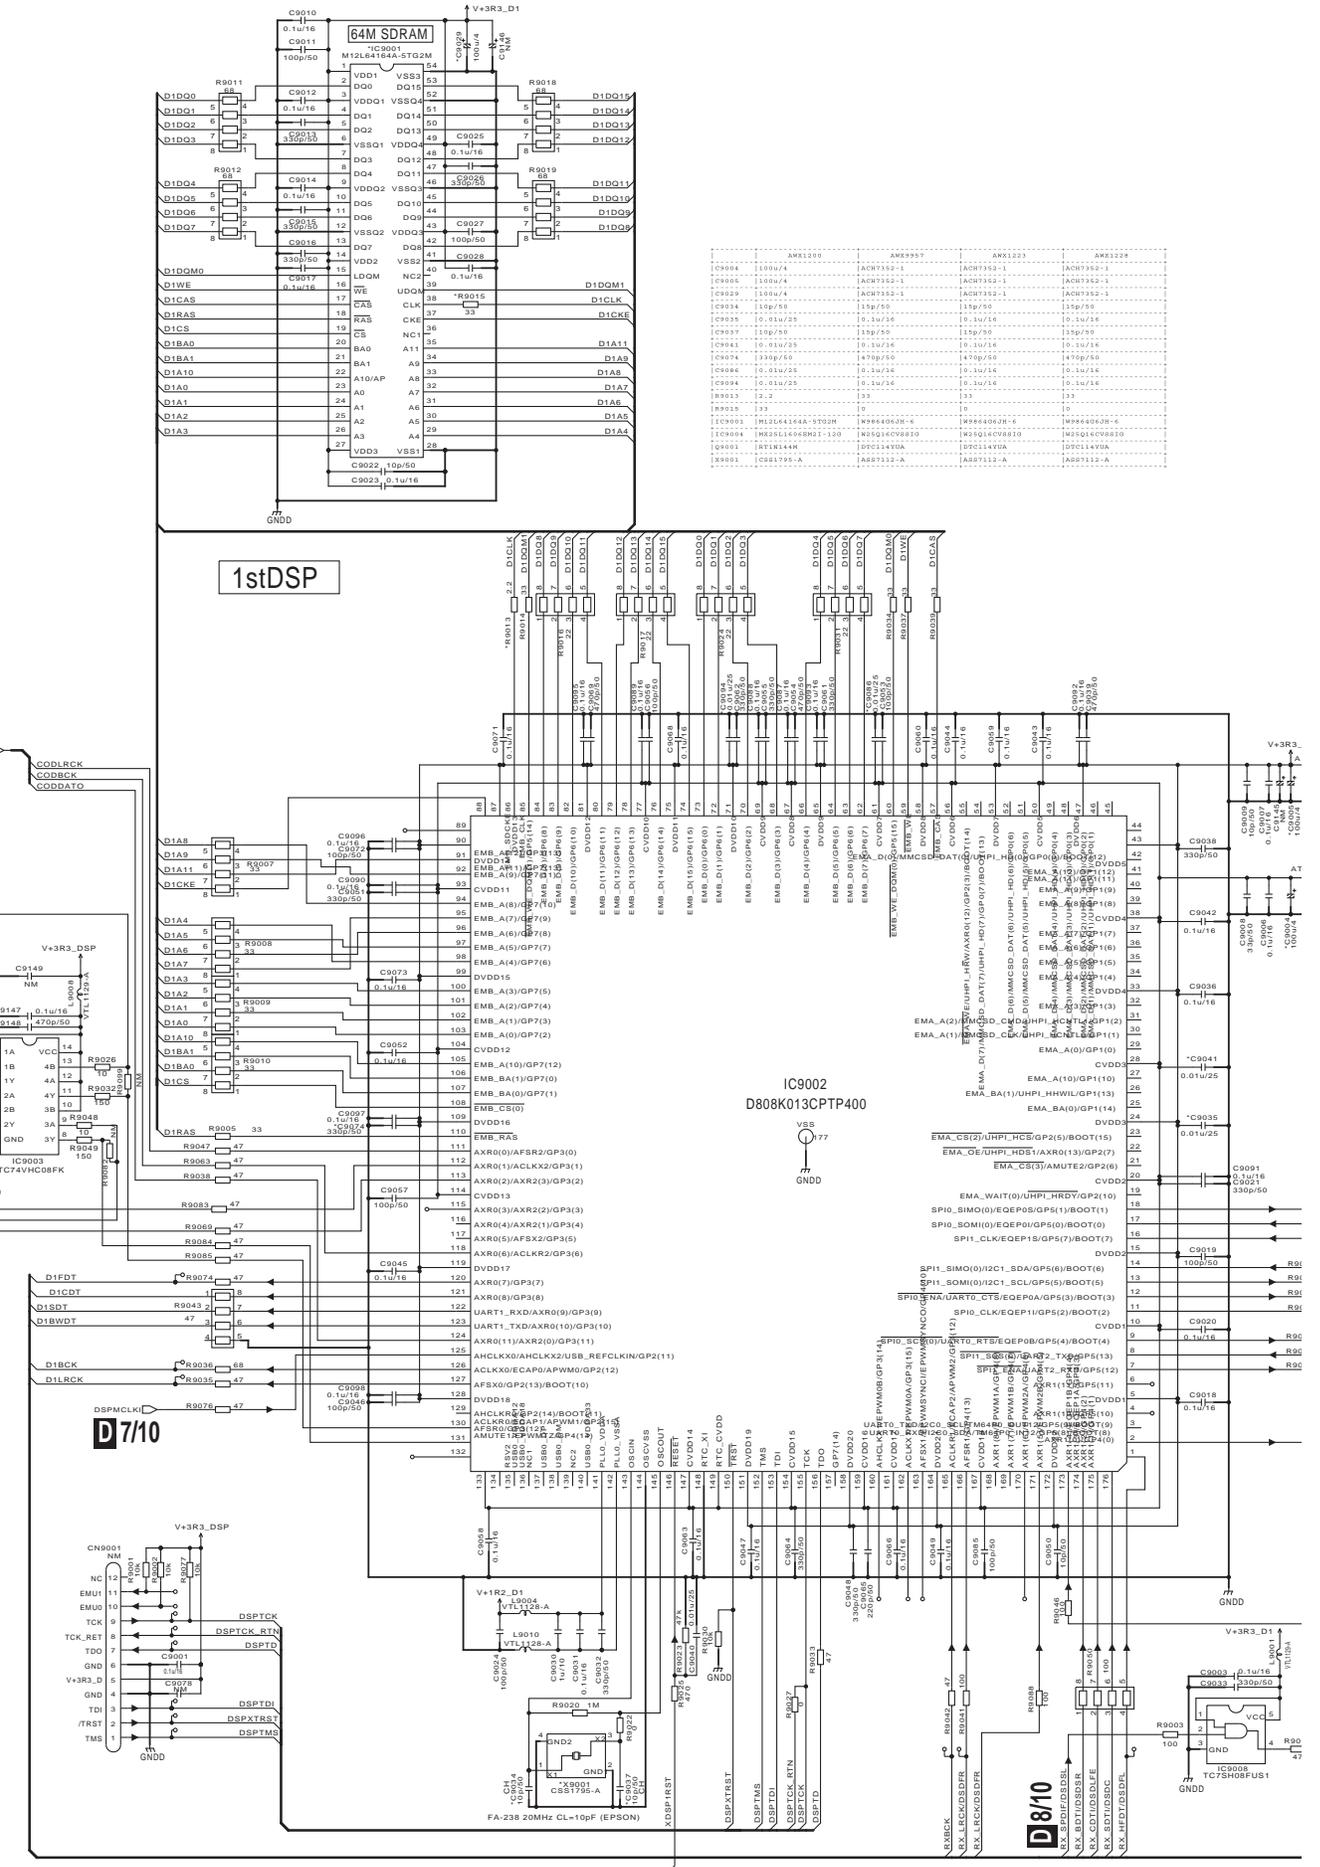


D 8/10 D-MAIN ASSY

(VSX-1127-K: 7028071752020-IL)
 (VSX-1122-K: 7028071752040-IL)
 (VSX-60: 7028071752040-IL)
 (VSX-1027-K: 7028071752070-IL)

AWX1200: FY13 AVR SEL-LOW
 AWX9957: VSX-1127/CU,VSX-1122/SY,DL
 AWX1223: VSX-1027/CU,VSX-922/SY,F,DL, /PW, /A, VSA-922/J
 AWX1228: VSX-1122/CU,VSX-60/U

1	AWX1200	AWX9957	AWX1223	AWX1228
IC1509	1000u/16	ACR7343-1	ACR7343-1	ACR7343-1
IC1512	100k	4700p/50	4700p/50	4700p/50
IC1513	100k	4700p/50	4700p/50	4700p/50
IC1514	100k	4700p/50	4700p/50	4700p/50
IC1515	100k	4700p/50	4700p/50	4700p/50
IC1516	100k	4700p/50	4700p/50	4700p/50
IC1517	100k	4700p/50	4700p/50	4700p/50
IC1518	100p/50	100k	100k	100k
IC1519	100k	100p/50	100p/50	100p/50
IC1520	100k	100p/50	100p/50	100p/50
IC1521	100k	4700p/50	4700p/50	4700p/50
IC1522	100k	4700p/50	4700p/50	4700p/50
IC1523	0.1u/16	100k	100k	100k
IC1524	0.1u/16	100k	100k	100k
IC1525	100k	100p/50	100p/50	100p/50
IC1526	100p/50	100k	100k	100k
IC1527	100k	4700p/50	4700p/50	4700p/50
IC1528	100k	4700p/50	4700p/50	4700p/50
IC1529	100k	4700p/50	4700p/50	4700p/50
IC1530	100k	4700p/50	4700p/50	4700p/50
IC1531	100k	4700p/50	4700p/50	4700p/50
IC1532	100k	4700p/50	4700p/50	4700p/50
IC1533	100k	4700p/50	4700p/50	4700p/50
IC1534	100k	1000p/50	1000p/50	1000p/50
IC1535	100k	100p/50	100p/50	100p/50
IC1536	100k	100p/50	100p/50	100p/50
IC1537	100k	100p/50	100p/50	100p/50
IC1538	100k	100p/50	100p/50	100p/50
IC1539	100k	100p/50	100p/50	100p/50
IC1540	100k	100p/50	100p/50	100p/50
IC1541	100k	4700p/50	4700p/50	4700p/50
IC1542	100k	4700p/50	4700p/50	4700p/50
IC1543	100k	4700p/50	4700p/50	4700p/50
IC1544	100k	4700p/50	4700p/50	4700p/50
IC1545	100k	4700p/50	4700p/50	4700p/50
IC1546	100k	4700p/50	4700p/50	4700p/50
IC1547	100k	4700p/50	4700p/50	4700p/50
IC1548	100k	4700p/50	4700p/50	4700p/50
IC1549	100k	4700p/50	4700p/50	4700p/50
IC1550	100k	4700p/50	4700p/50	4700p/50
IC1551	100k	4700p/50	4700p/50	4700p/50
IC1552	100k	4700p/50	4700p/50	4700p/50
IC1553	100k	4700p/50	4700p/50	4700p/50
IC1554	100k	4700p/50	4700p/50	4700p/50
IC1555	100k	4700p/50	4700p/50	4700p/50
IC1556	100k	4700p/50	4700p/50	4700p/50
IC1557	100k	4700p/50	4700p/50	4700p/50
IC1558	100k	4700p/50	4700p/50	4700p/50
IC1559	100k	4700p/50	4700p/50	4700p/50
IC1560	100k	4700p/50	4700p/50	4700p/50
IC1561	100k	4700p/50	4700p/50	4700p/50
IC1562	100k	4700p/50	4700p/50	4700p/50
IC1563	100k	4700p/50	4700p/50	4700p/50
IC1564	100k	4700p/50	4700p/50	4700p/50
IC1565	100k	4700p/50	4700p/50	4700p/50
IC1566	100k	4700p/50	4700p/50	4700p/50
IC1567	100k	4700p/50	4700p/50	4700p/50
IC1568	100k	4700p/50	4700p/50	4700p/50
IC1569	100k	4700p/50	4700p/50	4700p/50
IC1570	100k	4700p/50	4700p/50	4700p/50
IC1571	100k	4700p/50	4700p/50	4700p/50
IC1572	100k	4700p/50	4700p/50	4700p/50
IC1573	100k	4700p/50	4700p/50	4700p/50
IC1574	100k	4700p/50	4700p/50	4700p/50
IC1575	100k	4700p/50	4700p/50	4700p/50
IC1576	100k	4700p/50	4700p/50	4700p/50
IC1577	100k	4700p/50	4700p/50	4700p/50
IC1578	100k	4700p/50	4700p/50	4700p/50
IC1579	100k	4700p/50	4700p/50	4700p/50
IC1580	100k	4700p/50	4700p/50	4700p/50
IC1581	100k	4700p/50	4700p/50	4700p/50
IC1582	100k	4700p/50	4700p/50	4700p/50
IC1583	100k	4700p/50	4700p/50	4700p/50
IC1584	100k	4700p/50	4700p/50	4700p/50
IC1585	100k	4700p/50	4700p/50	4700p/50
IC1586	100k	4700p/50	4700p/50	4700p/50
IC1587	100k	4700p/50	4700p/50	4700p/50
IC1588	100k	4700p/50	4700p/50	4700p/50
IC1589	100k	4700p/50	4700p/50	4700p/50
IC1590	100k	4700p/50	4700p/50	4700p/50
IC1591	100k	4700p/50	4700p/50	4700p/50
IC1592	100k	4700p/50	4700p/50	4700p/50
IC1593	100k	4700p/50	4700p/50	4700p/50
IC1594	100k	4700p/50	4700p/50	4700p/50
IC1595	100k	4700p/50	4700p/50	4700p/50
IC1596	100k	4700p/50	4700p/50	4700p/50
IC1597	100k	4700p/50	4700p/50	4700p/50
IC1598	100k	4700p/50	4700p/50	4700p/50
IC1599	100k	4700p/50	4700p/50	4700p/50
IC1600	100k	4700p/50	4700p/50	4700p/50
IC1601	100k	4700p/50	4700p/50	4700p/50
IC1602	100k	4700p/50	4700p/50	4700p/50
IC1603	100k	4700p/50	4700p/50	4700p/50
IC1604	100k	4700p/50	4700p/50	4700p/50
IC1605	100k	4700p/50	4700p/50	4700p/50
IC1606	100k	4700p/50	4700p/50	4700p/50
IC1607	100k	4700p/50	4700p/50	4700p/50
IC1608	100k	4700p/50	4700p/50	4700p/50
IC1609	100k	4700p/50	4700p/50	4700p/50
IC1610	100k	4700p/50	4700p/50	4700p/50
IC1611	100k	4700p/50	4700p/50	4700p/50
IC1612	100k	4700p/50	4700p/50	4700p/50
IC1613	100k	4700p/50	4700p/50	4700p/50
IC1614	100k	4700p/50	4700p/50	4700p/50
IC1615	100k	4700p/50	4700p/50	4700p/50
IC1616	100k	4700p/50	4700p/50	4700p/50
IC1617	100k	4700p/50	4700p/50	4700p/50
IC1618	100k	4700p/50	4700p/50	4700p/50
IC1619	100k	4700p/50	4700p/50	4700p/50
IC1620	100k	4700p/50	4700p/50	4700p/50
IC1621	100k	4700p/50	4700p/50	4700p/50
IC1622	100k	4700p/50	4700p/50	4700p/50
IC1623	100k	4700p/50	4700p/50	4700p/50
IC1624	100k	4700p/50	4700p/50	4700p/50
IC1625	100k	4700p/50	4700p/50	4700p/50
IC1626	100k	4700p/50	4700p/50	4700p/50
IC1627	100k	4700p/50	4700p/50	4700p/50
IC1628	100k	4700p/50	4700p/50	4700p/50
IC1629	100k	4700p/50	4700p/50	4700p/50
IC1630	100k	4700p/50	4700p/50	4700p/50
IC1631	100k	4700p/50	4700p/50	4700p/50
IC1632	100k	4700p/50	4700p/50	4700p/50
IC1633	100k	4700p/50	4700p/50	4700p/50
IC1634	100k	4700p/50	4700p/50	4700p/50
IC1635	100k	4700p/50	4700p/50	4700p/50
IC1636	100k	4700p/50	4700p/50	4700p/50
IC1637	100k	4700p/50	4700p/50	4700p/50
IC1638	100k	4700p/50	4700p/50	4700p/50
IC1639	100k	4700p/50	4700p/50	4700p/50
IC1640	100k	4700p/50	4700p/50	4700p/50
IC1641	100k	4700p/50	4700p/50	4700p/50
IC1642	100k	4700p/50	4700p/50	4700p/50
IC1643	100k	4700p/50	4700p/50	4700p/50
IC1644	100k	4700p/50	4700p/50	4700p/50
IC1645	100k	4700p/50	4700p/50	4700p/50
IC1646	100k	4700p/50	4700p/50	4700p/50
IC1647	100k	4700p/50	4700p/50	4700p/50
IC1648	100k	4700p/50	4700p/50	4700p/50
IC1649	100k	4700p/50	4700p/50	4700p/50
IC1650	100k	4700p/50	4700p/50	4700p/50
IC1651	100k	4700p/50	4700p/50	4700p/50
IC1652	100k	4700p/50	4700p/50	4700p/50
IC1653	100k	4700p/50	4700p/50	4700p/50
IC1654	100k	4700p/50	4700p/50	4700p/50
IC1655	100k	4700p/50	4700p/50	4700p/50
IC1656	100k	4700p/50	4700p/50	4700p/50
IC1657	100k	4700p/50	4700p/50	4700p/50
IC1658	100k	4700p/50	4700p/50	4700p/50
IC1659	100k	4700p/50	4700p/50	4700p/50
IC1660	100k	4700p/50	4700p/50	4700p/50
IC1661	100k	4700p/50	4700p/50	4700p/50
IC1662	100k	4700p/50	4700p/50	4700p/50
IC1663	100k	4700p/50	4700p/50	4700p/50
IC1664	100k	4700p/50	4700p/50	4700p/50
IC1665	100k	4700p/50	4700p/50	4700p/50
IC1666	100k	4700p/50	4700p/50	4700p/50

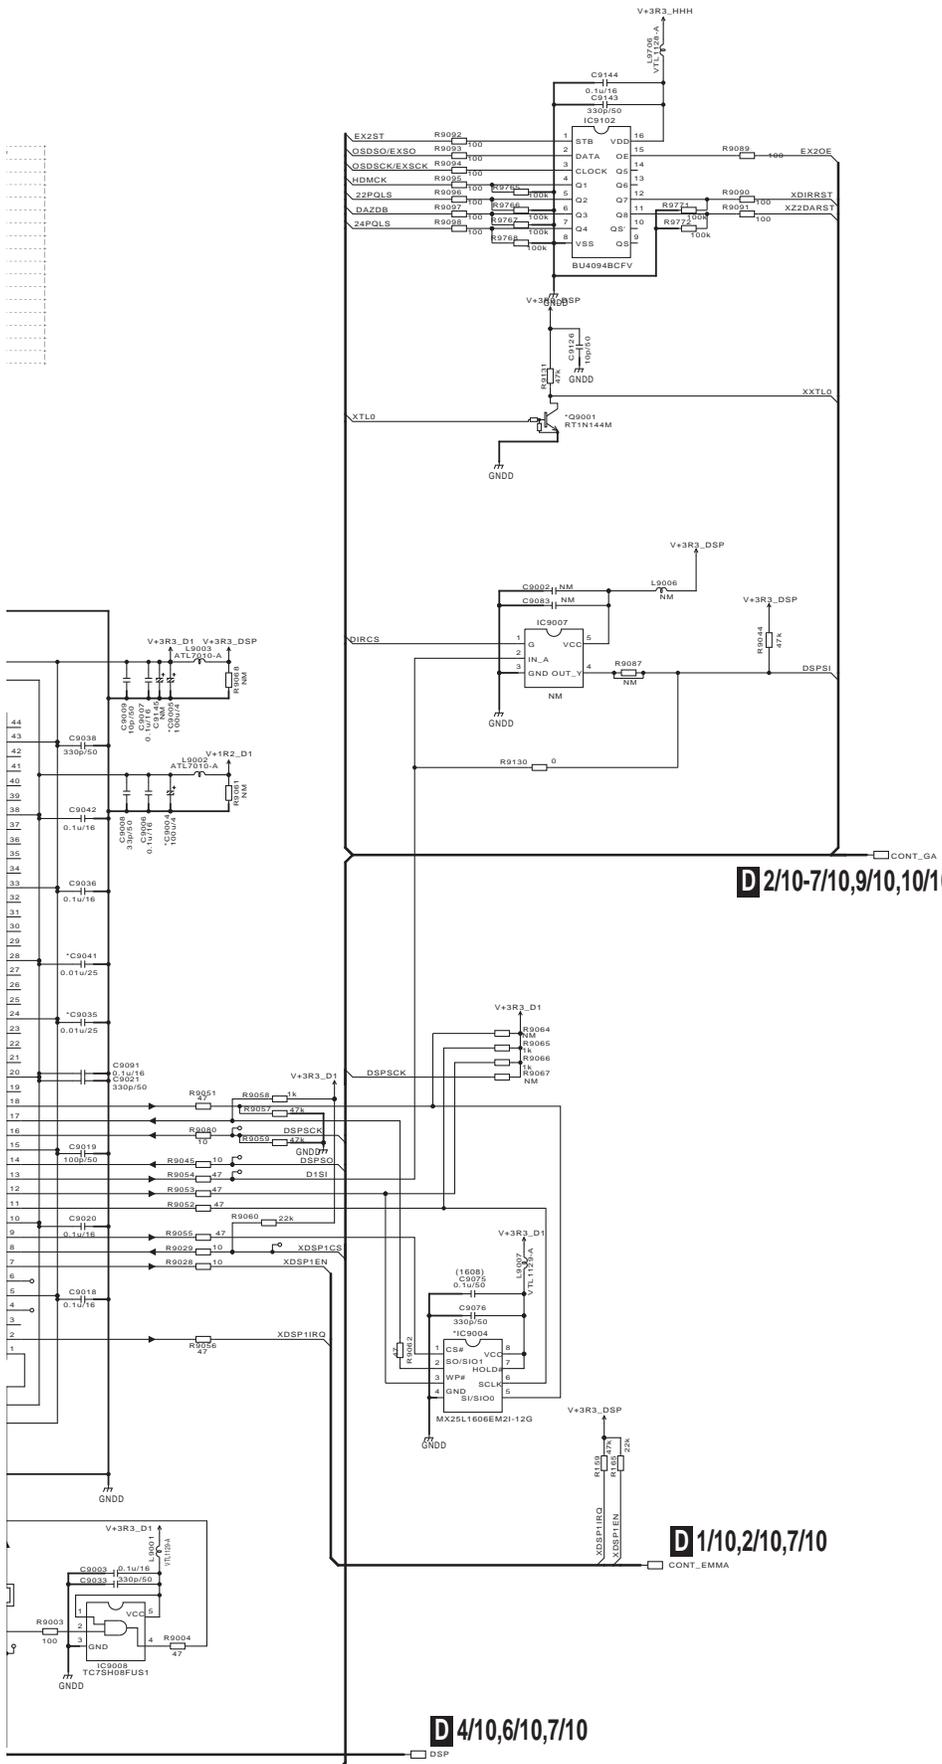

D 2/10-7/10,9/10,10/10

D 1/10,2/10,7/10


D 4/10,6/10,7/10

D 8/10

VSX-1127-K

The Δ mark found on some component parts should be replaced with same parts (safety regulation authorized) of identical designation.
 Δ 印の部品は、指定部品（安全規格適合部品）を必ず使用すること。


10.13 D-MAIN ASSY (9/10)

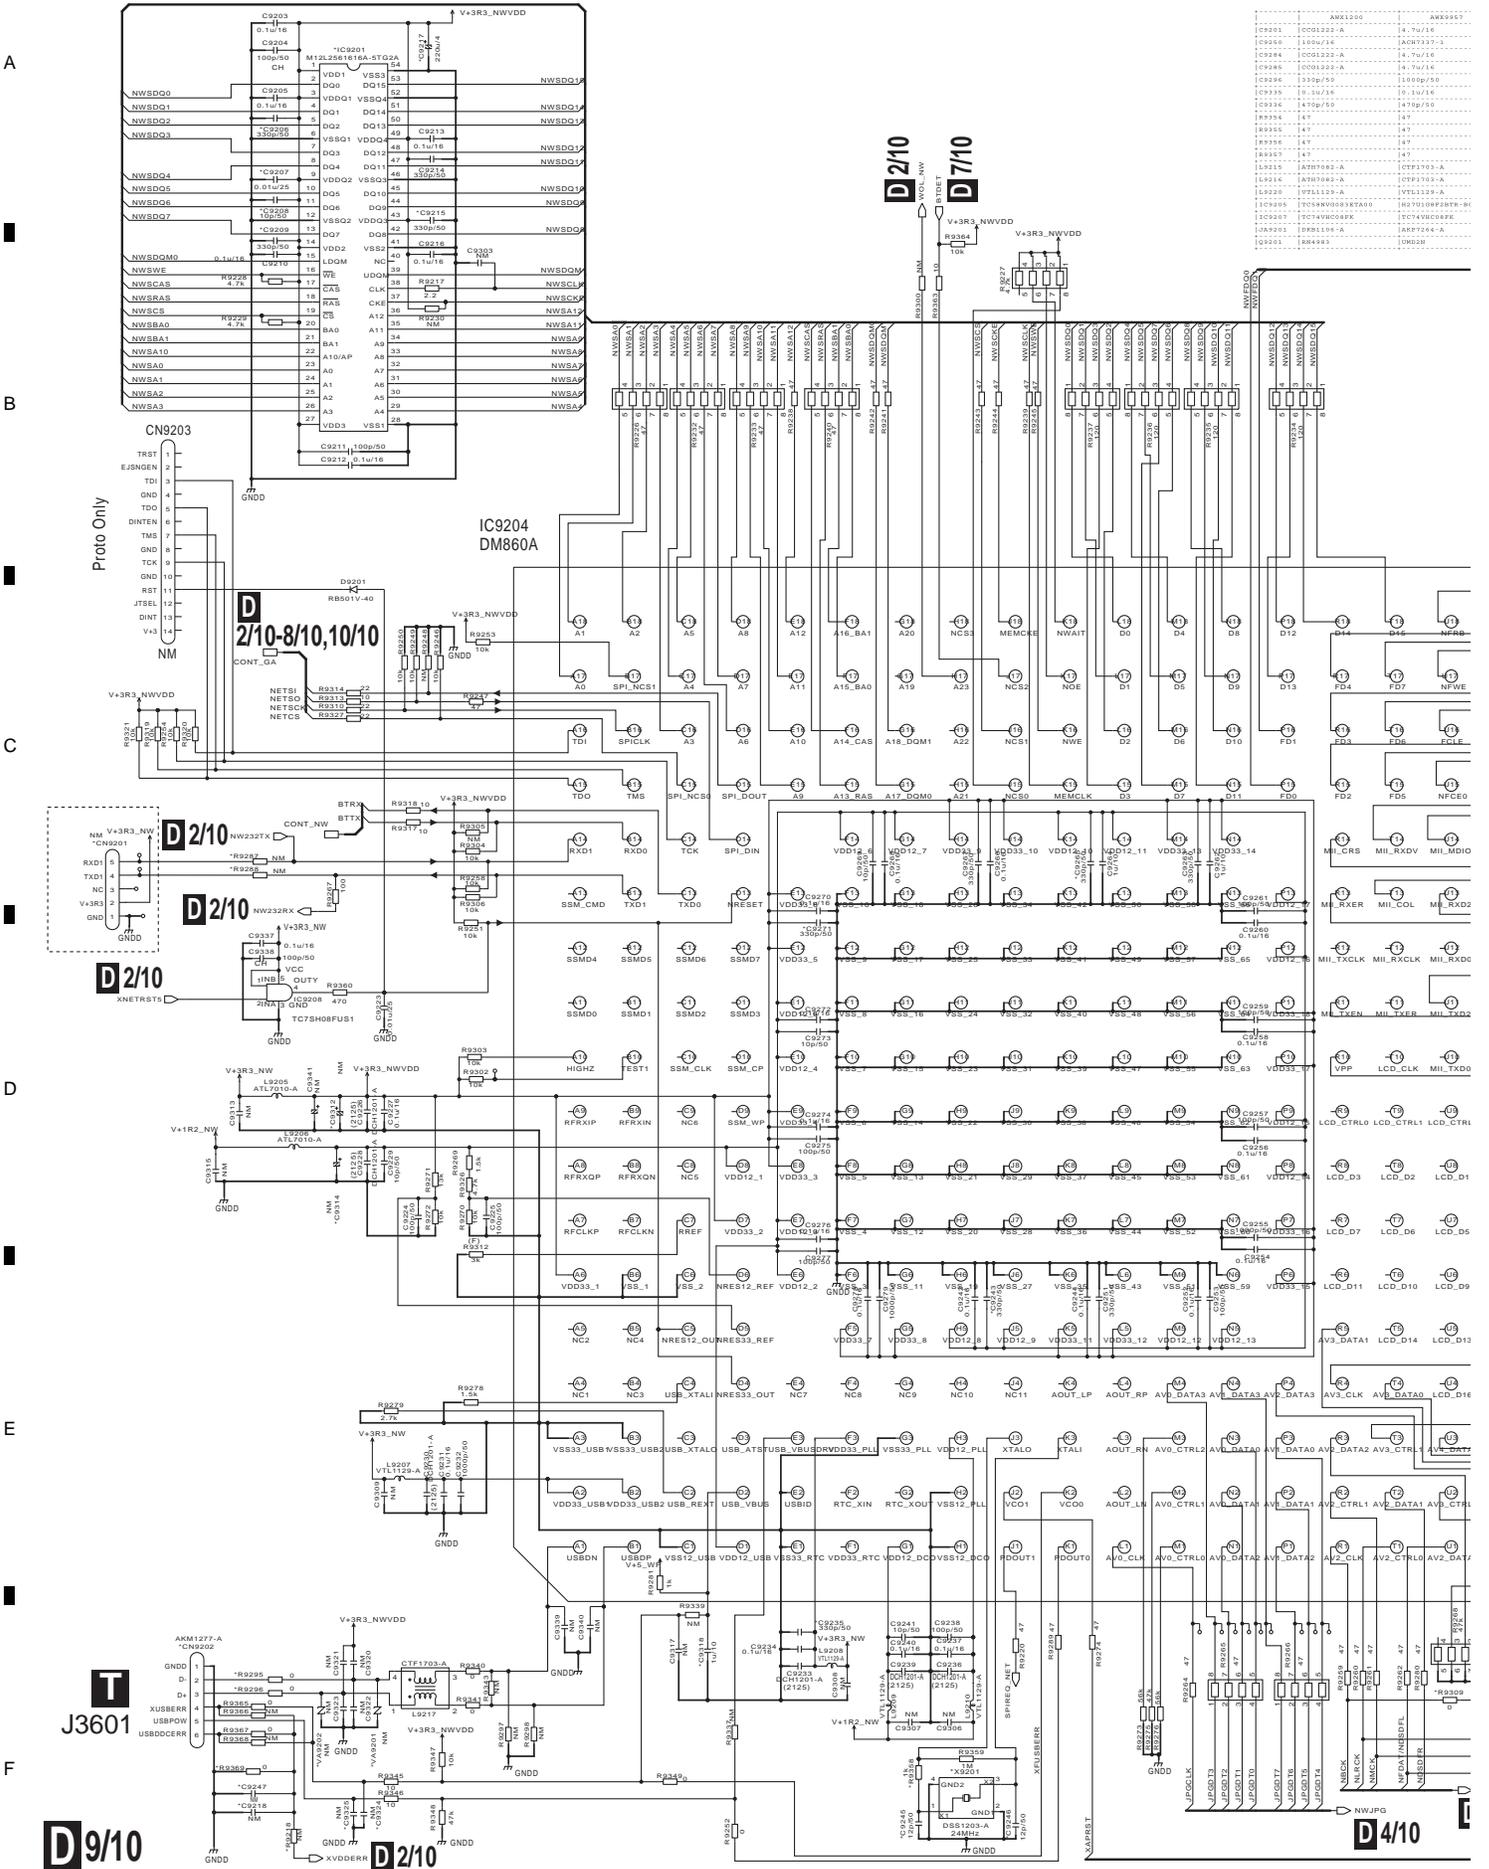


D10/10 D-MAIN ASSY

(VSX-1127-K: 7028071752020-IL)
(VSX-1122-K: 7028071752040-IL)
(VSX-60: 7028071752040-IL)
(VSX-1027-K: 7028071752070-IL)



A
B
C
D
E
F

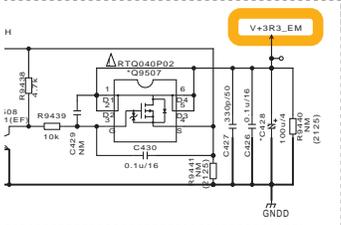


All V+10 is DCH1246-A.
CCG1222-A is 4.7u/25.

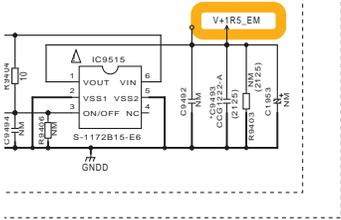





D2/10
NETPOWER

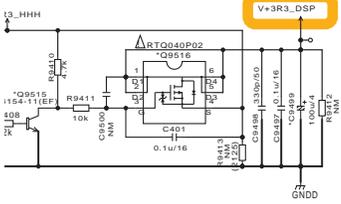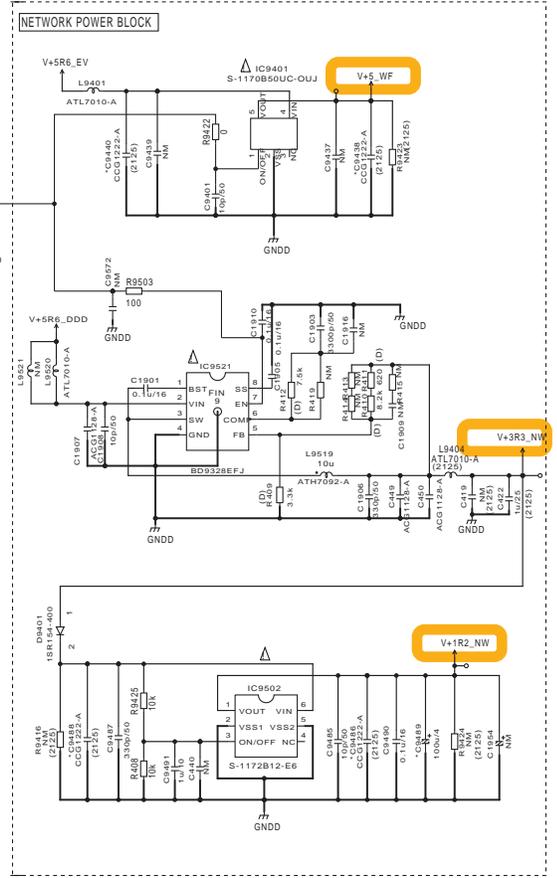



DSP/CODEC POWER BLOCK

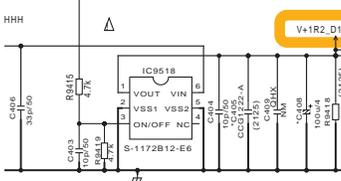

BIRPOW

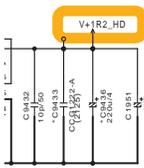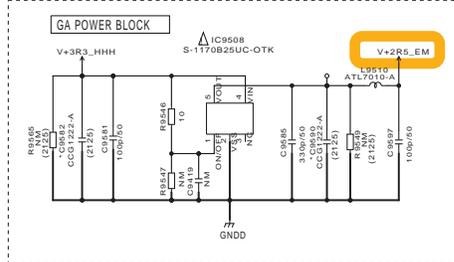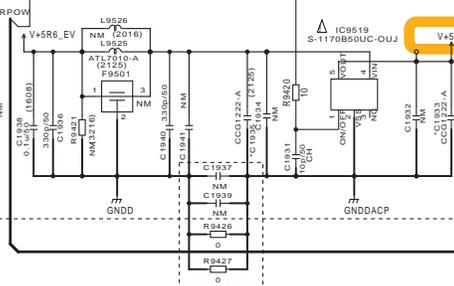

CONT_GA
D2/10-9/10

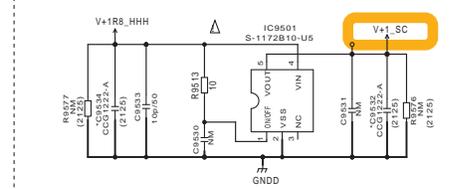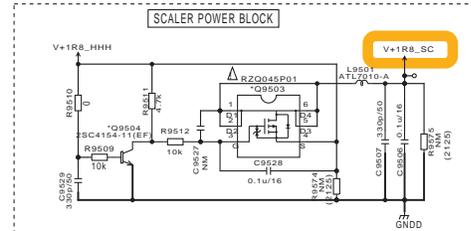


AWX1200: FY13 AVR SEL-LOW
AWX9957: VSX-1127/CU, VSX-1122/SY/DL
AWX1223: VSX-1027/CU, VSX-922/SY/F/DL/PW/A, VSA-922/J
AWX1228: VSX-1122/CU, VSX-60/U

The Δ mark found on some component parts should be replaced with same parts (safety regulation authorized) of identical designation.
△印の部品は、指定部品（安全規格適合部品）を必ず使用すること。

10.15 IR ASSY

D4/10 CN901

A
B
C
D
E
F

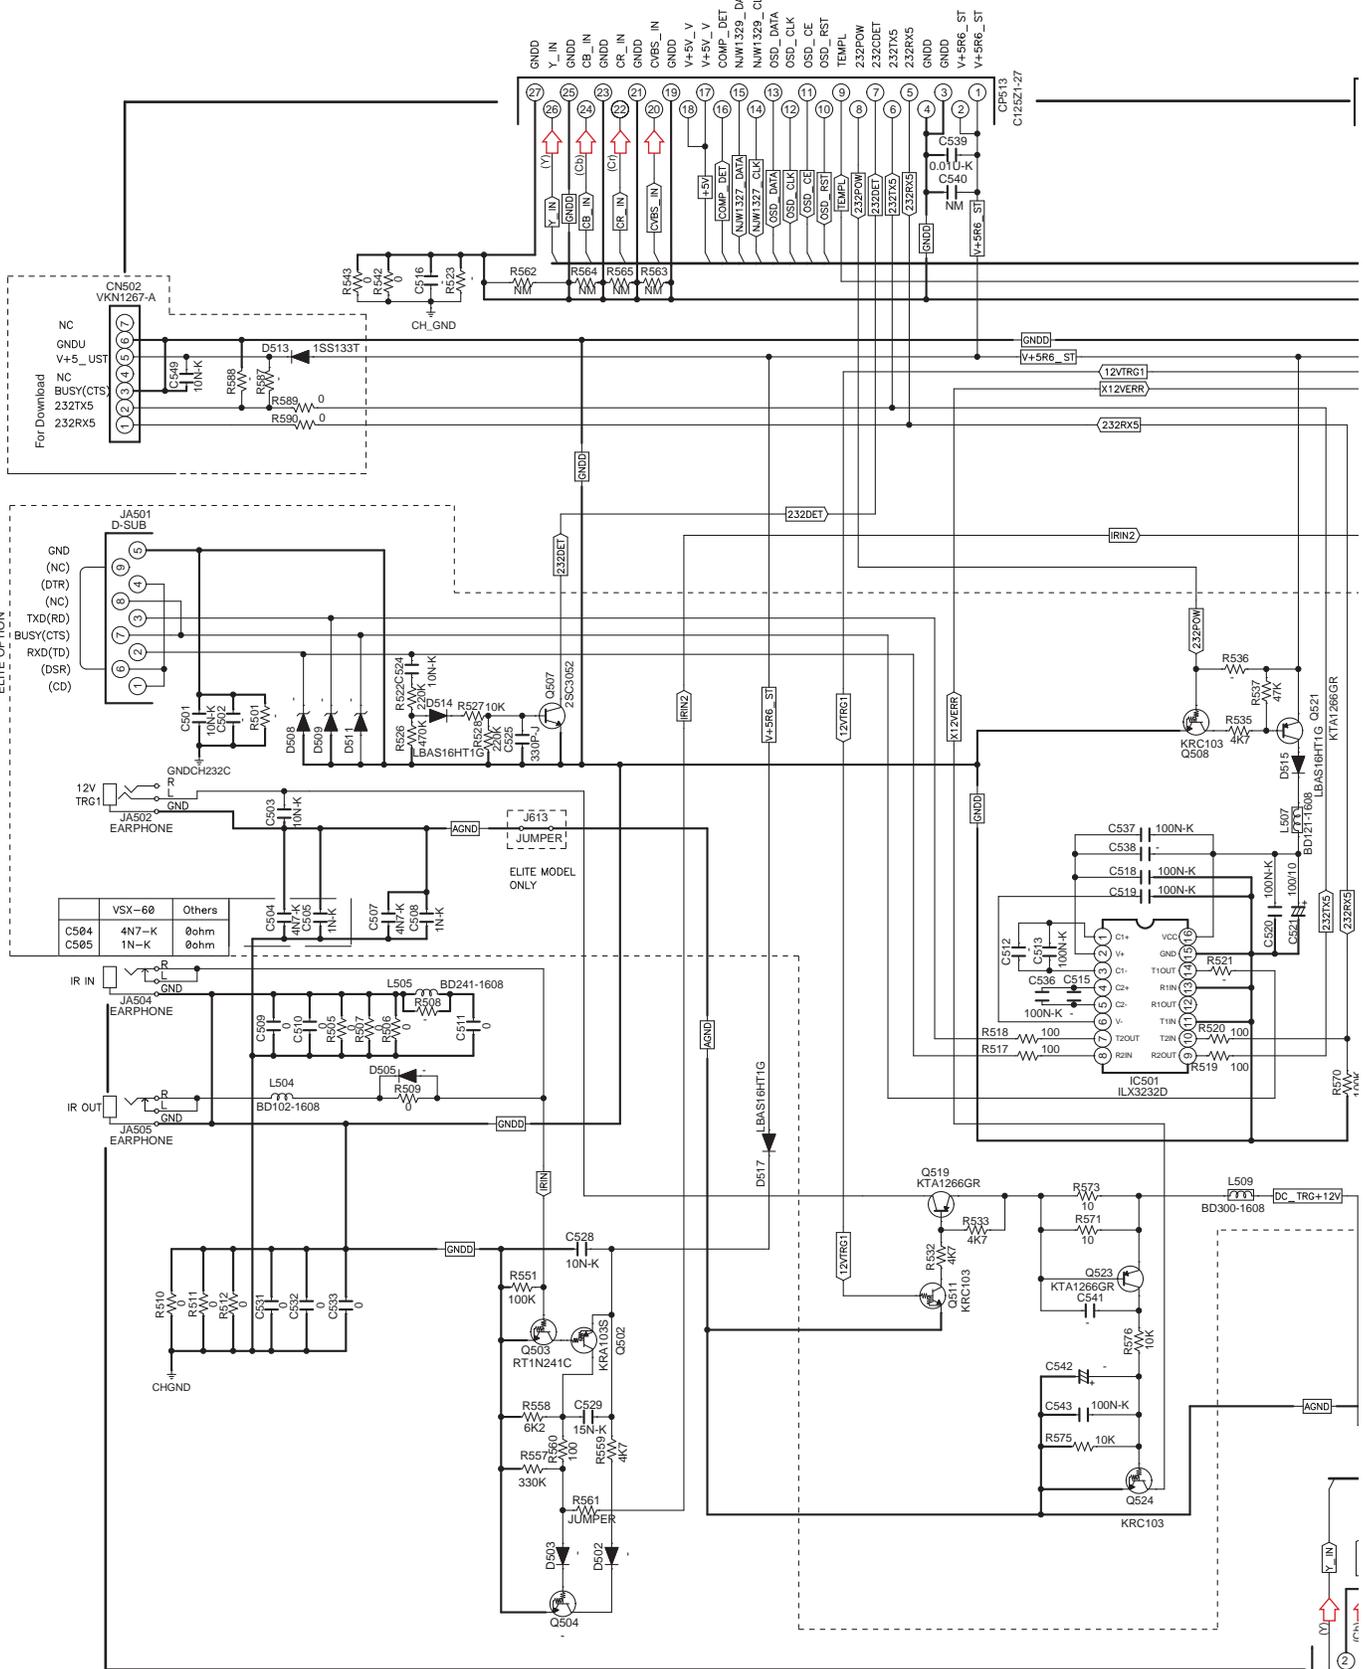

- : Video Signal Route
- : Video Signal Route (Y)
- : Video Signal Route (Cb)
- : Video Signal Route (Cr)

C550	
VSX-60	OTHER
10N-K	0




D 2/10 CN603

D 2/10 CN607

E IR ASSY

(VSX-1127-K, VSX-1122-K, VSX-1027-K
: 7028071771010-IL)
(VSX-60: 7028071771040-IL)

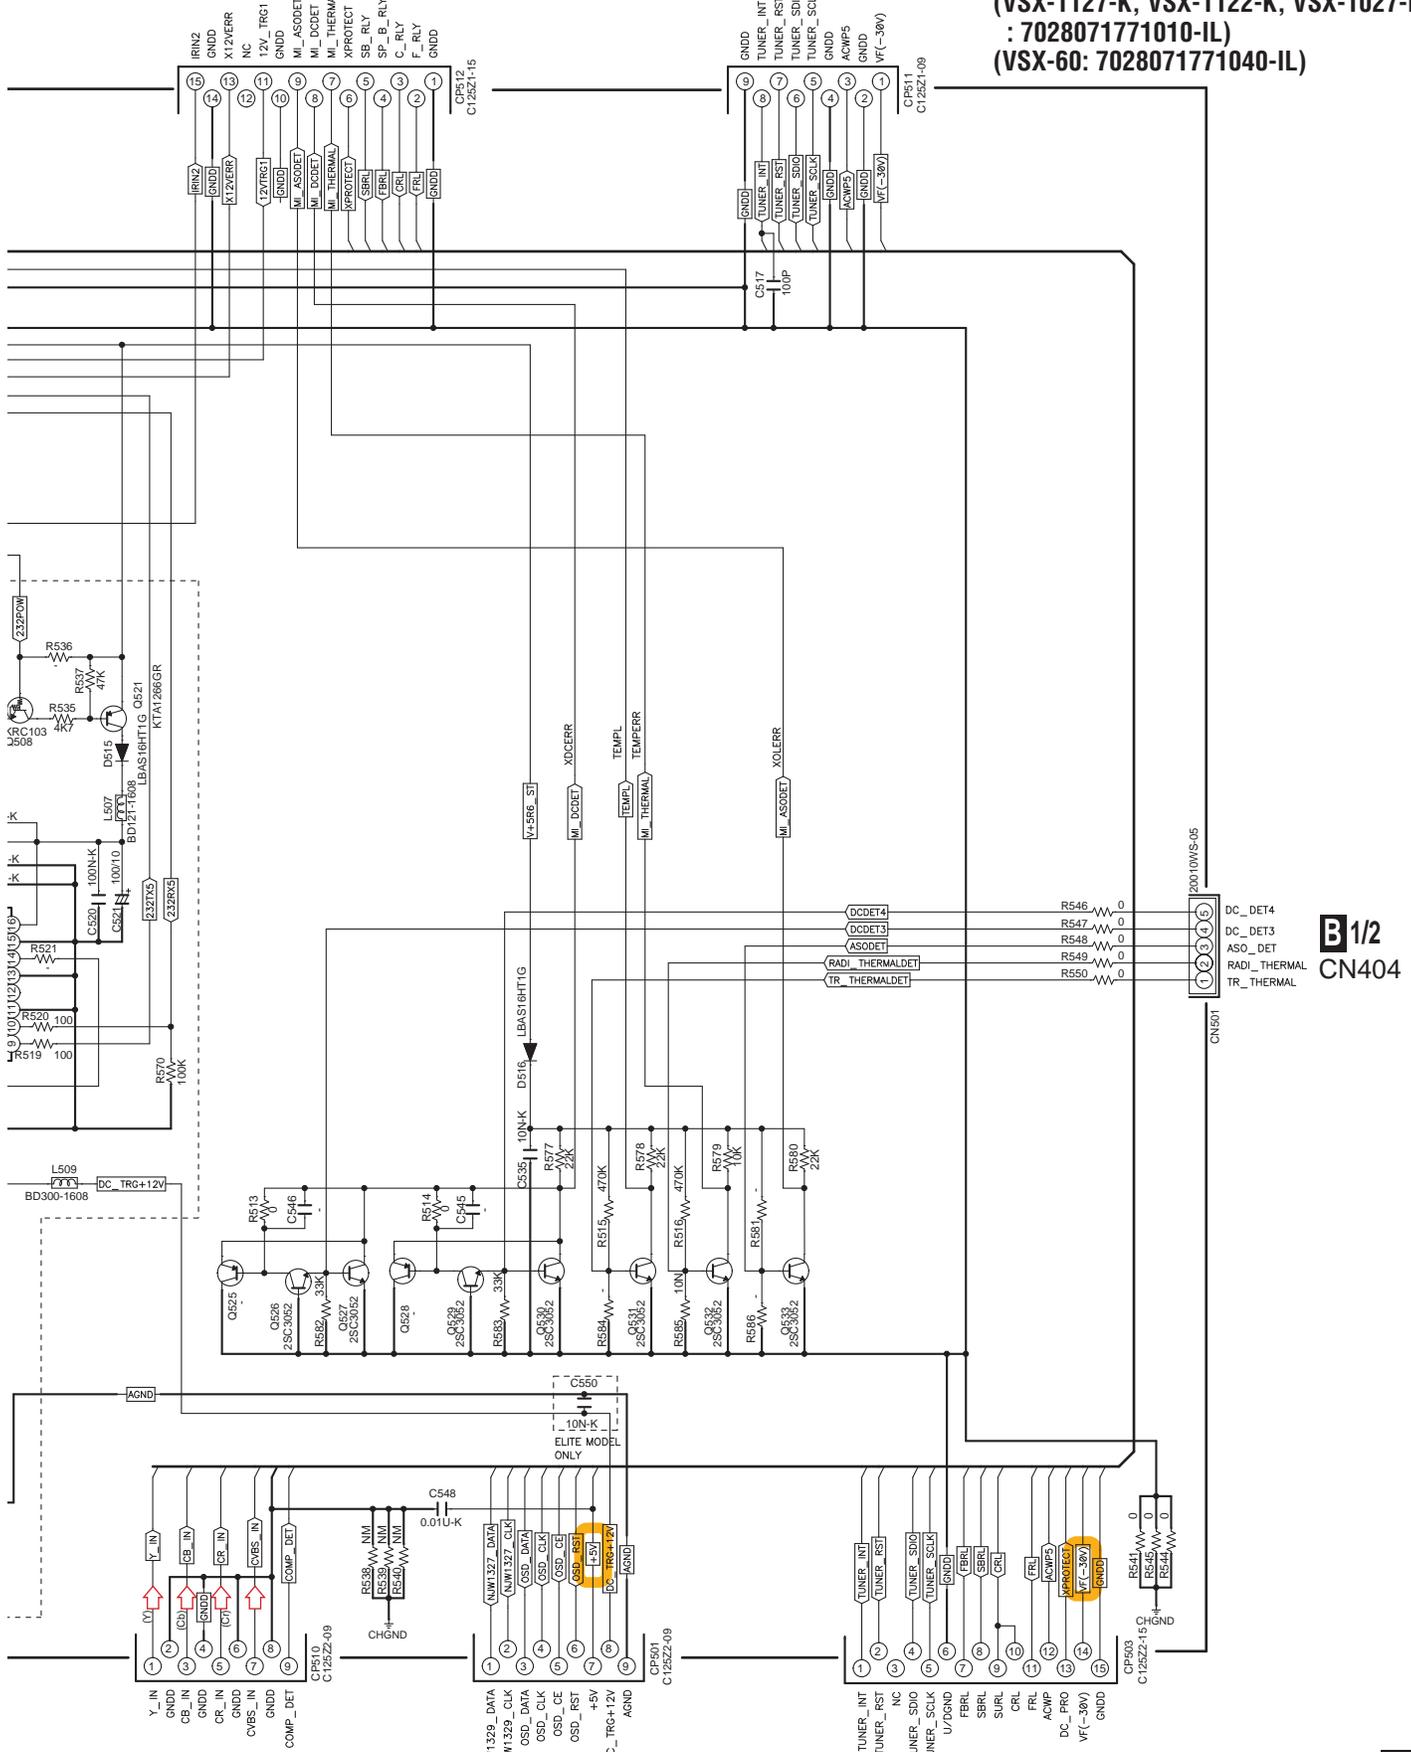

B 1/2 CN404

C CP18

C CP16

C CP12


E

VSX-1127-K

10.16 VIDEO ASSY

1 2 3 4


A
B
C
D
E
F

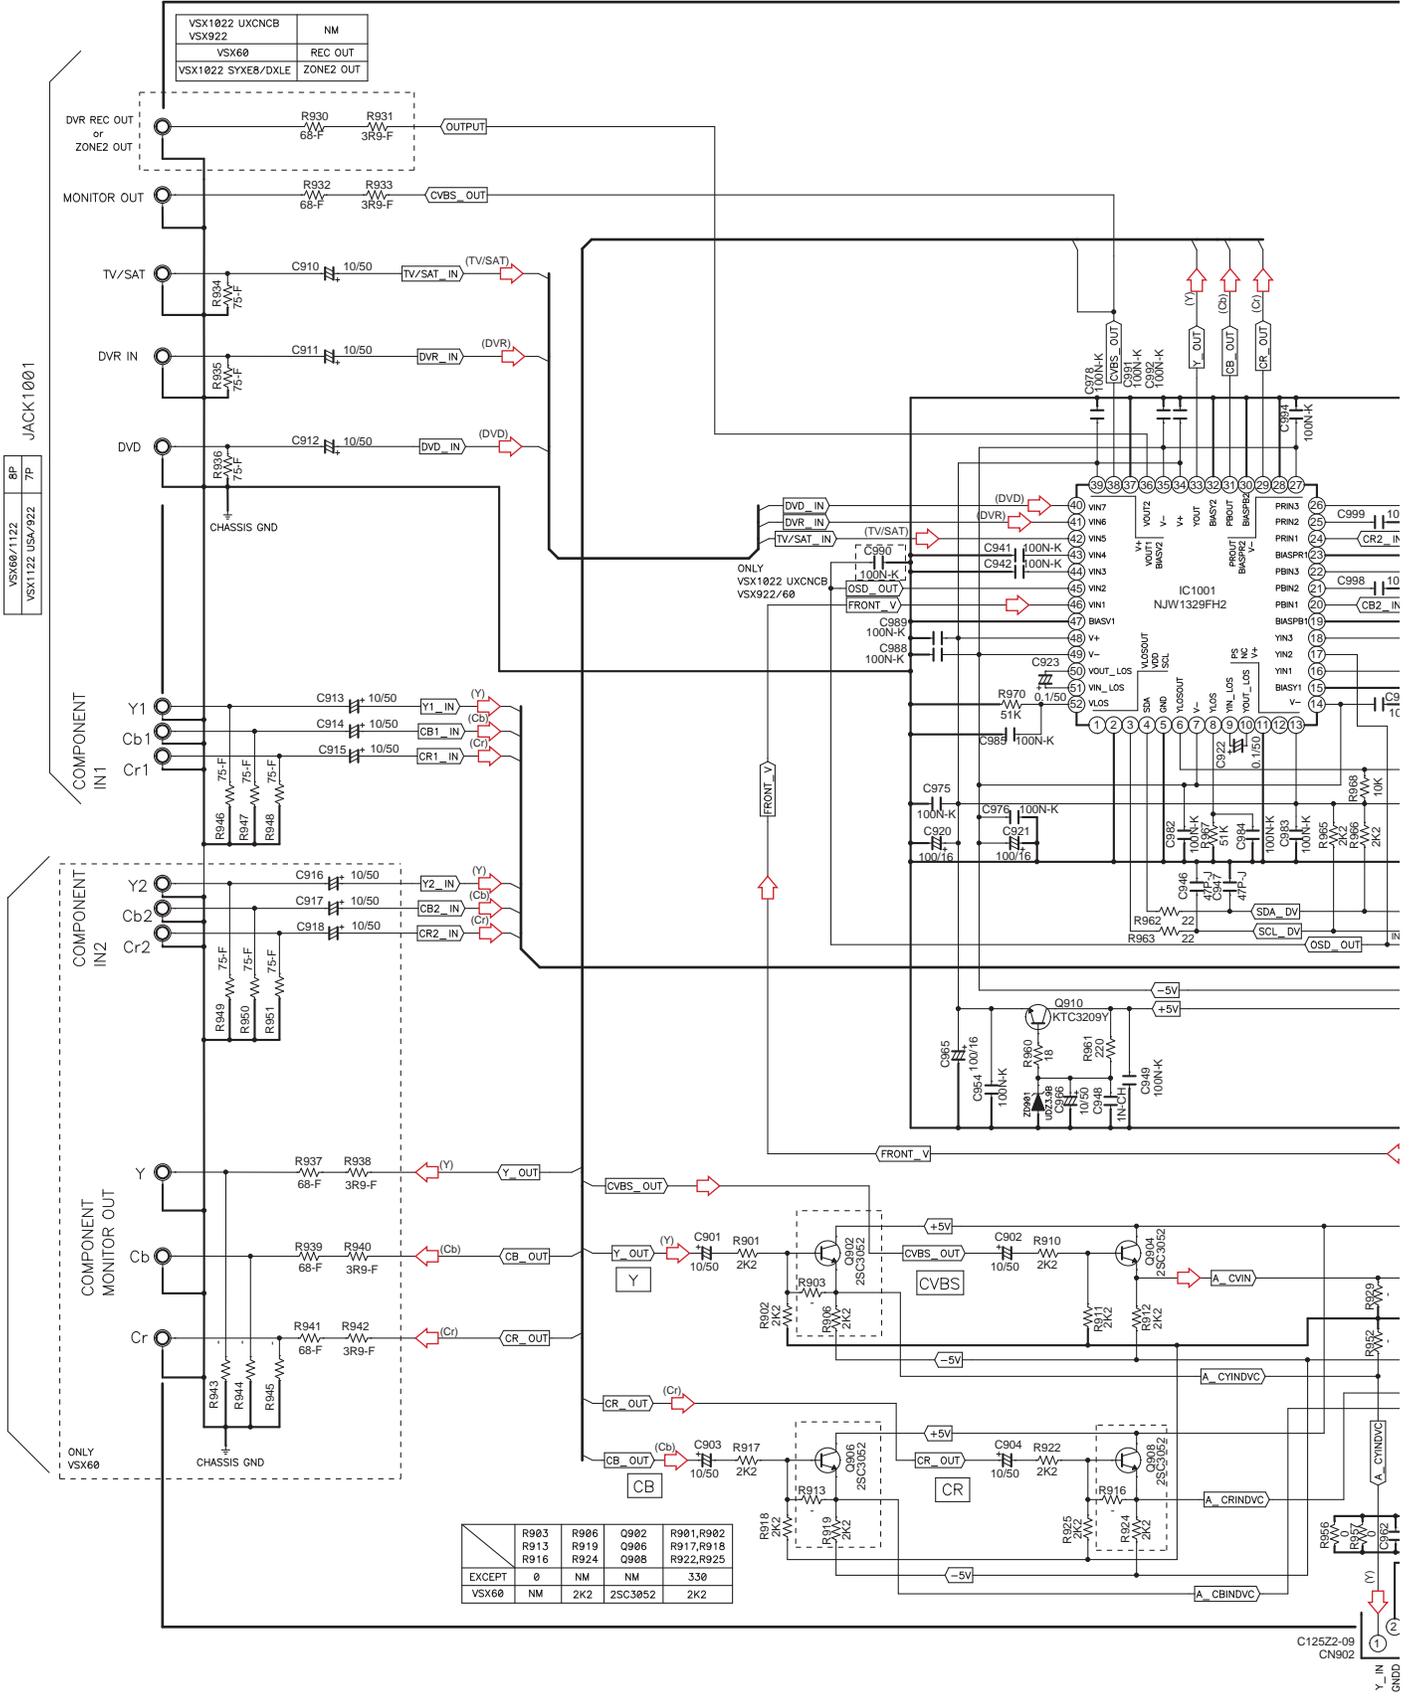

1 2 3 4

10.17 BRG ASSY

D 7/10 CN1801

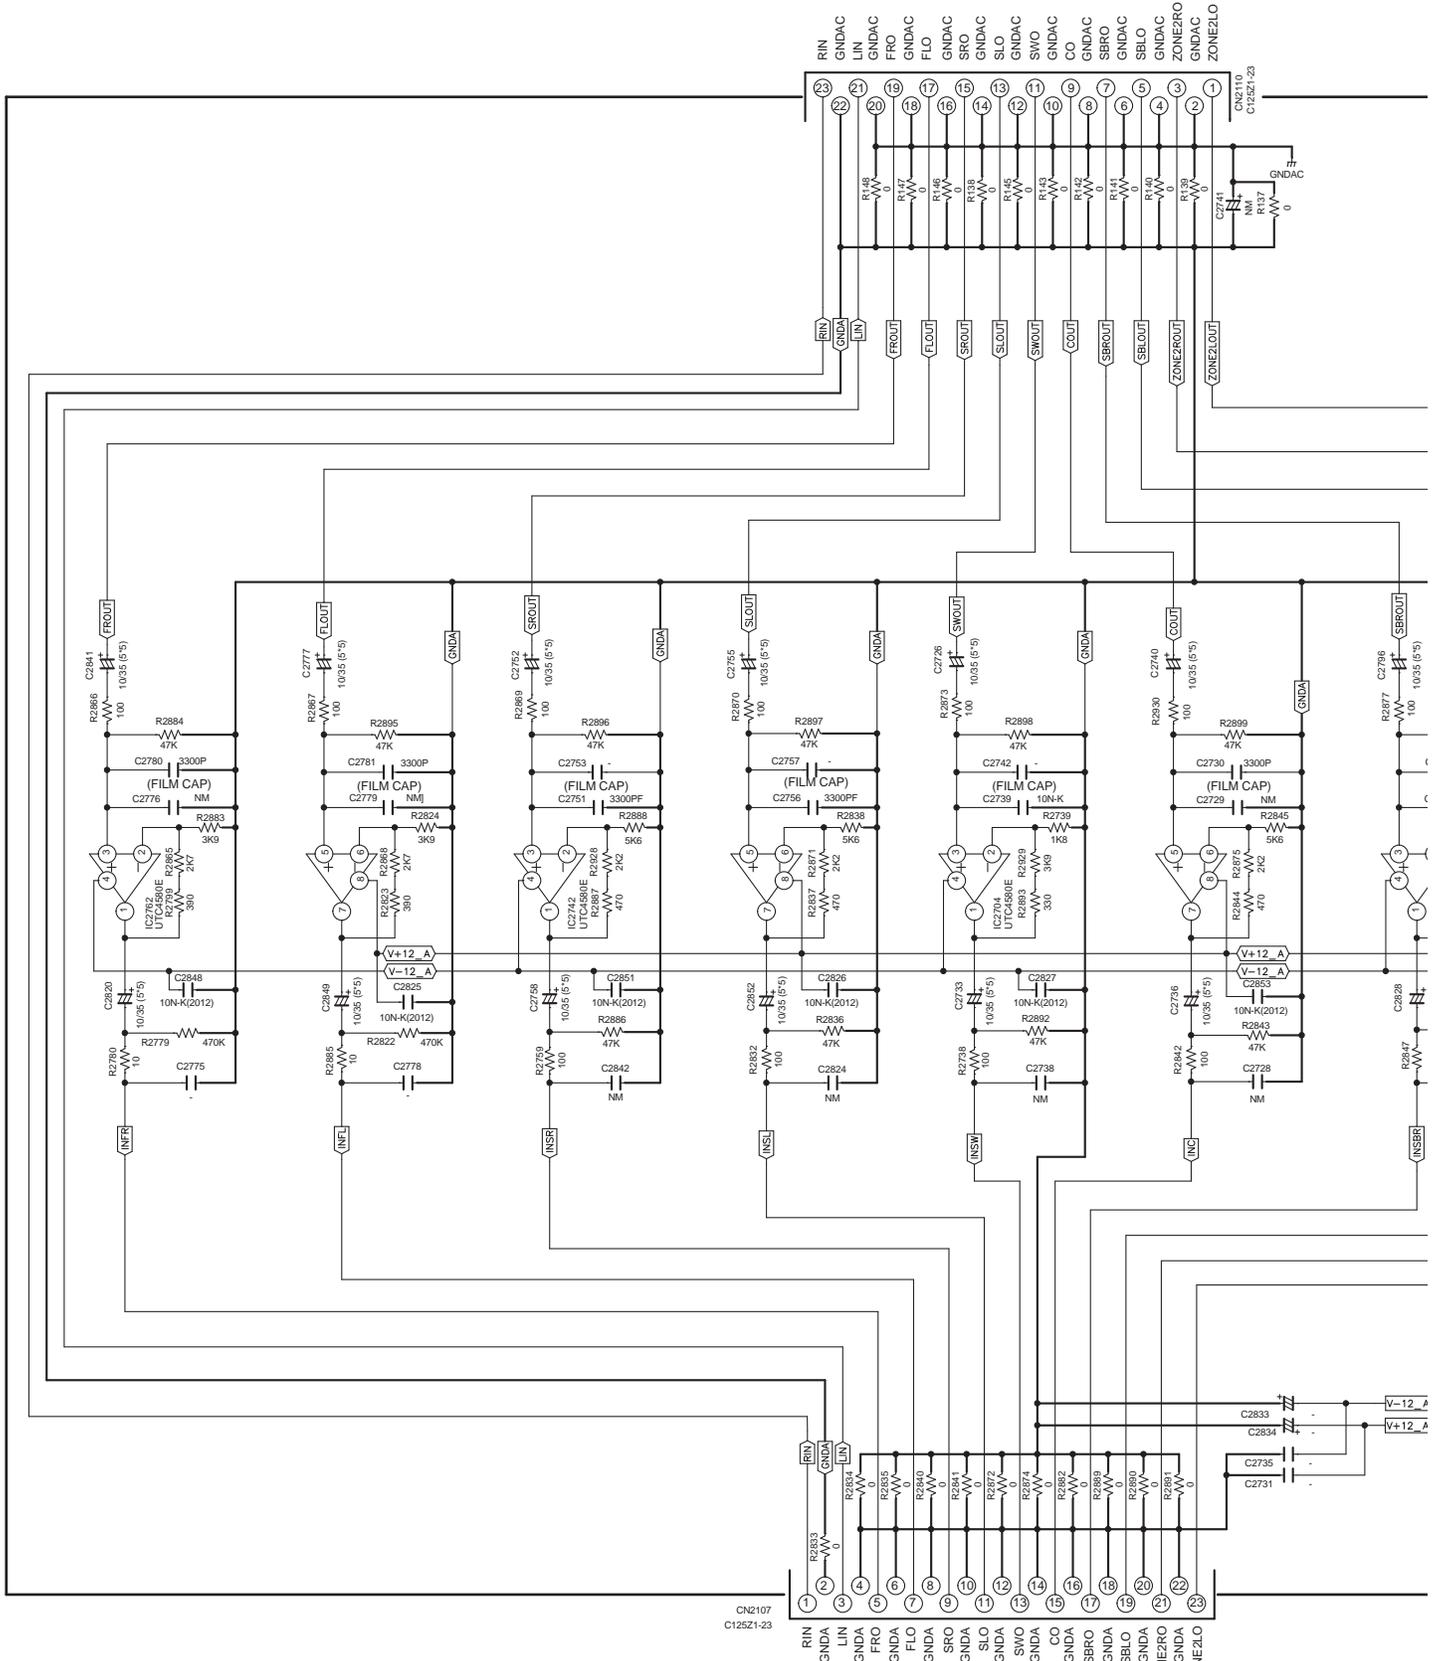


A CP12



BRG ASSY

(VSX-1127-K, VSX-1122-K, VSX-60: 7028071773040-IL)
(VSX-1027-K: 7028071773070-IL)

D 7/10 CN1504

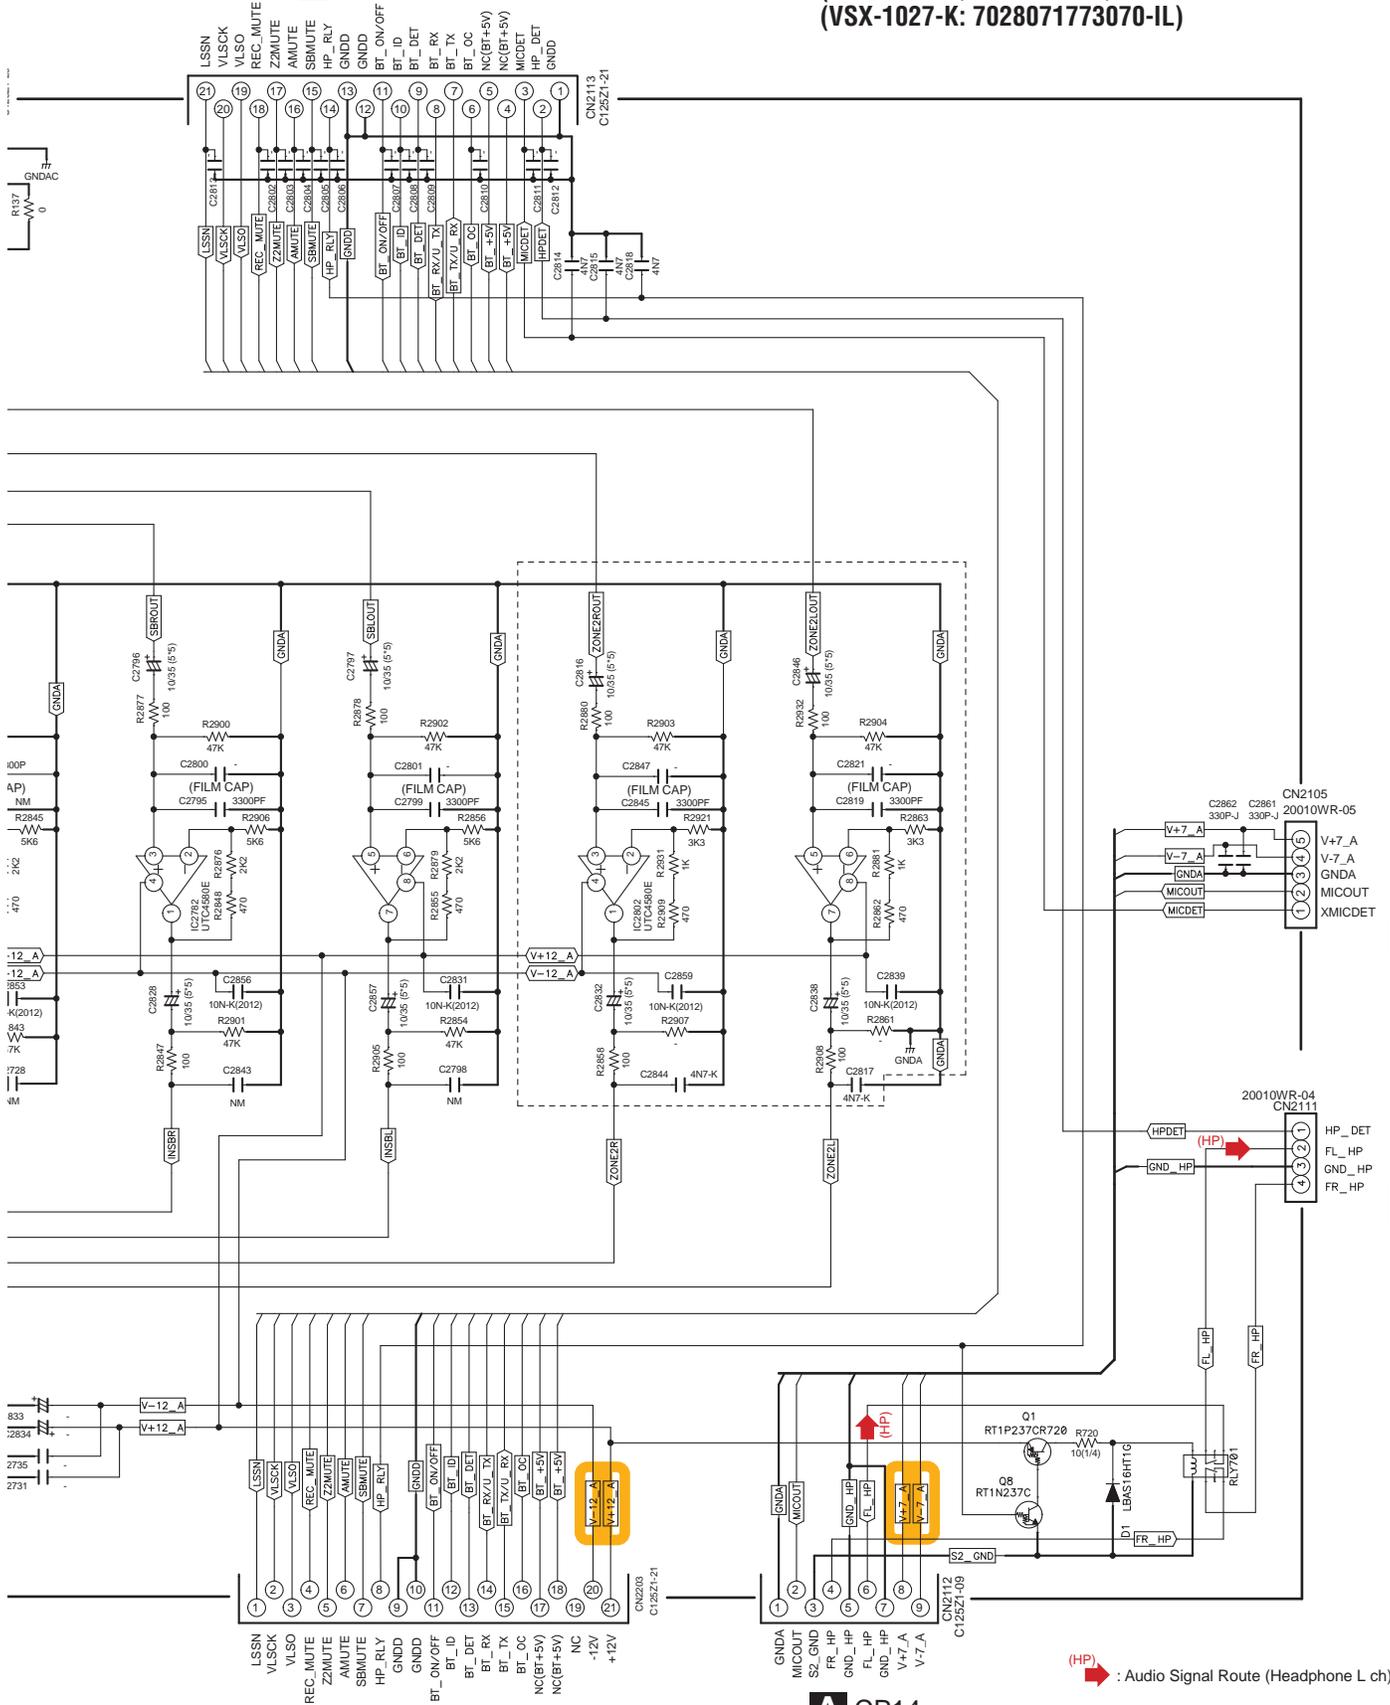

J CN3653

L CN721

A CP13


A CP14

VSX-1127-K

(HP) : Audio Signal Route (Headphone L ch)

ASSY (VSX-1127-K: 7028071721050-IL)
(VSX-1122-K: 7028071721010-IL)
(VSX-60: 7028071721040-IL)
(VSX-1027-K: 7028071721060-IL)

D2/10 CN601

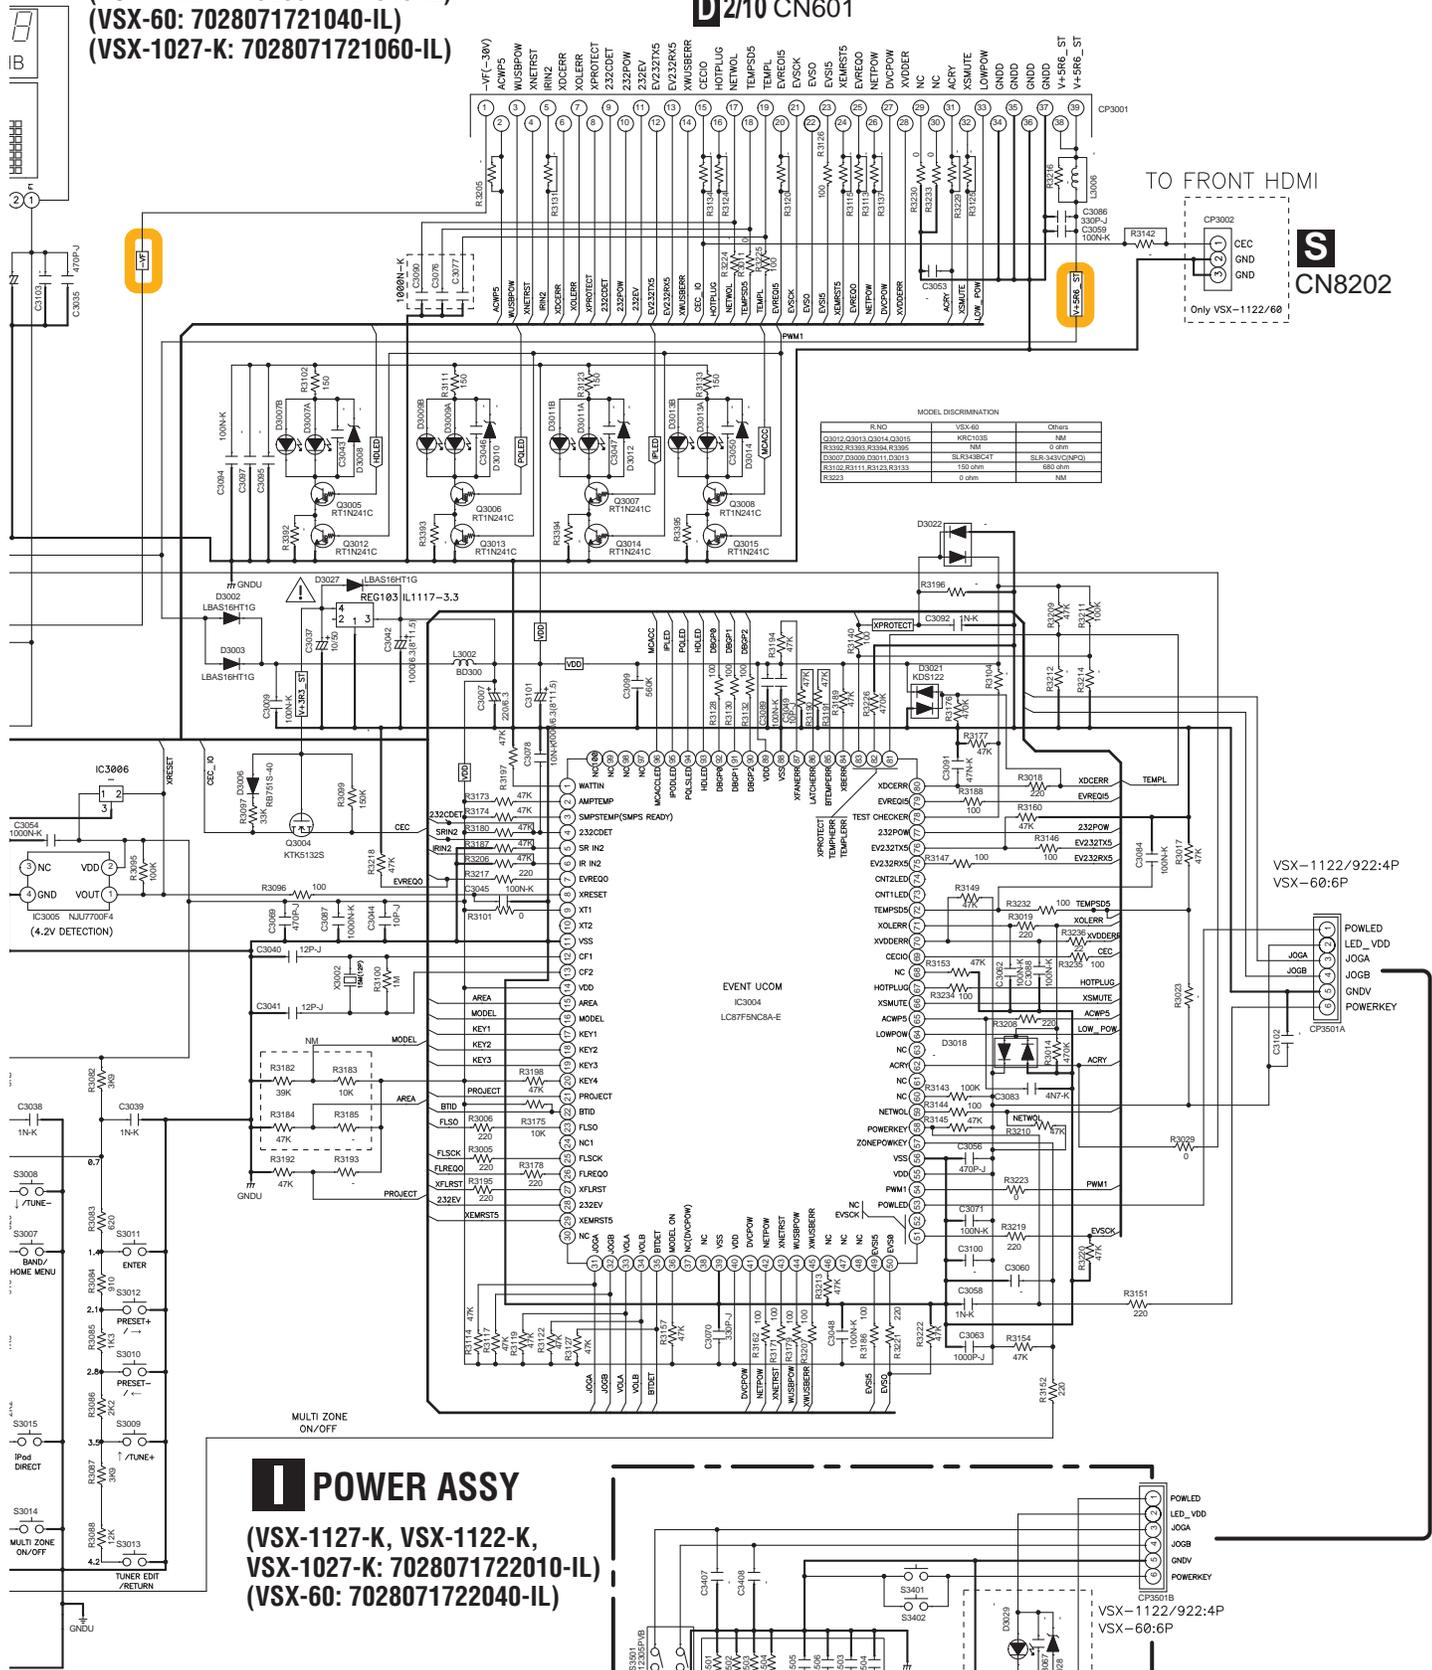

TO FRONT HDMI


CP3002
CEC
GND
GND
Only VSX-1122/60

MODEL DISCRIMINATION

IRNO	VSX-60	Others
R3102	D3002	0 ohm
R3103	D3003	0 ohm
R3104	D3004	0 ohm
R3105	D3005	0 ohm
R3106	D3006	0 ohm
R3107	D3007	0 ohm
R3108	D3008	0 ohm
R3109	D3009	0 ohm
R3110	D3010	0 ohm
R3111	D3011	0 ohm
R3112	D3012	0 ohm
R3113	D3013	0 ohm
R3114	D3014	0 ohm
R3115	D3015	0 ohm
R3116	D3016	0 ohm
R3117	D3017	0 ohm
R3118	D3018	0 ohm
R3119	D3019	0 ohm
R3120	D3020	0 ohm
R3121	D3021	0 ohm
R3122	D3022	0 ohm
R3123	D3023	0 ohm
R3124	D3024	0 ohm
R3125	D3025	0 ohm
R3126	D3026	0 ohm
R3127	D3027	0 ohm
R3128	D3028	0 ohm
R3129	D3029	0 ohm
R3130	D3030	0 ohm
R3131	D3031	0 ohm
R3132	D3032	0 ohm
R3133	D3033	0 ohm
R3134	D3034	0 ohm
R3135	D3035	0 ohm
R3136	D3036	0 ohm
R3137	D3037	0 ohm
R3138	D3038	0 ohm
R3139	D3039	0 ohm
R3140	D3040	0 ohm
R3141	D3041	0 ohm
R3142	D3042	0 ohm
R3143	D3043	0 ohm
R3144	D3044	0 ohm
R3145	D3045	0 ohm
R3146	D3046	0 ohm
R3147	D3047	0 ohm
R3148	D3048	0 ohm
R3149	D3049	0 ohm
R3150	D3050	0 ohm
R3151	D3051	0 ohm
R3152	D3052	0 ohm
R3153	D3053	0 ohm
R3154	D3054	0 ohm
R3155	D3055	0 ohm
R3156	D3056	0 ohm
R3157	D3057	0 ohm
R3158	D3058	0 ohm
R3159	D3059	0 ohm
R3160	D3060	0 ohm
R3161	D3061	0 ohm
R3162	D3062	0 ohm
R3163	D3063	0 ohm
R3164	D3064	0 ohm
R3165	D3065	0 ohm
R3166	D3066	0 ohm
R3167	D3067	0 ohm
R3168	D3068	0 ohm
R3169	D3069	0 ohm
R3170	D3070	0 ohm
R3171	D3071	0 ohm
R3172	D3072	0 ohm
R3173	D3073	0 ohm
R3174	D3074	0 ohm
R3175	D3075	0 ohm
R3176	D3076	0 ohm
R3177	D3077	0 ohm
R3178	D3078	0 ohm
R3179	D3079	0 ohm
R3180	D3080	0 ohm
R3181	D3081	0 ohm
R3182	D3082	0 ohm
R3183	D3083	0 ohm
R3184	D3084	0 ohm
R3185	D3085	0 ohm
R3186	D3086	0 ohm
R3187	D3087	0 ohm
R3188	D3088	0 ohm
R3189	D3089	0 ohm
R3190	D3090	0 ohm
R3191	D3091	0 ohm
R3192	D3092	0 ohm
R3193	D3093	0 ohm
R3194	D3094	0 ohm
R3195	D3095	0 ohm
R3196	D3096	0 ohm
R3197	D3097	0 ohm
R3198	D3098	0 ohm
R3199	D3099	0 ohm
R3200	D3100	0 ohm

VSX-1122/922:4P
VSX-60:6P

POWER ASSY
(VSX-1127-K, VSX-1122-K,
VSX-1027-K: 7028071722010-IL)
(VSX-60: 7028071722040-IL)

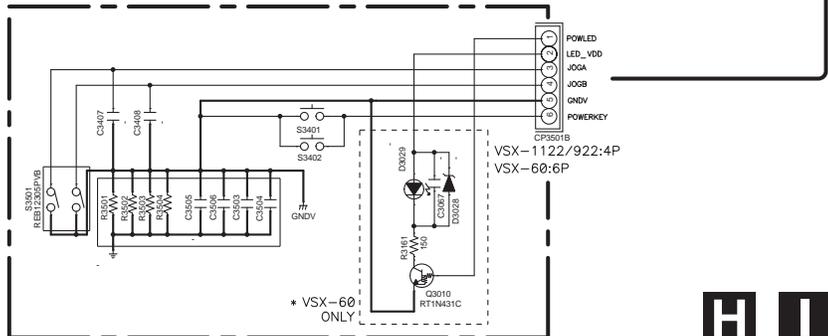


* VSX-60 ONLY

VSX-1127-K




10.19 MIC, FVIDEO and HP ASSYS


J MIC ASSY (7028071723040-IL)

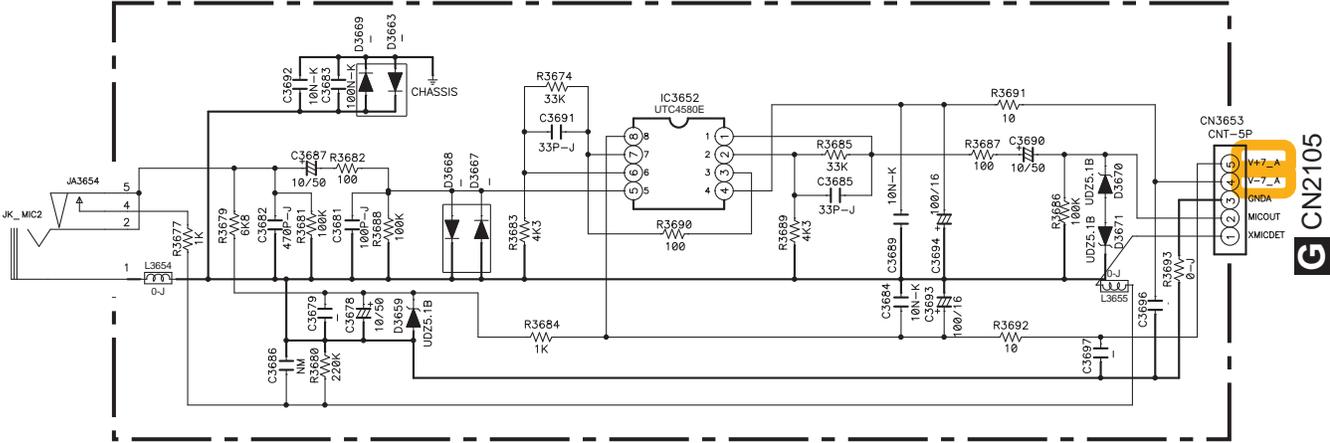

K FVIDEO ASSY (7028071724040-IL)

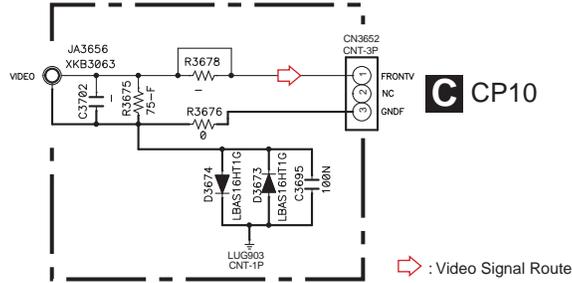

L HP ASSY (7028071725040-IL)

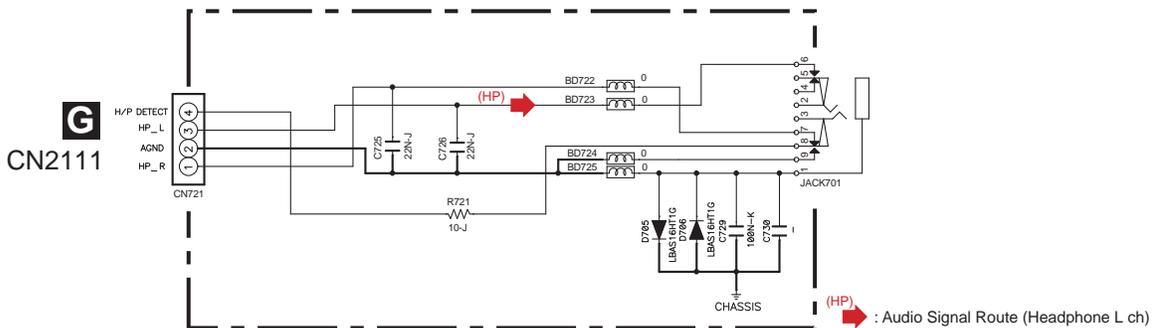


10.20 G-L, G-R, WG-A, WG-B, CCG and BTCNT ASSYS

M G-L ASSY (7028071713040-IL)



O WG-A ASSY (7028071715040-IL)

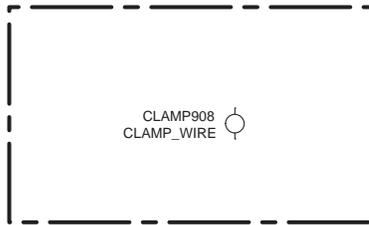


Q CCG ASSY (7028071775040-IL)




N G-R ASSY (7028071714040-IL)



P WG-B ASSY (7028071716040-IL)

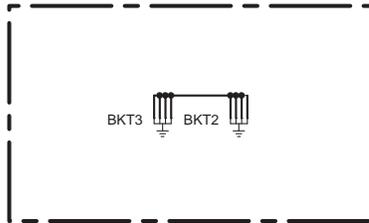

R BT CNT ASSY (7028071774040-IL)

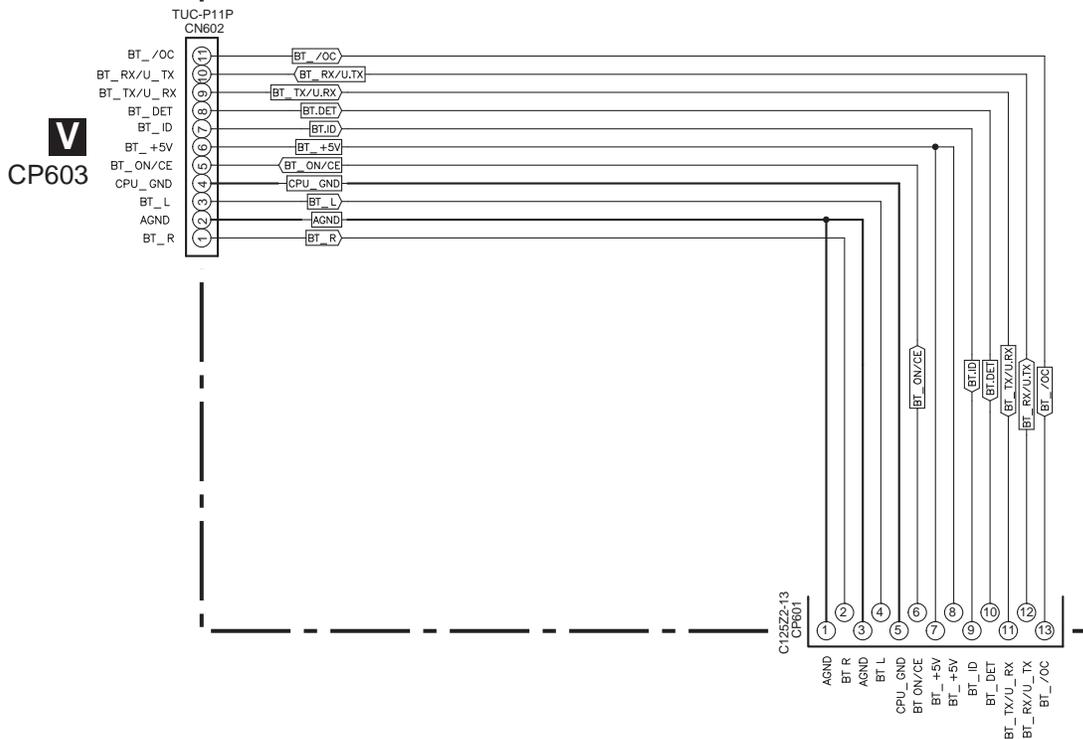

C CP7

M N O P Q R

10.21 FHDMI and F-USB ASSYS

A

B


C

D


E

F

S FHDMI ASSY (7028071791040-IL) (VSX-1127-K, VSX-1122-K, VSX-60 ONLY)

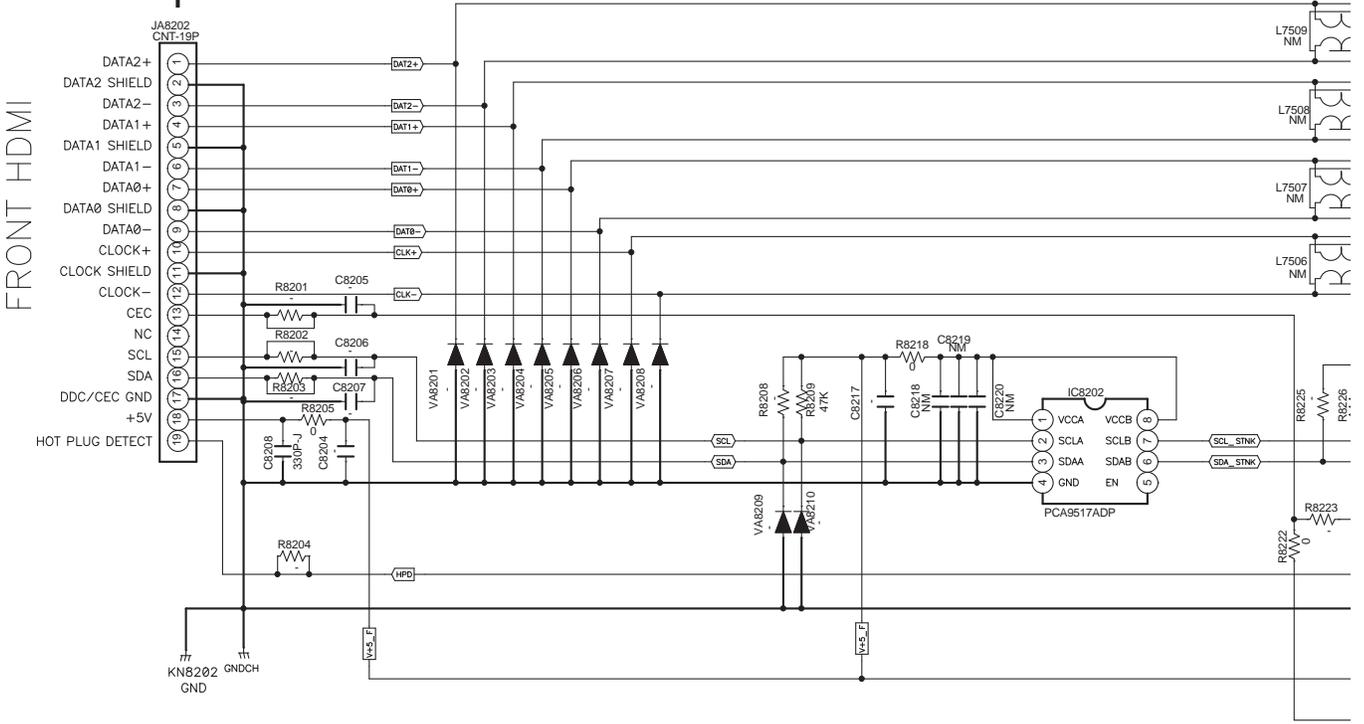

T F-USB ASSY (7028071761020-IL)

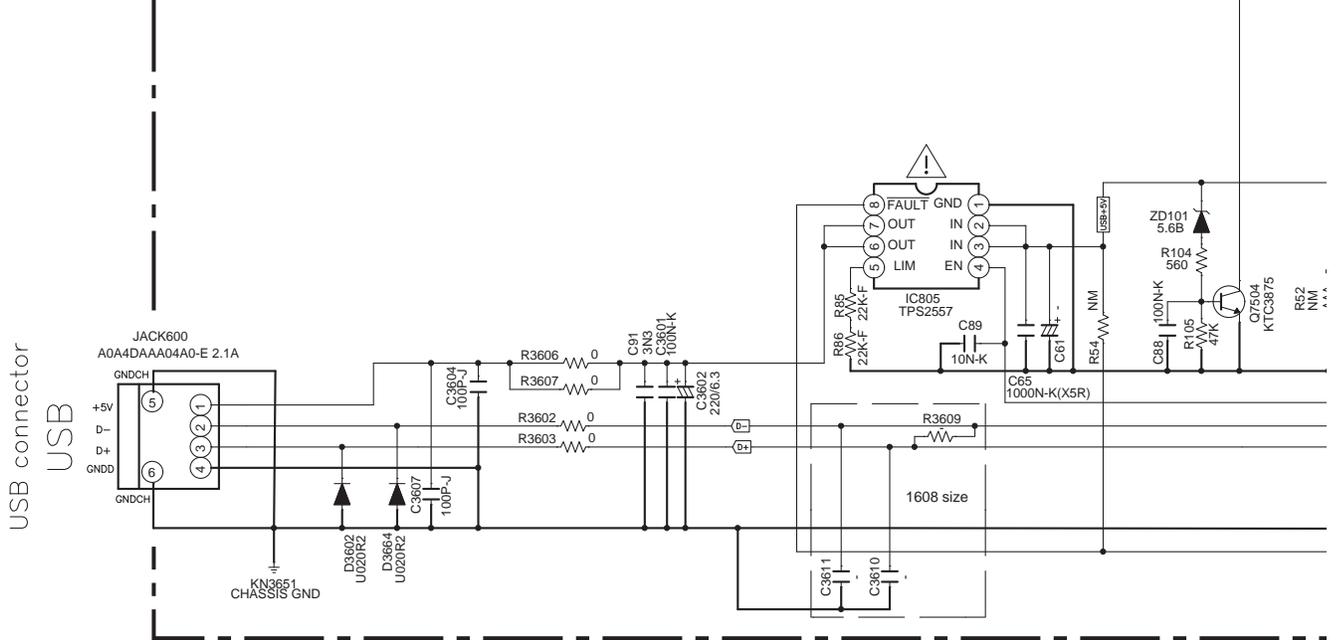


S T

1

2


3

4

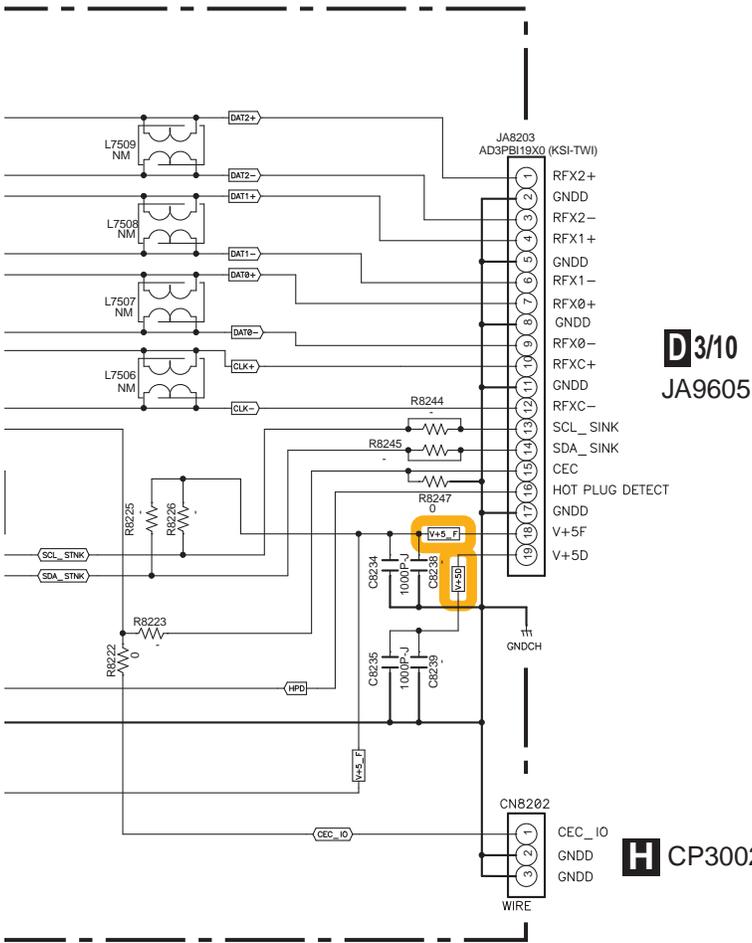

D3/10
JA9605

H CP3002

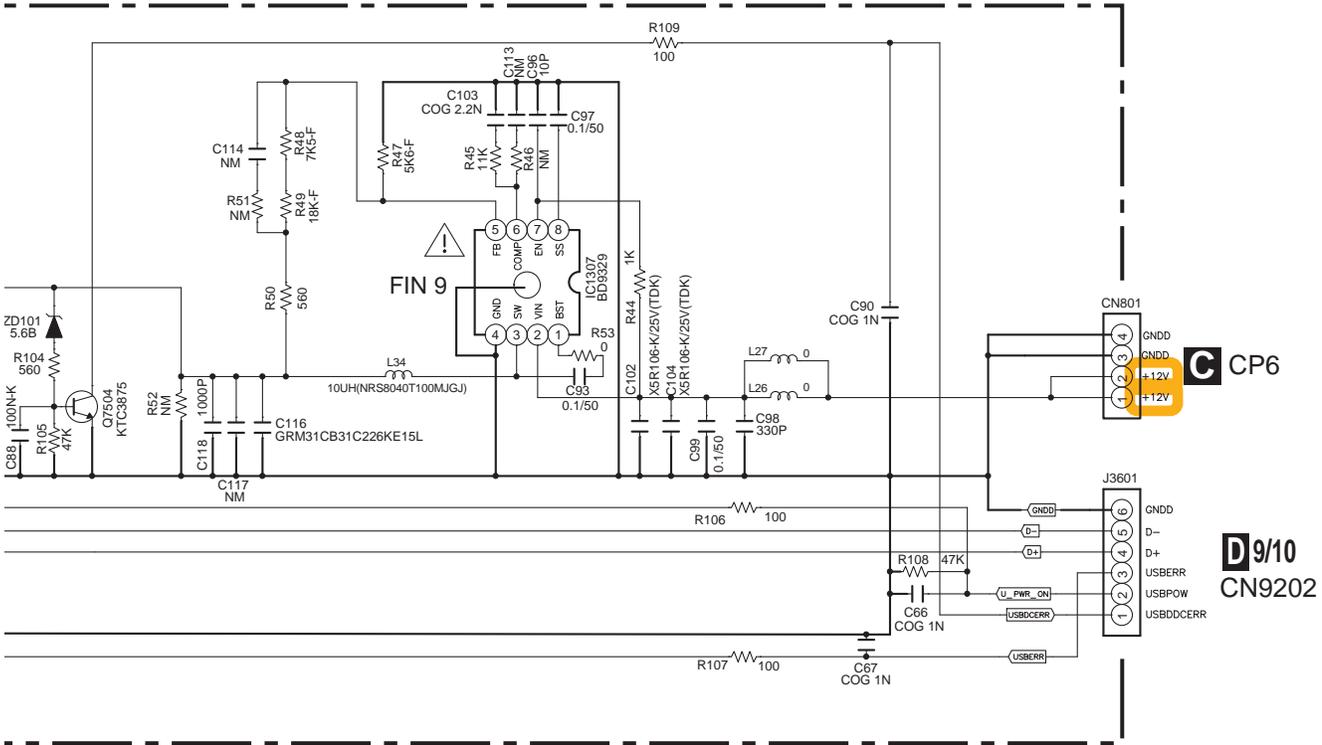


C CP6

D9/10
CN9202

10.22 SMPS ASSY

A
B
C
D
E
F

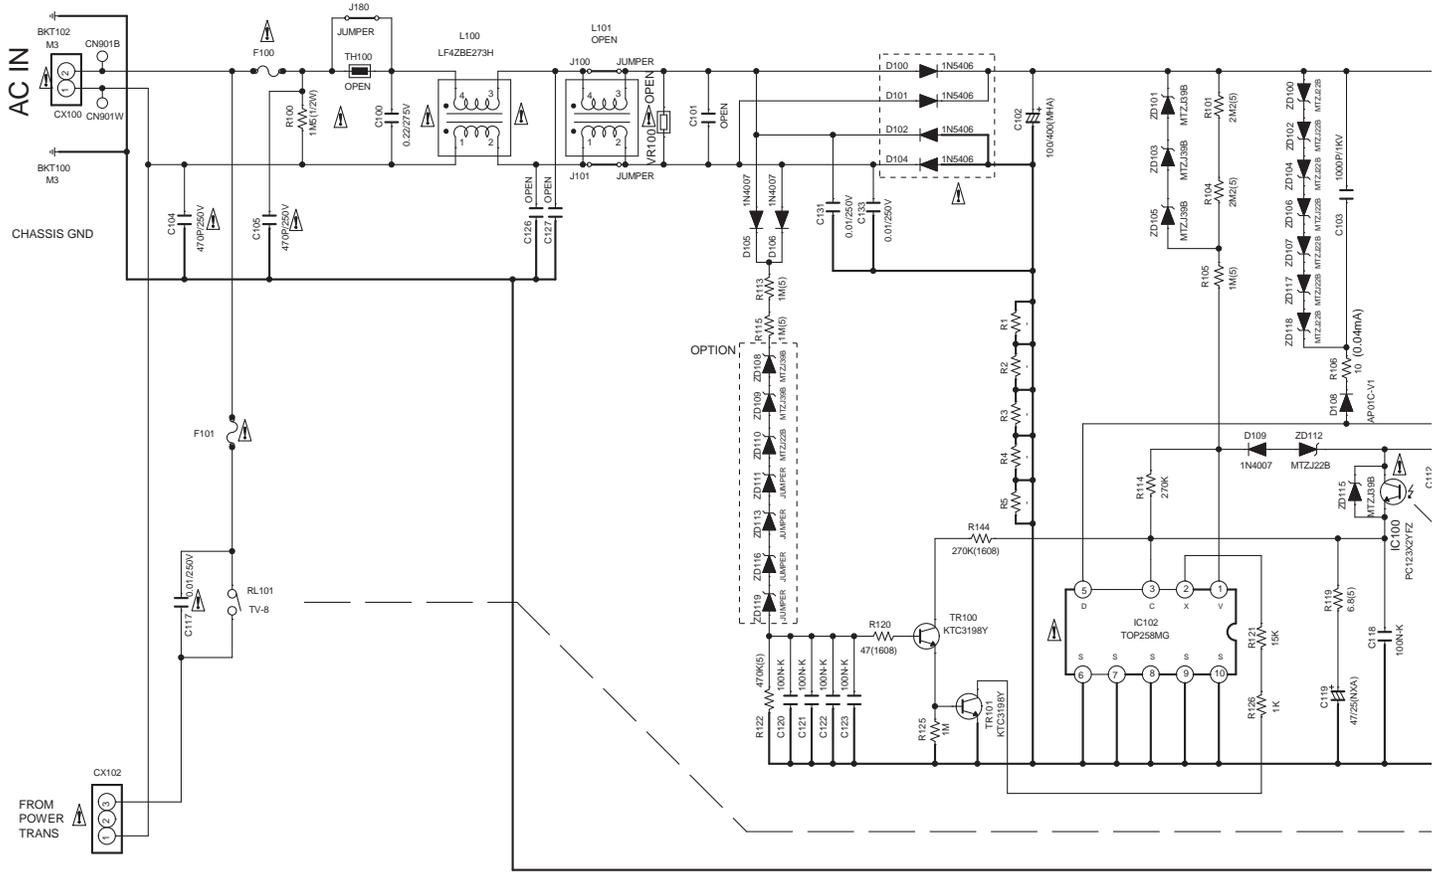

* OPTION TABLE

* FUSE OPTION

USA/JAPAN/TAIWAN		OTHER	
F100	F101	F100	F101
3.15A	8A	3.15A	6.3A

	ZD108	ZD109	ZD110	ZD111	ZD113	ZD116	ZD119	ZD101	ZD103	ZD105	R101	R104
USA	MTZJ39B	MTZJ39B	MTZJ22B	JUMPER	JUMPER	JUMPER	JUMPER	MTZJ39B	MTZJ39B	MTZJ39B	2M2 (5)	2M2 (5)
OTHER	1M (5)	1M (5)	MTZJ39B	MTZJ39B	MTZJ39B	MTZJ39B	MTZJ39B	OPEN	OPEN	OPEN	OPEN	OPEN
JAPAN	MTZJ39B	MTZJ39B	JUMPER	JUMPER	JUMPER	JUMPER	JUMPER	MTZJ39B	MTZJ39B	MTZJ39B	2M2 (5)	2M2 (5)
TAIWAN	MTZJ39B	MTZJ39B	MTZJ22B	JUMPER	JUMPER	JUMPER	JUMPER	MTZJ39B	MTZJ39B	MTZJ39B	2M2 (5)	2M2 (5)


	VSX-60	VSX1122/UK	VSX1122/SY.DL	VSX1127	VSX922/SY.DL.FX.PW.JX	VSX922/AX	VS
R5	JUMPER	OPEN	JUMPER	OPEN	JUMPER	OPEN	C
LUG903.904	2P LUG	OPEN	2P LUG	OPEN	2P LUG	OPEN	C
CX100	OPEN	JE202B1T2	OPEN	JE202B1T2	OPEN	JE202B1T2	JE2



U SMPS ASSY

(VSX-1127-K, VSX-1122-K, VSX-1027-K: 7028071772010-IL)
 (VSX-60: 7028071772040-IL)

A
B
C
D
E
F

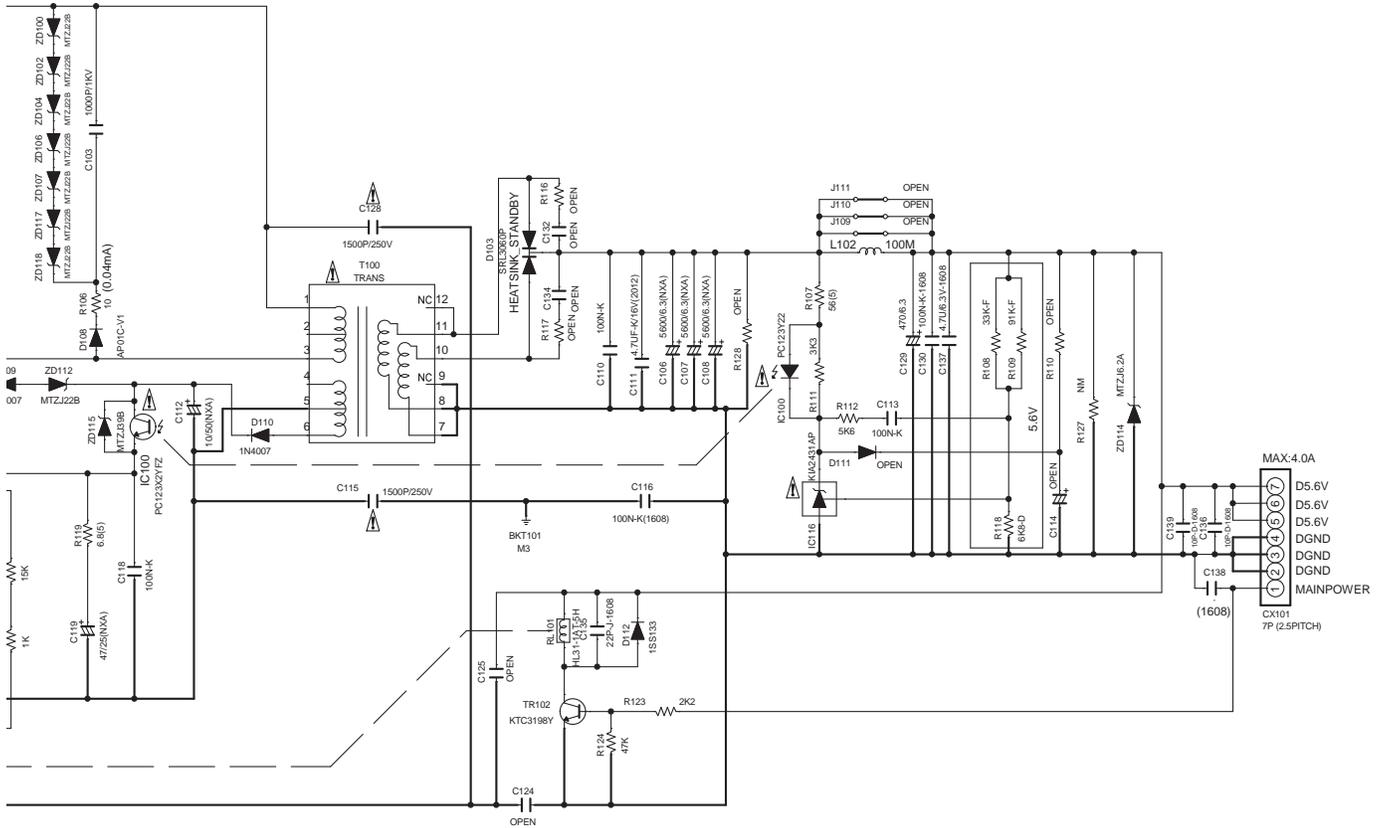

D1010 CN9501

ZD105	R101	R104	R105	R114	R1	R2	R3	R4
1TZJ39B	2M2 (5)	2M2 (5)	1M (5)	270K	JUMPER	OPEN	OPEN	OPEN
OPEN	OPEN	OPEN	OPEN	56K	OPEN	JUMPER	OPEN	OPEN
1TZJ39B	2M2 (5)	2M2 (5)	1M (5)	270K	OPEN	OPEN	JUMPER	OPEN
1TZJ39B	2M2 (5)	2M2 (5)	1M (5)	270K	OPEN	OPEN	OPEN	JUMPER

V _{JX}	VSX922/AX	VSX1027
	OPEN	OPEN
	OPEN	OPEN
	JE202B1T2	JE202B1T2

CAUTION
 FOR CONTINUED PROTECTION AGAINST RISK OF FIRE,
 REPLACE WITH SAME TYPE AND RATINGS OF FUSE.

The mark found on some component parts indicates the importance of the safety factor of the part. Therefore when replacing be sure to use parts of identical designation

NOTES

- Resistor values are indicated in ohms unless otherwise specified
 [k = 1,000 m = 1,000,000]
- Capacitor values are indicated in microfarads unless otherwise specified.
- [p = micro-microfarades]


: These resistor are to be segregated from printed wiring board or other accessible parts.

CAUTION
 Safety precaution to be followed during servicing

- Since those parts marked with are critical parts for safety, use only the one described in the parts list
- Before returning the set to the customer make appropriate leakage current or resistance measurements to determine the exposed parts are properly insulated from the supply circuit.

10.23 BT ASSY

V BT ASSY (7028070231010-IL)

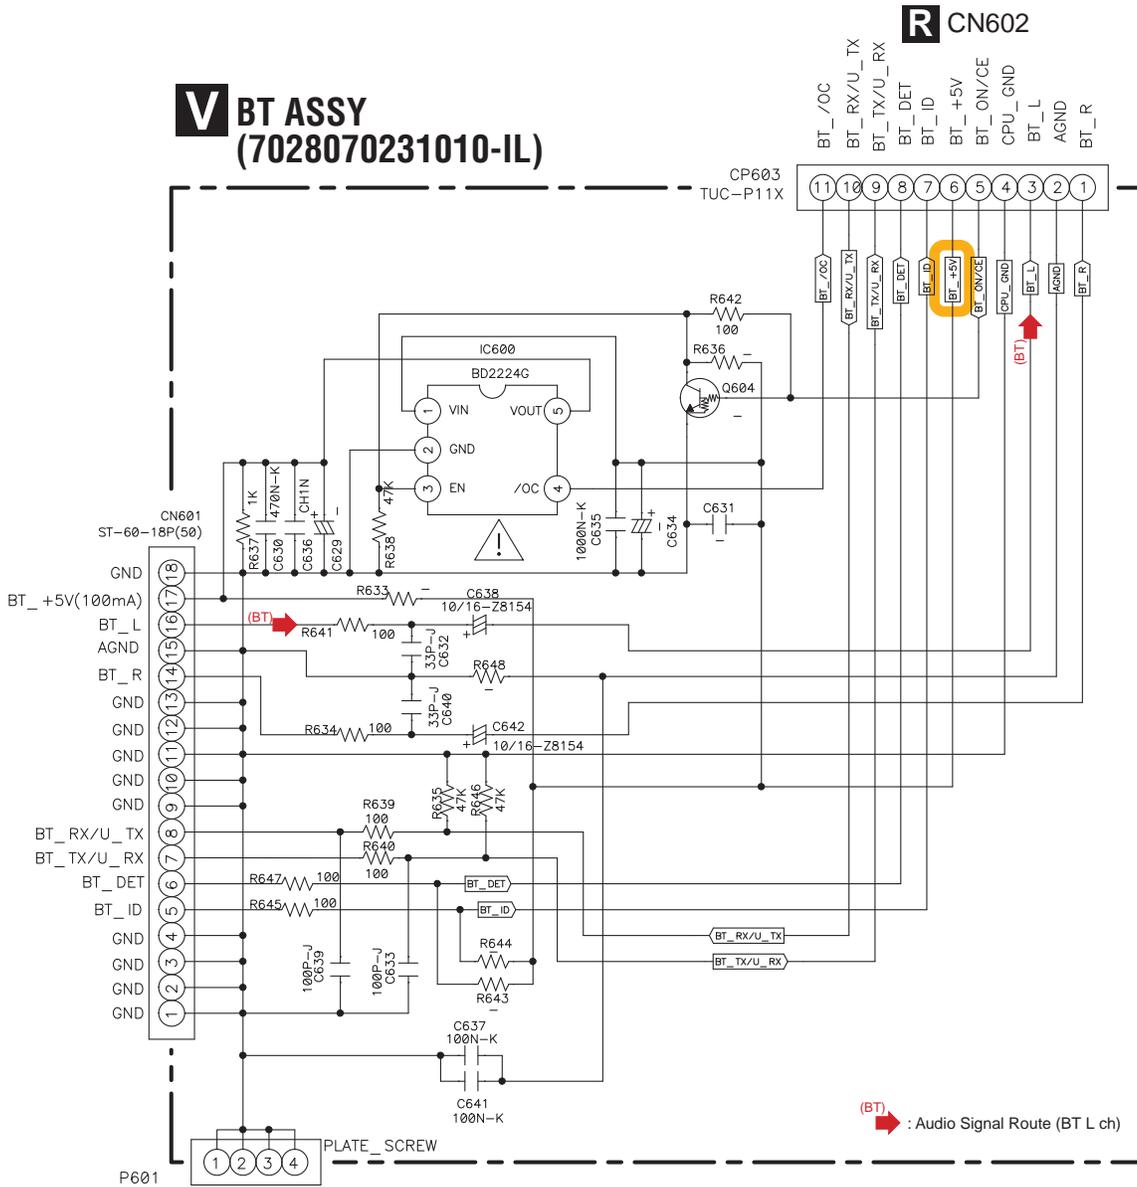



5



6



7



8



A



B



C



D



E



F



5



6

VSX-1127-K



7



8



11. PCB CONNECTION DIAGRAM


11.1 AUDIO ASSY

SIDE A

NOTE FOR PCB DIAGRAMS :


1. The parts mounted on this PCB include all necessary parts for several destinations. For further information for respective destinations, be sure to check with the schematic diagram.

2. View point of PCB diagrams.

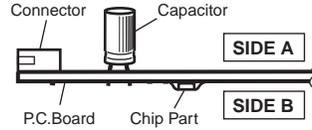

SIDE A


A AUDIO ASSY

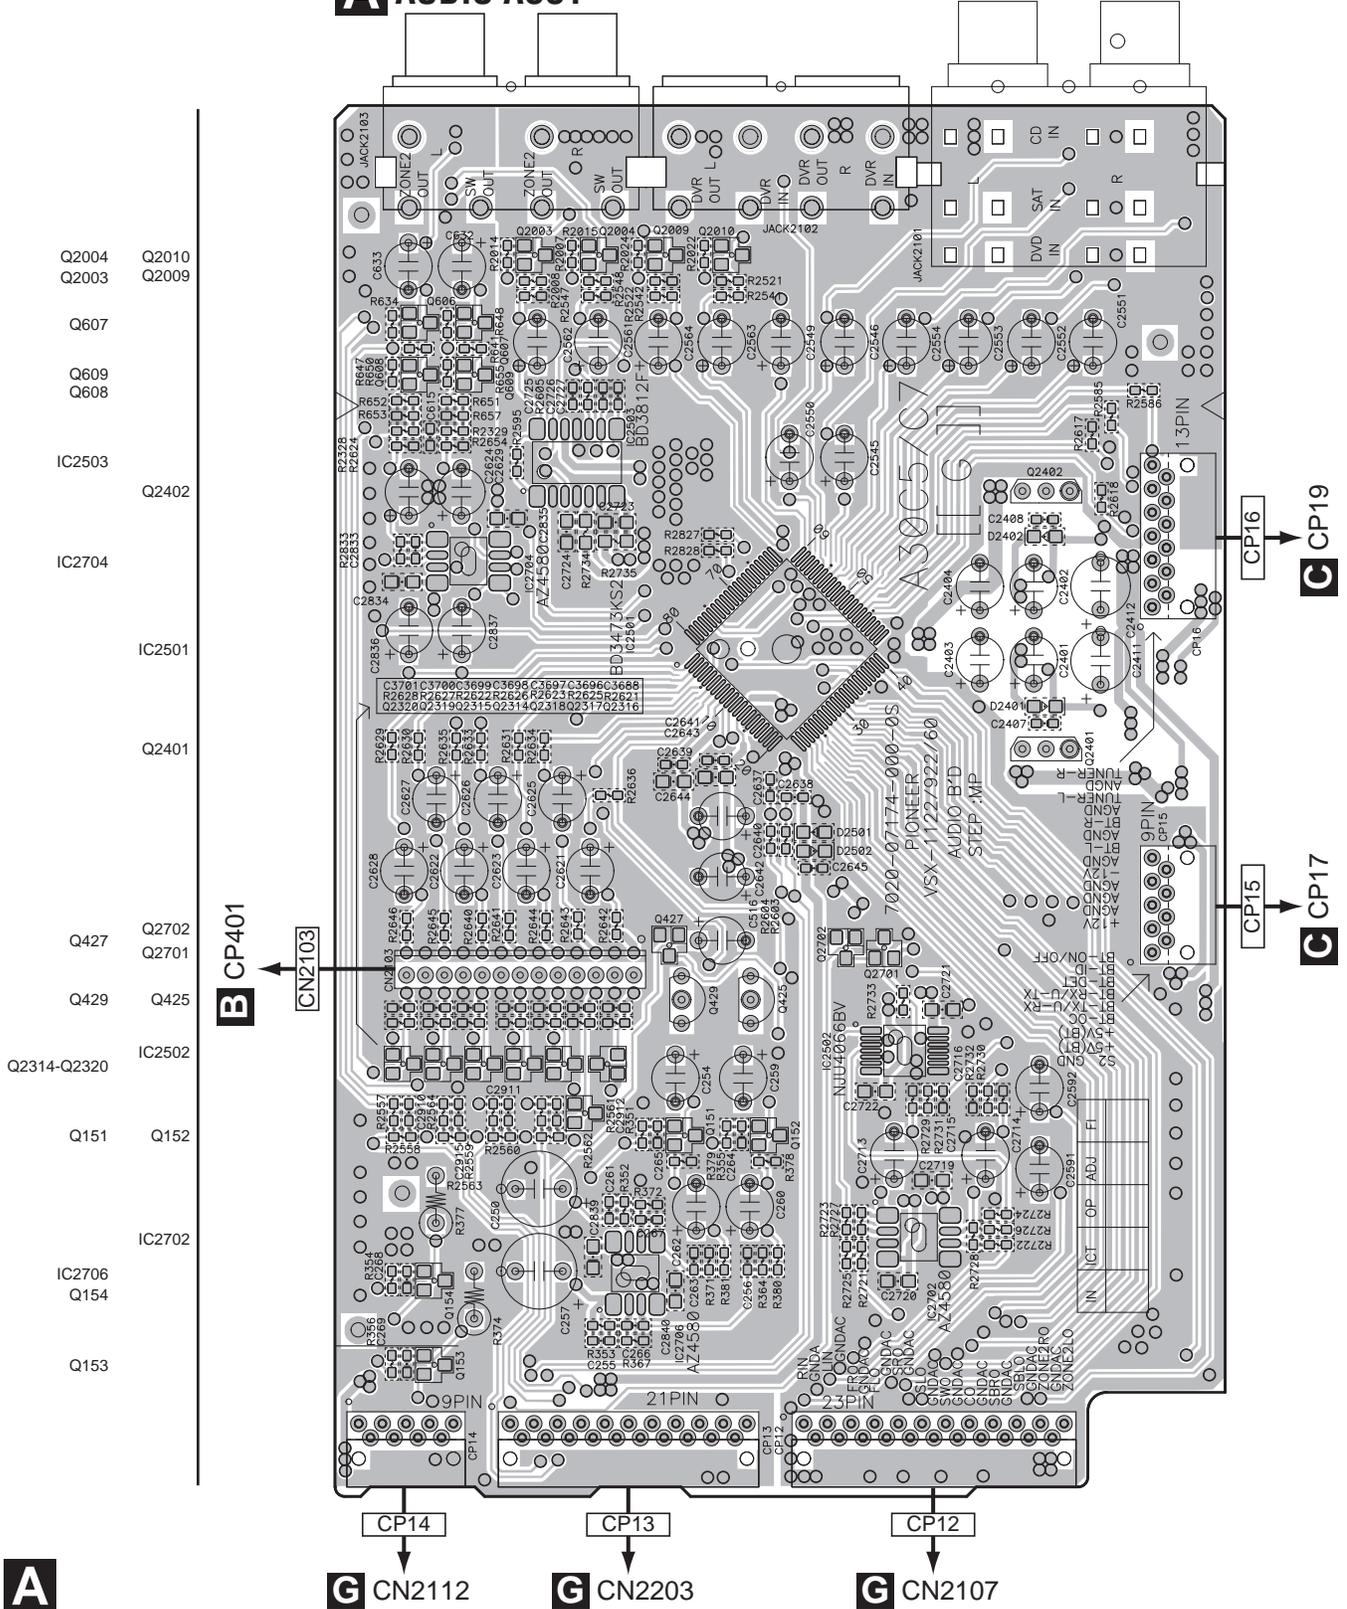

11.2 AMP7 ASSY

SIDE A


B AMP7 ASSY

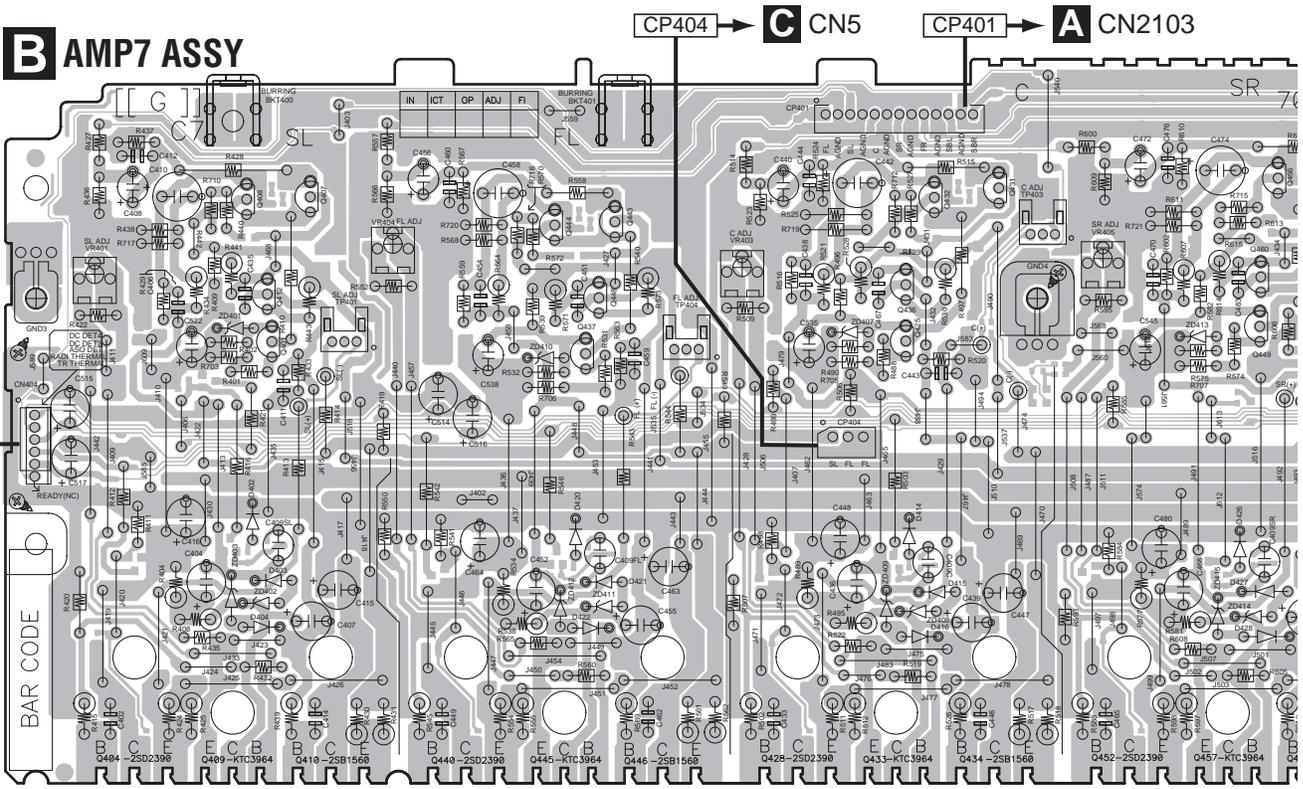

- | | | | | | | |
|------|------|------|------|------|------|------|
| Q408 | Q407 | Q444 | Q443 | Q432 | Q431 | Q456 |
| Q412 | | Q448 | | Q436 | | Q460 |
| Q401 | | Q437 | | Q425 | | Q449 |
| Q404 | Q409 | Q410 | Q440 | Q445 | Q446 | Q428 |
| | | | | | | Q433 |
| | | | | | | Q434 |
| | | | | | | Q452 |
| | | | | | | Q457 |

SIDE B

B AMP7 ASSY

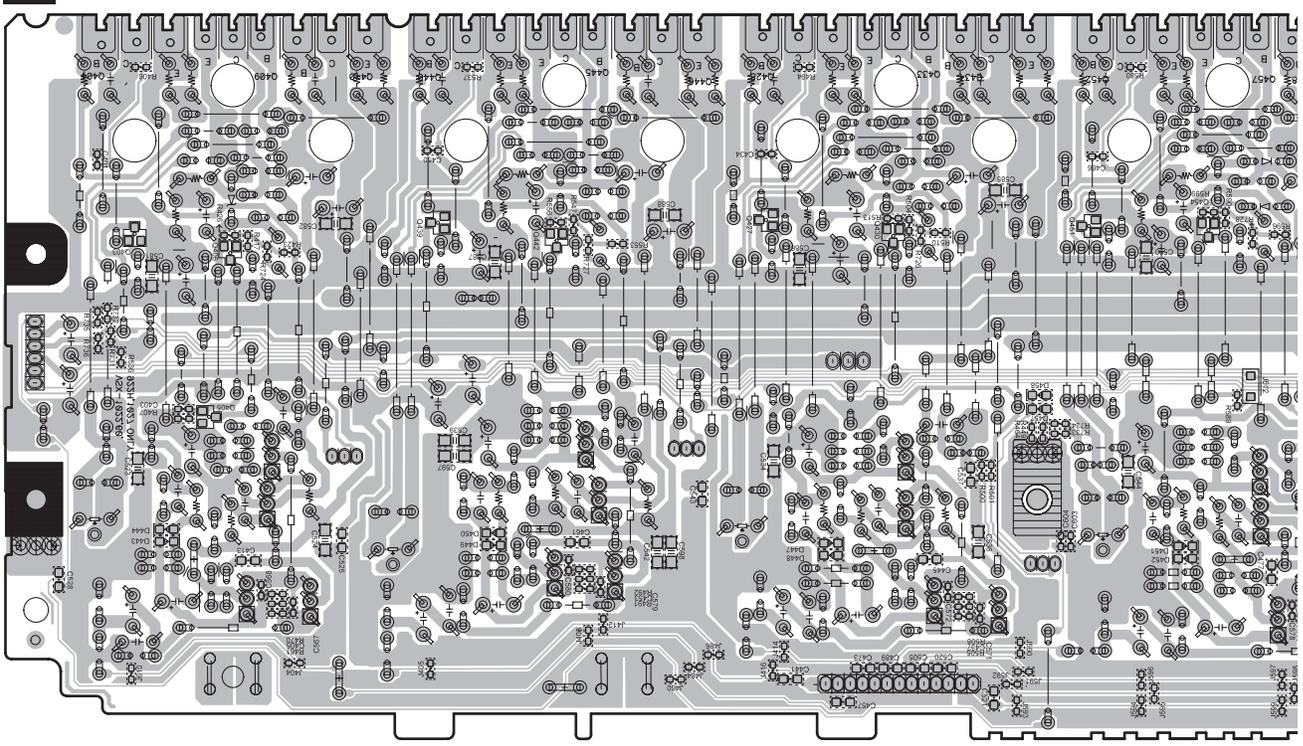

- | | | | | | | |
|------|------|------|------|------|------|------|
| Q403 | Q406 | Q439 | Q442 | Q427 | Q461 | Q454 |
| Q405 | | | | | | |

B


V2103

CP406 → C CN1


CP403 → C CN3

CP405 → C CN2

SIDE A

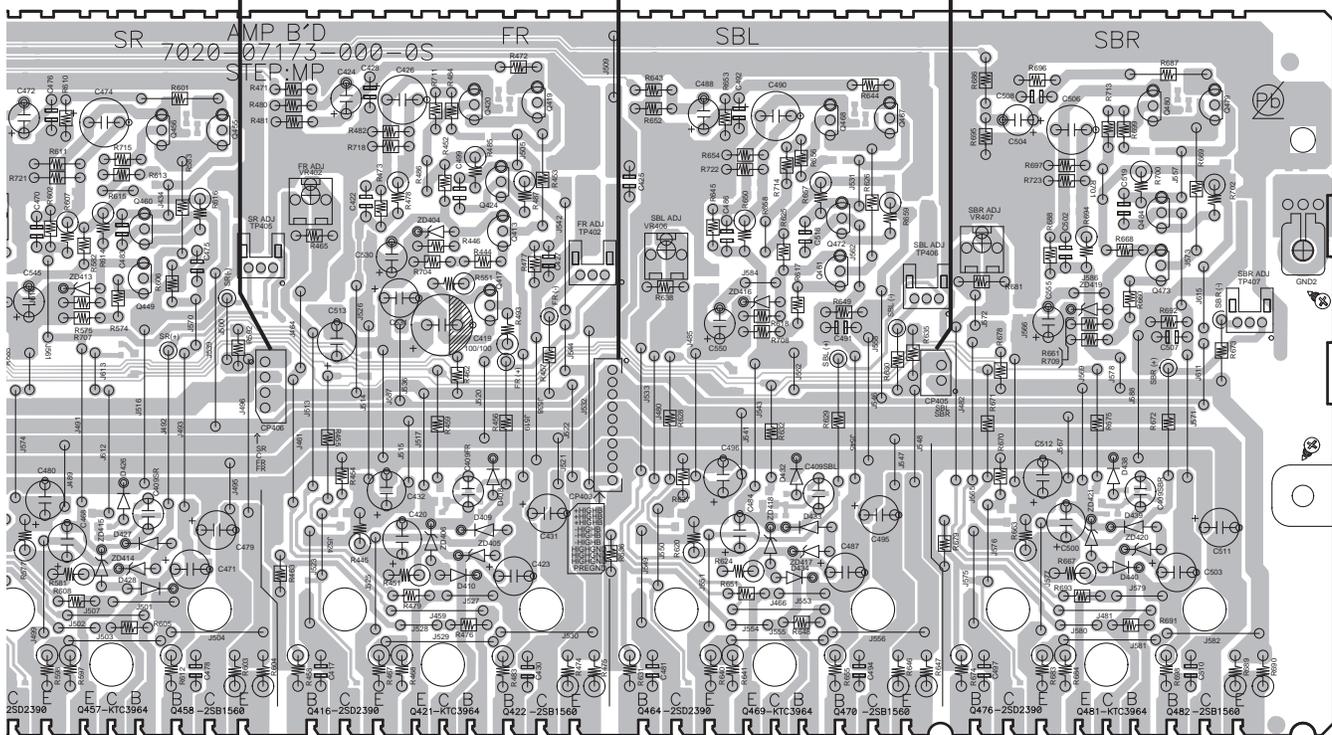

SIDE B

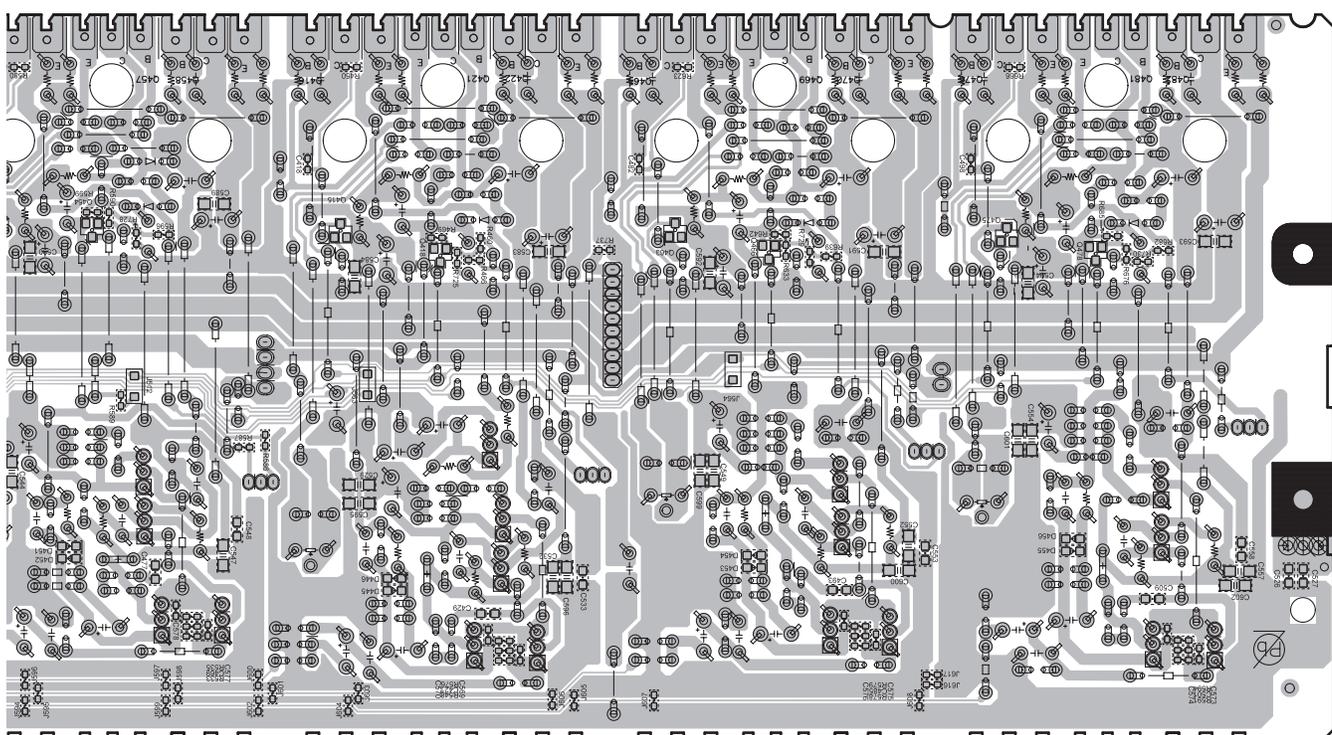

VSX-1127-K

B


11.3 MAIN ASSY

SIDE A

C MAIN ASSY

B CP404

CN5

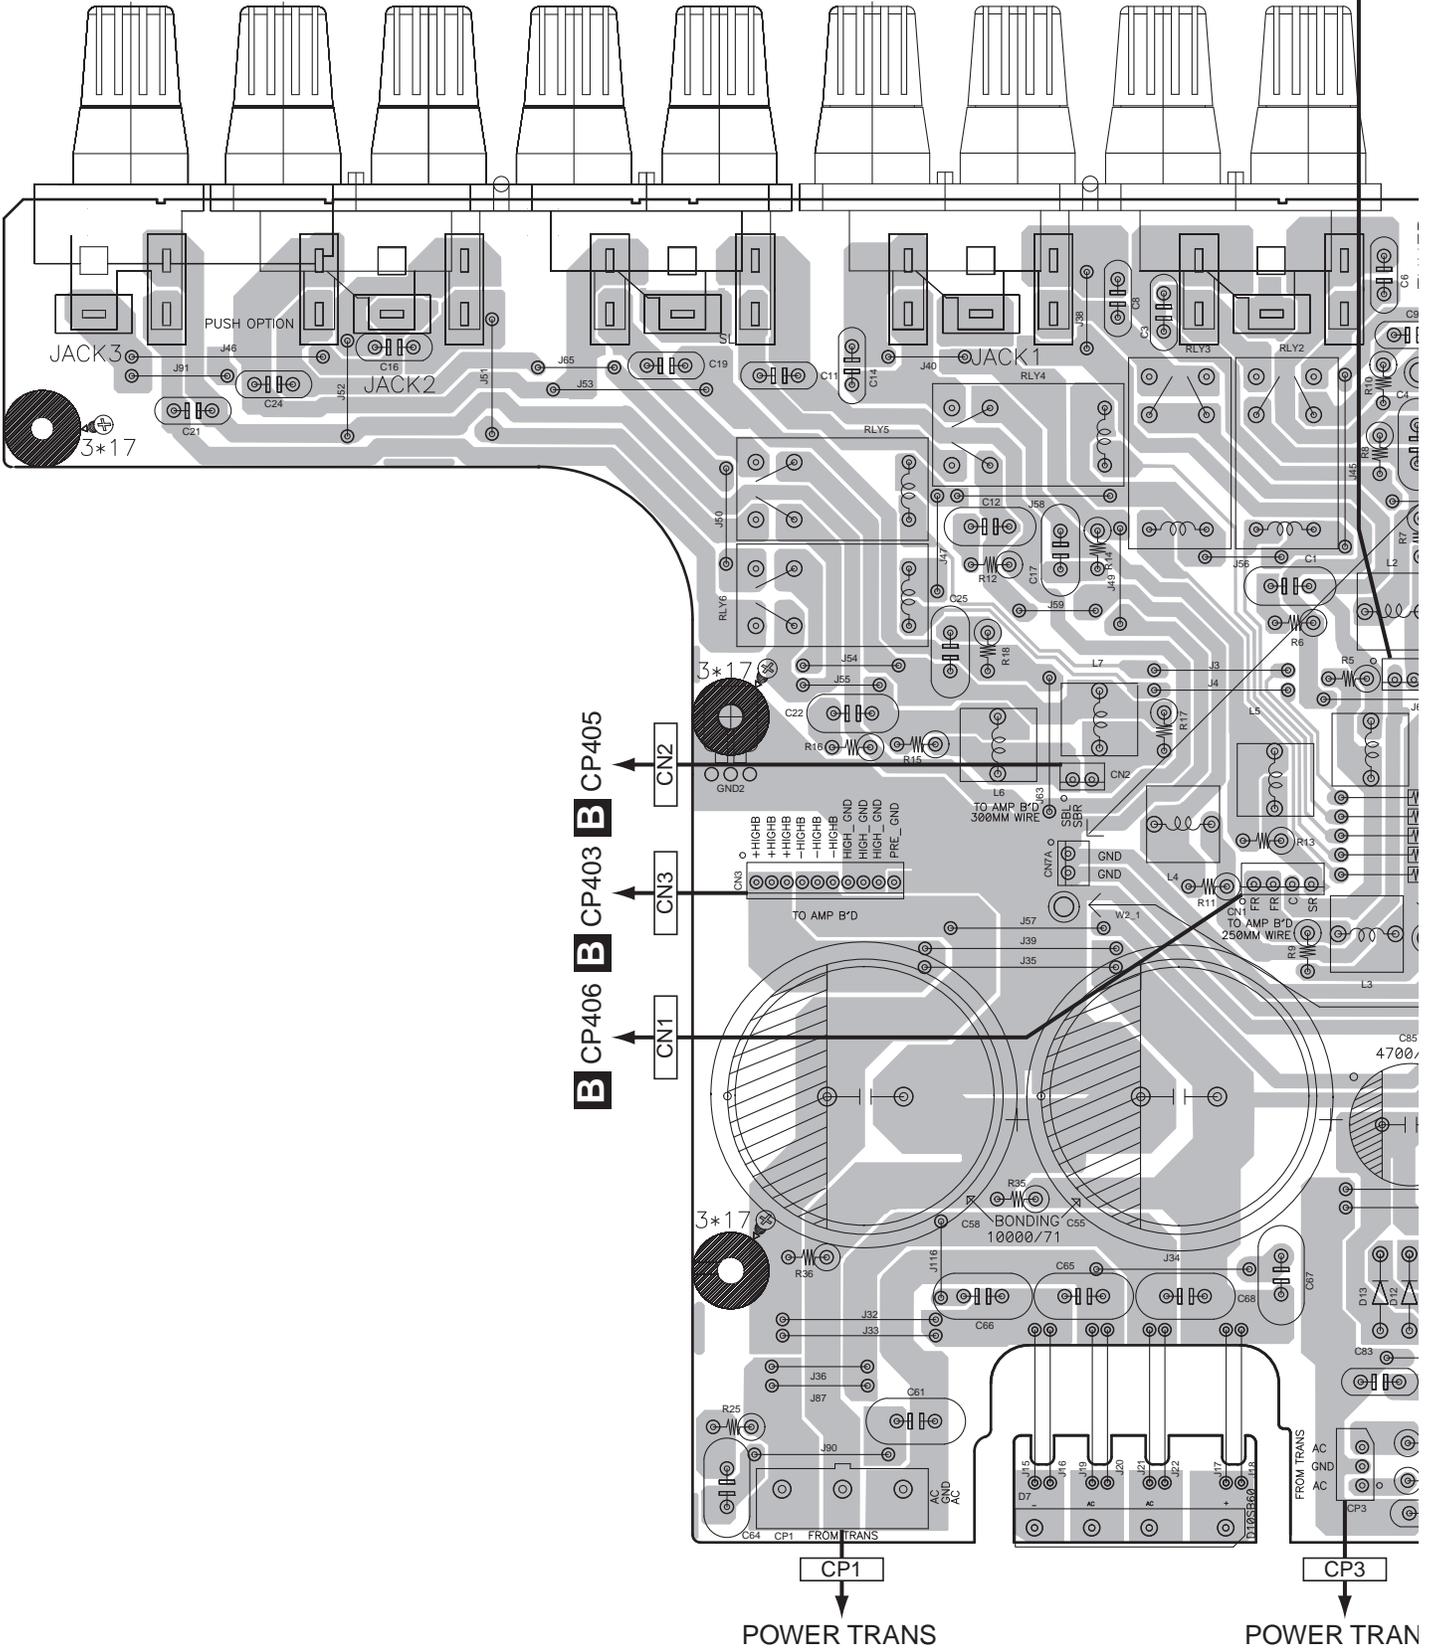


B CP406 B CP403 B CP405

POWER TRANS

POWER TRAN

C

SIDE A

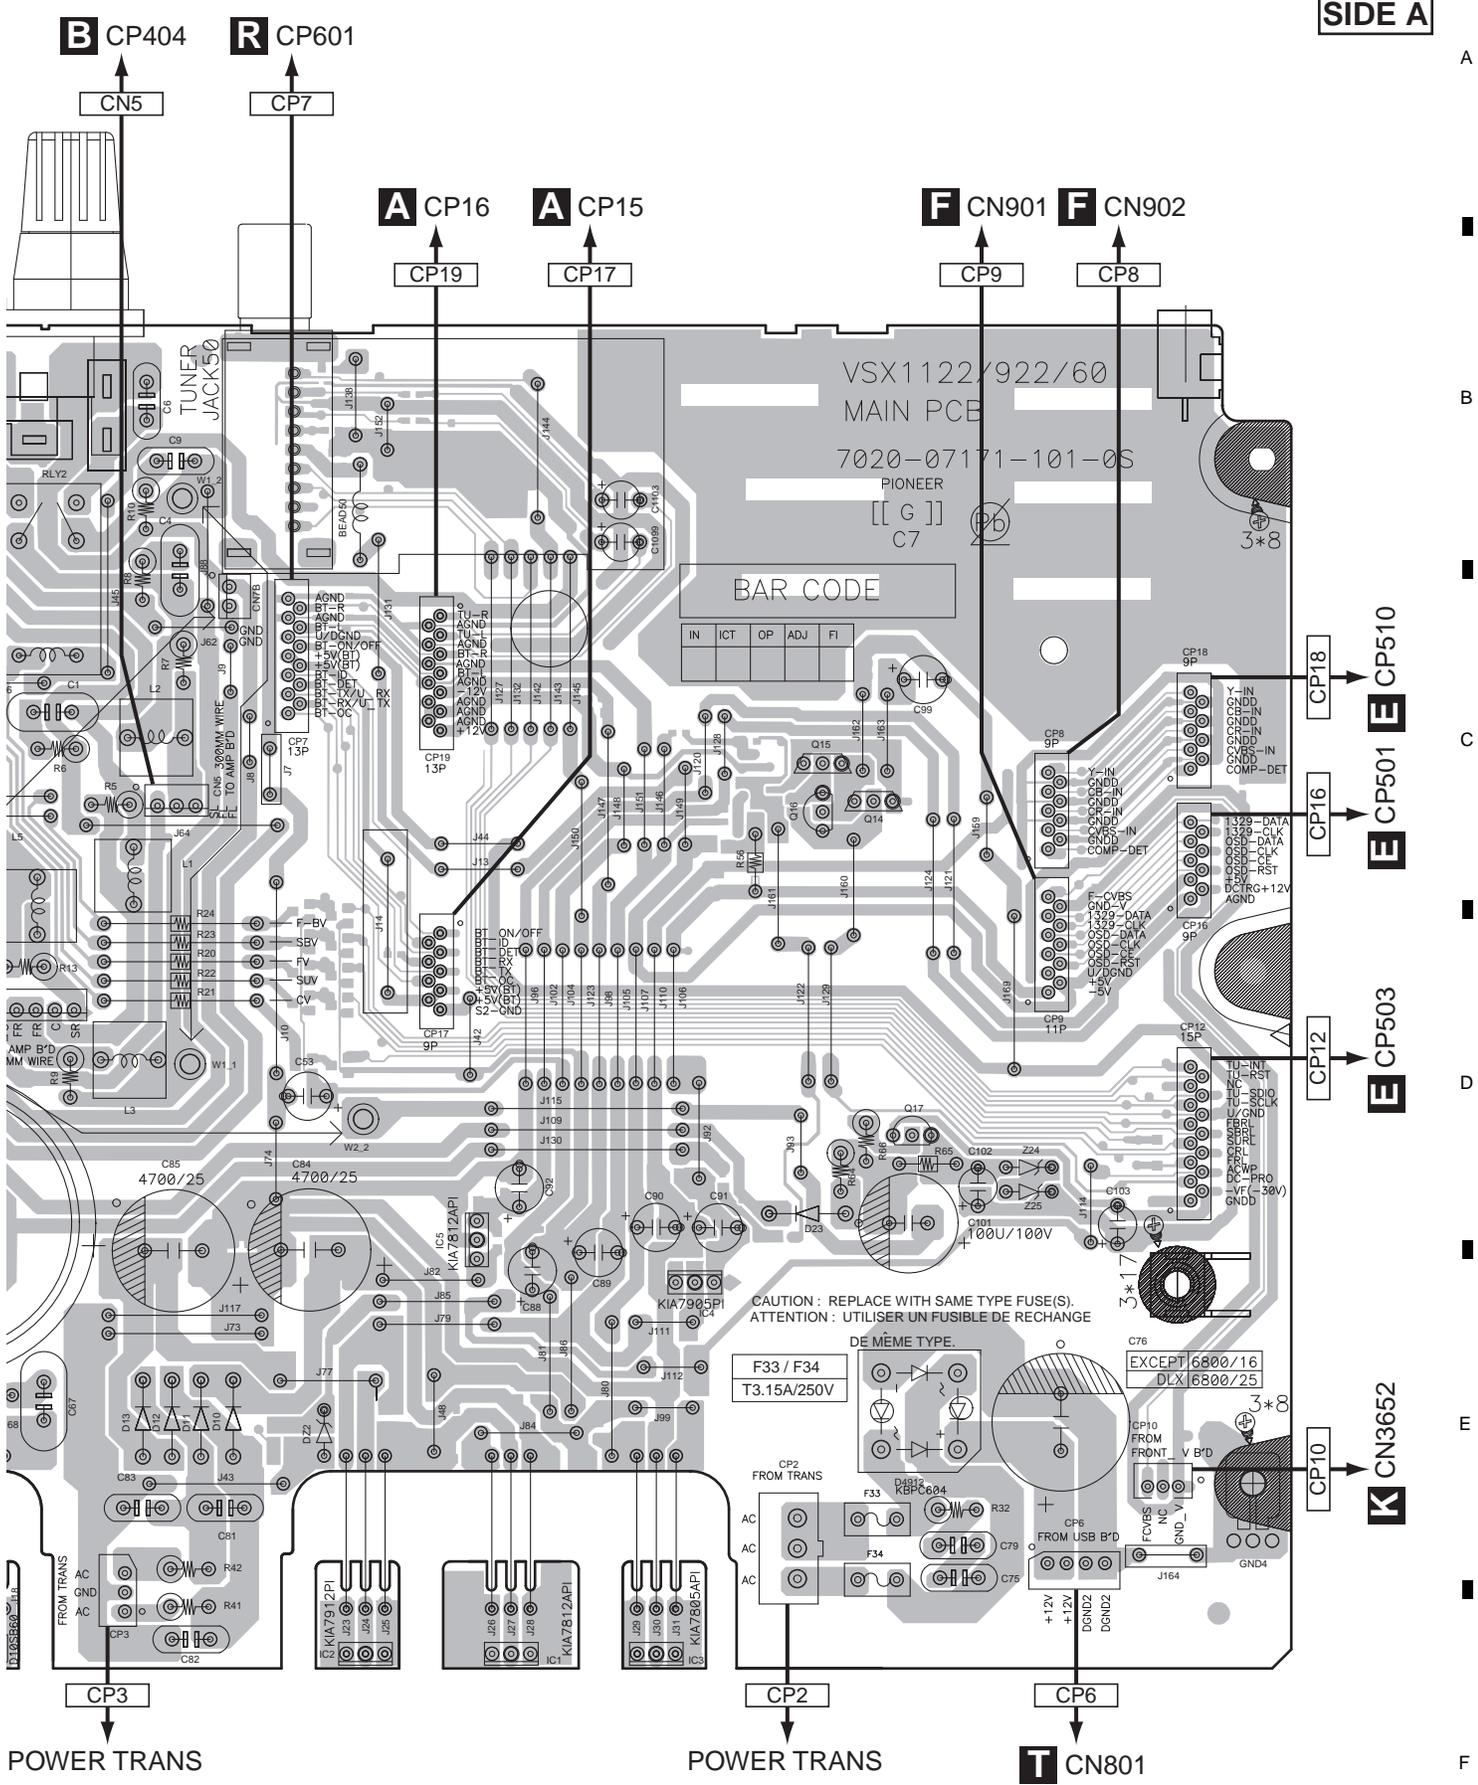

IC2 IC5 IC1 IC3 IC4 Q16 Q15 Q14 Q17

VSX-1127-K

C

SIDE B

A

C MAIN ASSY

CP8 CP9

CP17 CP19

CP7 CN5


B

C

D

E

F

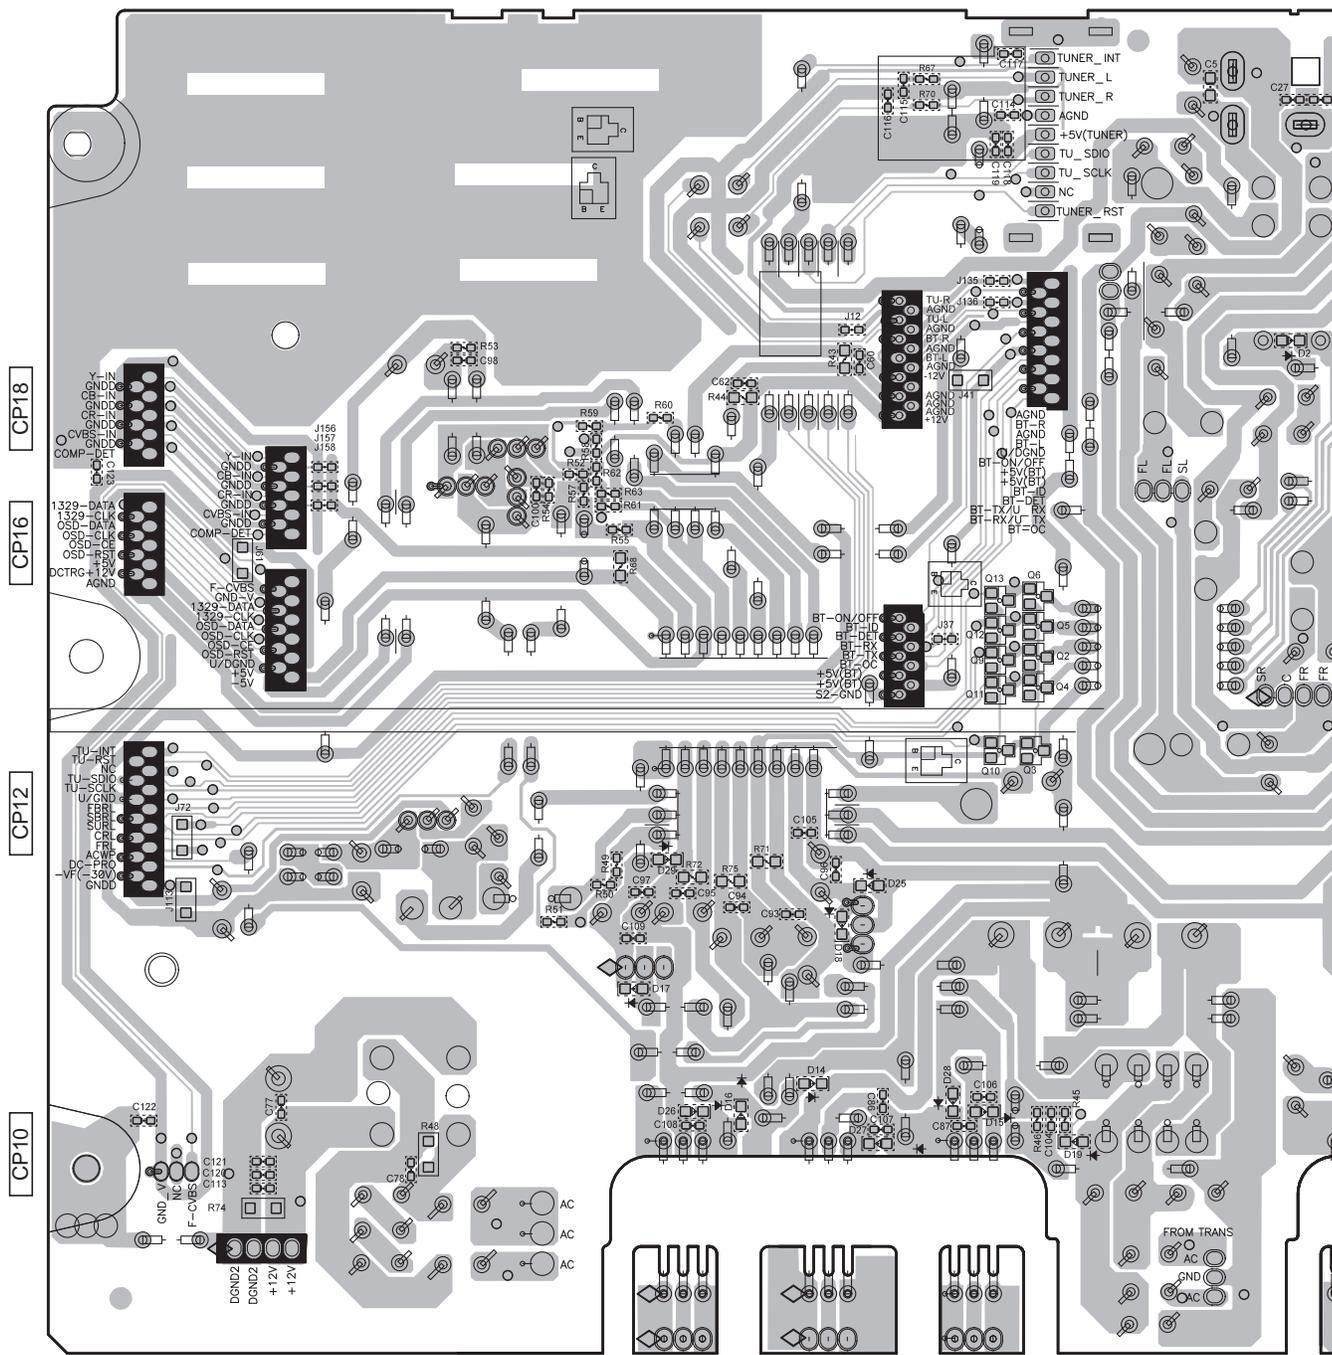

CP18

CP16

CP12

CP10

CP6

CP2

CP3

Q9-Q13 Q2-Q6

SIDE B

A


B

C

D

E


F

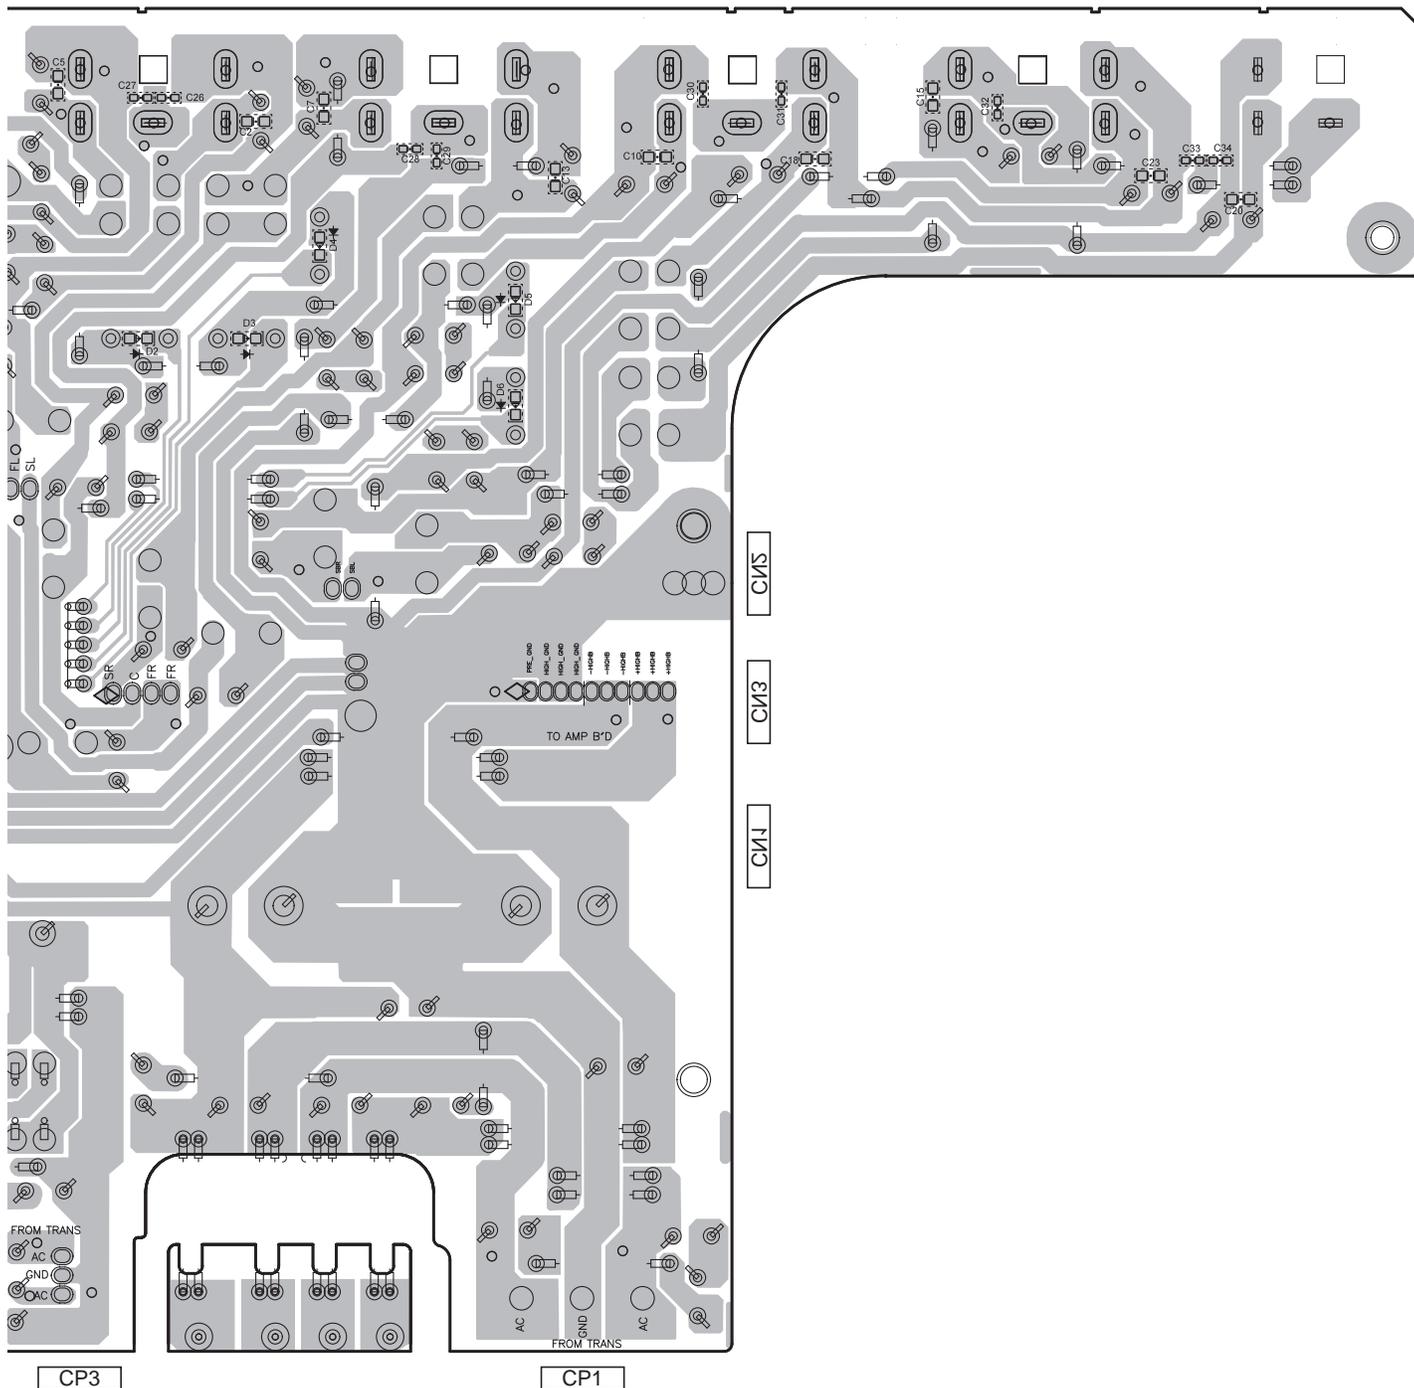

11.4 D-MAIN ASSY

SIDE A

D D-MAIN ASSY

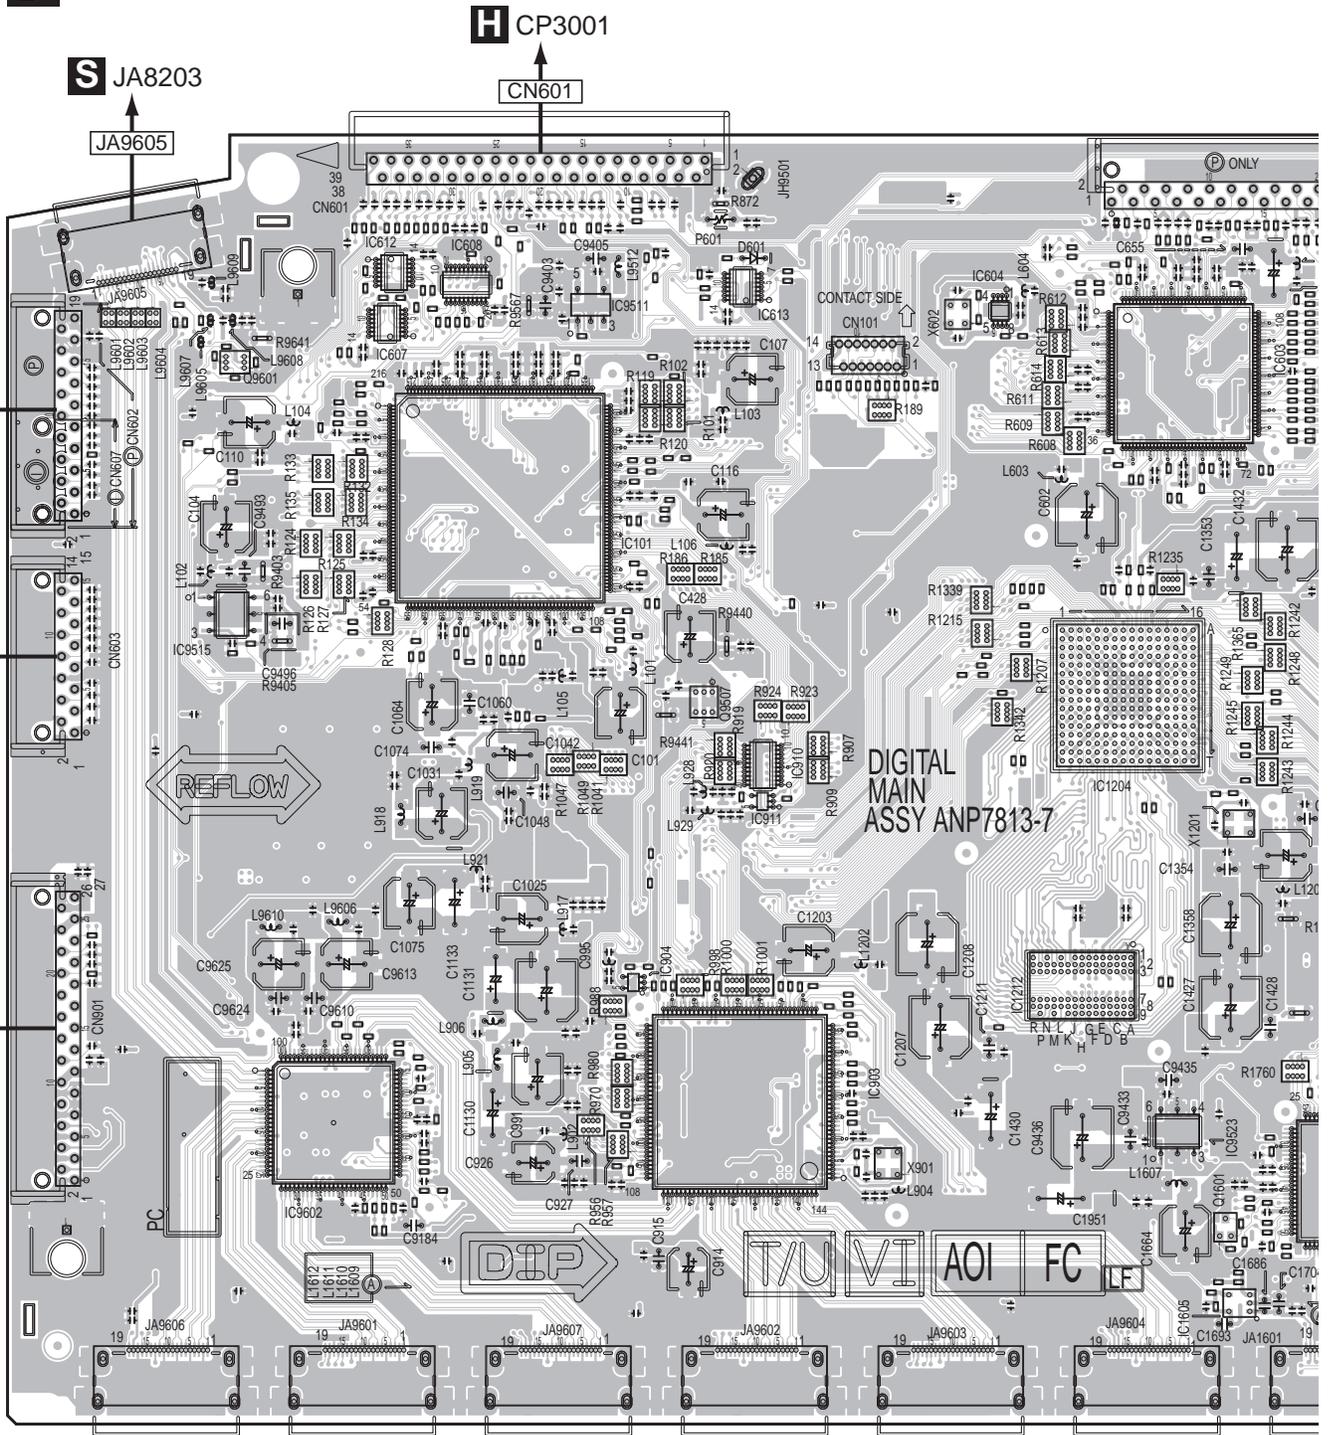

Q9601	IC612	IC608	IC9511	IC613	IC604	IC603
IC9515	IC607	IC101		IC911		IC1204
	IC9602			IC903	IC1212	IC9523
						Q1601

VSX-1127-K

SIDE A

A

B

C

D

E

F

U CX101


CN9501

G CN2113

G CN2110

CN1504

CN1801

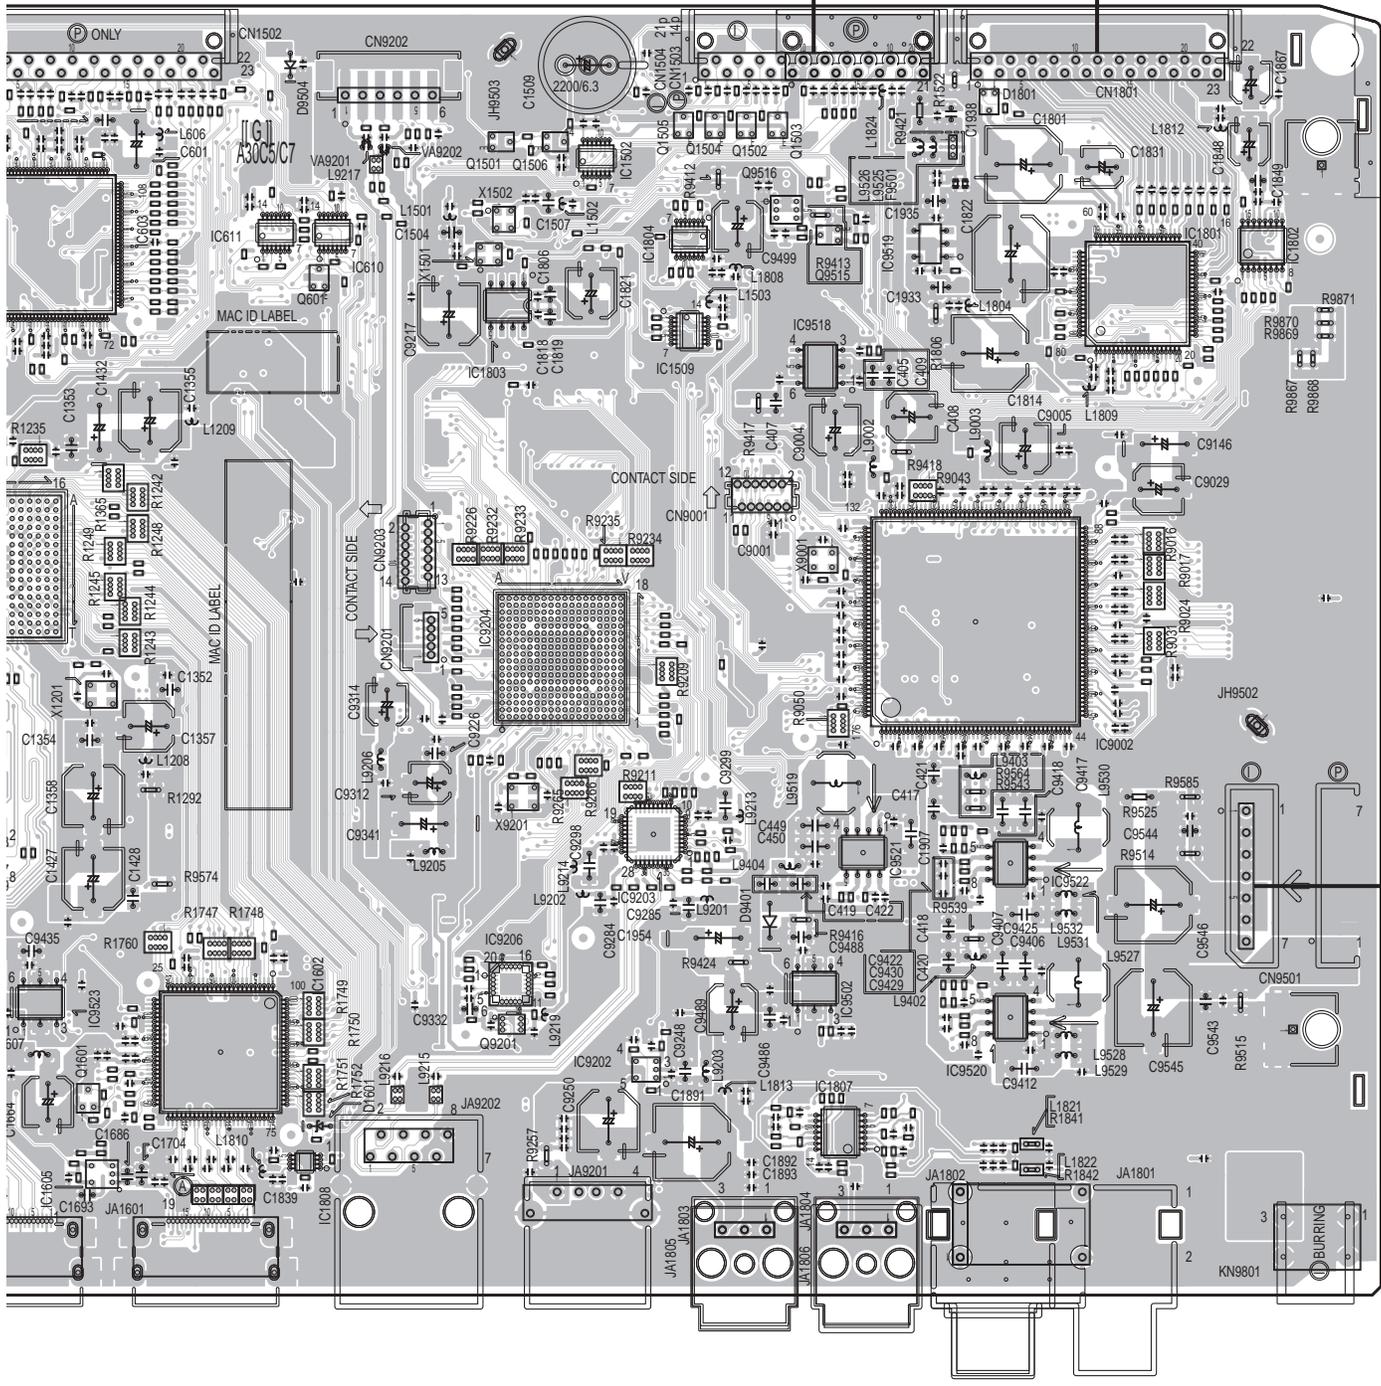

IC603	IC611	IC610	Q1501	Q1506	IC1502	Q1502-Q1505	Q9516	IC9519	IC1801	IC1802
4		Q601	IC1803	IC1509	IC1804	IC9518	IC9521	IC9002		
IC9523	IC1602		IC9204	IC9203		IC9521	IC9002			
Q1601	IC1808		Q9201	IC9202		IC1807	IC9520			

VSX-1127-K


D

SIDE B

D D-MAIN ASSY

CN1801

CN1504

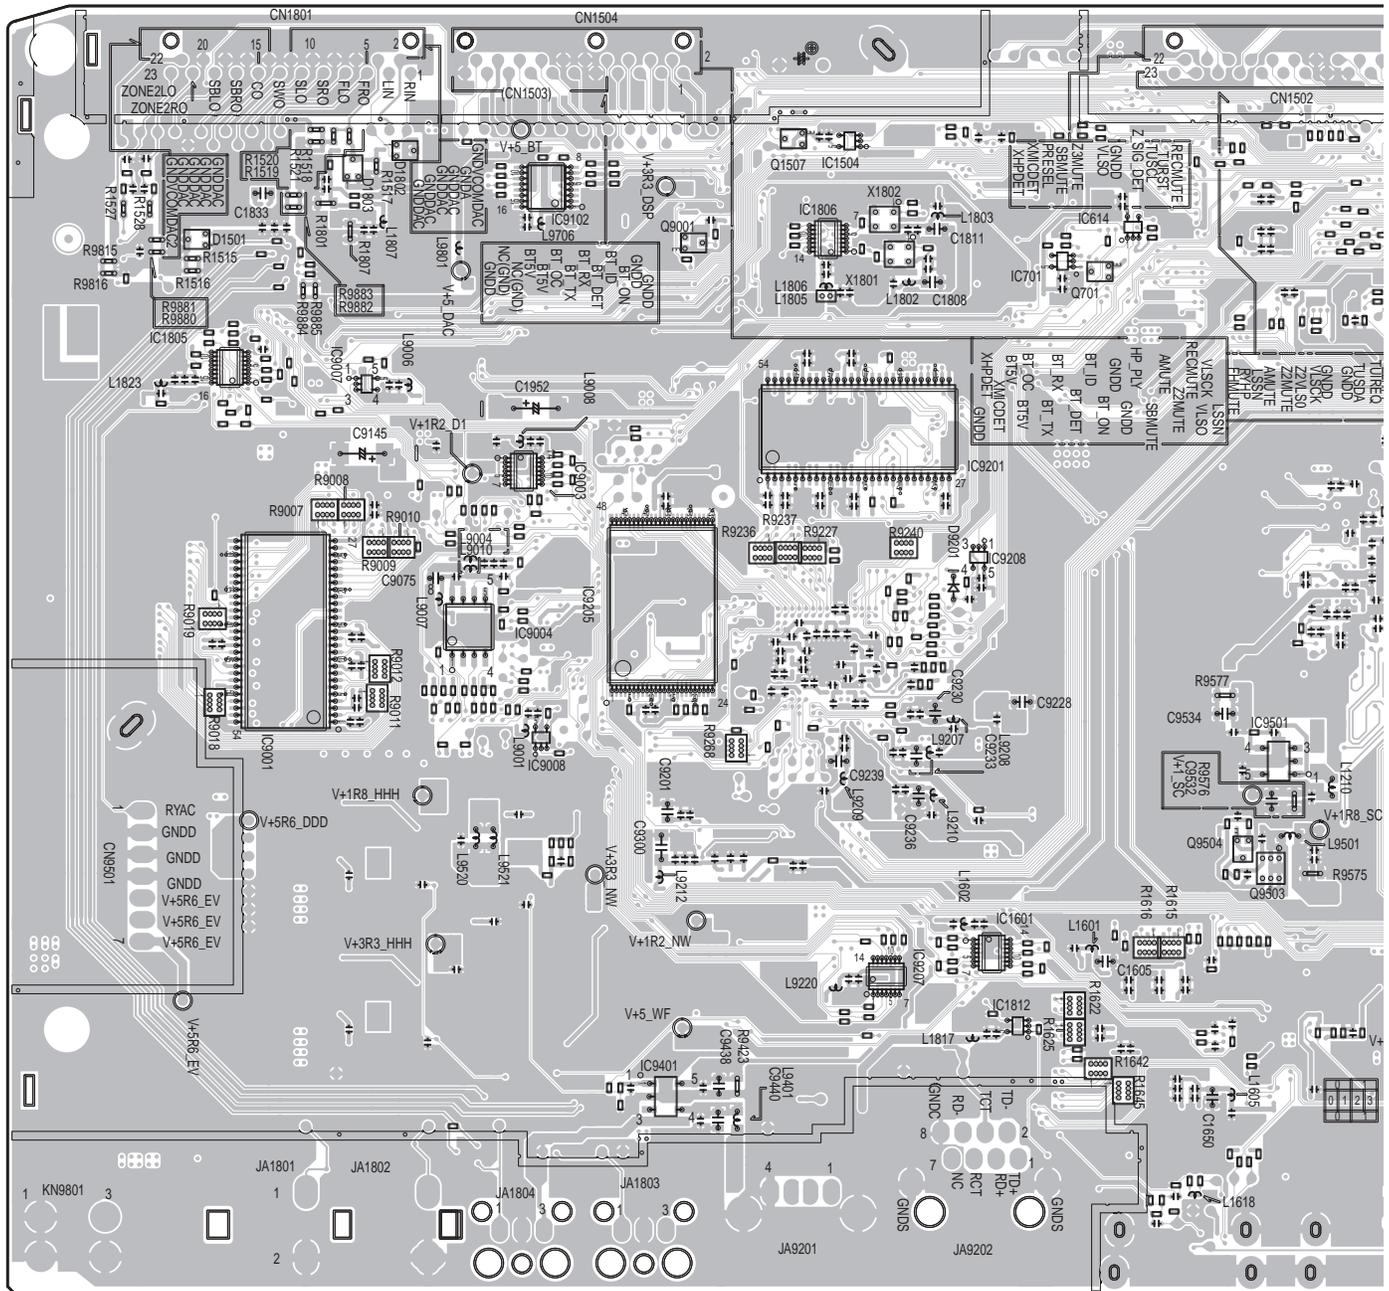

IC1805	IC9007	IC1902	Q1507	IC1504	IC701	IC614
IC9001		IC9003	Q9001	IC1806		Q701
		IC9004	IC9205	IC9201		
		IC9008	IC9401	IC9207	IC1601	IC9501
					IC1812	Q9504
						Q9503

D

SIDE B

A


B

C

D

E

F

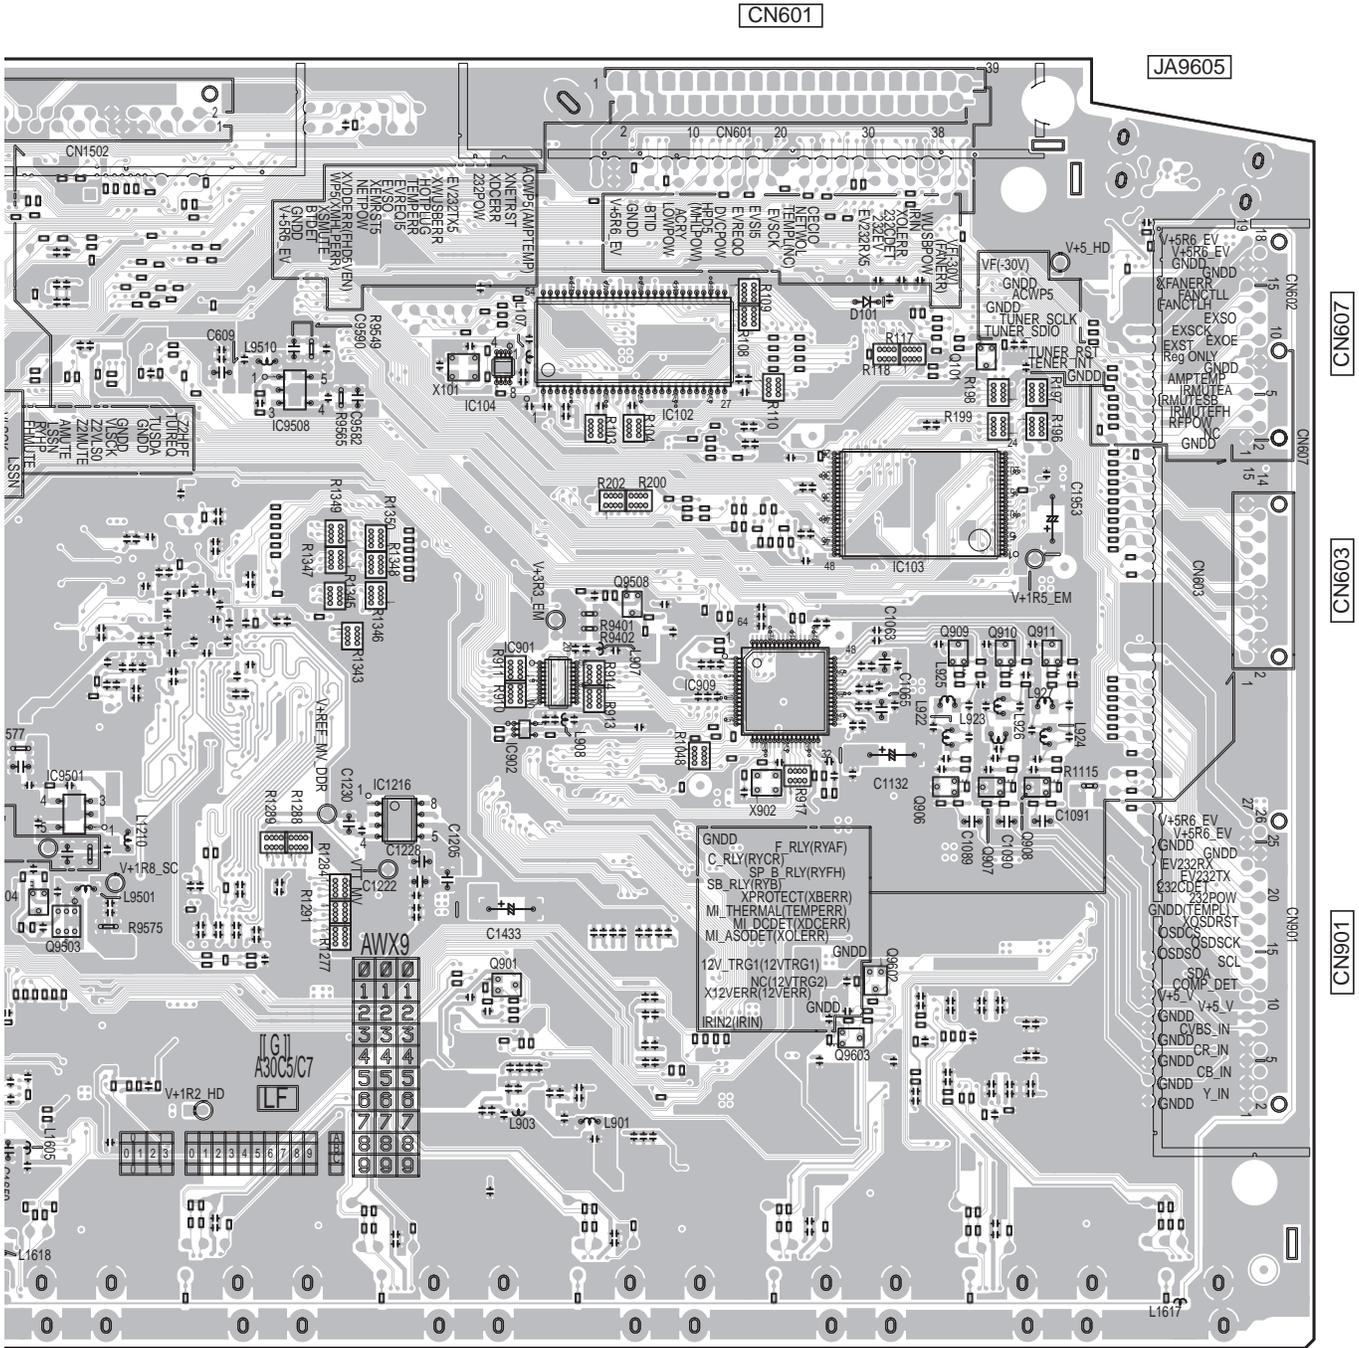

CN601

JA9605

CN607

CN603

CN901

IC9508

IC104

IC901

Q9508

Q101

Q906-Q911

IC9501
Q9504
Q9503

IC1216

IC902
Q901

IC909

Q9602
Q9603

IC103


VSX-1127-K

D

11.5 IR ASSY

SIDE A

SIDE A

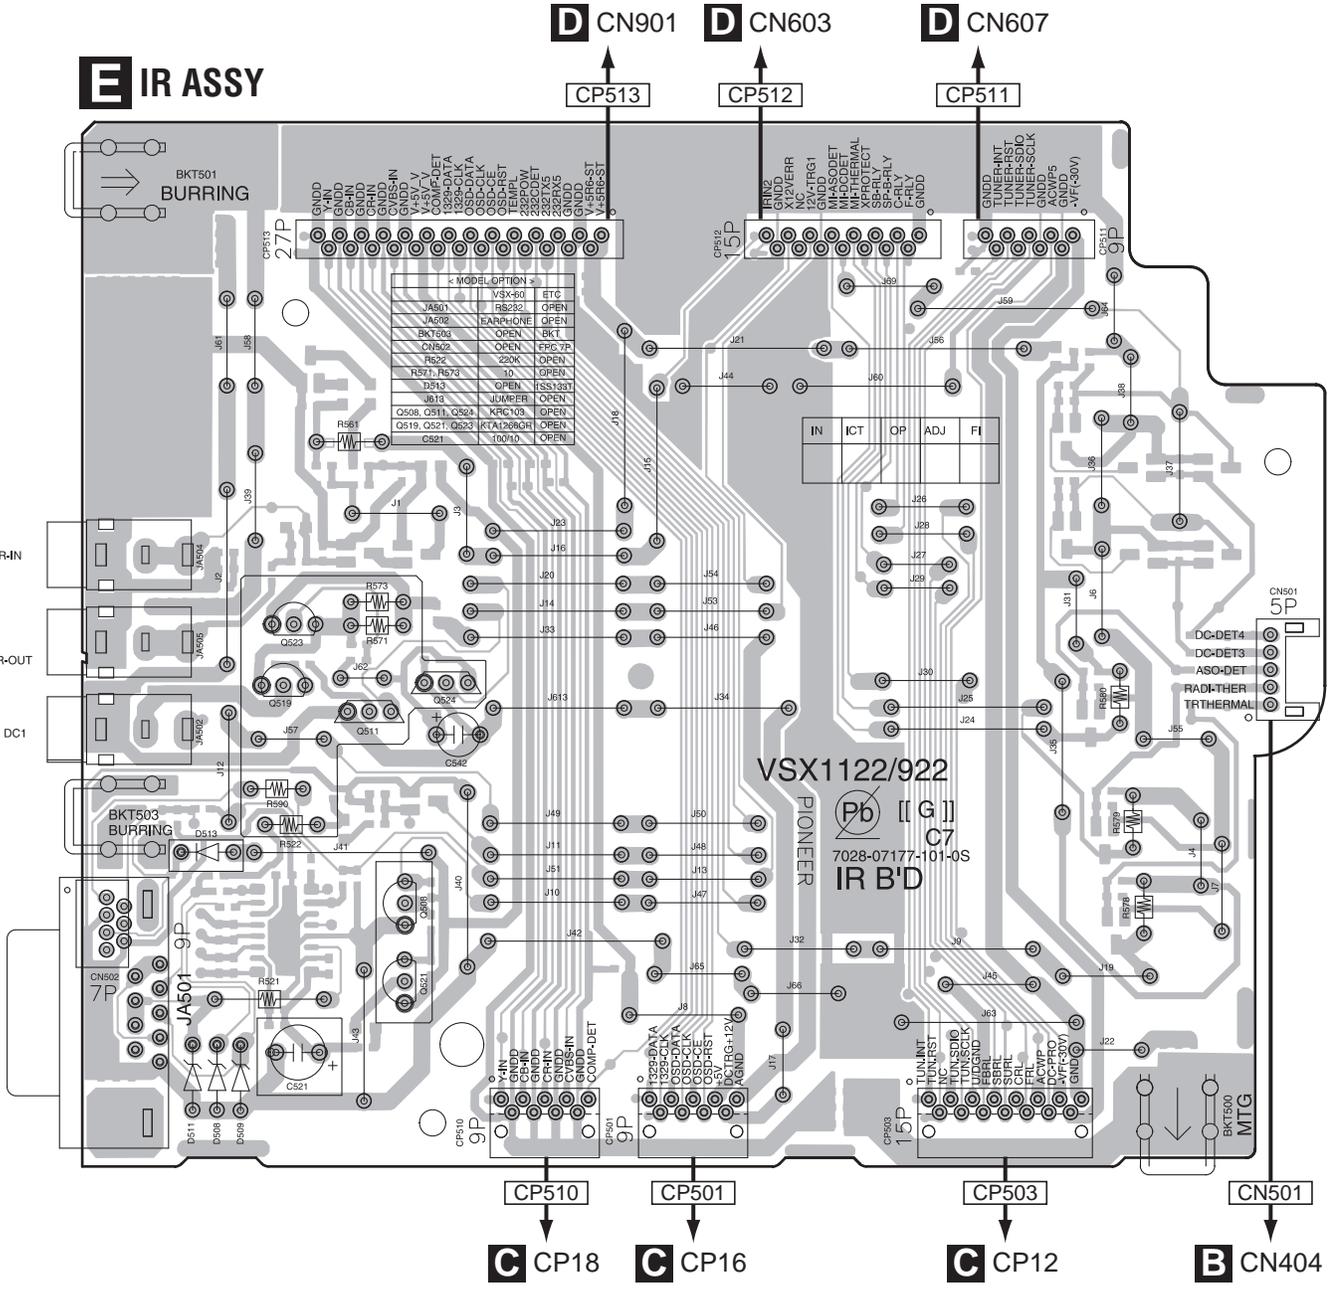

Q523
Q519 Q511 Q524
Q508
Q521

VSX-1122-K

SIDE B

SIDE B

A


B

C

D

E

F

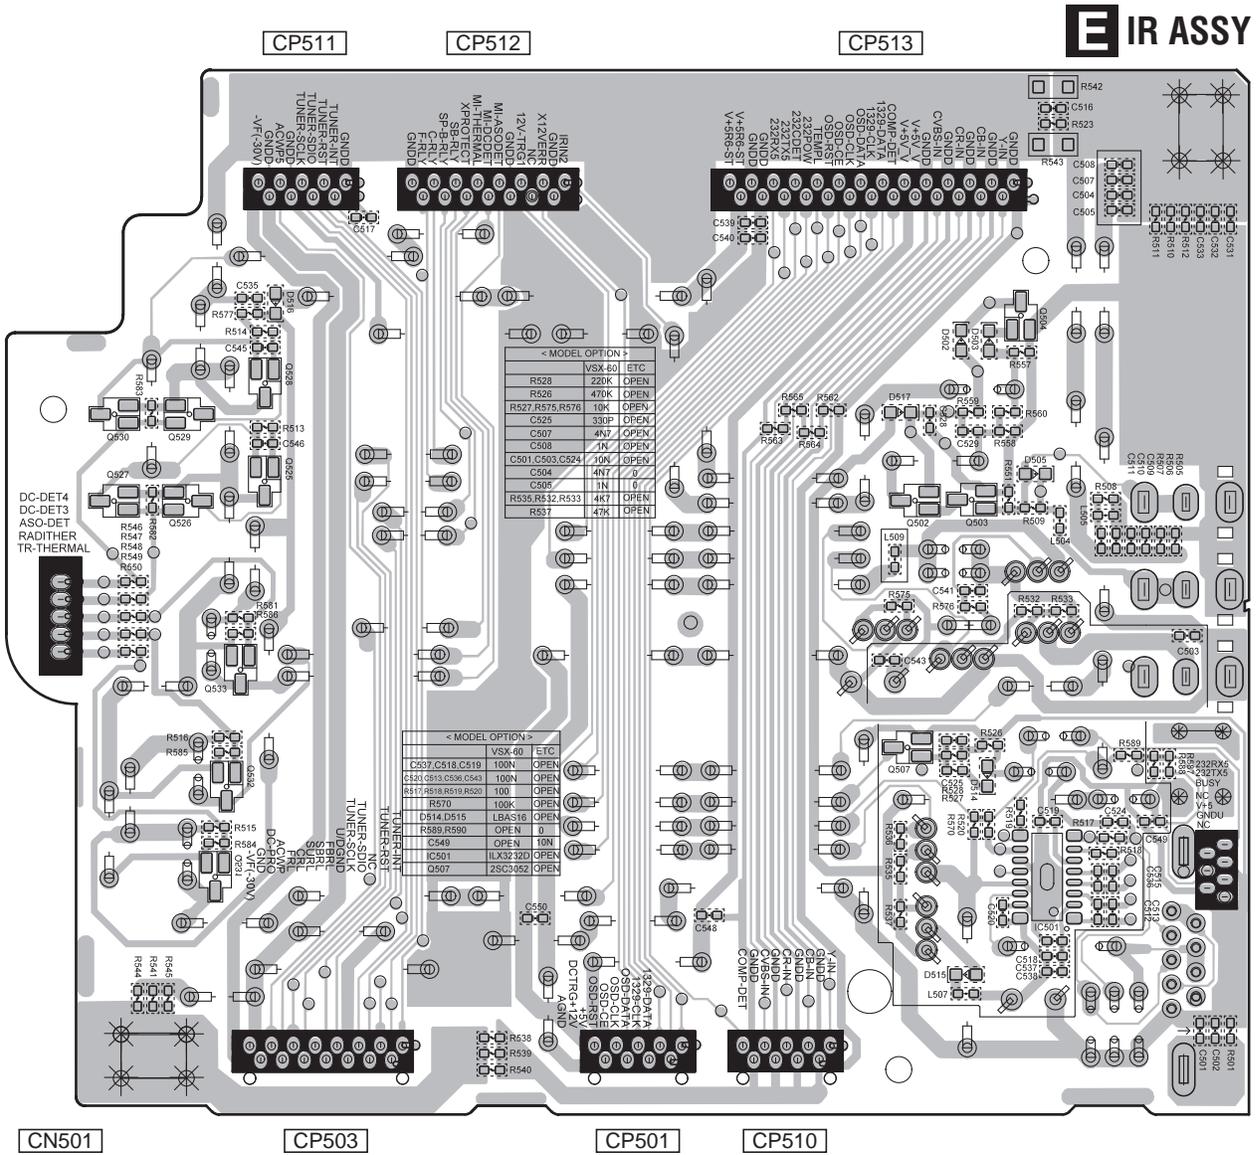

Q530 Q529 Q528
Q527 Q526 Q525
Q533
Q532
Q531

Q504
Q502 Q503
Q507
IC501

VSX-1127-K



11.6 VIDEO ASSY


SIDE A

SIDE A

VIDEO ASSY

VSX60 ONLY

VSX1122 USA/922 - 7P
VSX60/1122 - 8P

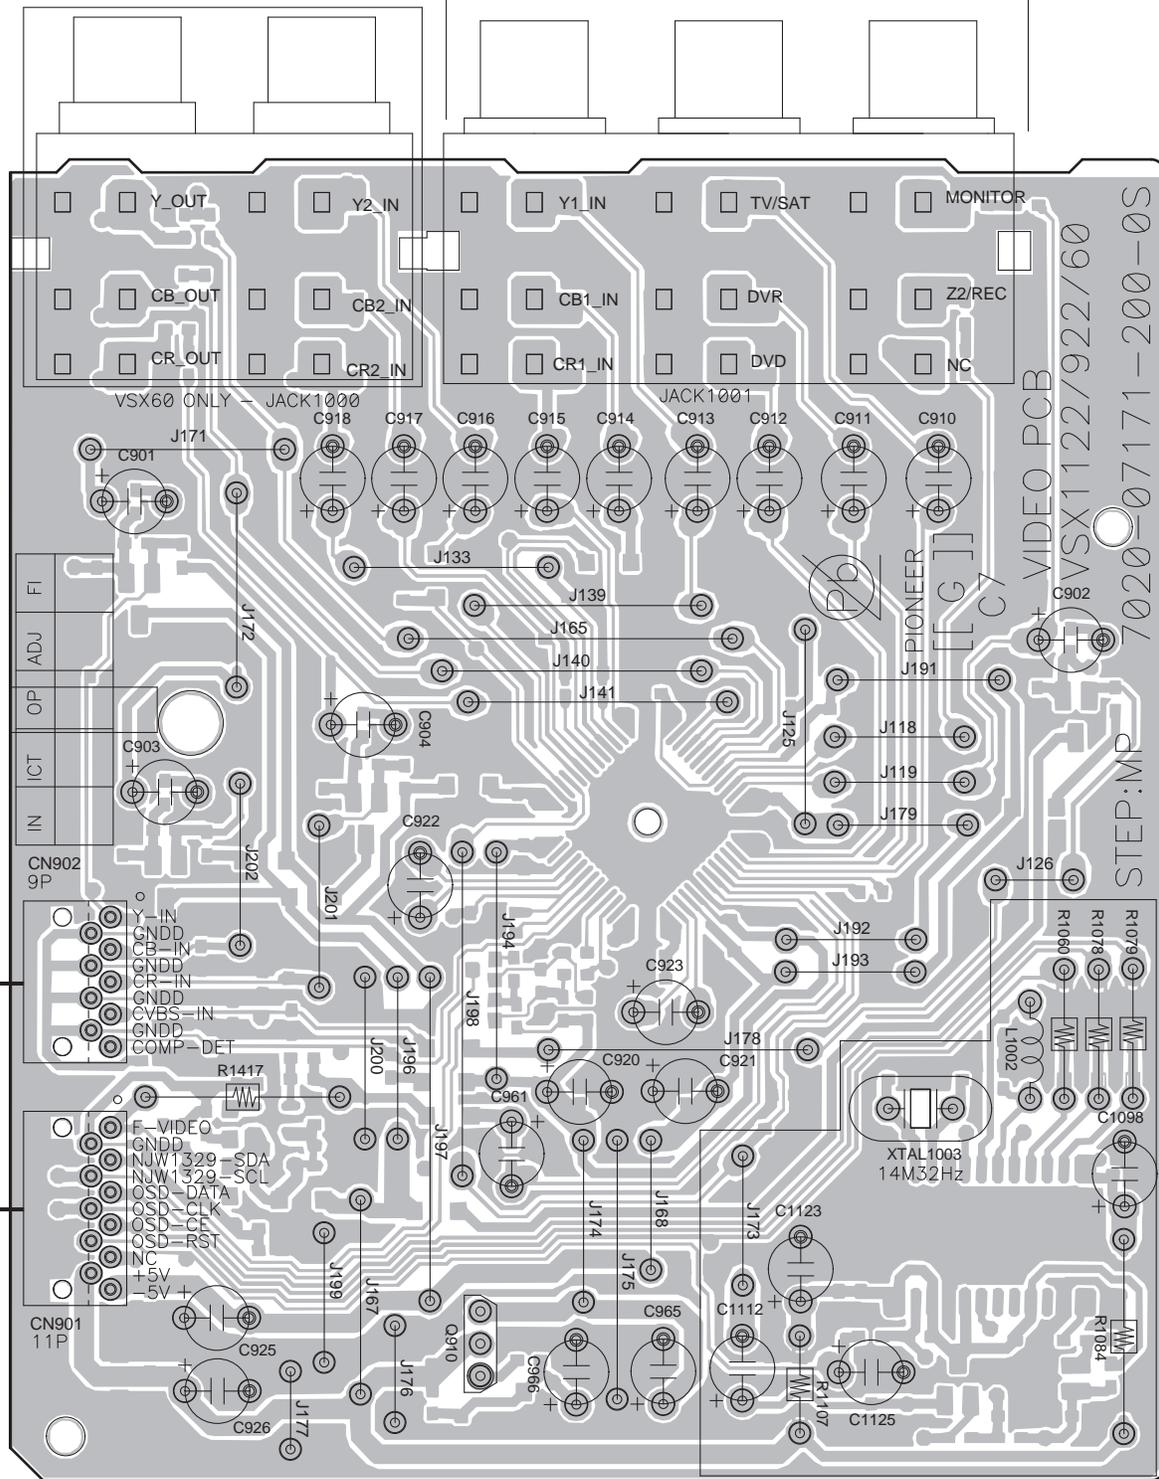

VIDEO PCB
 VSX1122/922/60
 7020-07171-200-0S
 STEP:MP

Q910



SIDE B

SIDE B

A

B


C

D

E

F

F VIDEO ASSY

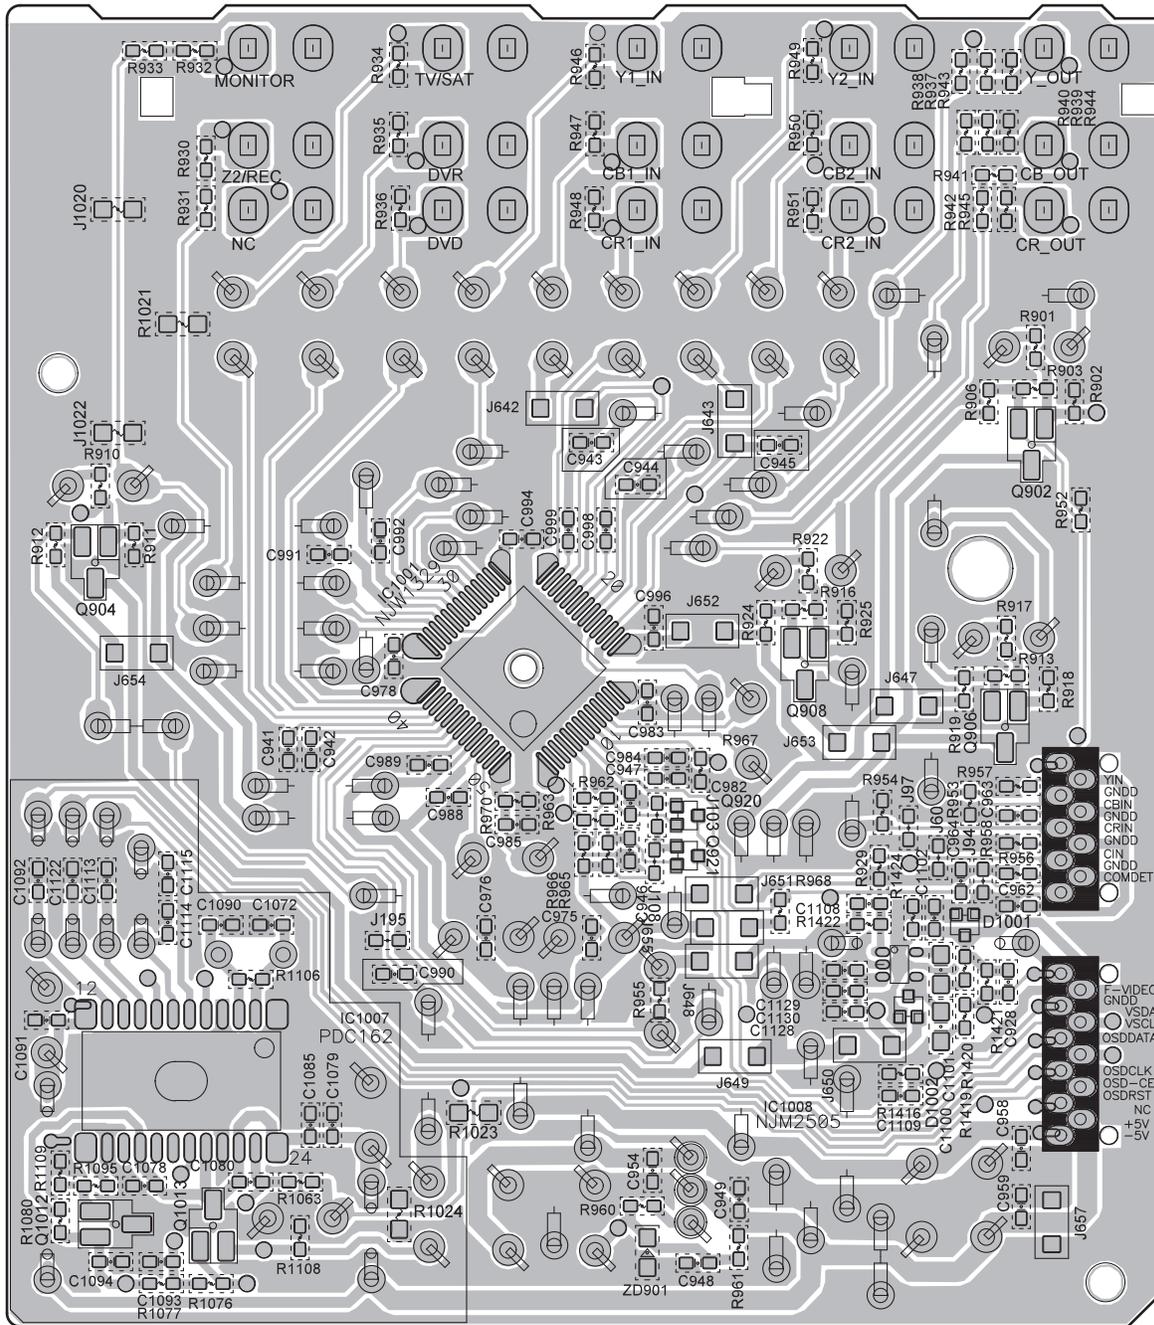

Q904 IC1007 Q920 Q908 Q902
 Q1012 Q1013 Q921 IC1008 Q906
 Q1010 Q1011 IC1001

VSX-1127-K




11.7 BRG ASSY

SIDE A

SIDE A


BRG ASSY

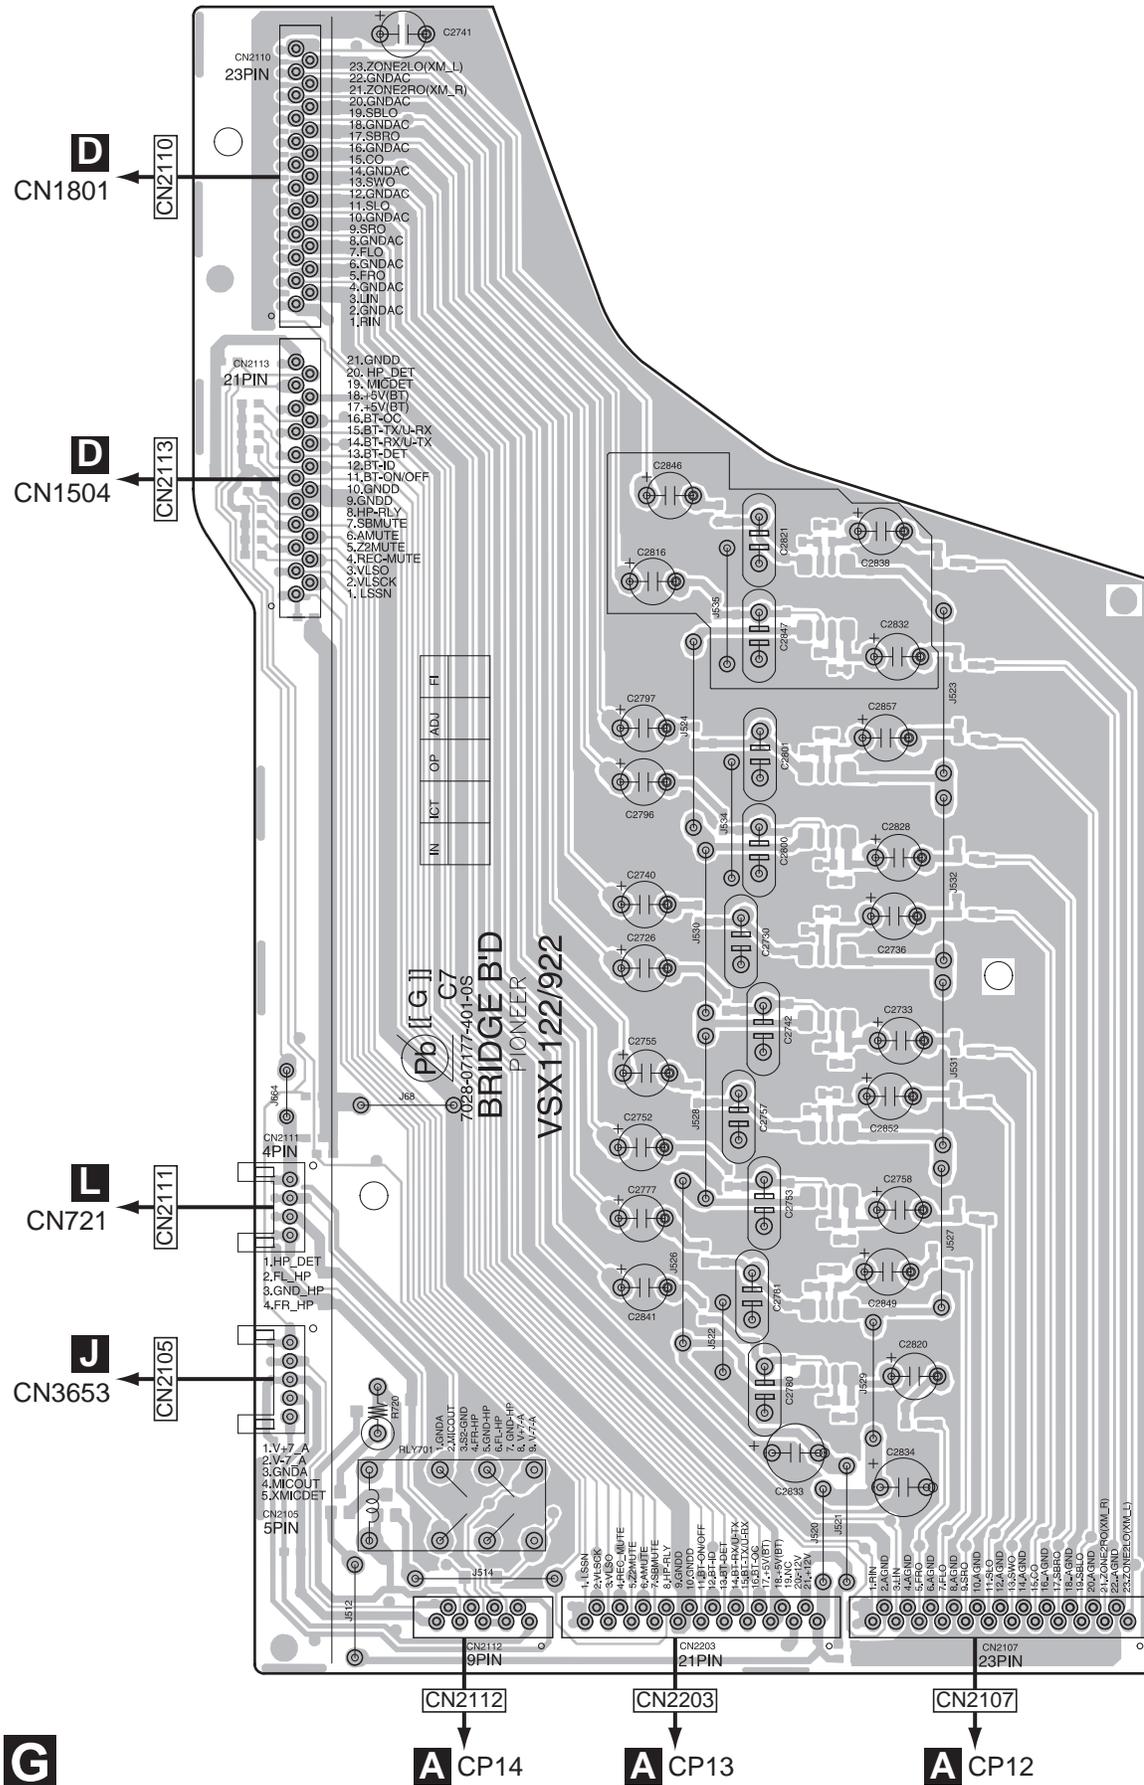

SIDE B

SIDE B

BRG ASSY

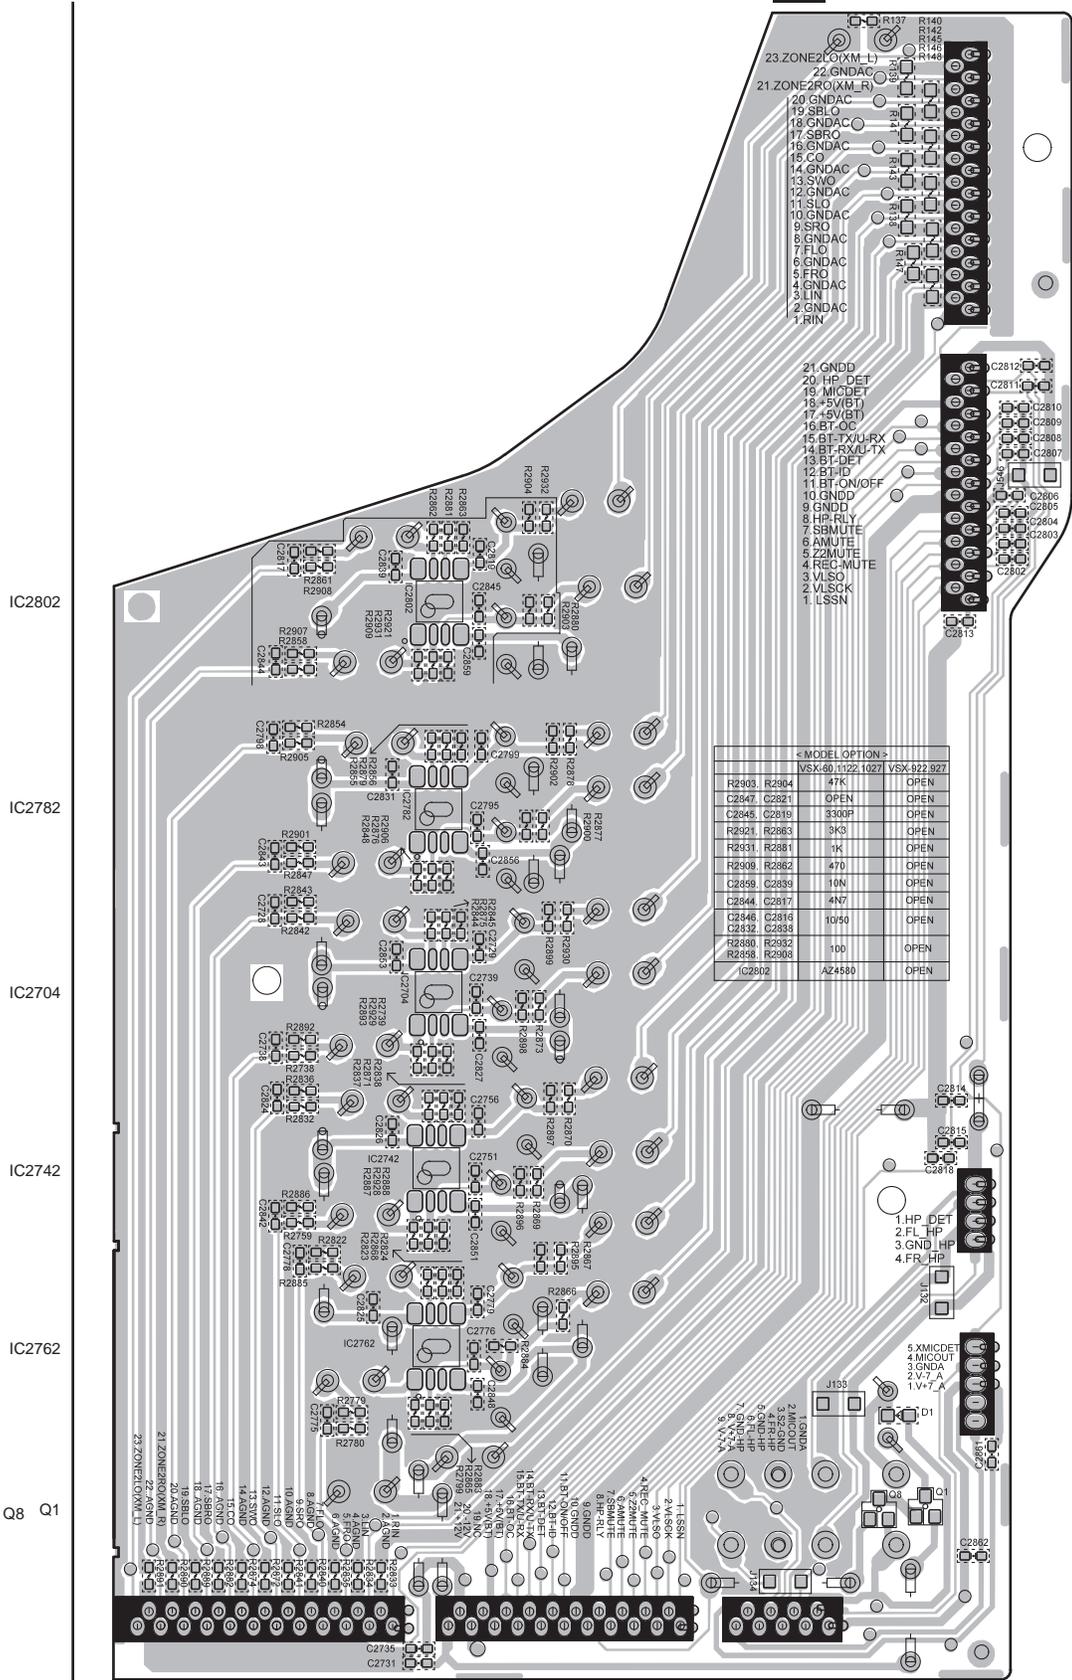

< MODEL OPTION >

VSX-60,1122,1027	VSX-922,927	
R2903, R2904	47K	OPEN
C2847, C2821	OPEN	OPEN
C2845, C2819	3300P	OPEN
R2921, R2863	3K3	OPEN
R2931, R2881	1K	OPEN
R2908, R2862	470	OPEN
C2859, C2839	10N	OPEN
C2844, C2817	4N7	OPEN
C2846, C2816	10*50	OPEN
C2832, C2838		
R2880, R2932	100	OPEN
R2858, R2908		
C2802	AZ4580	OPEN

IC2802
IC2782
IC2704
IC2742
IC2762
Q8 Q1

CN2110
CN2113
CN2111
CN2105

CN2107 CN2203 CN2112

VSX-1127-K




A
B
C
D
E
F


11.8 FRONT, POWER, MIC, FVIDEO and HP ASSYS

SIDE A


H FRONT ASSY

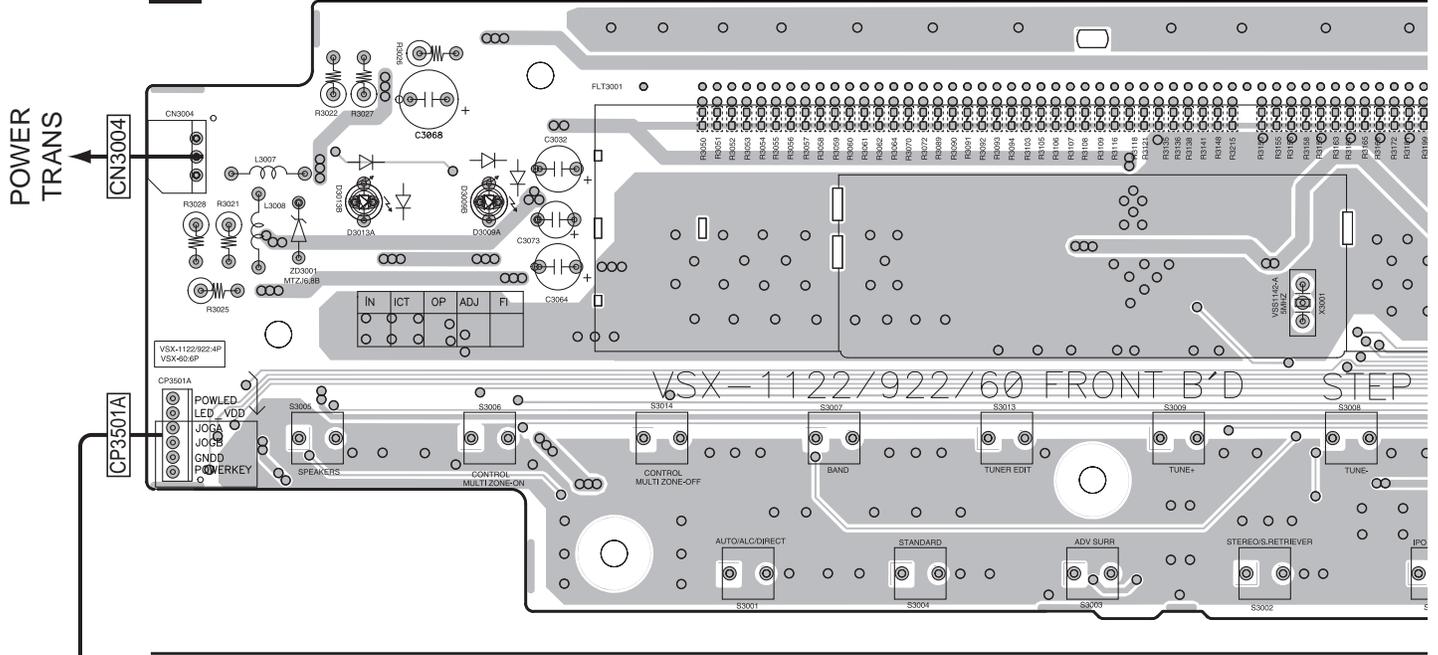

I POWER ASSY

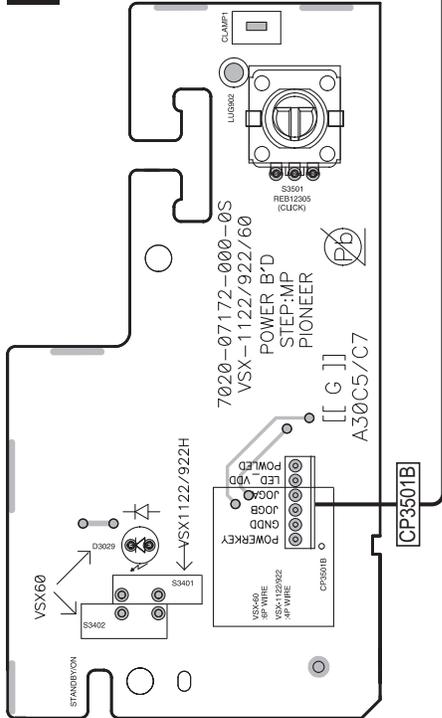

J MIC ASSY

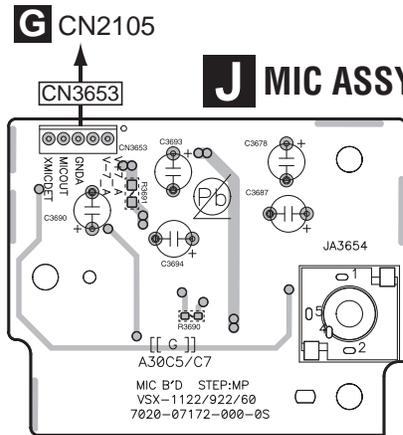


H I J

SIDE A

D CN601

CP3001

S CN8202

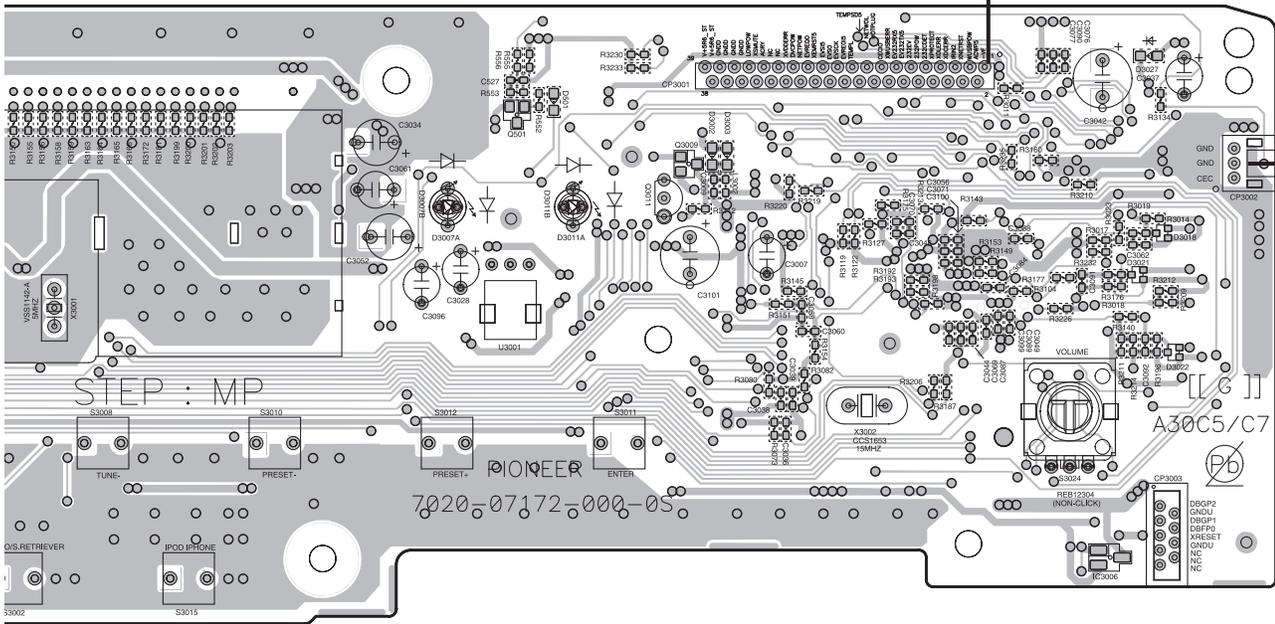


Q501

Q3009
Q3011


IC3006

K FVIDEO ASSY

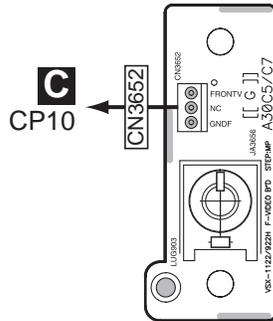

C CP10

L HP ASSY

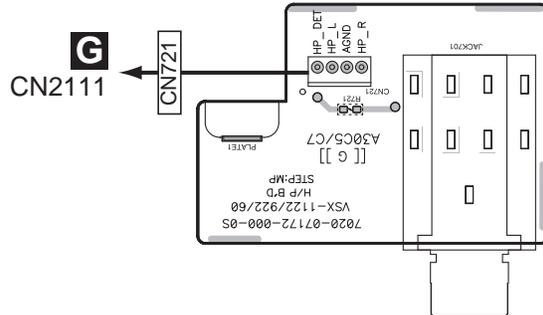

G CN2111


H K L

VSX-1127-K

SIDE B

H FRONT ASSY

A

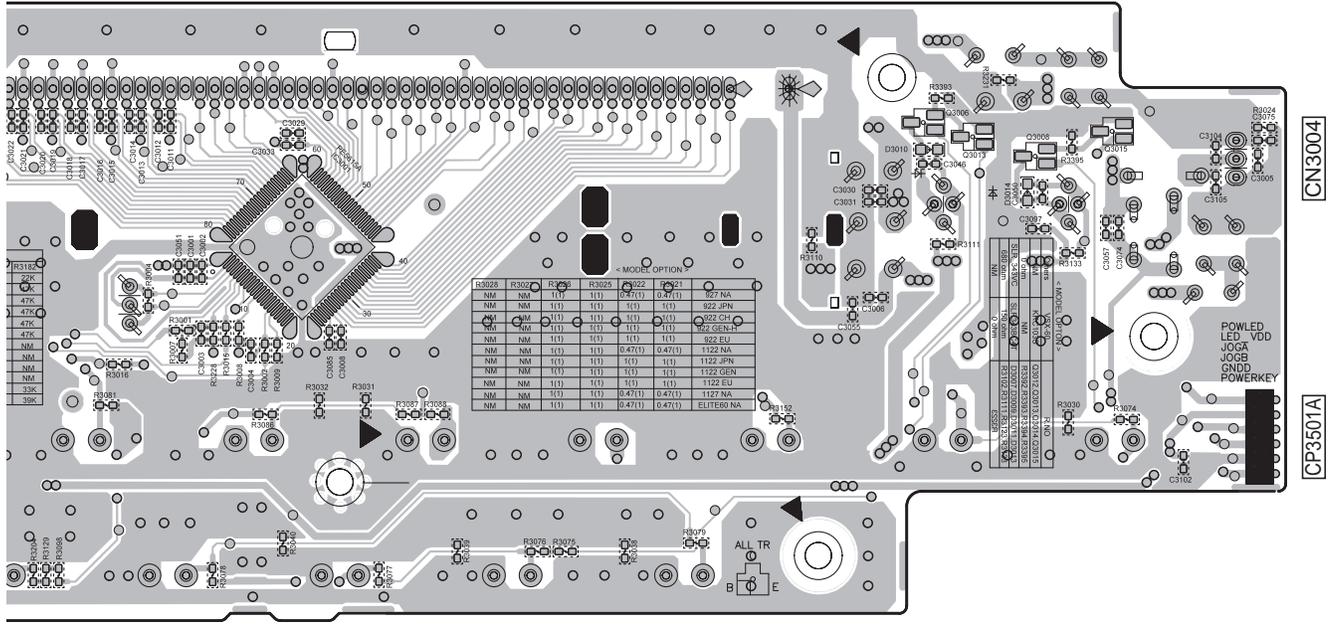

B


C

IC3001

Q3006 Q3013 Q3008 Q3015

I POWER ASSY

D

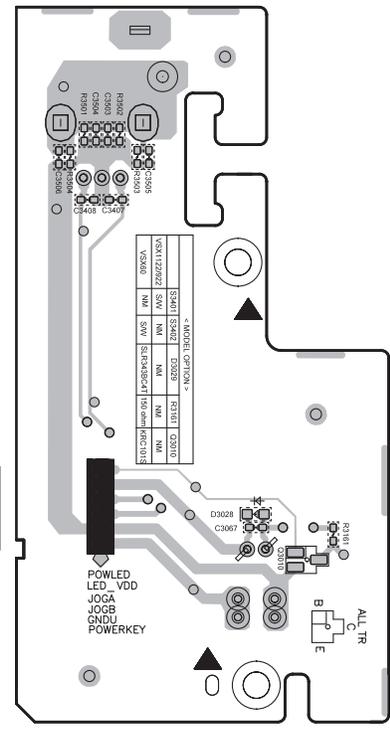


E

F

J MIC ASSY

IC3652

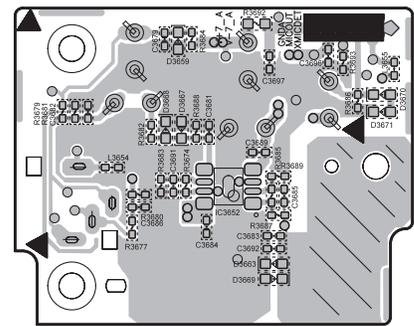



CN3653

11.9 G-L, G-R, WG-A and WG-B ASSYS

SIDE A



SIDE B

A

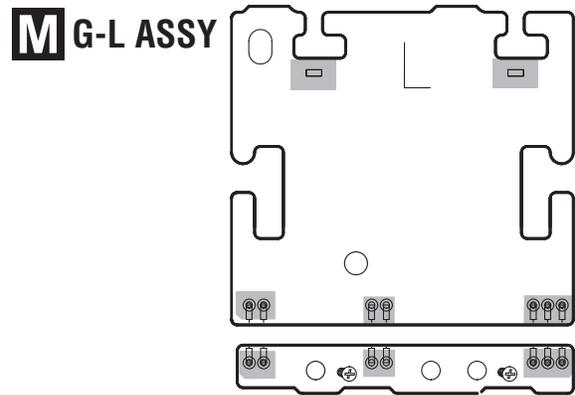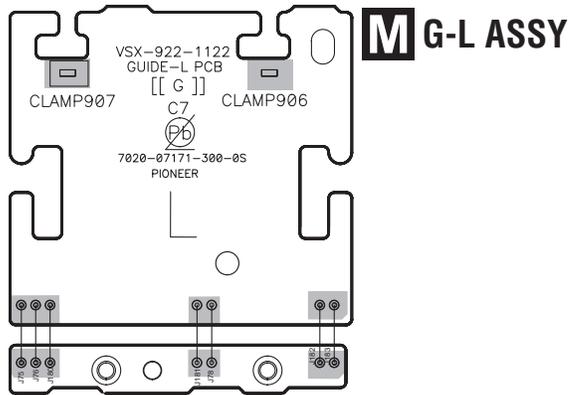

B



C

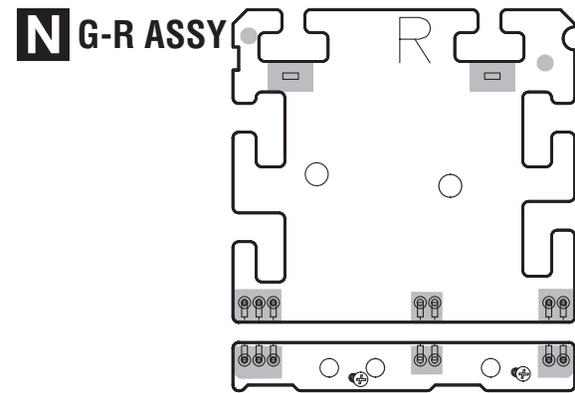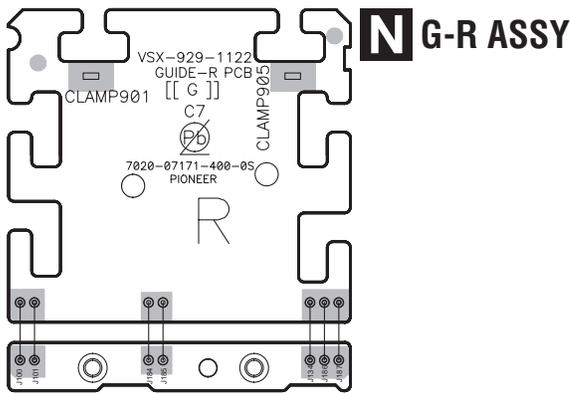

O WG-A ASSY

O WG-A ASSY

D

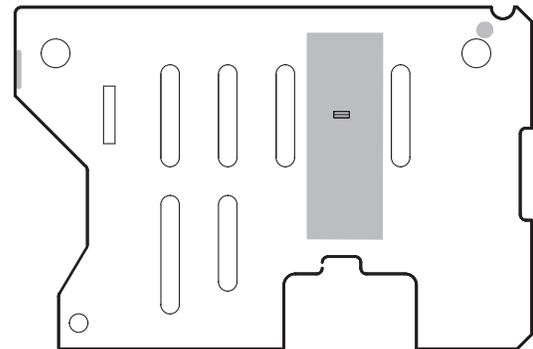
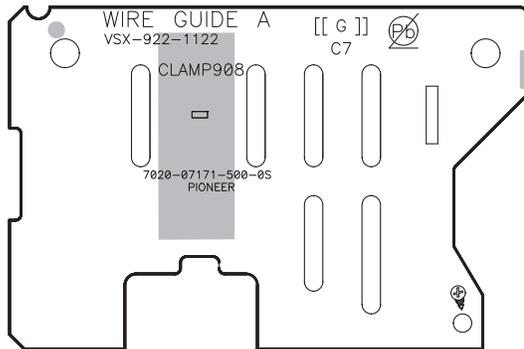


E

P WG-B ASSY

P WG-B ASSY


F

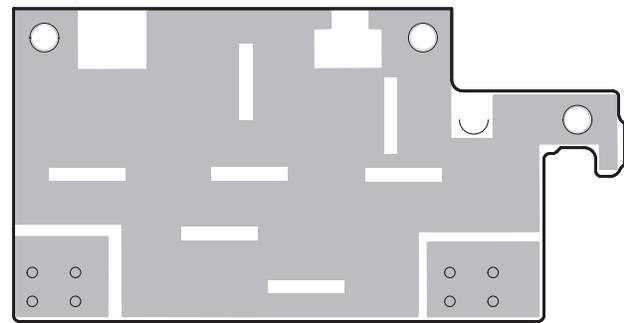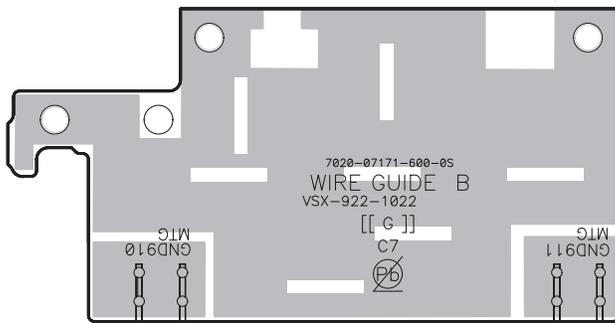

M N O P


11.10 CCG and BTCNT ASSYS

SIDE A

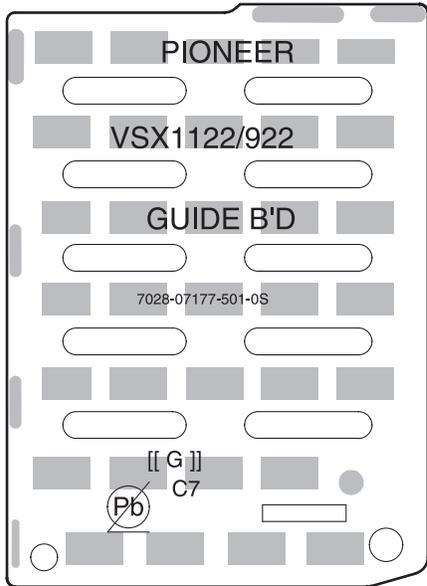


Q CCG ASSY

SIDE A

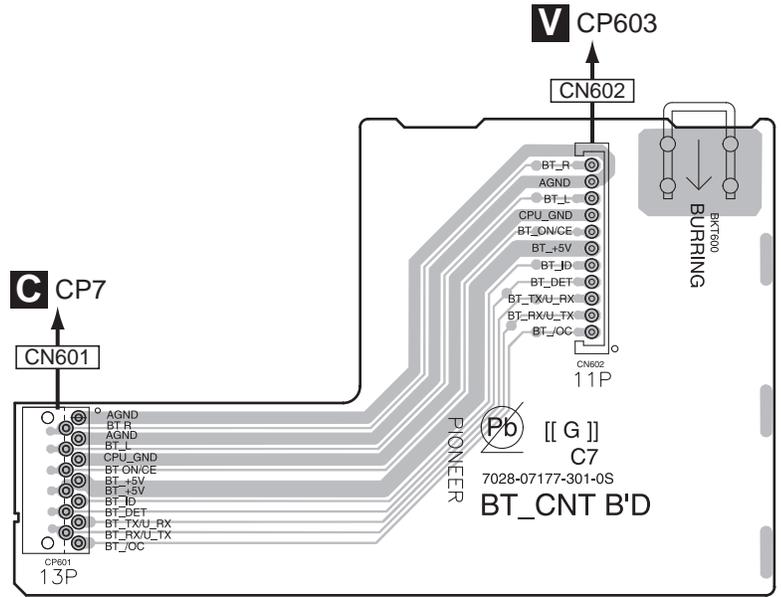


R BTCNT ASSY

SIDE B

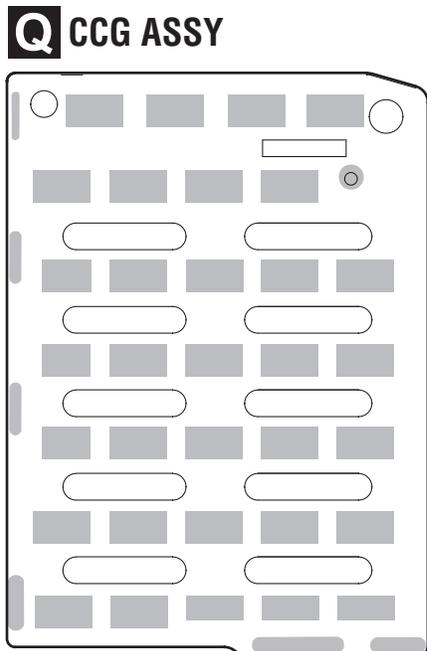

Q CCG ASSY

SIDE B

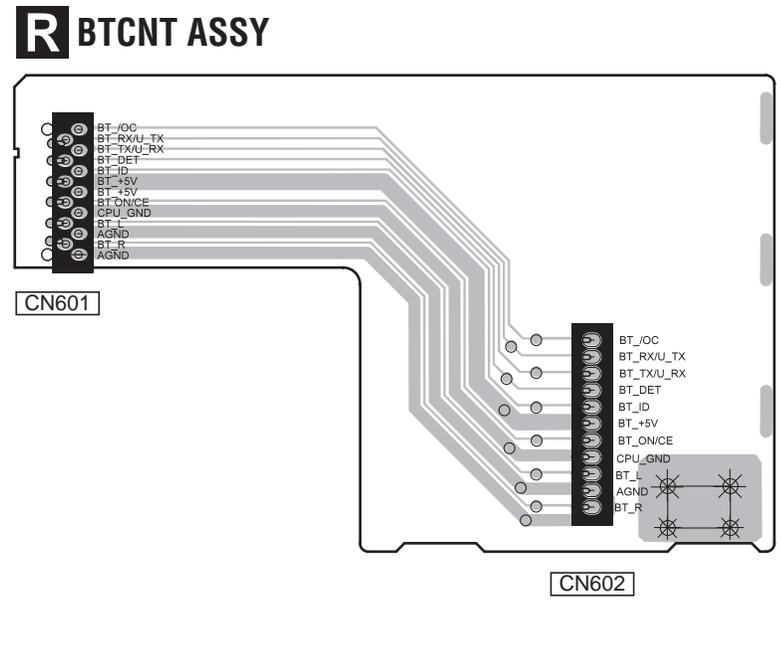


R BTCNT ASSY

11.12 BT ASSY

SIDE A

SIDE A

V BT ASSY

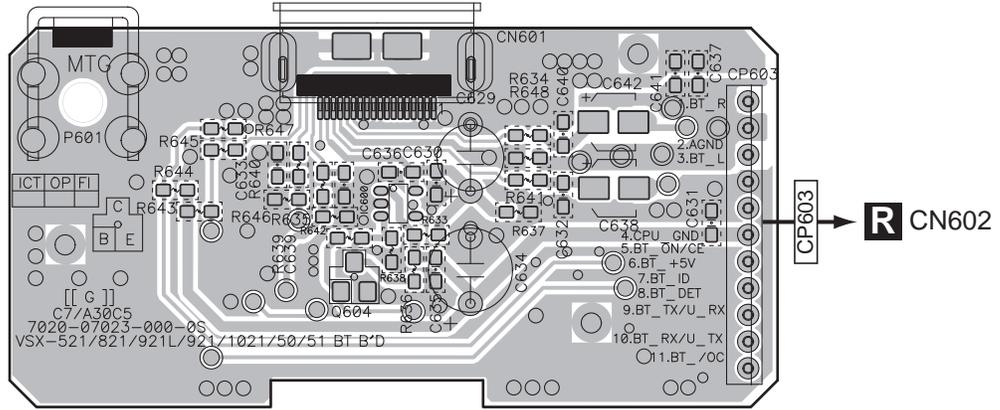


Q604 IC600

SIDE B

SIDE B

V BT ASSY

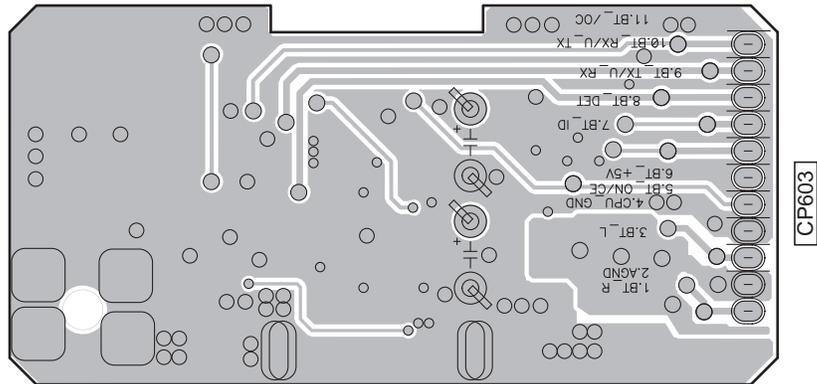


SIDE B

SIDE B

U SMPS ASSY

A

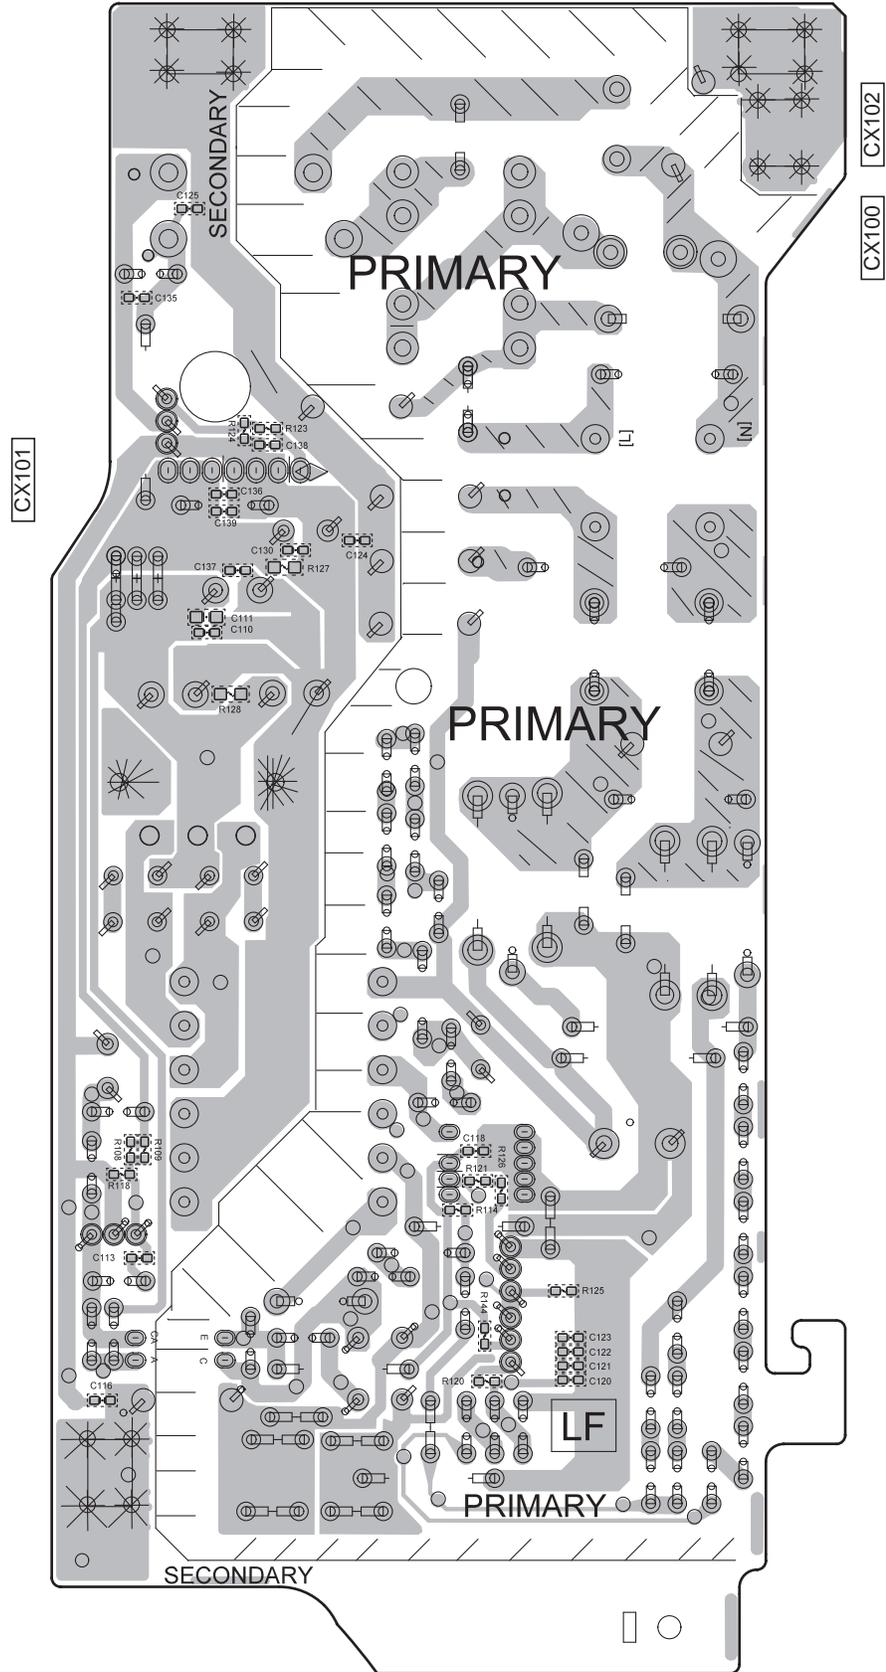

B

C

D

E

F



12. PCB PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.

● The Δ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω → 56 × 10¹ → 561 RD1/APU $\boxed{5}$ $\boxed{6}$ $\boxed{7}$ J
 47 kΩ → 47 × 10³ → 473 RD1/APU $\boxed{4}$ $\boxed{7}$ $\boxed{3}$ J
 0.5 Ω → R50 RN2H \boxed{R} $\boxed{5}$ $\boxed{0}$ K
 1 Ω → 1R0 RSIP $\boxed{1}$ \boxed{R} $\boxed{0}$ K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 kΩ → 562 × 10¹ → 5621 RN1/4PC $\boxed{5}$ $\boxed{6}$ $\boxed{2}$ $\boxed{1}$ F

● Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

● SCHEMATIC DIAGRAM and PCB CONNECTION DIAGRAM → ● PCB PARTS LIST

BKT → none	BEAD → L	RLY → RY	SW → S
CLAMP → none	F → FU	RMC → U	VEC → S9***
W → none	FLT → V	RES → X	GND → KN
LUG → none	JACK → JA	XTAL → X9***	
P → none	JACK → JA9***	BD → L7***	
PACK → 9***	JK → JA	LED → D8***	
CP → CN	PT → T	Z → D9***	
CP → CN9***	REG → IC	ZD → D9***	
CX → CN9***	REG → IC9***	DZ → D9***	
FPC → CN9***			

LIST OF ASSEMBLIES

Mark	Symbol and Description	VSX-1127-K/CUXE	VSX-1122-K/CUXESM	VSX-60/UXECB	VSX-1027-K/CUXE
NSP	1..PCB TTL ASSY MAIN	7025HK1110020-IL	7025HK1110010-IL	7025HK1110030-IL	7025HK1109010-IL
	2..MAIN ASSY	7028071711010-IL	7028071711010-IL	7028071711040-IL	7028071711010-IL
	2..VIDEO ASSY	7028071712020-IL	7028071712070-IL	7028071712040-IL	7028071712070-IL
	2..G-L ASSY	7028071713040-IL	7028071713040-IL	7028071713040-IL	7028071713040-IL
	2..G-R ASSY	7028071714040-IL	7028071714040-IL	7028071714040-IL	7028071714040-IL
	2..WG-A ASSY	7028071715040-IL	7028071715040-IL	7028071715040-IL	7028071715040-IL
	2..WG-B ASSY	7028071716040-IL	7028071716040-IL	7028071716040-IL	7028071716040-IL
NSP	1..PCB TTL ASSY DMAIN	7025HK1110021-IL	7025HK1110011-IL	7025HK1110031-IL	7025HK1109011-IL
	2..D-MAIN ASSY	7028071752020-IL	7028071752040-IL	7028071752040-IL	7028071752070-IL
NSP	1..PCB TTL ASSY FRONT	7025HK1110022-IL	7025HK1110012-IL	7025HK1110032-IL	7025HK1109012-IL
	2..FRONT ASSY	7028071721050-IL	7028071721010-IL	7028071721040-IL	7028071721060-IL
	2..POWER ASSY	7028071722010-IL	7028071722010-IL	7028071722040-IL	7028071722010-IL
	2..MIC ASSY	7028071723040-IL	7028071723040-IL	7028071723040-IL	7028071723040-IL
	2..FVIDEO ASSY	7028071724040-IL	7028071724040-IL	7028071724040-IL	7028071724040-IL
	2..HP ASSY	7028071725040-IL	7028071725040-IL	7028071725040-IL	7028071725040-IL
NSP	1..PCB TTL ASSY AUDIO	7025HK1110023-IL	7025HK1110013-IL	7025HK1110033-IL	7025HK1109013-IL
	2..AUDIO ASSY	7028071741050-IL	7028071741010-IL	7028071741040-IL	7028071741010-IL
NSP	1..PCB TTL ASSY IR	7025HK1110024-IL	7025HK1110014-IL	7025HK1110034-IL	7025HK1109014-IL
	2..IR ASSY	7028071771010-IL	7028071771010-IL	7028071771040-IL	7028071771010-IL
	2..SMPS ASSY	7028071772010-IL	7028071772010-IL	7028071772040-IL	7028071772010-IL
	2..BRG ASSY	7028071773040-IL	7028071773040-IL	7028071773040-IL	7028071773070-IL
	2..BTCNT ASSY	7028071774040-IL	7028071774040-IL	7028071774040-IL	7028071774040-IL
2..CCG ASSY	7028071775040-IL	7028071775040-IL	7028071775040-IL	7028071775040-IL	
NSP	1..PCB TTL ASSY AMP7	7025HK1110025-IL	7025HK1110015-IL	7025HK1110035-IL	7025HK1109015-IL
	2..AMP7 ASSY	7028071731040-IL	7028071731040-IL	7028071731040-IL	7028071731040-IL
NSP	1..PCB TTL ASSY FHDMI	7025HK1110026-IL	7025HK1110016-IL	7025HK1110036-IL	Not used
	2..FHDMI ASSY	7028071791040-IL	7028071791040-IL	7028071791040-IL	Not used
NSP	1..PCB TTL ASSY F-USB	7025HK1110027-IL	7025HK1110017-IL	7025HK1110037-IL	7025HK1109017-IL
	2..F-USB ASSY	7028071761020-IL	7028071761020-IL	7028071761020-IL	7028071761020-IL
NSP	1..PCB TTL ASSY BT	7025HK1110028-IL	7025HK1110018-IL	7025HK1110038-IL	7025HK1109018-IL
	2..BT ASSY	7028070231010-IL	7028070231010-IL	7028070231010-IL	7028070231010-IL

CONTRAST OF PCB ASSEMBLIES

A AUDIO ASSY

7028071741050-IL, 7028071741040-IL and 7028071741010-IL are constructed the same except for the following:

Mark	Symbol and Description	7028071741050-IL	7028071741040-IL	7028071741010-IL
	IC2503 Electric VOL IC (2 ch)	BD3812F	BD3812F	Not used
	JA2102 Ter, RCA 2pin	G601206A0005Y-IL	G602421E0002Y-IL	G601206A0005Y-IL

C MAIN ASSY

7028071711010-IL and 7028071711040-IL are constructed the same except for the following:

Mark	Symbol and Description	7028071711010-IL	7028071711040-IL
⚠	IC5 Liner Regulator IC	Not used	J126781200040-IL

D D-MAIN ASSY

7028071752020-IL, 7028071752040-IL and 7028071752070-IL are constructed the same except for the following:

Mark	Symbol and Description	7028071752020-IL	7028071752040-IL	7028071752070-IL
	IC1802 D/A Converter IC	AK4388ET	AK4388ET	Not used
	IC1803 Zero Delay Buffer	IDT6V60008DCG	Not used	Not used
	IC9207 IC	TC74VHC08FK	TC74VHC08FK	Not used
	JA1801 Pin Jack (2P)	G601206A0700Y-IL	G601206A0700Y-IL	Not used
	JA1802 Ter, RCA 1pin	Not used	Not used	G60011703000Y-IL
	JA1804 Module	E100216500010-IL	E100216500010-IL	Not used

E IR ASSY

7028071771010-IL and 7028071771040-IL are constructed the same except for the following:

Mark	Symbol and Description	7028071771010-IL	7028071771040-IL
	IC501 IC, Logic-interface	Not used	J046323200020-IL
	Q508, Q511, Q524 Semi, BRT/PNP RC	Not used	J502010300210-IL
	Q519, Q521, Q523 Semi, TR/GE PNP 2SA	Not used	J5001266G0050-IL
	JA501 CN. Wafer Interface	Not used	L103090090040-IL
	JA502 Jack, D3.5	Not used	G401PJ3080100-IL
	503 Bracket	4010210196100-IL	Not used

F VIDEO ASSY

7028071712020-IL, 7028071712070-IL and 7028071712040-IL are constructed the same except for the following:

Mark	Symbol and Description	7028071712020-IL	7028071712070-IL	7028071712040-IL
	IC1007 Character Generator	PDC162A	Not used	Not used
	X1003 Crystal	E80014R318080-IL	Not used	Not used
	JA1000 Ter, RCA 6pin	Not used	Not used	G603610A0032Y-IL
	JA1001 Ter, RCA 9pin	G607902AA133Y-IL	G607902AA133Y-IL	G607902AA151Y-IL
	JA1001 Ter, RCA 9pin	G607902AA151Y-IL	Not used	Not used

G BRG ASSY

7028071773040-IL and 7028071773070-IL are constructed the same except for the following:

Mark	Symbol and Description	7028071773040-IL	7028071773070-IL
	IC2802 IC, Linear OP	J121458001010-IL	Not used

H FRONT ASSY

7028071721050-IL, 7028071721010-IL, 7028071721040-IL and 7028071721060-IL are different in part number, they consist of the same components.

I POWER ASSY

7028071722010-IL and 7028071722040-IL are constructed the same except for the following:

Mark	Symbol and Description	7028071722010-IL	7028071722040-IL
	D3029 LED, Round	Not used	K500036001120-IL

U SMPS ASSY

7028071772010-IL and 7028071772040-IL are constructed the same except for the following:

Mark	Symbol and Description	7028071772010-IL	7028071772040-IL
	CN9100 Connector	L108396030010-IL	Not used

Mark No. Description

Part No.

PARTS LIST (VSX-1127-K)

A AUDIO ASSY

SEMICONDUCTORS

IC 2501	BD3473KS2
IC 2502	J040406600010-IL
IC 2503	BD3812F
IC 2702,2704,2706	J121458001010-IL
Q 2401	J5023209Y0010-IL
Q 2402	J5001281Y0010-IL

MISCELLANEOUS

JA 2101 TER,RCA 6PIN	G603610A0001Y-IL
JA 2102 TER,RCA 2PIN	G601206A0005Y-IL
JA 2103 TER,RCA 4PIN	G602421E0046Y-IL

RESISTORS

R 374,377	C060033065050-IL
-----------	------------------

B AMP7 ASSY

SEMICONDUCTORS

Q 401,413,425,437	J5001024Y0050-IL
Q 407,408,417,419	J5000992F0050-IL
Q 412,424,436,448	J5023206Y0050-IL
Q 420,431,432,443	J5000992F0050-IL
Q 444,455,456,467	J5000992F0050-IL
Q 449,461,473	J5001024Y0050-IL
Q 460,472,484	J5023206Y0050-IL
Q 468,479,480	J5000992F0050-IL
D 9401,9404,9407,9410	K06005R134520-IL
D 9402,9403,9405,9406	K06004R344520-IL
D 9408,9409,9411,9412	K06004R344520-IL
D 9413,9416,9419	K06005R134520-IL
D 9414,9415,9418,9418	K06004R344520-IL
D 9420,9421	K06004R344520-IL

MISCELLANEOUS

VR 401-407 VR,SEMI CARBON MOLD	C541102315000-IL
400,401 BRACKET	4010210196100-IL

Mark No. Description

Part No.

RESISTORS

⚠ R 406,450,494,537	F320184710050-IL
⚠ R 424,425,430,431	N113136647820-IL
R 443,487,530,573	C060047065060-IL
⚠ R 467,468,474,475	N113136647820-IL
R 493	C060033065050-IL
⚠ R 511,512,517,518	N113136647820-IL
⚠ R 554,555,561,562	N113136647820-IL
⚠ R 580,623,666	F320184710050-IL
⚠ R 597,598,603,604	N113136647820-IL
R 616,659,702	C060047065060-IL
⚠ R 640,641,646,647	N113136647820-IL
⚠ R 683,684,689,690	N113136647820-IL

CAPACITORS

C 419	D04010108C240-IL
-------	------------------

C MAIN ASSY

SEMICONDUCTORS

⚠ IC 1	J126781200040-IL
⚠ IC 2	J126791200060-IL
⚠ IC 3	J126780500110-IL
⚠ IC 4	J126790500070-IL
Q 14,15	J5023198Y0000-IL
Q 16	J5000992F0050-IL
Q 17	J5000916Y0050-IL
⚠ D 7	K047100600220-IL
⚠ D 10-13,23	K000400700220-IL
⚠ D 4912	K047604000020-IL
D 9002	K06005R144520-IL
D 9024,9025	K06012R044520-IL

MISCELLANEOUS

JA 1,2 TER,BOARD SCREW 8P	G614108V1010M-IL
JA 3 TER,BOARD SCREW 2P	G611201A0200Y-IL
JA 50 TUNER,FM/AM	E903004100780-IL
RY 2-6 RELAY	G680120502050-IL
CN 9007,9019 CN,WAFER	L109012511320-IL
CN 9008,9016-9018 CN.WAFER	L109012510920-IL

Mark	No.	Description	Part No.
	CN 9009	CN,WAFER	L109012511120-IL
	CN 9012	CN,WAFER	L109012511520-IL
	2	TERMINAL	3790040886000-IL
⚠	33,34	FUSE,MICRO	G658315250050-IL

RESISTORS

R	5,7,9,11	C060010065050-IL
R	6,8,10,12	C060010066050-IL
R	13,15,17	C060010065050-IL
R	14,16,18	C060010066050-IL
R	41,42	C060R22065050-IL
R	25	C0605R6065050-IL
R	64	C060022063050-IL
R	66	C0604R7065050-IL

CAPACITORS

C	55,58	D040103089000-IL
C	76	D040682083000-IL
C	84,85	D040472084020-IL
C	101	D04010108C240-IL

**D D-MAIN ASSY
SEMICONDUCTORS**

IC	101	UPD61110GM-100UEVA
IC	102,9201	J001982566010-IL
IC	104,604,1808	TC7WHU04FK
IC	603	PE7008A
IC	608	TC74VHCT541AFK
IC	610,1509,1806	TC74VHC126FK
IC	611	TC74VHCT126AFK
IC	612,1502	TC74VHCT08AFKS1
IC	613,1601,1804,9003	TC74VHC08FK
IC	614,701,9008,9208	TC7SH08FUS1
IC	901,910	TC74LCX541FK
IC	902,911	TC7SZ125FU
IC	909	ADV7181CBSTZ
⚠	IC 1216	LP2996M
⚠	IC 1403	J040740400270-IL
⚠	IC 1605	AAT4610BIGV-1
IC	1801	AK4588VQ
IC	1802	AK4388ET
IC	1803	IDT6V60008DCG
IC	1805	TC74VHC157FK
IC	1807	J040740400270-IL
IC	1812	TC7SZ126FU
IC	9001	J001986466010-IL
IC	9102	BU4094BCFV
⚠	IC 9202	BD2226G
IC	9206	341S2162
IC	9207	TC74VHC08FK
⚠	IC 9401,9511,9519	S-1170B50UC-OJJ
⚠	IC 9501	S-1172B10-U5
⚠	IC 9502,9518,9523	S-1172B12-E6
⚠	IC 9508	S-1170B25UC-OTK
⚠	IC 9515	S-1172B15-E6
⚠	Q 9503,9507,9516	J543045010060-IL
MISCELLANEOUS		
JA	1801	PIN JACK (2P)
JA	1803,1804	MODULE
KN	9801	BRACKET
⚠	P 601	SW,POLY
		G601206A0700Y-IL
		E100216500010-IL
		4010210196100-IL
		G300003500010-IL

Mark	No.	Description	Part No.
		CAPACITORS	
	C	1509	D040222081000-IL

**E IR ASSY
MISCELLANEOUS**

JA	504,505	JACK,D3.5	G401PJ3080100-IL
CN	9511	CN,WAFER	L109012510920-IL
CN	9512	CN,WAFER	L109012511520-IL
CN	9513	CN,WAFER	L109012512720-IL
	501,503	BRACKET	4010210196100-IL

**F VIDEO ASSY
SEMICONDUCTORS**

IC	1001	J171132900010-IL
IC	1007	PDC162A
IC	1008	NJM2505AF
Q	910	J5023209Y0010-IL

MISCELLANEOUS

JA	1001	TER,RCA 9PIN	G607902AA151Y-IL
JA	1001	TER,RCA 9PIN	G607902AA133Y-IL
X	1003	CRYSTAL	E80014R318080-IL

**G BRG ASSY
SEMICONDUCTORS**

IC	2704,2742,2762,2782	J121458001010-IL
IC	2802	J121458001010-IL

MISCELLANEOUS

RY	701	RELAY	G680240202030-IL
CN	2107,2110	CN,WAFER	L109012512320-IL
CN	2112	CN,WAFER	L109012510920-IL
CN	2113,2203	CN,WAFER	L109012512120-IL

RESISTORS

R	720	C060010063050-IL
---	-----	------------------

**H FRONT ASSY
SEMICONDUCTORS**

IC	3001	PE5615A
IC	3005	J126077004210-IL
⚠	IC 9103	J126111700041-IL
Q	3011	J5001266G0050-IL
D	3007,3009,3011,3013	K500052009011-IL
D	9001	K06006R844520-IL

MISCELLANEOUS

V	3001	DISPLAY,FLT	K530166400010-IL
S	3001-3015	SWITCH	G180501000010-IL
S	3024	SW,ENCODER	G121125042011-IL
X	3001	RESONATOR,CERAMIC	E830500000020-IL
X	3002	CRYSTAL	E80015R000020-IL
	3000	FL HOLDER	4320211016000-IL
U	3001	MODULE,REMOCON	E940349003810-IL

RESISTORS

R	3021,3022	C060R47065050-IL
R	3025,3026	C060001065060-IL

Mark No. Description **Part No.**

Mark No. Description **Part No.**

A I POWER ASSY
MISCELLANEOUS
 S 3401 SWITCH G180501000010-IL
 S 3501 SW,ENCODER G121125052011-IL

T F-USB ASSY
MISCELLANEOUS
 JA 600 CN,PLUG CONTACT G480040000180-IL

J MIC ASSY
SEMICONDUCTORS
 IC 3652 J121458001010-IL

U SMPS ASSY
SEMICONDUCTORS
 ⚠ IC 100 K614123000010-IL
 ⚠ IC 102 J122258001010-IL
 ⚠ IC 116 J126243118010-IL
 Q 9100-9102 J5023198Y0000-IL
 ⚠ D 100-102,104 K040540600030-IL

B MISCELLANEOUS
 JA 3654 JACK,D3.5 G401PJ354H40Y-IL

⚠ D 103 K120306005510-IL
 D 105,106,109,110 K000400700220-IL
 D 108 K050000015000-IL
 D 9100,9102,9104,9106 K06022R044520-IL
 D 9101,9103,9105,9108 K06039R044520-IL

K FVIDEO ASSY
MISCELLANEOUS
 JA 3656 TER,RCA 1PIN G600101HG000Y-IL

D 9107,9110,9112,9117 K06022R044520-IL
 D 9109,9115 K06039R044520-IL
 D 9114 K06006R244520-IL
 D 9118 K06022R044520-IL

L HP ASSY
MISCELLANEOUS
 JA 701 JACK,D6.5 G402PJ612AG1Y-IL

MISCELLANEOUS
 ⚠ L 100 COIL,LINE FILTER D320201405510-IL
 ⚠ RY 101 RELAY G680050102020-IL
 ⚠ T 100 TRANS,SWITCHING E060283405510-IL
 ⚠ CN9100 CONNECTOR L108396030010-IL
 ⚠ CN9102 CN.WAFER 7.92MM L108011430210-IL

M G-L ASSY
 There is no service parts.

100,102 BRACKET 4010210196100-IL
 ⚠ FU 100 FUSE GLASS TUBE 20MM N751503151160-IL
 ⚠ FU 101 FUSE GLASS TUBE 20MM N751508001160-IL

N G-R ASSY
 There is no service parts.

RESISTORS

⚠ R 100 C060015564520-IL
 ⚠ R 101 C060022563520-IL
 R 104 C060022563520-IL
 ⚠ R 105,113,115 C060010563520-IL

O WG-A ASSY
 There is no service parts.

CAPACITORS

⚠ C 100 D02122407H010-IL
 C 102 D04010108K000-IL
 C 103 D00810207Q010-IL
 ⚠ C 104,105 D00847127H010-IL
 C 106-108 D041562081001-IL

P WG-B ASSY
 There is no service parts.

⚠ C 115,128 D00815248H010-IL
 ⚠ C 117 D008103589010-IL
 C 131,133 D008103589010-IL

Q CCG ASSY
 There is no service parts.

E R BTCNT ASSY
MISCELLANEOUS
 CN 602 CN.WAFER 2.0MM L101100041110-IL
 600 BRACKET 4010210196100-IL

V BT ASSY
SEMICONDUCTORS
 ⚠ IC 600 BD2224G

S FHDMI ASSY
SEMICONDUCTORS
 IC 8202 PCA9517DGK

MISCELLANEOUS
 CN 601 CONNECTOR CKS5712
 CN 603 CN.WAFER 2.0MM L101100031110-IL
 601 BRACKET 4010210196100-IL

F MISCELLANEOUS
 JA 8202 CN.WAFER L109100190060-IL
 JA 8203 CN.WAFER L109100190170-IL