


Service Manual

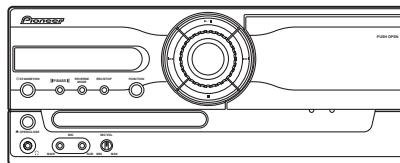

ORDER NO.
RRV3262

STEREO DVD CASSETTE DECK RECEIVER

XV-GX3

THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).

Model	Type	Power Requirement	Regional restriction codes (Region No.)	The voltage can be converted by the following method.	Remarks
XV-GX3	DFLXJ	AC 110-120V/220-230V/240V	3	With the voltage selector	
XV-GX3	DDXJ/RD	AC 110-127V/220-230V/240V	4	With the voltage selector	
XV-GX3	DDXJ/RB	AC 110-120V/220-230V/240V	2	With the voltage selector	
XV-GX3	MTXJ	AC 220-230V	3	—	



For details, refer to "Important Check Points for good servicing".

PIONEER CORPORATION 4-1, Meguro 1-chome, Meguro-ku, Tokyo 153-8654, Japan

PIONEER ELECTRONICS (USA) INC. P.O. Box 1760, Long Beach, CA 90801-1760, U.S.A.

PIONEER EUROPE NV Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium

PIONEER ELECTRONICS ASIACENTRE PTE. LTD. 253 Alexandra Road, #04-01, Singapore 159936

©PIONEER CORPORATION 2005

SAFETY INFORMATION



A This service manual is intended for qualified service technicians ; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual. Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

— WARNING ! —

B THE AEL (ACCESSIBLE EMISSION LEVEL) OF THE LASER POWER OUTPUT IS LESS THAN CLASS 1 BUT THE LASER COMPONENT IS CAPABLE OF EMITTING RADIATION EXCEEDING THE LIMIT FOR CLASS 1.

A SPECIALY INSTRUCTED PERSON SHOULD DO SERVICING OPERATION OF THE APPARATUS.

— LASER DIODE CHARACTERISTICS —

FOR DVD : MAXIMUM OUTPUT POWER : 5 mW

WAVELENGTH : 650 nm

FOR CD : MAXIMUM OUTPUT POWER : 7 mW

WAVELENGTH : 780 nm

C LABEL CHECK

DDXJ/RB,
DDXJ/RD,
MTXJ type
VRW1699




Printing on Rear Panel

CAUTION : CLASS 3B VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN, AVOID EXPOSURE TO THE BEAM.

注意：打開時會有 CLASS 3B 可見和不可見
鐳射輻射，請勿受鐳射束輻射。

VRW2159

DFLXJ type
VRW2159

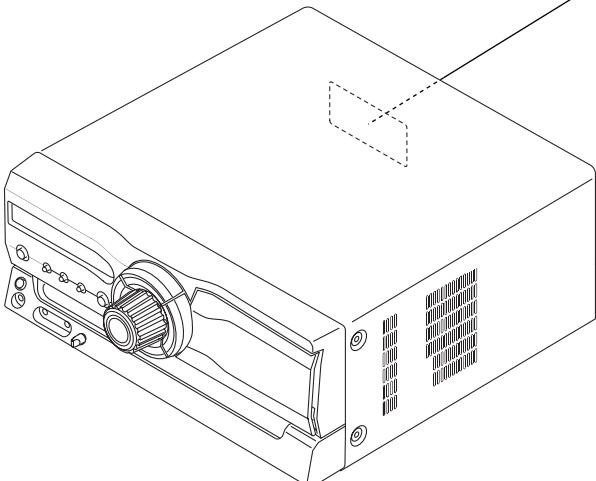

Additional Laser Caution

1. Laser Interlock Mechanism

- Loading switch (S101 on the LOAB Assy) is used for interlock mechanism of the laser. When this switch turned ON in SW2 (CLOSE) side (OPEN signal is 0V and CLOSE signal is 3.5V), a laser becomes the status which can completely oscillation.

Furthermore, the laser completely oscillates in the disc judgment and disc playback.

When player is power ON state and laser diode is not completely oscillating, 780nm laser diode is always oscillating by half power.

- Laser diode is driving with Q307 (650nm LD) and Q308 (780nm LD) on the DVDM Assy.

Therefore, when short-circuit between the emitter and collector of these transistors or the base voltage is supplied for transistors turn on, the laser oscillates. (failure mode)

- In the test mode *, there is the mode that the laser oscillates except for the disc judgment and playback. LD ON mode in the test mode oscillates with the laser forcibly.

The interlock mechanism mentioned above becomes invalid in this mode.

2. When the cover is open, close viewing through the objective lens with the naked eye will cause exposure to the laser beam.

* : Refer to page 65.

[Important Check Points for Good Servicing]

In this manual, procedures that must be performed during repairs are marked with the below symbol.
Please be sure to confirm and follow these procedures.

1. Product safety



Please conform to product regulations (such as safety and radiation regulations), and maintain a safe servicing environment by following the safety instructions described in this manual.

- ① Use specified parts for repair.
- Use genuine parts. Be sure to use important parts for safety.
- ② Do not perform modifications without proper instructions.

Please follow the specified safety methods when modification(addition/change of parts) is required due to interferences such as radio/TV interference and foreign noise.

- ③ Make sure the soldering of repaired locations is properly performed.

When you solder while repairing, please be sure that there are no cold solder and other debris.
Soldering should be finished with the proper quantity. (Refer to the example)

- ④ Make sure the screws are tightly fastened.
- Please be sure that all screws are fastened, and that there are no loose screws.
- ⑤ Make sure each connectors are correctly inserted.
- Please be sure that all connectors are inserted, and that there are no imperfect insertion.
- ⑥ Make sure the wiring cables are set to their original state.

Please replace the wiring and cables to the original state after repairs.
In addition, be sure that there are no pinched wires, etc.

- ⑦ Make sure screws and soldering scraps do not remain inside the product.
- Please check that neither solder debris nor screws remain inside the product.
- ⑧ There should be no semi-broken wires, scratches, melting, etc. on the coating of the power cord.
- Damaged power cords may lead to fire accidents, so please be sure that there are no damages.
If you find a damaged power cord, please exchange it with a suitable one.
- ⑨ There should be no spark traces or similar marks on the power plug.

When spark traces or similar marks are found on the power supply plug, please check the connection and advise on secure connections and suitable usage. Please exchange the power cord if necessary.

- ⑩ Safe environment should be secured during servicing.

When you perform repairs, please pay attention to static electricity, furniture, household articles, etc. in order to prevent injuries.
Please pay attention to your surroundings and repair safely.

2. Adjustments



To keep the original performance of the products, optimum adjustments and confirmation of characteristics within specification.
Adjustments should be performed in accordance with the procedures/instructions described in this manual.

3. Lubricants, Glues, and Replacement parts



Use grease and adhesives that are equal to the specified substance.
Make sure the proper amount is applied.

4. Cleaning



For parts that require cleaning, such as optical pickups, tape deck heads, lenses and mirrors used in projection monitors, proper cleaning should be performed to restore their performances.

5. Shipping mode and Shipping screws



To protect products from damages or failures during transit, the shipping mode should be set or the shipping screws should be installed before shipment. Please be sure to follow this method especially if it is specified in this manual.

A

B

C

D

E

F

CONTENTS


SAFETY INFORMATION	2
A 1. SPECIFICATIONS	5
2. EXPLODED VIEWS AND PARTS LIST	6
2.1 PACKING SECTION	6
2.2 EXTERIOR SECTION	8
2.3 FRONT PANEL SECTION	10
2.4 05 LOADER ASSY	12
2.5 TRAVERSE MECHANISM ASSY-S	14
2.6 DECK MECHANISM ASSY	15
3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM	16
3.1 BLOCK DIAGRAM	16
3.2 OVERALL WIRING CONNECTION DIAGRAM and LOAB ASSY	18
3.3 DVDM ASSY (1/2)	20
3.4 DVDM ASSY (2/2)	22
B 3.5 MAIN ASSY (1/4)	24
3.6 MAIN ASSY (2/4)	26
3.7 MAIN ASSY (3/4)	28
3.8 MAIN ASSY (4/4)	30
3.9 DISPLAY and MIC ASSYS	32
3.10 WAVEFORMS	34
4. PCB CONNECTION DIAGRAM	35
4.1 LOAB ASSY	35
4.2 DVDM ASSY	36
4.3 MAIN ASSY	38
4.4 DISPLAY ASSY	42
4.5 MIC ASSY	44
C 5. PCB PARTS LIST	46
6. ADJUSTMENT	57
6.1 DECK SECTION	57
6.1.1 ADJUSTMENT CONDITION	57
6.1.2 PLAYBACK and RECORDING SECTION	58
6.2 DVD SECTION	60
6.2.1 ADJUSTMENT ITEMS AND LOCATION	60
6.2.2 JIG AND MEASURING INSTRUMENTS	60
6.2.3 NECESSARY ADJUSTMENT POINTS	61
6.2.4 TEST MODE	62
6.2.5 MECHANISM ADJUSTMENT	63
D 7. GENERAL INFORMATION	65
7.1 DIAGNOSIS	65
7.1.1 TEST MODE	65
7.1.2 DISPLAY SPECIFICATION OF THE TEST MODE	66
7.1.3 FUNCTIONAL SPECIFICATION OF THE SHORTCUT KEY	67
7.1.4 SPECIFICATION OF THE MODEL INFORMATION DISPLAY	68
7.1.5 FUNCTIONAL SPECIFICATION OF THE SERVICE MODE	69
7.1.6 SERVICE TEST MODE	70
7.1.7 METHOD FOR DIAGNOSING DEGRADATION OF THE LDs ON THE PICKUP ASSY	72
7.1.8 DVD TROUBLE SHOOTING	73
7.1.9 ID NUMBER AND ID DATA SETTING	76
7.1.10 DISASSEMBLY	79
E 7.2 PARTS	89
7.2.1 IC	89
8. PANEL FACILITIES	92

2. EXPLODED VIEWS AND PARTS LIST

NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Screws adjacent to  mark on product are used for disassembly.
- For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

2.1 PACKING SECTION

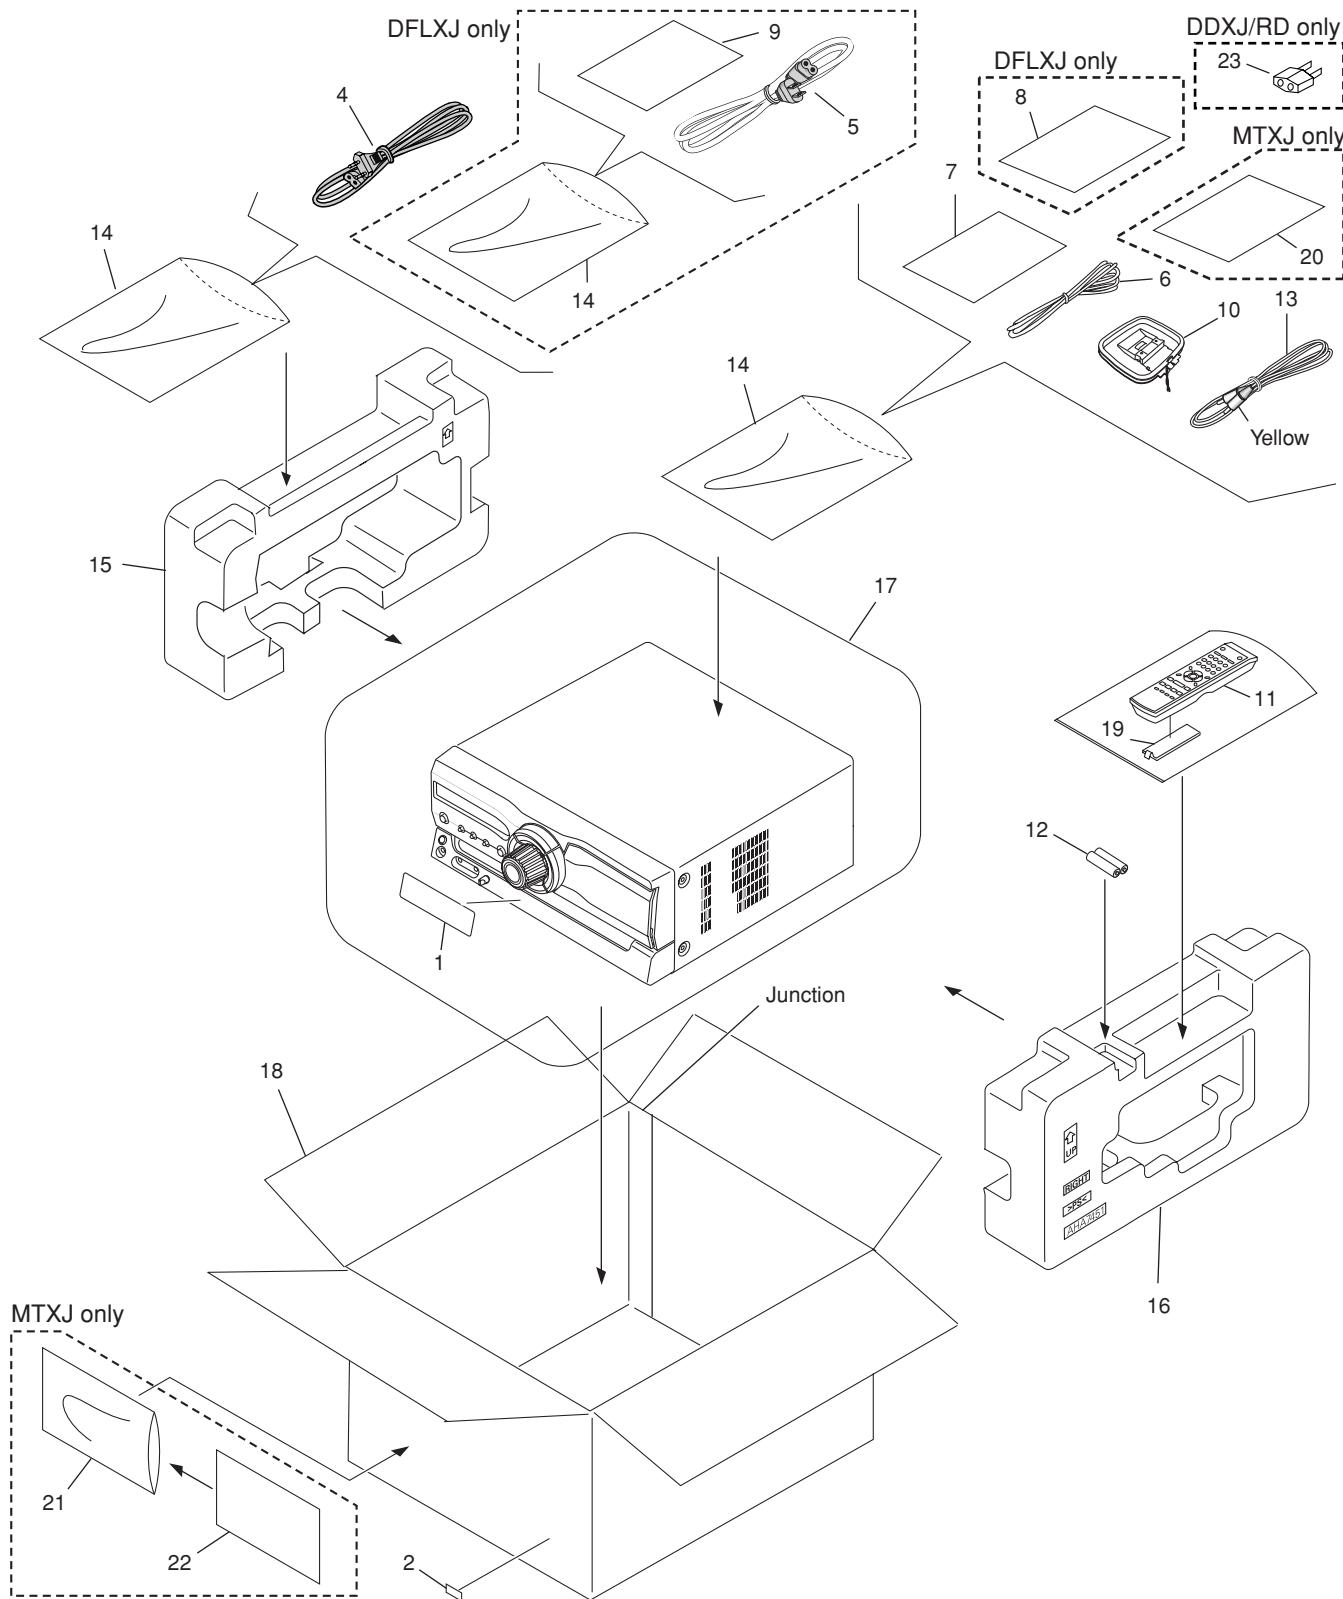

(1) PACKING SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.
NSP 1	Getter 2CH	See Contrast table (2)			
NSP 2	Label	VRW1629	16	Pad R	AHA7451
3		17	Packing Sheet	AHG7010
⚠ 4	Power Cord	ADG1154	18	Packing Case	See Contrast table (2)
⚠ 5	Power Cord	See Contrast table (2)	19	Battery Cover	VNK4998
			20	Service Map (Thai)	See Contrast table (2)
6	FM Antenna	ADH7030			
7	Operating Instructions (English)	See Contrast table (2)	21	Polyethylene Bag	See Contrast table (2)
8	Operating Instructions (Chinese)	See Contrast table (2)	NSP 22	Warranty Card (Thai)	See Contrast table (2)
9	Caution Card SB	See Contrast table (2)	23	Power Plug Adapter	See Contrast table (2)
10	AM Loop Antenna	ATB7013			
11	Remote Control	AXD7429			
NSP 12	Dry Cell Batteries (AA/R6)	VEM1031			
13	Video Cord	XDE3046			
NSP 14	Polyethylene Bag	Z21-038			
15	Pad L	AHA7450			

(2) CONTRAST TABLE

DFLXJ, DDXJ/RB, DDXJ/RD and MTXJ are constructed the same except for the following:

Mark	No.	Description	DFLXJ	DDXJ/RB	DDXJ/RD	MTXJ
NSP	1	Getter 2CH	AAX8096	AAX8096	AAX8097	AAX8096
⚠	5	Power Cord	ADG7097	Not used	Not used	Not used
	7	Operating Instructions (English)	ARB7347	ARB7347	Not used	Not used
	7	Operating Instructions (Spanish)	Not used	Not used	ARC7653	Not used
	7	Operating Instructions (Thai)	Not used	Not used	Not used	ARC7654
	8	Operating Instructions (Chinese)	ARC7655	Not used	Not used	Not used
	9	Caution Card SB	ARM7064	Not used	Not used	Not used
	18	Packing Case	XHD3577	XHD3580	XHD3579	XHD3578
	20	Service Map (Thai)	Not used	Not used	Not used	XRY3005
NSP	21	Polyethylene Bag	Not used	Not used	Not used	AHG7031
	22	Warranty Card (Thai)	Not used	Not used	Not used	XRY3004
	23	Power Plug Adapter	Not used	Not used	XKM3001	Not used

■ 1 ■ 2 ■ 3 ■ 4
2.2 EXTERIOR SECTION

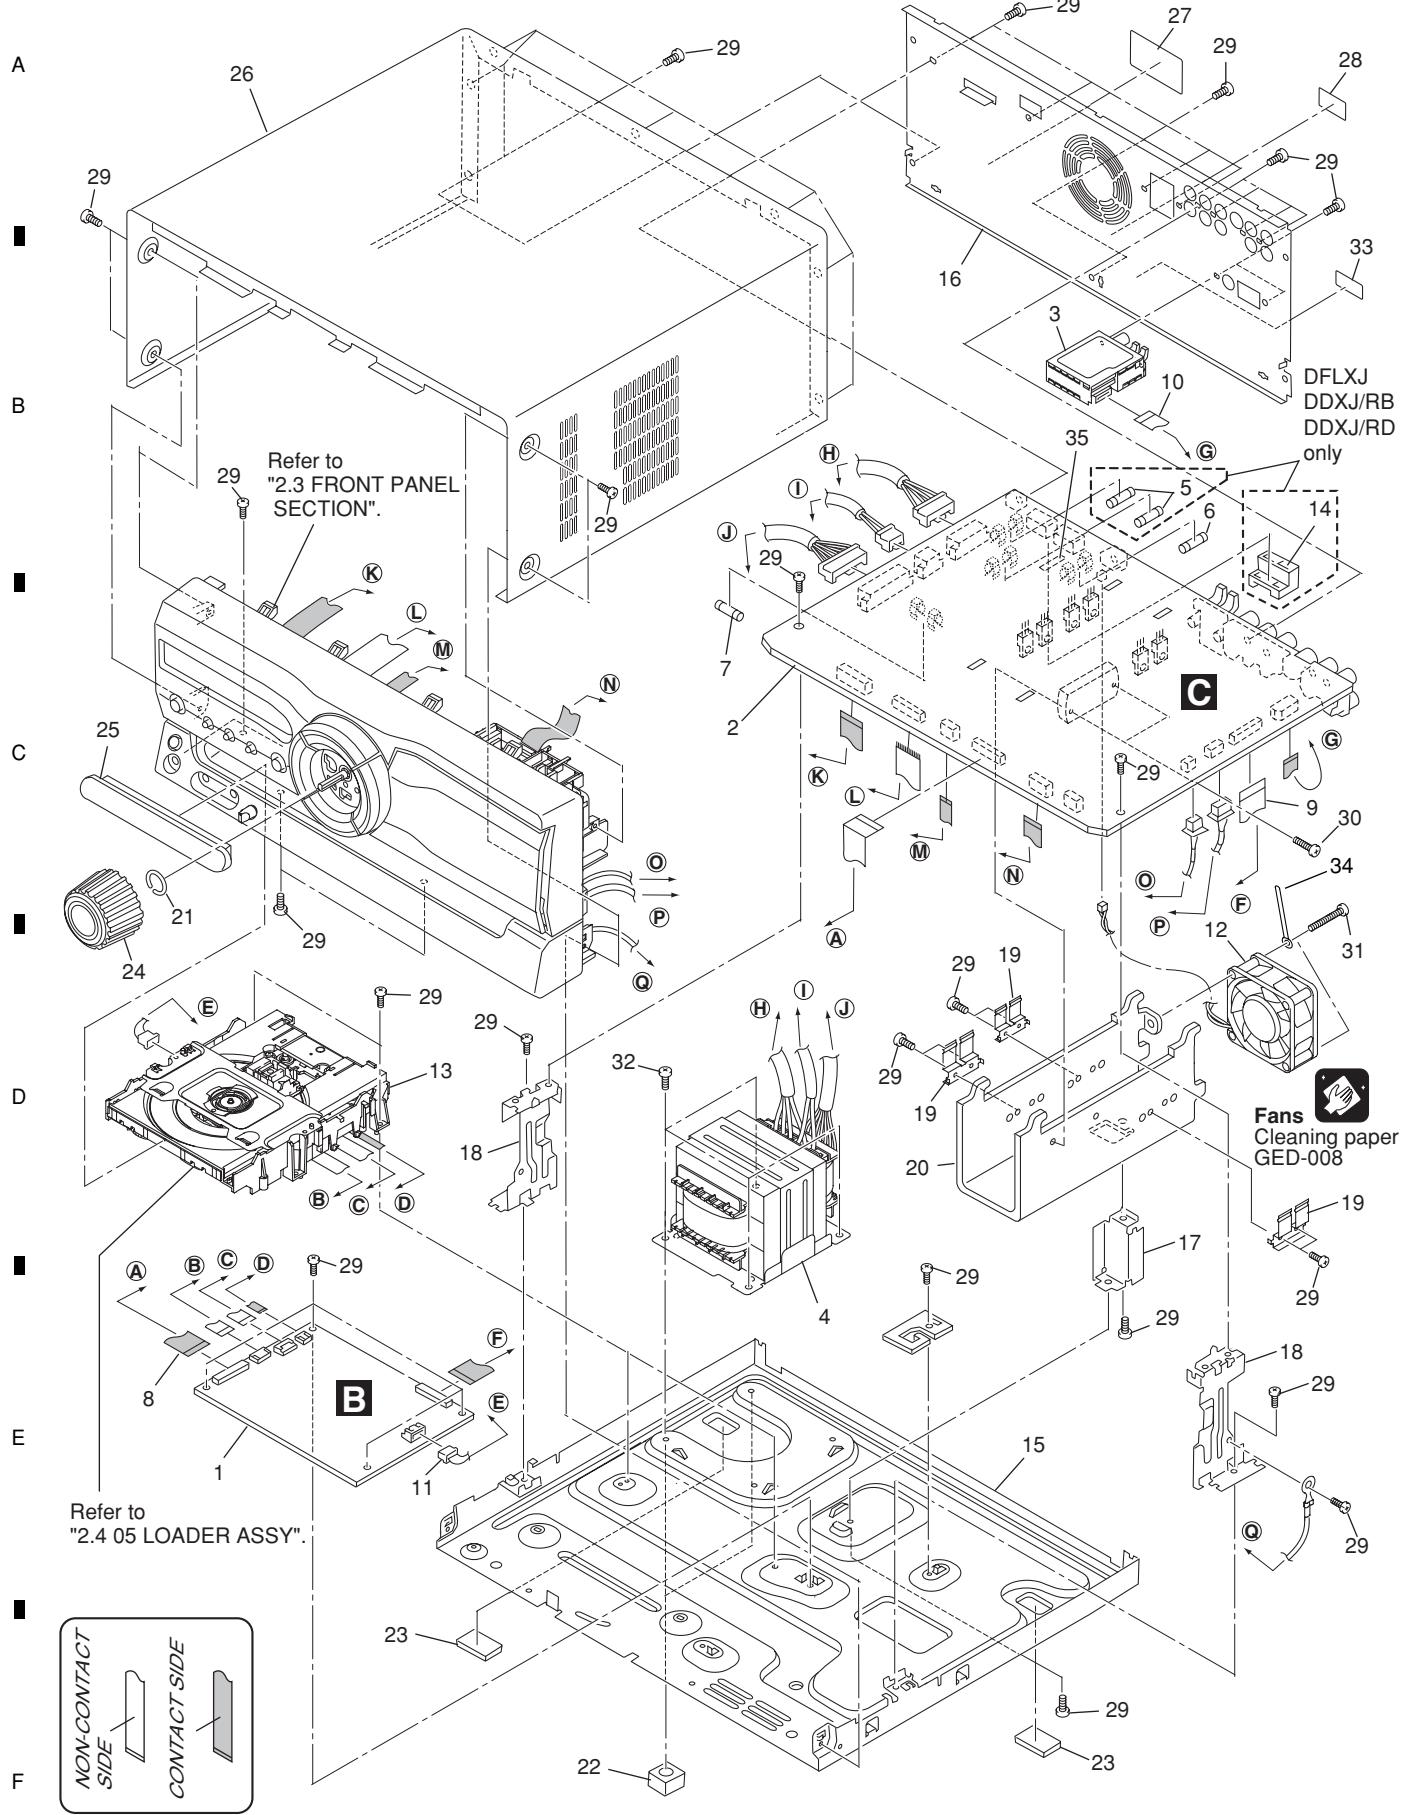

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	DVDM Assy	AWM7966	21	Ring	ABH7213
2	MAIN Assy	See Contrast table (2)	22	S Cover	AEB7262
3	FM/AM TUNER Unit	AXX7173	23	LEG Cushion	XEB3028
△ 4	Power Transformer	ATS7406	24	VOL Knob Assy	AAB7263
△ 5	Fuse (FU2, FU3)	See Contrast table (2)	25	Tray Panel	AAK8304
△ 6	Fuse (FU1)	See Contrast table (2)			
△ 7	Fuse (FU4)	REK1029(T5A)	26	Bonnet Case	AZN8013
8	25P F.F.C/60V	ADD7520	27	Caution Label	See Contrast table (2)
9	27P F.F.C/60V	ADD7521	NSP 28	ID Label Assy	VXW1002
10	11P F.F.C/60V	ADD7523	29	Screw	BBZ30P080FNI
			30	Screw	BBZ30P140FTC
11	Connector Assy	PG05KK-E45			
12	DC Fan Motor	XXM3009	31	Screw	BBZ30P300FTC
NSP 13	05 LOADER Assy	VWT1219	32	Screw	BCZ40P060FNI
14	VS Knob	See Contrast table (2)	NSP 33	Label	VRW1629
NSP 15	Bottom Chassis	ANA7186	34	Cord Clamper	RNH-184
			35	Fuse Card	See Contrast table (2)
16	Rear Panel DFL	See Contrast table (2)			
17	Heatsink Holder	AND7079			
18	Side Angle A	ANG7336			
19	FET Bracket A	ANG7418			
NSP 20	Heat Sink	ANH7184			

A

B

C

(2) CONTRAST TABLE

DFLXJ and DDXJ/RB and DDXJ/RD and MTXJ are constructed the same except for the following:


Mark	No.	Description	DFLXJ	DDXJ/RB	DDXJ/RD	MTXJ
△ 2	MAIN Assy	AWM8013	AWM8016	AWM8013	AWM8015	
△ 5	Fuse (FU2, FU3)	REK1025(T2A)	REK1025(T2A)	REK1025(T2A)	Not used	
△ 6	Fuse (FU1)	REK1028(T4A)	REK1028(T4A)	REK1028(T4A)	REK1025(T2A)	
14	VS Knob	AAD7690	AAD7690	AAD7690	Not used	
16	Rear Panel	ANC8357	ANC8370	ANC8369	ANC8368	
NSP 27	Caution Label	VRW2159	VRW1699	VRW1699	VRW1699	
35	Fuse Card	Not used	Not used	Not used	AAX2357	

D

E

F

2.3 FRONT PANEL SECTION

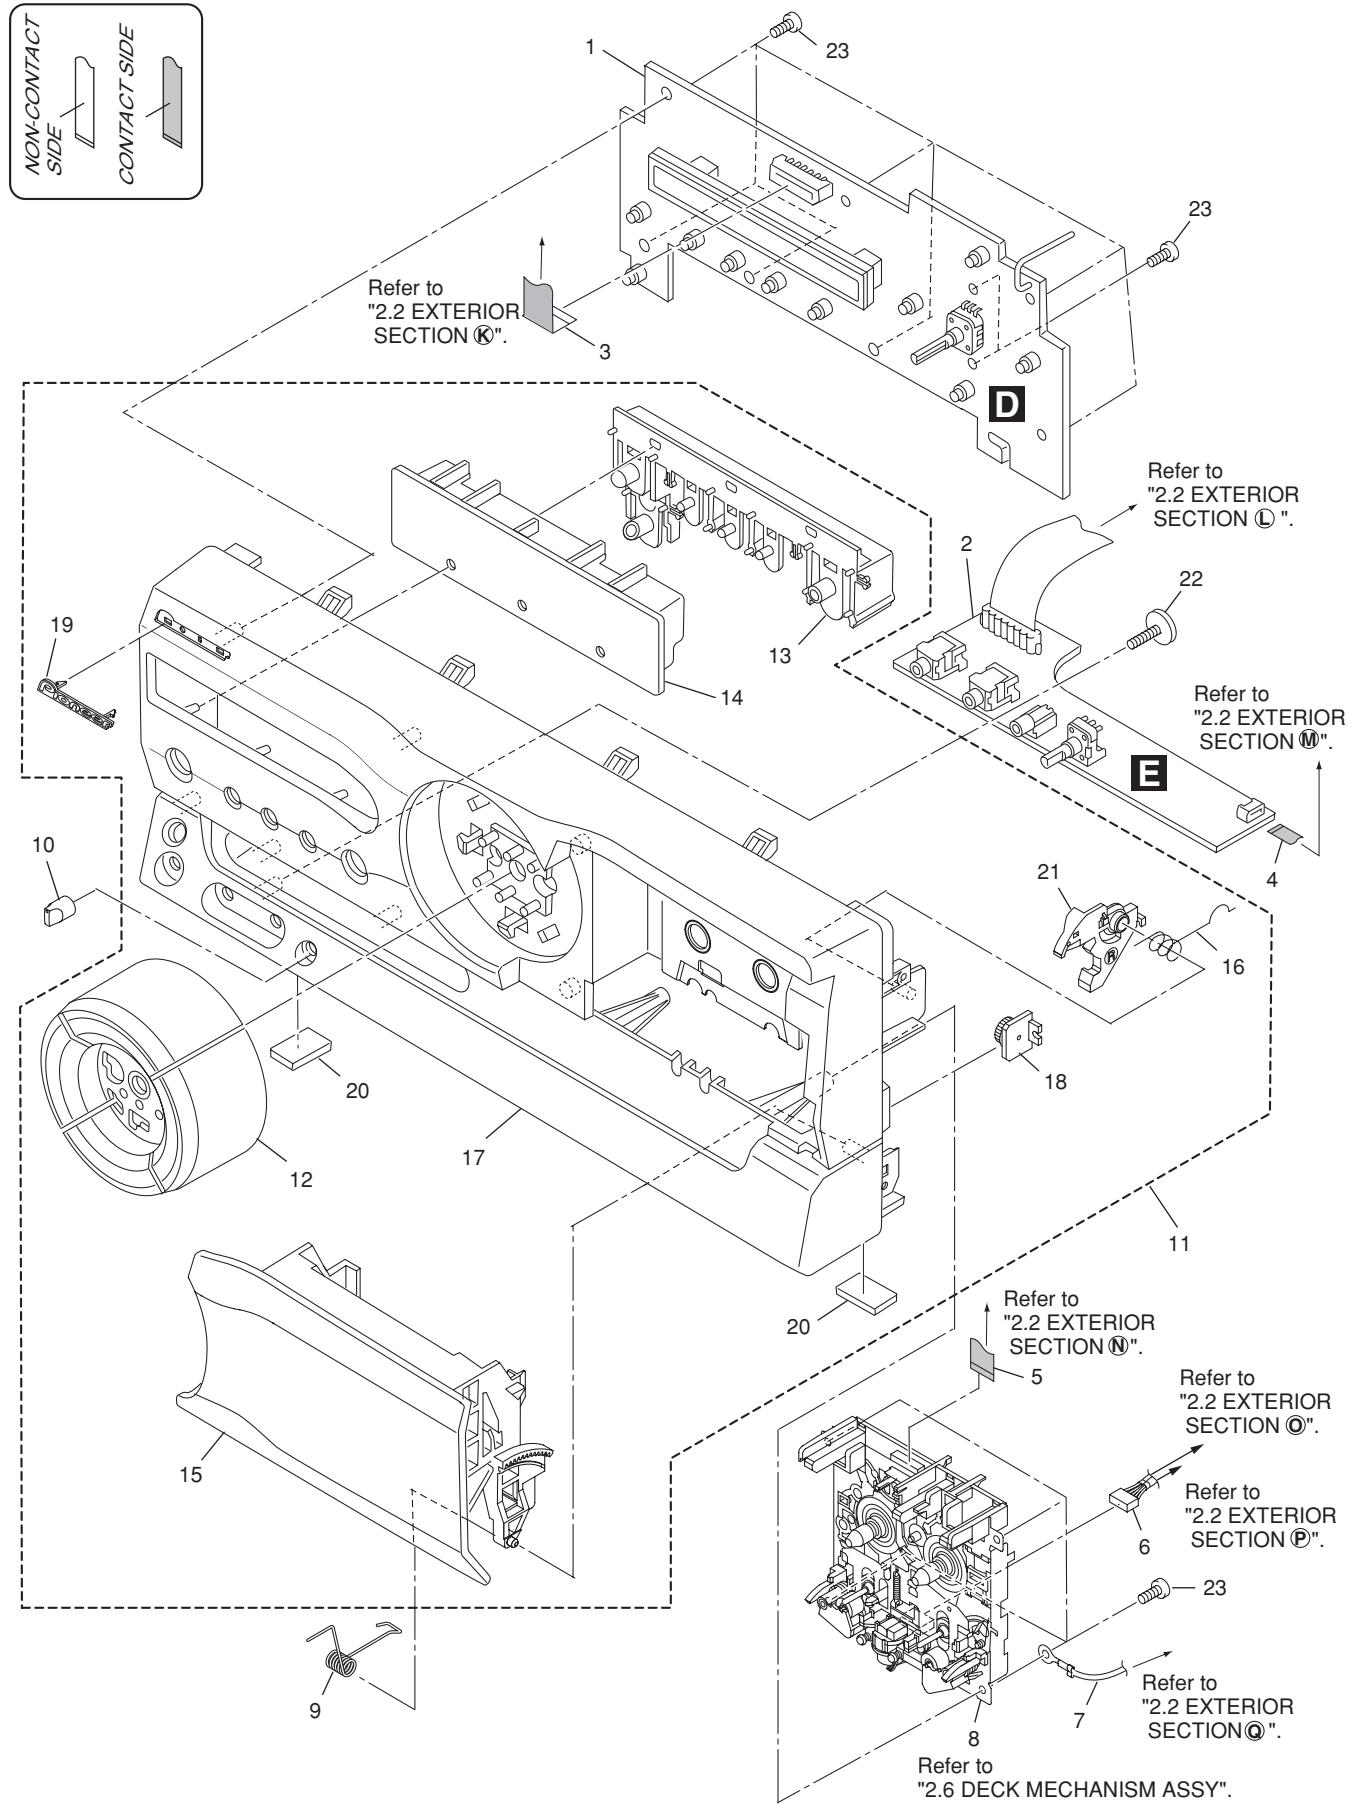

FRONT PANEL SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	DISPLAY Assy	AWU8275	
2	MIC Assy	AWU8276	A
3	17P F.F.C/30V	ADD7410	
4	5P F.F.C/60V	ADD7522	
5	11P F.F.C/60V	ADD7523	
6	Cable Assy	ADE7118	
NSP 7	Cord With Plug	DE010VE0	
8	DECK Mechanism Unit	XYM3019	
9	Door Spring_R	XBH3002	
10	MIC Knob	AAK8309	
11	Front Panel Assy	AXG7277	B
12	Button Center (PLS)	ADD7750	
13	Button L	ADD7751	
14	Display Window	AAK8303	
15	Deck Door	AAN7231	
16	Ratch Spring R	ABH7131	
17	Front Panel	AMB7904	
18	Damper Assy	AXA7052	
19	Pioneer Name Plate	VAM1129	
20	LEG Cushion	XEB3028	C
21	Ratch Mold R	XMR3002	
22	Screw with Washer	ABA7124	
23	Screw	PPZ30P080FNI	

D


E

F

2.4 05 LOADER ASSY

Note :


A Refer to
"Application of Lubricant".

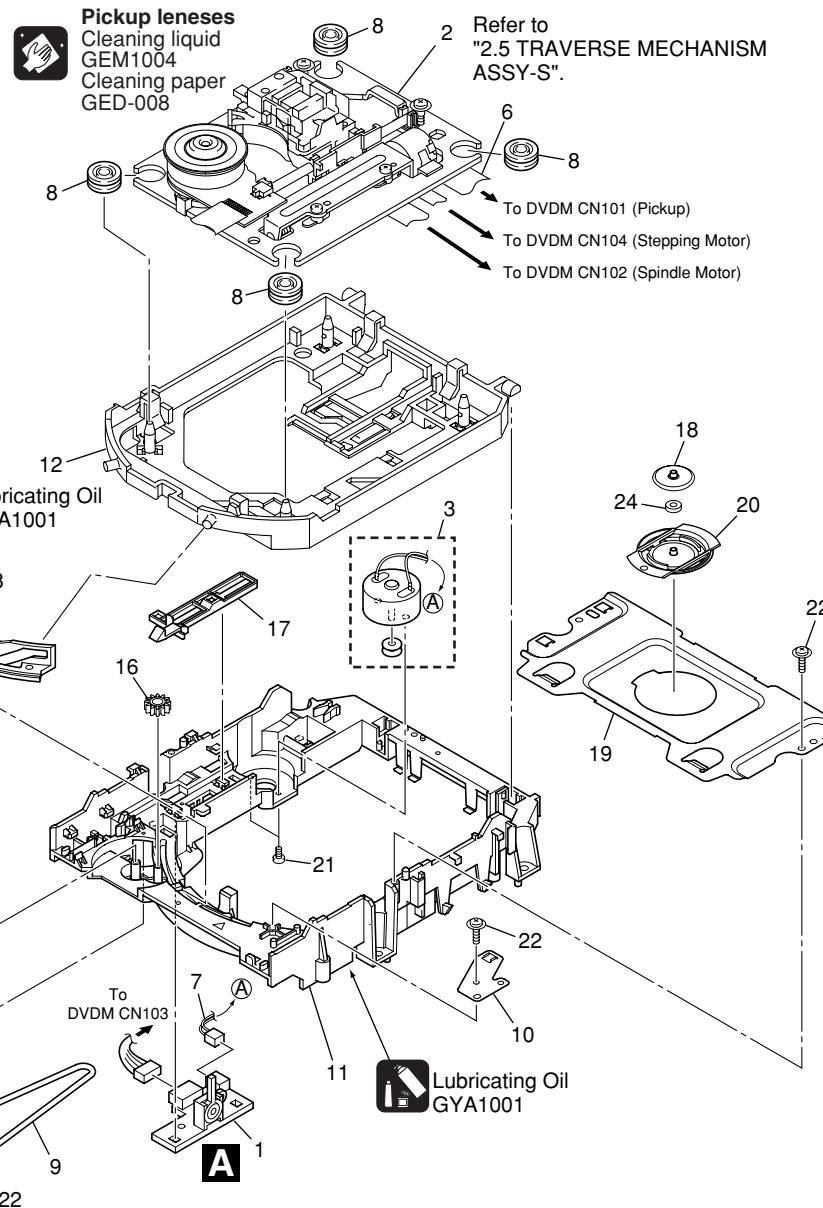


05 LOADER ASSY PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
E	1 LOAB Assy	VWG2346	16	Drive Gear	VNL1923
	2 Traverse Mechanism Assy-S	DXX2568	17	SW Lever	VNL1925
	3 Loading Motor Assy	VXX2912	18	Clamper Plate 04	VNE2342
	4 • • • •		19	Bridge 04	VNE2343
	5 • • • •		20	Clamper 04	VNL1969
F	6 Flexible Cable (24P)	VDA2008	21	Screw	JGZ17P028FTC
	7 Connector Assy 2P	VKP2253	22	Screw	VBA1094
	8 Floating Rubber	VEB1351	23	Tray	VNL1920
	9 Belt	VEB1358	24	Clamp Magnet	VMG1029
	10 Stabilizer	VNE2253			
	11 Loading Base	VNL1917			
	12 Float Base 04	VNL1968			
	13 Drive Cam	VNL1919			
	14 Gear Pulley	VNL1921			
	15 Loading Gear	VNL1922			

■ Application of Lubricant

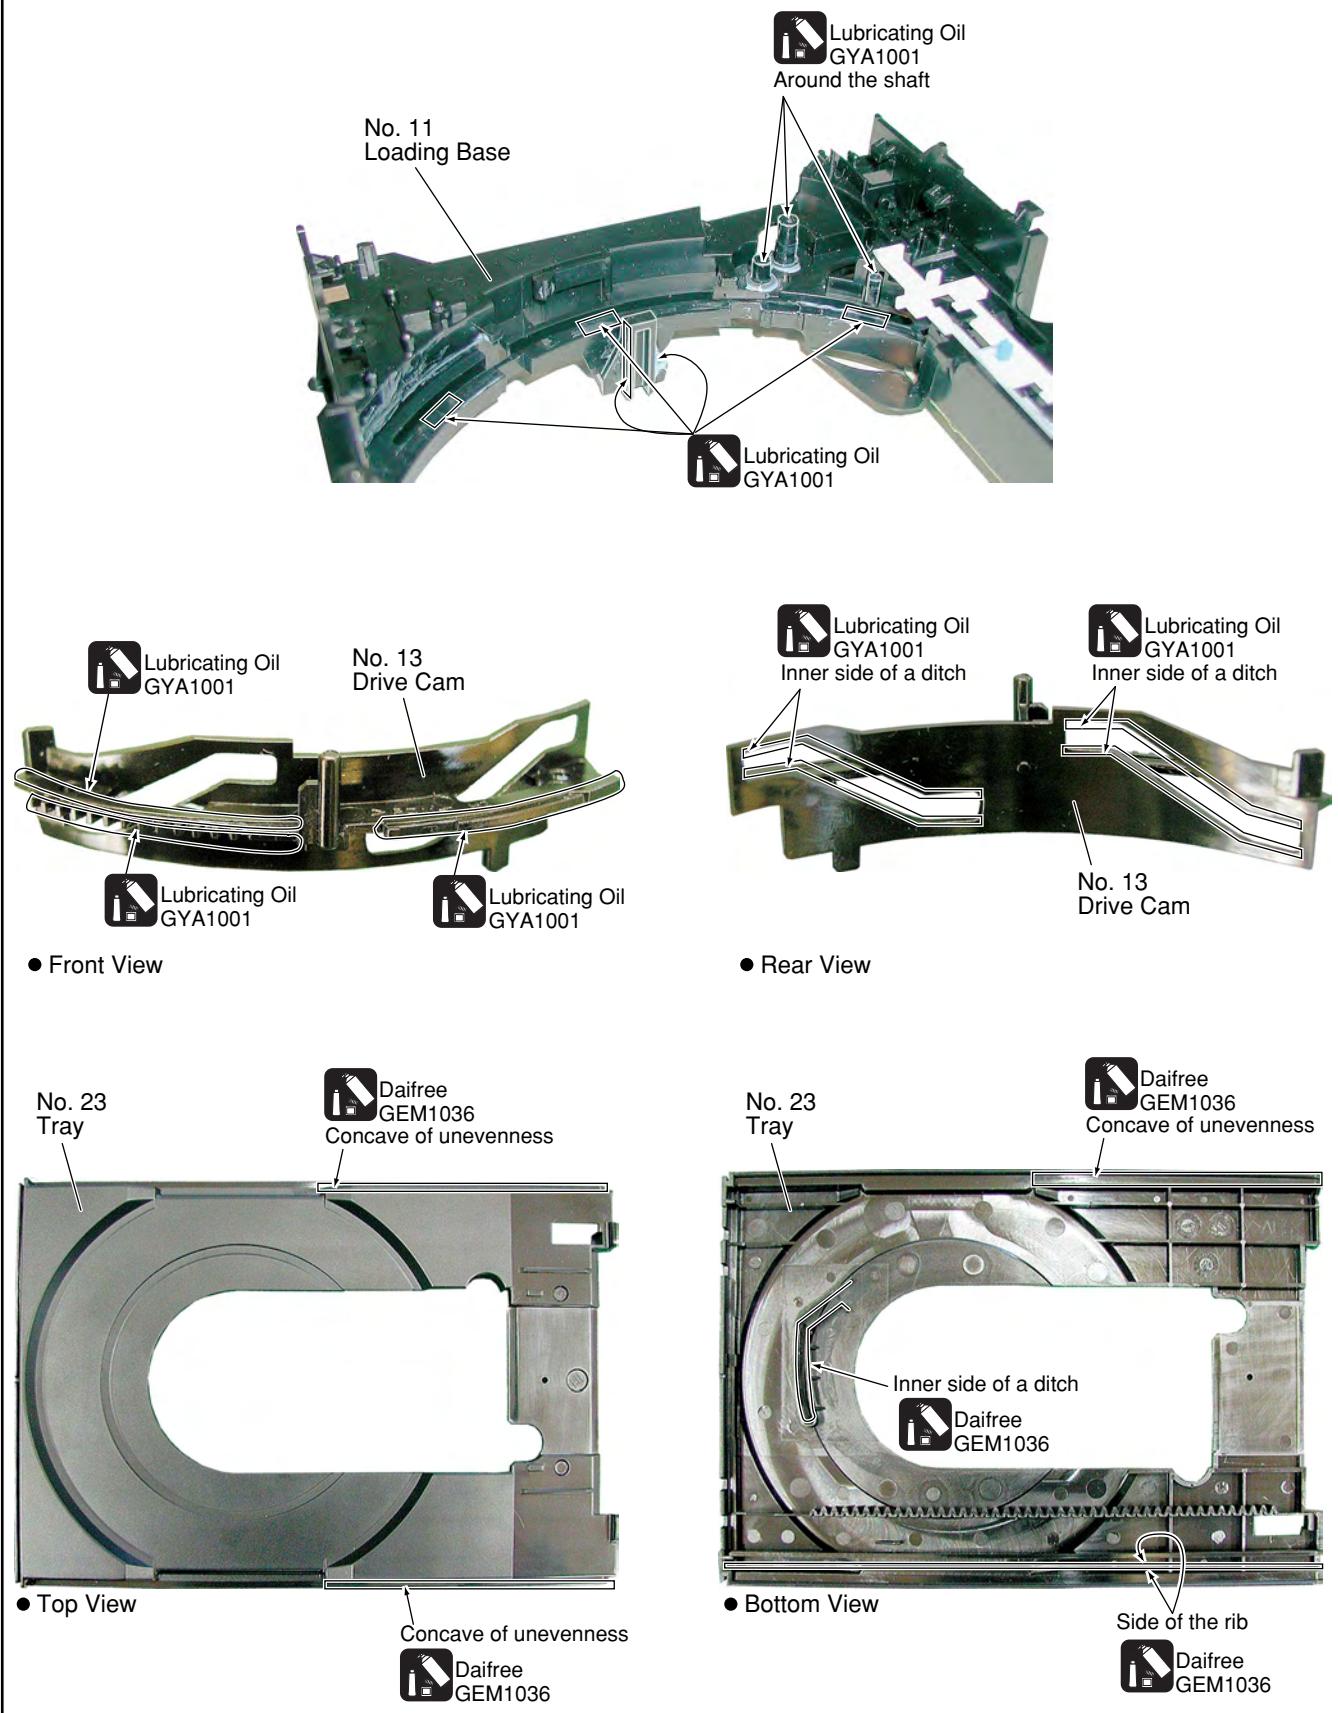


2.5 TRAVERSE MECHANISM ASSY-S

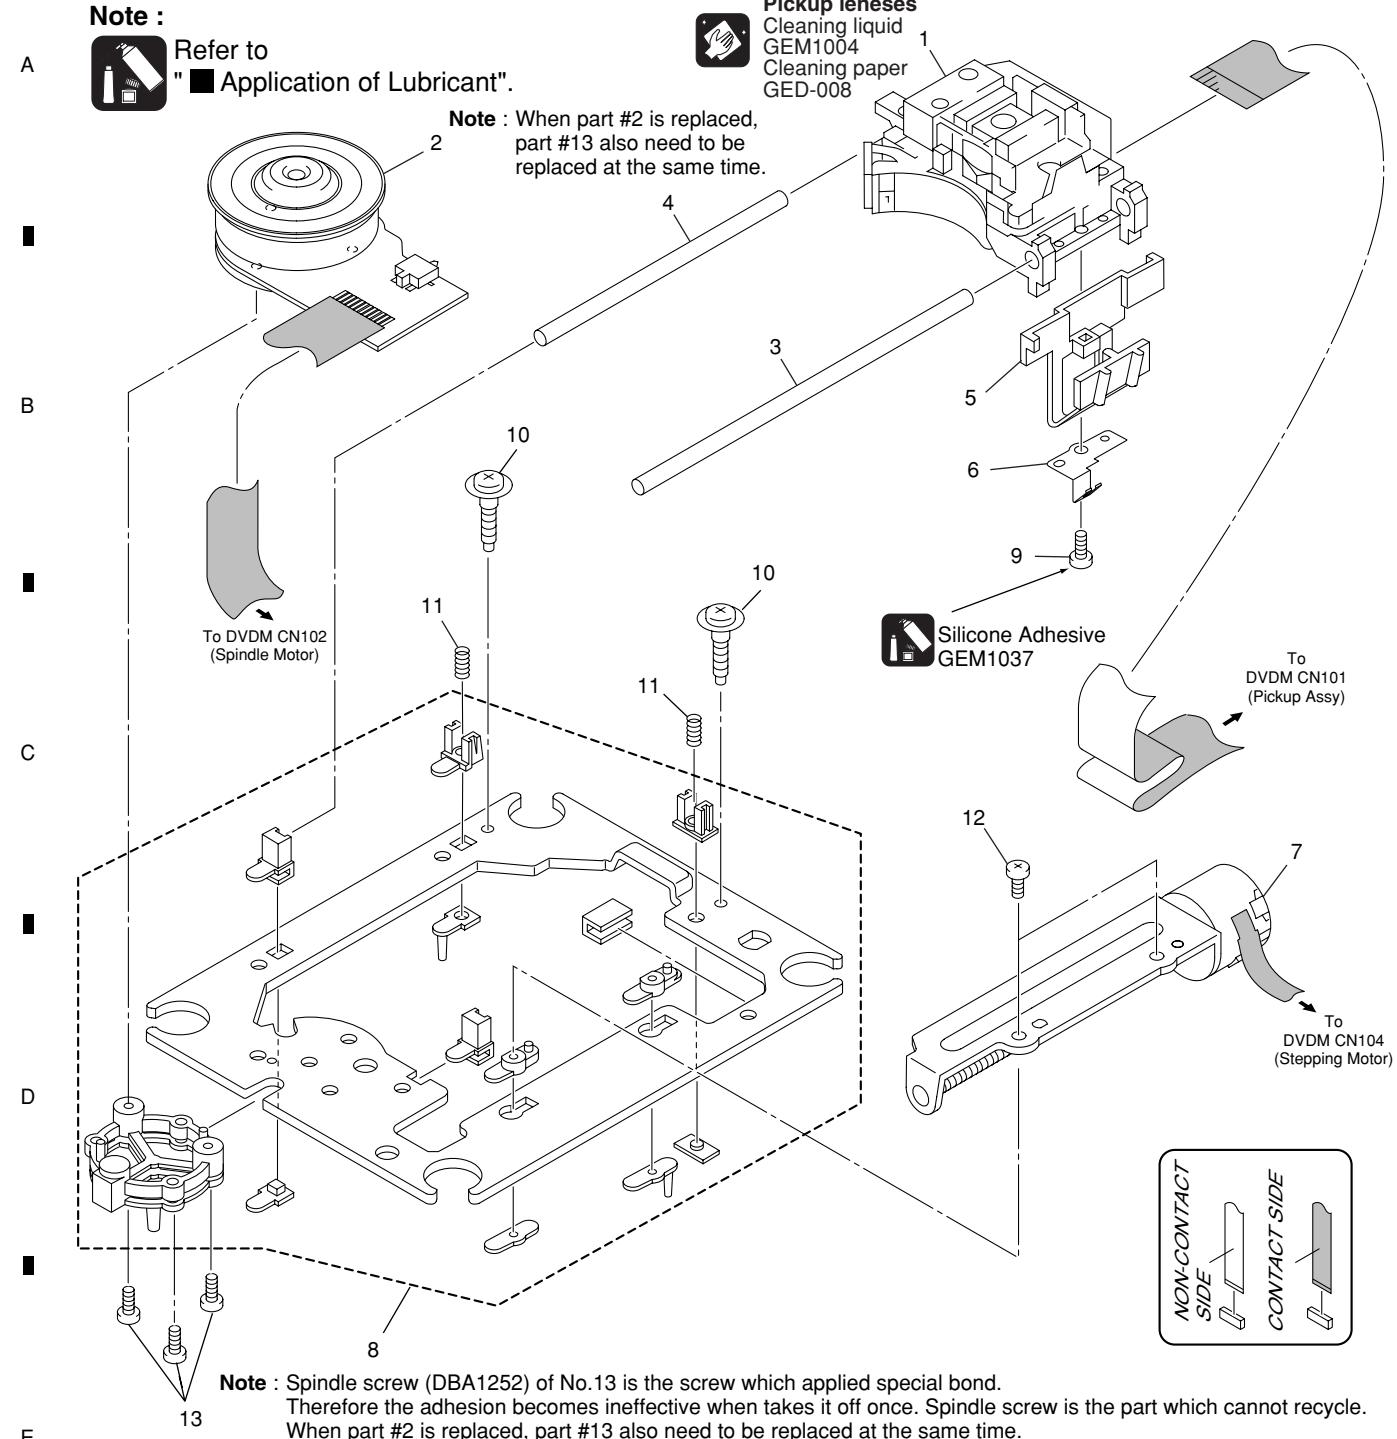

TRAVERSE MECHANISM ASSY-S PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
△ 1	05SD Pickup Assy-S	OXX8014	10	Skew Screw VK1	DBA1211
2	Spindle Motor N200	DXM1197	11	Skew Spring VK1	DBH1516
NSP 3	Guide Shaft VK1	DLA1940	NSP 12	Stepping Screw	DBA1205
NSP 4	Sub Guide Shaft VK1	DLA1941	13	Spindle Screw VK1(for Service)	DBA1252
NSP 5	Joint VK1B	DNK4272			
F NSP 6	Joint Spring VK1	DBK1235			
7	Stepping Motor VK1	DXM1201			
NSP 8	Mechanism Frame VK1	DNK4160			
9	Precision Screw VK1	DBA1209			

2.6 DECK MECHANISM ASSY

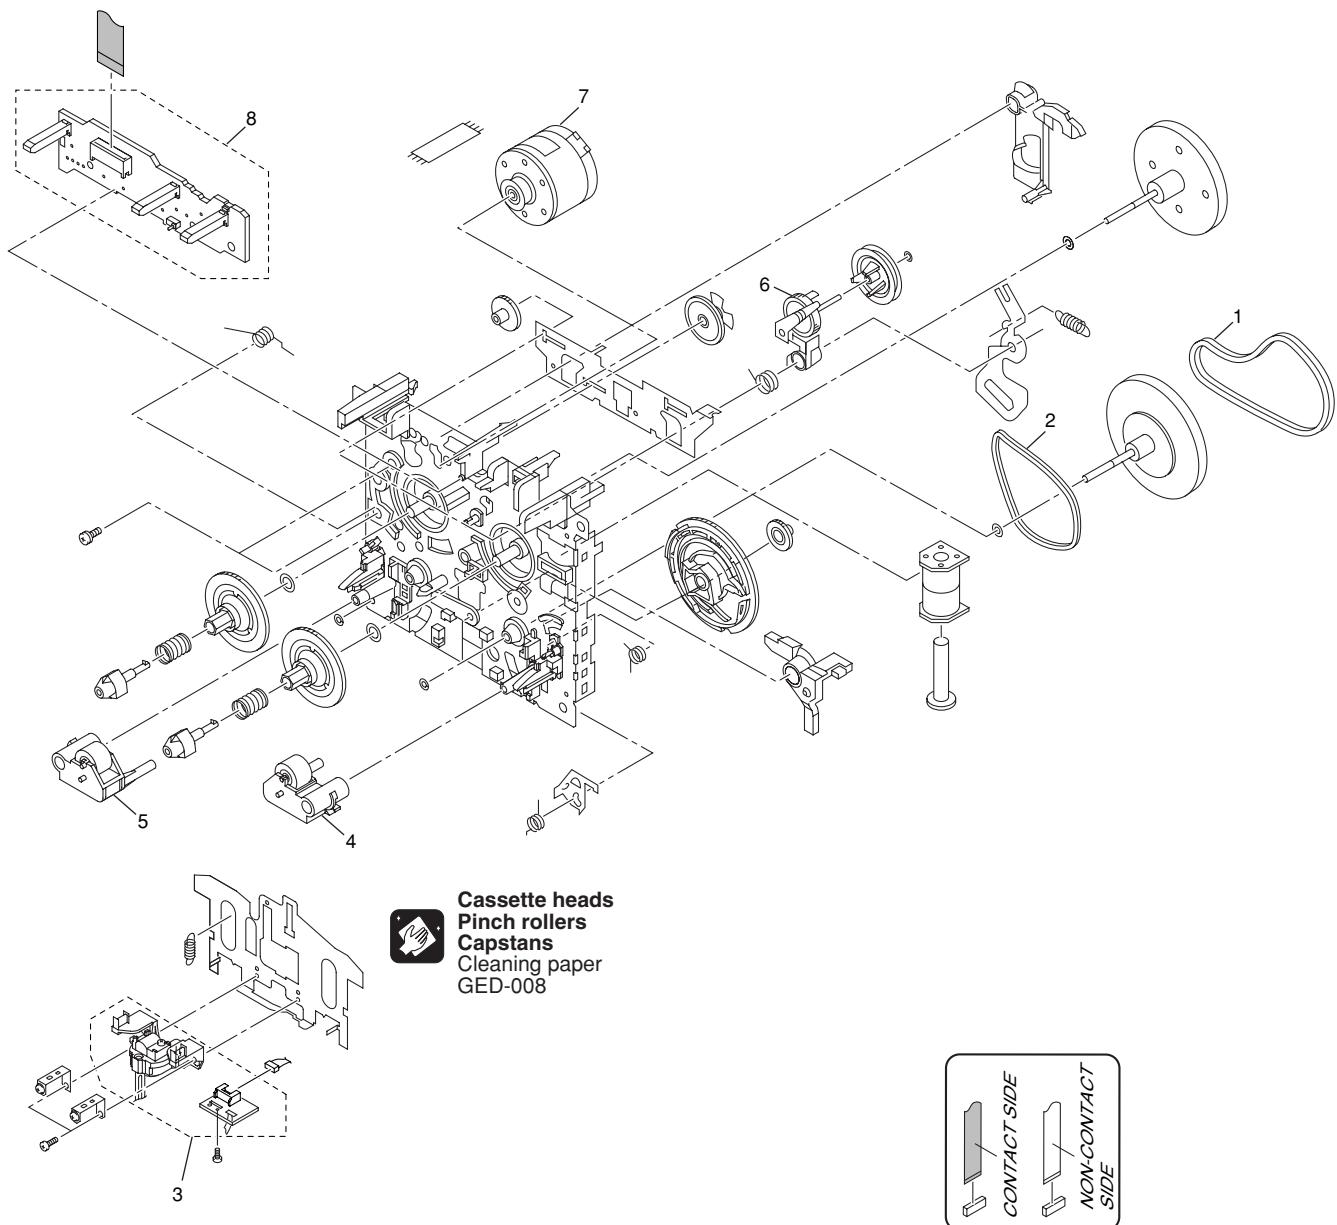



DECK MECHANISM ASSY PARTS LIST

Mark No.	Description	Part No.
1	Main Belt	FF20B-13A
2	F/R Belt	FF19S-31
3	Plate HD Blk	F513-926
4	Roller Pinch Blk R	F514-133
5	Roller Pinch Blk L	F514-134
6	Clutch Assy Blk	F522-063
7	Motor Main Blk	F525-394
8	PCB Control Blk	F567-747

3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM


3.1 BLOCK DIAGRAM

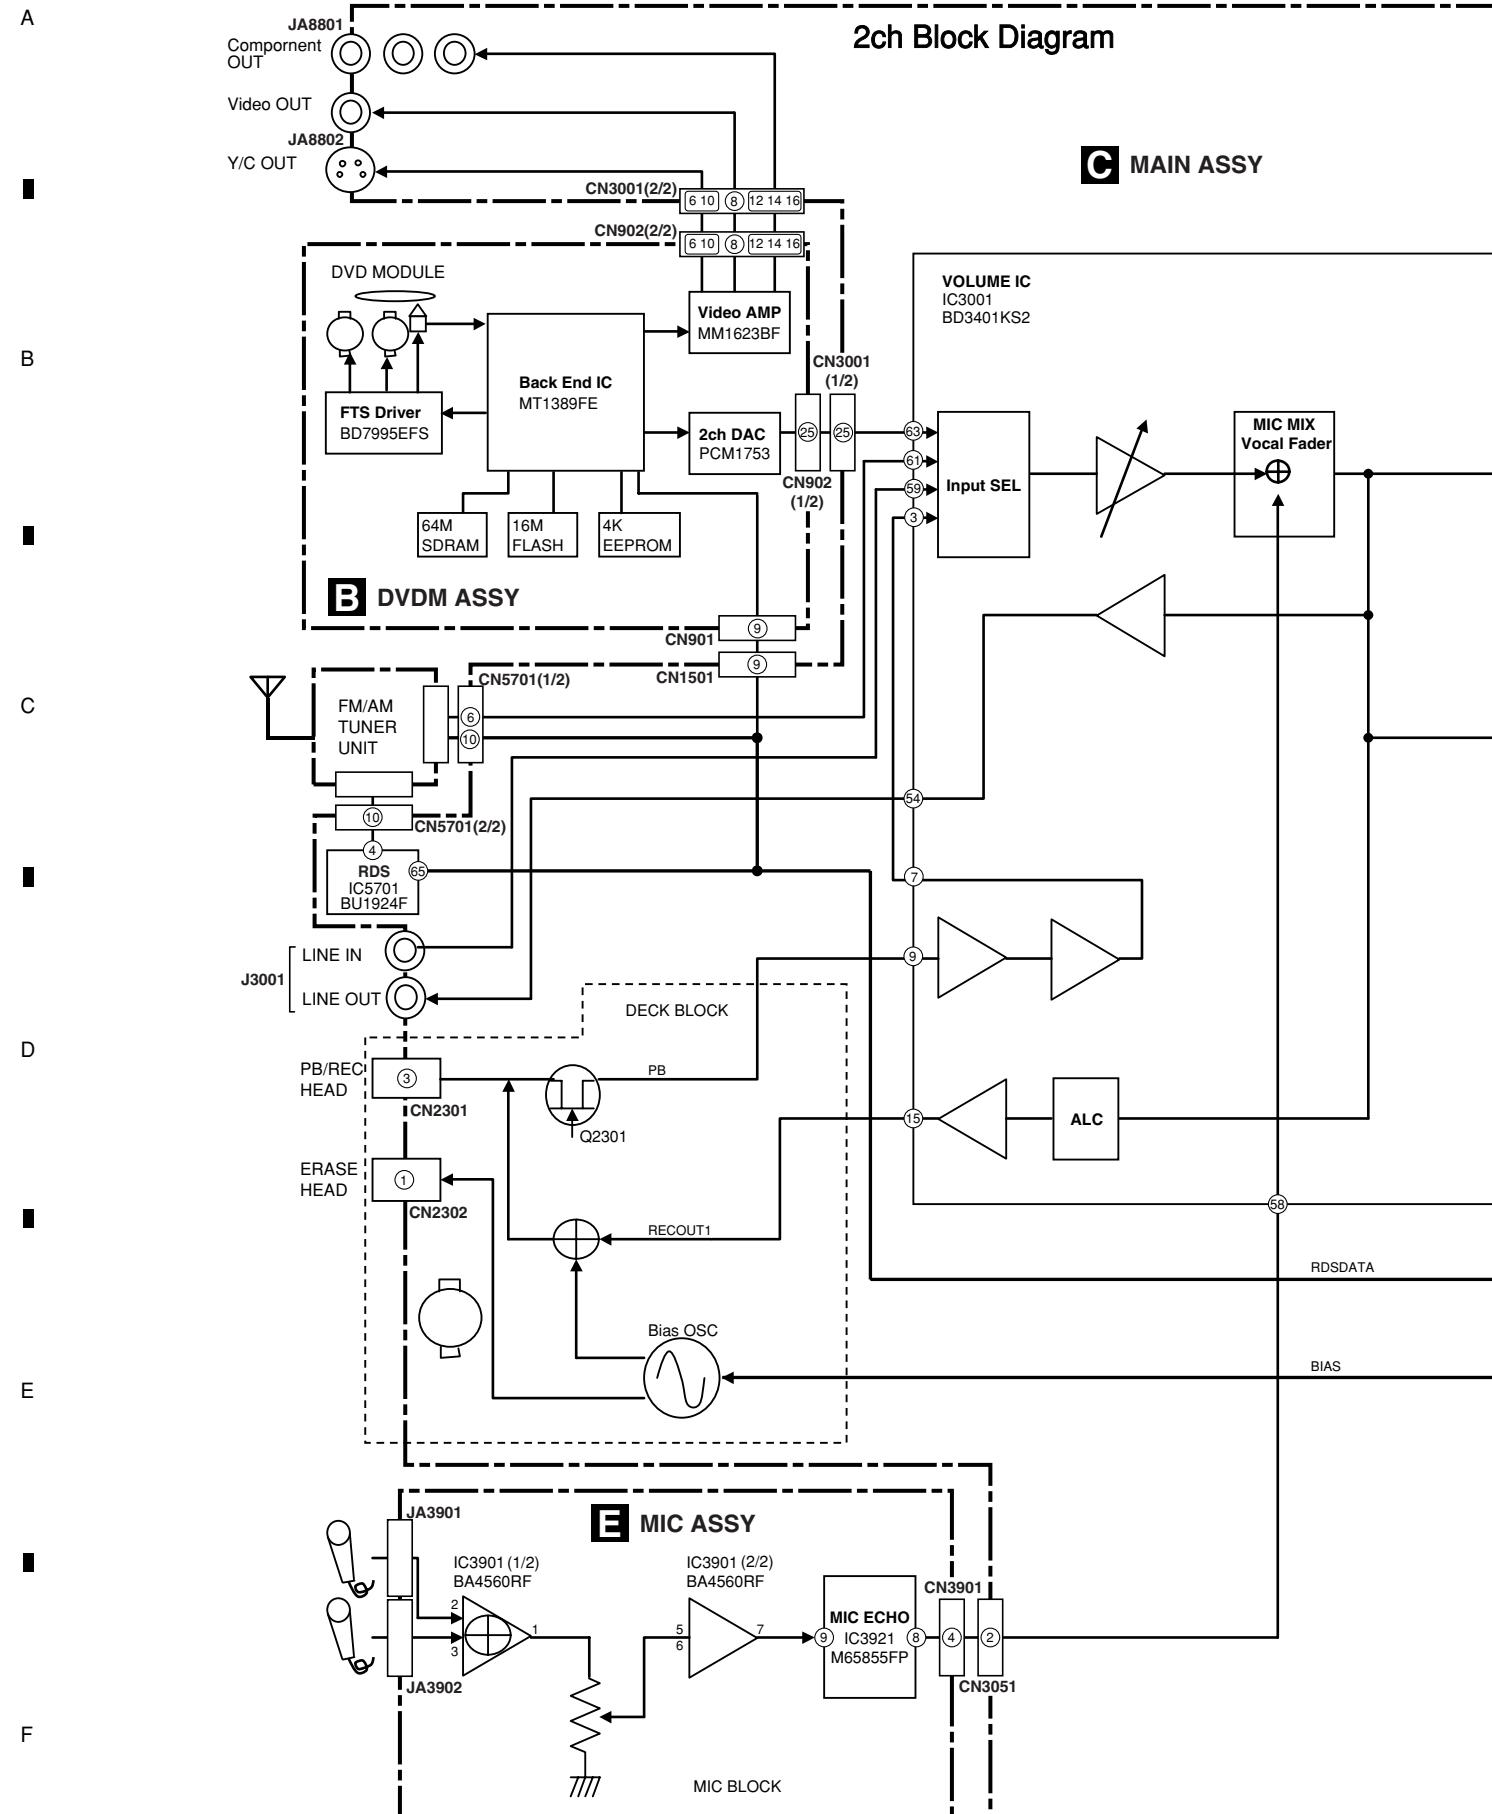

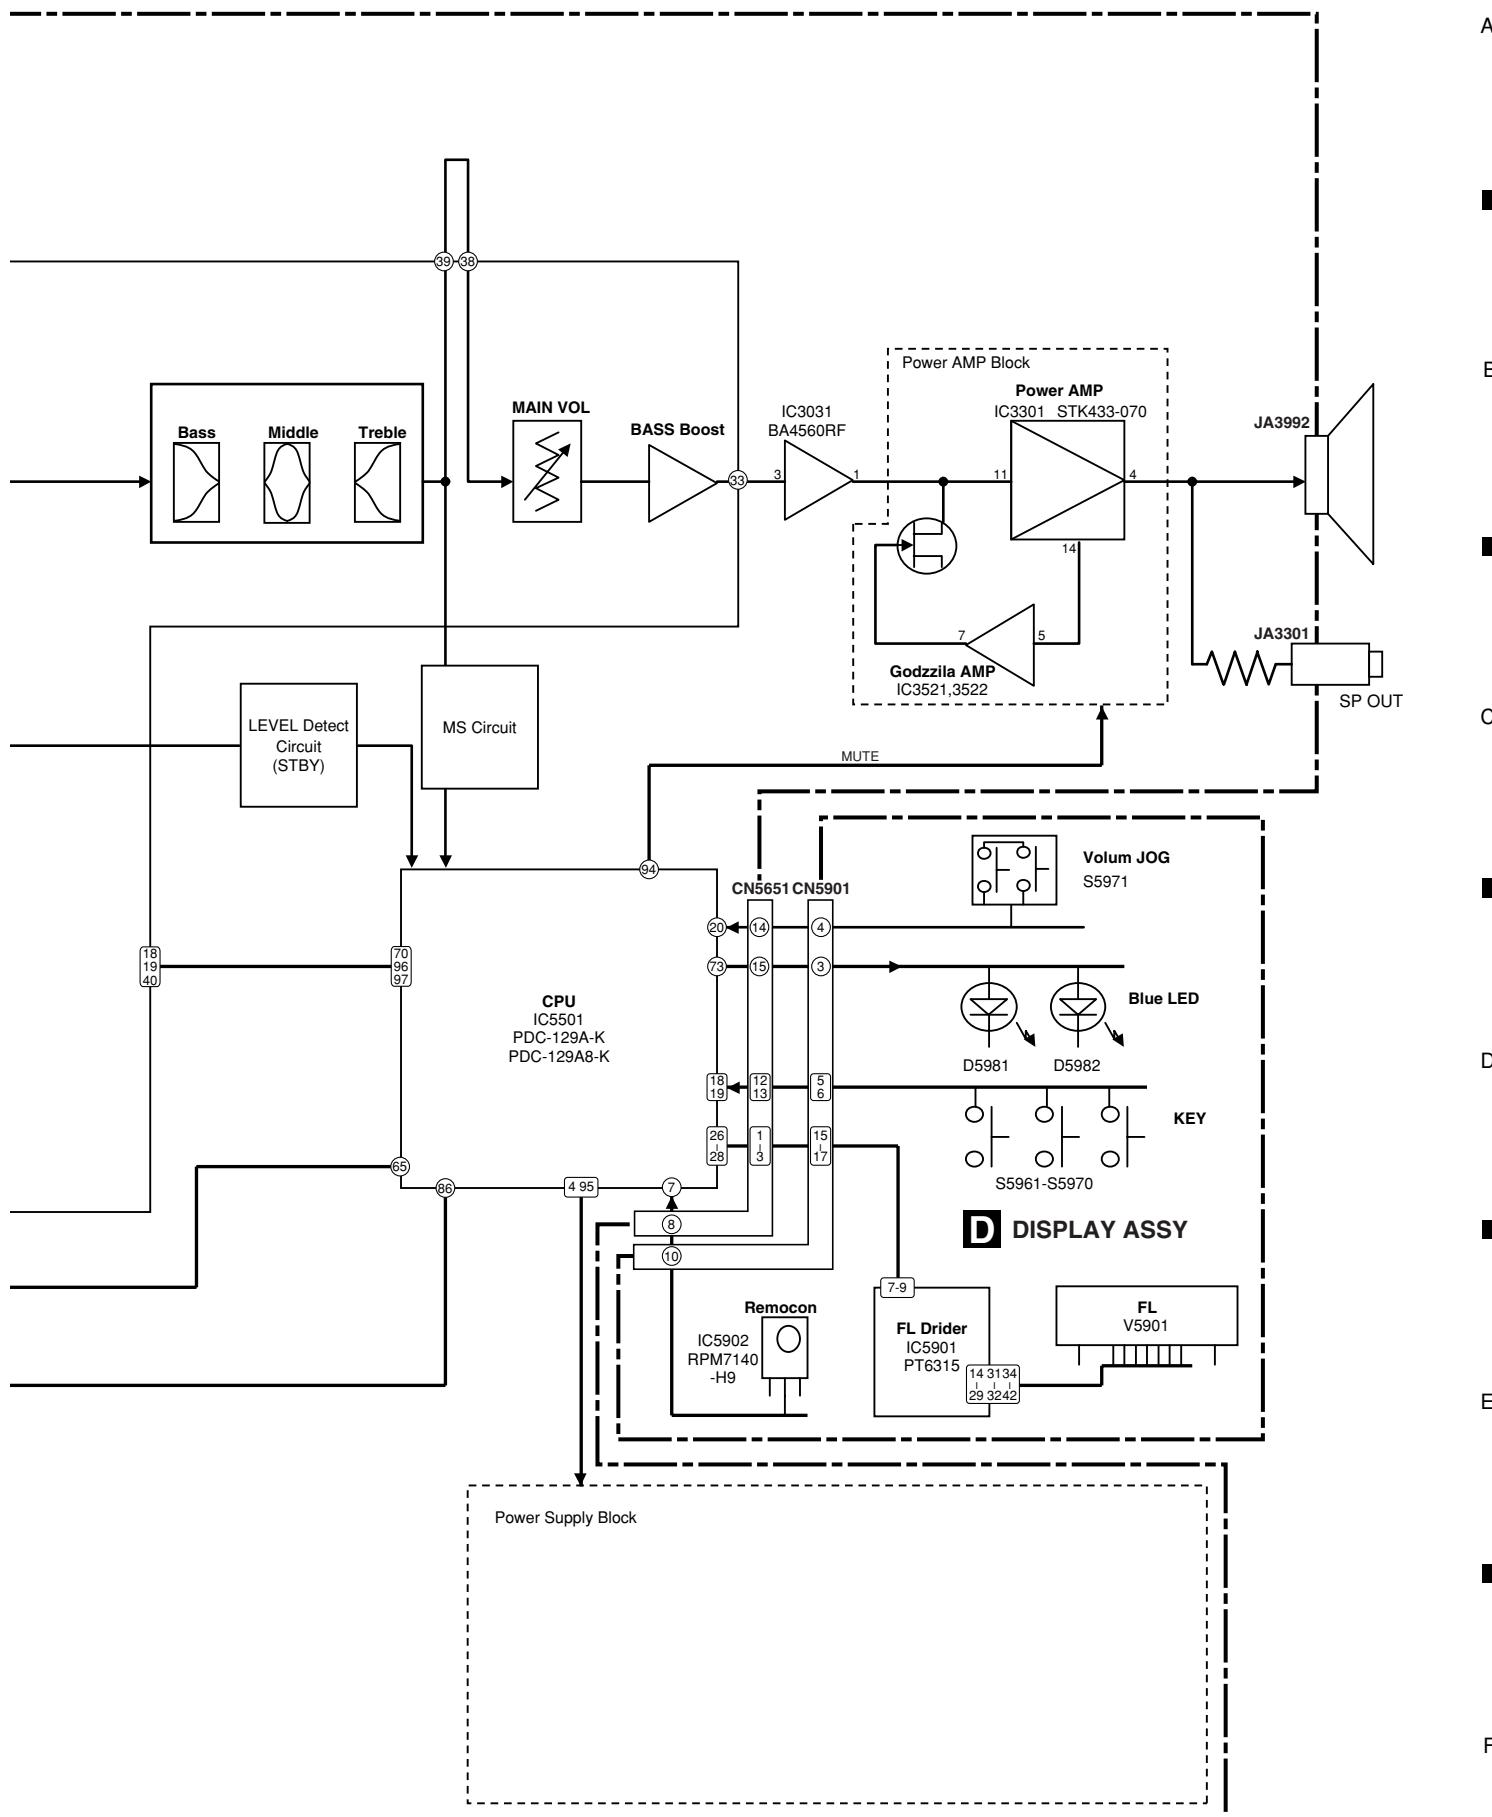


3.2 OVERALL WIRING CONNECTION DIAGRAM and LOAB ASSY

A

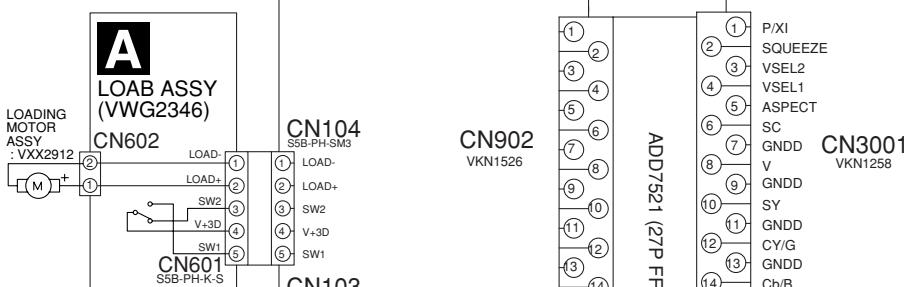


B

B DVDM ASSY (AWM7966)

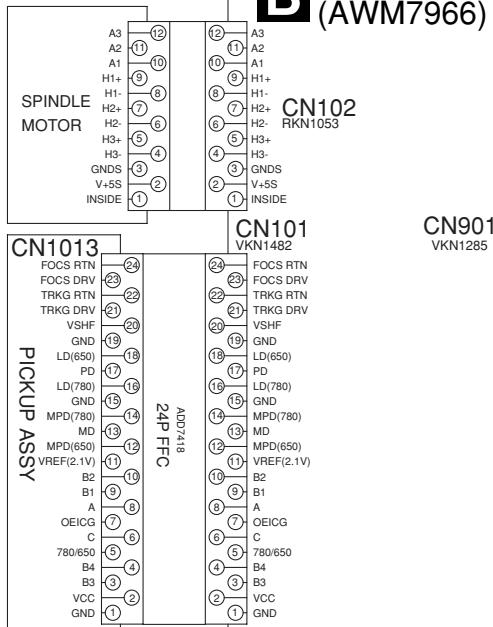

C

PICKUP ASSY

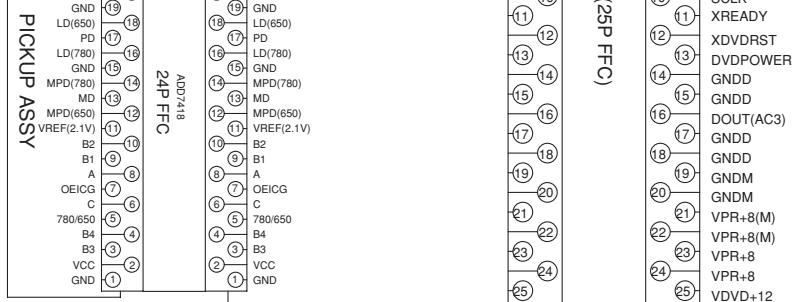


CN1501

VKN1285

D

DECK MECHA (XYM3019)

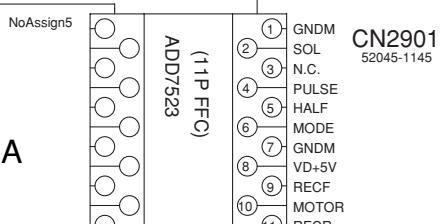


CN5651

52045-1745

E


FM/AM TUNER UNIT (AXX7173)

* No schematic diagram

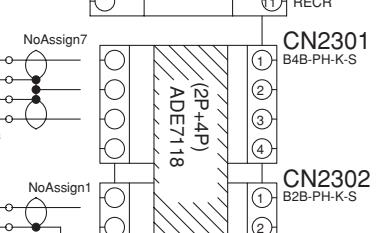

CN5701

52045-1145

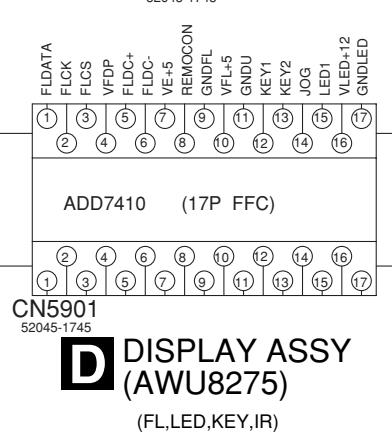


D DISPLAY ASSY (AWU8275)

(FL,LED,KEY,IR)



F

A

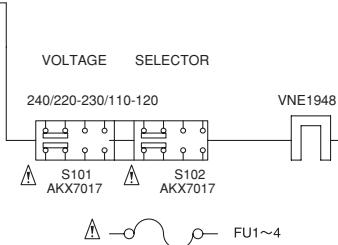

C MAIN ASSY (C 1/4 - C 4/4)
(AWM8013) (AWM8015)
(AWM8016)

Model	XV-GX3			
	/DFLXJ	/DDXJ/RD	/MTXJ	/DDXJ/RB
	Singapore Malaysia Taiwan Philippines Indonesia	Mexico Middle & South America	Thailand	South Africa Middle East
MAIN ASSY	AWM8013	AWM8013	AWM8015	AWM8016
SUB ASSY	AWM8014	AWM8014	AWM8014	AWM8014
DISPLAY ASSY	AWU8275	AWU8275	AWU8275	AWU8275
MIC ASSY	AWU8276	AWU8276	AWU8276	AWU8276
FU1	REK1028	REK1028	REK1025	REK1028
FU2,3	REK1025	REK1025	—	REK1025
FU4	REK1029	REK1029	REK1029	REK1029
Main Trans(T1)	ATS7406	ATS7406	ATS7406	ATS7406

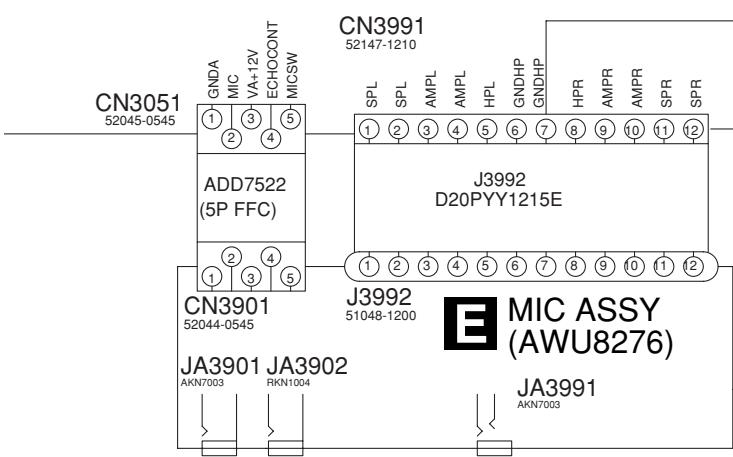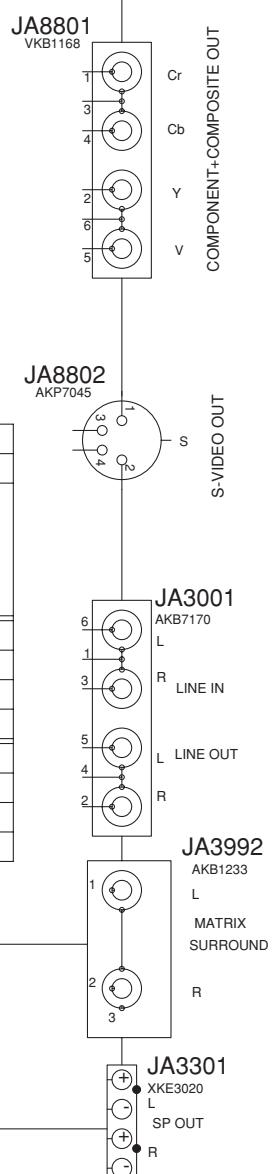

- When ordering service parts, be sure to refer to "EXPLODED VIEWS and PARTS LIST" or "PCB PARTS LIST".
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 -  : The power supply is shown with the marked box.



3.3 DVDM ASSY (1/2)

A

PICKUP ASSY CN1013


B

C


D

E

1

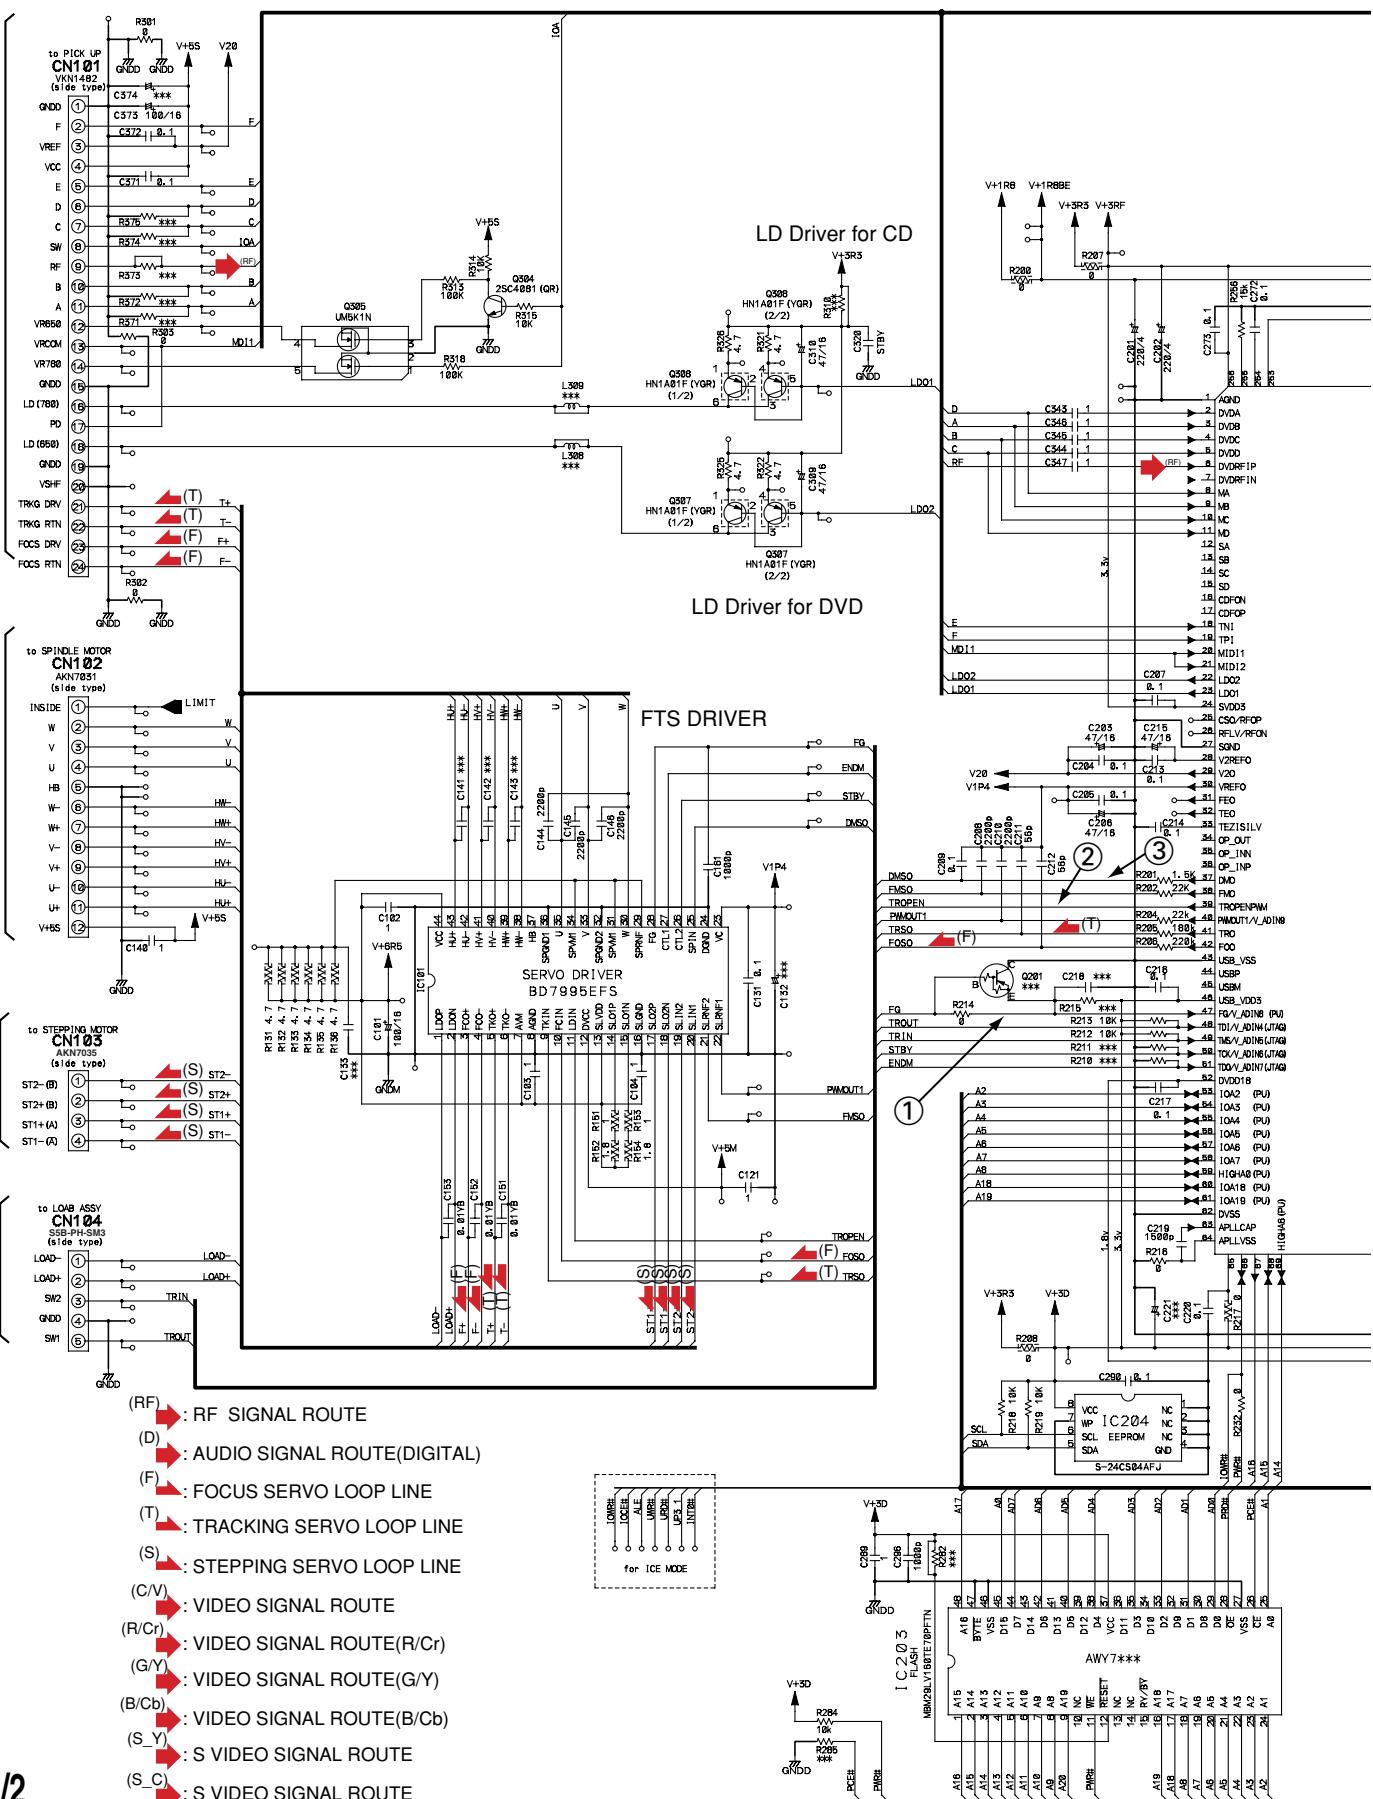

B 1/2 DVDM ASSY
(AWM7966)

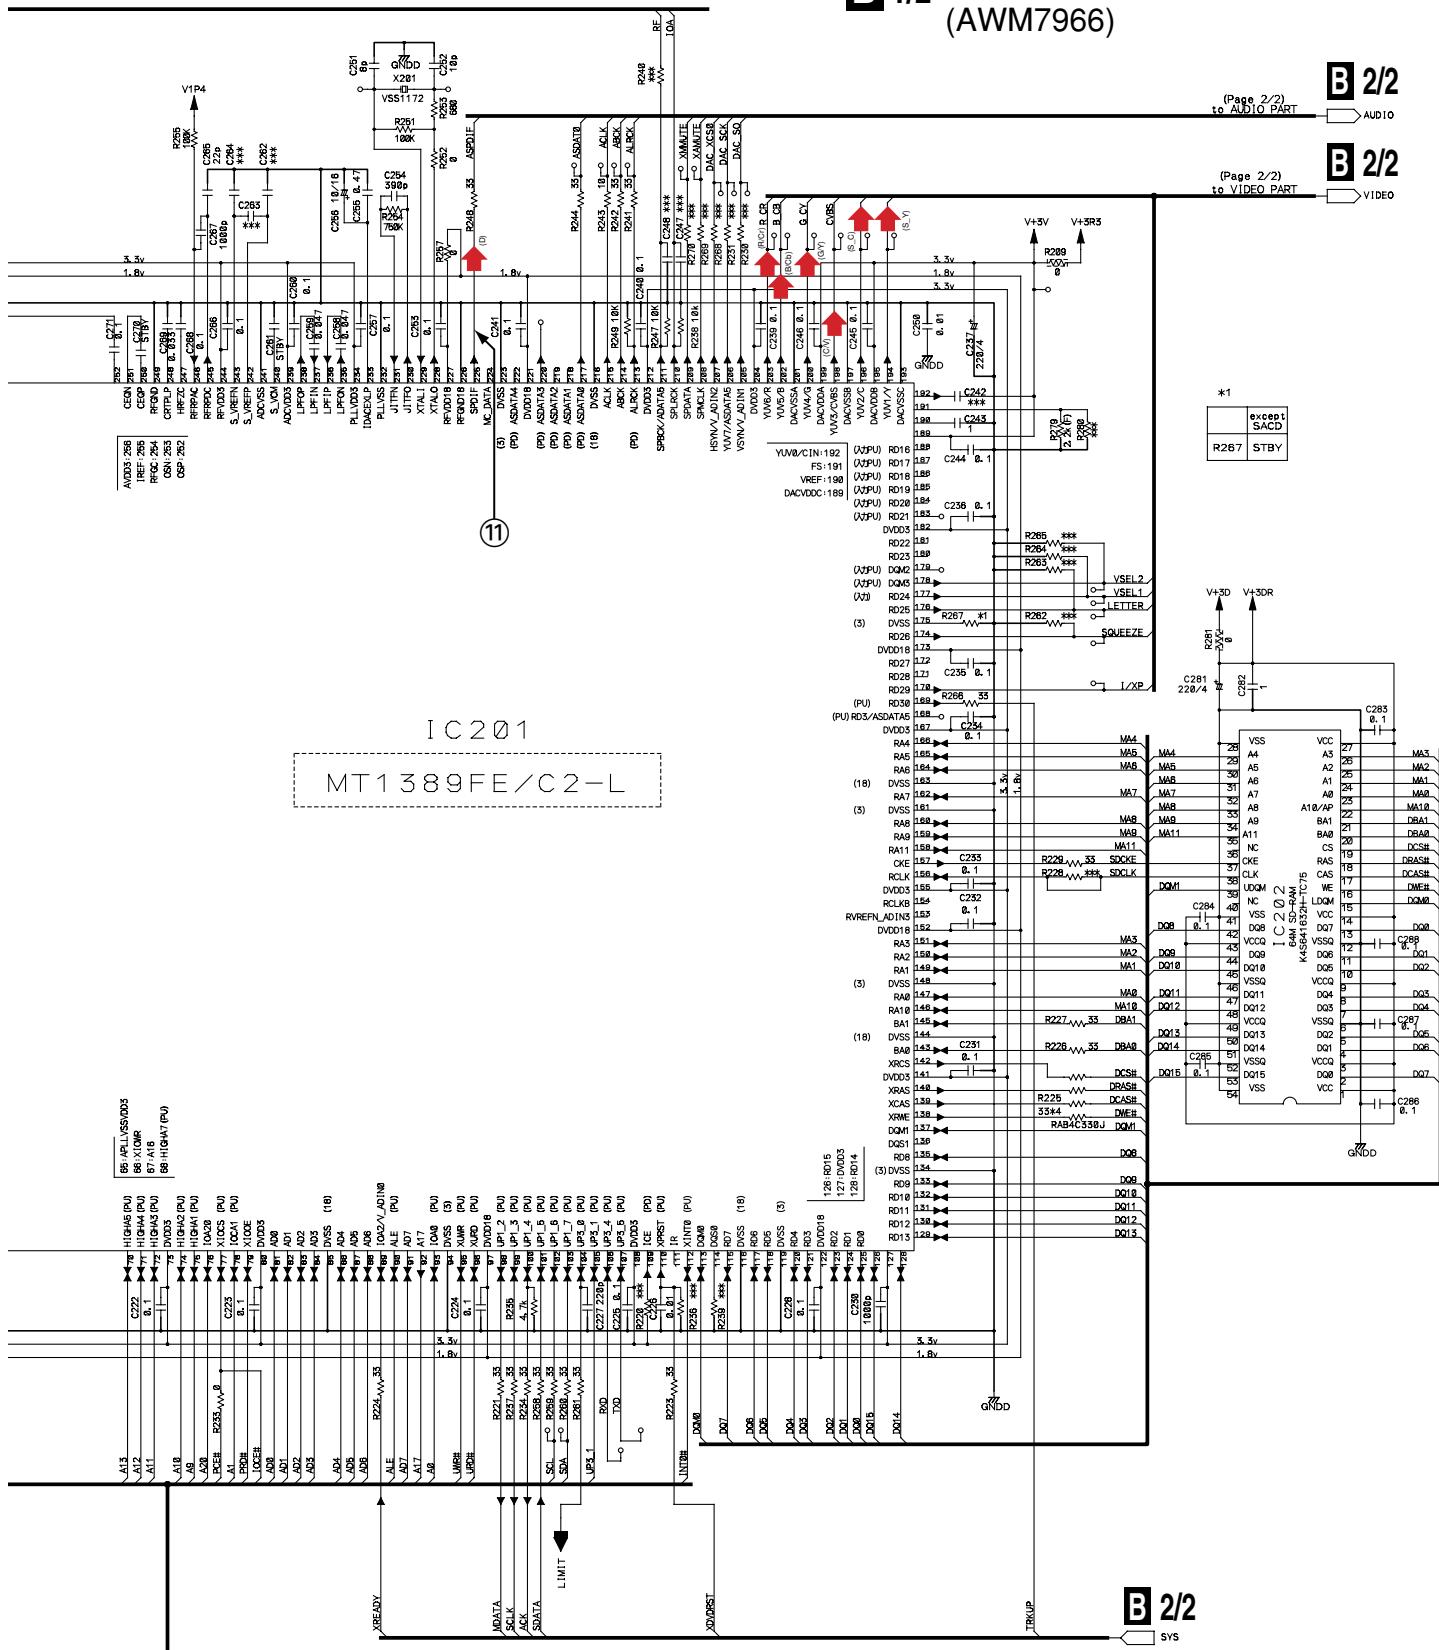


***: parts not mounted


3.4 DVDM ASSY (2/2)

A

B 2/2 DVDM ASSY (AWM7966)

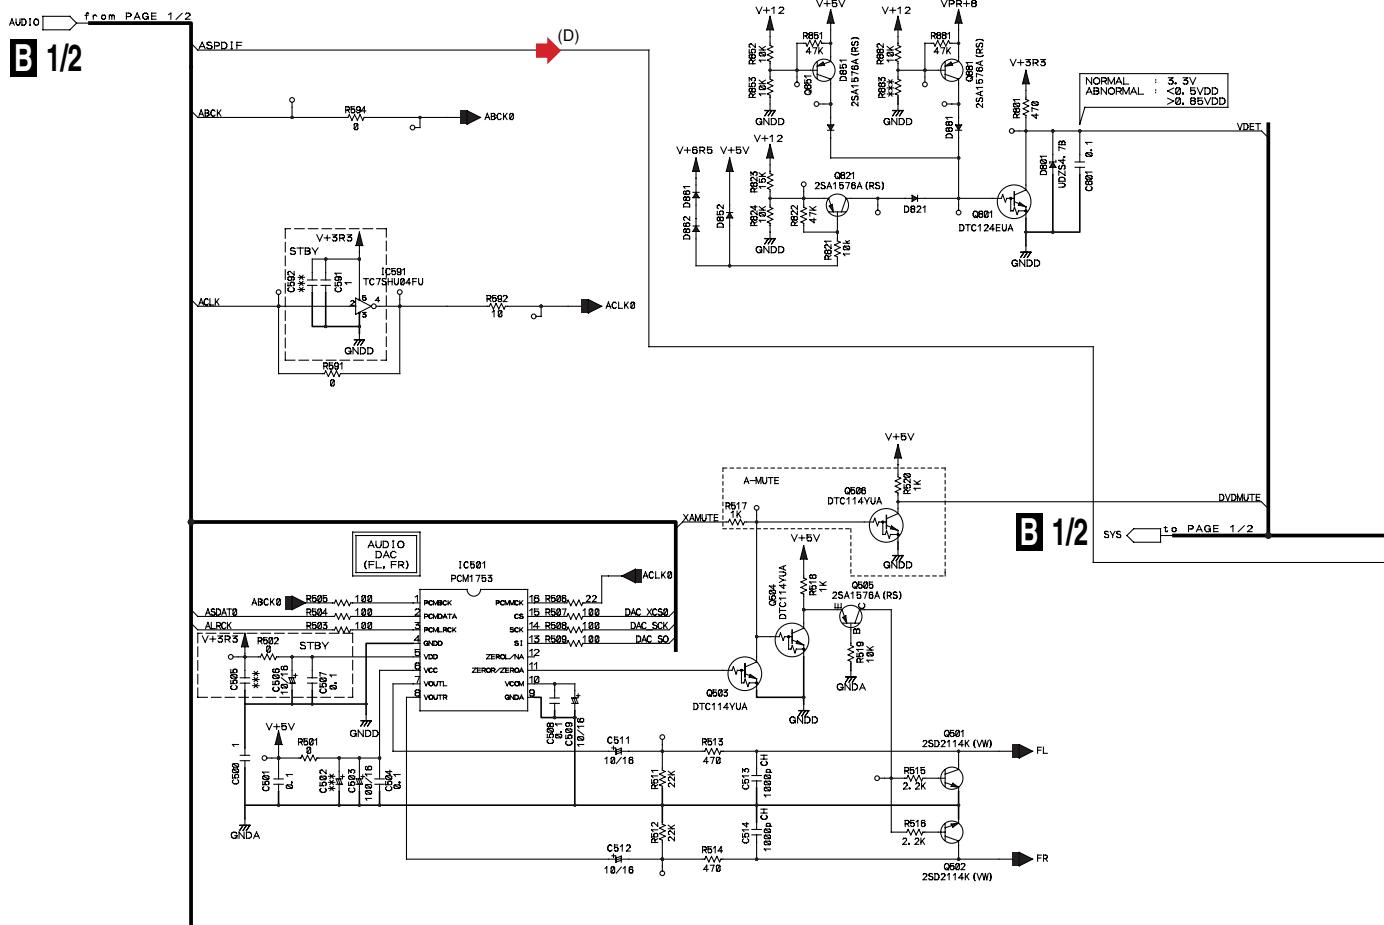

B 2/2

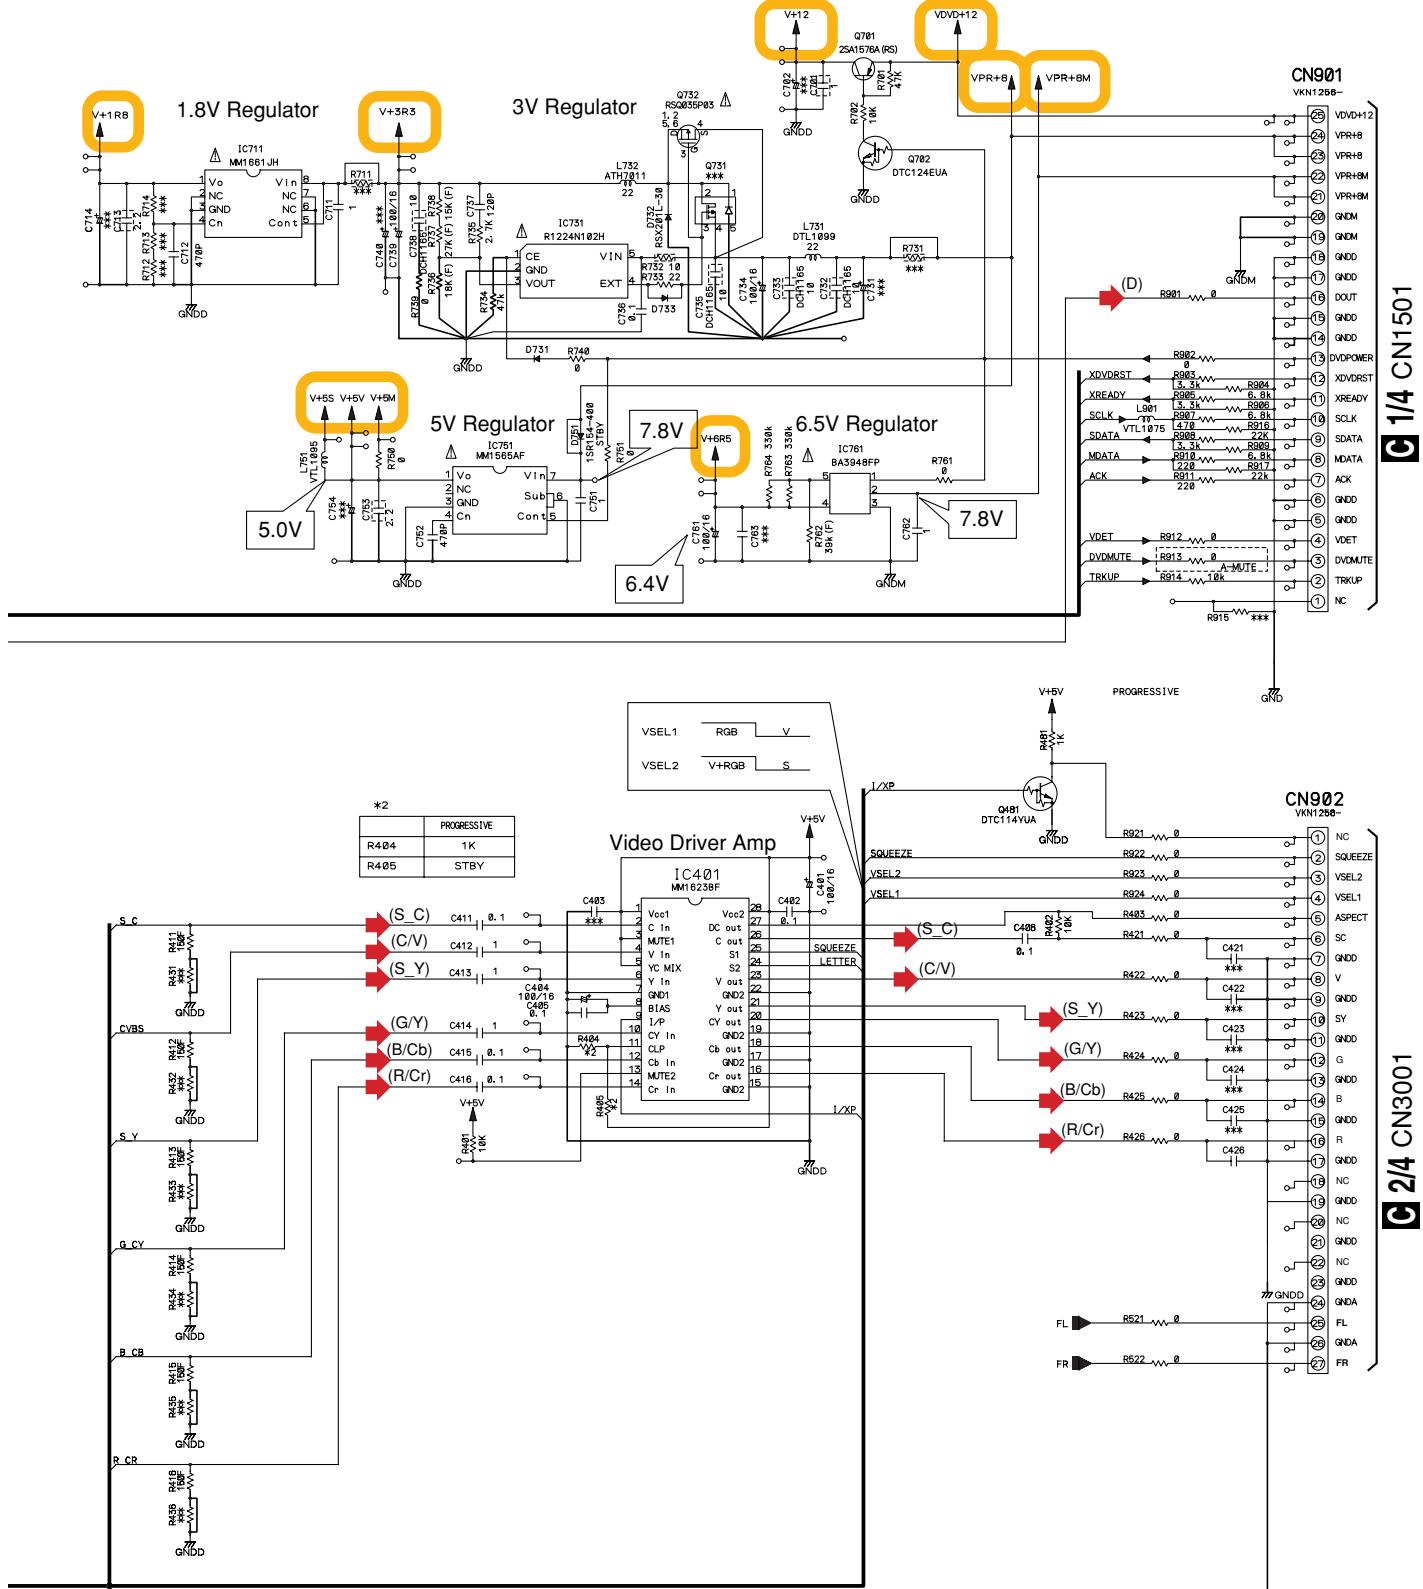

- (D) : AUDIO SIGNAL ROUTE
 - (C/V) : VIDEO SIGNAL ROUTE
 - (R/Cr) : VIDEO SIGNAL ROUTE(R/Cr)
 - (G/Y) : VIDEO SIGNAL ROUTE(G/Y)
 - (B/Cb) : VIDEO SIGNAL ROUTE(B/Cb)
 - (S_Y) : S VIDEO SIGNAL ROUTE
 - (S_C) : S VIDEO SIGNAL ROUTE

***:parts not mounted



3.5 MAIN ASSY (1/4)

C 1/4 MAIN ASSY




(AWM8013 : DFLXJ, DDXJ/RD)

(AWM8015 : MTXJ) (AWM8016 : DDXJ/RB)

		AWM8013 DDXJ/RD,DFLXJ	AWM8015 MTXJ	AWM8016 DDXJ/RB
for RDS	R5505	STBY	STBY	STBY
	R5553	STBY	STBY	STBY
	R5554	STBY	STBY	STBY
for SIMUKE	R5517	STBY	47k	39k
	R5519	47k	STBY	22k

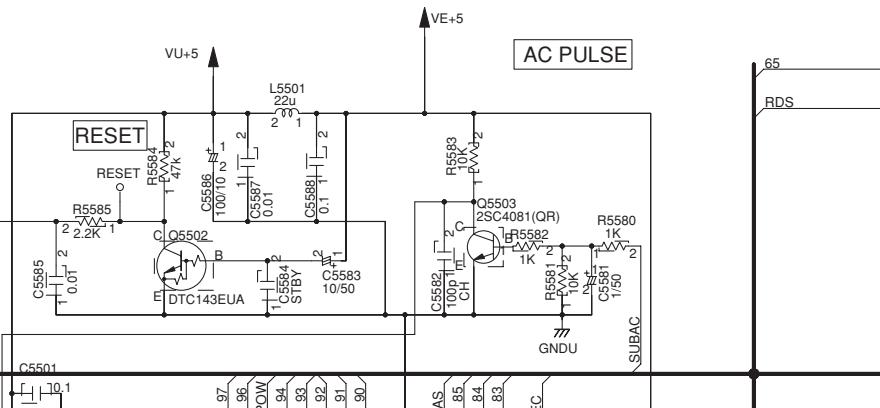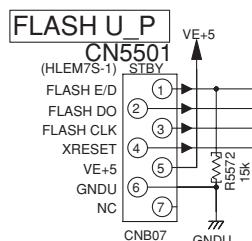

C 3/4, 4/4

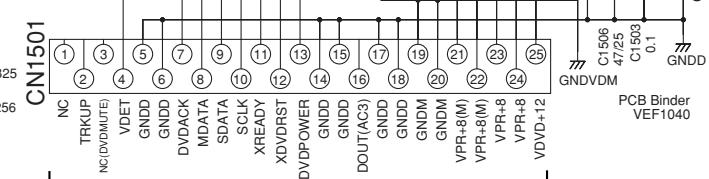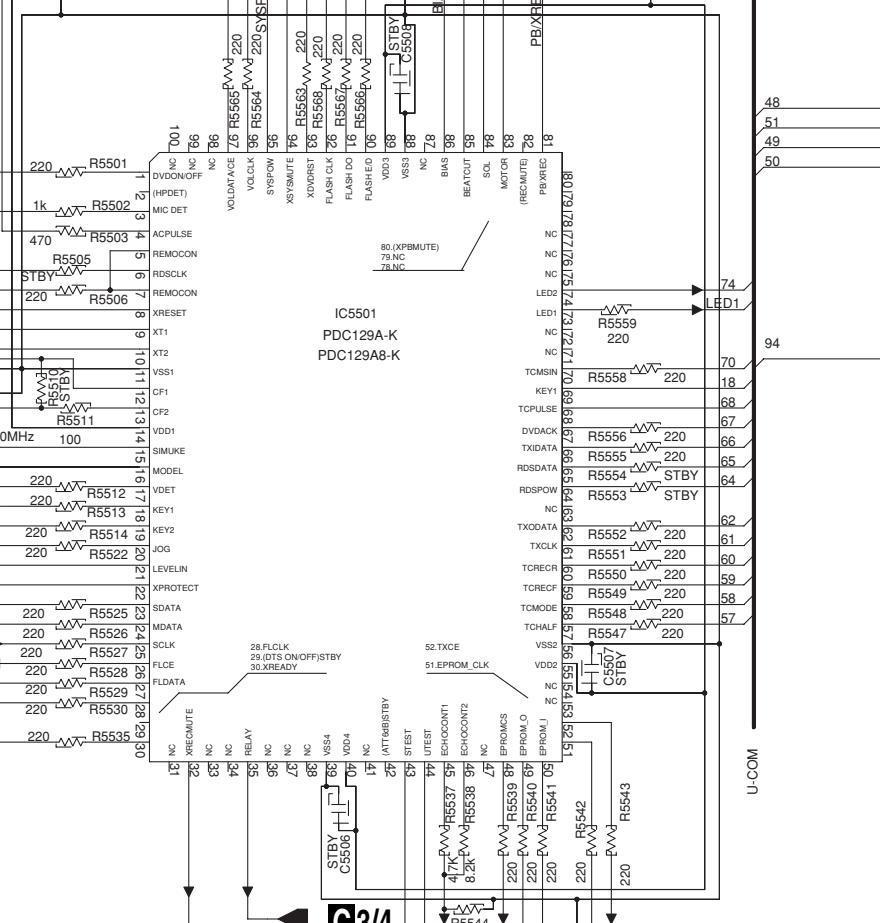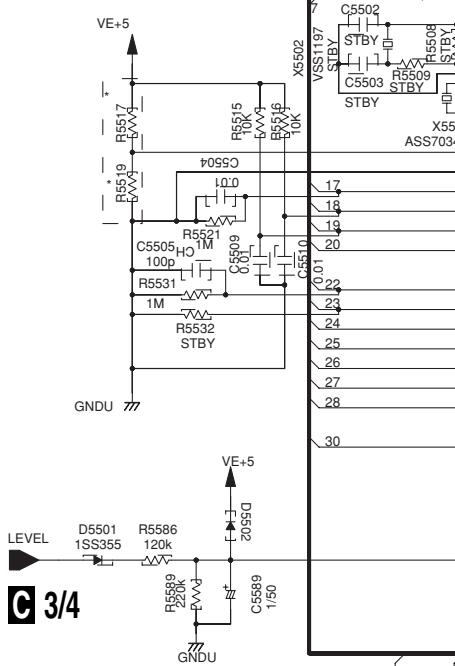

B 2/2 CN901

XV-GX3


B

C


D

E

1

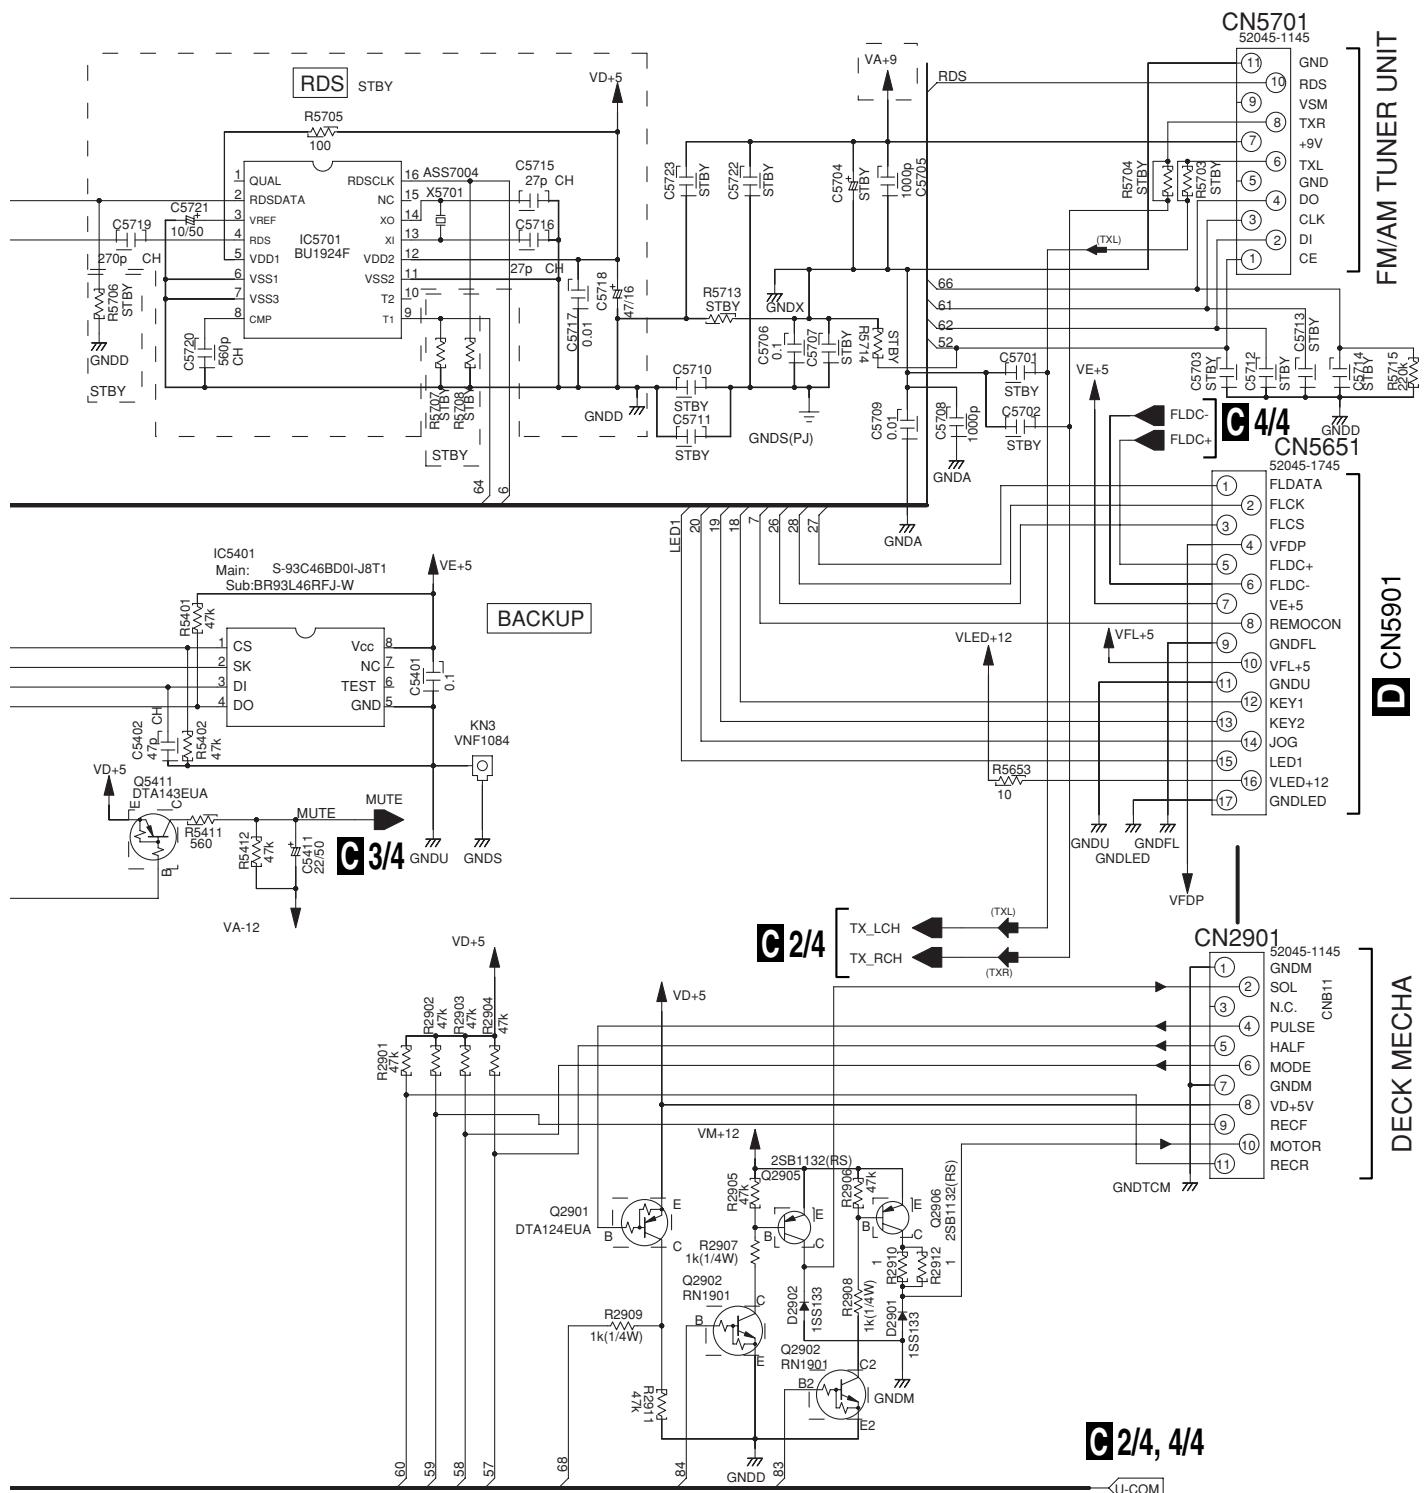

3.6 MAIN ASSY (2/4)

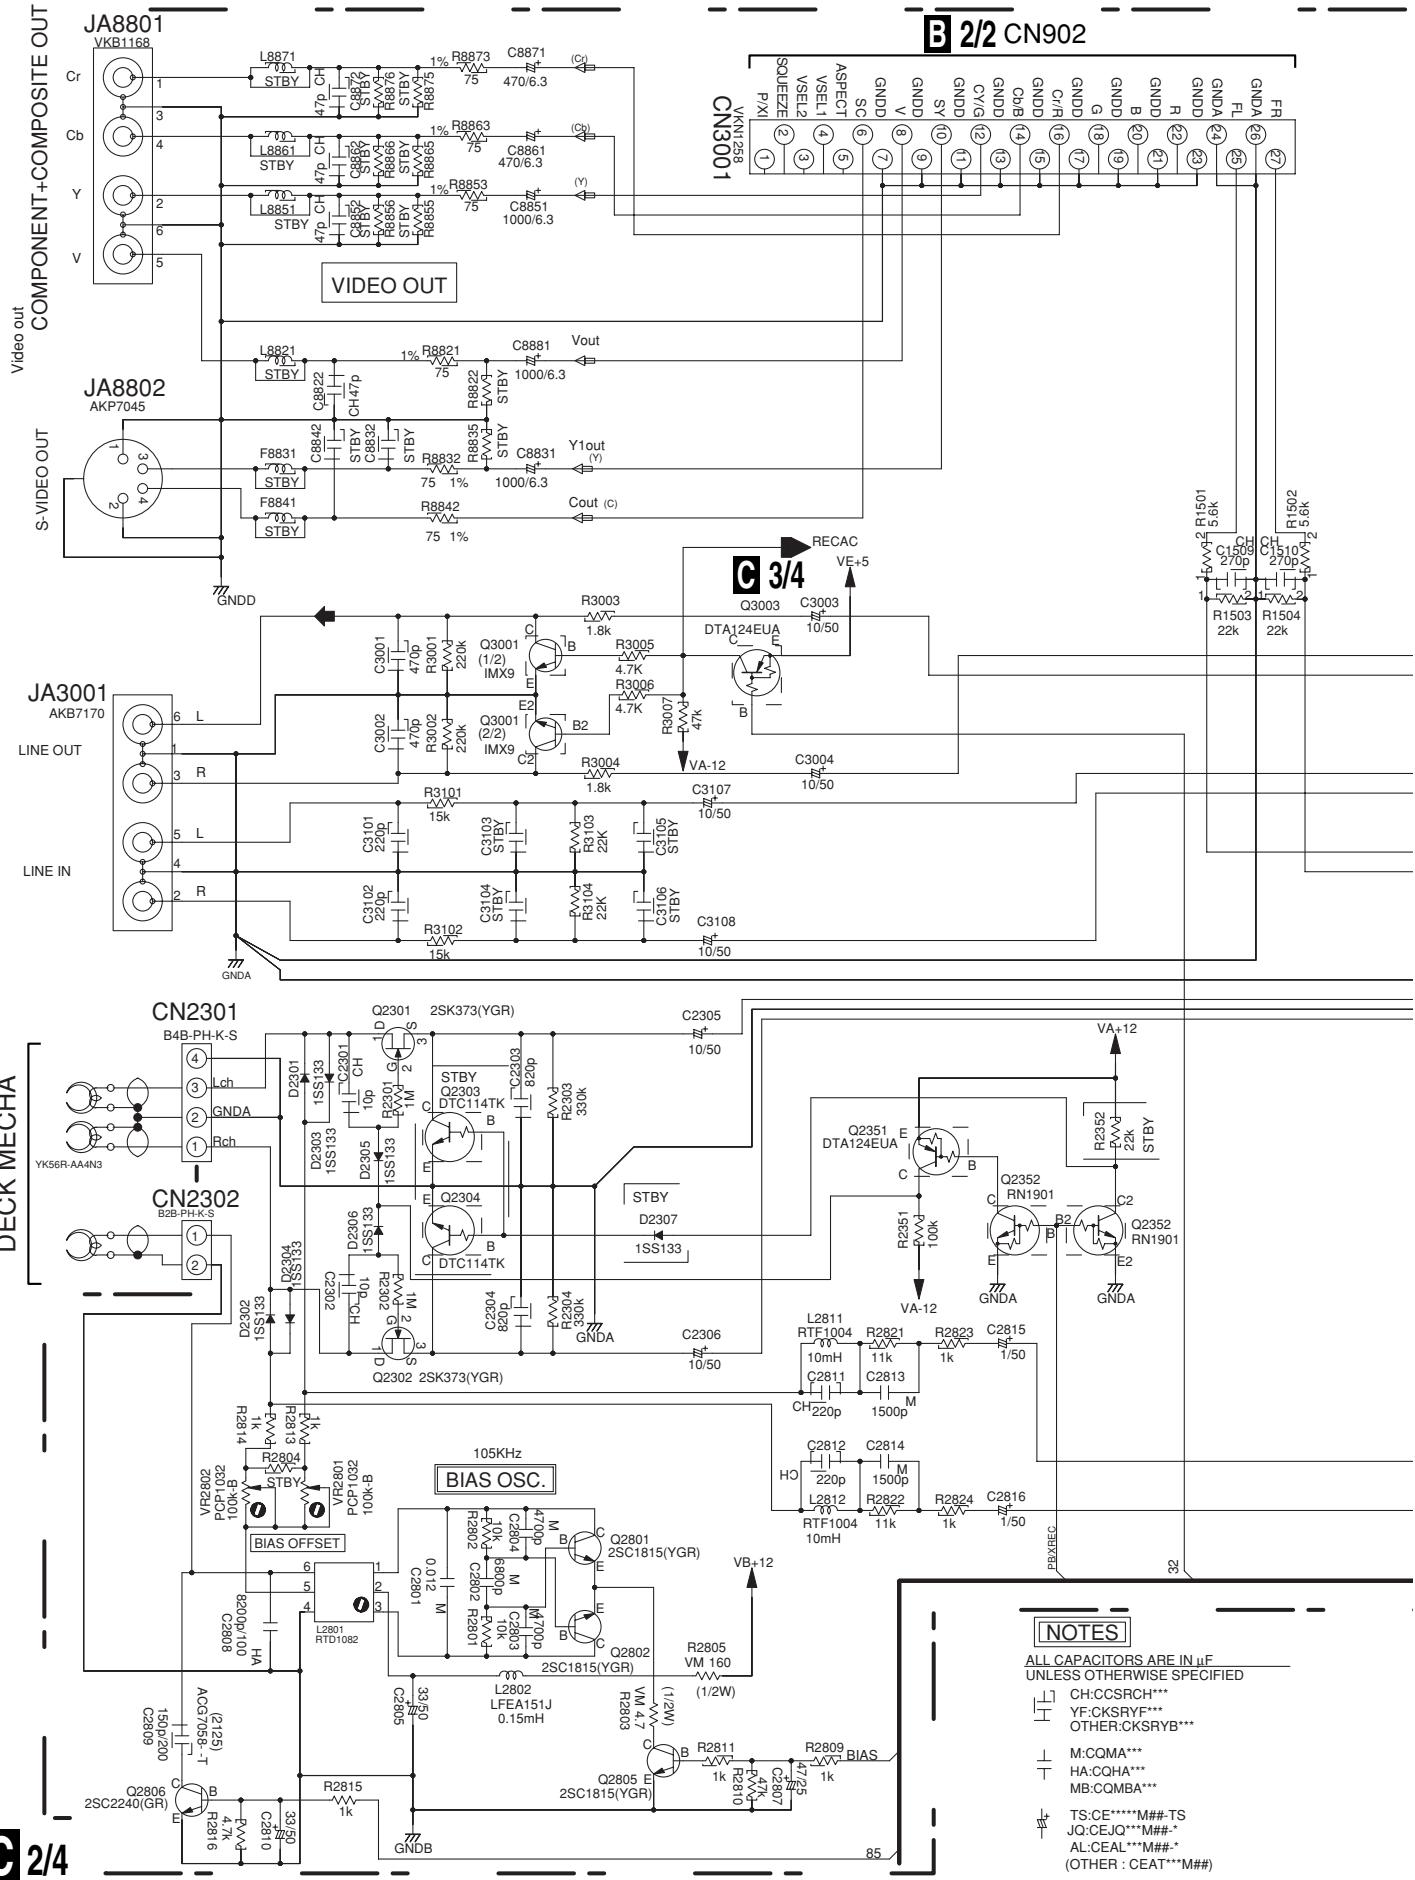

ALL CAPACITORS ARE IN μ F
UNLESS OTHERWISE SPECIFIED

CH:CCSRCH***

YF:CKSRYF***

OTHER:CKSRYB***

\perp M:CQMA***

HA:CQHA***
MR.CQHAB***

MB:CQMBA***

TS:CE*****M##-TS


JQ:CEJQ***M##-*
AL:CEAL***M##-*

AL:CEAL***M##-^
(OTHER : CEAT***M)

(OTHER: CLEAR — M)

4

C 2/4 MAIN ASSY
(AWM8013 : DFLXJ, DDXJ/RD)
(AWM8015 : MTXJ) (AWM8016 : DDXJ/RB)

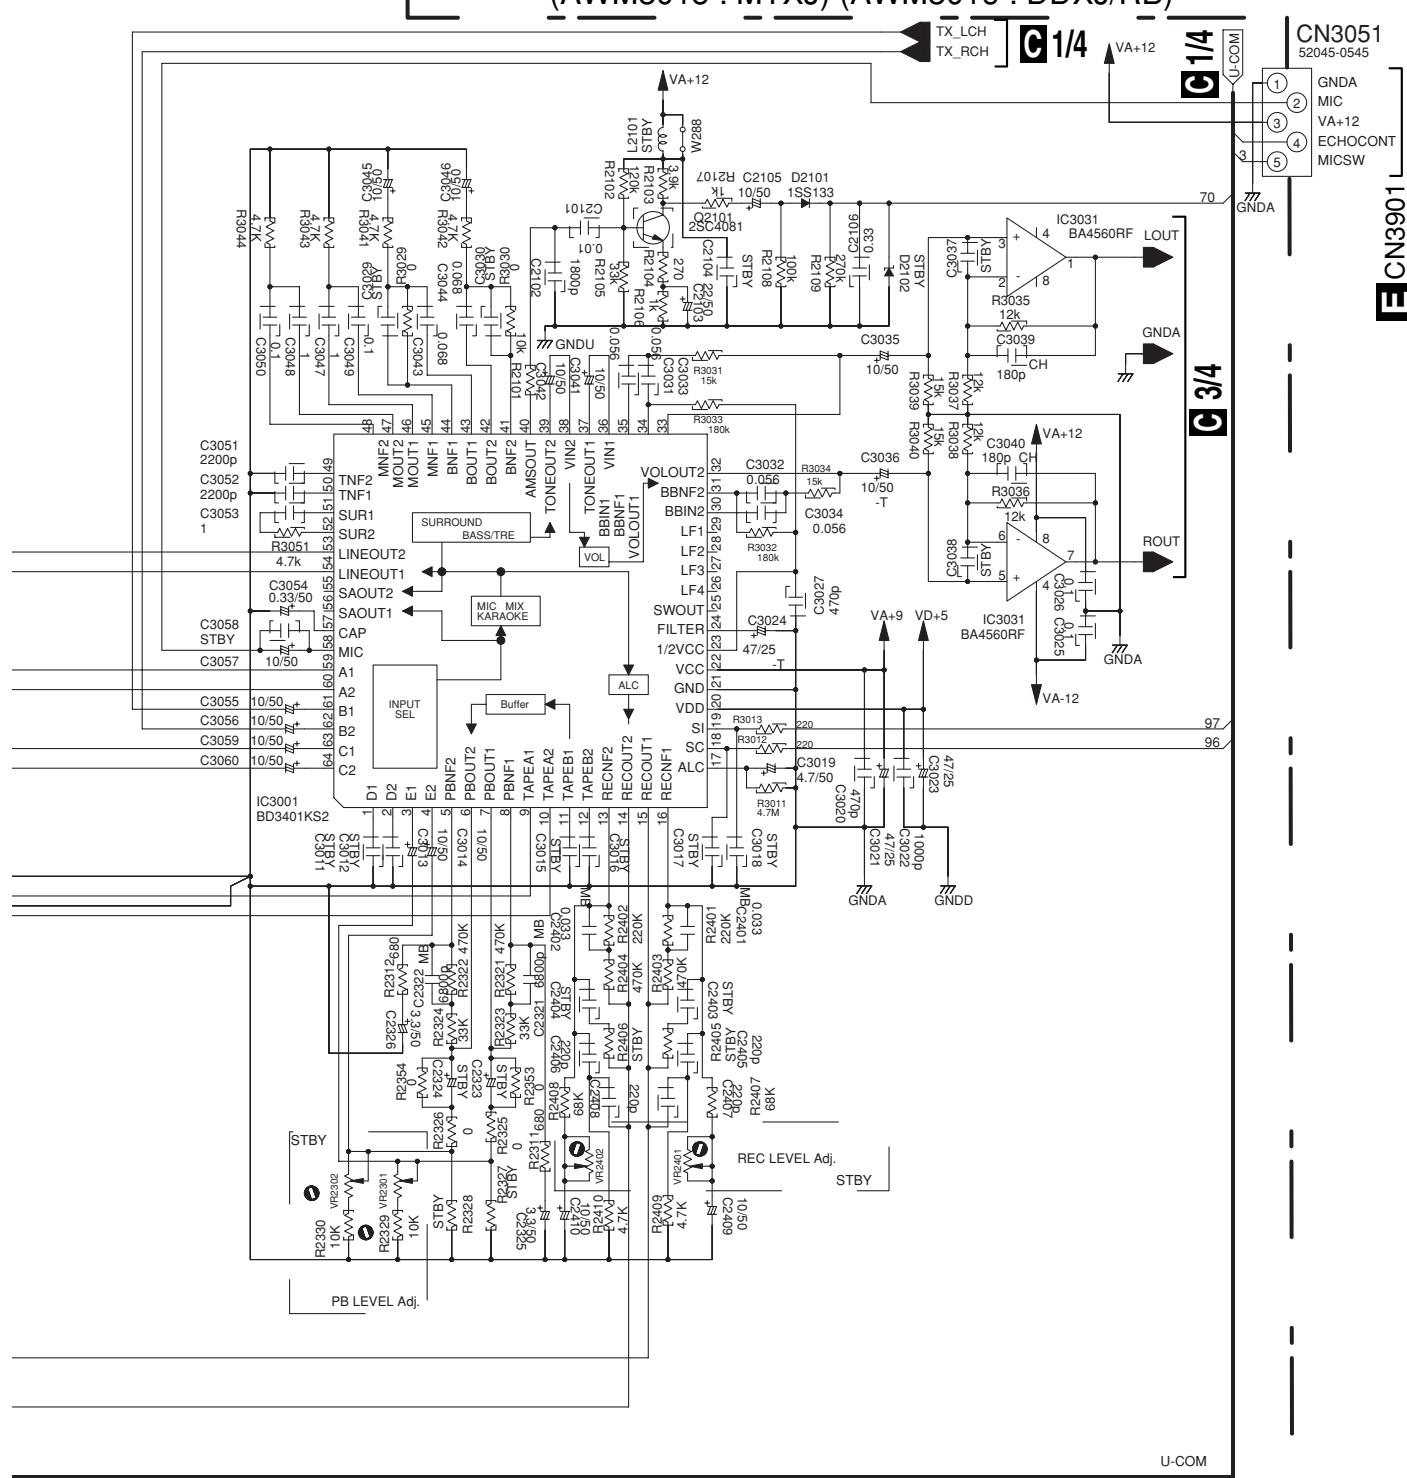


ALL RESISTORS ARE IN
 UNLESS OTHERWISE SPECIFIED
 $\triangle\text{W}$ 1/16W $\sim\text{V}$ 1/4WPU

ALL COILS ARE IN μH
 UNLESS OTHERWISE SPECIFIED
 $\sim\text{M}$ LAU**J


ALL DIODES ARE 1SS133
 UNLESS OTHERWISE SPECIFIED
 \rightarrow 1SS133
 \rightarrow MTZJ**
 DZ

C 2/4

3.7 MAIN ASSY (3/4)

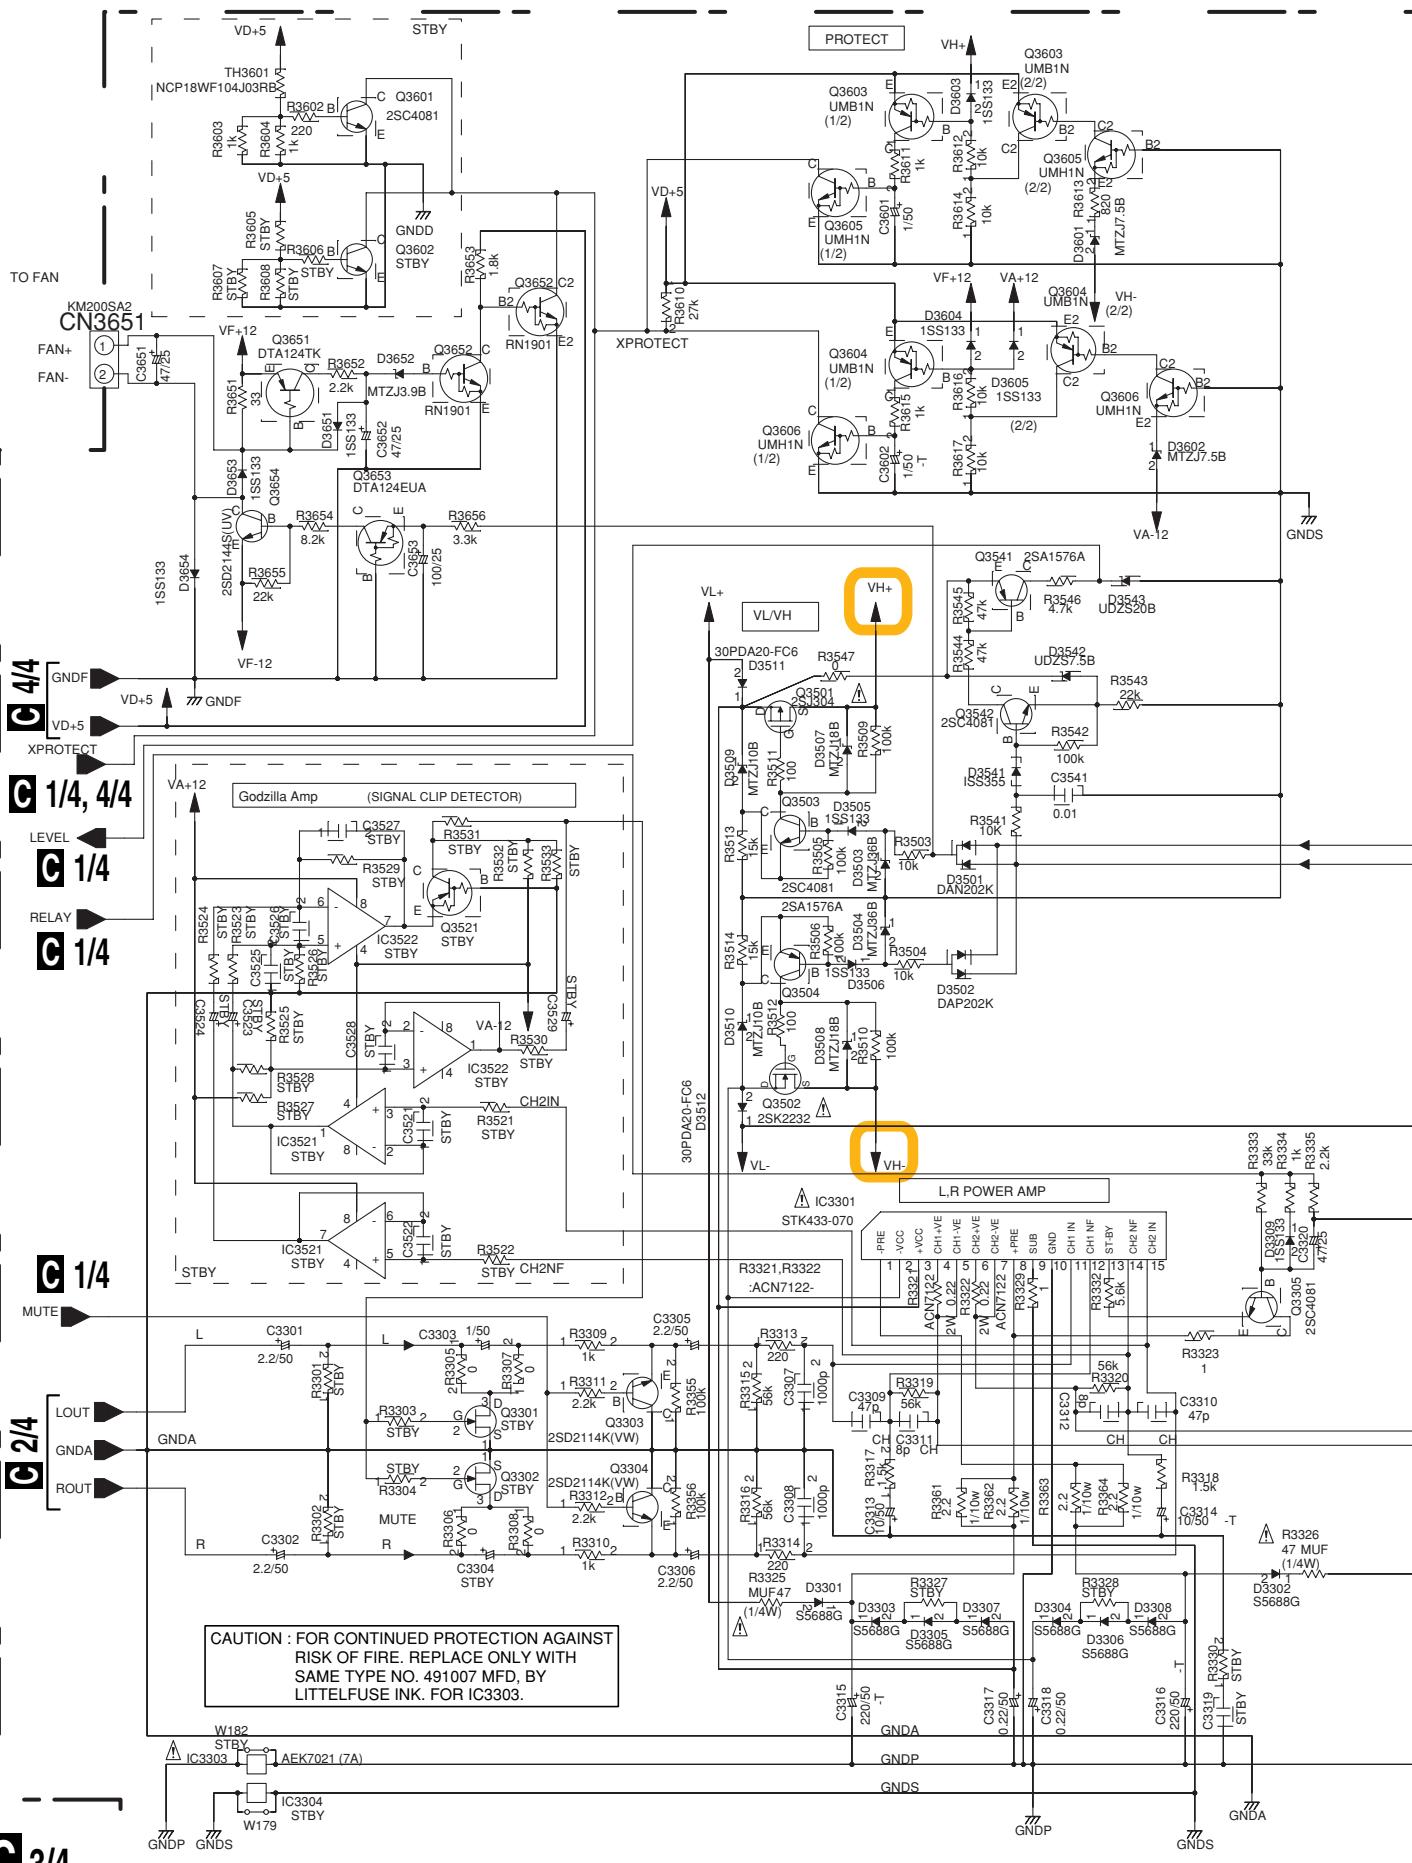

C 3/4 MAIN ASSY
 (AWM8013 : DFLXJ, DDXJ/RD)
 (AWM8015 : MTXJ) (AWM8016 : DDXJ/RB)

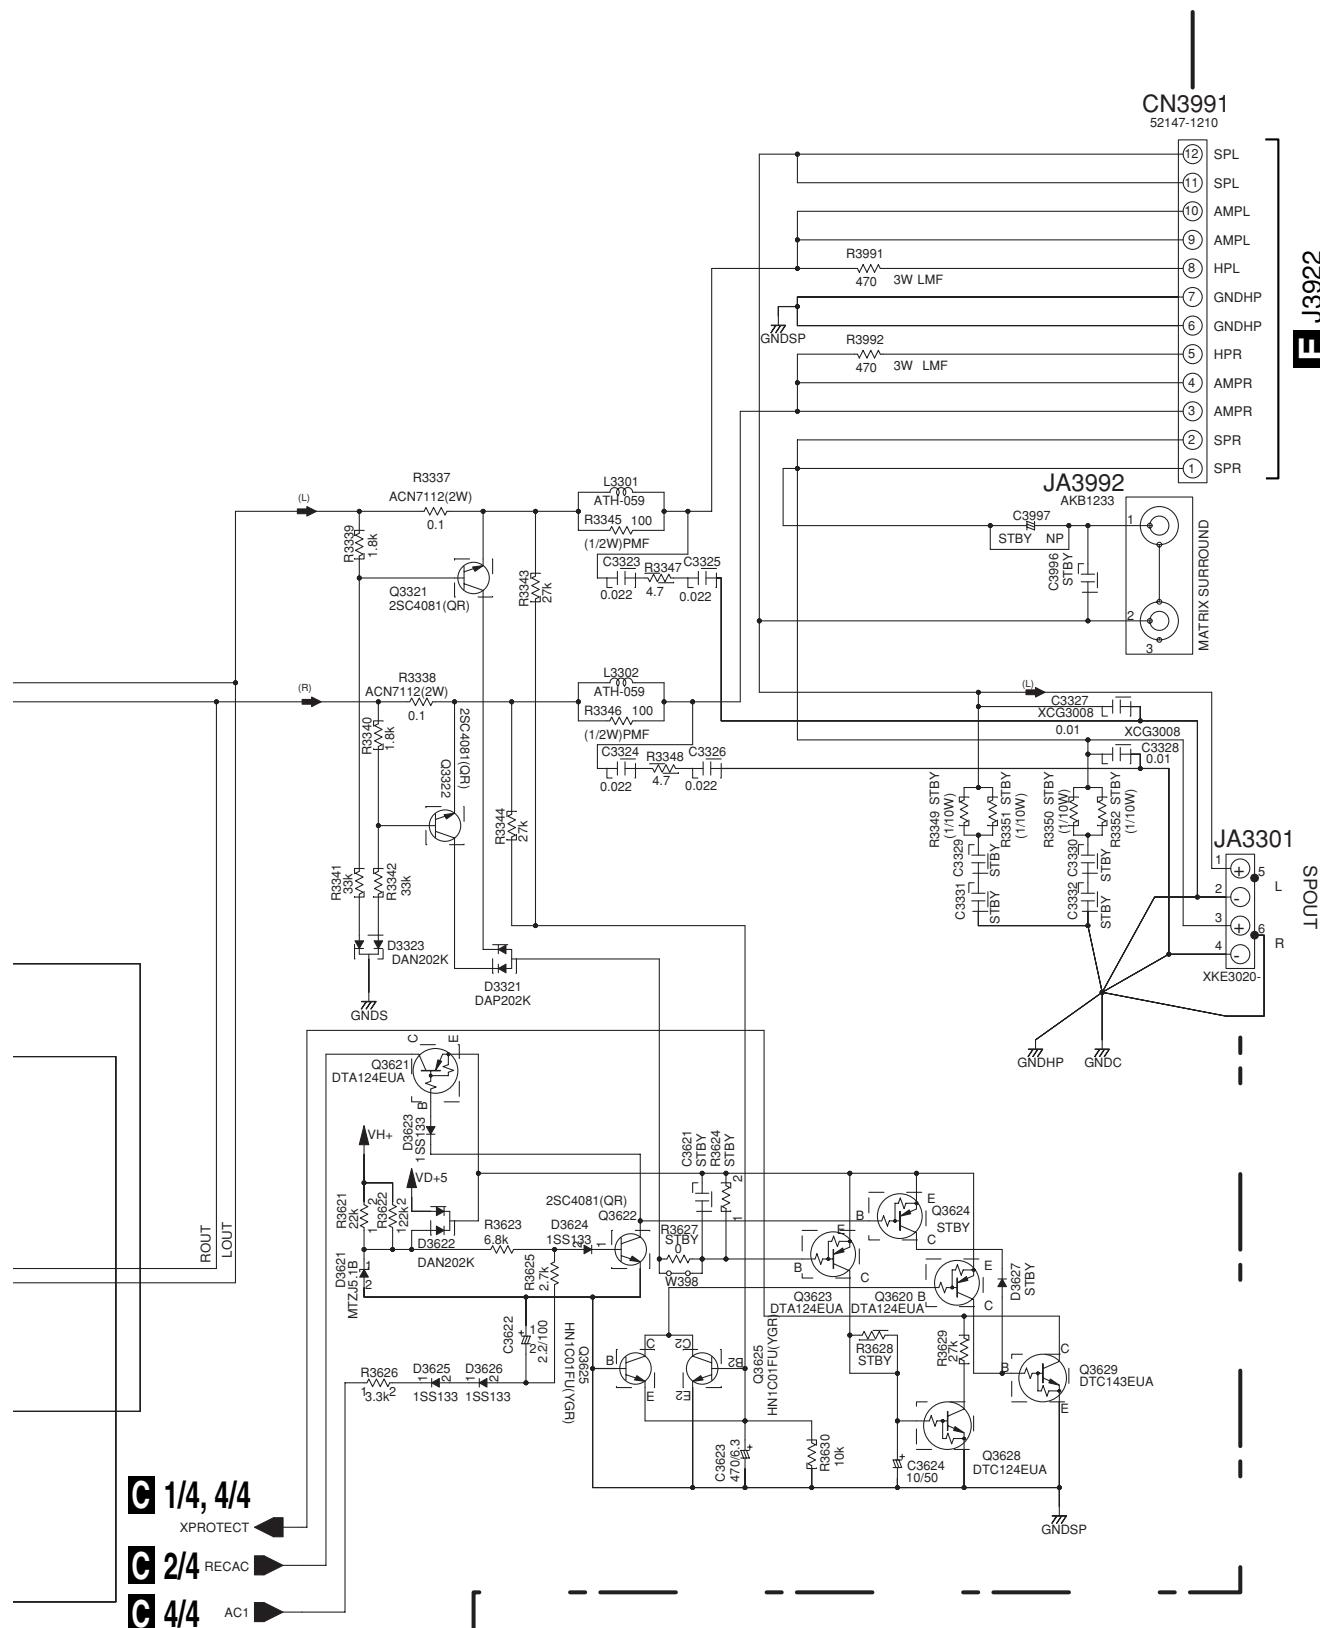


C 1/4, 4/4
 XPROTECT
C 2/4 RECAC
C 4/4 AC1

C 3/4



■ 1 ■ 2 ■ 3 ■ 4
3.8 MAIN ASSY (4/4)

A C 4/4 MAIN ASSY

(AWM8013 : DFLXJ, DDXJ/RD)
(AWM8015 : MTXJ) (AWM8016 : DDXJ/RB)

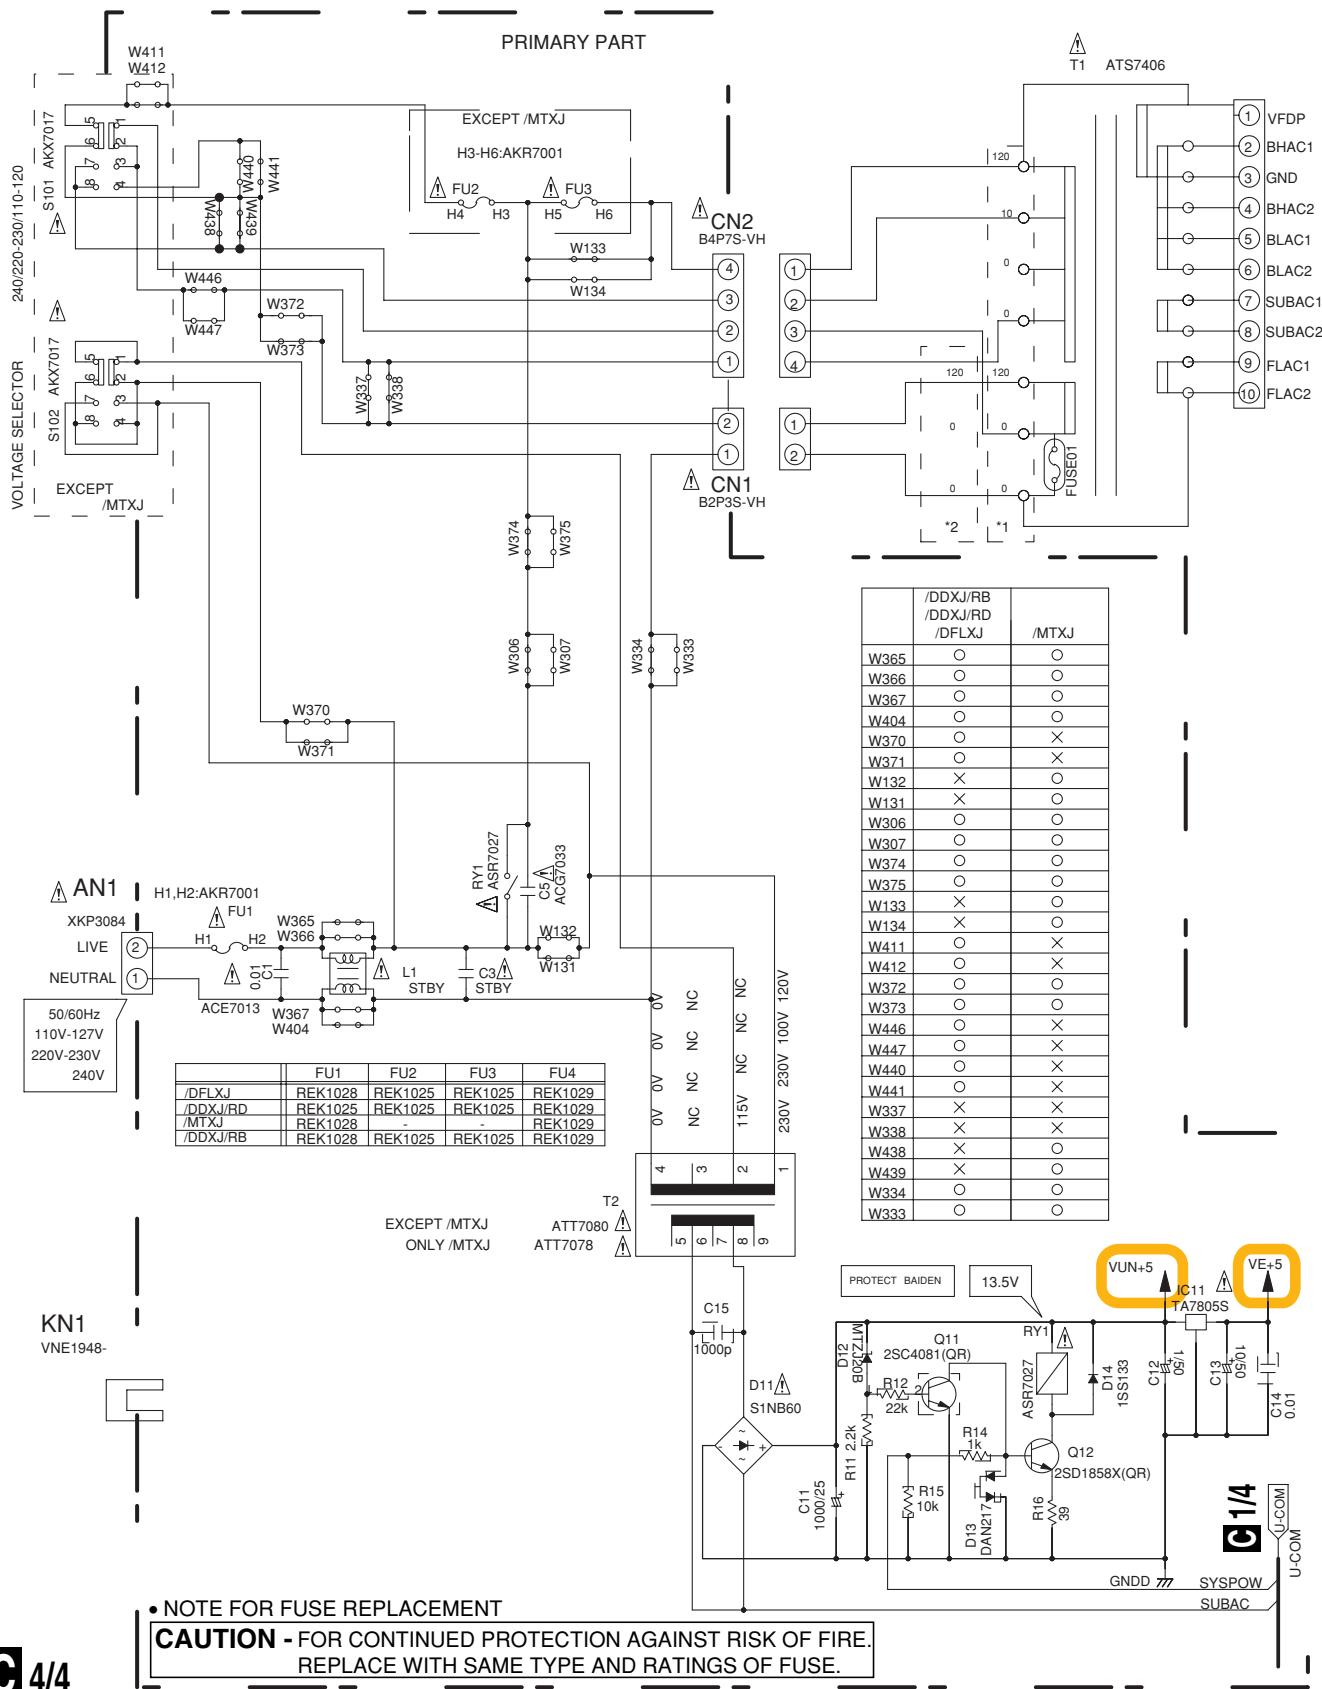


C 4/4

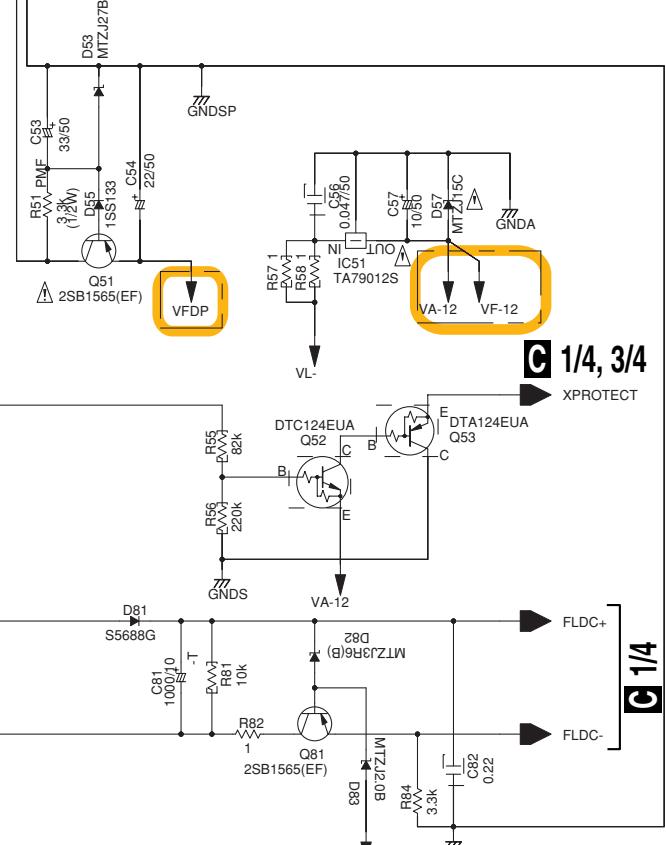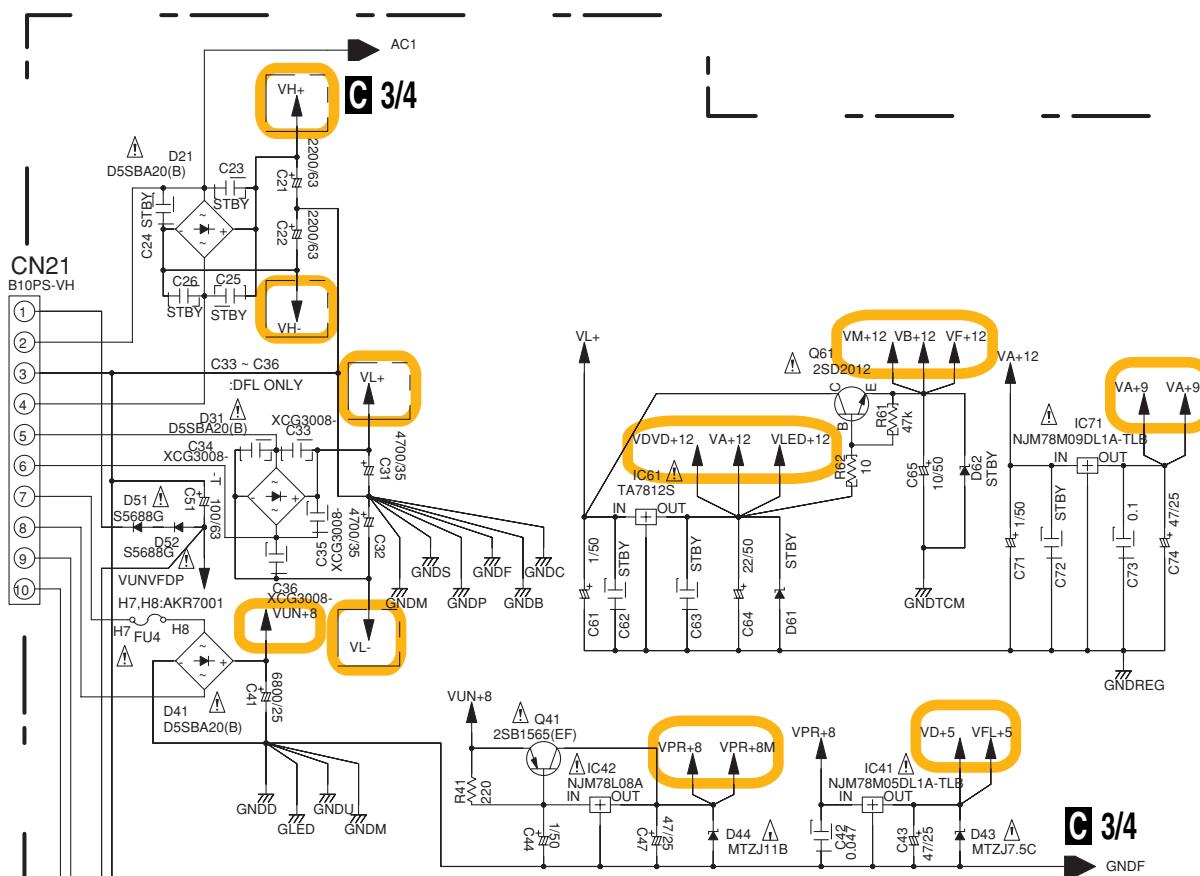**C 4/4**




3.9 DISPLAY and MIC ASSYS

D DISPLAY ASSY (AWU8275)

C 1/4 CN5651

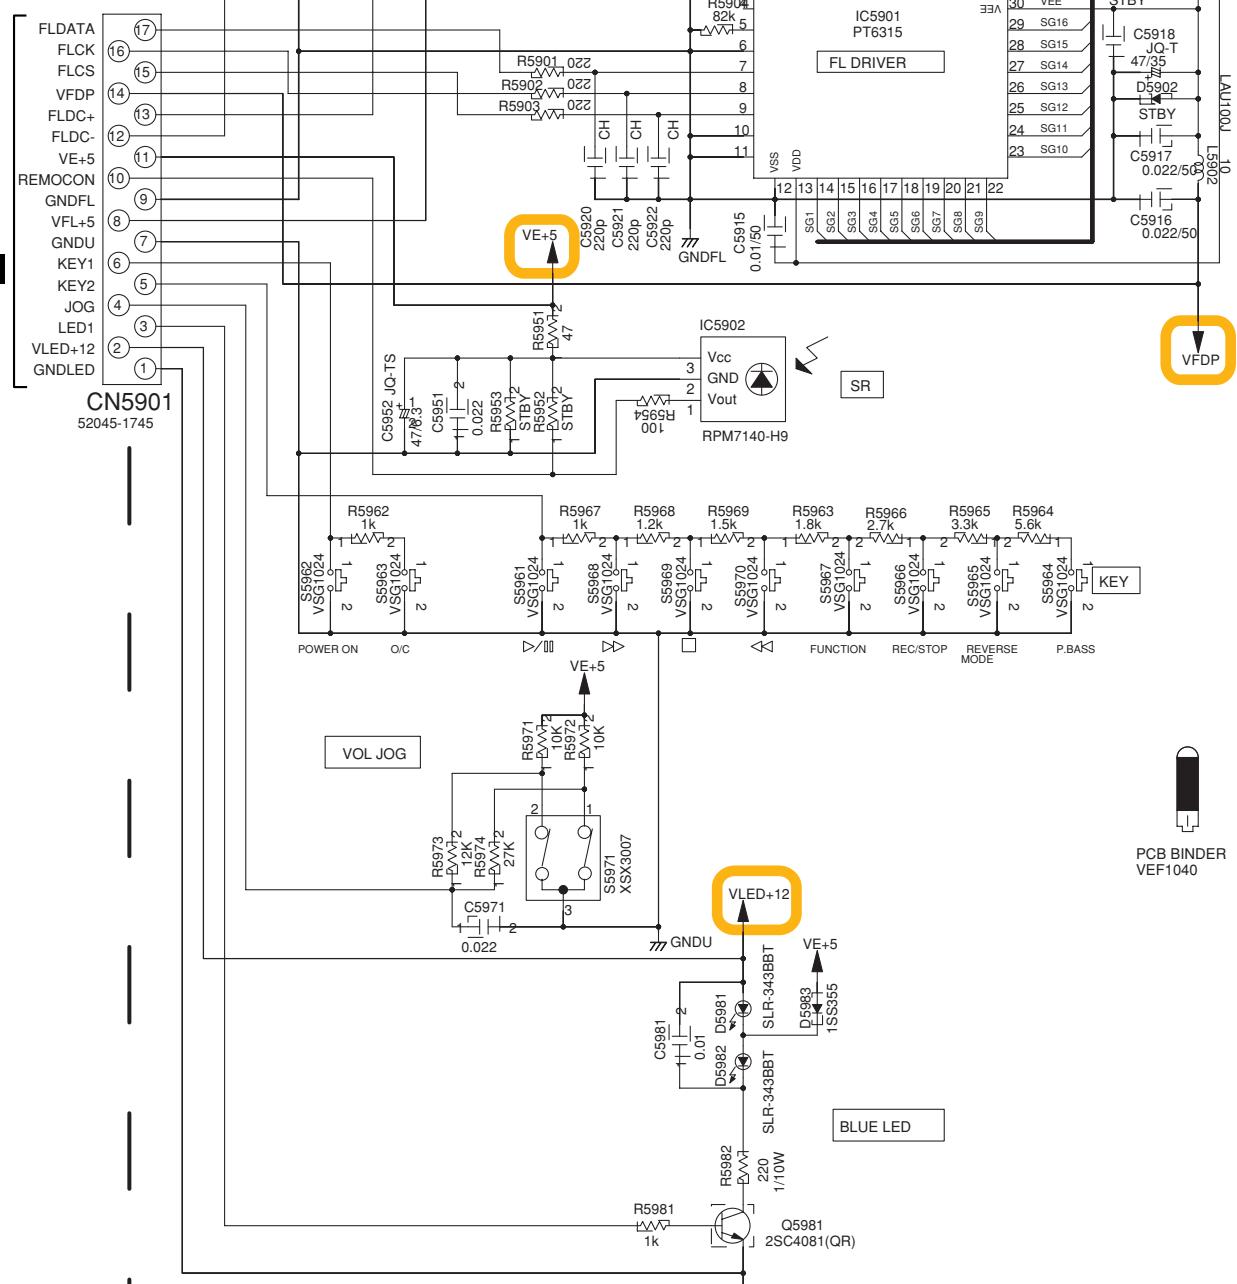

E MIC ASSY (AWU8276)

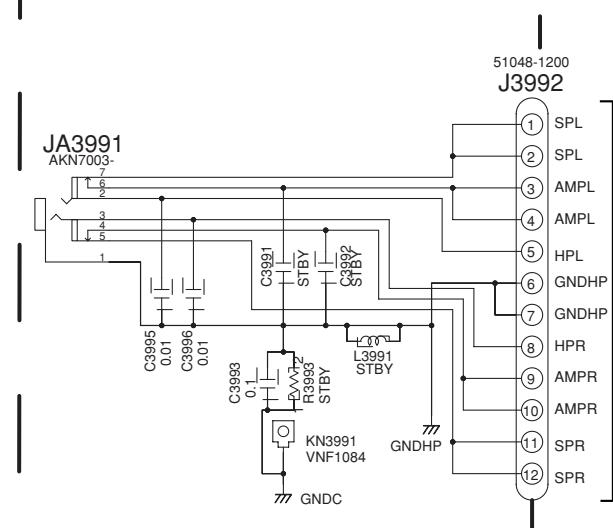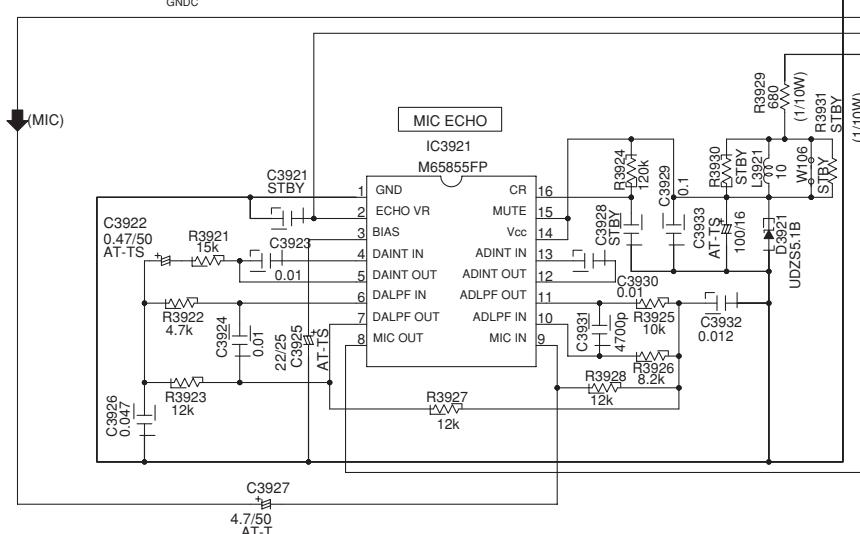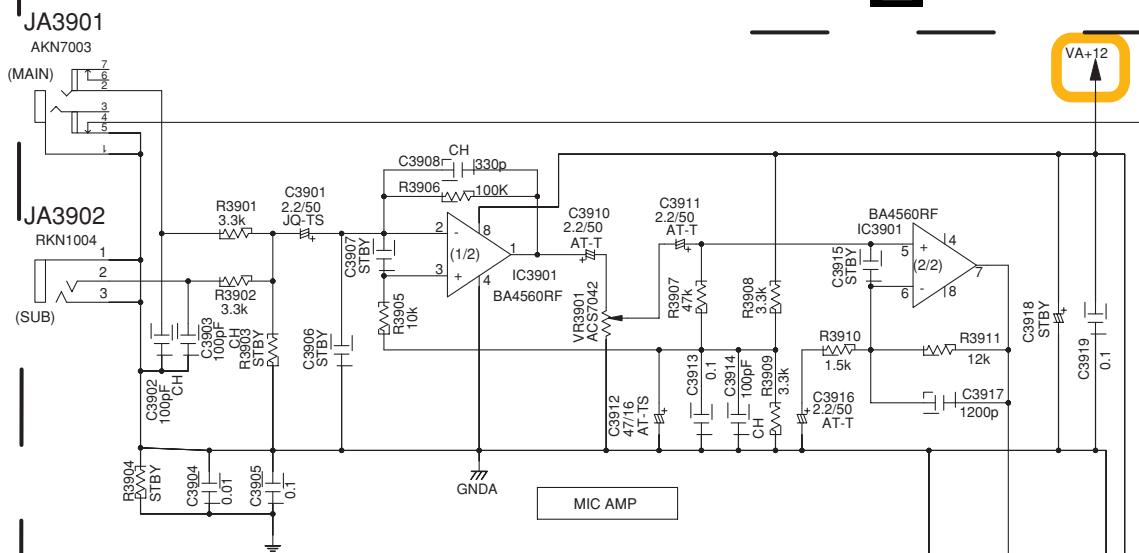

NOTES

ALL CAPACITORS ARE IN μ F
UNLESS OTHERWISE SPECIFIED

$\square \square$ CKSRYB**K50

JQ : CEJQ**M**

AL : CEAL**M**

AT : CEAT**M**

ALL RESISTORS ARE IN

$\triangle \triangle \nabla$ RS1/16S***J
 $\sim \sim \sim$ RS1/10S***J

ALL INDUCTORS ARE IN μ H

$\sim \sim \sim$ LAU***J-TA

C 2/4 CN3051


3.10 WAVEFORMS

Note : The encircled numbers denote measuring point in the schematic diagram.

A DVDM ASSY

Measurement condition :

- No. 1 to 10 : reference A1 (DVD), T2-chp 19, Color-bar
- No. 11 to 14 : reference A1 (DVD), T1

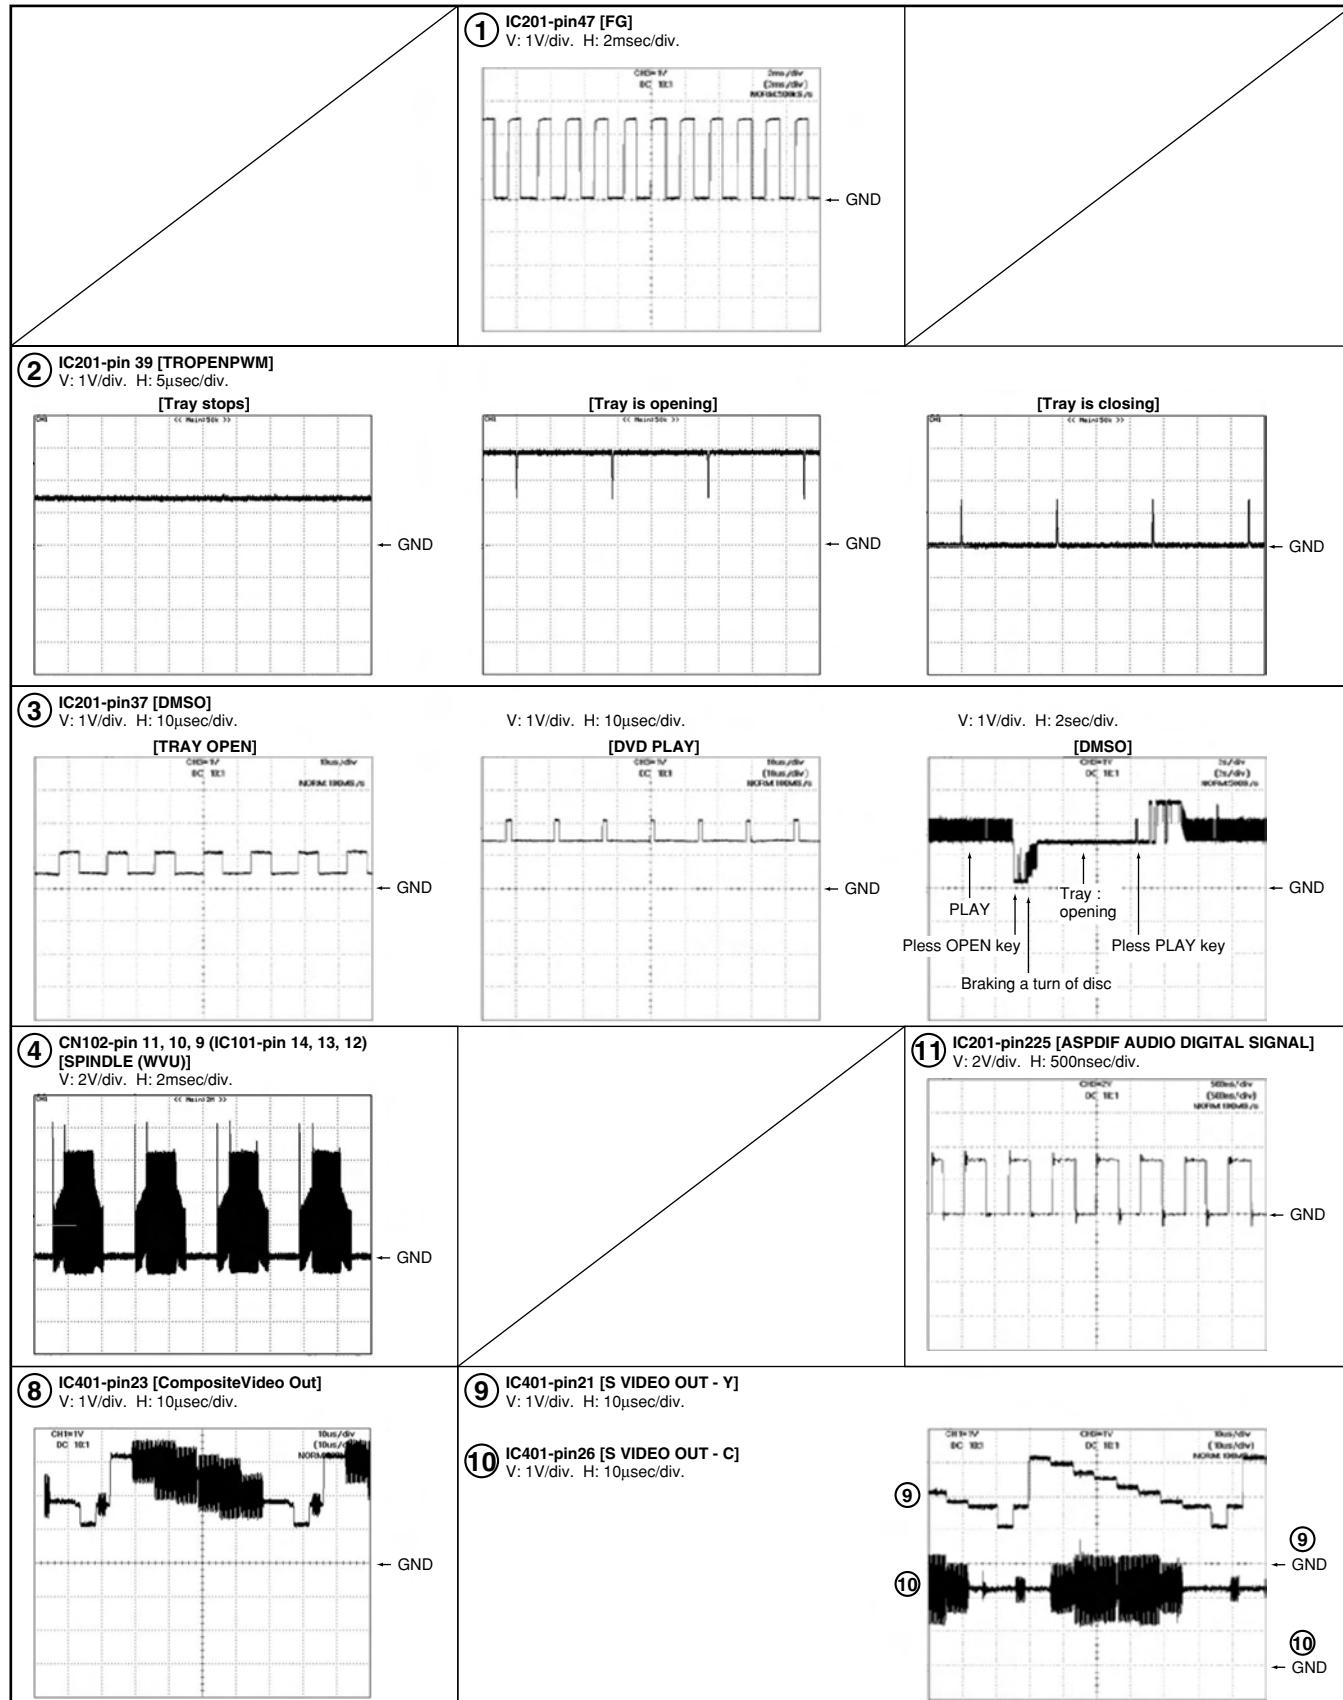


4. PCB CONNECTION DIAGRAM

NOTE FOR PCB DIAGRAMS :

- Part numbers in PCB diagrams match those in the schematic diagrams.
- A comparison between the main parts of PCB and schematic diagrams is shown below.


Symbol In PCB Diagrams	Symbol In Schematic Diagrams	Part Name
		Transistor
		Transistor with resistor
		Field effect transistor
		Resistor array
		3-terminal regulator

- The parts mounted on this PCB include all necessary parts for several destinations.
- For further information for respective destinations, be sure to check with the schematic diagram.
- View point of PCB diagrams.

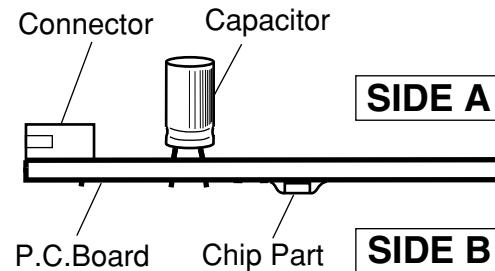


4.1 LOAB ASSY

SIDE A

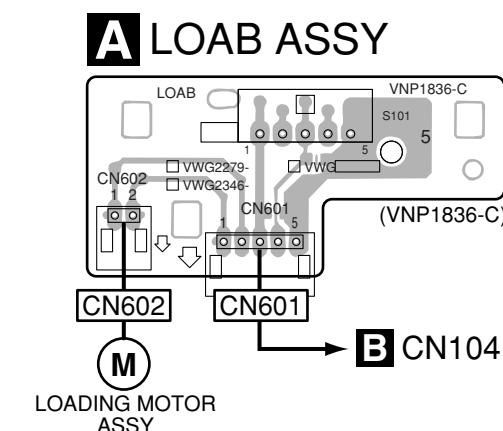

SIDE B

A LOAB ASSY

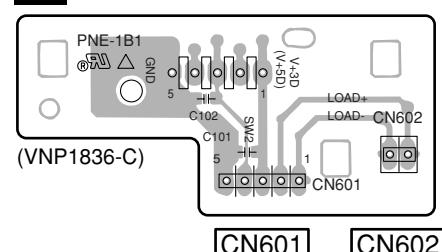

A

A

4.2 DVDM ASSY


SIDE A

SIDE A

B DVDM ASSY

To STEPPING MOTOR

To SPINDLE MOTOR

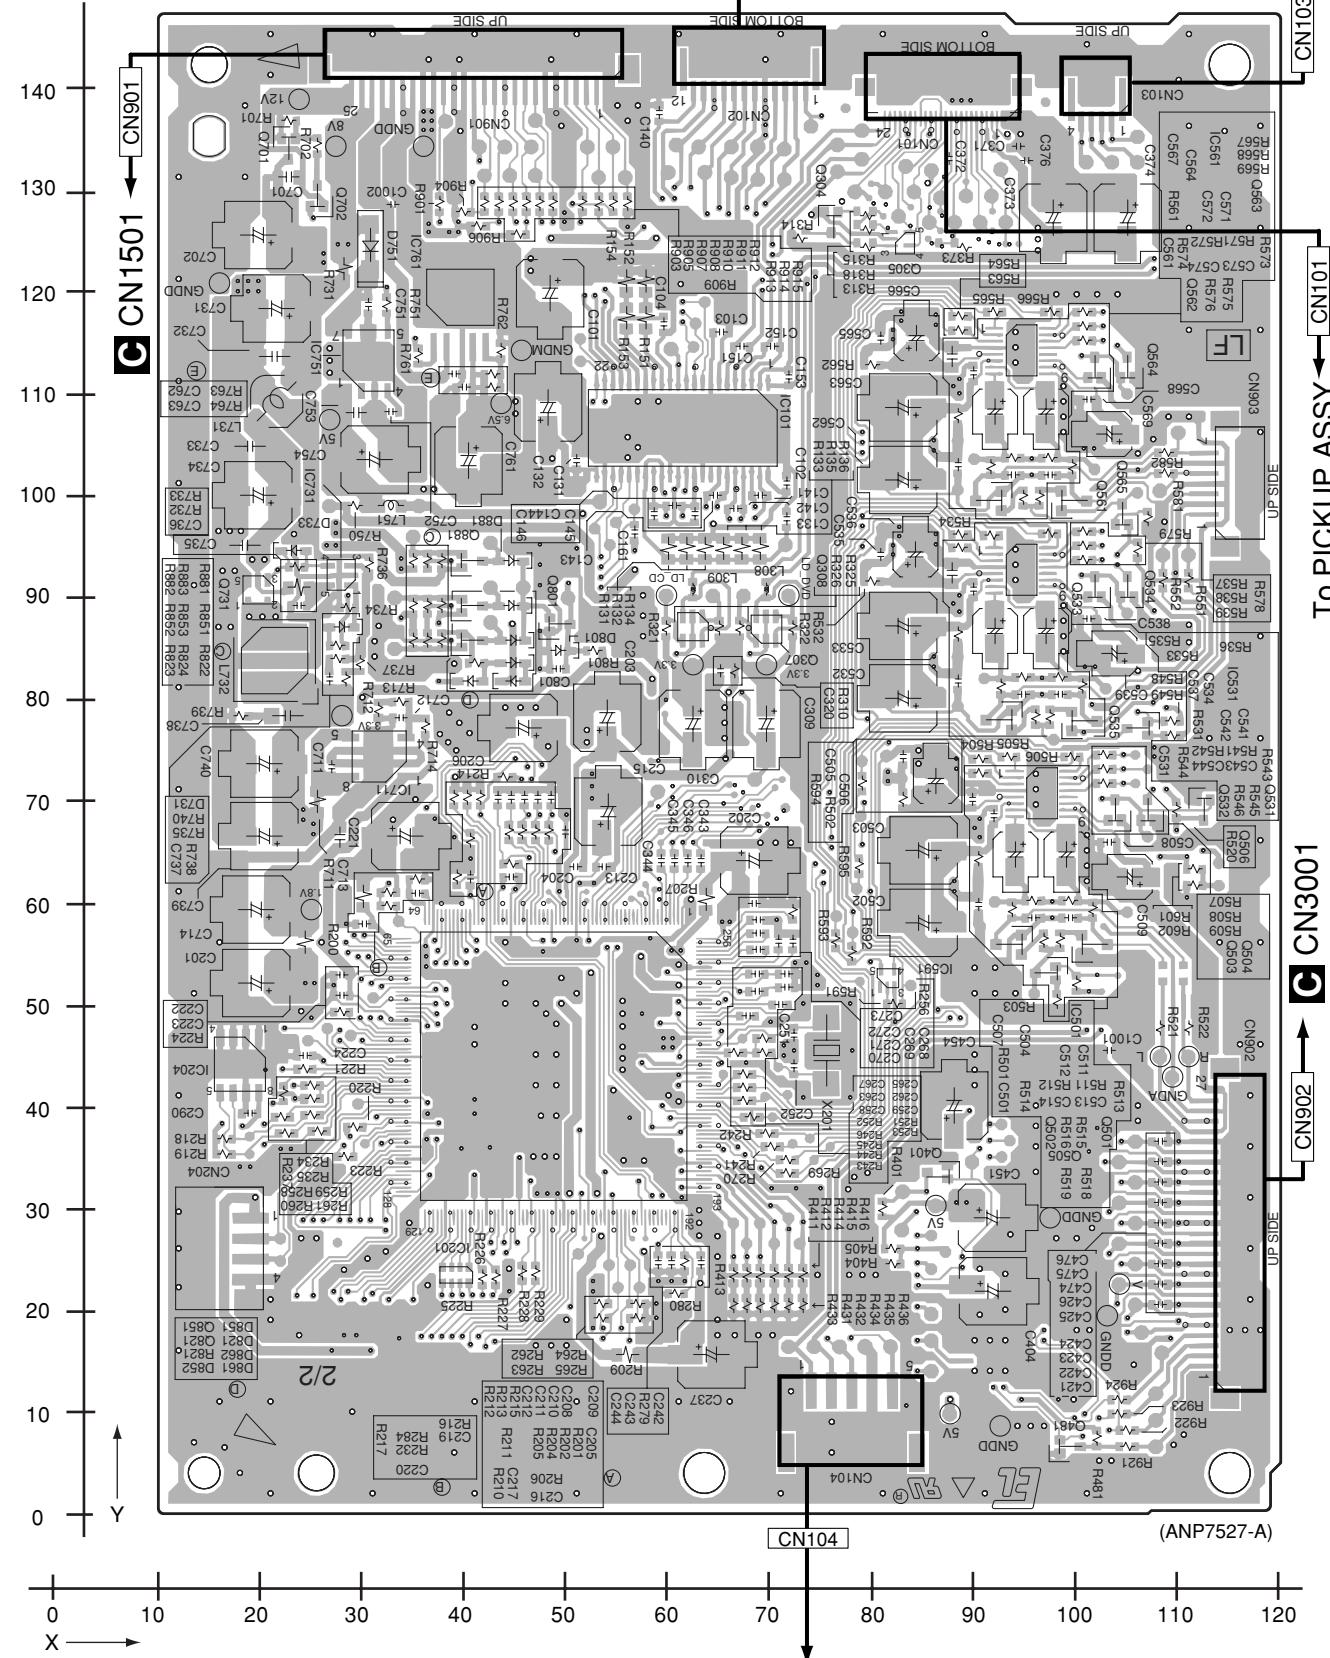

B

B

XV-GX3

5

6


7

8


SIDE B

SIDE B

B DVDM ASSY

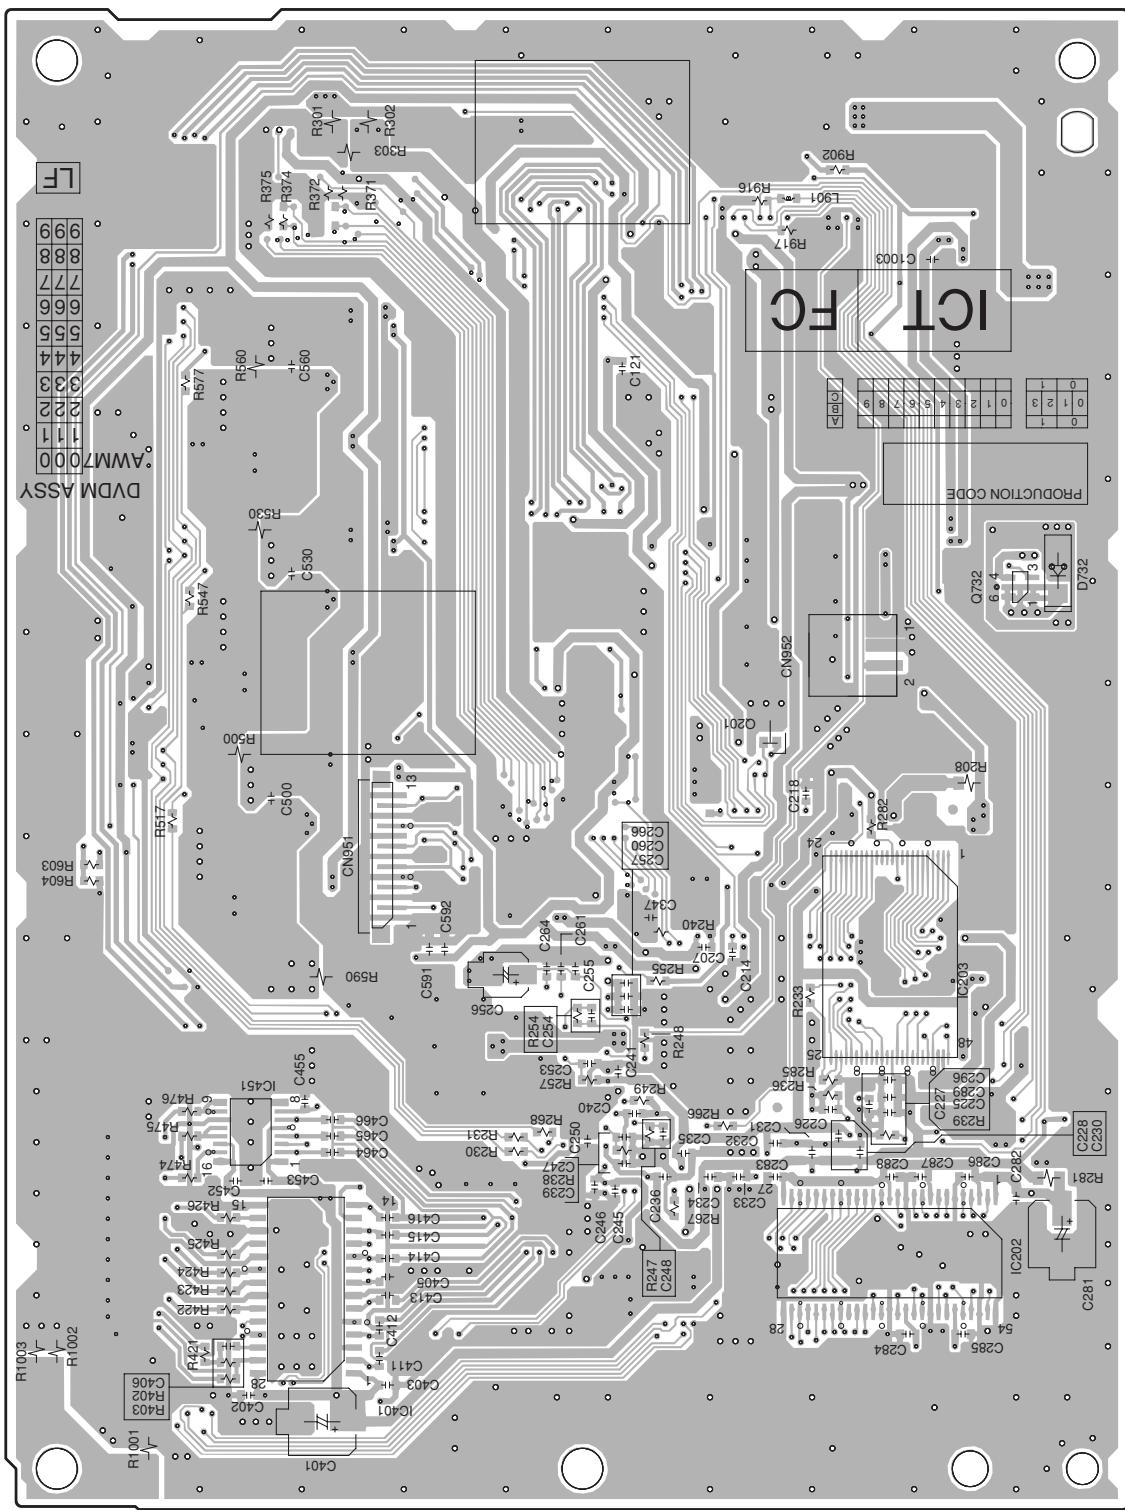

(ANP7527-A)

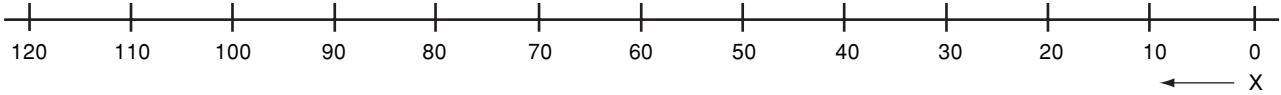

B

B

4.3 MAIN ASSY

SIDE A

C MAIN ASSY

To FM/AM TUNER UNIT

CN5701

CN3001

CN301

CN2302

230
220
210
200
190
180
170
160
150
140
130
120
110
100
90
80
70
60
50
40
30
20
10
0

2

3

4

X
Y

0

10 20 30 40 50 60 70 80 90 100 110 120 130 140 150 160

To DECK MECHA

XV-GX3

DIP

ICT FC

1

2

3

4

A

B

C

D


E


F


C

B CN901

E CN3901

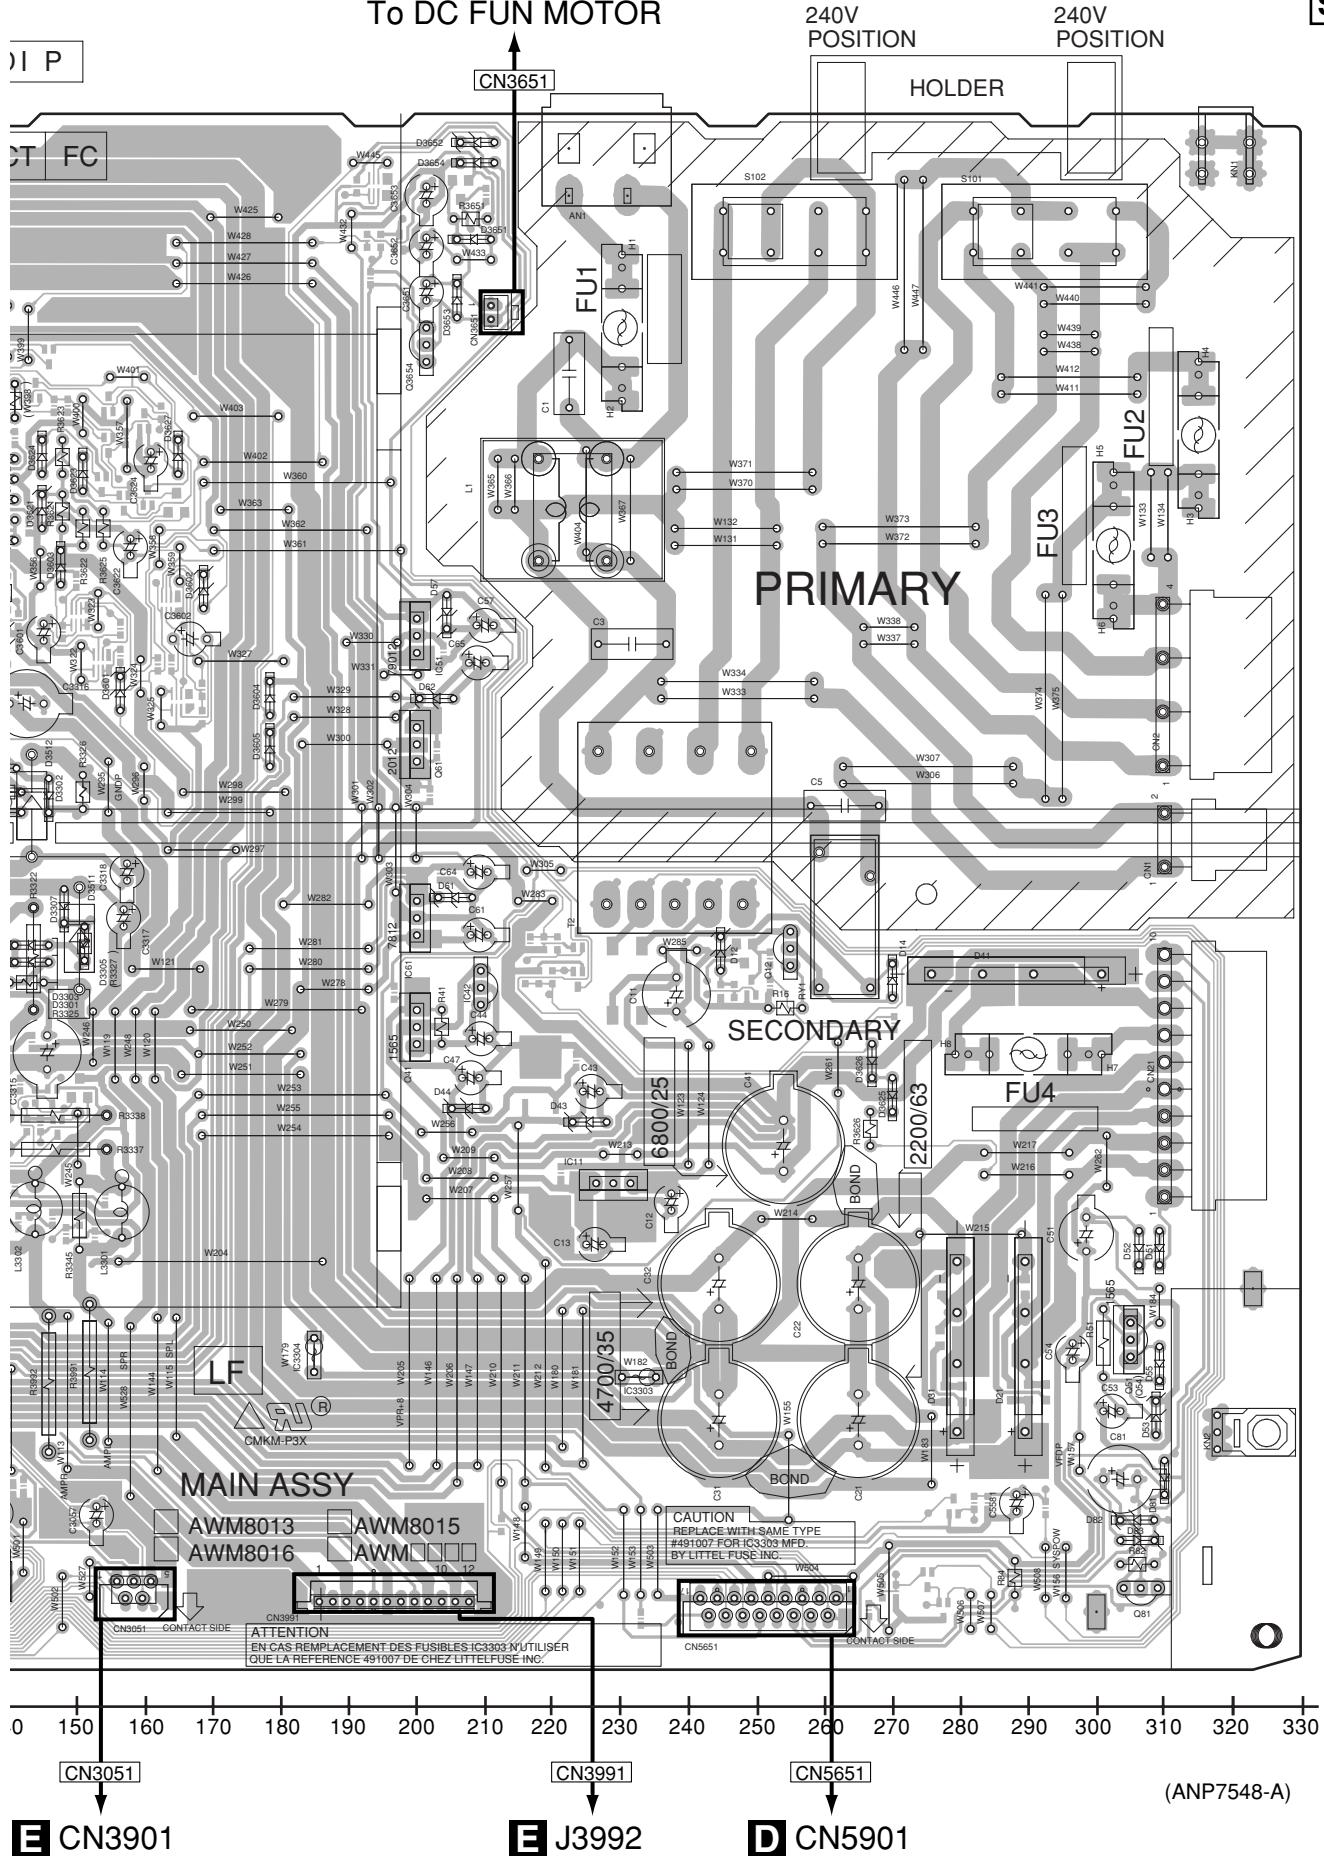

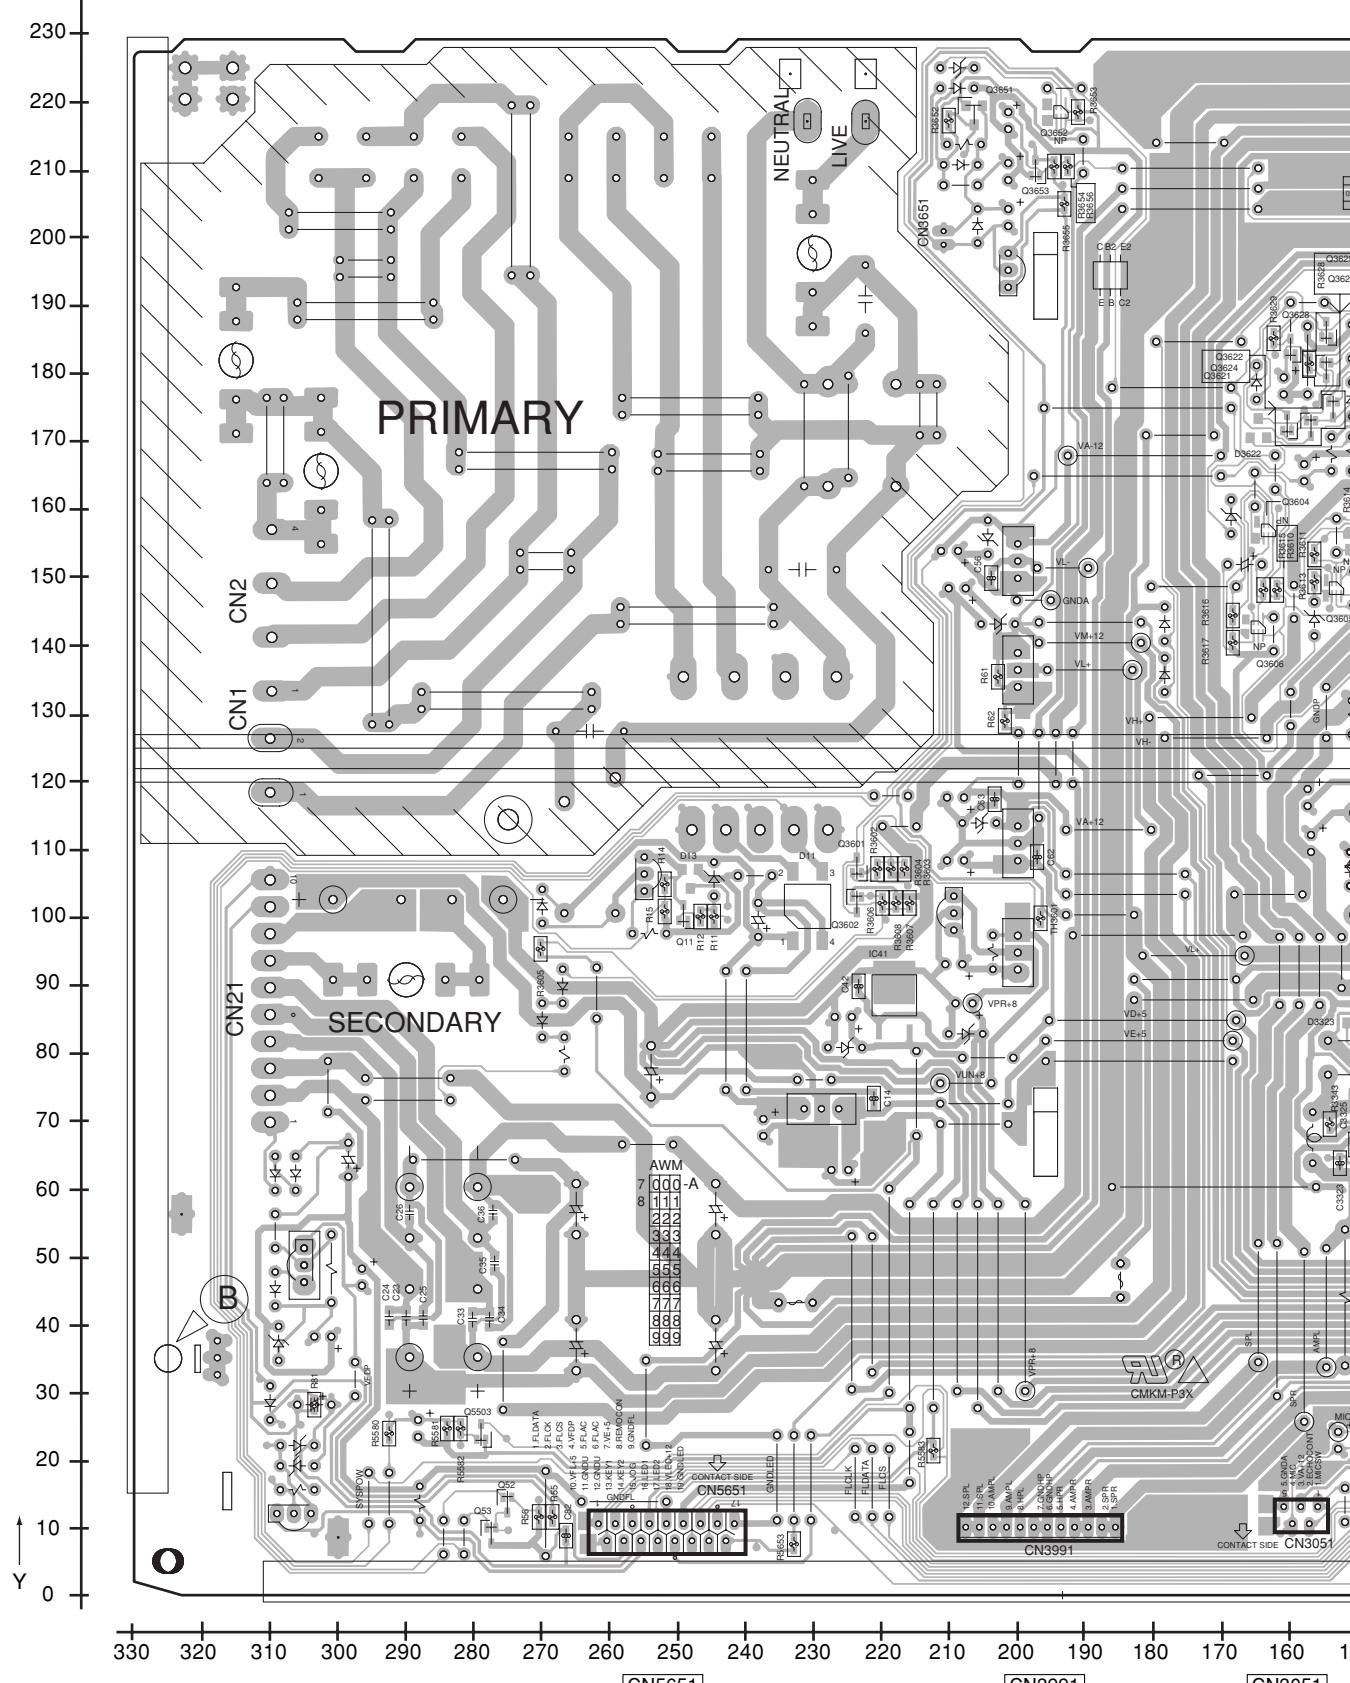SIDE B**C MAIN ASSY**

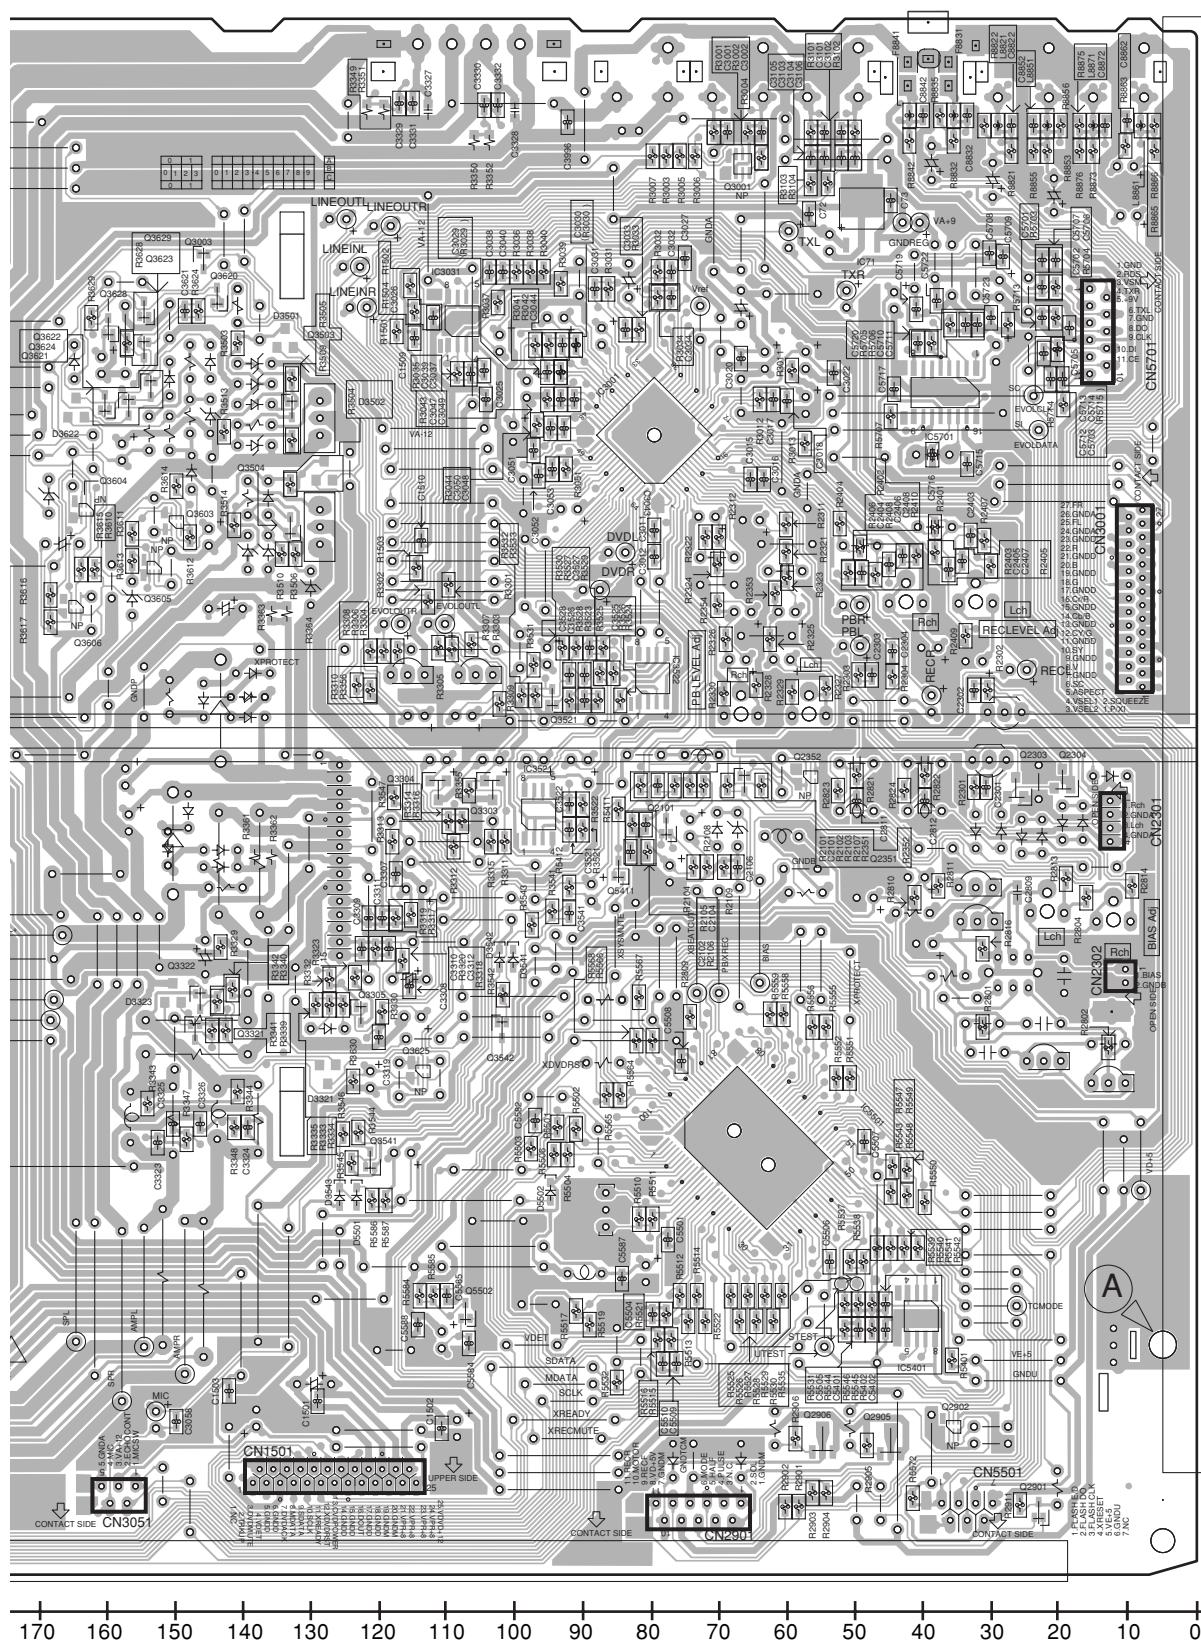

(ANP7548-A)

SIDE B

A

CN5701

CN3001

CN2301

CN2302

230
220
210
200
190
180
170
160
150
140
130
120
110
100
90
80
70
60
50
40
30
20
10
0

C

D

E

F

C

41

XV-GX3

6

7

5

6

7

8

4.4 DISPLAY ASSY

SIDE A

D DISPLAY ASSY

SIDE A

A

B

C

D

E

F

1

1

2

2

2


3

3

3

4

D

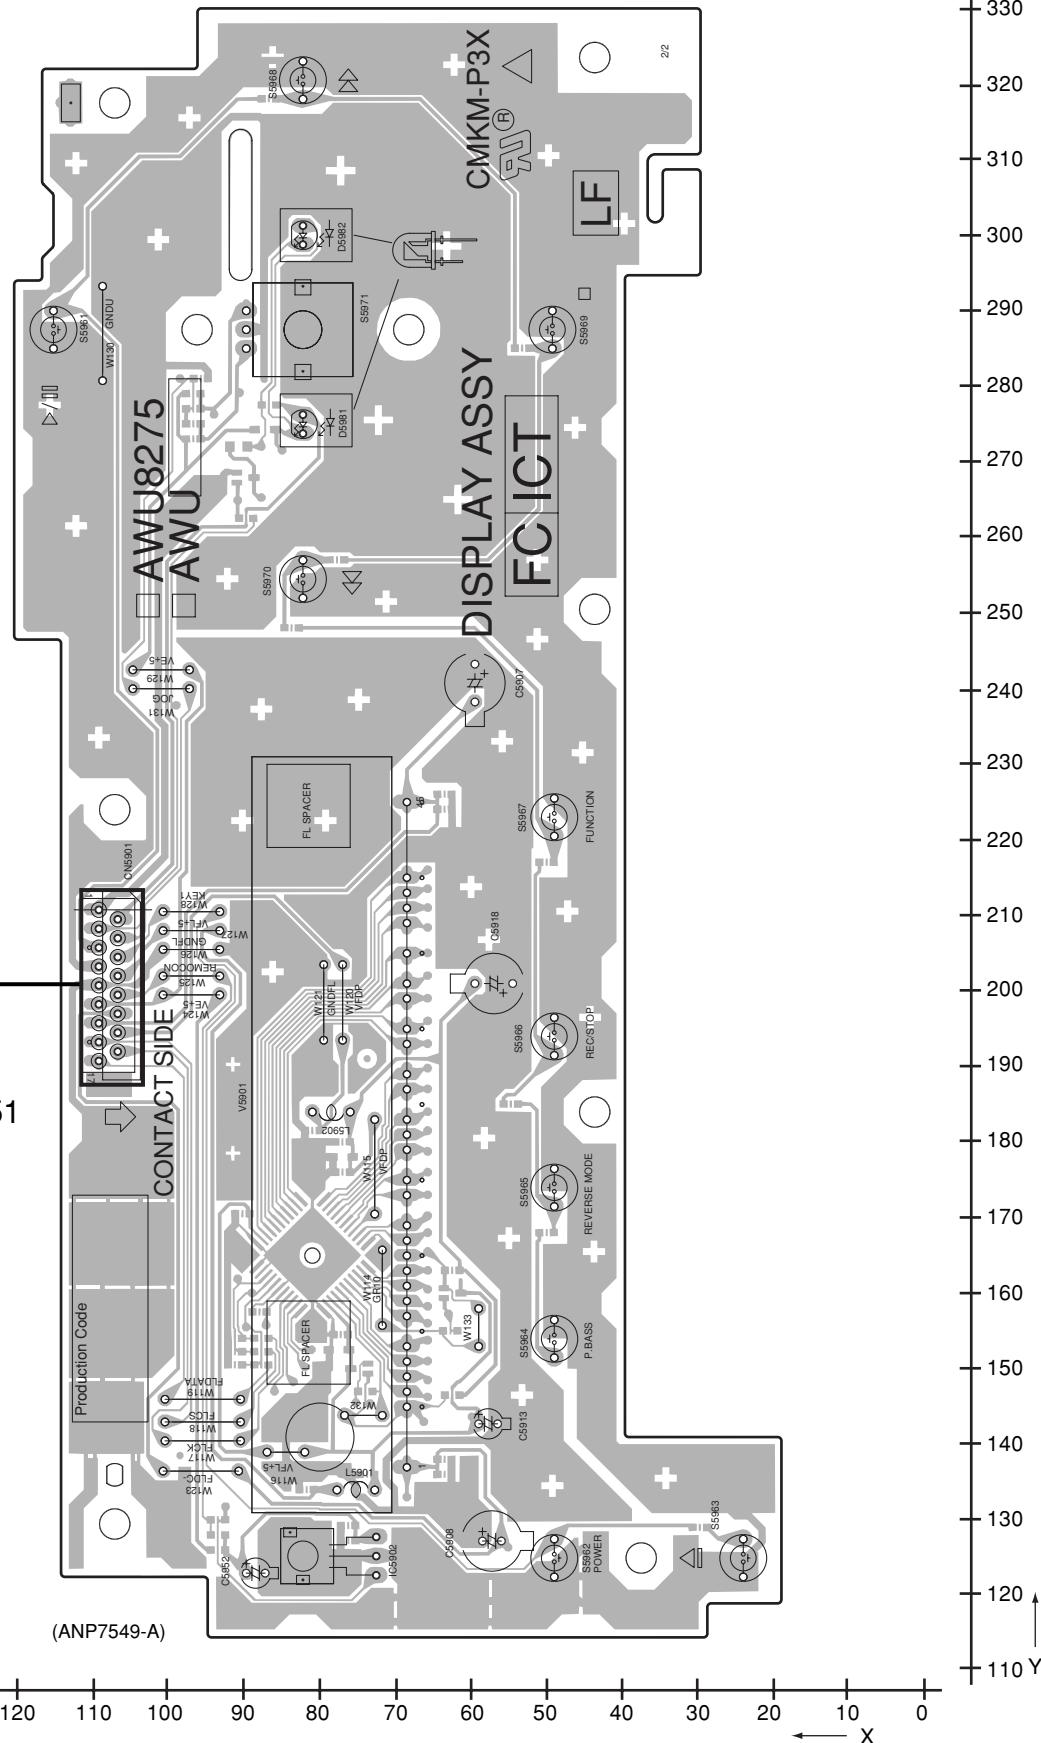

6

7


8

SIDE B

D DISPLAY ASSY

SIDE B


A

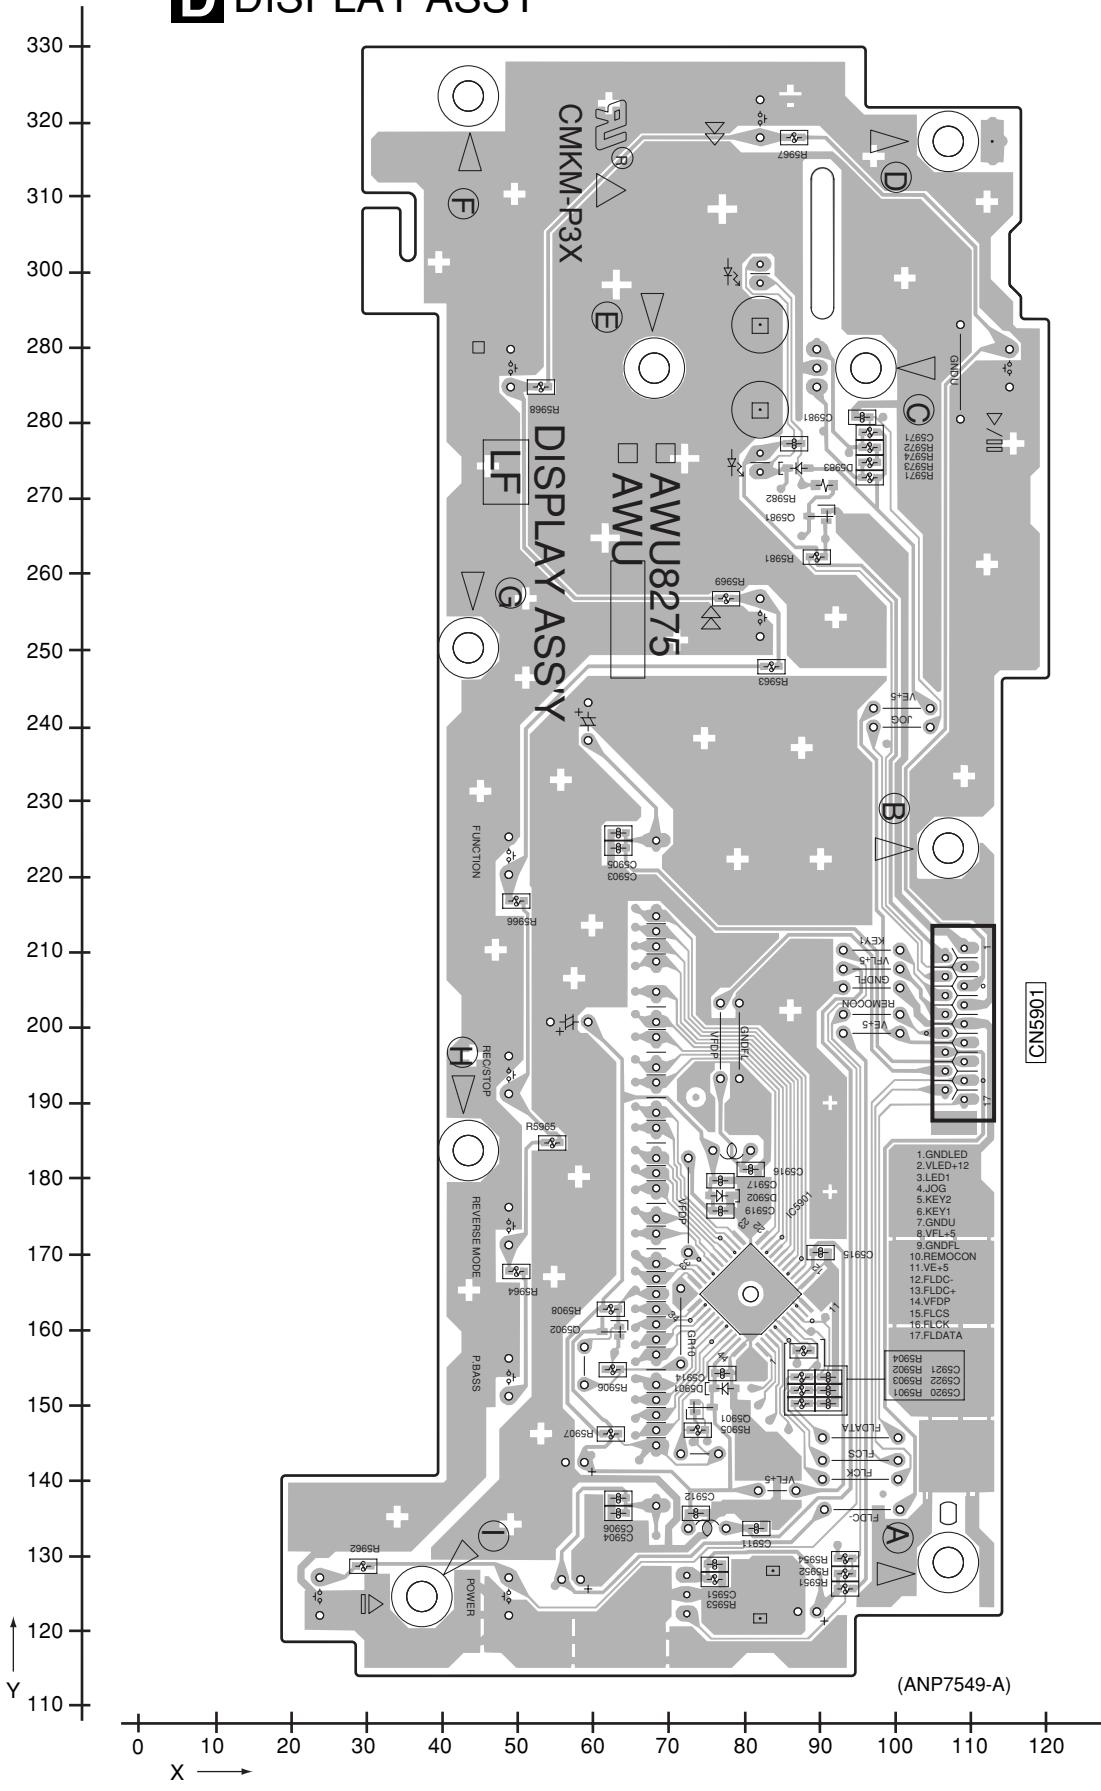

D

D

SIDE A

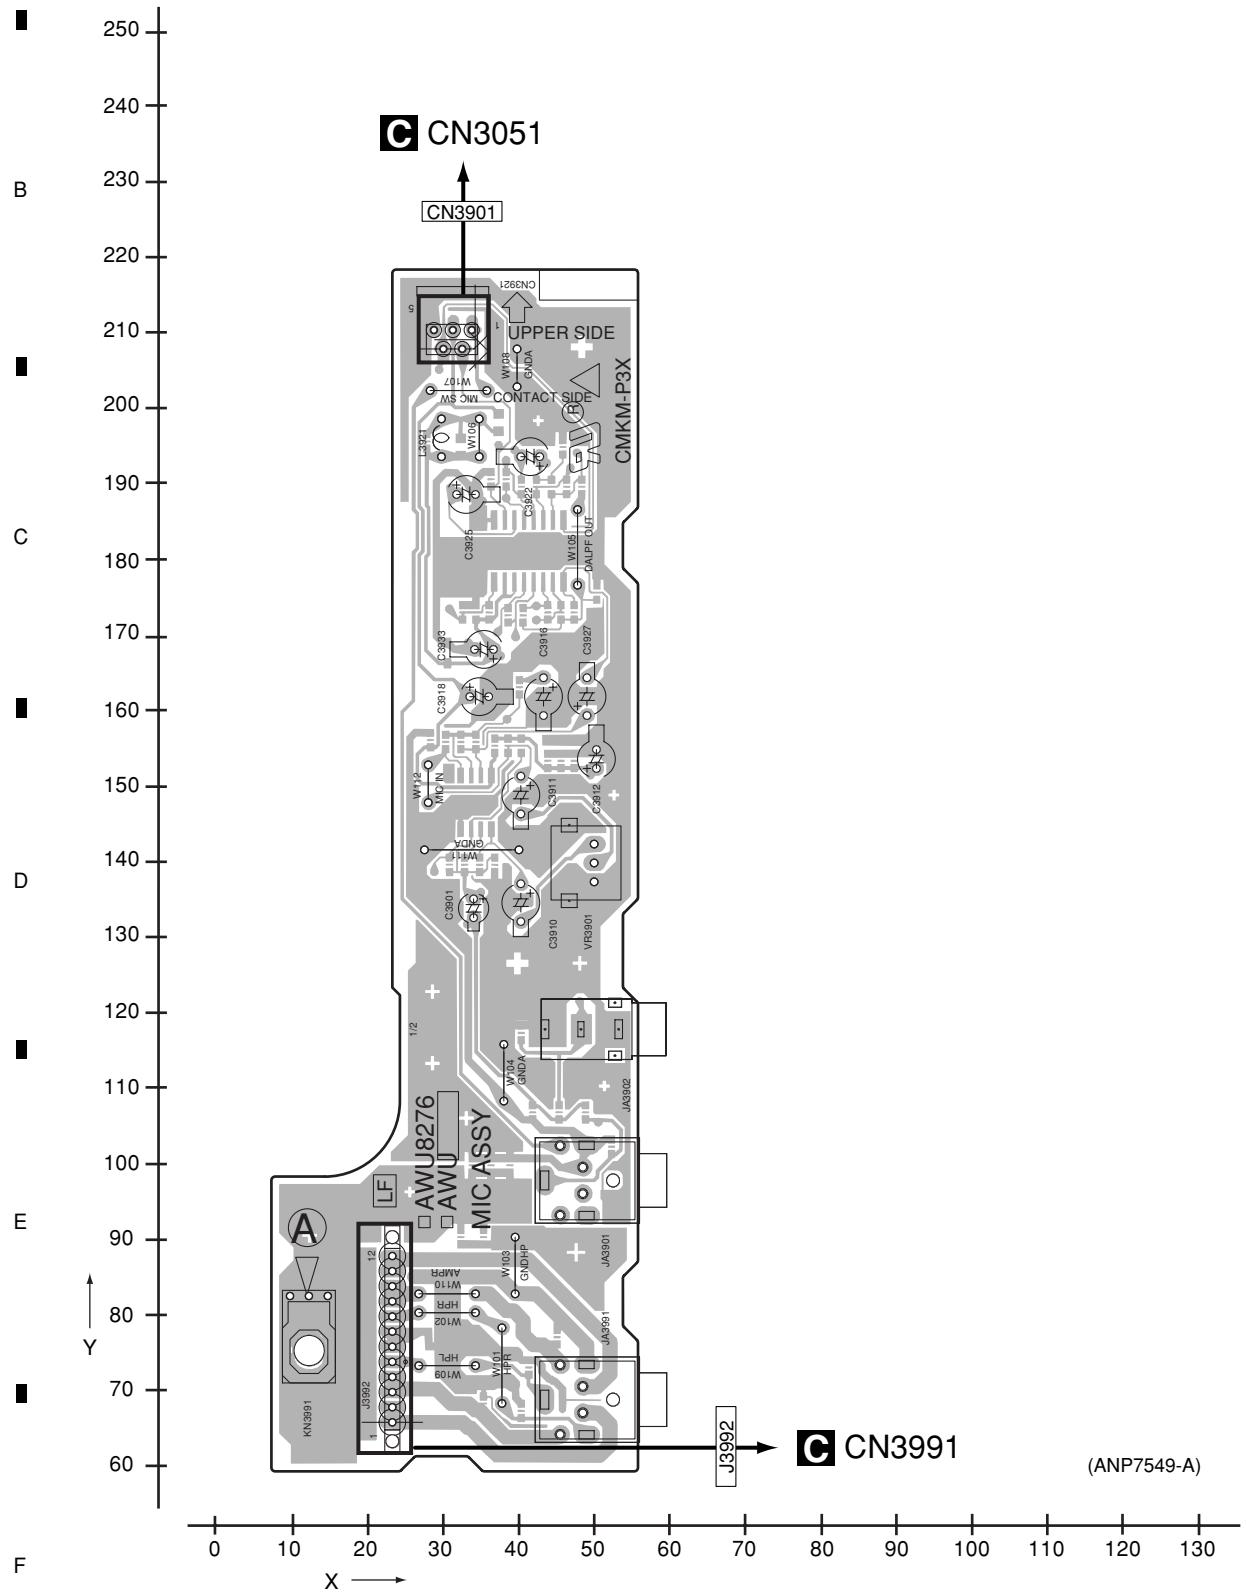


E

E

SIDE B

SIDE B

E MIC ASSY

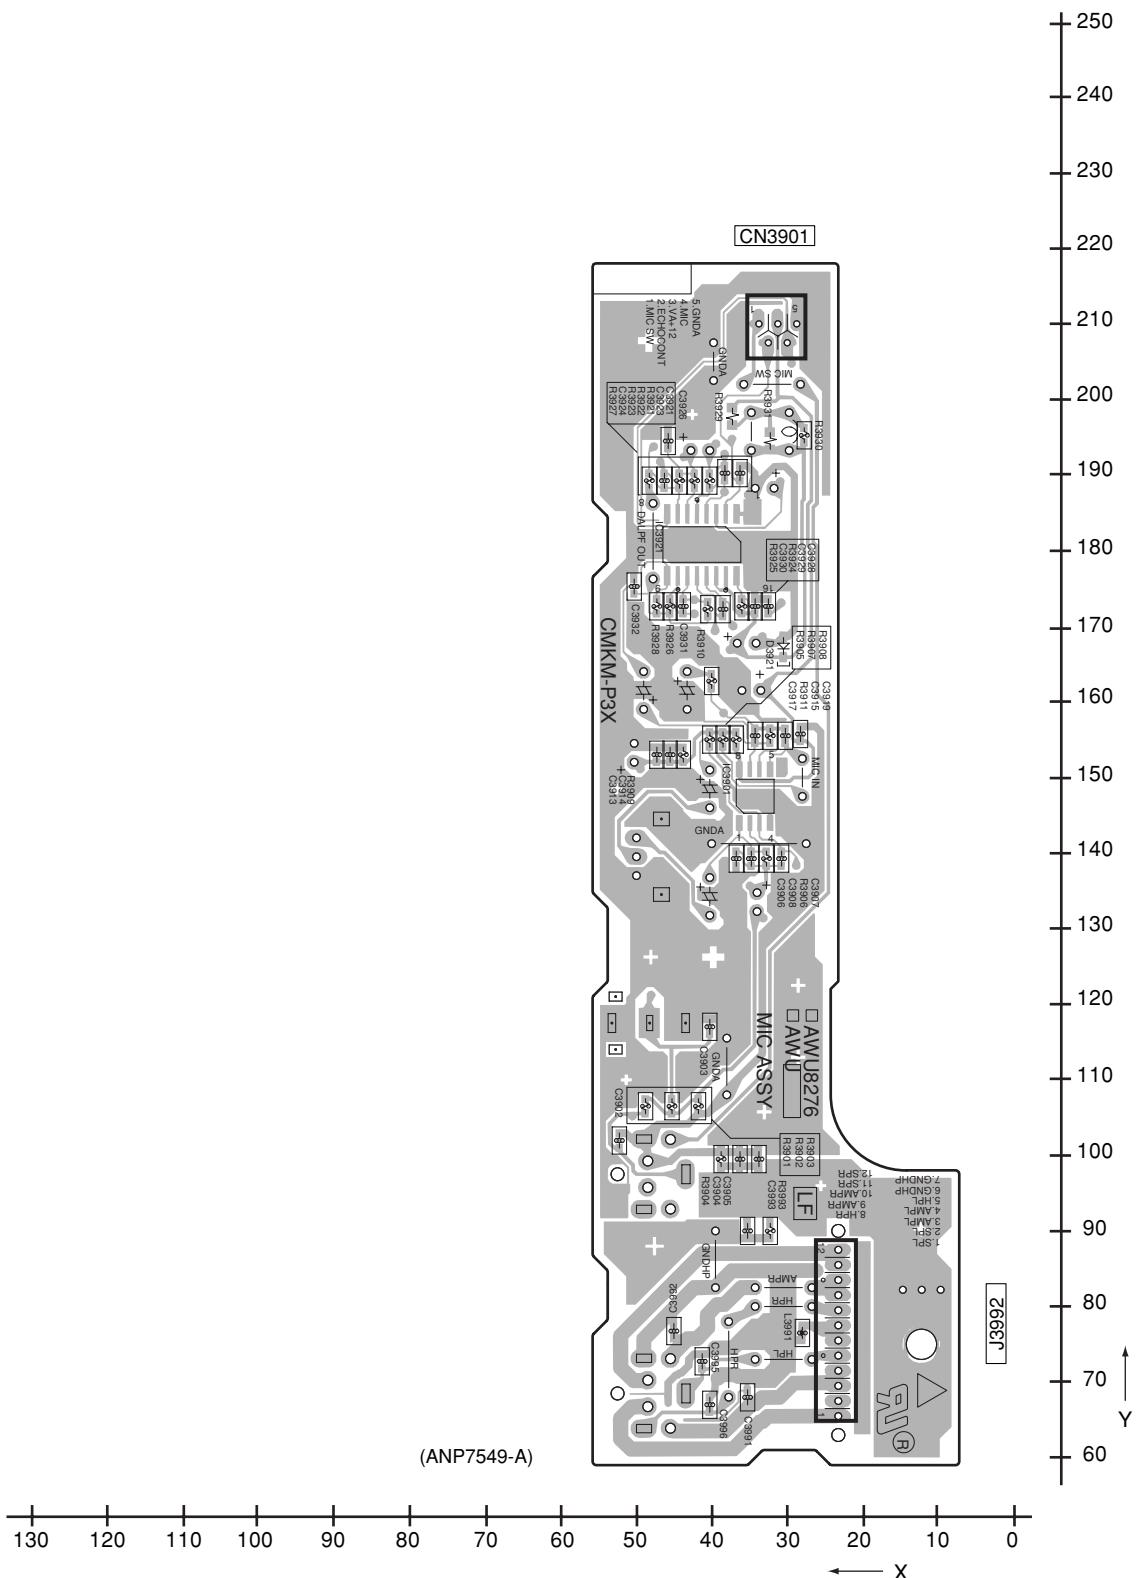

(ANP7549-A)

E

E

5. PCB PARTS LIST

- A NOTES:**
- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
 - The \triangle mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω	56×10^1	561	RD1/4PU[5 6 1]J
47k Ω	47×10^3	473	RD1/4PU[4 7 3]J
0.5 Ω	R50		RN2H[R 5 0]K
1 Ω	IRO		RS1P[I R 0]K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω	562×10^1	5621	RN1/4PC[5 6 2 1]F
----------------	-------------------	------	-------------------

- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

Mark No.	Description	Part No.	Mark No.	Description	Part No.
LIST OF ASSEMBLIES					
NSP	1..05 LOADER ASSY 2..LOAB ASSY	VWT1219 VWG2346	NSP	1..SUB ASSY 2..DISPLAY ASSY 2..MIC ASSY	AWM8014 AWU8275 AWU8276
	1..DVDM ASSY	AWM7966		1..FM/AM TUNER UNIT	AXX7173
C	1..MAINASSY (DFLXJ, DDXJ/RD) 1..MAINASSY (DDXJ/RB) 1..MAINASSY (MTXJ)	AWM8013 AWM8016 AWM8015			

■ CONTRAST OF PCB ASSEMBLIES

C MAIN ASSY

AWM8013, AWM8016 and AWM8015 are constructed the same except for the following :

Mark	Symbol and Description	AWM8013	AWM8016	AWM8015
D	\triangle H3-H6 FUSE CLIP \triangle S101, S102 VOLTAGE SELECTOR \triangle T2 STANDBY TRANSFORMER R5517 R5519 C33-C36 CHIP CAPACITOR	AKR7001 AKX7017 ATT7080 Not used RS1/16S393J XCG3008	AKR7001 AKX7017 ATT7080 RS1/16S473J RS1/16S223J Not used	Not used Not used ATT7078 RS1/16S473J Not used Not used

■ PCB PARTS LIST FOR DFLXJ TYPE UNLESS OTHER WISE NOTED

Mark No.	Description	Part No.	Mark No.	Description	Part No.
A LOAB ASSY					
E	MISCELLANEOUS		\triangle IC 731 (A,29,92) DC/DC CONTROLLER IC \triangle IC 751 (A,32,113) REGULATOR IC (5.0V)	R1224N102H MM1565AF	
S 101		VSK1011	\triangle IC 761 (A,41,119) REGURATOR (ADJ.)	BA3948FP	
CN602	CONNECTOR	S2B-PH-K	Q 304 (A,77,127) TRANSISTOR	2SC4081	
CN601	CONNECTOR	S5B-PH-K	Q 305 (A,84,125) NMOS FET TRANSISTOR UM5K1N		
F	MISCELLANEOUS		Q 307 (A,71,87) CHIP TRANSISTOR	HN1A01F	
IC 101	(A,62,106) 6CH DRIVER IC	BD7995EFS	Q 308 (A,63,87) CHIP TRANSISTOR	HN1A01F	
IC 201	(A,50,44) DVD IC	MT1389FE/C2-L			
IC 202	(B,34,25) IC	K4S641632H-TC75			
IC 203	(B,34,54) FLASH ROM	AYW7082	Q 481 (A,100,7) CHIP TRANSISTOR	DTC114YUA	
IC 204	(A,19,44) EEPROM	S-24CS04AFJ	Q 501 (A,103,56) TRANSISTOR	2SD2114K	
IC 401	(B,92,22) DVD VIDEO AMP IC		Q 502 (A,94,56) TRANSISTOR	2SD2114K	
IC 501	(A,98,71) D/A CONVERTER	MM1623BF	Q 503 (A,105,69) CHIP TRANSISTOR	DTC114YUA	
\triangle IC 711	(A,33,74) REGULATOR (1.8V)	PCM1753DBQ	Q 504 (A,108,69) CHIP TRANSISTOR	DTC114YUA	
		MM1661JH	Q 505 (A,98,53) TRANSISTOR	2SA1576A	
			Q 506 (A,114,69) CHIP TRANSISTOR	DTC114YUA	
			Q 701 (A,24,134) TRANSISTOR	2SA1576A	
			Q 702 (A,27,129) DIGITAL TRANSISTOR	DTC124EUA	
			\triangle Q 732 (B,22,90) FET	RSQ035P03	

Mark No.	Description	Part No.	Mark No.	Description	Part No.
Q 801 (A,50 ,87)	DIGITAL TRANSISTOR	DTC124EUA	R 229 (A,48 ,24)		RS1/16S330J
Q 821 (A,42 ,86)	TRANSISTOR	2SA1576A	R 230 (B,71 ,35)		RS1/16S101J
Q 851 (A,42 ,89)	TRANSISTOR	2SA1576A	R 231 (B,71 ,37)		RS1/16S101J
Q 881 (A,42 ,93)	TRANSISTOR	2SA1576A			A
D 731 (A,29 ,87)	DIODE	1SS355	R 232 (A,34 ,60)		RS1/16S0R0J
D 732 (B,18 ,92)	DIODE	RSX201L-30	R 233 (B,42 ,50)		RS1/16S0R0J
D 733 (A,24 ,94)	DIODE	1SS355	R 234 (A,26 ,42)		RS1/16S330J
D 801 (A,50 ,85)	DIODE	UDZS4R7(B)	R 235 (A,26 ,41)		RS1/16S472J
D 821 (A,46 ,86)	DIODE	1SS355	R 237 (A,23 ,41)		RS1/16S330J
D 851 (A,46 ,89)	DIODE	1SS355			
D 852 (A,42 ,82)	DIODE	1SS355	R 238 (B,60 ,35)		RS1/16S103J
D 861 (A,46 ,82)	DIODE	1SS355	R 241 (A,71 ,36)		RS1/16S330J
D 862 (A,46 ,83)	DIODE	1SS355	R 242 (A,71 ,37)		RS1/16S330J
D 881 (A,46 ,93)	DIODE	1SS355	R 243 (A,69 ,39)		RS1/16S100J
L 731 (A,23 ,109)	POWER INDUCTOR(22U)	DTL1099	R 244 (A,69 ,41)		RS1/16S330J
L 732 (A,22 ,84)	POWER INDUCTOR	ATH7011	R 247 (B,58 ,37)		B
L 751 (A,34 ,99)	CHIP BEADS	VTL1095	R 248 (B,58 ,46)		RS1/16S330J
L 901 (B,44 ,129)	CHIP BEADS	VTL1075	R 249 (B,59 ,40)		RS1/16S103J
X 201 (A,77 ,45)	CRYSTAL RESONATOR (27MHz)	VSS1172	R 251 (A,70 ,47)		RS1/16S104J
CN101 (A,88 ,140)	0.5-24P CONNECTER	VKN1482	R 252 (A,68 ,45)		RS1/16S0R0J
CN102 (A,69 ,142)	12P CONNECTOR	AKN7031			
CN103 (A,103 ,139)	04P CONNECTOR	RKN1045	R 253 (A,70 ,45)		RS1/16S681J
CN104 (A,79 ,9)	CONNECTOR	AKM1291	R 254 (B,65 ,48)		RS1/16S754J
CN901 (A,42 ,142)	25P CONNECTOR	VKN1317	R 255 (B,57 ,52)		RS1/16S104J
CN902 (A,116 ,28)	27P CONNECTOR	VKN1319	R 256 (A,73 ,59)		RS1/16S153J
			R 257 (B,64 ,42)		RS1/16S0R0J
			R 258 (A,23 ,39)		RS1/16S330J
			R 259 (A,26 ,39)		RS1/16S330J
			R 260 (A,24 ,37)		RS1/16S330J
			R 261 (A,27 ,38)		RS1/16S330J
			R 266 (B,51 ,38)		RS1/16S330J
RESISTORS			R 268 (B,68 ,37)		
R 131 (A,61 ,95)		RS1/10S4R7J	R 269 (A,73 ,33)		
R 132 (A,63 ,95)		RS1/10S4R7J	R 270 (A,73 ,35)		
R 133 (A,66 ,95)		RS1/10S4R7J	R 279 (A,63 ,25)	CHIP RESISTOR	C
R 134 (A,65 ,95)		RS1/10S4R7J	R 281 (B,19 ,33)		RS1/16S2201F
R 135 (A,68 ,95)		RS1/10S4R7J			RS1/10S0R0J
R 136 (A,70 ,95)		RS1/10S4R7J			
R 151 (A,59 ,117)		RS1/10S1R0J	R 284 (A,34 ,61)		RS1/16S101J
R 152 (A,59 ,121)		RS1/10S1R8J	R 301 (B,89 ,136)		RS1/10S0R0J
R 153 (A,57 ,117)		RS1/10S1R0J	R 302 (B,86 ,136)		RS1/10S0R0J
R 154 (A,57 ,121)		RS1/10S1R8J	R 303 (B,87 ,133)		RS1/10S0R0J
R 200 (A,25 ,56)		RS1/10S0R0J	R 313 (A,80 ,125)		RS1/16S104J
R 201 (A,49 ,67)		RS1/16S152J			
R 202 (A,48 ,67)		RS1/16S223J	R 314 (A,75 ,125)		RS1/16S103J
R 204 (A,47 ,67)		RS1/16S223J	R 315 (A,80 ,128)		RS1/16S103J
R 205 (A,45 ,67)		RS1/16S184J	R 318 (A,80 ,126)		RS1/16S104J
R 206 (A,46 ,64)		RS1/16S224J	R 321 (A,61 ,87)		RS1/16S4R7J
R 207 (A,65 ,60)		RS1/10S0R0J	R 322 (A,73 ,87)		RS1/16S4R7J
R 208 (B,27 ,71)		RS1/10S0R0J			
R 209 (A,57 ,16)		RS1/10S0R0J	R 325 (A,68 ,87)		RS1/16S4R7J
R 212 (A,40 ,70)		RS1/16S103J	R 326 (A,66 ,87)		RS1/16S4R7J
R 213 (A,41 ,70)		RS1/16S103J	R 401 (A,82 ,30)		RS1/16S103J
R 214 (A,45 ,72)		RS1/16S0R0J	R 402 (B,99 ,14)		RS1/16S103J
R 216 (A,36 ,62)		RS1/16S0R0J	R 403 (B,99 ,13)		RS1/16S0R0J
R 217 (A,31 ,61)		RS1/10S0R0J			
R 218 (A,18 ,37)		RS1/16S103J	R 404 (A,83 ,25)		
R 219 (A,18 ,35)		RS1/16S103J	R 411 (A,69 ,23)		
R 221 (A,25 ,44)		RS1/16S330J	R 412 (A,70 ,23)		
R 223 (A,29 ,35)		RS1/16S330J	R 413 (A,67 ,23)		
R 224 (A,29 ,49)		RS1/16S330J	R 414 (A,71 ,23)		
R 225 (A,40 ,23)	CHIP RESISTOR ARRAY	RAB4C330J			
R 226 (A,43 ,23)		RS1/16S330J	R 415 (A,73 ,23)		
R 227 (A,44 ,23)		RS1/16S330J	R 416 (A,74 ,23)		
			R 421 (B,102 ,15)		
			R 422 (B,99 ,20)		
			R 423 (B,99 ,21)		
			R 424 (B,99 ,23)		
			R 425 (B,99 ,25)		

Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	R 426 (B,99,29)	RS1/16S0R0J	R 909 (A,46,125)		RS1/16S682J
	R 481 (A,103,7)	RS1/16S102J	R 910 (A,48,128)		RS1/16S221J
	R 501 (A,91,64)	RS1/16S0R0J	R 911 (A,50,128)		RS1/16S221J
	R 503 (A,92,73)	RS1/16S101J	R 912 (A,53,128)		RS1/16S0R0J
	R 504 (A,92,74)	RS1/16S101J	R 916 (B,47,128)		RS1/16S223J
	R 505 (A,94,74)	RS1/16S101J	R 917 (B,44,125)		RS1/16S223J
	R 506 (A,101,74)	RS1/16S220J	R 921 (A,106,7)		RS1/16S0R0J
	R 507 (A,104,74)	RS1/16S101J	R 922 (A,106,8)		RS1/16S0R0J
	R 508 (A,104,73)	RS1/16S101J	R 923 (A,105,10)		RS1/16S0R0J
	R 509 (A,104,72)	RS1/16S101J	R 924 (A,105,11)		RS1/16S0R0J
B	R 511 (A,100,60)	RS1/16S223J	R 1001(B,107,6)		RS1/10S0R0J
	R 512 (A,97,60)	RS1/16S223J	R 1002(B,116,16)		RS1/10S0R0J
	R 513 (A,103,59)	RS1/16S471J	R 1003(B,118,16)		RS1/10S0R0J
	R 514 (A,95,59)	RS1/16S471J		CAPACITORS	
	R 515 (A,99,56)	RS1/16S222J	C 101 (A,49,120)		CEVV101M16
	R 516 (A,98,56)	RS1/16S222J	C 102 (A,73,101)		CKSRYB105K10
	R 517 (B,105,68)	RS1/16S102J	C 103 (A,66,116)		CKSRYB105K10
	R 518 (A,101,52)	RS1/16S102J	C 104 (A,61,117)		CKSRYB105K10
	R 519 (A,99,50)	RS1/16S103J	C 121 (B,61,112)		CKSRYB105K10
	R 520 (A,111,69)	RS1/16S102J			
C	R 521 (A,110,53)	RS1/16S0R0J	C 131 (A,52,103)		CKSRYB104K25
	R 522 (A,112,53)	RS1/16S0R0J	C 140 (A,60,137)		CKSRYB105K10
	R 591 (A,83,50)	RS1/16S0R0J	C 144 (A,62,99)		CKSRYB222K50
	R 592 (A,79,55)	RS1/16S100J	C 145 (A,64,98)		CKSRYB222K50
	R 594 (A,80,72)	RS1/16S0R0J	C 146 (A,60,98)		CKSRYB222K50
	R 701 (A,24,137)	RS1/16S473J			
	R 702 (A,27,134)	RS1/16S103J	C 151 (A,68,114)		CKSRYB103K50
	R 732 (A,25,91)	RS1/10S100J	C 152 (A,71,114)		CKSRYB103K50
	R 733 (A,25,93)	RS1/16S220J	C 153 (A,73,111)		CKSRYB103K50
	R 734 (A,30,89)	RS1/16S473J	C 161 (A,58,96)		CKSRYB102K50
D	R 735 (A,29,84)	RS1/16S272J	C 201 (A,21,52) CHIP ELECT.CAPACITOR		CEVV221M4
	R 736 (A,32,93)	RS1/16S1802F			
	R 737 (A,31,83)	RS1/16S2702F	C 202 (A,69,64) CHIP ELECT.CAPACITOR		CEVV221M4
	R 738 (A,29,82)	RS1/16S1502F	C 203 (A,55,78) CHIP ELECT.CAPACITOR		CEVV470M16
	R 739 (A,19,78)	RS1/16S0R0J	C 204 (A,52,63)		CKSRYB104K25
	R 740 (A,29,85)	RS1/16S0R0J	C 205 (B,52,69)		CKSRYB104K25
	R 750 (A,30,99)	RS1/16S0R0J	C 206 (A,47,77) CHIP ELECT.CAPACITOR		CEVV470M16
	R 751 (A,33,119)	RS1/16S0R0J			
	R 761 (A,37,114)	RS1/16S0R0J	C 207 (B,53,55)		CKSRYB104K25
	R 762 (A,45,114)	RS1/16S3902F	C 208 (A,48,70)		CKSRYB222K50
E	R 763 (A,44,112)	RS1/16S334J	C 209 (A,50,70)		CKSRYB104K25
	R 764 (A,44,110)	RS1/16S334J	C 210 (A,47,70)		CKSRYB222K50
	R 801 (A,54,85)	RS1/16S471J	C 211 (A,46,70)		CCSRCH560J50
	R 821 (A,42,83)	RS1/16S103J			
	R 822 (A,39,86)	RS1/16S473J	C 212 (A,44,70)		CCSRCH560J50
	R 823 (A,36,86)	RS1/16S153J	C 213 (A,55,63)		CKSRYB104K25
	R 824 (A,37,86)	RS1/16S103J	C 214 (B,50,54)		CKSRYB104K25
	R 851 (A,39,89)	RS1/16S473J	C 215 (A,55,69) CHIP ELECT.CAPACITOR		CEVV470M16
	R 852 (A,36,89)	RS1/16S103J	C 216 (A,46,62)		CKSRYB104K25
	R 853 (A,37,89)	RS1/16S103J			
F	R 881 (A,39,93)	RS1/16S473J	C 217 (A,42,62)		CKSRYB104K25
	R 882 (A,36,93)	RS1/16S103J	C 219 (A,36,61)		CKSRYB152K50
	R 901 (A,39,128)	RS1/16S0R0J	C 220 (A,31,58)		CKSRYB104K25
	R 902 (B,40,131)	RS1/16S0R0J	C 222 (A,29,53)		CKSRYB104K25
	R 903 (A,43,128)	RS1/16S332J	C 223 (A,29,51)		CKSRYB104K25
	R 904 (A,41,128)	RS1/16S682J			
	R 905 (A,44,128)	RS1/16S332J	C 224 (A,25,45)		CKSRYB104K25
	R 906 (A,42,126)	RS1/16S682J	C 225 (B,34,39)		CKSRYB104K25
	R 907 (A,46,128)	RS1/16S471J	C 226 (B,40,39)		CKSRYB103K50
	R 908 (A,47,128)	RS1/16S332J	C 227 (B,36,40)		CCSRCH221J50

Mark No.	Description	Part No.	Mark No.	Description	Part No.
C 235 (B,55 ,35)		CKSRYB104K25	C 416 (B,84 ,29)		CKSRYB104K25
C 236 (B,56 ,33)		CKSRYB104K25	C 500 (B,95 ,70)		CKSRYB105K10
C 237 (A,65 ,16) CHIP ELECT.CAPACITOR		CEVW221M4	C 501 (A,91 ,60)		CKSRYB104K25
C 239 (B,60 ,34)		CKSRYB104K25	C 503 (A,86 ,65)		CEVW101M16
C 240 (B,59 ,39)		CKSRYB104K25	C 504 (A,93 ,68)		CKSRYB104K25
C 241 (B,61 ,43)		CKSRYB104K25	C 508 (A,104 ,66)		CKSRYB104K25
C 243 (A,61 ,25)		CKSRYB105K10	C 509 (A,106 ,62)		CEVW100M16
C 244 (A,60 ,25)		CKSRYB104K25	C 511 (A,100 ,65)		CEVW100M16
C 245 (B,61 ,31)		CKSRYB104K25	C 512 (A,95 ,65)		CEVW100M16
C 246 (B,63 ,32)		CKSRYB104K25	C 513 (A,100 ,58)		CKSRYB102K50
C 250 (B,64 ,36)		CKSRYB103K50	C 514 (A,97 ,58)		CKSRYB102K50
C 251 (A,73 ,47)		CCSRCH8R0D50	C 701 (A,24 ,131)		CKSQYB105K16
C 252 (A,73 ,44)		CCSRCH100D50	C 711 (A,28 ,73)		CKSRYB105K10
C 253 (B,64 ,44)		CKSRYB104K25	C 712 (A,35 ,78)		CCSRCH471J50
C 254 (B,64 ,48)		CCSRCH391J50	C 713 (A,29 ,66)		CKSQYB225K10
C 255 (B,65 ,53)		CKSRYB474K10	C 732 (A,22 ,113) CHIP CERAMIC C.	DCH1165	
C 256 (B,72 ,52)		CEVW100M16	C 733 (A,20 ,105) CHIP CERAMIC C.	DCH1165	
C 257 (B,60 ,49)		CKSRYB104K25	C 734 (A,21 ,100)	CEVW101M16	
C 258 (A,69 ,49)		CKSRYB473K50	C 735 (A,20 ,95) CHIP CERAMIC C.	DCH1165	
C 259 (A,72 ,50)		CKSRYB473K50	C 736 (A,25 ,89)	CKSRYB104K25	
C 260 (B,60 ,50)		CKSRYB104K25	C 737 (A,28 ,82)	CCSRCH121J50	
C 265 (A,73 ,53)		CCSRCH220J50	C 738 (A,24 ,78) CHIP CERAMIC C.	DCH1165	
C 266 (B,60 ,52)		CKSRYB104K25	C 739 (A,21 ,66)	CEVW101M16	
C 267 (A,70 ,53)		CKSRYB102K50	C 751 (A,32 ,119)	CKSRYB105K10	
C 268 (A,73 ,56)		CKSRYB104K25	C 752 (A,34 ,108)	CCSRCH471J50	
C 269 (A,72 ,56)		CKSRYB333K16	C 753 (A,30 ,108)	CKSQYB225K10	
C 271 (A,70 ,57)		CKSRYB104K25	C 761 (A,41 ,103)	CEVW101M16	
C 272 (A,70 ,58)		CKSRYB104K25	C 762 (A,40 ,112)	CKSRYB105K10	
C 273 (A,69 ,60)		CKSRYB104K25	C 801 (A,50 ,83)	CKSRYB104K25	
C 281 (B,18 ,27) CHIP ELECT.CAPACITOR		CEVW221M4			
C 282 (B,22 ,31)		CKSRYB105K10			
C 283 (B,46 ,33)		CKSRYB104K25			
C 284 (B,33 ,17)		CKSRYB104K25			
C 285 (B,27 ,17)		CKSRYB104K25			
C 286 (B,27 ,33)		CKSRYB104K25			
C 287 (B,31 ,33)		CKSRYB104K25			
C 288 (B,34 ,33)		CKSRYB104K25			
C 289 (B,34 ,40)		CKSRYB105K10			
C 290 (A,20 ,39)		CKSRYB104K25			
C 296 (B,34 ,42)		CKSRYB102K50			
C 309 (A,71 ,77) CHIP ELECT.CAPACITOR		CEVW470M16			
C 310 (A,63 ,77) CHIP ELECT.CAPACITOR		CEVW470M16			
C 343 (A,64 ,64)		CKSRYB105K10			
C 344 (A,60 ,64)		CKSRYB105K10			
C 345 (A,62 ,64)		CKSRYB105K10			
C 346 (A,63 ,64)		CKSRYB105K10			
C 347 (A,59 ,64)		CKSRYB105K10			
C 371 (A,94 ,134)		CKSRYB104K25			
C 372 (B,94 ,134)		CKSRYB104K25			
C 373 (A,99 ,127)		CEVW101M16			
C 401 (B,90 ,9)		CEVW101M16			
C 402 (B,97 ,11)		CKSRYB104K25			
C 404 (A,93 ,23)		CEVW101M16			
C 405 (B,84 ,22)		CKSRYB104K25			
C 406 (B,99 ,16)		CKSRYB104K25			
C 411 (B,84 ,15)		CKSRYB104K25			
C 412 (B,84 ,18)		CKSRYB105K10			
C 413 (B,84 ,21)		CKSRYB105K10			
C 414 (B,84 ,25)		CKSRYB105K10			
C 415 (B,84 ,27)		CKSRYB104K25			

C MAIN ASSY MISCELLANEOUS

▲ IC 11 (A,232 ,72) IC	TA7805S
▲ IC 41 (B,218 ,88) REGULATOR IC	NJM78M05DL1A
▲ IC 42 (A,210 ,103) IC	NJM78L08A
▲ IC 51 (A,200 ,149) REGULATOR IC	TA7901S
▲ IC 61 (A,200 ,108) REGULATOR IC	TA7812S
▲ IC 71 (B,49 ,200) REGULATOR IC	NJM78M09DL1A
IC 3001(B,80 ,168) E-VOL IC	BD3401KS2
IC 3031(B,108 ,184) OP-AMP IC	BA4560RF
▲ IC 3301(A,126 ,119) AUDIO IC	STK433-070
▲ IC 3303(A,230 ,43) PROTECTOR(7A)	AEK7021
IC 5401(B,41 ,38) EEPROM	S-93C46BD01-J8T1
IC 5501(B,66 ,63) SYSTEM CONTROL MICON	PDC129A
Q 11 (B,249 ,100) TRANSISTOR	2SC4081
Q 12 (A,255 ,104) TRANSISTOR	2SD1858X
▲ Q 41 (A,200 ,92) TRANSISTOR	2SB1565
Q 51 (A,305 ,46) TRANSISTOR	2SB1565
Q 52 (B,275 ,13) DIGITAL TRANSISTOR	DTC124EUA
Q 53 (B,278 ,9) CHIP DIGITAL TRANS.	DTA124EUA
▲ Q 61 (A,200 ,134) TRANSISTOR	2SD2012
Q 81 (A,309 ,12) TRANSISTOR	2SB1565
Q 2101(B,78 ,110) TRANSISTOR	2SC4081
Q 2301(A,33 ,120) N-FET	2SK373
Q 2302(A,31 ,127) N-FET	2SK373
Q 2303(B,27 ,116) TRANSISTOR	DTC114TK
Q 2304(B,20 ,117) TRANSISTOR	DTC114TK
Q 2351(B,67 ,116) CHIP DIGITAL TRANS.	DTA124EUA
Q 2352(B,57 ,117) CHIP TRANSISTOR	RN1901

Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	Q 2801(A,11,72) TRANSISTOR Q 2802(A,20,76) TRANSISTOR Q 2805(A,30,101) TRANSISTOR Q 2806(A,30,96) TRANSISTOR Q 2901(B,23,10) CHIP DIGITAL TRANS. Q 2902(B,36,22) CHIP TRANSISTOR Q 2905(B,45,20) TRANSISTOR Q 2906(B,55,20) TRANSISTOR Q 3001(B,67,207) TRANSISTOR Q 3003(B,146,193) CHIP DIGITAL TRANS. Q 3303(B,104,115) TRANSISTOR Q 3304(B,112,115) TRANSISTOR Q 3305(B,123,82) TRANSISTOR	2SC1815 2SC1815 2SC1815 2SC2240 DTA124EUA RN1901 2SB1132 2SB1132 IMX9 DTA124EUA 2SD2114K 2SD2114K 2SC4081	D 2304(A,20,108) DIODE D 2305(A,33,107) DIODE D 2306(A,10,117) DIODE D 2307(A,29,112) DIODE D 2901(A,77,14) DIODE D 2902(A,67,14) DIODE D 3301(A,141,104) DIODE D 3302(A,146,126) DIODE D 3303(A,141,107) DIODE D 3304(A,137,126) DIODE D 3305(A,151,104) DIODE D 3306(A,137,129) DIODE D 3307(A,148,110) DIODE	1SS133 1SS133 1SS133 1SS133 1SS133 1SS133 1SS133 S5688G S5688G	
B	Q 3321(B,147,80) TRANSISTOR Q 3322(B,147,84) TRANSISTOR △ Q 3501(A,129,173) MOS FET △ Q 3502(A,129,157) MOS FET Q 3503(B,133,171) TRANSISTOR Q 3504(B,133,154) TRANSISTOR Q 3541(B,122,61) TRANSISTOR Q 3542(B,102,80) TRANSISTOR Q 3603(B,150,155) CHIP TR (PNP X 2) Q 3604(B,163,157) CHIP TR (PNP X 2)	2SC4081 2SC4081 2SJ304 2SK2232 2SC4081 2SA1576A 2SA1576A 2SC4081 UMB1N UMB1N	D 3308(A,136,133) DIODE D 3309(A,125,80) DIODE D 3321(B,128,74) DIODE D 3323(B,151,86) DIODE D 3501(B,134,182) DIODE D 3502(B,128,162) DIODE D 3503(A,136,175) DIODE D 3504(A,140,153) DIODE D 3505(A,136,172) DIODE D 3506(A,137,161) DIODE	S5688G 1SS133 DAP202K DAN202K DAN202K DAP202K MTZJ36(B) MTZJ36(B) 1SS133 1SS133	
C	Q 3605(B,153,148) TRANSISTOR Q 3606(B,165,142) TRANSISTOR Q 3620(B,144,188) CHIP DIGITAL TRANS. Q 3621(B,161,172) CHIP DIGITAL TRANS. Q 3622(B,154,174) TRANSISTOR Q 3623(B,155,180) CHIP DIGITAL TRANS. Q 3625(B,114,74) CHIP TRANSISTOR Q 3628(B,160,184) DIGITAL TRANSISTOR Q 3629(B,155,186) DIGITAL TRANSISTOR Q 3651(B,207,218) TRANSISTOR	UMH1N UMH1N DTA124EUA DTA124EUA 2SC4081 DTA124EUA HN1C01FU DTC124EUA DTC143EUA DTA124TK	D 3507(A,136,166) DIODE D 3508(A,137,153) DIODE D 3509(A,136,178) DIODE D 3510(A,130,148) DIODE D 3511(A,151,115) DIODE D 3512(A,144,135) DIODE D 3541(B,101,91) DIODE D 3542(B,103,91) DIODE D 3543(B,126,56) DIODE D 3601(A,157,146) DIODE	MTZJ18(B) MTZJ18(B) MTZJ10(B) MTZJ10(B) 30PDA20-FC6 30PDA20-FC6 1SS355 UDZS7R5(B) UDZS20(B) MTZJ7R5(B)	
D	Q 3652(B,194,218) CHIP TRANSISTOR Q 3653(B,198,210) CHIP DIGITAL TRANS. Q 3654(A,202,192) TRANSISTOR Q 5411(B,85,104) DIGITAL TRANSISTOR Q 5502(B,108,39) DIGITAL TRANSISTOR Q 5503(B,279,24) TRANSISTOR △ D 11 (B,231,101) BRIDGE DIODE D 12 (A,245,108) DIODE D 13 (B,248,105) DIODE D 14 (A,270,104) DIODE	RN1901 DTA124EUA 2SD2144S DTA143EUA DTA143EUA 2SC4081 S1NB60 MTZJ20(B) DAN217 1SS133	D 3602(A,169,161) DIODE D 3603(A,148,165) DIODE D 3604(A,179,145) DIODE D 3605(A,179,138) DIODE D 3621(A,145,173) DIODE D 3622(B,165,172) DIODE D 3623(A,151,178) DIODE D 3624(A,145,181) DIODE D 3625(A,270,82) DIODE D 3626(A,267,87) DIODE	MTZJ7R5(B) 1SS133 1SS133 1SS133 1SS133 DAN202K 1SS133 1SS133 1SS133 1SS133	
E	△ D 21 (A,290,35) DIODE △ D 31 (A,280,35) DIODE △ D 41 (A,301,102) DIODE D 43 (A,223,81) DIODE D 44 (A,205,83) DIODE △ D 51 (A,309,60) DIODE △ D 52 (A,306,60) DIODE D 53 (A,309,40) DIODE D 55 (A,309,43) DIODE D 57 (A,205,153) DIODE	D5SBA20(B) D5SBA20(B) D5SBA20(B) MTZJ7R5(C) MTZJ11(B) S5688G S5688G MTZJ27(B) 1SS133 MTZJ15(C)	D 3651(A,206,210) DIODE D 3652(A,207,225) DIODE D 3653(A,206,204) DIODE D 3654(A,207,222) DIODE D 5501(B,124,56) DIODE D 3651(A,157,71) COIL L 2802(A,59,109) RADIAL INDUCTOR L 2811(A,48,112) COIL L 2812(A,38,112) COIL	1SS133 MTZJ3R9(B) 1SS133 1SS133 1SS355 1SS355 RTD1082 LFEA151J RTF1004 RTF1004	
F	D 81 (A,310,26) DIODE D 82 (A,304,22) DIODE D 83 (A,309,19) DIODE D 2101(A,71,112) DIODE D 2301(A,23,111) DIODE D 2302(A,17,113) DIODE D 2303(A,26,106) DIODE	S5688G MTZJ3R6(B) MTZJ2R0(B) 1SS133 1SS133 1SS133 1SS133	L 3301(A,157,71) COIL L 3302(A,144,72) COIL L 5501(A,93,44) AXIAL INDUCTOR △ AN1 (A,228,230) AC INLET 1P H 1 (A,230,208) FUSE CLIP	ATH-059 ATH-059 LAU220J XKP3084 AKR7001	
			H 2 (A,230,187) FUSE CLIP H 3 (A,315,171) FUSE CLIP	AKR7001 AKR7001	

Mark No.	Description	Part No.	Mark No.	Description	Part No.
H 4	(A,315,192) FUSE CLIP	AKR7001	R 2106(B,81,106)		RS1/16S102J
H 5	(A,303,176) FUSE CLIP	AKR7001	R 2107(B,73,116)		RS1/16S102J
H 6	(A,303,155) FUSE CLIP	AKR7001	R 2108(B,72,104)		RS1/16S104J
H 7	(A,301,90) FUSE CLIP	AKR7001	R 2109(B,70,104)		RS1/16S274J
H 8	(A,279,90) FUSE CLIP	AKR7001	R 2301(B,33,116)		RS1/16S105J
JA3001(A,61,230)	JACK	AKB7170			
JA3301(A,107,230)	SPEAKER TERMINAL 4-P	XKE3020	R 2302(B,31,130)		RS1/16S105J
JA8801(A,18,230)	JACK	VKB1168	R 2303(B,50,132)		RS1/16S334J
KN1	(A,316,225) SCREW PLATE	VNE1948	R 2304(B,45,132)		RS1/16S334J
KN3	(A,12,31) WRAPPING TERMINAL	VNF1084	R 2311(B,60,154)		RS1/16S681J
VR2801(A,20,97)	VR	PCP1032	R 2312(B,70,153)		RS1/16S681J
VR2802(A,10,96)	VR	PCP1032			
RY1	(A,267,100) RELAY	ASR7027	R 2321(B,60,150)		RS1/16S474J
△S 101	(A,303,214) VOLTAGE SELECTOR	AKX7017	R 2322(B,72,153)		RS1/16S474J
△S 102	(A,266,214) VOLTAGE SELECTOR	AKX7017	R 2323(B,60,147)		RS1/16S333J
△T 2	(A,227,135) STANDBY TRANSFORMER	ATT7080	R 2324(B,71,149)		RS1/16S333J
X 5501(A,87,56)	CERAMIC RESONATOR (10MHz)	ASS7034	R 2325(B,63,138)		RS1/16S0R0J
△CN1	(A,310,118) CONNECTOR	B2P3S-VH			
△CN2	(A,310,133) CONNECTOR	B4P7S-VH	R 2326(B,69,138)		RS1/16S0R0J
CN21	(A,310,70) CONNECTOR	B10PS-VH	R 2351(B,69,116)		RS1/16S104J
CN1501(A,115,14)	25P CONNECTOR	VKN1256	R 2352(B,64,116)		RS1/16S223J
CN2301(A,13,114)	CONNECTOR	B4B-PH	R 2353(B,62,144)		RS1/16S0R0J
CN2302(A,11,89)	CONNECTOR POST	B2B-PH	R 2354(B,71,143)		RS1/16S0R0J
CN2901(A,80,11)	CONNECTOR	52045-1145			
CN3001(A,8,157)	27P CONNECTOR	VKN1258	R 2401(B,39,154)		RS1/16S224J
CN3051(A,161,13)	CONNECTOR	52045-0545	R 2402(B,50,151)		RS1/16S224J
CN3651(A,211,201)	PLUG(2P)	KM200SA2	R 2403(B,39,150)		RS1/16S474J
CN3991(A,186,10)	12PJUMPER CONNECTOR	52147-1210	R 2404(B,53,155)		RS1/16S474J
CN5651(A,262,11)	CONNECTOR	52045-1745	R 2407(B,31,152)		RS1/16S683J
CN5701(A,16,177)	CONNECTOR	52045-1145			
CN8802(A,39,230)	SOCKET	AKP7045	R 2408(B,47,147)		RS1/16S683J
PCB BINDER		VEF1040	R 2409(B,34,138)		RS1/16S472J
3992PIN JACK(2P)		AKB1233	R 2410(B,41,150)		RS1/16S472J
			R 2801(B,32,81)		RS1/16S103J
			R 2802(B,13,78)		RS1/16S103J
RESISTORS					
R 11	(B,245,100)	RS1/16S222J			
R 12	(B,247,100)	RS1/16S223J	R 2813(B,19,102)		RS1/16S102J
R 14	(B,252,105)	RS1/16S102J	R 2814(B,10,101)		RS1/16S102J
R 15	(B,252,101)	RS1/16S103J	R 2815(A,39,88)		RD1/4PU102J
R 16	(A,252,97)	RD1/4PU390J	R 2816(B,32,92)		RS1/16S472J
			R 2821(B,50,118)		RS1/16S113J
R 41	(A,204,92)	RD1/4PU221J			
R 51	(A,301,53) CARBON FILM RESISTOR	RD1/2PMF332J	R 2822(B,40,118)		RS1/16S113J
R 55	(B,269,12)	RS1/16S823J	R 2823(B,53,115)		RS1/16S102J
R 56	(B,271,12)	RS1/16S224J	R 2824(B,43,115)		RS1/16S102J
R 57		RS1/16S1R0J	R 2901(B,59,10)		RS1/16S473J
			R 2902(B,61,10)		RS1/16S473J
R 58		RS1/16S1R0J			
R 61	(B,203,135)	RS1/16S473J	R 2903(B,57,12)		RS1/16S473J
R 62	(B,202,129)	RS1/16S100J	R 2904(B,55,12)		RS1/16S473J
R 81	(B,304,28)	RS1/16S103J	R 2905(B,49,19)		RS1/16S473J
R 82	(A,304,16)	RD1/4PU1R0J	R 2906(B,59,20)		RS1/16S473J
			R 2907(A,51,24)		RD1/4PU102J
R 84	(A,288,16)	RD1/4PU332J			
R 1501(B,118,183)		RS1/16S562J	R 2908(A,62,24)		RD1/4PU102J
R 1502(B,116,190)		RS1/16S562J	R 2909(A,21,15)		RD1/4PU102J
R 1503(B,115,148)		RS1/16S223J	R 2910		RS1/16S1R0J
R 1504(B,115,186)		RS1/16S223J	R 2911(B,26,10)		RS1/16S473J
			R 2912		RS1/16S1R0J
R 2101(B,82,116)		RS1/16S103J			
R 2102(B,77,116)		RS1/16S124J	R 3001(B,71,212)		RS1/16S224J
R 2103(B,75,116)		RS1/16S392J	R 3002(B,66,212)		RS1/16S224J
R 2104(B,74,104)		RS1/16S271J	R 3003(B,78,209)		RS1/16S182J
R 2105(B,83,110)		RS1/16S333J	R 3004(B,64,208)		RS1/16S182J
			R 3005(B,76,209)		RS1/16S472J

Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	R 3006(B,74 ,209)	RS1/16S472J	R 3345(A,151 ,72)	CARBON FILM RESISTOR	RD1/2PMF101J
	R 3007(B,80 ,209)	RS1/16S473J	R 3346(A,138 ,72)	CARBON FILM RESISTOR	RD1/2PMF101J
	R 3011(B,60 ,177)	RS1/16S475J	R 3347(B,149 ,64)		RS1/16S4R7J
	R 3012(B,64 ,173)	RS1/16S221J	R 3348(B,142 ,66)		RS1/16S4R7J
	R 3013(B,58 ,166)	RS1/16S221J	R 3355(B,107 ,115)		RS1/16S104J
	R 3029(B,94 ,177)	RS1/16S0R0J	R 3356(B,122 ,130)		RS1/16S104J
	R 3030(B,91 ,181)	RS1/16S0R0J	R 3361(B,139 ,106)		RS1/10S2R2J
	R 3031(B,87 ,189)	RS1/16S153J	R 3362(B,136 ,106)		RS1/10S2R2J
	R 3032(B,79 ,192)	RS1/16S184J	R 3363(B,136 ,141)		RS1/10S2R2J
	R 3033(B,82 ,183)	RS1/16S184J	R 3364(B,134 ,141)		RS1/10S2R2J
B	R 3034(B,79 ,188)	RS1/16S153J	R 3503(B,141 ,181)		RS1/16S103J
	R 3035(B,109 ,177)	RS1/16S123J	R 3504(B,133 ,160)		RS1/16S103J
	R 3036(B,100 ,192)	RS1/16S123J	R 3505(B,133 ,176)		RS1/16S104J
	R 3037(B,103 ,187)	RS1/16S123J	R 3506(B,133 ,150)		RS1/16S104J
	R 3038(B,98 ,192)	RS1/16S123J	R 3509(B,133 ,167)		RS1/16S104J
C	R 3039(B,94 ,190)	RS1/16S153J	R 3510(B,135 ,150)		RS1/16S104J
	R 3040(B,96 ,192)	RS1/16S153J	R 3511(A,141 ,169)		RD1/4PU101J
	R 3041(B,97 ,181)	RS1/16S472J	R 3512(A,140 ,156)		RD1/4PU101J
	R 3042(B,95 ,181)	RS1/16S472J	R 3513(B,143 ,168)		RS1/16S153J
	R 3043(B,96 ,173)	RS1/16S472J	R 3514(B,142 ,154)		RS1/16S153J
D	R 3044(B,97 ,169)	RS1/16S472J	R 3541(B,95 ,98)		RS1/16S103J
	R 3051(B,93 ,163)	RS1/16S472J	R 3542(B,102 ,85)		RS1/16S104J
	R 3101(B,57 ,212)	RS1/16S153J	R 3543(B,98 ,96)		RS1/16S223J
	R 3102(B,50 ,212)	RS1/16S153J	R 3544(B,123 ,65)		RS1/16S473J
	R 3103(B,57 ,205)	RS1/16S223J	R 3545(B,124 ,61)		RS1/16S473J
E	R 3104(B,54 ,205)	RS1/16S223J	R 3546(B,126 ,65)		RS1/16S472J
	R 3305(B,112 ,136)	RS1/16S0R0J	R 3547(B,118 ,114)		RS1/16S0R0J
	R 3306(B,120 ,136)	RS1/16S0R0J	R 3610(B,162 ,148)		RS1/16S273J
	R 3307(B,110 ,136)	RS1/16S0R0J	R 3611(B,157 ,153)		RS1/16S102J
	R 3308(B,122 ,136)	RS1/16S0R0J	R 3612(B,148 ,153)		RS1/16S103J
D	R 3309(B,103 ,128)	RS1/16S102J	R 3613(B,157 ,149)		RS1/16S821J
	R 3310(B,124 ,131)	RS1/16S102J	R 3614(B,150 ,160)		RS1/16S103J
	R 3311(B,102 ,108)	RS1/16S222J	R 3615(B,164 ,148)		RS1/16S102J
	R 3312(B,109 ,107)	RS1/16S222J	R 3616(B,169 ,144)		RS1/16S103J
	R 3313(B,118 ,108)	RS1/16S221J	R 3617(B,169 ,140)		RS1/16S103J
E	R 3314(B,110 ,111)	RS1/16S221J	R 3621(A,148 ,173)		RD1/4PU223J
	R 3315(B,104 ,108)	RS1/16S563J	R 3622(A,151 ,170)		RD1/4PU223J
	R 3316(B,108 ,111)	RS1/16S563J	R 3623(A,148 ,176)		RD1/4PU682J
	R 3317(B,116 ,97)	RS1/16S152J	R 3625(A,154 ,165)		RD1/4PU272J
	R 3318(B,117 ,90)	RS1/16S152J	R 3626(A,267 ,77)		RD1/4PU332J
F	R 3319(B,118 ,97)	RS1/16S563J	R 3629(B,163 ,185)		RS1/16S273J
	R 3320(B,121 ,92)	RS1/16S563J	R 3630(B,124 ,73)		RS1/16S103J
	R 3321(A,138 ,97) METAL OXIDE RESISTOR	ACN7122	R 3651(A,206 ,213)		RD1/4PU330J
	R 3322(A,144 ,97) METAL OXIDE RESISTOR	ACN7122	R 3652(B,210 ,217)		RS1/16S222J
	R 3323(B,124 ,88)	RS1/16S1R0J	R 3653(B,191 ,218)		RS1/16S182J
E	R 3334(B,126 ,84)	RS1/16S102J	R 5401(B,36 ,32)		RS1/16S473J
	R 3335(B,130 ,84)	RS1/16S222J	R 5402(B,48 ,40)		RS1/16S473J
	R 3337(A,140 ,77) "RESISTOR (0.1OHM,2W)"	ACN7112	R 5411(B,85 ,113)		RS1/16S561J
	R 3338(A,140 ,82) "RESISTOR (0.1OHM,2W)"	ACN7112	R 5412(B,92 ,101)		RS1/16S473J
	R 3339(B,143 ,80)	RS1/16S182J	R 5501(B,94 ,66)		RS1/16S221J
F	R 3340(B,142 ,86)	RS1/16S182J	R 5502(B,91 ,66)		RS1/16S102J
	R 3341(B,145 ,80)	RS1/16S333J	R 5503(B,98 ,63)		RS1/16S471J
	R 3342(B,144 ,84)	RS1/16S333J	R 5504(B,93 ,62)		RS1/16S104J
	R 3343(B,154 ,69)	RS1/16S273J	R 5506(B,95 ,62)		RS1/16S221J
	R 3344(B,141 ,71)	RS1/16S273J	R 5511(B,80 ,52)		RS1/16S101J

Mark No.**Description****Part No.**

R 5512(B,76,41) RS1/16S221J
 R 5513(B,75,37) RS1/16S221J
 R 5514(B,74,41) RS1/16S221J
 R 5515(B,77,35) RS1/16S103J
 R 5516(B,79,35) RS1/16S103J

R 5519(B,89,37) RS1/16S473J
 R 5521(B,78,38) RS1/16S105J
 R 5522(B,72,37) RS1/16S221J
 R 5525(B,69,41) RS1/16S221J
 R 5526(B,67,37) RS1/16S221J

R 5527(B,66,41) RS1/16S221J
 R 5528(B,65,37) RS1/16S221J
 R 5529(B,64,41) RS1/16S221J
 R 5530(B,62,37) RS1/16S221J
 R 5531(B,52,36) RS1/16S105J

R 5535(B,61,41) RS1/16S221J
 R 5537(B,51,46) RS1/16S472J
 R 5538(B,49,46) RS1/16S822J
 R 5539(B,47,48) RS1/16S221J
 R 5540(B,45,48) RS1/16S221J

R 5541(B,43,48) RS1/16S221J
 R 5542(B,41,48) RS1/16S221J
 R 5543(B,45,56) RS1/16S221J
 R 5544(B,48,36) RS1/16S123J
 R 5545(B,50,40) RS1/16S103J

R 5546(B,52,40) RS1/16S103J
 R 5547(B,45,60) RS1/16S221J
 R 5548(B,43,56) RS1/16S221J
 R 5549(B,43,60) RS1/16S221J
 R 5550(B,40,55) RS1/16S221J

R 5551(B,51,73) RS1/16S221J
 R 5552(B,53,73) RS1/16S221J
 R 5555(B,55,81) RS1/16S221J
 R 5556(B,57,81) RS1/16S221J
 R 5558(B,61,82) RS1/16S221J

R 5559(B,63,82) RS1/16S221J
 R 5563(A,85,75) RD1/4PU221J
 R 5564(B,85,71) RS1/16S221J
 R 5565(B,87,71) RS1/16S221J
 R 5566(B,80,79) RS1/16S221J

R 5567(B,82,85) RS1/16S221J
 R 5568(B,82,79) RS1/16S221J
 R 5572(B,42,11) RS1/16S153J
 R 5580(B,293,24) RS1/16S102J
 R 5581(B,284,25) RS1/16S103J

R 5582(B,282,25) RS1/16S102J
 R 5583(B,213,21) RS1/16S103J
 R 5584(B,114,41) RS1/16S473J
 R 5585(B,112,41) RS1/16S222J
 R 5586(B,121,55) RS1/16S124J

R 5587(B,119,55) RS1/16S224J
 R 5653(B,233,8) RS1/16S100J
 R 5715(B,21,180) RS1/16S224J
 R 8821(B,27,209) CHIP RESISTOR RS1/16S75R0F
 R 8832(B,36,211) CHIP RESISTOR RS1/16S75R0F

R 8842(B,42,211) CHIP RESISTOR RS1/16S75R0F
 R 8853(B,22,209) CHIP RESISTOR RS1/16S75R0F
 R 8863(B,11,210) CHIP RESISTOR RS1/16S75R0F
 R 8873(B,15,209) CHIP RESISTOR RS1/16S75R0F

Mark No.**Description****Part No.****CAPACITORS**

△ C 1 (A,223,186) FILM CAPACITOR ACE7013
 △ C 5 (A,258,127) CKA(1000P/AC250V) ACG7033
 C 11 (A,238,97) ELECT. CAPACITOR CEAT102M25
 C 12 (A,238,70) CEAT100M50
 C 13 (A,225,63) CEAT100M50

C 14 (B,221,73) CKSRYB103K50
 C 15 CKSRYB102K50
 C 21 (A,265,33) ELECT. CAPACITOR CEAT222M63
 C 22 (A,265,53) ELECT. CAPACITOR CEAT222M63
 C 31 (A,245,33) CEAT472M35

C 32 (A,245,53) CEAT472M35
 C 33 (B,280,41) CHIP CAPACITOR XCG3008
 C 34 (B,278,41) CHIP CAPACITOR XCG3008
 C 35 (B,277,49) CHIP CAPACITOR XCG3008
 C 36 (B,277,56) CHIP CAPACITOR XCG3008

C 41 (A,254,73) ELECT. CAPACITOR CEAT682M25
 C 42 (B,224,90) CKSRYB473K50
 C 43 (A,225,85) ELECT. CAPACITOR CEAT470M25
 C 44 (A,208,93) CEAT100M50
 C 47 (A,207,87) ELECT. CAPACITOR CEAT470M25

C 51 (A,299,62) ELECT. CAPACITOR CEAT101M63
 C 53 (A,301,38) ELECT. CAPACITOR CEAT330M50
 C 54 (A,297,48) ELECT. CAPACITOR CEAT220M50
 C 56 (B,204,150) CKSRYB473K50
 C 57 (A,209,154) CEAT100M50

C 61 (A,208,108) CEAT1R0M50
 C 64 (A,208,117) ELECT. CAPACITOR CEAT220M50
 C 65 (A,208,148) CEAT100M50
 C 71 (A,54,197) CEAT1R0M50
 C 73 (B,45,202) CKSRYB104K16

C 74 (A,41,199) ELECT. CAPACITOR CEAT470M25
 C 81 (A,301,28) ELECTR. CAPACITOR CEAT102M10
 C 82 (B,267,9) CKSRYB224K16
 C 1501(B,129,26) CKSRYB104K16
 C 1502(B,111,22) CKSRYB104K16

C 1503(B,142,27) CKSRYB104K16
 C 1505(A,127,28) ELECT. CAPACITOR CEAT102M16
 C 1506(A,109,23) ELECT. CAPACITOR CEAT470M25
 C 1509(B,115,182) CCSRCH271J50
 C 1510(B,114,152) CCSRCH271J50

C 2101(B,79,116) CKSRYB103K50
 C 2102(B,83,106) CKSRYB182K50
 C 2103(A,78,104) ELECT. CAPACITOR CEAT220M50
 C 2105(A,75,111) CEAT100M50
 C 2106(B,68,104) CKSRYB334K10

C 2301(B,31,116) CCSRCH100D50
 C 2302(B,33,130) CCSRCH100D50
 C 2303(B,48,132) CKSRYB821K50
 C 2304(B,45,136) CKSRYB821K50
 C 2305(A,50,137) CEAT100M50

C 2306(A,50,143) CEAT100M50
 C 2321(A,63,148) FILM CAPACITOR CQMBA682J50
 C 2322(A,73,150) FILM CAPACITOR CQMBA682J50
 C 2325(A,64,155) ELECT. CAPACITOR CEAT3R3M50
 C 2326(A,71,156) ELECT. CAPACITOR CEAT3R3M50

C 2401(A,36,154) FILM CAPACITOR CQMBA333J50
 C 2402(A,47,151) FILM CAPACITOR CQMBA333J50
 C 2405(B,37,148) CKSRYB221K50
 C 2406(B,45,149) CKSRYB221K50

A

B

C

D

E

F

Mark No.	Description	Part No.	Mark No.	Description	Part No.
A	C 2407(B,35,149)	CKSRYB221K50	C 3060(A,88,145)		CEAT100M50
	C 2408(B,43,150)	CKSRYB221K50	C 3101(B,55,212)		CKSRYB221K50
	C 2409(A,32,134)	CEAT100M50	C 3102(B,52,212)		CKSRYB221K50
	C 2410(A,38,136)	CEAT100M50	C 3107(A,123,192)		CEAT100M50
	C 2801(A,25,81)	CQMA123J50	C 3108(A,122,186)		CEAT100M50
	C 2802(A,33,77)	CQMA682J50	C 3301(A,111,140)		CEAT2R2M50
B	C 2803(A,29,81)	CQMA472J50	C 3302(A,117,140)		CEAT2R2M50
	C 2804(A,16,78)	CQMA472J50	C 3305(A,103,120)		CEAT2R2M50
	C 2805(A,48,100) ELECT. CAPACITOR	CEAT330M50	C 3306(A,110,120)		CEAT2R2M50
	C 2807(A,40,103) ELECT. CAPACITOR	CEAT470M25	C 3307(B,118,103)		CKSRYB102K50
	C 2808(A,20,91) PPS CAPACITOR	CQHA822J2A	C 3308(B,116,87)		CKSRYB102K50
	C 2809(B,26,100) CHIP CAPACITOR	ACG7058	C 3309(B,122,97)		CCSRCH470J50
C	C 2810(A,39,93) ELECT. CAPACITOR	CEAT330M50	C 3310(B,123,92)		CCSRCH470J50
	C 2811(B,50,114)	CCSRCH221J50	C 3311(B,120,97)		CCSRCH8R0D50
	C 2812(B,40,114)	CCSRCH221J50	C 3312(B,119,92)		CCSRCH8R0D50
	C 2813(A,48,119)	CQMA152J50	C 3313(A,114,101)		CEAT100M50
	C 2814(A,38,119)	CQMA152J50	C 3314(A,113,88)		CEAT100M50
	C 2815(A,25,133)	CEAT1R0M50	C 3315(A,146,93)		CEAT221M50
D	C 2816(A,39,129)	CEAT1R0M50	C 3316(A,140,142)		CEAT221M50
	C 3001(B,69,212)	CKSRYB471K50	C 3317(A,157,112) ELECT. CAPACITOR		CEATR22M50
	C 3002(B,64,212)	CKSRYB471K50	C 3318(A,158,119) ELECT. CAPACITOR		CEATR22M50
	C 3003(A,125,199)	CEAT100M50	C 3320(A,114,82) ELECT. CAPACITOR		CEAT470M25
	C 3004(A,119,198)	CEAT100M50	C 3323(B,153,64)		CKSRYB223K50
	C 3013(A,66,135)	CEAT100M50	C 3324(B,140,66)		CKSRYB223K50
E	C 3014(A,60,135)	CEAT100M50	C 3325(B,151,66)		CKSRYB223K50
	C 3019(A,58,173)	CEAT4R7M50	C 3326(B,147,66)		CKSRYB223K50
	C 3020(B,67,179)	CKSRYB471K50	C 3327(B,113,215) CHIP CAPACITOR		XCG3008
	C 3021(A,64,180) ELECT. CAPACITOR	CEAT470M25	C 3328(B,100,215) CHIP CAPACITOR		XCG3008
	C 3022(B,53,177)	CKSRYB102K50	C 3541(B,92,97)		CKSRYB103K50
	C 3023(A,58,180) ELECT. CAPACITOR	CEAT470M25	C 3601(A,145,154)		CEAT1R0M50
F	C 3024(A,67,184)	CEAT470M25	C 3602(A,164,152)		CEAT1R0M50
	C 3025(B,105,173)	CKSRYB104K16	C 3622(A,158,166) ELECT. CAPACITOR		CEAT2R2M2A
	C 3026(B,112,185)	CKSRYB104K16	C 3623(A,122,74)		CEAT471M6R3
	C 3027(B,75,194)	CKSRYB471K50	C 3624(A,161,179)		CEAT100M50
	C 3031(B,89,189)	CKSRYB563K16	C 3651(A,202,204) ELECT. CAPACITOR		CEAT470M25
	C 3032(B,77,192)	CKSRYB563K16	C 3652(A,202,211) ELECT. CAPACITOR		CEAT470M25
G	C 3033(B,84,183)	CKSRYB563K16	C 3653(A,202,218) ELECT. CAPACITOR		CEAT101M25
	C 3034(B,77,188)	CKSRYB563K16	C 5401(B,46,36)		CKSRYB104K16
	C 3035(A,103,182)	CEAT100M50	C 5402(B,46,40)		CCSRCH470J50
	C 3036(A,84,188)	CEAT100M50	C 5411(A,89,102) ELECT. CAPACITOR		CEAT220M50
	C 3039(B,107,177)	CCSRCH181J50	C 5501(B,78,49)		CKSRYB104K16
	C 3040(B,102,192)	CCSRCH181J50	C 5504(B,80,38)		CKSRYB103K50
H	C 3041(A,88,183)	CEAT100M50	C 5505(B,50,36)		CCSRCH101J50
	C 3042(A,93,185)	CEAT100M50	C 5509(B,77,31)		CKSRYB103K50
	C 3043(B,96,177)	CKSRYB683K16	C 5510(B,79,31)		CKSRYB103K50
	C 3044(B,93,181)	CKSRYB683K16	C 5581(A,288,26)		CEAT1R0M50
	C 3045(A,101,169)	CEAT100M50	C 5582(B,97,67)		CCSRCH101J50
	C 3046(A,99,176)	CEAT100M50	C 5583(A,111,36)		CEAT100M50
I	C 3047(B,94,173)	CKSRYB105K10	C 5585(B,110,41)		CKSRYB103K50
	C 3048(B,93,169)	CKSRYB105K10	C 5586(A,81,46)		CEAT101M10
	C 3049(B,92,173)	CKSRYB104K16	C 5587(B,85,44)		CKSRYB103K50
	C 3050(B,95,169)	CKSRYB104K16	C 5588(B,115,37)		CKSRYB104K16
	C 3051(B,98,165)	CKSRYB222K50	C 5589(A,116,62)		CEAT1R0M50
	C 3052(B,97,162)	CKSRYB222K50	C 5705(B,19,183)		CKSRYB102K50
J	C 3053(B,95,163)	CKSRYB105K10	C 5706(B,21,193)		CKSRYB104K16
	C 3054(A,91,157) ELECT. CAPACITOR	CEATR33M50	C 5708(B,31,194)		CKSRYB102K50
	C 3055(A,60,198)	CEAT100M50	C 5709(B,29,194)		CKSRYB103K50
	C 3056(A,52,189)	CEAT100M50	C 8822(B,27,213)		CCSRCH470J50
	C 3057(A,153,24)	CEAT100M50	C 8831(A,39,205) ELECT. CAPACITOR		CEAT102M6R3
	C 3059(A,84,150)	CEAT100M50	C 8851(A,21,200) ELECT. CAPACITOR		CEAT102M6R3

Mark No. **Description**

C 8852(B,24 ,213)
 C 8861(A,9 ,207)
 C 8862(B,10 ,214)
 C 8871(A,9 ,200)
 C 8872(B,14 ,213)
 C 8881(A,30 ,203) ELECT. CAPACITOR

Part No.

CCSRCH470J50
 CEAT471M6R3
 CCSRCH470J50
 CEAT471M6R3
 CCSRCH470J50
 CEAT102M6R3

Mark No. **Description**

C 5916(B,182 ,81)
 C 5917(B,180 ,77)
 C 5918(A,201 ,55) ELECT. CAPACITOR
 C 5920(B,151 ,91)
 C 5921(B,154 ,91)
 C 5922(B,152 ,91)
 C 5951(B,129 ,76)
 C 5952(A,123 ,90)
 C 5971(B,281 ,96)
 C 5981(B,278 ,87)

CKSRYB223K50
 CKSRYB223K50
 CEJO470M35
 CCSRCH221J50
 CCSRCH221J50
 CCSRCH221J50
 CKSRYB223K50
 CEJO470M6R3
 CKSRYB223K50
 CKSRYB103K50

D **DISPLAY ASSY**
MISCELLANEOUS

IC 5901(B,165 ,81) FL DRIVER IC PT6315
 IC 5902(A,125 ,82) REMOTE RECEIVER UNIT RPM7140-H9
 Q 5981(B,268 ,90) TRANSISTOR 2SC4081
 D 5981(A,274 ,82) LED(BLUE) SLR-343BBT(GHJ)
 D 5982(A,299 ,82) LED(BLUE) SLR-343BBT(GHJ)
 D 5983(B,274 ,87) DIODE 1SS355
 L 5901(A,134 ,78) AXIAL INDUCTOR LAU220J
 L 5902(A,184 ,76) AXIAL INDUCTOR LAU100J
 V 5901(A,137 ,69) FL TUBE AAV7109
 S 5961(A,290 ,115) SWITCH VSG1024
 S 5962(A,128 ,49) SWITCH VSG1024
 S 5963(A,128 ,24) SWITCH VSG1024
 S 5964(A,152 ,49) SWITCH VSG1024
 S 5965(A,172 ,49) SWITCH VSG1024
 S 5966(A,192 ,49) SWITCH VSG1024
 S 5967(A,221 ,49) SWITCH VSG1024
 S 5968(A,318 ,82) SWITCH VSG1024
 S 5969(A,285 ,49) SWITCH VSG1024
 S 5970(A,252 ,82) SWITCH VSG1024
 S 5971(A,288 ,82) ROTARY ENCODER XSX3007
 CN5901(A,211 ,109) CONNECTOR 52045-1745
 PCB BINDER VEF1040
 5901FL SPACER(CR) AEB7091

RESISTORS

R 5901(B,151 ,88) RS1/16S221J
 R 5902(B,154 ,88) RS1/16S221J
 R 5903(B,152 ,88) RS1/16S221J
 R 5904(B,158 ,88) RS1/16S823J
 R 5951(B,126 ,94) RS1/16S470J
 R 5954(B,130 ,94) RS1/16S101J
 R 5962(B,129 ,30) RS1/16S102J
 R 5963(B,248 ,84) RS1/16S182J
 R 5964(B,168 ,50) RS1/16S562J
 R 5965(B,185 ,55) RS1/16S332J
 R 5966(B,217 ,50) RS1/16S272J
 R 5967(B,318 ,87) RS1/16S102J
 R 5968(B,285 ,53) RS1/16S122J
 R 5969(B,257 ,78) RS1/16S152J
 R 5971(B,273 ,97) RS1/16S103J
 R 5972(B,279 ,97) RS1/16S103J
 R 5973(B,275 ,97) RS1/16S123J
 R 5974(B,277 ,97) RS1/16S273J
 R 5981(B,263 ,90) RS1/16S102J
 R 5982(B,272 ,91) RS1/10S221J

CAPACITORS

C 5907(A,243 ,60) ELECT. CAPACITOR CEJO470M35
 C 5911(B,134 ,82) CKSRYB223K50
 C 5912(B,136 ,74) CKSRYB223K50
 C 5913(A,143 ,59) CEJO470M6R3
 C 5915(B,171 ,90) CKSRYB103K50

Part No.**Mark No.** **Description****Part No.**
E **MIC ASSY**
MISCELLANEOUS

IC 3901(B,35 ,147) OP-AMP IC BA4560RF
 IC 3921(B,42 ,181) ECHO IC M65855FP
 D 3921(B,31 ,167) DIODE UDZS5R1(B)
 L 3921(A,30 ,193) AXIAL INDUCTOR LAU100J
 J 3992(A,24 ,65) JUMPER WIRE 12P D20PY1225E
 JA3902(A,55 ,117) JACK RKN1004
 KN3991(A,15 ,82) WRAPPING TERMINAL VNF1084
 VR3901(A,47 ,139) VARIABLE(10K-X1) ACS7042
 CN3921(A,34 ,210) 5P CONNECTOR 52044-0545
 3991JACK AKN7003
 399212P CABLE HOLDER 51048-1200
 3901JACK AKN7003

RS1/16S332J
 RS1/16S332J
 RS1/16S103J
 RS1/16S104J
 RS1/16S473J
 RS1/16S332J
 RS1/16S332J
 RS1/16S152J
 RS1/16S123J
 RS1/16S153J
 RS1/16S472J
 RS1/16S123J
 RS1/16S124J
 RS1/16S103J
 RS1/16S822J
 RS1/16S123J
 RS1/16S123J
 RS1/10S681J
 RS1/16S332J
 RS1/16S332J
 RS1/16S152J
 RS1/16S123J
 RS1/16S153J
 RS1/16S472J
 RS1/16S123J
 RS1/16S124J
 RS1/16S103J
 RS1/16S822J
 RS1/16S123J
 RS1/16S123J
 RS1/10S681J

RESISTORS

R 3901(B,49 ,106) RS1/16S332J
 R 3902(B,46 ,106) RS1/16S332J
 R 3905(B,41 ,155) RS1/16S103J
 R 3906(B,33 ,139) RS1/16S104J
 R 3907(B,39 ,155) RS1/16S473J
 R 3908(B,37 ,155) RS1/16S332J
 R 3909(B,44 ,153) RS1/16S332J
 R 3910(B,40 ,163) RS1/16S152J
 R 3911(B,33 ,155) RS1/16S123J
 R 3921(B,41 ,189) RS1/16S153J
 R 3922(B,43 ,189) RS1/16S472J
 R 3923(B,45 ,189) RS1/16S123J
 R 3924(B,36 ,172) RS1/16S124J
 R 3925(B,41 ,172) RS1/16S103J
 R 3926(B,46 ,172) RS1/16S822J
 R 3927(B,49 ,189) RS1/16S123J
 R 3928(B,48 ,172) RS1/16S123J
 R 3929(B,38 ,198) RS1/10S681J

CAPACITORS

C 3901(A,34 ,135) CEJO2R2M50
 C 3902(B,52 ,102) CCSRCH101J50
 C 3903(B,41 ,117) CCSRCH101J50
 C 3904(B,37 ,99) CKSRYB103K50
 C 3905(B,34 ,99) CKSRYB104K16
 C 3908(B,35 ,139) CCSRCH331J50
 C 3910(A,41 ,137) CEAT2R2M50
 C 3911(A,41 ,151) CEAT2R2M50
 C 3912(A,51 ,152) CEAT470M16
 C 3913(B,48 ,153) CKSRYB104K16
 C 3914(B,46 ,153) CCSRCH101J50
 C 3916(A,44 ,164) CEAT2R2M50
 C 3917(B,35 ,155) CKSRYB122K50

Mark No. **Description****Part No.**

C 3919(B,29,155)	CKSRYB104K16
C 3922(A,43,193) ELECT. CAPACITOR	CEATR47M50
A C 3923(B,39,190)	CKSRYB103K50
C 3924(B,47,189)	CKSRYB103K50
C 3925(A,32,188) ELECT. CAPACITOR	CEAT220M25
C 3926(B,46,194)	CKSRYB473K50
C 3927(A,49,159)	CEAT4R7M50
C 3929(B,35,172)	CKSRYB104K16
C 3930(B,39,172)	CKSRYB103K50
C 3931(B,44,172)	CKSRYB472K50
C 3932(B,51,175)	CKSRYB123K50
C 3933(A,37,168)	CEAT101M16
B C 3993(B,36,90)	CKSRYB104K16
C 3995(B,42,73)	CKSRYB103K50
C 3996(B,41,67)	CKSRYB103K50

C

D

E

F

6. ADJUSTMENT

6.1 DECK SECTION

6.1.1 ADJUSTMENT CONDITION



■ Adjustment Condition

- (1) The ground at the time of adjustment shall be JA3001(GND)
(Refer to Fig. 6-2).
- (2) Clean the heads and demagnetize them using a head eraser.
- (3) Set the measurement level to 0 dBV = 1 Vrms.
- (4) Use the specified tape for adjustment. Use the labeled (A) side of the test tape.

NCT-111 or STD-301 : For Tape Speed adjustment

NCT-112 or STD-331E : For Playback adjustment

STD-630 or STD-631 : Normal blank tape

* As the reference recording level is 250nwb/m for STD-331E,
the recording level will be higher by 4 dB for STD-331B
(160nwb/m).

When adjusting, pay carefull attention to the type of tape used.

- (5) Provide yourself with the following measuring devides:

- AC millivoltmeter
- Low-frequency oscillator
- Attenuator
- Oscilloscope

- (6) Adjust both right and left channels unless other wise specified.
- (7) Warm up the unit for several minutes before adjustment. In particular, be sure to warm up the unit in the REC/PLAY mode for 3 to 5 minutes before starting recording/playback frequency characteristics adjustment.
- (8) Always follow the indicated adjustment order.
Otherwise, a complete adjustment may not be achieved.

■ List of Adjustments

● Playback Section

- (1) Tape Speed Confirmation
- (2) Head Azimuth Adjustment

● Recording Section

- (1) Recording Bias Adjustment

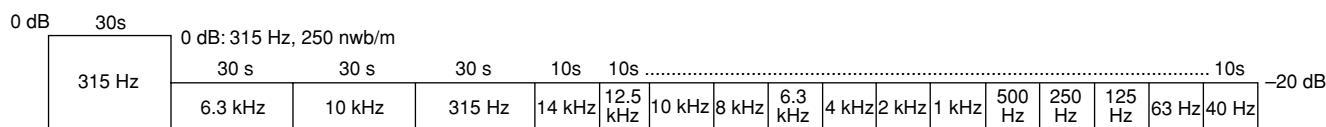


Fig. 6-1 Test Tape NCT-112 (STD-331E)

6.1.2 PLAYBACK and RECORDING SECTION

■ Playback Section

A (1) Tape Speed Confirmation

No.	Mode	Input Signal/Test Tape	Adjustment Points	Measurement Points	Adjustment Value	Remarks
1	PLAY	NCT-111 (3kHz) or STD-301 (3kHz)	ADJ. VR on CASSETTE MECHA (Refer to Fig. 6-3)	LINE OUT R (JA3001) (MAIN ASSY)	3000 Hz ± 10 Hz	FWD adjustment REV Confirmation (3000 Hz ± 40 Hz)

(2) Head Azimuth Adjustment

- This unit is equipped with auto tape selector.
- Do not switch between forward and reverse operation with the screwdriver inserted.

B

No.	Mode	Input Signal/Test Tape	Adjustment Points	Measurement Points	Adjustment Value	Remarks
1	PLAY	NCT-112 or STD-331E (Playback: 10 kHz, -20 dB)	Head azimuth adjustment Screw (Refer to Fig. 6-3)	LINE OUT L (JA3001) LINE OUT R (JA3001) (MAIN ASSY)	Max. Playback signal level	After adjustment, apply silicon bond to the head azimuth adjustment screw.

■ Recording Section

(1) Recording Bias Adjustment

- After the adjustment, caution should be exercised so as not to become under bias by checking the distortion rate.

C

No.	Mode	Input Signal/Test Tape	Adjustment Points	Measurement Points	Adjustment Value	Remarks
1	REC/ PAUSE	Input a 315Hz signal to the LINE - IN terminal. *	Input signal level	LINE OUT L (JA3001)	-23.7 dBV	
2	REC → PLAY	Load the STD-630 or 631 test tape and record / playback the 315Hz and 10kHz signals. (see the Note below)	L ch R ch	VR2801 VR2802	LINE OUT R (JA3001) (MAIN ASSY)	Repeat adjustment until playback level of the 10kHz signal is within 0dBV ± 0.5 dB from that of the 315Hz signal.


Note: Set the 10kHz input signal level to the same value as the 315Hz input signal level of step 1.

D


E

F

● MAIN ASSY C

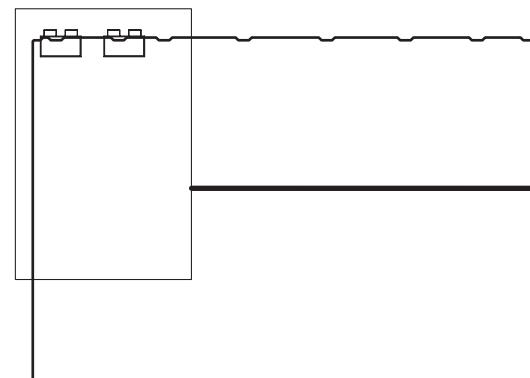

● MECHANISM UNIT

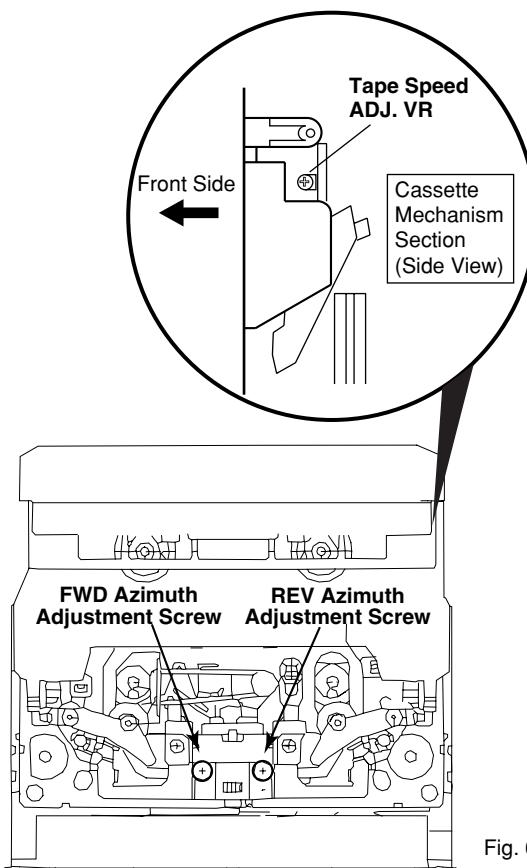

JA3001 (LINE OUT)

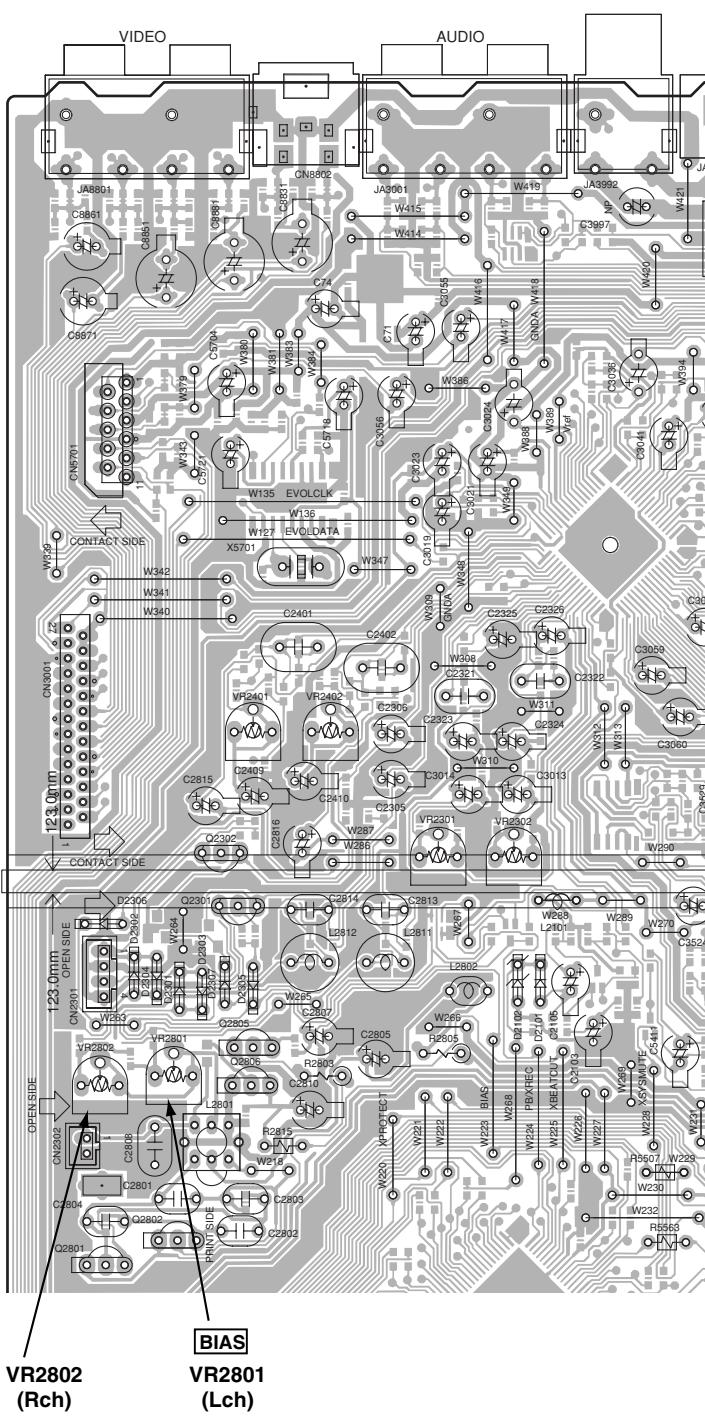


Fig. 6-2 Adjustment and Measurement Points

6.2 DVD SECTION

6.2.1 ADJUSTMENT ITEMS AND LOCATION

■ Adjustment Items

A [Mechanism Part]


- ① Tangential and Radial Height Coarse Adjustment
- ② DVD Error Rate Adjustment

B [Electrical Part]

Electrical adjustments are not required.

■ Adjustment Points (Mechanism Part)

Cautions: After adjustment, adjustment screw locks with the Screw tight.

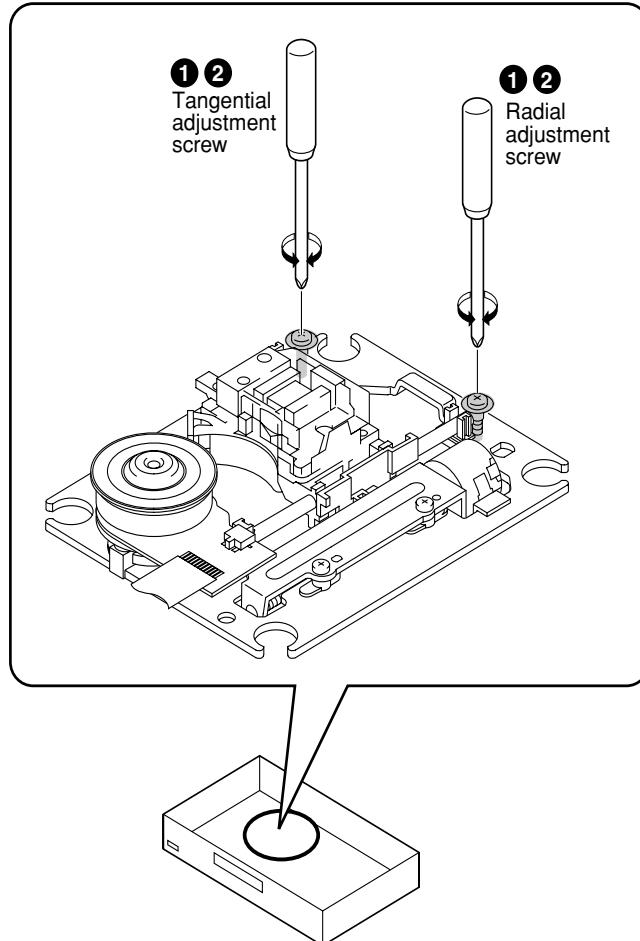

C

D

6.2.2 JIG AND MEASURING INSTRUMENTS

+ Screwdriver (large)	+ Screwdriver (medium)	TV monitor	Test mode remote control unit (GGF1381)
+ Precise screwdriver	DVD test disc (GGV1025)	Soldering iron	Screw tight (GYL1001)

6.2.3 NECESSARY ADJUSTMENT POINTS

When

■ Exchange Parts of Mechanism

Exchange the 05SD Pickup Assy



Mechanical point

①, ②

* After adjustment, screw locks with the Screw tight.

Electric point

Exchange the Traverse Mechanism Assy-S



Mechanical point

Electric point

Exchange the Spindle Motor



Mechanical point

②

* After adjustment, screw locks with the Screw tight.

Electric point

■ Exchange PCB Assy

Exchange PC Board
LOAB and DVDM ASSYS



Mechanical point

Electric point

A

B

C

D


E

F

6.2.4 TEST MODE

A


POWER ON

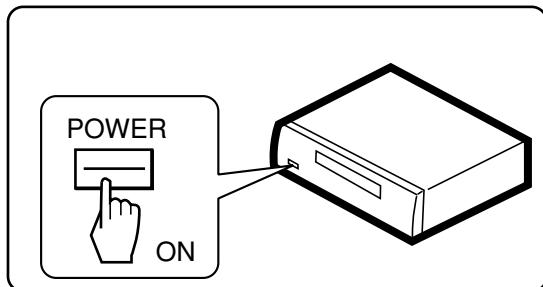

B


DISC SET

<TRAY OPEN>

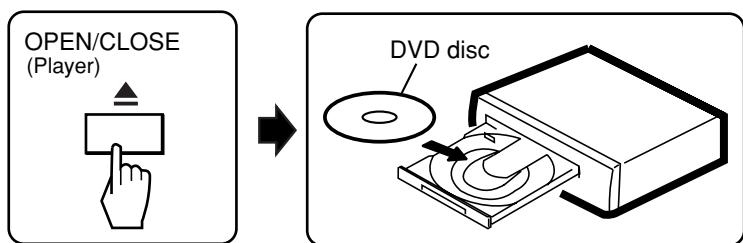


C

<TRAY CLOSE>

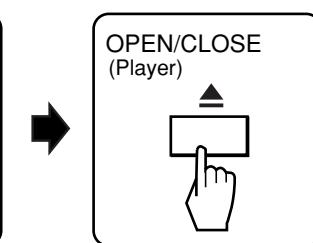


TEST MODE: PLAY



<PLAY>

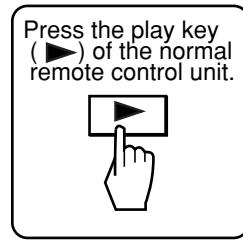

D

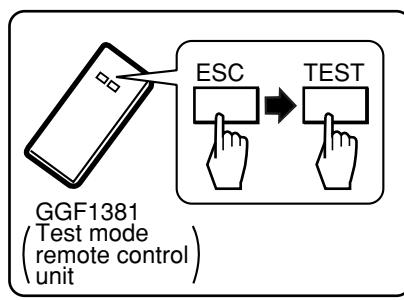CHECK
DVD, CD

An address is displayed

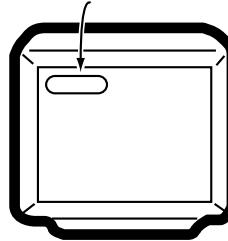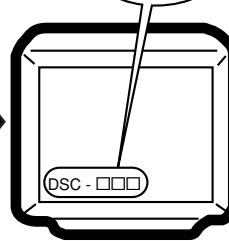


Notes:


- After going into test mode, if you play back the disc, "DISC-NON" is displayed.
- The video signal and the audio signal are outputted during the test mode.
- The SKIP key and the SCAN key are effective during the test mode.

E

TEST MODE: OFF

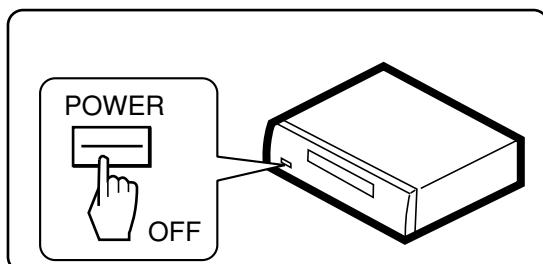

F

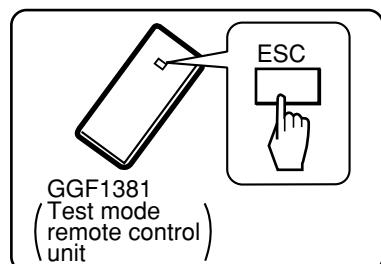

6.2.5 MECHANISM ADJUSTMENT



① Tangential and Radial Height Coarse Adjustment


START

- Remove the 05SD Pickup Assy from the Traverse Mechanism Assy-S.
- Remove the joint and the joint spring of the 05SD Pickup Assy.


Note:

Before removing the flexible cable for the pickup, soldering of the pickup circuit is necessary.


For details, see "7.1.10 DISASSEMBLY".

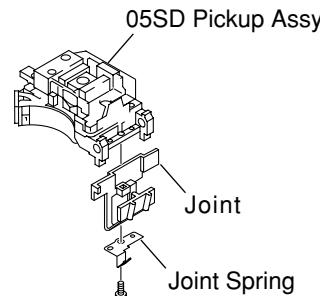

- Pass through the guide shaft to a new 05SD Pickup Assy.
- Attach it to the Traverse Mechanism Assy-S.

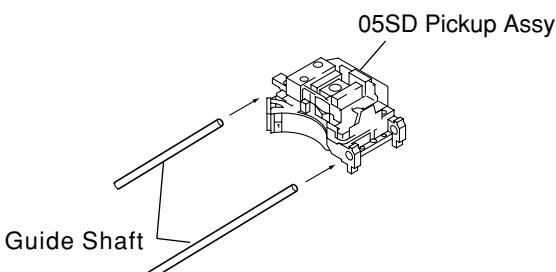

- Put the joint between the Tangential (or Radial) adjustment screw and the mechanism base and turn each screw to adjust the height.
(Refer to "6.2.1 ADJUSTMENT ITEMS AND LOCATION".)

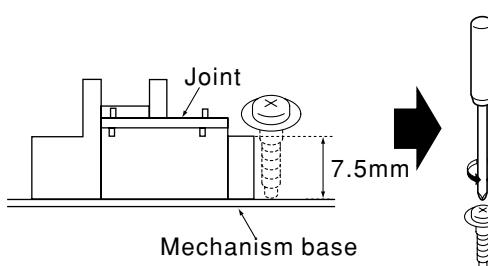

- Attach the Traverse Mechanism Assy-S to the 05 LOADER Assy.
- Turn it over and attach the joint and the joint spring.
- Arrange the flexible cables.
(Refer to "7.1.10 DISASSEMBLY".)

A

B

C

D

E

F



2 DVD Error Rate Adjustment

Notes:

- Use disc: GGV1025

START

- Play the DVD test disc at inner track
- Display ERROR RATE on the monitor

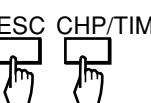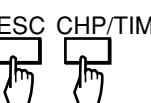



Traverse Mechanism Assy-S
Adjust the radial adjustment screw so that
ERROR RATE becomes around "5E-4". ● A

ERROR RATE : "5E-4"

- Play the DVD test disc at inner track
(around #30000)

Traverse Mechanism Assy-S
Fasten the radial adjustment screw so that
ERROR RATE becomes around "1E-3". ● B

ERROR RATE : "1E-3"

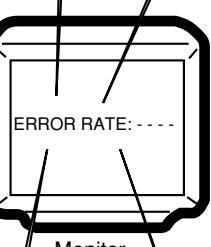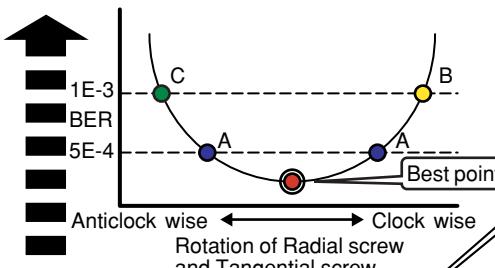

Monitor

- Turn the POWER OFF in case of NG once, and perform the adjustment once again.

If error rate is OK,
locks a root of tangential and radial
adjustment screws with the Screw tight.
Screw tight: GYL1001



CHECK

In this check, the error rate
that is less than "5E-5" is
better.

NG

OK

- Unfasten the radial adjustment screw by 90 degrees step till ERROR RATE becomes around "1E-3" again. ● C
- Record the number of rotation (N1). (memorizing how much the screw was rotated.)
- Fasten the radial adjustment screw till the number of rotation becomes half of N1. ● Best Radial point



Service mode end

- Play the DVD test disc at outer track
(around #200000)



Service mode

Traverse Mechanism Assy-S
Fasten the tangential adjustment screw so that
ERROR RATE becomes around "1E-3". ● B

ERROR RATE : "1E-3"

- Disc playback normally.
The measurement of block error rate



Service mode end

- Unfasten the tangential screw by 90 degrees step till ERROR RATE becomes around "1E-3" again. ● C
- Record the number of rotation (N1).
- Fasten the tangential adjustment screw till the number of rotation becomes half of N1. ● Best tangential point

7. GENERAL INFORMATION

7.1 DIAGNOSIS

7.1.1 TEST MODE

A

■ Test Mode Functional Specification

① Test mode entry

- In the power ON state, press the [ESC] (A8-5F) key and [TEST] (A8-5E) key in order of the Test mode remote control unit.
- OSD displays test mode.

② LD ON

Enter the test mode.

DVD : Press the [TEST] (A8-5E) and [1] (A8-01) keys in order, and turn on the laser diode (650n).

B

CD : Press the [TEST] (A8-5E) and [4] (A8-04) keys in order, and turn on the laser diode (780n).

③ Release the Test mode

- Turn off the power.
- Press the [ESC] (A8-5F) key of the remote control unit and reset it.

C


D

E

F

7.1.2 DISPLAY SPECIFICATION OF THE TEST MODE

A

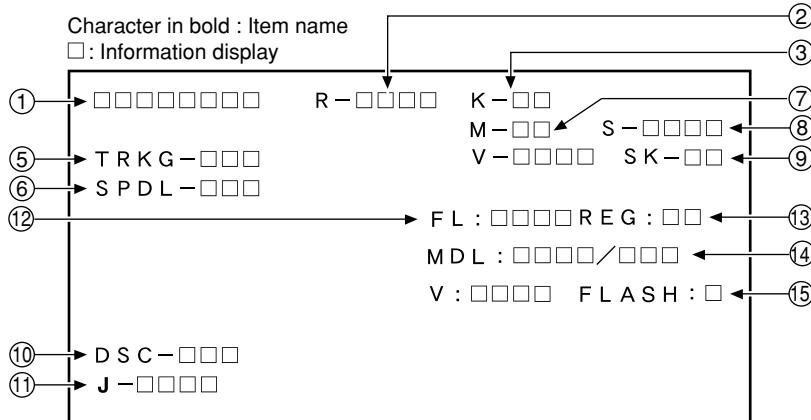

B

① Address indication

The address being traced is displayed in number.
(as for the DVD, indication of decimal number is possible.)
DVD : ID indication (hexadecimal number, 8 digits)

C CD : ID indication [* * * * * * *]

② Code indication of remote control unit [R - * * * *]

In case of double code, display a 2nd code.

③ Main unit keycode indication [K - * *]

⑤ Tracking status [TRKG - * * *]

Tracking on : [ON]
Tracking off : [OFF]

D ⑥ Spindle status [SPDL - * * *]

CLV : [CLV]
Off : [OFF]

⑦ Mechanism (loading) position value [M - * *]

Unknown : [01] or [41]
Open state : [04]
Close state : [08]
During opening : [12]
During closing : [22]

E ⑧ Slider position [S - * * * *]

In Side Switch ON : [01]
In Side Switch OFF : [00]

⑨ Output video system [V - * * * *]

NTSC system : [NTSC]
PAL system : [PAL]
Automatic setting : [AUTO]

Scart terminal output [SK - * *]

(Display only the WY model which can do the output setting of scart terminal.)

F VIDEO : [00]
S-VIDEO : [01]
RGB : [02]

⑩ Disc sensing [DSC - * * *]

The type of discs loaded is displayed.
[DVD], [CD]

⑪ Jitter value [J - * * * *]

Note: Don't use it.

⑫ Version of the FL controller [FL: * * * *]

Note: Don't use it.

⑬ Region setting of the player [REG: *]

Setting value : [1] to [6]

⑭ Destination setting of the FL controller [MDL: * * * * / * * *]

Four characters in the front represent code 01.
Three characters in the back represent the destination code.
J: /J, K: /KU, /KC, /KU/KC, R: /RL/RD, RAM : /RAM,
LB: /LB, WY: /WY

⑮ Version of the flash ROM [V: * *. * *]

Flash ROM size [FLASH = * *]

7.1.3 FUNCTIONAL SPECIFICATION OF THE SHORTCUT KEY

Only during normal playback, the following shortcut keys can be assigned by pressing a required key after pressing the ESC key of the remote control unit. To quit, press the ESC key

Command Contents	Conditions	Remote Control Key Name	Remote Control Code
Memory clear and region / revision indication		CLEAR (*1)	A8-45
Average value measurement of DVD error rate		5 (*1)	A8-05
CD error rate measurement		5 (*1)	A8-05
Scart terminal output : VIDEO		AUDIO	A3-BE
Scart terminal output : S-VIDEO	WY, models equipped with Scart terminal	SUBTITLE	A3-36
Scart terminal output : RGB		ANGLE	A3-B5
Progressive OFF		R_SKIP	A3-9D
Progressive ON	Only for progressive models	F_SKIP	A3-9C
FL indication of ID number		STEREO (*1)	A8-4A
ZOOM ON (x4)		ZOOM	A3-37
Service mode indication (error rate indication, etc.)		CHP/TIM (*1)	A8-13
Model information indication		CHAP (*1)	A8-40
Title search Input mode IN Title No. input Search execution		SIDE A (*1) Numbers (*1) PLAY (*1)	A8-4D A8-00 to A8-09 A8-17
Region confirmation mode		A.MON (*1) Numbers (*1)	A8-1E A8-01 to A8-08

*1 : Test mode remote control unit

• Service mode indication (ESC + CHP/TIM keys)

ID Address

The error rate is always displayed in exponential notation, e.g., *.* * e - *, for both DVDs and CDs.
EDC/ID/AV 1 error history (ID Address, EDC/ID Error, last eight errors)

• Calculation of the average error rate (ESC + "5" [Test mode remote control unit] keys)

The average of the last eight error rates is calculated and indicated in exponential notation. After the calculation is completed, "OK" or "NG" is displayed. If "NG" is displayed, the disc tray will open (for both DVDs and CDs)
For DVDs: OK with 5.0e-4 or less, for CDs: OK with 7.6e-3 or less

• Indication of model information (ESC + CHAP keys)

The items from 12 to 15 of the TEST MODE Indications are displayed. However, in the indications, S in the standard test mode is changed to CHIP VERSION, and M is changed to RF VERSION. For details, see 7.1.4.

• Region confirmation mode (ESC + A.MON [Test mode remote control unit] + "1"- "8" [Test mode remote control unit] keys)

After you press the AUDIO key while holding the ESC key pressed and then input the region number, if the number is different from that set in the unit, an error message is displayed, and the tray opens.

A

B

C

D

E

F


7.1.4 SPECIFICATION OF THE MODEL INFORMATION DISPLAY

To display model information : Press the ESC key then the CHAP key.

To close the model information display : Press the ESC key.

A

• Display contents

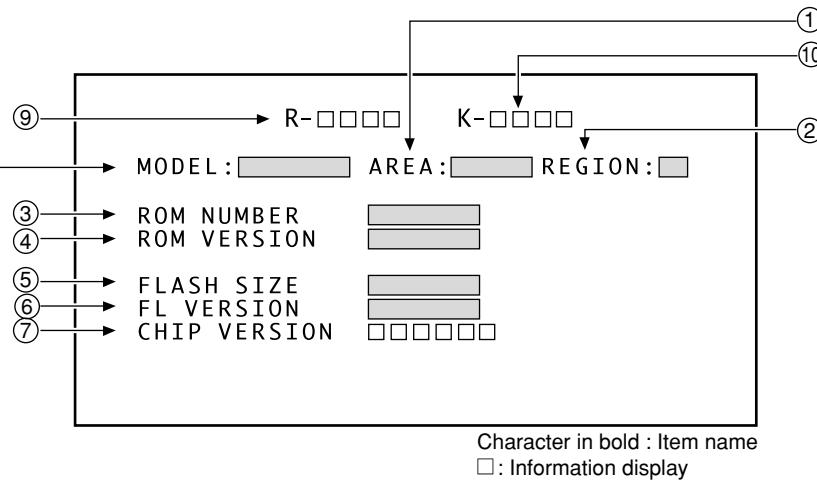

B

① Destination indication

Display it according to model information set from the FL controller.

② Region No.

③ Part number

④ ROM version

⑤ Flash size

⑥ FL controller version

D ⑦ CHIP VERSION

⑨ Remote control code

⑩ Key code of Main unit

E

F

7.1.5 FUNCTIONAL SPECIFICATION OF THE SERVICE MODE

• Display during Service Mode

To enter Service Mode, press the CHP/TIM key while holding the ESC key pressed.
To quit, press the ESC key.

A

Service mode display

- ① ID Address
- ② Error rate (always displayed), in exponential notation

ERROR RATE : * * * * *

(* * * *)

↑
Number of error

- Calculation of the average error rate

For DVDs: OK with 5.0e-4 or less, for CDs: OK with 7.6e-3 or less

B

ex) For DVDs

• Step 1	• Step 2
$\triangle\Delta e - \square$	$\triangle\Delta e - 4$
$\triangle\Delta e - 6$: OK	$3.0e - 4$: OK
$\triangle\Delta e - 5$: OK	$4.0e - 4$: OK
$\triangle\Delta e - 4$: Refer to Step 2	$5.0e - 4$: OK
$\triangle\Delta e - 3$: NG	$6.0e - 4$: NG
$\triangle\Delta e - 2$: NG	$7.0e - 4$: NG

C

- ③ EDC/ID error history (ID Address, EDC/ID errors, last eight errors)

Note:

* Error of AV1 is not supported in this player.

Indication plan contents



Character in bold : Item name
□: Information display

D

E

F

7.1.6 SERVICE TEST MODE

1. Conditions During Service Test Mode

- During Service Test mode, the unit will not be shut down for an emergency even if one of the failures mentioned below occurs.
 - After the unit has been shut down in Normal mode for an emergency upon detection of one of the failures mentioned below, you can turn it on immediately, without waiting for one minute, in Service Test mode.
 - The accumulated power-on time can be checked during Service Test mode.

2. How to enter Service Test mode

- Connect AC power cord with the STEST port (microcomputer terminal IC5501: 43-pin) at High (5 V). (See "Service Test mode connecting point".)
Note: Initial function setting is DVD/CD.
 - Connect AC power cord while holding both the **◀◀** and POWER keys on the main unit pressed. The unit will be turned on, and the following indication will be displayed:


3. How to quit Service Test mode, and conditions for quitting

- To quit Service Test mode, turn the power off or disconnect the AC power cord to turn the power off.
 - When Service Test mode is quit, only data on protection in RAM will be initialized, and data on user settings in RAM will not be initialized.


4. Indications on the FL display when Service Test mode is entered

- Indications on the FL display when Service Test mode is entered differ depending on whether the unit was turned off normally or shut down for emergency protection, immediately before Service Test mode starts, as follows:


[After a normal power-off]

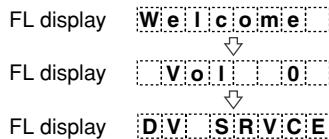


[After a shutdown caused by an AMP-system abnormality]

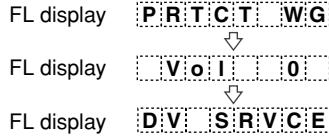


[After a shutdown caused by an AMP-system failure]

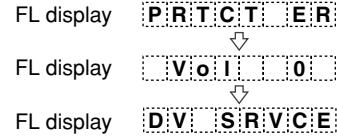

[After a shutdown caused by a DVD-system failure]

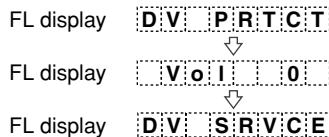

[After a shutdown caused by an EEPROM (IC5401) failure]

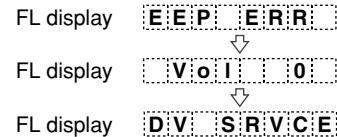

5. Operations during Service Test Mode

- Basically, operations in Service Test mode are the same as in Normal mode. However, to indicate that the unit is in Service Test mode, the following are displayed when the functions are changed:

[Functions]	[FL display]				
DVD/CD	D	V	S	R	V
TUNER	T	X	S	R	V
TAPE	T	C	S	R	V
LINE	L	I	N	S	R

6. Failures

- Depending on the types of errors, one of the following error messages will be displayed when the unit is turned on:

P R T C T W G

A protection circuit was activated:

- The V+10, V+5, V+3R3, or VFDP was short-circuited (See the protection circuit on "3.4 DVD MAIN ASSY (2/2)", or the value at V+10, V+5, or V+3R3 exceeded the standard value because of an abnormality in its power section.
- The XPROTECT line up to the system-control computer (PDC129A) was short-circuited by grounding or was broken.

P R T C T E R

A protection circuit was activated:

- The V+10, V+5, V+3R3, or VFDP was short-circuited (See the protection circuit on "3.4 DVD MAIN ASSY (2/2)", or the value at V+10, V+5, or V+3R3 exceeded the standard value because of an abnormality in its power section.
- The XPROTECT line up to the system-control computer (PDC129A) was short-circuited by grounding or was broken.

D V P R T C T

Abnormality in the DVD section

- The V+6R8, V+5V, or V+3 was short-circuited, or the value at V+6R8, V+5V, or V+3 exceeded the standard value because of an abnormality in its power section.
- The VDET line up to the system-control computer (PDC129A) was short-circuited by grounding or was broken. (See VDET circuit on "3.4 DVD MAIN ASSY (2/4)")

E E P M E R R

- Breakage or short-circuiting of the communication line between the μ -COM (IC5501) and the EEPROM (IC5401) can be suspected.
- A failure in the EEPROM (IC5401) can be suspected.

7. Accumulated power-on time display

- Hold the STOP key on the unit pressed for 8 seconds during Service Test mode. After the version for the system-control computer is displayed, the accumulated power-on time is displayed.

Version of the system-controller

P D C 1 2 9 A

↓ About 3 seconds after

Accumulated power-on time


1 0 : H 3 0 : M

- Power-on time is always counted while the power is on, regardless of unit's functions and operations. However, it is not counted during Standby mode.
- The maximum countable power-on time is 255H59M (255 hours 59 minutes.) The indication will not advance beyond that.
- The accumulated power-on time basically cannot be cleared.


■ Service Test Mode connecting point

C MAIN ASSY

SIDE B

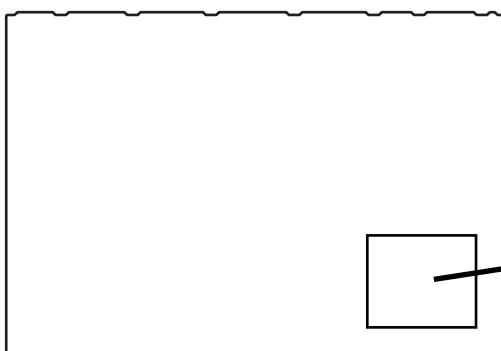

Connecting point

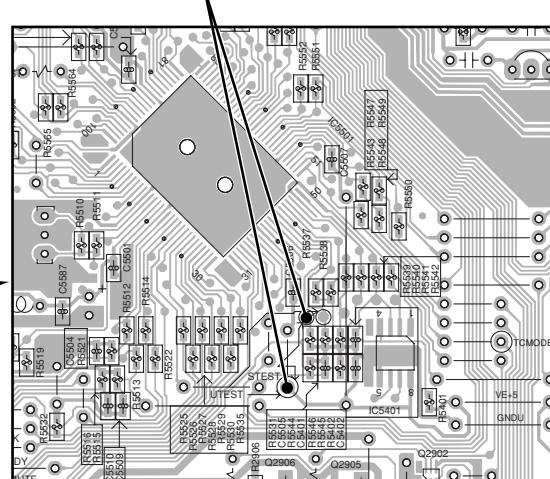

7.1.7 METHOD FOR DIAGNOSING DEGRADATION OF THE LDs ON THE PICKUP ASSY

Case when this diagnosis is required :

When playback of any disc, including a test disc (DVD: GGV1025, CD: STD-905), won't play or doesn't play

■ How to diagnose

- In the case mentioned above, degradation of the laser diodes (LDs) mounted on the 05SD Pickup Assy is suspected. Measure the voltage between the two ends of one of the resistors mentioned below.

- No playback of a DVD :

Measure the voltage between the both ends of R322 or R325 on the DVDM Assy. If the voltage is 0.4 V or higher, the 650-nm LD is degraded.



If the measurements show degradation of an LD, replace the 05SD Pickup Assy.

- No playback of a CD :

Measure the voltage between the both ends of R321 or R326 on the DVDM Assy. If the voltage is 0.4 V or higher, the 780-nm LD is degraded.

C

B DVDM ASSY

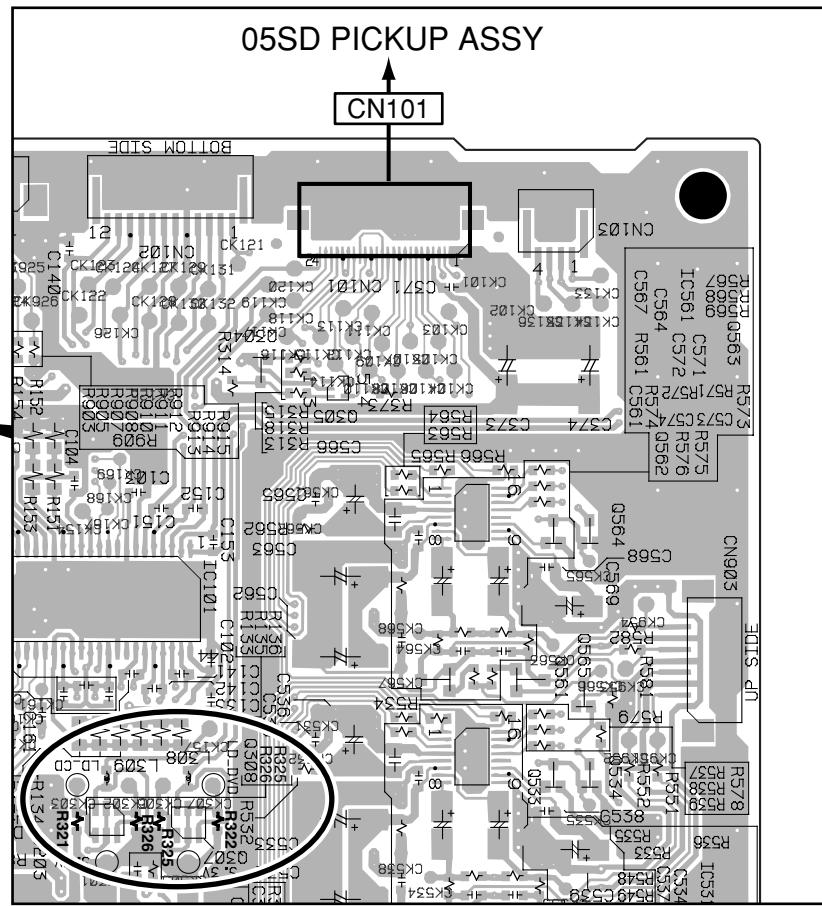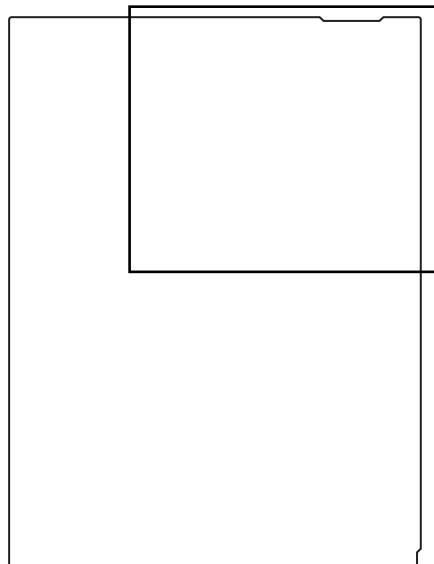

Front side ←

SIDE A

6

7.1.8 DVD TROUBLE SHOOTING

No.	Symptoms	Diagnosis Contents	Possible Defective Points
1	The power is not turned on.	Are wires of output connector (POWER SUPPLY Unit) and CN901 (DVDM Assy) disconnected or damaged ? Check that the following voltage is output : + side of C739 : 3.3V	Connector / cable DVDM Assy 3.3V Regulator IC (IC341)
2	An opening screen is not displayed on the monitor (The FL display lights. The mechanism does not work.)	Are the signals output from IC201-pin 98 (MDATA) and pin 99 (SCLK) on the DVDM Assy ? (in the range of 0-3V) Are the signals input into IC5501-pin 50 (MDATA) and pin 51 (SCLK) on the IFAF Assy ? (in the range of 0-3V) Check that the following voltage are output : IC751-pin 1 on the DVDM Assy : 5V	DVDM Assy DVD IC (IC201) MAIN Assy UCOM (IC5501) DVDM Assy 5V Regulator IC (IC751)
		Is a resonator (X201: 27MHz) on the DVDM Assy oscillating ?	DVDM Assy Crystal resonator (X201) DVD IC (IC201)
		<ul style="list-style-type: none"> • Is a signal input into IC203-pin26 (PCE#) on the DVDM Assy ? (Is a signal "H" for 80 mS and then "L" after the power is turned on ?) → Communication with flash ROM. • Are the signals input into IC202-pin 16 (DWE#), pin 19 (DCS#) and pin 38 (SDCLK) on the DVDM Assy ? (Is a signal fluctuating ?) → Communication with SDRAM 	DVDM Assy DVD IC (IC201) Flash ROM (IC203) SDRAM (IC202)
		Is a signal output from IC203-pin 28 (PRD#) on the DVDM Assy? (Is a signal fluctuating for several hundred mS after the power is turned on ?)	DVDM Assy Flash ROM (IC203)
		Is a signal input into IC5501-pin 67 (DVD ACK) on the CONTROL Assy ? (Is a signal fluctuating ?) → Communication with FL Control IC	DVDM Assy DVD IC (IC201) MAIN Assy UCOM (IC5501)
		Is a signal output from IC5501-pin 30 (XREADY) on the CONTROL Assy ? (Is a signal fluctuating in the range of 0-5V ?)	MAIN Assy UCOM (IC5501)
		Are the signals output from IC5501-pin 49 (SDATA) on the CONTROL Assy ? (in the range of 0-5V)	DVDM Assy DVD IC (IC201) MAIN Assy UCOM (IC5501)
		Are the signals of IC204-pin 5(SDA) and pin 6(SCL) on the DVDM Assy fluctuating for one or two seconds after the power is turned ?	DVDM Assy EEPROM (IC204)
3	An opening screen is not displayed on the monitor (The FL display lights. The mechanism works.)	Check the video signal path between DVD IC (DVDM Assy IC201) and video-out terminal (see the block diagram)	DVDM Assy Video circuit after DVD IC (IC201)

A

B

C

D

E

F

No.	Symptoms	Diagnosis Contents	Possible Defective Points
A ■ 4	A tray cannot be opened. (An opening screen is displayed on the monitor)	Does the voltage of CN104-pin 3 and pin 5 on the DVDM Assy change normally ? Pin 3 (SW2(TRIN)): Tray is fully closed: "L" Pin 5 (SW1(TROUT)): Tray is fully opened: "L"	LOAB Assy Tray SW (S101)
		Is the signal input into IC101-pin 11 (TROPEN) on the DVDM Assy ? At open: 3.3V, At close: 0V	DVDM Assy DVD IC (IC201)
		Are the signals output from IC101-pin 1 and pin 2 (CN103-pin 1 and pin 2) on the DVDM Assy ? Pin 2: Approx. 6V during opening tray approx. 0V during closing tray. Pin 1: Approx. 0V during opening tray approx. 6V during closing tray.	DVDM Assy FTS Driver IC (IC101)
		Are wires of CN104 and CN103 on the DVDM Assy disconnected or damaged ?	Connector / cable
		Does the voltage of CN102-pin 1 on the DVDM Assy change to 0V by pressing the Inside switch.	Inside switch
B ■ 5	Playback impossible (no focusing)	Are the signals output from IC101-pin 3 (FOCS_DRV) and pin 4 (FOCS_RTN) on the DVDM Assy ?	DVDM Assy FTS Driver IC (IC101)
		Does 650-nm LD emit light ? Does a pickup lens move up / down ? Does an actuator spring bend ?	Pickup
		Are plastic parts damaged ? Or is a shaft detached ? Is the turntable detached or tilted ?	Mechanism section (motor)
		Is flexible cable of CN101 on the DVDM Assy disconnected or damaged ?	Flexible cable / connector
		Is signal output from IC201-pin 42 (FOSO) on the DVDM Assy ? (Device control of about 1.4 V is output usually. It is fluctuated by about ± 250 mV with focus up / down.)	DVDM Assy DVD IC (IC201)
C ■ 6	Playback impossible (Spindle does not turn)	Are the signals output from IC101-pin 30 (W), pin 33 (V) and pin 35 (U) on the DVDM Assy ? Is pin 26 (STBY) fixed LOW ? (pin 26 is High at playback: 3V)	DVDM Assy FTS Driver IC (IC101)
		Is there any part detached from the spindle motor ? Or Is there any foreign object lodged in it ?	Mechanism section (Spindle motor)
		Are wires of CN102 on the DVDM Assy disconnected or damaged ?	Flexible cable / connector
		Is signal output from IC201-pin 37 (DMSO) on the DVDM Assy ?	DVDM Assy DVD IC (IC201)
		Does 650-nm LD deteriorate ? If the voltage at each both ends of R322 and R325 on the DVDM Assy is 0.4 V or more, the 650-nm LD is definitely deteriorated.	650-nm LD deteriorated. (When playback of a DVD is impossible)
D ■ 7	Playback impossible (Playback stops)	Does 780-nm LD deteriorate ? If the voltage at each both ends of R321 and R326 on the DVDM Assy is 0.4 V or more, the 780-nm LD is definitely deteriorated.	780-nm LD deteriorated. (When playback of a CD is impossible)
		Is there abnormality in FG waveform ? (IC201-pin 47)	DVDM Assy FG output : FTS Driver IC (IC101)
		Are there scratches or dirt on the disc ?	Disc
		Are there scratches or dirt on the disc ? Is there a problem with the format of the disc ?	Disc
E ■ 8	Picture disturbance during playback (block noise, freeze, other)	Check the video signals. Composite video signal (IC401-pin 25) S video signal (IC401-pin 21, pin 26) RGB video signal (IC401-pin 16, pin 18, pin 20)	DVDM Assy DVD IC (IC201) Video IC (IC401, IC451)
		Check the waveform (SPDIF: CN901-pin 16).	DVDM Assy DVD IC (IC201)
F			

● Symptoms that may occur when any of the following ICs is in failure

IC	Symptoms
EEP ROM (DVDM Assy : IC204)	User's data cannot be stored in memory. The ID number is lost.
Flash ROM (DVDM Assy : IC203)	The power cannot be turned on. Downloading of the firmware cannot be performed.
DVD IC (DVDM Assy : IC201)	Any kind of symptoms (no power, a failure in any of the servo, video and audio systems, etc.) may be generated, because the DVD processing is performed by a single chip.
64M SDRAM (DVDM Assy : IC202)	No power. Block noise is generated during playback.

A

B

C

D

E

F

7.1.9 ID NUMBER AND ID DATA SETTING

Caution:


For the DVD players compatible with DVD-RW, for playback of a DVD-RW disc (CPRM), it is necessary that an individual ID number and ID data are set for each player. If the ID number and ID data be not properly set in the manner described below, future operations cannot be guaranteed. The ID number is written on the yellow label at the rear panel of the player.
If there is no yellow label, before downloading FLASH ROM, take note of the ID number set following the procedures outlined in "ID Number Confirmation Mode" on the next page.

Note: Enter ID numbers while the unit is in Stop mode so that the values set will be immediately written to the flash ROM.

Setting an ID number or ID data is required in the following case:

If NO NUM! or NO DATA is displayed on the FL display immediately after the power to the player is turned on or during Stop mode.

JIGS AND MEASURING INSTRUMENTS

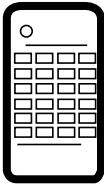

Service Remote Control Unit
[GGF1381]



DVD Data Disc
[GGV1175]

- ⑤ After entering all 9 digits, if you press the SEARCH key, the unit unconditionally sets the input number as the ID number. Then the unit automatically enters Player's Data Input Mode. (The SEARCH key is not accepted after all 9 digits have been entered.)

[Player's ID Number Setting]

ID Number ?

0 0 0 0 0 0 0 1

- ④ → <PLAY> Compare Mode
 ⑤ → <SEARCH> Enter

Input ID Number !



- ⑥ This display appears when the PLAY key is pressed in Step 4. Enter a 9-digit number to compare. The number is also displayed on the FL display.

- ⑦ By pressing the CLEAR key without having input a number, the unit returns to Step ② without doing anything else. Each press of this key after a number has been input deletes one digit.

[Player's ID Number Setting]

ID Number ?

0 0 0 0 0 0 0 1

Compare

* * * * * * * * *

- ⑥ →

Input ID Number !



- ⑧ After entering all 9 digits, if you press the PLAY key, the unit compares the numbers input in Steps ② and ⑥, and only if the numbers match, that number is set as the ID. Then the unit automatically enters ID DATA Input Mode. If the numbers do not match, the disc tray is opened, and the unit exits ID Number Input Mode.

- Note:** If you press the PLAY button before inputting a 9-digit ID number, the unit returns to Step ⑥ without doing anything else.

[Player's ID Number Setting]

ID Number ?

- ③ → <CLEAR> Exit

Input ID Number !



- ④ After entering all 9 digits, if you press the PLAY key, the unit enters Compare mode. Enter the same ID number again. Only if your two input numbers match, the ID number is set. Compare mode helps eliminate mistyping of the ID number.

- Note:** If you press the PLAY button before inputting a 9-digit ID number, the unit returns to Step ② without doing anything else.



[Player's ID Number Setting]

ID Number ?

0 0 0 0 0 0 0 1

Compare


0 0 0 0 0 0 0 1

- ⑧ → <PLAY> Enter

Input ID Number !

■ ID Number Confirmation Mode


- ① To enter ID Number Confirmation Mode after the ID number and the ID data are set, press the ESC key then the STEREO key.
- ② The ID number already set is displayed.
(It is also displayed on the FL display.)
- ③ Enter a 9-digit number for comparison. This is not required when you only wish to check the ID number visually.
(The number is also displayed on the FL display.)
- ④ By pressing the CLEAR key without having input a number, you can exit this mode. Each press of this key after a number has been input deletes one digit.

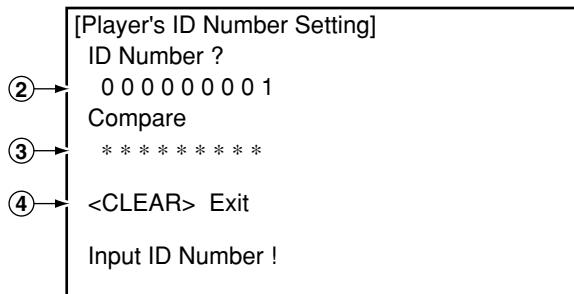

- ⑤ After entering all 9 digits, if you press the PLAY key, the unit compares the number entered in Step ② with the ID number set, and only if the numbers match, the unit automatically exits ID Number Confirmation Mode. If an ID data has not been entered, the unit enters ID DATA Input Mode. If the numbers do not match, the disc tray is opened, and the unit exits ID Number Confirmation Mode.

Note: If you press the PLAY button before inputting a 9-digit ID number, the unit returns to Step ④ without doing anything else.

- ⑥ After entering all 9 digits, if you press the STOP key, the unit compares the number entered in Step ③ with the ID number set, and only if the numbers match, the unit automatically deletes the ID number and exits this mode. If the numbers do not match, the disc tray is opened, and the unit exits this mode.
(The STOP key is not accepted after all 9 digits have been entered.)

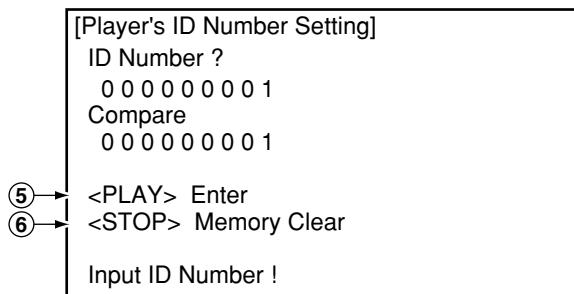

• Indication of an ID number already set

An ID number already set is displayed in the following cases:

- 1) When the ESC key then the CLEAR key are pressed, user settings are cleared, then the ID number set is displayed on the screen. In this case, the ID number is not displayed on the FL display.
- 2) When the unit enters ID Number Confirmation Mode by your pressing the ESC key then the CLEAR key, the ID number set is displayed. In this case, the ID number is also displayed on the FL display.
If you only need to confirm the ID number, you can exit this mode by pressing the CLEAR key or turning off the power.

• Indication when no ID number is set

If no ID number is set, the message "NO NUM!" flashes on the screen and FL display for a few seconds after the power is turned on or during Stop mode.

A

B

C


D

E

F


■ ID DATA Input Mode

- A ① To enter ID DATA Input Mode, with the ID number set, press the ESC key then the STEREO key.
- ② When the STEREO key is pressed, the unit enters ID DATA Input Mode.

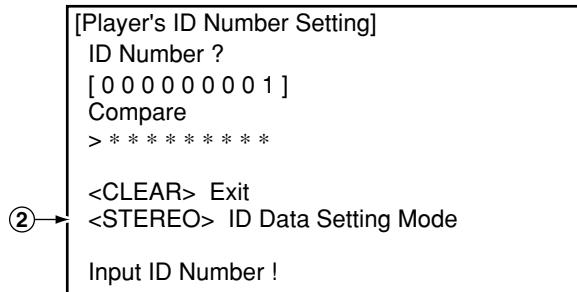


⑤ When writing of the data read from the disc to flash ROM is completed, "Rom Write OK!" is displayed. After seeing this message, you can exit this mode by pressing the CLEAR key.

Note: Whether or not the data have been written to flash ROM can be confirmed by watching for the message "Rom Write OK!" being displayed after the disc is read.

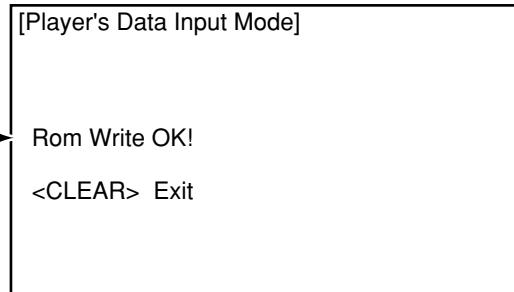


B

- ③ If the DVD DATA DISC is loaded in this mode, the unit automatically starts reading the data.
(If the DVD DATA DISC has already been loaded, the unit does not start reading the data. In this case, open then close the tray.)
- ④ To exit this mode, press the CLEAR key. While data are being read from the DVD DATA DISC, you cannot exit this mode.

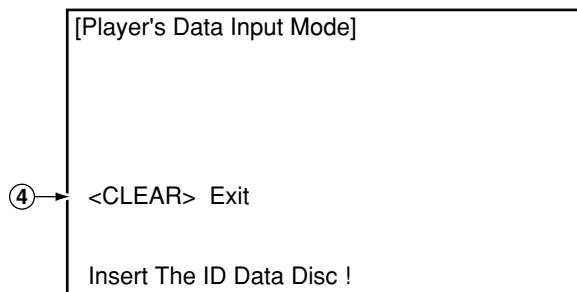

- ⑥ If the data cannot be read from the disc, "Disc Error!" is displayed on the screen, and the disc is ejected.

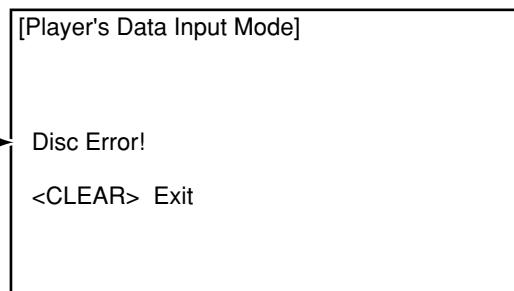

• Indication when the data have not been set
If no ID data are set after the ID number is changed, the message "NO DATA" displays on FL display after the power is turned on or during Stop mode.

C

D

E

F

7.1.10 DISASSEMBLY

Note 1: Do NOT look directly into the pickup lens. The laser beam may cause eye injury.

Note 2: Even if the unit shown in the photos and illustrations in this manual may differ from your product, the procedures described here are common.


Note 3: For performing the diagnosis shown below, the following jigs for service is required:

- Flexible cable for service (GGD1309, GGD1447)

Diagnosis of PCB's


1 Bonnet and Tray panel

- ① Remove 11 screws from Bonnet.

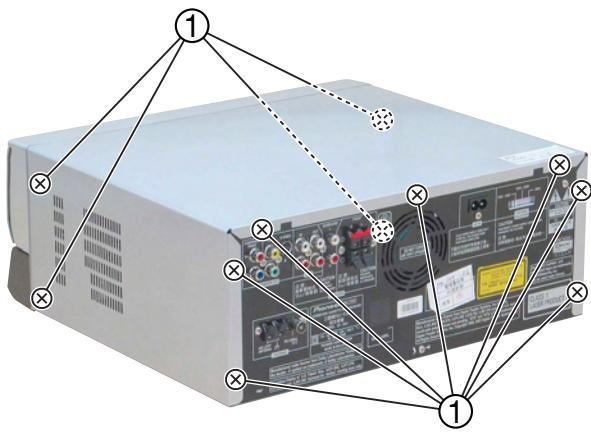

● Rear View

- ② Press the ⌂ STANDBY/ON button to turn on the power.
 ③ Press the ▲ OPEN/CLOSE button to open the Tray.
 ④ Remove the Tray Panel.
 ⑤ Set the Test Disc.

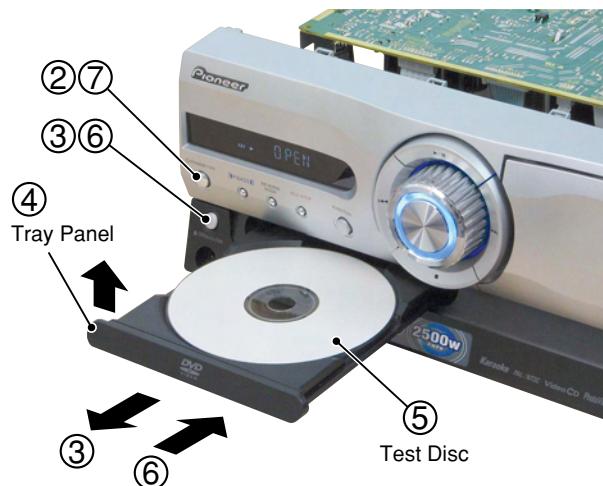

- ⑥ Press the ▲ OPEN/CLOSE button to close the Tray.
 (Test disc is clamped.)


- ⑦ Press the ⌂ STANDBY/ON button to turn off the power.

- ⑧ Pull out the Power cord.

● How to open the Tray when the power cannot be on

Insert a Tweezer(as shown in the photo) into the Slit located at the bottom of the unit and slide the projection of the Drive Cam in the direction of the arrow, as indicated in the photo.

If the Tray pops out a little, fully pull it out by hand.

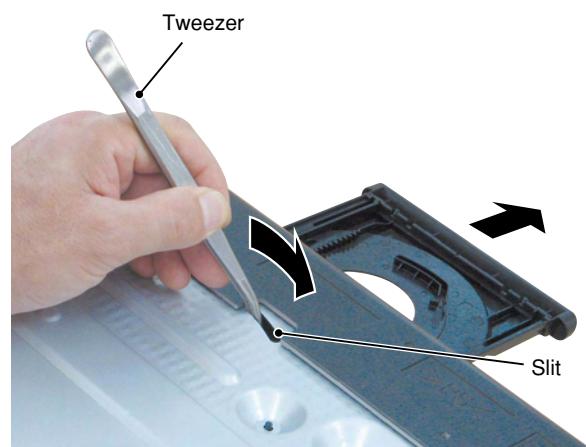


● Bottom View

2 Front Panel and Rear Panel


A

- ① Remove the grounding screw of the MIC Assy.
- ② Disconnect FFC Cables at CN5651, CN3991 and CN3051.

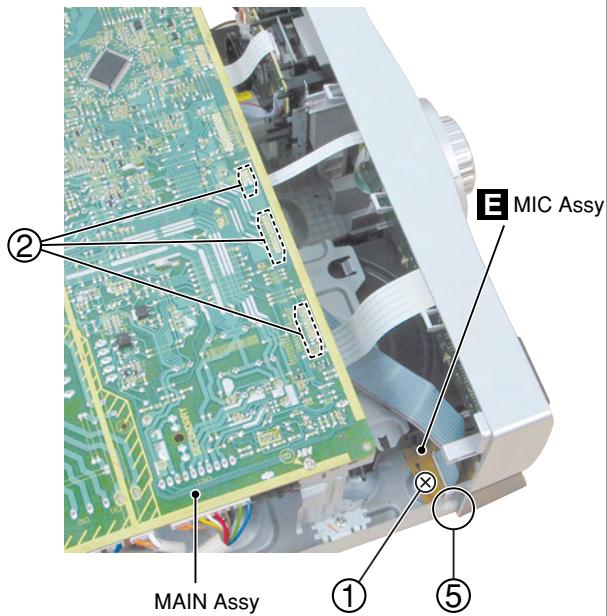

B

- ③ Remove the grounding screw.
- ④ Disconnect the cables at CN2302, CN2301 and CN2901.
- ⑤ Released the hook at the right and left side of the Front Panel Assy.

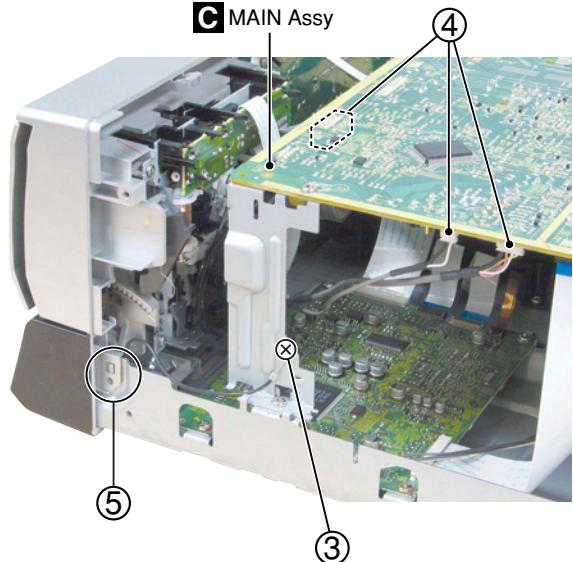


D

E


F

- ⑥ Remove 2 screws from Bottom Chassis and Rear Panel.

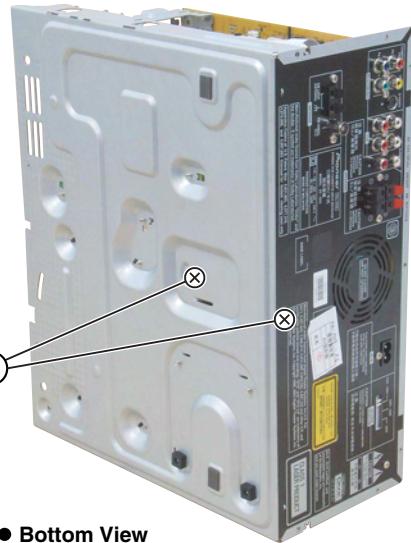


● Bottom View

- ⑦ Disconnect the FFC Cables at CN1501 and CN3001.
(Do not remove other cables.)
- ⑧ Remove 2 screws on the MAIN Assy.

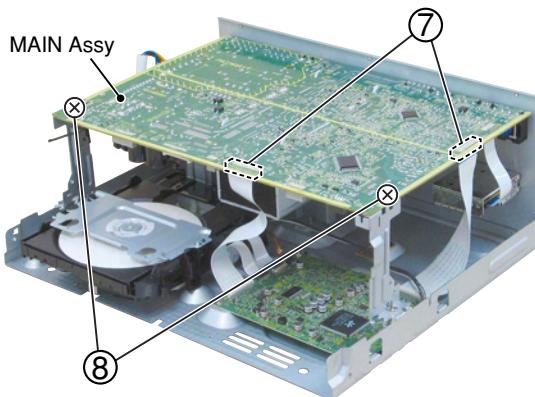


- ⑨ Slide the Heatsink Holder to the Rear Panel side, and take out the Rear Panel and MAIN Assy.

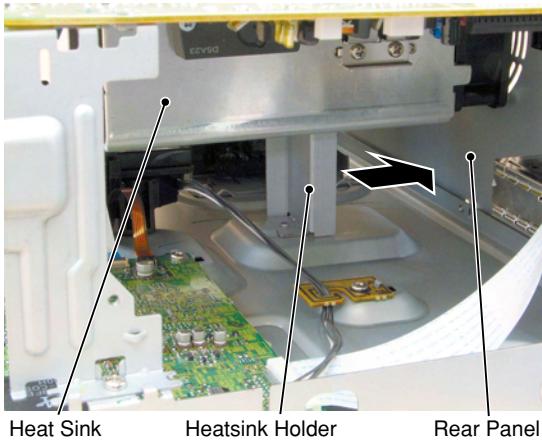


3 MAIN Assy diagnosis

- ① Set the Rear Panel and MAIN Assy upright.

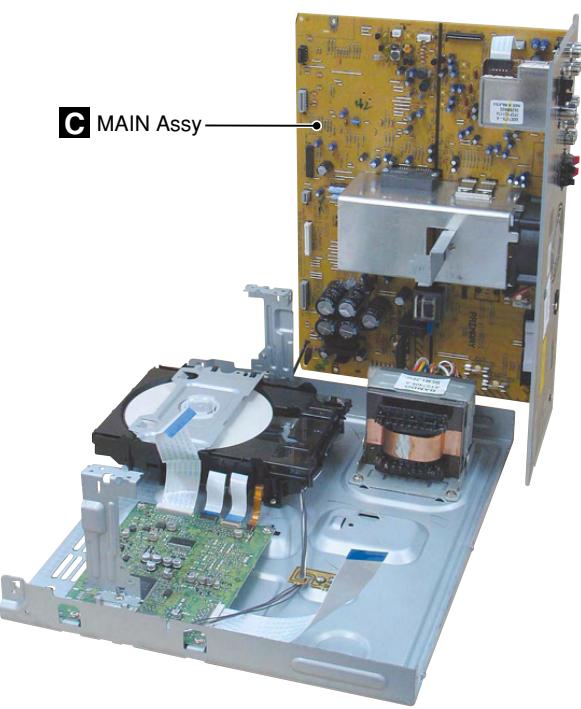


- ② Set the Front Panel upright, which you took off in the previous procedure, and connect the six cables to CN5651, CN3991, CN3051, CN2901, CN2302, and CN2301 of the MAIN Assy, respectively.

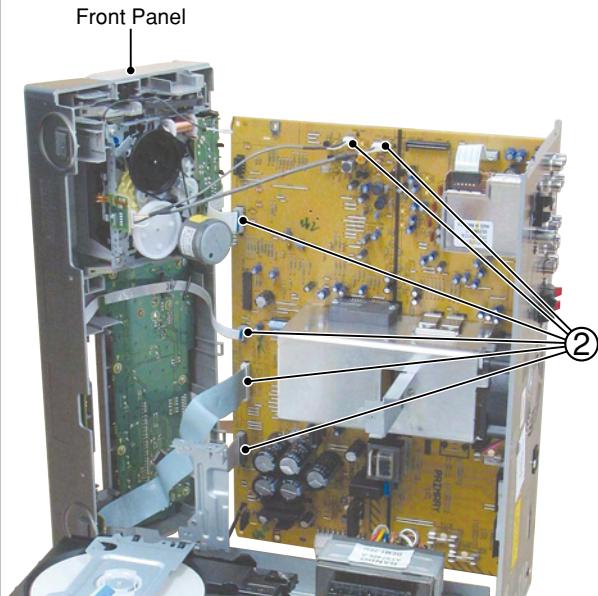


- ③ Take the original cable off from CN901 of the DVDM Assy to use the GGD1309 cable to connect to CN1501 of the MAIN Assy.

In the same way, take the original cable off from CN902 of the DVDM Assy to use the GGD1447 cable to connect to CN3001 of the MAIN Assy.

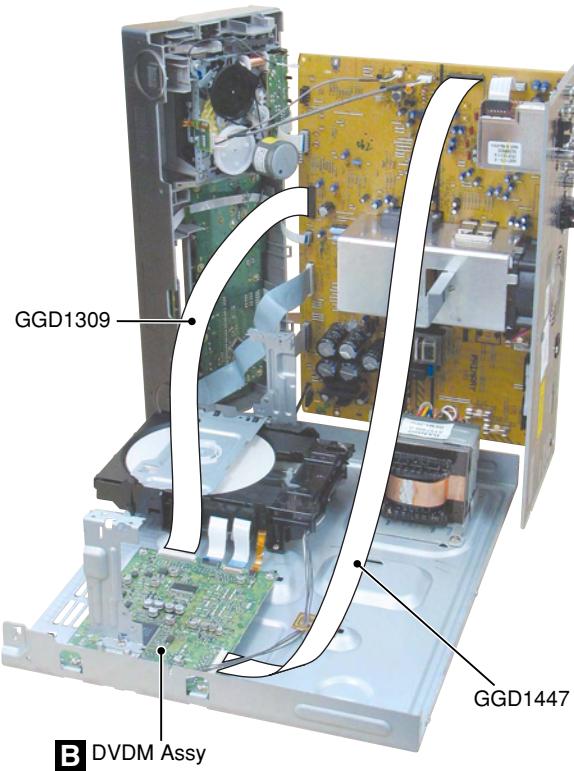


4 DVD Main Board diagnosis

- (1) Remove 4 screws on the DVDM Assy.

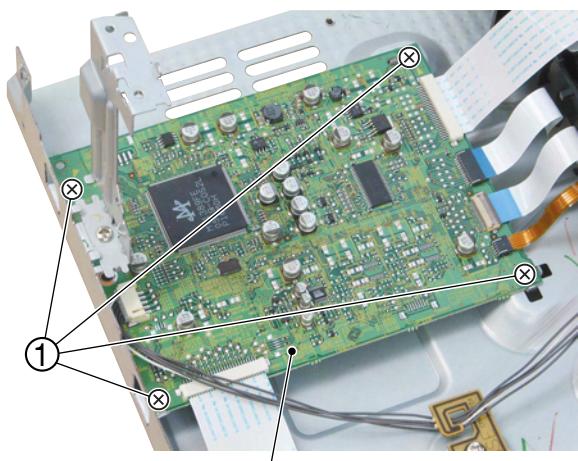

- (2) Set the DVDM Assy upright.

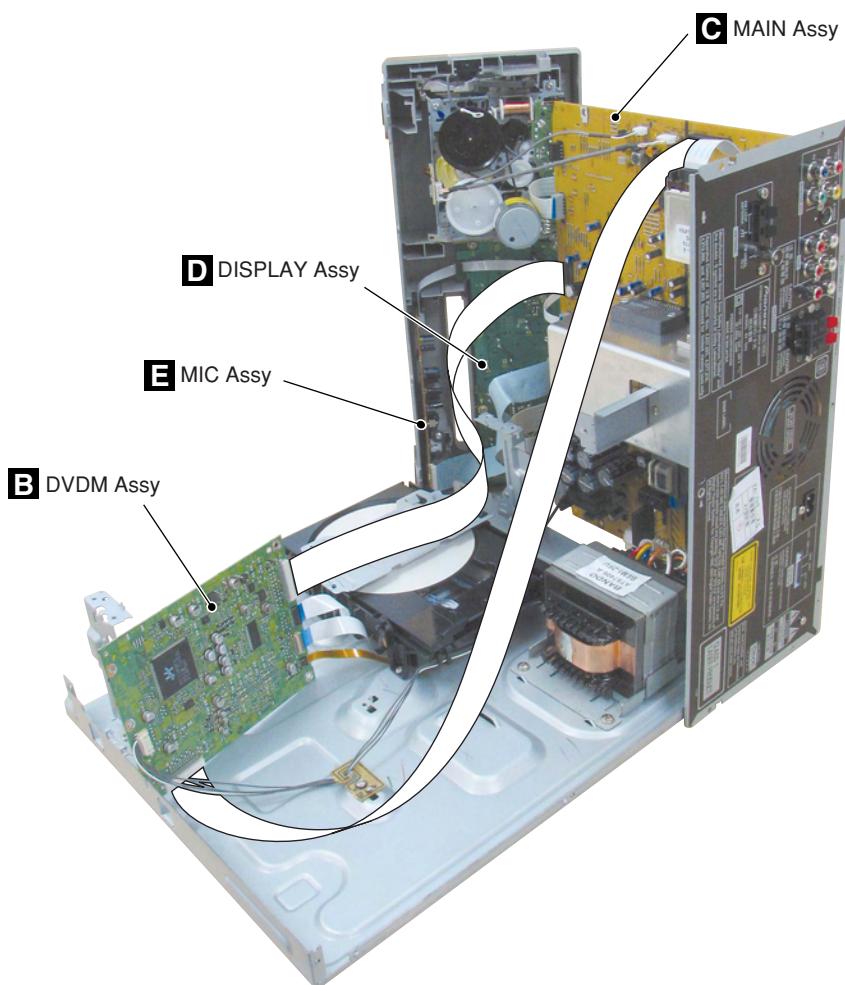

Removing the Traverse Mechanism Assy-S and 05SD Pickup Assy-S

1 05 LOADER Assy

- ① Short-circuit point by soldering.

Note: After replacement, connect the flexible cable, then remove the soldered joint (open).

- ② Disconnect the four connectors.
 ③ Remove the two screws.
 ④ Remove the 05 LOADER Assy.





①

③

05 LOADER Assy

④

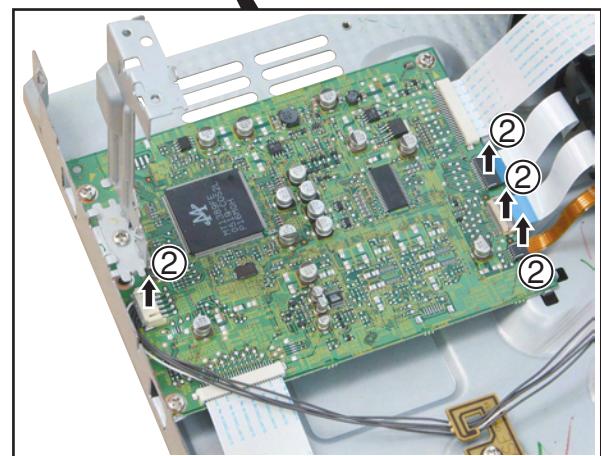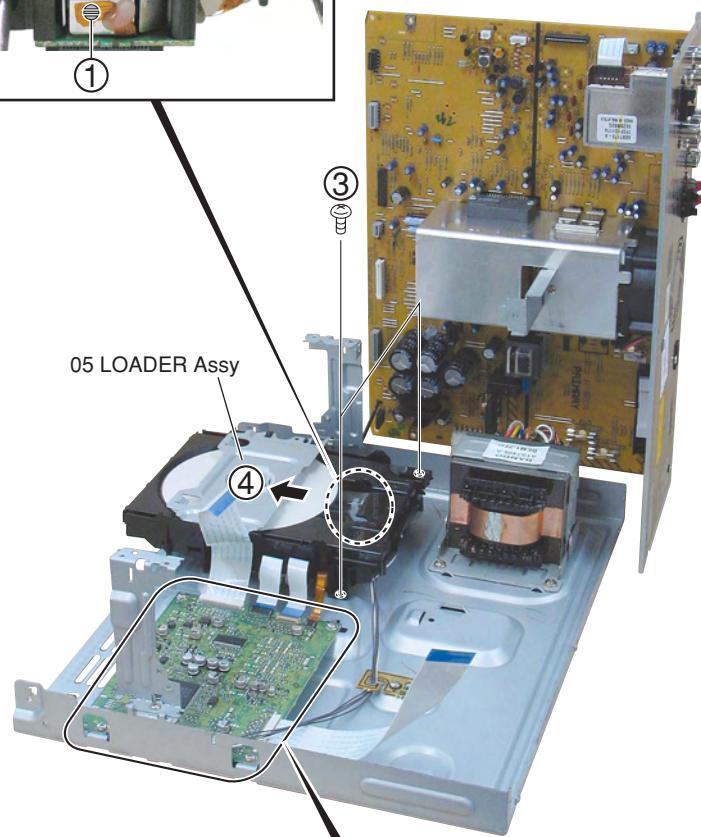

A

B

C

D

E


F

2 Bridge 04, Tray


A ① Remove the one screw.

② Remove the bridge 04.

③ Pull out the tray, then remove it by pressing the hook.

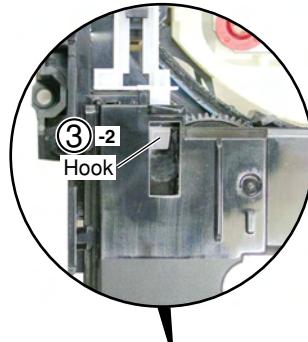

B

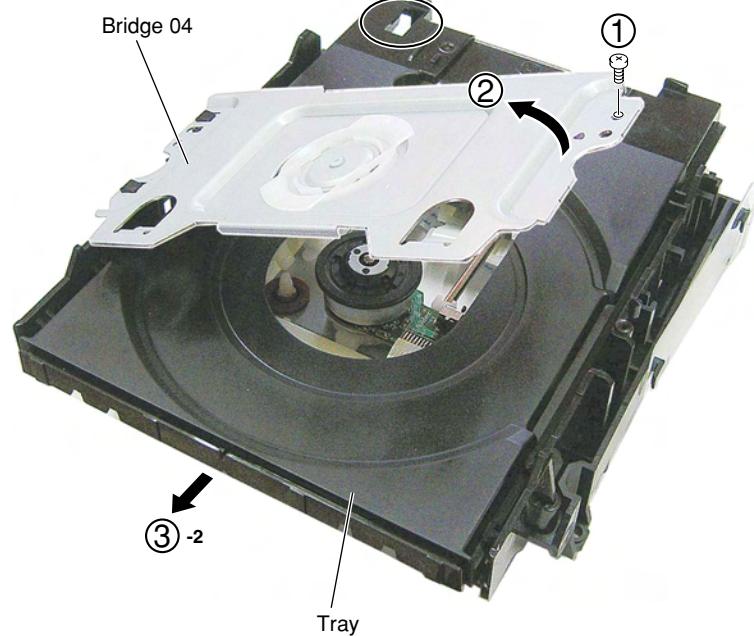


C

D

E

Note when reinserting the tray


When reinserting the tray, first align the triangle printed on the loading base and the pin of the drive cam, then insert the tray.

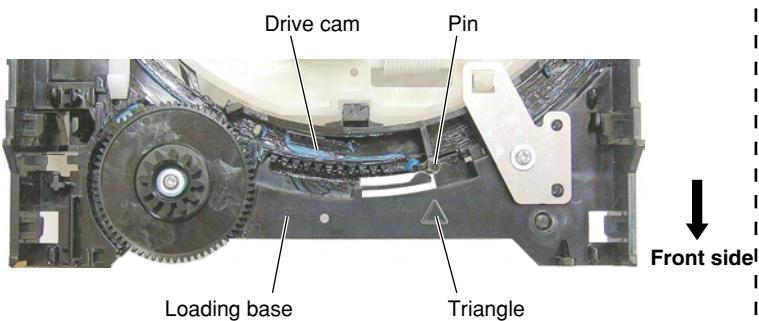

F

3 Traverse Mechanism Assy-S


- ① Dislodge the two flexible cables from their factory placement.

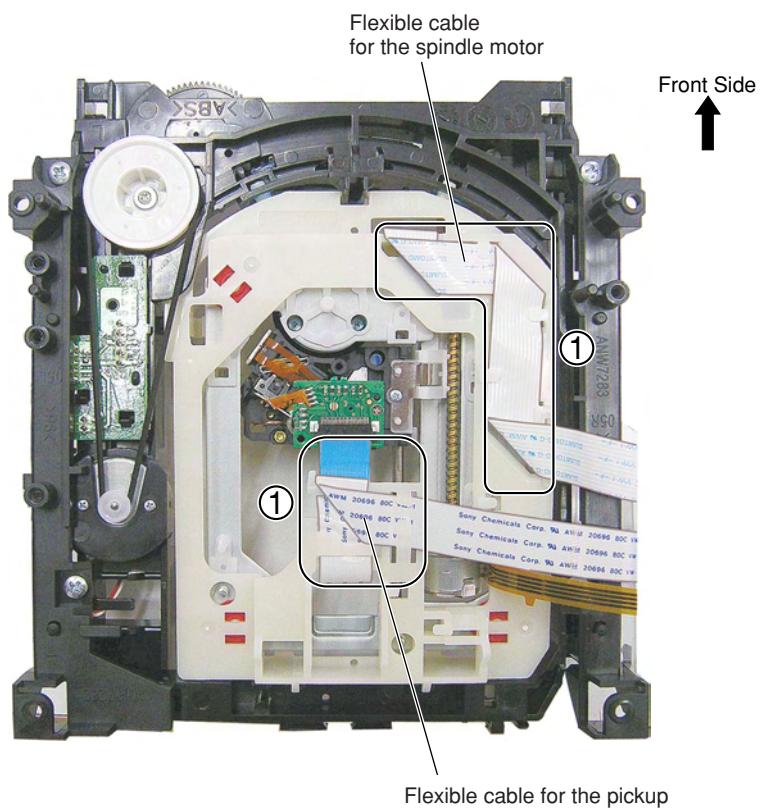

● Bottom view

- ② Unhook the four hooks.
③ Remove the Traverse Mechanism Assy-S


Traverse Mechanism Assy-S

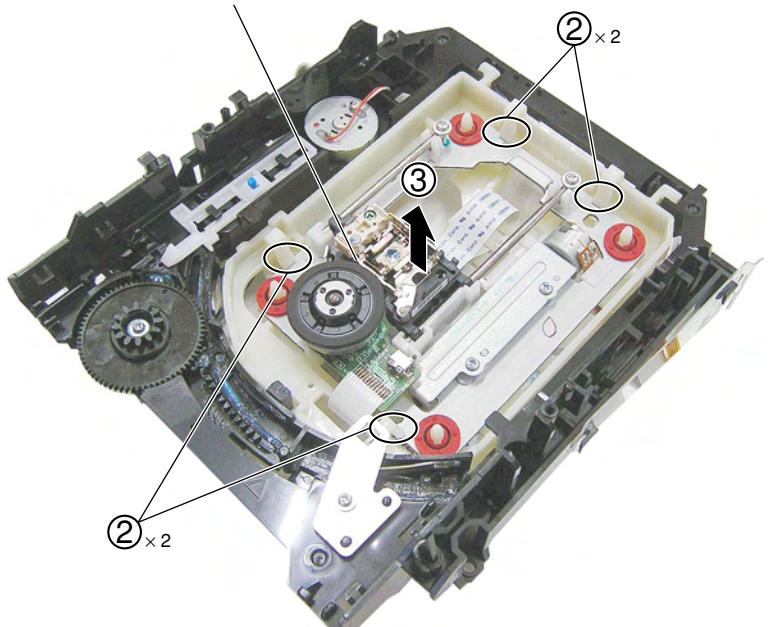

4 05SD Pickup Assy-S

A Note: The 05SD Pickup Assy can be removed without removing the Traverse Mechanism Assy-S.(shown as Step 3.)


- ① Disconnect the flexible cable for the pickup.

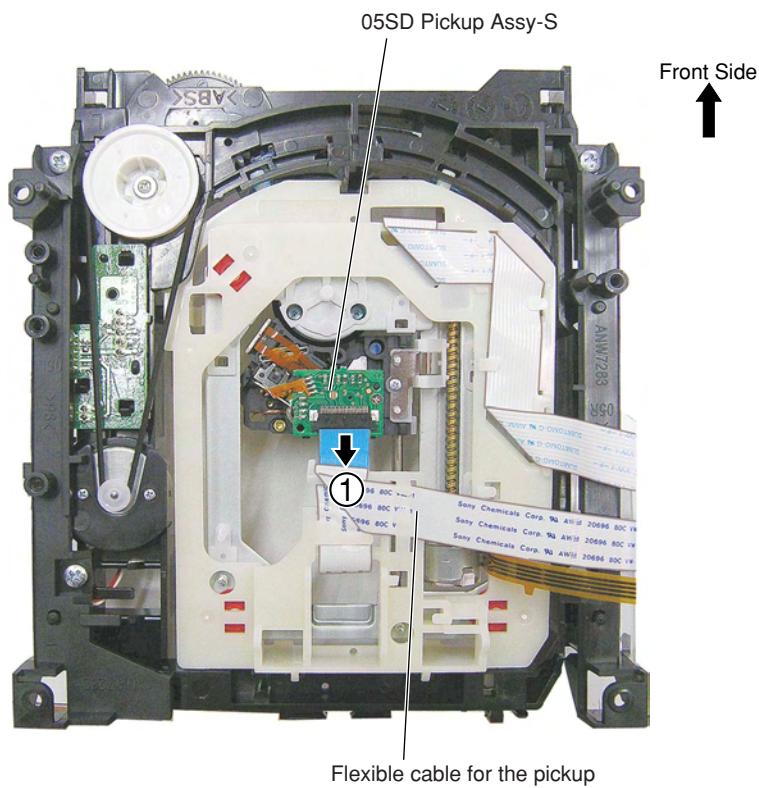

● Bottom view


C

- ② Remove the two adjustment screws.
- ③ Remove the 05SD Pickup Assy.

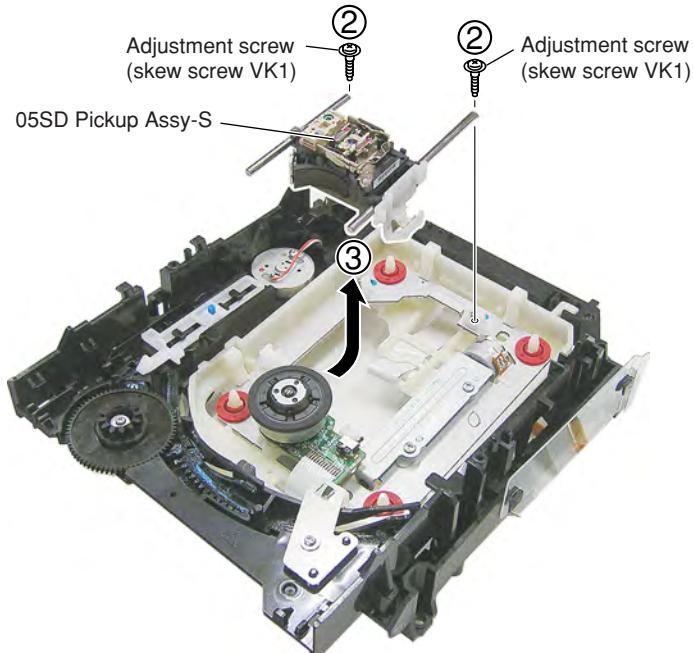

D


E Note: Be careful not to lose the adjustment spring (skew spring VK1).

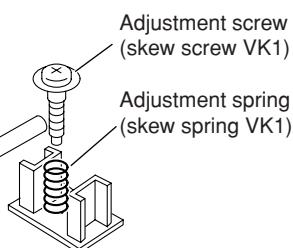

F


- ④ Remove the one screw.

Note: The screw is secured with the silicone adhesive.
Make sure to apply the silicone adhesive after reattaching the screw.

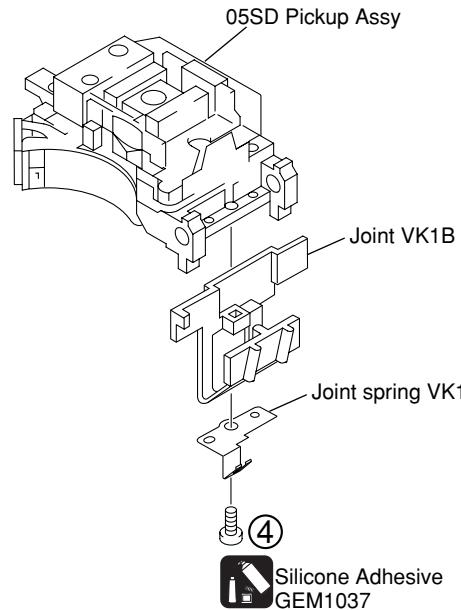

Arrangement of the flexible cable for the spindle motor

: Conductive surface

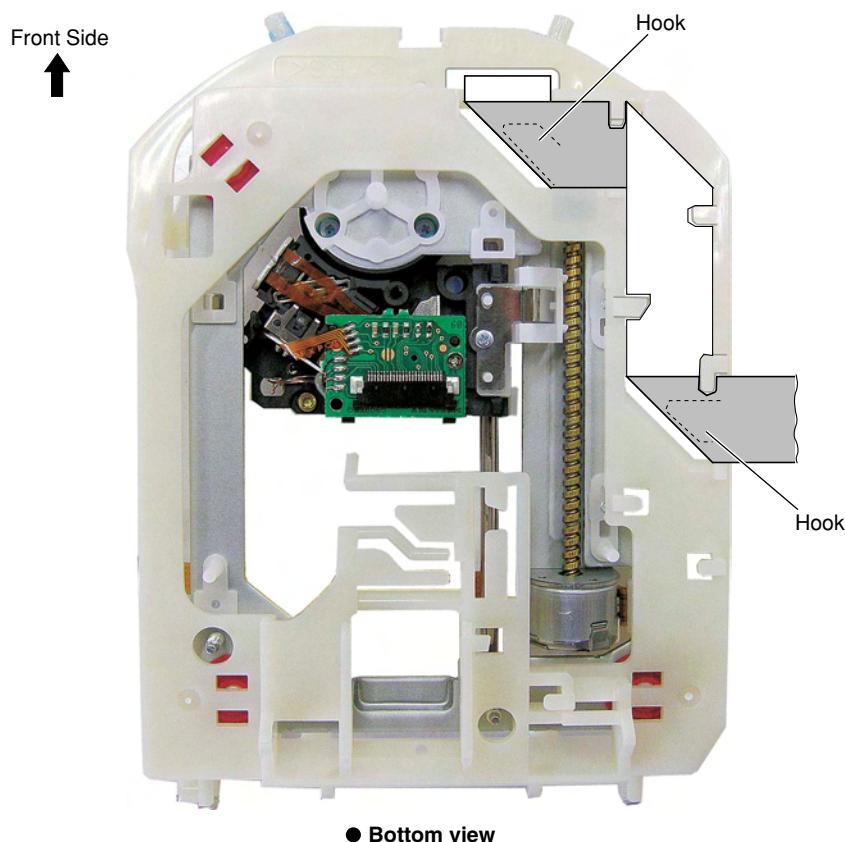

● Bottom view


Arrangement of the flexible cable for the pickup

A : Conductive surface

Note:


Be sure to move the 05SD Pickup Assy to the innermost perimeter.

- ① Fold the flexible cable for the pickup with the backing outward in the illustration below.

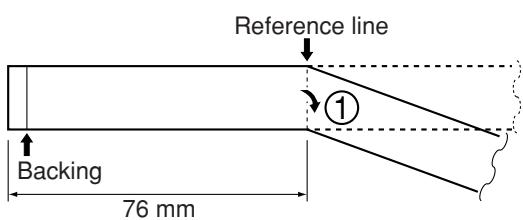


- ④ Hook the part folded in Step ① to the hook.

- ⑤ Pass the flexible cable through the hook.

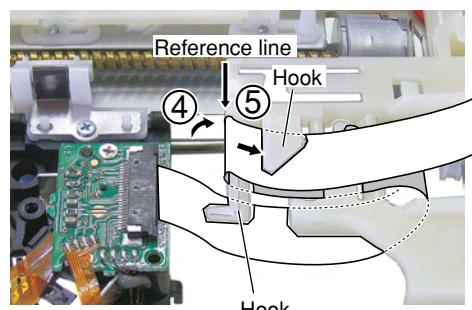


- ② Attach the flexible cable for the pickup to the connector.

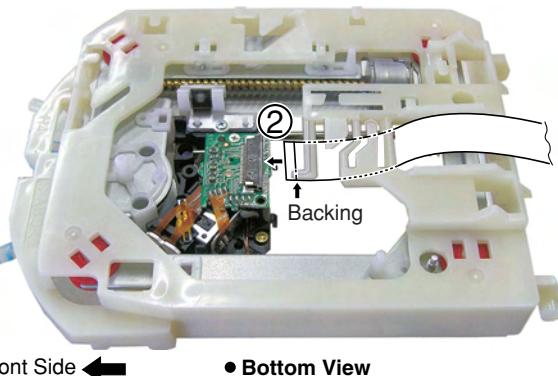


- ⑥ Fold the flexible cable along the hook.

- ⑦ Pass the flexible cable through the hook.

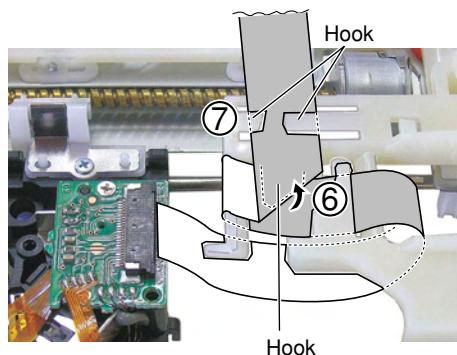

- ③ Pass the flexible cable through the hook.

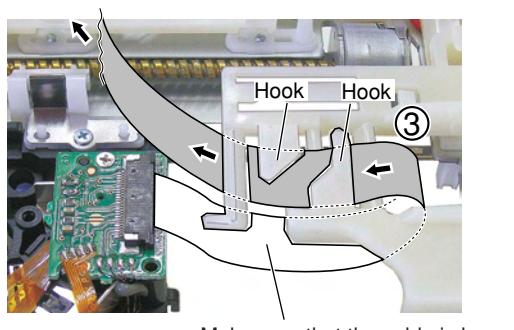

7.2 PARTS

7.2.1 IC

- The information shown in the list is basic information and may not correspond exactly to that shown in the schematic diagrams.

• List of IC

PDC129A

A

■ PDC129A (MAIN ASSY : IC5501)

- System Control Microcomputer

● Pin Functions

No.	Pin Name	I/O	Pin Function
1	DVDON/OFF	O	Control power supply for DVD module
2	NC	O	
3	MICDET	I	Mic Detection
4	ACPULSE	I	AC PULSE input detection (Interruption 0)
5	NC	O	
6	(RDSCLK)	O	
7	REMOCON	I	REMOCON signal input (Interruption 3)
8	XRESET	I	μ -com reset input
9	XT1	-	Subclock (connect to VDD when no use)
10	XT2	-	Subclock (leave open when no use, and set the bit 6 of OCR SFR)
11	VSS1	-	
12	CF1	-	Main Clock (connect to VDD when no use)
13	CF2	-	Main Clock (leave open when no use)
14	VDD1	-	
15	SIMUKE	I	Destination distinction input
16	MODEL	I	Model distinction input
17	VDET	I	DVD3.3V detection input
18	KEY1	I	Key1 input
19	KEY2	I	Key2 input
20	JOG	I	JOG
21	LEVELIN	I	Level meter signal input
22	XPROTECT	I	
23	SDATA	O	System bus data output (for DVD)
24	MDATA	I	System bus data input (for DVD)
25	SCLK	I	System bus clock input(for DVD)
26	FLCE	O	CE for FL driver
27	FLDATA	O	Data for FL driver
28	FLCLK	O	Clock for FL driver
29	NC	O	
30	XREADY	O	Chip select for system bus (to DVD module)
31	NC	O	
32	XRECMUTE	O	REC OUT MUTE
33	UTEST_CHK	O	UNITCHECK IN for checker
34	UTEST_EEPOK	O	EEPROM CHECK OK for checker
35	RELAY	O	SP RELAY ON/OFF
36	NC	O	
37	NC	O	
38	NC	O	
39	VSS4	-	
40	VDD4	-	

B

C

D

E

F

No.	Pin Name	I/O	Pin Function
41	NC	O	
42	NC	O	
43	STEST	I	Set TESTMODE for Service
44	UTEST	I	Set UNITCHECK for checker
45	ECHCONT1	O	Control for ECHO1
46	ECHCONT2	O	Control for ECHO2
47	NC	O	
48	EEPROM_CS	O	EEPROM CS
49	EEPROM_O	O	EEPROM D0
50	EEPROM_I	I	EEPROM D1
51	EEPROM_CLK	I	EEPROM CLK
52	TXCE	O	Chip enable for Tuner LSI
53	NC	-	
54	NC	-	
55	VDD2	-	
56	VSS2	-	
57	TCHALF	I	Input switch of mecha half
58	TCMODE	I	Input switch of mecha mode
59	TCRECF	I	Input switch of mecha during recording forward
60	TCRECR	I	Input switch of mecha during recording reverse
61	TXCLK	O	Clock for tuner LSI
62	TXODATA	O	Data for tuner LSI
63	NC	O	
64	(RDSPOW)	O	Control power supply of RDS(L:POWER ON)
65	(RDSDATA)	I	Input RDS data
66	TXIDATA	I	Input data from tuner LSI
67	DVDACK	I	Acknowledgement from DVD MODULE(Interruption 4)
68	TCPULSE	I	Input pulse of TC reel
69	NC	O	
70	TCMSIN	I	Input MS signa
71	NC	O	
72	NC	O	
73	LED1	O	LED1
74	NC	O	
75	NC	O	
76	NC	O	
77	NC	O	
78	NC	O	
79	NC	O	
80	NC	O	

No.	Pin Name	I/O	Pin Function
81	PB/XRCE	O	Switch PB/REC
82	NC	O	
83	MOTOR	O	Output tape motor
84	SOL	O	Output tape solenoid
85	BEATCUT	O	Control beat cut of deck
86	BIAS	O	Control bias of deck
87	NC	O	
88	VSS3	-	
89	VDD3	-	
90	FLASHHE/D	-	for FLASH writing / On board debugger
91	FLASHDO	-	for FLASH writing / On board debugger
92	FLASHCLK	-	for FLASH writing / On board debugger
93	XDVDRST	O	RESET to DVD MODULE
94	SYSMUTE	O	Control mute of system
95	SYSPOW	O	Control power supply of system
96	VOLCLK	O	Clock for E-vol IC
97	VOLDATA/CE	O	
98	NC	O	
99	NC	O	
100	NC	O	

A

B

C


D

E

F

8. PANEL FACILITIES

Front panel

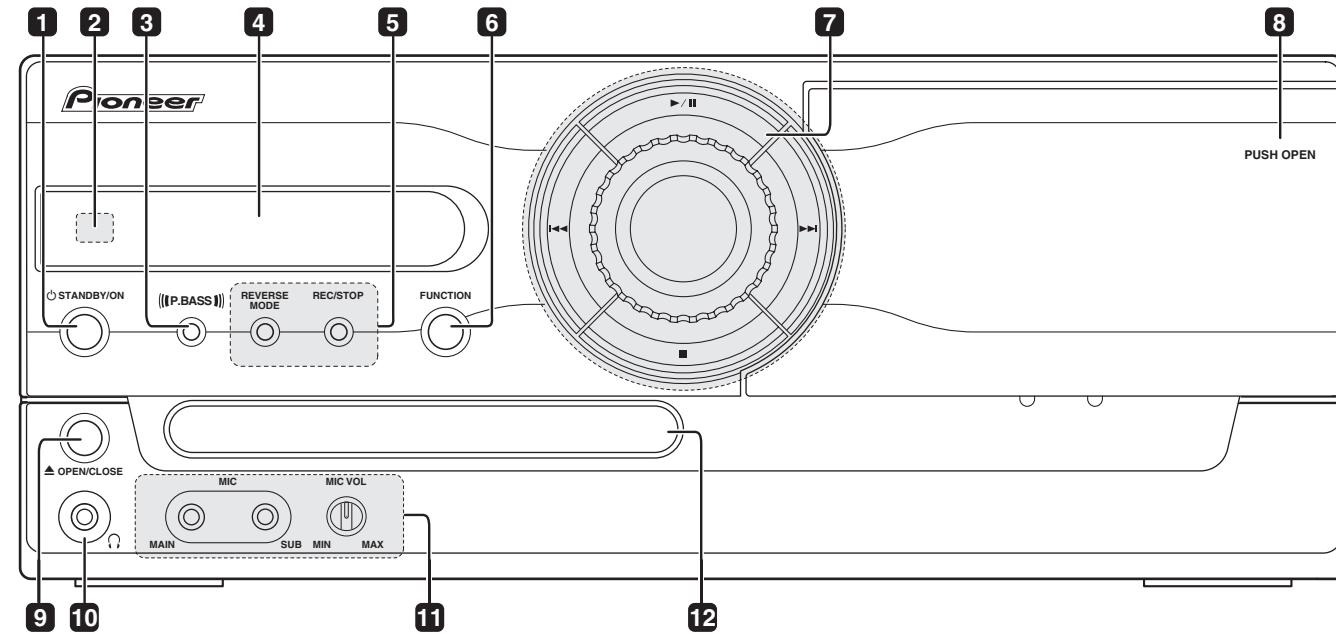

1 Ⓛ STANDBY/ON

Switches the player on or into standby.

2 Remote sensor

3 P.BASS

Press to switch on the bass boost.

4 Display

See Display below.

5 Tape cassette controls

REVERSE MODE – Selects the playback mode for tapes.

REC/STOP – Starts/stops recording on the tape deck.

6 FUNCTION

Selects the source you want to listen to.

7 Playback / volume control

The playback controls are used for playing, pausing, skipping and stopping playback. Turn the middle section to adjust the volume.

8 PUSH OPEN

Press down on this side of the cassette door to open the tape deck.

9 ▲ OPEN/CLOSE

Ejects the disc.

10 Headphone jack

11 MIC VOL and MIC input jacks


Controls the volume of the karaoke mics (MAIN and SUB).

12 Disc tray

E

F

Display

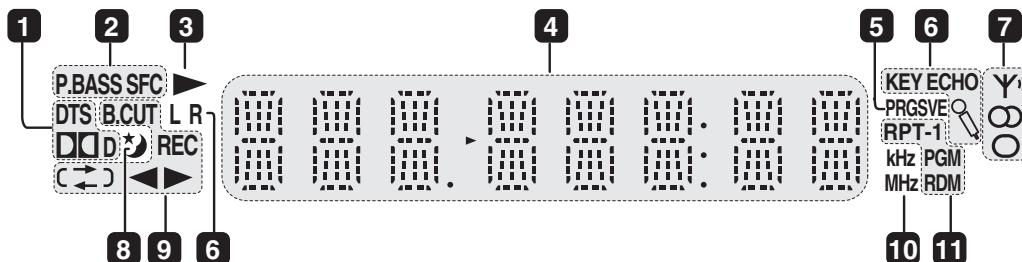

1 Format indicators

DTS - Lights during playback of a DTS source.
D D - Lights during playback of a Dolby Digital source.

∞ - Lights when a stereo FM broadcast is being received in auto stereo mode.

O - Lights when FM mono reception is selected.

2 Sound processing indicators

P.BASS - Lights when the bass boost is switched on.
SFC - Lights when one of the Sound Field Control modes is selected.

8 ♫

Lights when the sleep timer is active.

3 ►

Lights during playback.

4 Character display

5 PRGSVE

Lights when the player is set to output progressive scan video.

9 Cassette deck indicators

B.CUT - Lights when the beat cut mode has been switched to B.CUT 2.
REC - Lights when recording to the tape deck.
◀▶ - Indicates the direction of tape playback.
C, D - Indicates the reverse mode.

10 kHz / MHz

Indicates the unit of the frequency shown in the display (kHz for AM, MHz for FM).

6 Karaoke indicators

ECHO - Lights when the Karaoke ECHO effect is selected.

11 Playback mode indicators

RPT-1 - RPT lights during repeat play (RPT-1 lights during repeat one-track/chapter play).

PGM - Lights during program play.
RDM - Lights during program play.

KEY - Lights when the Karaoke pitch control is selected.

V^m (Vocal cancel) - Vocals in the backing track are partially eliminated using EQ.

L - Left channel only. Use for tracks that have a vocal recorded in the right channel.

R - Right channel only. Use for tracks that have a vocal recorded in the left channel.

L R - Use to put a single-channel vocal track into the center of the mix.

7 Tuner indicators

V^m - Lights when a broadcast is being received.

A

B

C


D

E

F

Remote control

A

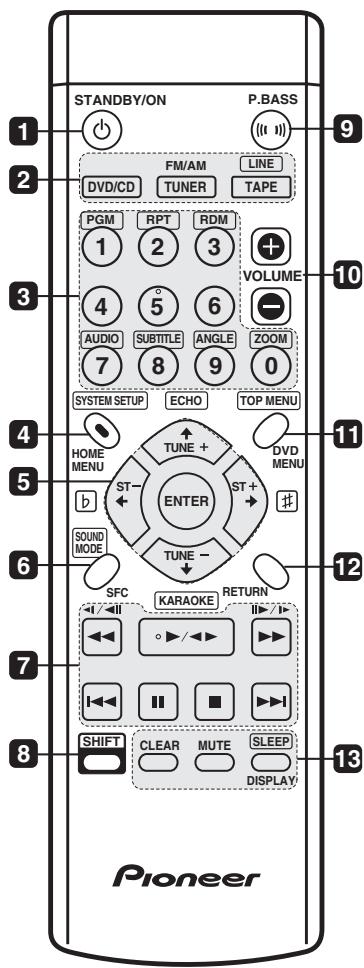

B

3 Number buttons and SHIFT functions

The number buttons can be used for selecting titles/chapters/tracks directly, the functions above the buttons are accessed by pressing **SHIFT** at the same time as the button.

PGM (SHIFT+1) - Use to program/play a program list.

RPT (SHIFT+2) - Selects a repeat play mode.

RDM (SHIFT+3) - Selects a random play mode.

AUDIO (SHIFT+7) - Selects the audio channel or language.

SUBTITLE (SHIFT+8) - Selects a subtitle display.

ANGLE (SHIFT+9) - Changes the camera angle during DVD multi-angle scene playback.

ZOOM (SHIFT+0) -Changes the zoom level.

4 HOME MENU

Press to display (or exit) the on-screen menu for Initial Settings, Play Mode functions, etc.

SYSTEM SETUP (SHIFT+HOME MENU)

Use to make various system settings. Also used to save station presets and select mono FM reception when using the tuner.

5 Cursor buttons, ENTER, tuning and karaoke buttons

Cursor buttons - Use the cursor buttons ($\uparrow/\downarrow/\leftarrow/\rightarrow$) to navigate on-screen displays and menus.

ENTER - Selects an option or executes a command.

TUNE (+/-) -Tunes the radio.

ST (+/-) - Selects station presets when listening to the radio.

The karaoke functions are accessed by pressing **SHIFT** at the same time as the corresponding button:

KARAOKE (SHIFT+↓) - Selects audio channels for karaoke.

ECHO (SHIFT+↑) - Changes the echo level on the karaoke mics.

Key controls b and #(SHIFT+←/→) - Lowers.raises the pitch of the backing track.

C

1 \odot STANDBY/ON

Switches the player on or into standby.

2 Input source function select

Selects the source you want to listen to; **DVD/CD, TUNER, TAPE** or **LINE (SHIFT+TAPE)**.

D

E

F

6 SFC

Selects sound modes or custom settings from the Sound Field Control.

SOUND MODE (SHIFT+SFC)

Accesses settings in the Sound menu, such as the tone controls.

7 Playback controls

See Playing discs, Playing cassette tapes, and Disc playback features for an explanation of these controls.

8 SHIFT

Some of the buttons have alternate functions (they are outlined on the remote control). Press and hold **SHIFT** to access these.

9 P.BASS

Press to switch on the bass boost.

10 VOLUME

Adjusts the volume level.

11 DVD MENU

Press to display a DVD disc menu, or the Disc Navigator.

TOP MENU (SHIFT+DVD MENU)

Displays the top menu of a DVD disc in the play positionóthis may be the same as pressing pressing **DVD MENU**.

12 RETURN

Press to return to a previous menu screen.

13 CLEAR

Clears an entry.

MUTE

Mutes the volume.

DISPLAY

Switches between information displays.

SLEEP (SHIFT+DISPLAY) – Use for setting the sleep timer.

Range of the remote control unit

The remote control has a range of about 7 meters at an angle of 30° of the remote control control sensor. It may not work properly if:

- There are obstacles between the remote control and this unit's remote sensor.
- Direct sunlight or fluorescent light is shining onto the remote sensor.
- This system is located near a device that is emitting infrared rays.
- This unit is operated simultaneously with another infrared remote control unit.

■ Jigs list

A

	Name	Jig No.	Remarks
	Service Remote Control Unit	GGF1381	adjustment, diagnosis
	DVD Test Disc (DVD-Video)	GGV1025	Check of DVD-Video
	CD Test Disc	STD-905	Check of CD
	Flexible Cable (27P)	GGD1447	diagnosis of DVDM ASSY
	Flexible Cable (25P)	GGD1309	diagnosis of DVDM ASSY
	DVD Data Disc	GGV1175	diagnosis (ID data setting)
	Test Tape	NCT-111 or STD-301	Tape Speed adjustment
	Test Tape	NCT-112 or STD-331E	Tape Playback adjustment
B	Test Tape	STD-630 or STD-631	Normal blank tape

■ Lubricants and Glues list

C

	Name	Lubricants and Glues No.	Remarks
	Lubricating Oil	GYA1001	refer to "2.4 05 LOADER ASSY"
	Daifree	GEM1036	refer to "2.4 05 LOADER ASSY"
	Silicone Adhesive	GEM1037	refer to "2.5 TRAVERSE MECHANISM ASSY-S"
	Screw tight	GYL1001	refer to "6.2.5 MECHANISM ADJUSTMENT"



Before shipping out the product, be sure to clean the following positions by using the prescribed cleaning tools:

D

Position to be cleaned	Cleaning tools
Pickup lenses	Cleaning liquid : GEM1004 Cleaning paper : GED-008

E

Position to be cleaned	Cleaning tools
Cassette heads Pinch rollers Capstans	Cleaning paper : GED-008

Position to be cleaned	Cleaning tools
Fans	Cleaning paper : GED-008

F