

CDP-CX333ES/CX555ES

SERVICE MANUAL

US Model
Canadian Model



Photo: CX555ES

| | |
|------------------------------------|-----------------|
| Model Name Using Similar Mechanism | CDP-CX300 |
| CD Mechanism Type | CDM54-KIBD35B |
| Base Unit Type | KSM-213BFN/C2NP |
| Optical Pick-up Type | KSS-213B/C2N |

SPECIFICATIONS

Compact disc player

| | |
|------------------------------|--|
| Laser | Semiconductor laser ($\lambda = 780 \text{ nm}$) Emission duration: continuous |
| Laser output | Max 44.6 μW * * This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up block with 7 mm aperture. |
| Frequency response | 20 Hz to 20 kHz $\pm 0.5 \text{ dB}$ |
| Signal-to-noise ratio | More than 110 dB |
| Dynamic range | More than 95 dB |
| Harmonic distortion | Less than 0.003 % |
| Channel separation | More than 100 dB |

Outputs

| | Jack type | Maximum output level | Load impedance |
|------------------------------|--------------------------|----------------------|---------------------|
| LINE OUT | Phono jacks | 2 V (at 50 kilohms) | Over 10 kilohms |
| DIGITAL OUT (OPTICAL) | Optical output connector | -18 dBm | Wave length: 660 nm |

General

Power requirements

| Where purchased | Power requirements |
|-----------------|--------------------|
| USA | 120 V AC, 60 Hz |

Power consumption 17 W

Dimensions (approx.) (w/h/d) 430 x 189 x 484 mm (17 x 7 1/2 x 19 in.) incl. projecting parts

Mass (approx.) 9 kg (19 lbs 14 oz)

Supplied accessories

- Audio cord (1)
- CD booklet holders (3) and label (1)
- Remote commander (remote) (1)
- Size AA (LR6) batteries (3) (CDP-CX555ES)
- Size AA (NS) batteries (2) (CDP-CX333ES)

Design and specifications are subject to change without notice.

COMPACT DISC PLAYER

SONY®




SECTION 1 SERVICING NOTES

TABLE OF CONTENTS

| | | |
|------------|---|----|
| 1. | SERVICING NOTES | 2 |
| 2. | GENERAL | 8 |
| 3. | DISASSEMBLY | 9 |
| 4. | SERVICE MODE | 12 |
| 5. | TEST MODE | 16 |
| 6. | MECHANICAL ADJUSTMENTS | 17 |
| 7. | ELECTRICAL ADJUSTMENT | 19 |
| 8. | DIAGRAMS | |
| 8-1. | Block Diagram – BD Section – | 21 |
| 8-2. | Block Diagram – MAIN Section – | 22 |
| 8-3. | Note for Printed Wiring Boards and Schematic Diagrams | 23 |
| 8-4. | Printed Wiring Board – BD Board – | 24 |
| 8-5. | Schematic Diagram – BD Board – | 25 |
| 8-6. | Printed Wiring Board – MAIN Board – | 26 |
| 8-7. | Schematic Diagram – MAIN Board (1/3) – | 28 |
| 8-8. | Schematic Diagram – MAIN Board (2/3) – | 29 |
| 8-9. | Schematic Diagram – MAIN Board (3/3) – | 30 |
| 8-10. | Printed Wiring Board – JACK Board – | 31 |
| 8-11. | Schematic Diagram – JACK Board – | 31 |
| 8-12. | Printed Wiring Board – DISPLAY Board – | 32 |
| 8-13. | Schematic Diagram – DISPLAY Board – | 33 |
| 8-14. | Printed Wiring Board – JOG Board – | 34 |
| 8-15. | Schematic Diagram – JOG Board – | 35 |
| 8-16. | Printed Wiring Boards – D.SENSOR (IN)/ D.SENSOR (OUT)/SENSOR (T) Boards – | 36 |
| 8-17. | Schematic Diagram – D.SENSOR (IN)/ D.SENSOR (OUT)/SENSOR (T) Boards – | 37 |
| 8-18. | Printed Wiring Boards – D.MOTOR/D.SWITCH/ KEY/LED/L.T.MOTOR/L.SWITCH (A)/ L.SWITCH (B) Boards – | 38 |
| 8-19. | Schematic Diagram – D.MOTOR/D.SWITCH/ KEY/LED/L.T.MOTOR/L.SWITCH (A)/ L.SWITCH (B) Boards – | 39 |
| 8-20. | Printed Wiring Board – POWER Board – | 40 |
| 8-21. | Schematic Diagram – POWER Board – | 41 |
| 8-22. | IC Pin Function Description | 49 |
| 9. | EXPLODED VIEWS | 54 |
| 10. | ELECTRICAL PARTS LIST | 61 |

MODEL IDENTIFICATION — BACK PANEL —

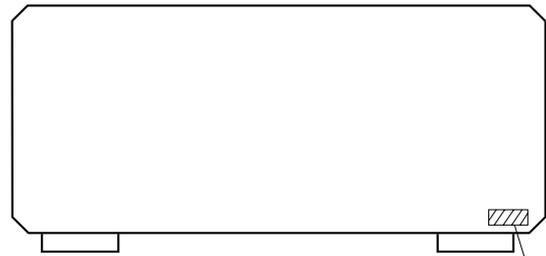

| PART No. | MODEL |
|--------------|-------------------------|
| 4-217-909-0□ | CX333ES: US model |
| 4-217-909-1□ | CX333ES: Canadian model |
| 4-217-909-2□ | CX555ES: US model |
| 4-217-909-3□ | CX555ES: Canadian model |

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE \triangle SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.


SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer: Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers’ instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

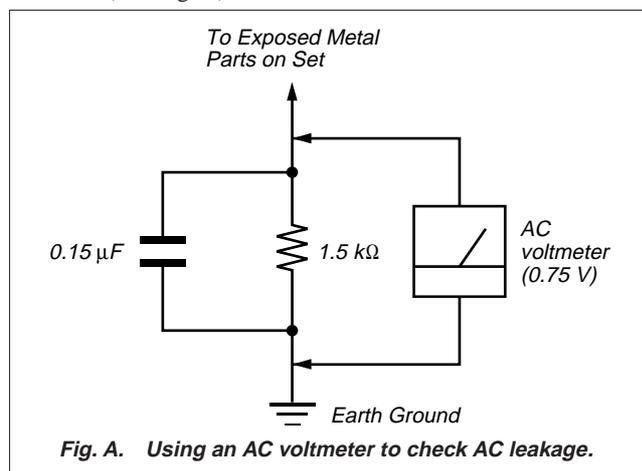

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.

During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

LASER DIODE AND FOCUS SEARCH OPERATION CHECK

Carry out the “S curve check” in “CD section adjustment” and check that the S curve waveforms is output three times.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270 °C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CD-TEXT TEST DISC

This unit is able to display the TEXT data (character information) written in the CD on its fluorescent indicator tube.

The CD-TEXT TEST DISC (TGCS-313:J-2501-126-A) is used for checking the display.

To check, perform the following procedure.

Checking Method:

1. Turn ON the power, set the disc on the disc table with the side labeled as “test disc” as the right side, close the front cover, and chuck the disc.
2. The following will be displayed on the fluorescent indicator tube. (The display switches each time the **TIME/TEXT** button is pressed.)
Display: CD TEXT TEST DISC (Album Title)
3. Press the **▶** button and play back the disc.
4. The following will be displayed on the fluorescent indicator tube. (If nothing is displayed, press the **TIME/TEXT** button.)
Display: 1 kHz/0 dB/ L&R
5. Rotate **◀◀AMS▶▶** knob to switch the track. The text data of each track will be displayed.
For details of the displayed contents for each track, refer to “Table 1: CD-TEXT TEST DISC Text Data Contents” and “Table 2: CD-TEXT TEST DISC Recorded Contents and Display”.

Restrictions in CD-TEXT Display

In this unit, some special characters will not be displayed properly. These will be displayed as a space or a character resembling it. For details, refer to “Table 2: CD-TEXT DISC Recorded Contents and Display”.

Table 1: CD-TEXT TEST DISC Text Data Contents (TRACKS No. 1 to 41:Normal Characters)


| TRACK No. | Displayed Contents | TRACK No. | Displayed Contents |
|-----------|--------------------|-----------|----------------------------------|
| 1 | 1 kHz/0 dB/L&R | 22 | 1 kHz/-90 dB/L&R |
| 2 | 20 Hz/0 dB/L&R | 23 | Infinity Zero w/o emphasis//L&R |
| 3 | 40 Hz/0 dB/L&R | 24 | Infinity Zero with emphasis//L&R |
| 4 | 100 Hz/0 dB/L&R | 25 | 400 Hz+7 kHz(4:1)/0 dB/L&R |
| 5 | 200 Hz/0 dB/L&R | 26 | 400 Hz+7 kHz(4:1)/-10 dB/L&R |
| 6 | 500 Hz/0 dB/L&R | 27 | 19 kHz+20 kHz(1:1)/0 dB/L&R |
| 7 | 1 kHz/0 dB/L&R | 28 | 19 kHz+20 kHz(1:1)/-10 dB/L&R |
| 8 | 5 kHz/0 dB/L&R | 29 | 100 Hz/0 dB/L* |
| 9 | 7 kHz/0 dB/L&R | 30 | 1 kHz/0 dB/L* |
| 10 | 10 kHz/0 dB/L&R | 31 | 10 kHz/0 dB/L* |
| 11 | 16 kHz/0 dB/L&R | 32 | 20 kHz/0 dB/L* |
| 12 | 18 kHz/0 dB/L&R | 33 | 100 Hz/0 dB/R* |
| 13 | 20 kHz/0 dB/L&R | 34 | 1 kHz/0 dB/R* |
| 14 | 1 kHz/0 dB/L&R | 35 | 10 kHz/0 dB/R* |
| 15 | 1 kHz/-1 dB/L&R | 36 | 20 kHz/0 dB/R* |
| 16 | 1 kHz/-3 dB/L&R | 37 | 100 Hz Squer Wave//L&R |
| 17 | 1 kHz/-6 dB/L&R | 38 | 1 kHz Squer Wave//L&R |
| 18 | 1 kHz/-10 dB/L&R | 39 | 1 kHz w/emphasis/-0.37 dB/L&R |
| 19 | 1 kHz/-20 dB/L&R | 40 | 5 kHz w/emphasis/-4.53 dB/L&R |
| 20 | 1 kHz/-60 dB/L&R | 41 | 16 kHz w/emphasis/-9.04 dB/L&R |
| 21 | 1 kHz/-80 dB/L&R | | |

Note: The contents of Track No. 1 to 41 are the same as those of the current TEST DISC-their titles are displayed.


Table 2: CD-TEXT TEST DISC Recorded Contents and Display
(In this unit, some special characters cannot be displayed. This is no a fault.)

| TRACK No. | Recorded Contents | Displayed Contents |
|-----------|--|---|
| 42 | ! " # \$ % & ' (21h to 27h) 1kHz 0dB L&R | ← All the same |
| 43 | () * + , - . / (28h to 2Fh) | ← All the same |
| 44 | 0 1 2 3 4 5 6 7 (30h to 37h) | ← All the same |
| 45 | 8 9 : ; < = > ? (38h to 3Fh) | ← All the same |
| 46 | @ A B C D E F G (40h to 47h) | ← All the same |
| 47 | H I J K L M N O (48h to 4Fh) | ← All the same |
| 48 | P Q R S T U V W (50h to 57h) | ← All the same |
| 49 | X Y Z [¥] ^ _ (58h to 5Fh) | X Y Z [\] ^ _ (58.... |
| 50 | ` a b c d e f g (60h to 67h) | ← All the same |
| 51 | h i j k l m n o (68h to 6Fh) | ← All the same |
| 52 | p q r s t u v w (70h to 77h) | ← All the same |
| 53 | x y z { } ~ ■ (78h to 7Fh) | x y z { } ~ (78.... |
| 54 | ■ i ¢ £ ¤ ¥ ¦ § (A0h to A7h) 8859-1 | i ¢ £ ¤ ¥ ¦ § (A0.... ■ is not displayed |
| 55 | ♪ © ª « ¬ ® ¯ (A8h to AFh) | ♪ (A8.... © ª « ¬ ® ¯ are not displayed |
| 56 | • ± ² ³ ´ µ ¶ • (B0h to B7h) | ´ µ • (B0.... • ± ² ³ ¶ are not displayed |
| 57 | † † ° » ¼ ½ ¾ ¿ (B8h to BFh) | † ¿ (B8.... † ° » ¼ ½ ¾ are not displayed |
| 58 | À Á Â Ã Ä Å Æ Ç (C0h to C7h) | ← All the same |
| 59 | È É Ê Ë Ì Í Î Ï (C8h to CFh) | ← All the same |
| 60 | Ð Ñ Ò Ó Ô Õ Ö × (D0h to D7h) | ← All the same |
| 61 | Ø Ù Ú Û Ü Ý Þ ß (D8h to DFh) | Φ Ù Ú Û Ü Ý Þ ß (D8.... |
| 62 | à á â ã ä å æ ç (E0h to E7h) | ← All the same |
| 63 | è é ê ë ì í î ï (E8h to FFh) | ← All the same |
| 64 | đ ñ ò ó ô õ ö ÷ (F0h to F7h) | đ ñ ò ó ô õ ö ÷ (F0.... |
| 65 | ø ù ú û ü ý þ ÿ (F8h to FFh) | ← All the same |
| 66 | No.66 | ← All the same |
| 67 | No.67 | ← All the same |
| to | to | to |
| 99 | No.99 | ← All the same |


PRECAUTIONS AT SERVICING

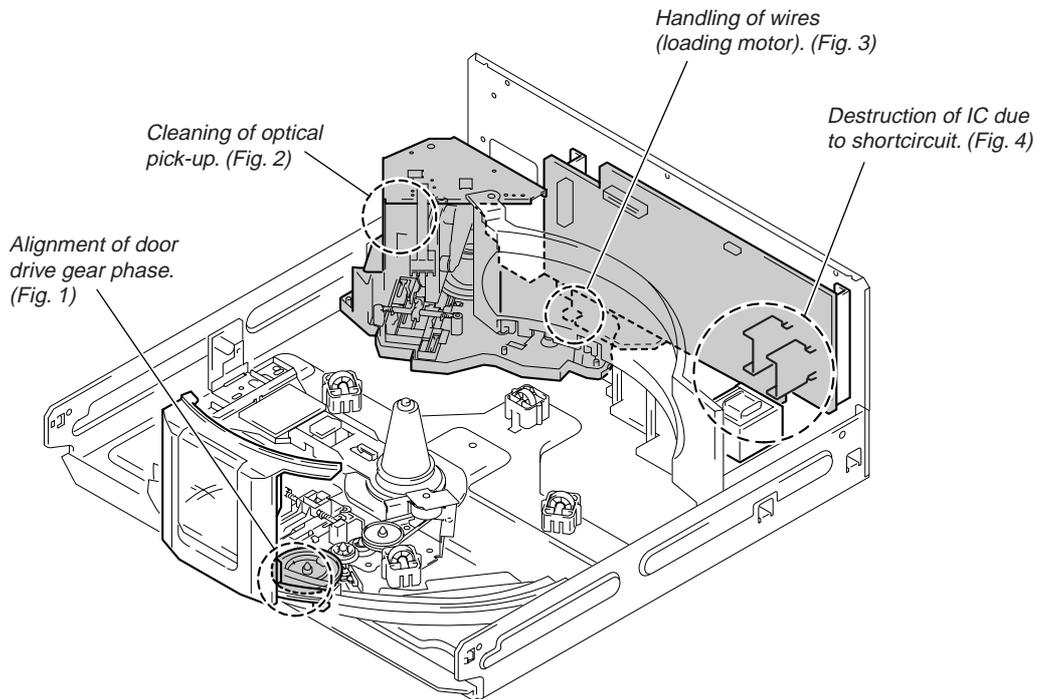


ALIGNMENT OF DOOR DRIVE GEAR PHASE WITH DOOR (CD) (Fig. 1)

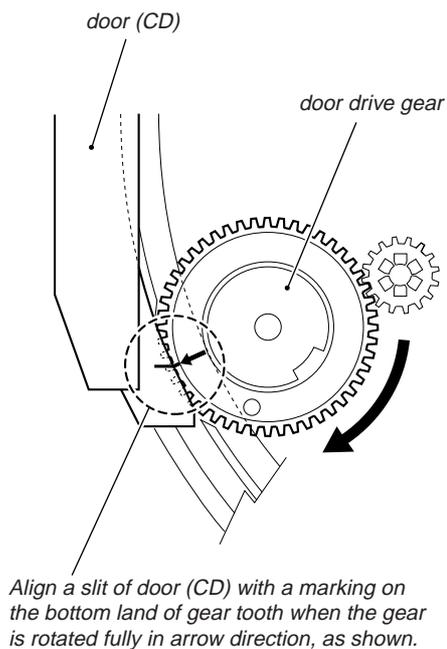

CLEANING OF OPTICAL PICK-UP (Fig. 2)

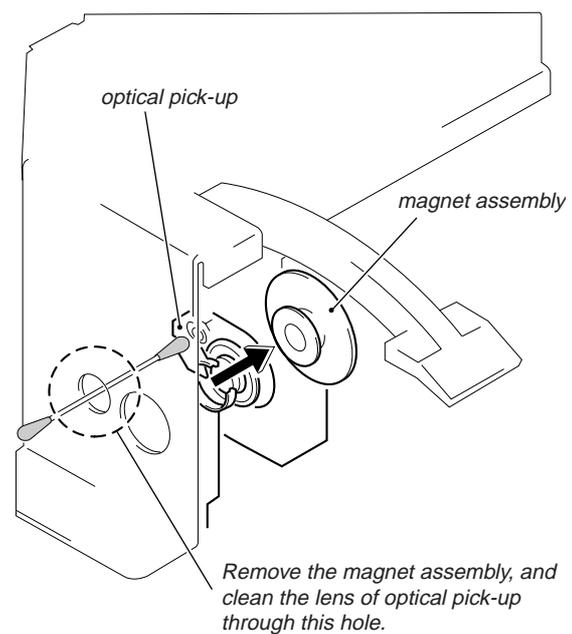


HANDLING OF WIRES (LOADING MOTOR) (Fig. 3)

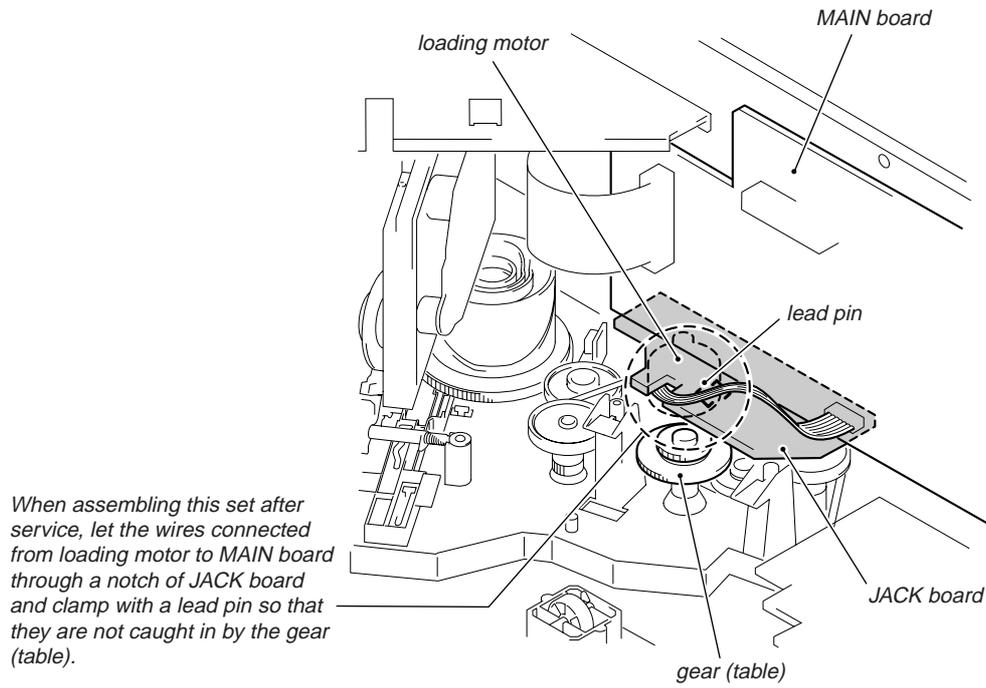

DESTRUCTION OF IC DUE TO SHORTCIRCUIT (Fig. 4)


In removing or mounting the back panel or MAIN board with the power supplied, an accidental shortcircuit of heatsink to the power transformer could destroy the IC on heatsink.

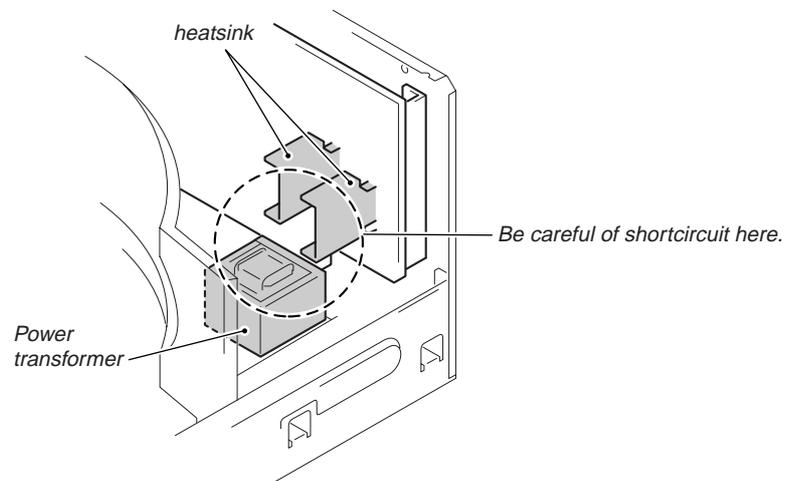

SECTION 2 GENERAL


• LOCATION OF CONTROLS

– Front Panel –

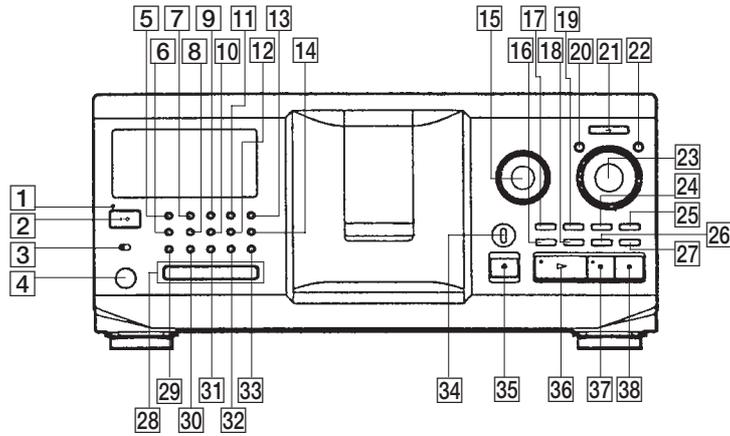

- 1 STANDBY indicator
- 2 I/⏻ button
- 3 TIMER switch
- 4 KEYBOARD jack
- 5 CONTINUE button
- 6 GROUP1 button and indicator
- 7 SHUFFLE button
- 8 GROUP2 button and indicator
- 9 PROGRAM button
- 10 GROUP3 button and indicator
- 11 REPEAT button
- 12 GROUP4 button and indicator
- 13 TIME/TEXT button
- 14 HIT LIST button and indicator
- 15 ⏮<AMS>>⏭, PUSH ENTER knob and button
- 16 MEGA CONTROL button and indicator
- 17 EASY PLAY button and indicator
- 18 X-FADE button
- 19 MEMO SEARCH button
- 20 MENU/NO button
- 21 +100 button
- 22 YES button
- 23 DISC/CHARACTER, PUSH ENTER knob and button
- 24 CHECK button
- 25 CLEAR button
- 26 NO DELAY button
- 27 FADER button
- 28 IR Repeater window (CX555ES)
- 29 GROUP5 button and indicator
- 30 GROUP6 button and indicator
- 31 GROUP7 button and indicator
- 32 GROUP8 button and indicator
- 33 GROUP FILE button
- 34 FILTER switch
- 35 ≡ OPEN/CLOSE button
- 36 ▷ button and indicator
- 37 || button and indicator
- 38 ■ button

– Rear Panel –

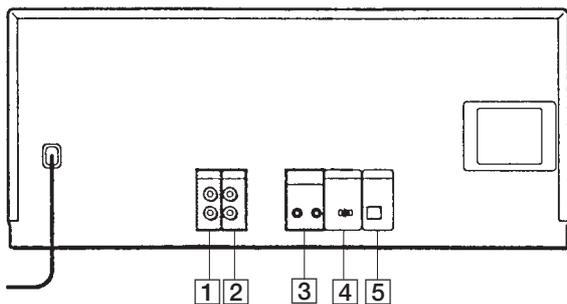

- 1 2ND CD IN jack
- 2 LINE OUT jack
- 3 CONTROL A1II jack
- 4 COMMAND MODE CD switch
- 5 DIGITAL OUT OPTICAL output terminal

SECTION 3 DISASSEMBLY

Note: Follow the disassembly procedure in the numerical order given.

FRONT PANEL ASSEMBLY



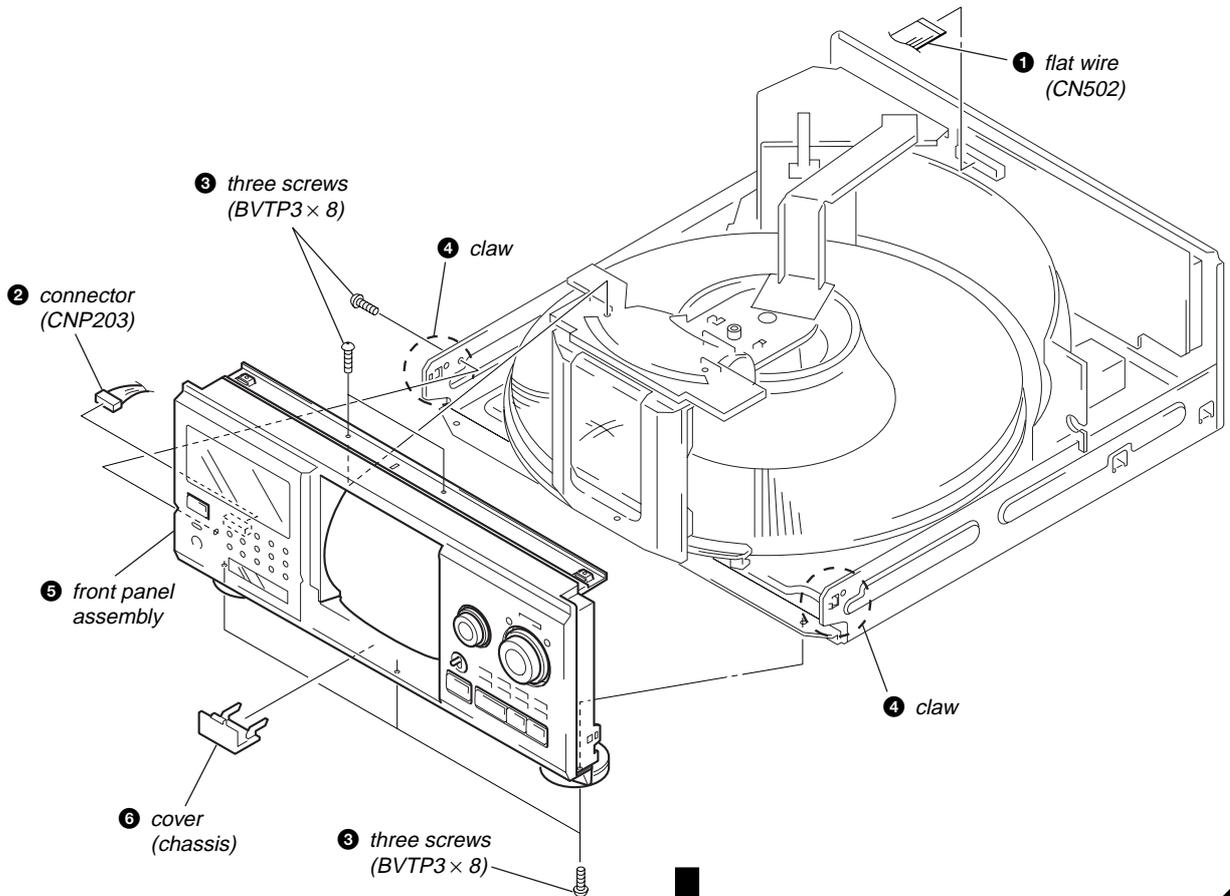



TABLE (300) ASSEMBLY

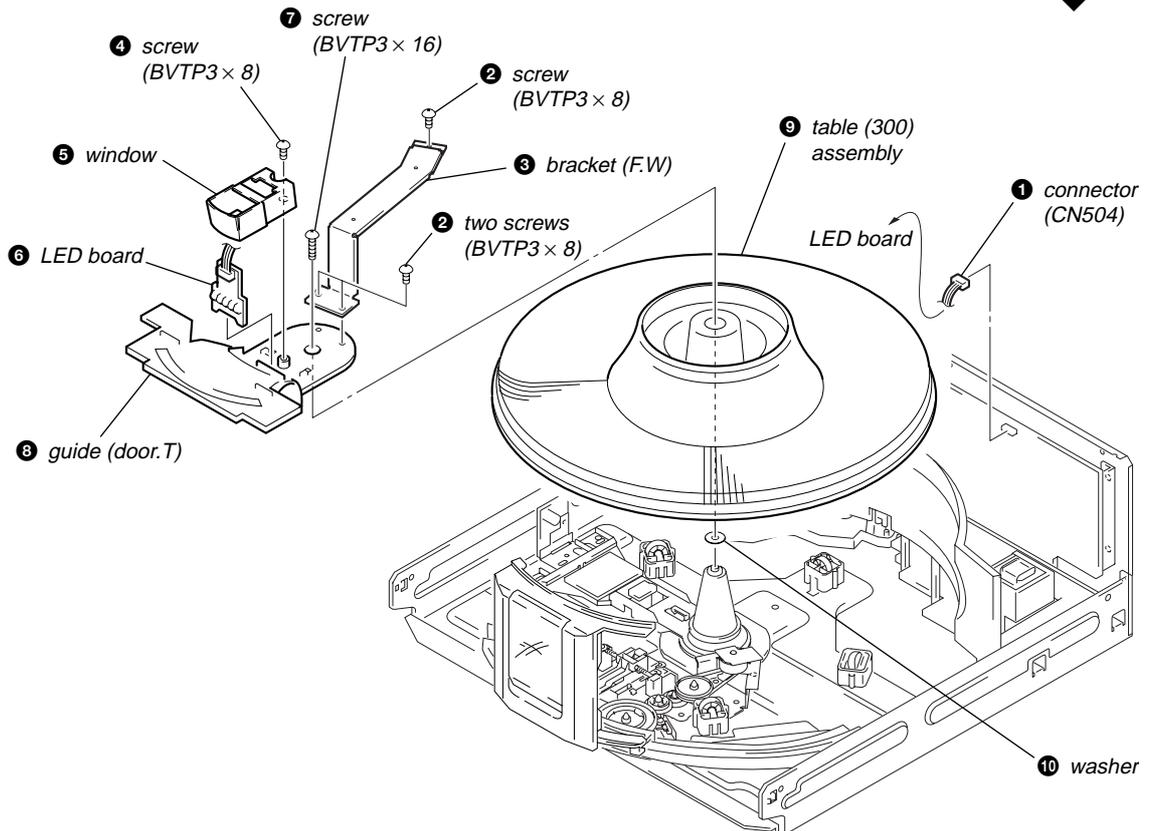


BASE (DOOR, GEAR) ASSEMBLY AND COVER (P.T.)

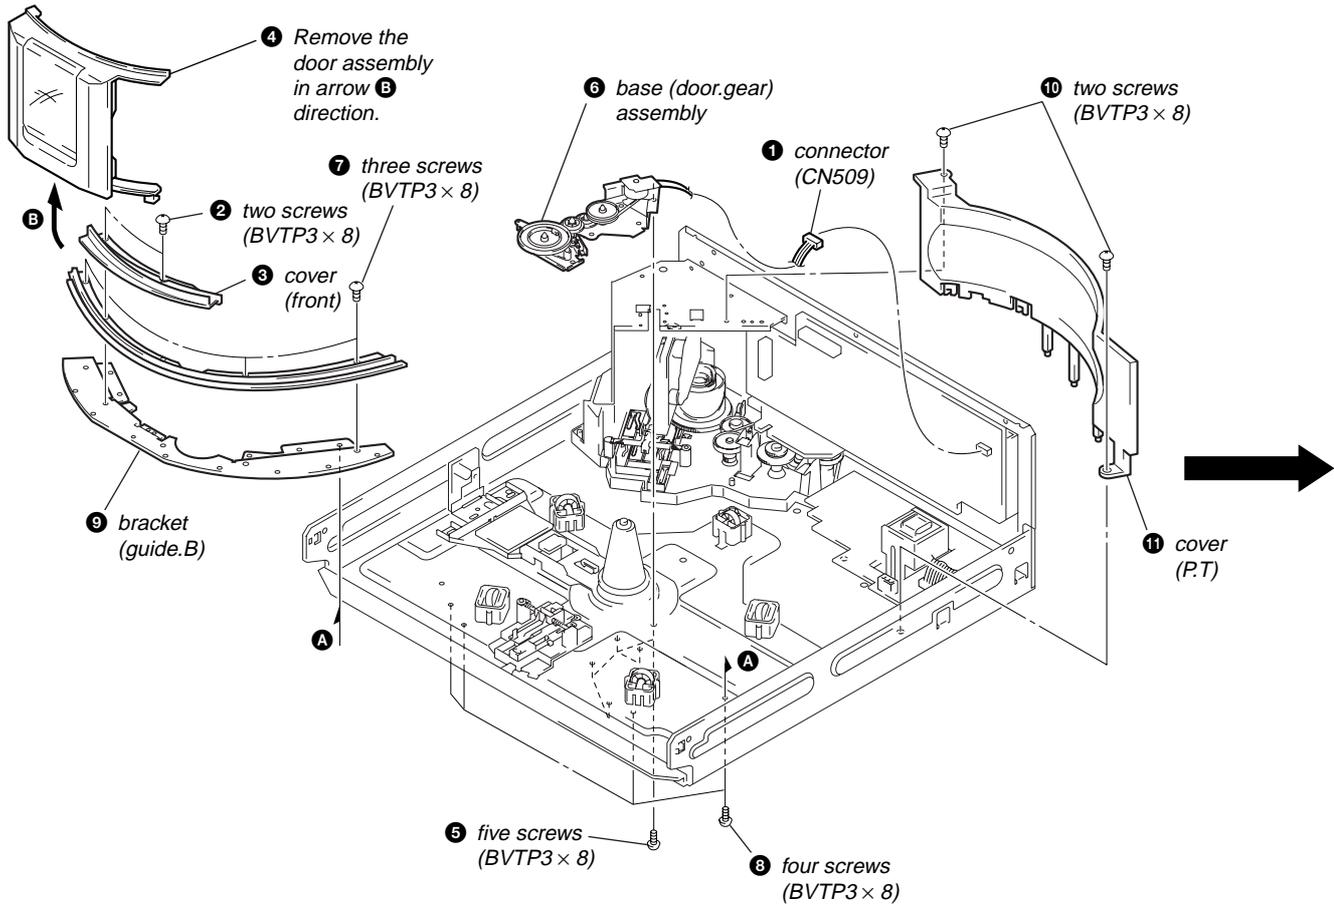


POP-UP ASSEMBLY

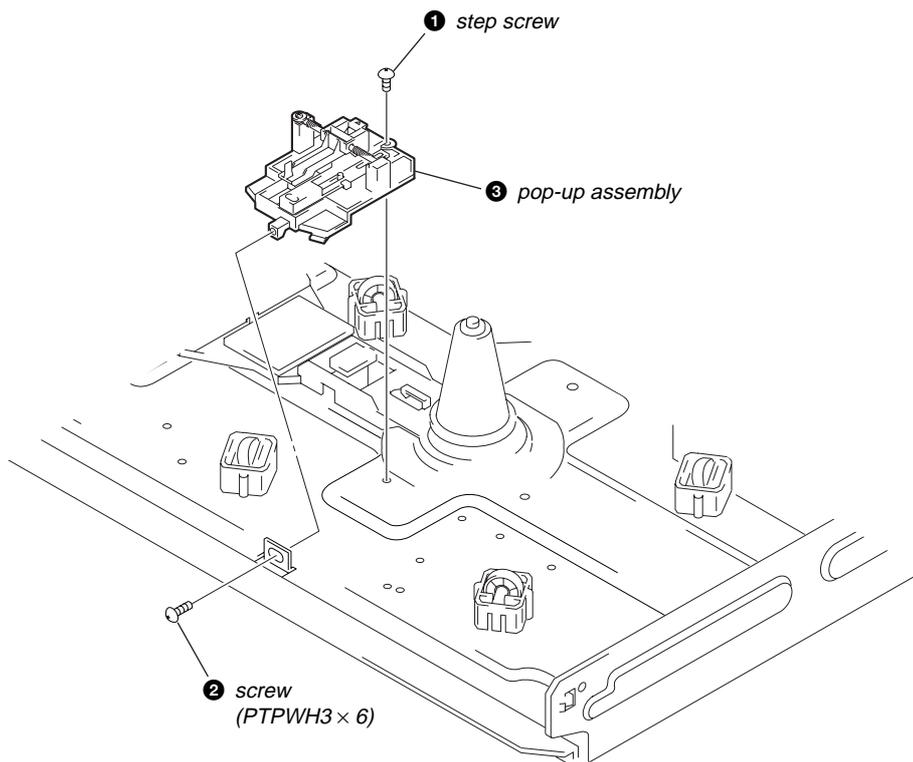

MAIN BOARD AND BACK PANEL SECTION

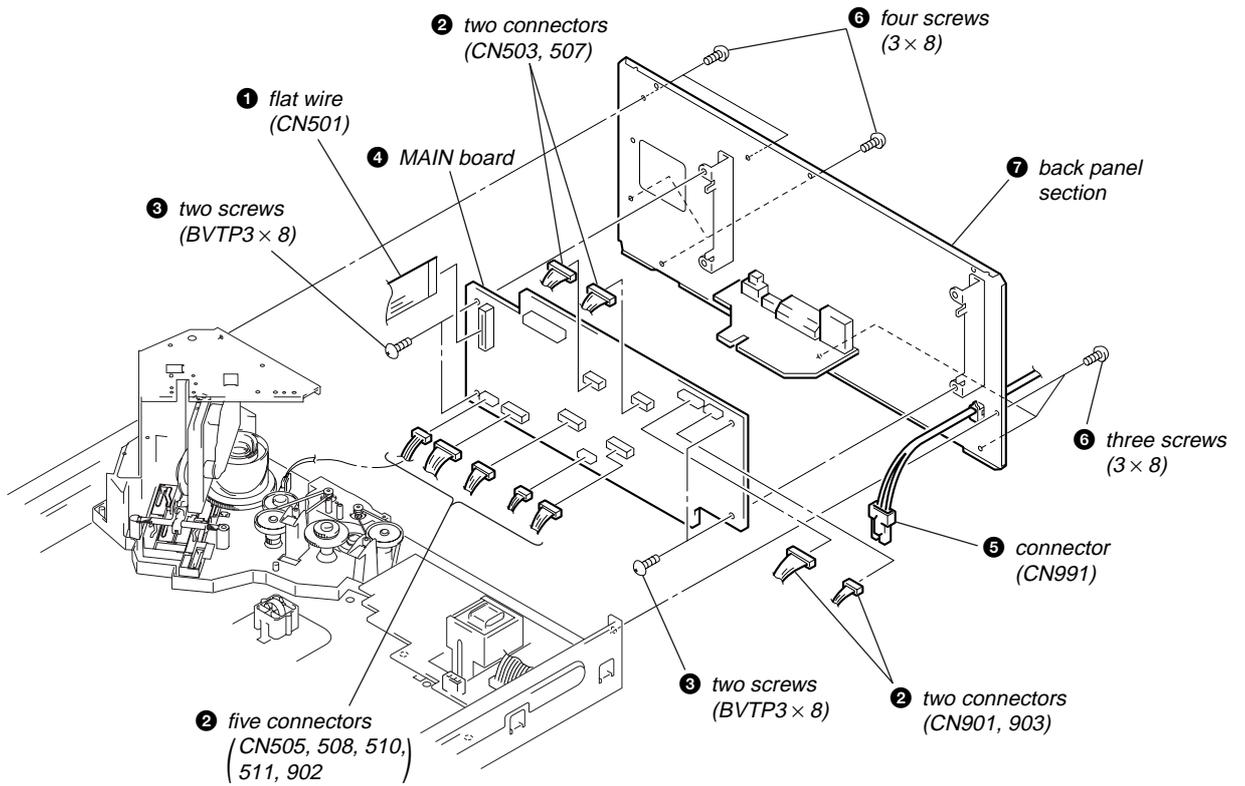

POWER BOARD AND CDM ASSEMBLY

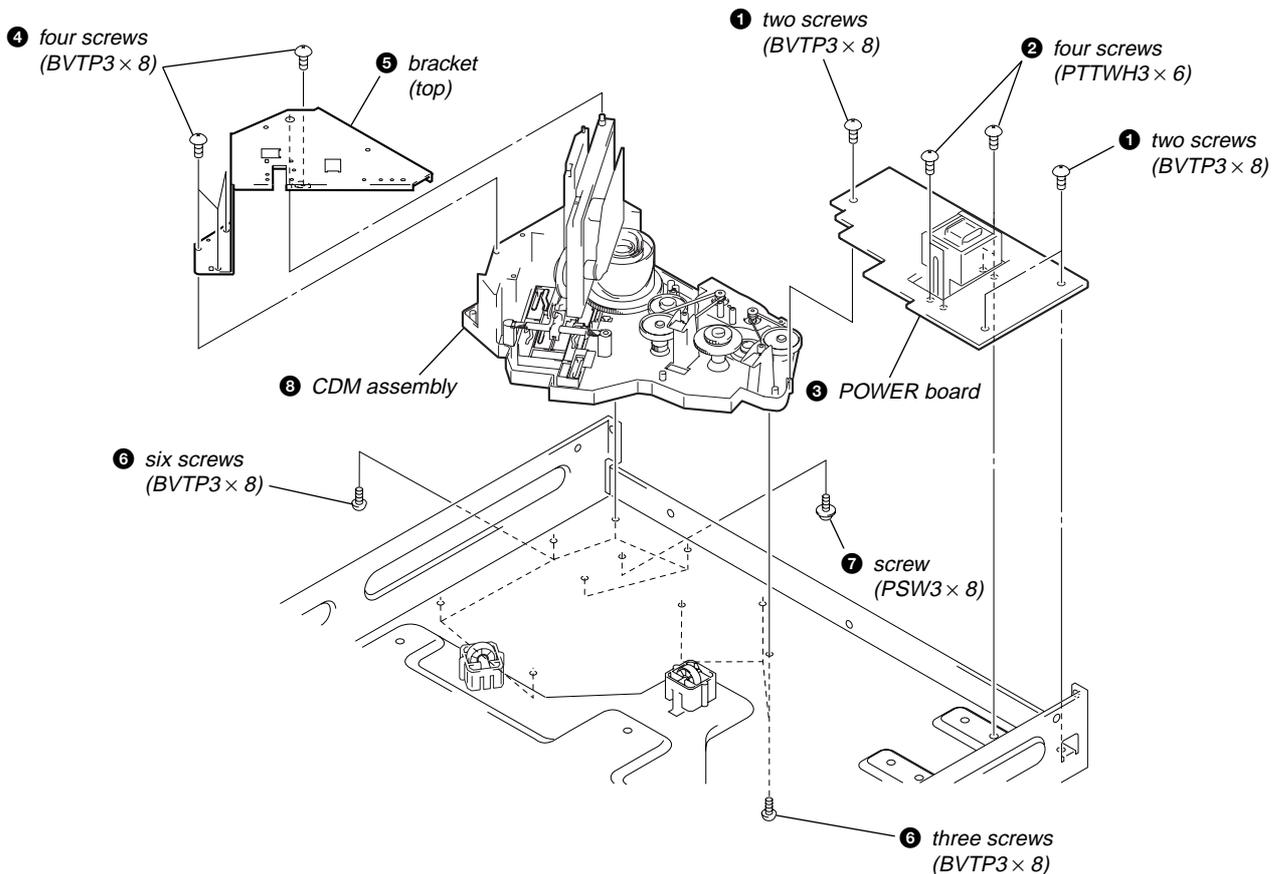

SECTION 4 SERVICE MODE

SPECIAL FUNCTION

This unit is provided with several service modes. Details are shown in the following table.

| Mode name | Power supply state | Button operation | Remarks |
|---------------------------------|--------------------|-----------------------------------|--------------------|
| ALL ERASE | OFF | [CLEAR] + [I/⏻] | Note 1 |
| AGING MODE | ON | [GROUP 1] + [OPEN/CLOSE] + [+100] | |
| LOADING AGING MODE | ON | [GROUP 2] + [OPEN/CLOSE] + [+100] | |
| TABLE AGING MODE | ON | [GROUP 3] + [OPEN/CLOSE] + [+100] | |
| DOOR POP UP AGING MODE | ON | [GROUP 4] + [OPEN/CLOSE] + [+100] | |
| TABLE LOTATION MODE | ON | [GROUP 5] + [OPEN/CLOSE] + [+100] | Used in adjustment |
| TITLE MEMO SHIFT MODE | ON | [GROUP 7] + [OPEN/CLOSE] + [+100] | |
| MODEL NAME DISPLAY | ON | [GROUP 1] + [▶] + [+100] | |
| MICROPROCESSOR VERSION DISPLAY | ON | [GROUP 2] + [▶] + [+100] | |
| ALL LIT MODE | ON | [GROUP 3] + [▶] + [+100] | |
| MECHANISM ADJUSTMENT MODE | ON | [GROUP 4] + [▶] + [+100] | |
| SHIPMENT MODE | ON | [GROUP 5] + [▶] + [+100] | Note 1 |
| TITLE MEMO RECORDING CHECK MODE | ON | [GROUP 6] + [▶] + [+100] | Note 1 |

Note 1

Do not execute unless with a proper reason, otherwise the memory of the title memo recorded by the customer will be erased. The title memo recording check mode is not required for servicing. Do not execute.

ALL ERASE

This mode is used for clearing information such as the title memo. Do not execute if information such as the title memo is not to be erased.


Procedure:

While pressing the [CLEAR] button with the power OFF, press the [I/⏻] button and turn on the power. The fluorescent indicator tube displays "ALL ERASE" and all memories will be cleared.


AGING MODE

- Mode which repeatedly changes and plays back discs automatically in the unit.
- It will repeat aging as long as no errors occur.
- If an error occurs during aging, it will stop all servos, motors, etc. instantaneously, display the error number, and stop operations. However, the stopping conditions differ according to whether the unit is equipped with the "self-protection function during errors" described later. The function serves to maintain the state of the unit when errors occur.

Sequence of Aging Mode

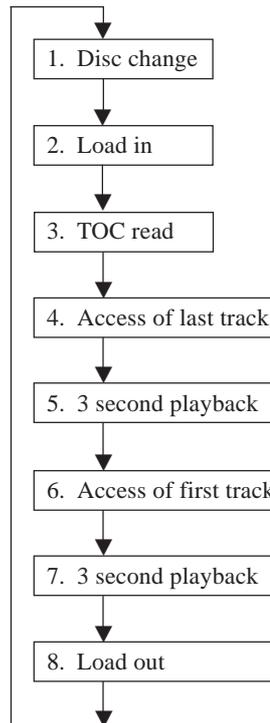

Order of Disc Change

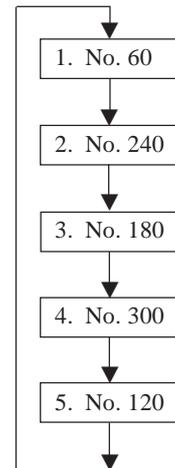

Special Aging Mode Functions

The aging mode is provided with the following convenient functions

- Disc setting mode (*1)
- Selection of presence of protection function during error (*2)
- Count function of aging cycle (*3)

*1 Disc setting mode:

5 discs are set before setting the aging mode. This mode makes the setting of these discs more easy.

*2 Self protection function during errors:


Function which voluntarily corrects errors which occur during normal operations by retries.

If this function is not provided, all operations will be stopped without retiring. It is suitable for checking errors with low reproducibility.

If this function is provided, and errors can be corrected by retries, aging will be continued without stopping.

*3 Aging cycle count function:


Functions which displays the number of agings carried out on the Fluorescent indicator tube in numbers. One aging cycle consists of five discs.

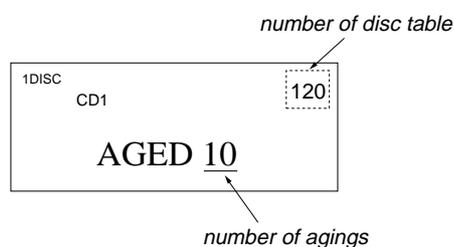

Aging Procedure

1. Turn ON the power of the unit. Press the **OPEN/CLOSE** button and open the front cover.
2. Change the **COMMAND MODE** switch (S901) on set to **CD1**.
3. Press the **AGING START** button of the remote commander for aging mode (J-2501-123-A).
4. When the disc set mode is set, the **▶** and **■** LEDs blink.
5. Rotate the **DISC/CHARACTER** dial. The slits (No. 60, 120, 180, 240, 300) for setting the discs will come forward. Insert the discs into these slits. Do not set the discs in other slits.
6. Set whether the self-protection function during errors is equipped with the unit. Press the **REPEAT** button. If "REPEAT" is displayed on the fluorescent indicator tube, it means the function is provided. If "REPEAT" is not displayed, it means the function is not provided.

Error Display

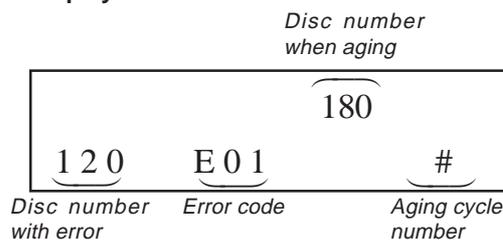

7. Press the **▶** button.
8. The **▶** LED blinks, the aging mode is set, and aging is started.
9. If errors occur during aging, the error number will be displayed on the fluorescent indicator tube. (Refer to the following table for the details of the errors.)
10. Aging will be repeated as long as no errors occur.
11. After each aging cycle, the number displayed on the fluorescent indicator tube will increase.
12. To release this mode, press the **I/O** button.

Note: As an alternative to steps 2 and 3, press the **GROUP 1** button, **OPEN/CLOSE** button, and **+100** button at the same time.

Error code

| Code number | Name | Contents |
|-------------|---------------------------|---|
| Err 01 | DISC sensor check 1 | No disc in the specified slit |
| Err 02 | DISC sensor check 2 | Disc in other slits |
| Err 03 | Table operation check 1 | Table motor current over |
| Err 04 | Table operation check 2 | No table sensor input |
| Err 05 | Loading operation check 1 | Load in timeover |
| Err 06 | Loading operation check 2 | Load out timeover |
| Err *1 | BU related check 1 | Access timeover |
| Err *2 | BU related check 2 | High speed search NG |
| Err *3 | BU related check 3 | Q data read error |
| Err *4 | BU related check 4 | BU operation (from focus search to until signal can be read) timeover |
| Err *5 | BU related check 5 | GFS monitor error |
| Err *6 | BU related check 6 | Focus cannot be imposed by focus search |
| Err *7 | BU related check 7 | Auto focus bias adjustment cannot be performed |

The * numbers mean the following according to the state of the unit during aging

- 2 : From chucking to end of TOC read
- 3 : From end of TOC read to end of last track playback
- 4 : From end of last track playback to end of first track playback

LOADING AGING MODE

- This mode is used for repeating loading operations continuously.
- Aging will be performed continuously unless an error occurs.
- When an error occurs, the error code will be displayed on the fluorescent indicator tube.

Procedure:

1. Set a disc in the DISC 1 slit.
2. With the power ON, while pressing the **GROUP 2** button and **OPEN/CLOSE** button, press the **+100** button.
3. When the mode is set, both the **▶** and **■** indicators will start to blink.
4. When the **▶** button is pressed, only the **▶** indicator will blink and aging starts.
5. To release the mode, press the **I/O** button.

The error codes displayed during operations and when errors occur are the same as the “AGING MODE” described earlier.

TABLE AGING MODE

- This mode is used for rotating the table randomly.
- Aging will be performed continuously unless an error occurs.
- When an error occurs, the error code will be displayed on the fluorescent indicator tube.

Procedure:

1. Set discs in slits 1, 2, 99, 100, and 200.
2. With the power ON, while pressing the **GROUP 3** button and **OPEN/CLOSE** button, press the **+100** button.
3. When the mode is set, both the **▶** and **■** indicators will start to blink.
4. When the **▶** button is pressed, only the **▶** indicator will blink and aging starts.
5. To release the mode, press the **I/O** button.

During aging, operations will be carried out sequentially in the order of No. 1, No. 2, No. 100, No. 99, and No. 200 slits.

The error codes displayed during operations and when errors occur are the same as the “AGING MODE” described earlier.

DOOR POP UP AGING MODE

- This mode is used for performing aging of the CD pop up part and door open/close.

It is used for checking if operations are performed normally.

Procedure:

1. To select a slot to be aged, press the **OPEN/CLOSE** button and rotate the **DISC/CHARACTER** knob with the front door opened to select a number.
2. With the power ON, while pressing the **GROUP 4** button and **OPEN/CLOSE** button, press the **+100** button.
3. When the **▶** button is pressed, aging starts, and door open/close and up/down operations of the pop up part are performed continuously.
4. To release the mode, press the **I/O** button.

The number of times aging is performed will be displayed on the fluorescent indicator tube during operations.


TABLE ROTATION MODE

- This mode is used for electrical adjustments. Refer to the section on Electrical Adjustments.

TITLE MEMO SHIFT MODE

- This mode is used for writing title memo information recorded in this unit in a different unit.
Use it for transferring disc memo contents written by the customer to the new units when replacing the unit, etc.

Connection:

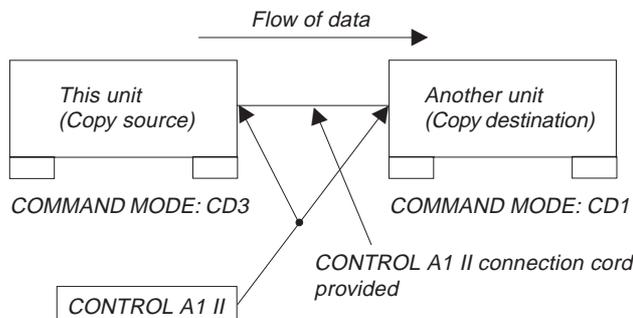

Procedure:

1. Connect two units using the **CONTROL A1 II** connection cord shown in the figure.
2. Set the **COMMAND MODE** switch of the copy source unit to **CD3** and the **COMMAND MODE** switch of the copy destination unit to **CD1**.
3. With the power on, while pressing the **GROUP 7** button and **OPEN/CLOSE** button of the copy destination unit, press the **+100** button.
4. When the data has been transferred, the fluorescent indicator tube displays “complete” for about 1 second.

MODEL NAME DISPLAY

- Model names can be displayed on the fluorescent indicator tube for checking the microprocessor model setting, etc.

Procedure:

With the power ON, while pressing the **GROUP 1** and **▶** buttons, press the **+100** button.
The model name is displayed on the fluorescent indicator tube.

MICROPROCESSOR VERSION DISPLAY

- The microprocessor version can be displayed on the fluorescent indicator tube.

Procedure:

With the power ON, while pressing the **GROUP 2** and **▶** buttons, press the **+100** button.
The microprocessor version is displayed on the fluorescent indicator tube.

ALL LIT MODE

- This mode is used for lighting the whole fluorescent indicator tubes and LEDs.

Procedure:

With the power ON, while pressing the **GROUP 3** and **▶** buttons, press the **+100** button.
Both the fluorescent indicator tubes and LEDs will light up completely.
To release this mode, press the **I/O** mode.

MECHANISM ADJUSTMENT MODE

- This mode is used for mechanism adjustments. Refer to the section on Mechanism Adjustments.

SHIPMENT MODE

- This mode is used for setting the unit to the shipment state. Do not execute it without a proper reason as it erases the memory of the title memo recorded by the customer.

Procedure:

Set the **COMMAND MODE** switch to **CD1** and the **TIMER** switch to **OFF**. Next, with the power ON, while pressing the **GROUP 5** button and **▷** button, press the **+100** button. If the switch state is normal, the model name will be displayed on the fluorescent indicator tube and the unit will set into the shipment mode.

If the various switches are not set to their designated positions, error codes will be displayed on the fluorescent indicator tube.

TITLE MEMO RECORDING CHECK MODE

This mode is not required for servicing. Do not execute without a proper reason.

If executed, the memory of the title memo recorded by the customer will be erased.

SECTION 5 TEST MODE

5-1. ADJ MODE

1. Turn ON the power of the unit, set disc to disc table, and perform chucking.
2. Remove the power cord from the outlet.
3. To set ADJ mode, connect the ⑥1 pin of IC501 (ADJ) of the MAIN board to ground, and connect the power cord to the outlet.

In this mode, table rotation and loading operations are not performed because it is taken that the disc has already been chucked.

- Note:** The same operations are also performed in the following when the ⑥1 pin of IC501 (ADJ) is connected to ground after turning on the power.
- Direct search (movement of sledding motor) is not performed during accessing
 - Ignored even when GFS becomes L
 - Ignored even when the Q data cannot be read
 - Focus gain does not decrease

ADJ Mode Special Functions Table

| Button | Function |
|-------------|--|
| CONTINUE | Servo average display Displays VC, FE, RF, TE and traverse in hexadecimal numbers |
| SHUFFLE | Focus bias display Each time this is pressed, the focus bias is switched between 1 and 2 (1) Bias actually set Optimum bias Minimum jitter (2) U:Upper aliasing bias L:Lower aliasing bias |
| PROGRAM | Auto gain display Displays focus, tracking, sledding in hexadecimal numbers |
| GROUP 3 (3) | Turns off the tracking and sledding servo |
| GROUP 8 (8) | Turns on the tracking and sledding servo |
| CHECK | S-curve observation mode. (Release this mode when the I/c button is pressed.) |

5-2. KEY AND DISPLAY CHECK MODE

To set this mode, connect the ⑥0 pin of IC501 (AFADJ) on the MAIN board to ground, and connect the power cord to the outlet.

- Note:** When this mode is executed, all title memos recorded will be erased.
- When this button is pressed, "line # No. #" will be displayed. However, these will not be displayed for the following special buttons. However, these will not be displayed for the following special buttons.

- (stop) button : FL segment check
(Refer to FL Tube Check Patterns)
- ▬ (pause) button : FL grid check
(Refer to FL Tube Check Patterns)
The ▬ LED also lights up simultaneously.
- ▶ (play) button : All FL segment and grid will light up.
▶ LED also lights up simultaneously.
- TIMER switch : When the switch position is **PLAY**, the **STANDBY** LED lights up. It goes OFF when set to **OFF**.

Each time this button is pressed, the value of the "Go+ ## keys" increases. Buttons pressed once will not be counted when pressed again.

FL Tube Check Patterns

Segment check



Grid check




- When the jog dial is rotated to the right, the GROUP LEDs light up in the order of 1→2..8→HIT LIST→EASY PLAY→MEGA CONTROL→1.
- When the jog dial is rotated to the left, the GROUP LEDs light up in the order of 8→7..1→MEGA CONTROL→EASY PLAY→HIT LIST→8.

- Abbreviation
FL: Fluorescent Indicator Tube

• Checking Location

– MAIN BOARD (Conductor Side) –

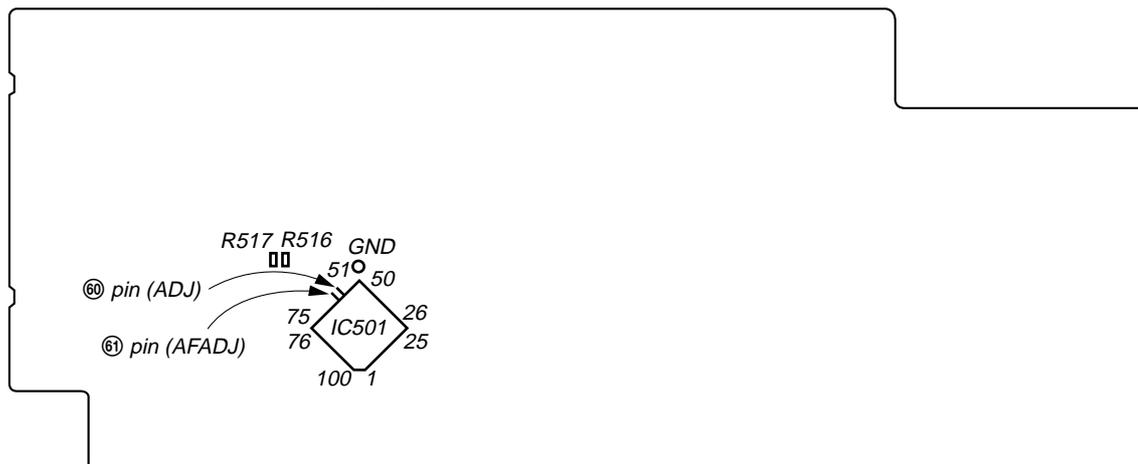

SECTION 6 MECHANICAL ADJUSTMENTS

POP UP MECHANISM ADJUSTMENT

1. With the power ON, while pressing the **GROUP 4** and  buttons, press the **+100** button to enter the mechanism adjustment mode.
2. Press the **GROUP 1** button to operate the loading mechanism, and continue pressing until the disc table locks. (Fig-1)
3. Press the **GROUP 2** button to raise the pop up part.
4. Remove the cover (chassis), loosen the adjusting screw, move the screwdriver left and right until the lever (POP UP) does not touch the slit wall, and secure the screw. (Fig-2)

The following buttons have special functions in this mode.

- GROUP 1** button: Loading mechanism IN operation
- GROUP 5** button: Loading mechanism OUT operation
- GROUP 2** button: Pop up part UP operation
- GROUP 6** button: Pop up part DOWN operation

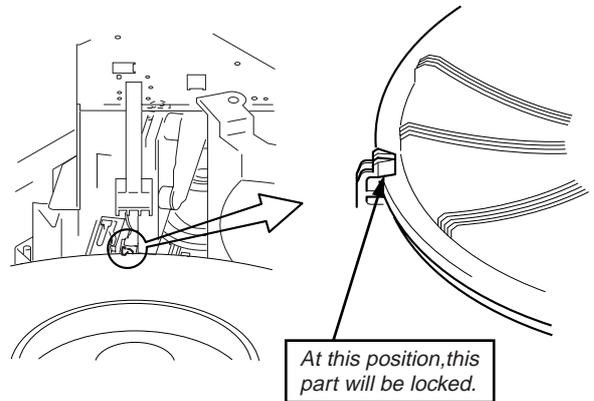
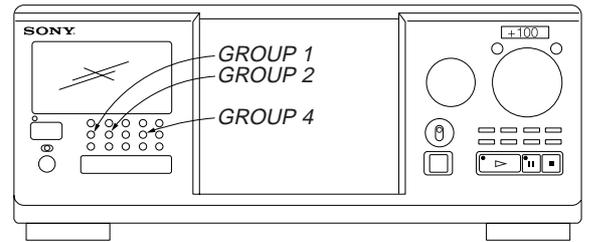


Fig-1

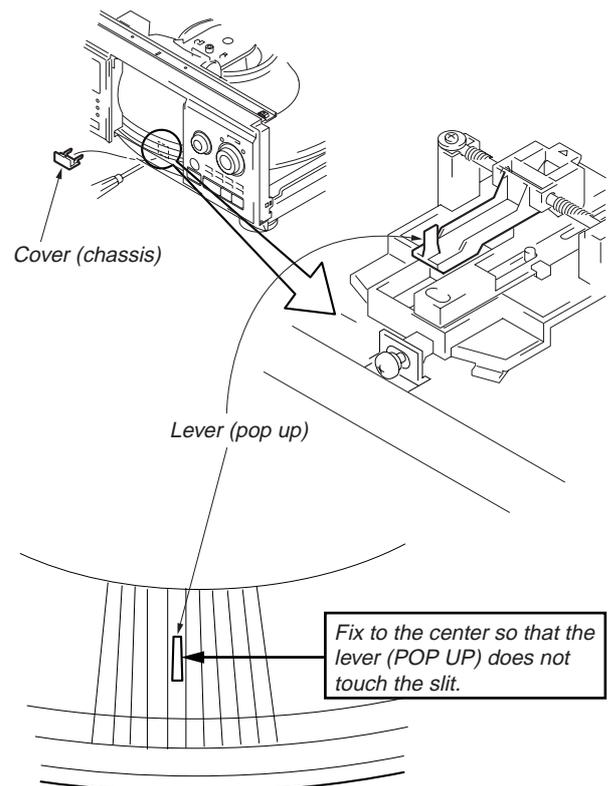


Fig-2

SENSOR ADJUSTMENT

1. With the power ON, while pressing the **GROUP 4** and **▶** buttons, press the **+100** button to enter the mechanism adjustment mode.
2. Press the **GROUP 1** button to operate the loading mechanism, and continue pressing until the disc table locks. (Fig-3)
3. Loosen the fixing screw, move the holder (TABLE SENSOR) slightly, and when the LED (green) of the **▶** button switches to the LED (orange) of the **■** button (or vice versa), secure the holder (TABLE SENSOR). (Fig-4)
4. Moving the disc table right and left with a hand after the screw is fixed, the table will move by the play of a disc table. If the LEDs light up alternately, the adjustment will be performed correctly. (Fig-4)

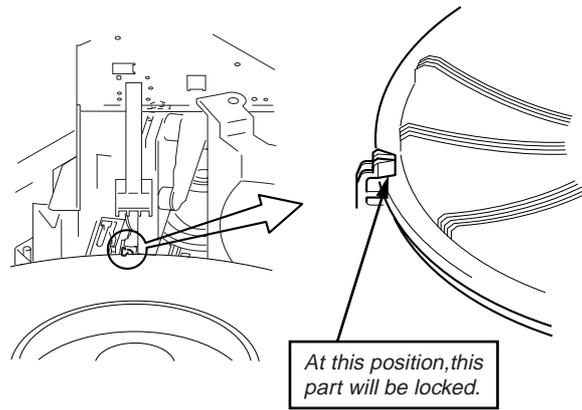
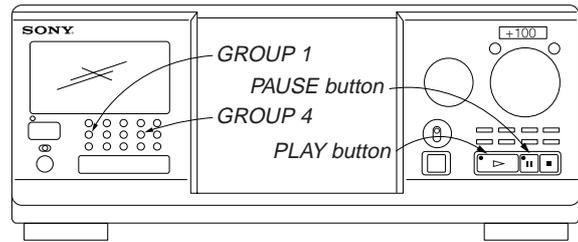


Fig-3



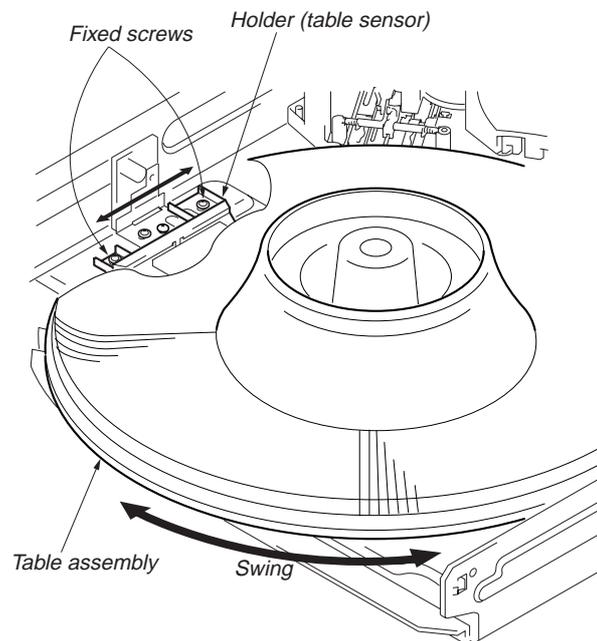


Fig-4

SECTION 7 ELECTRICAL ADJUSTMENT

1. CD Block is basically designed to operate without adjustment. Therefore, check each item in order given.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use an oscilloscope with more than 10 MΩ impedance.
4. Clean the object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.


S-Curve Check

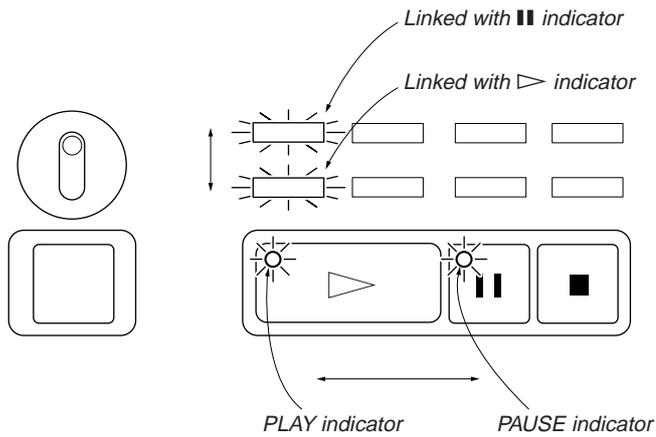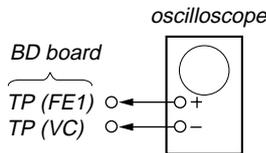

Procedure :

1. Chuck the disc (YEDS-18) beforehand, and remove the power cord from the outlet.
2. Connect oscilloscope to test point TP (FE1) on BD board.
3. Connect ⑨ pin of IC501 (ADJ) on MAIN board to ground with lead wire.
4. The ADJ mode is set when the power cord is inserted into the outlet and power is supplied.
5. The fifth track is played automatically.
6. Press the **CHECK** button.
7. Check the oscilloscope waveform (S-curve) is symmetrical between A and B. And confirm peak to peak level within 3 ± 1 Vp-p.


S-curve waveform

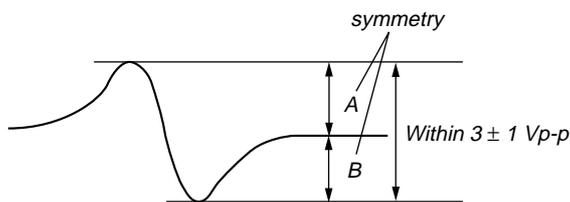

8. Pressing the **I/O** button stops the output of the waveform (s curve).
 9. After check, disconnect the lead wire connected in step 3.
- Note :**
- Try to measure several times to make sure than the ratio of A : B or B : A is more than 10 : 7.
 - Take sweep time as long as possible and light up the brightness to obtain best waveform.

Adjustment Location: BD board

RF Level Check

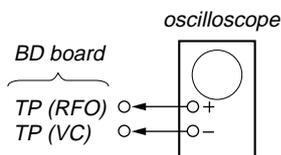


Procedure :

1. Connect oscilloscope to test point TP (RFO) on BD board.
2. Turn Power ON.
3. Put disc (YEDS-18) in to play the number five track.
4. Confirm that oscilloscope waveform is clear and check RF signal level is correct or not.


Note: A clear RF signal waveform means that the shape “◇” can be clearly distinguished at the center of the waveform.

RF signal waveform

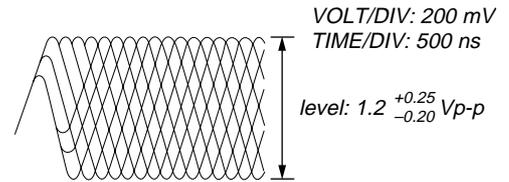

Adjustment Location: BD board


E-F Balance Check

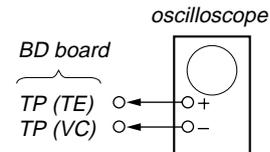

Procedure :


1. Chuck the disc (YEDS-18) beforehand, and disconnect the power cord from the outlet.
2. Connect oscilloscope to test point TP (TE) on BD board.
3. Connect ⑨ pin of IC501 (ADJ) on MAIN board to ground with lead wire.
4. The ADJ mode is set when the power cord is inserted into the outlet and power is supplied.
5. The fifth track is played automatically.
6. Press the **GROUP 3** button. (The tracking servo and the sledging servo are turned OFF.)
7. Check the level B of the oscilloscope waveform and the A (DC voltage) of the center of the Traverse waveform. Confirm the following :
 $A/B \times 100 = \text{less than } \pm 22\%$

Traverse waveform

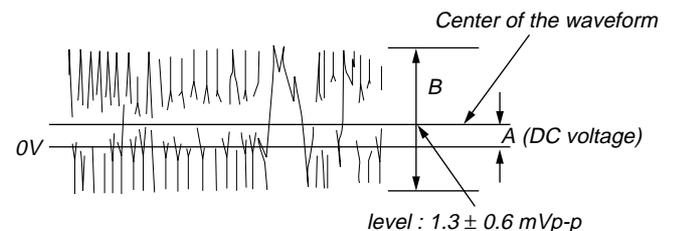

8. Press the **GROUP 8** button. (The tracking servo and sledging servo are turned ON.) Confirm the C (DC voltage) is almost equal to the A (DC voltage) is step 7.

Traverse waveform

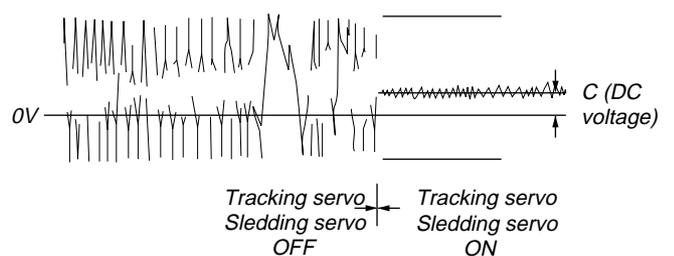


9. Disconnect the lead wire connected in step 3.

Adjustment Location: MAIN board


Disc In Detect Sensor Adjustment

Be sure to perform this adjustment after sensor adjustment in MECHANICAL ADJUSTMENT.



Connection:

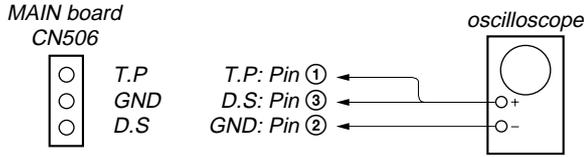

Waveform:

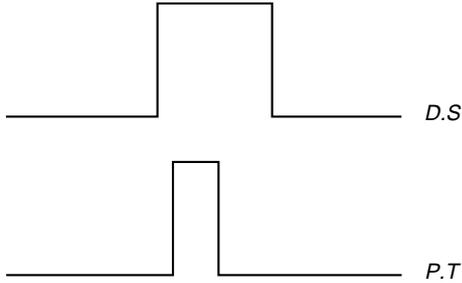


1. Connect the oscilloscope to Pins ①, ②, and ③ of CN506 of the MAIN board.
2. Check that no discs are loaded in the unit.
3. With the power ON, while pressing the **[GROUP 5]** and **[OPEN/CLOSE]** buttons, press the **[+100]** button. The disc table starts to rotate in the clockwise direction.
4. Loosen the fixing screw, move the mounting board (SENSOR), and secure the mounting board (SENSOR) at the point the H portion of the P.T waveform comes the center of the H portion of the D.S waveform.

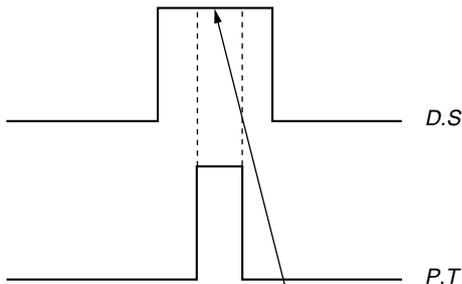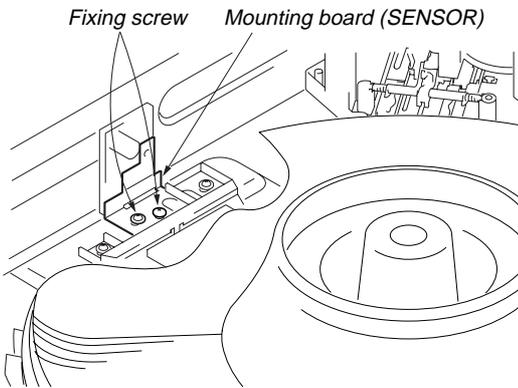

Should be at the center


5. Rotate the **[DISC/CHARACTER]** knob in the counterclockwise direction and the disc table starts to rotate in the same direction. Check that the waveform at this time is the same as that in step 4. If larger by a considerable extent, rotate the **[DISC/CHARACTER]** knob in the clockwise direction and the disc table starts to rotate in the same direction. Repeat from step 4.
6. Rotate RV501 of the MAIN board and adjust so that the H and L portions of the D.S waveform become the same.

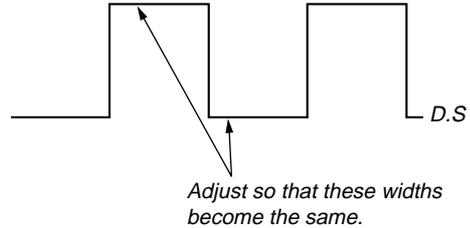


Adjustment Location: MAIN board

• Adjustment Location

– BD BOARD (Conductor Side) –

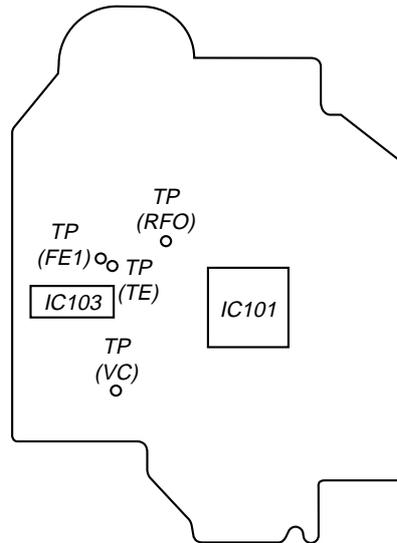


– MAIN BOARD (Component Side) –

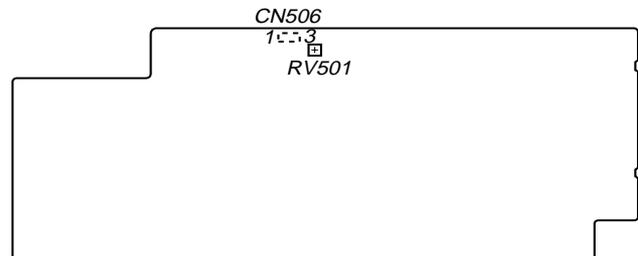

SECTION 8
DIAGRAMS


8-1. BLOCK DIAGRAM - BD Section -

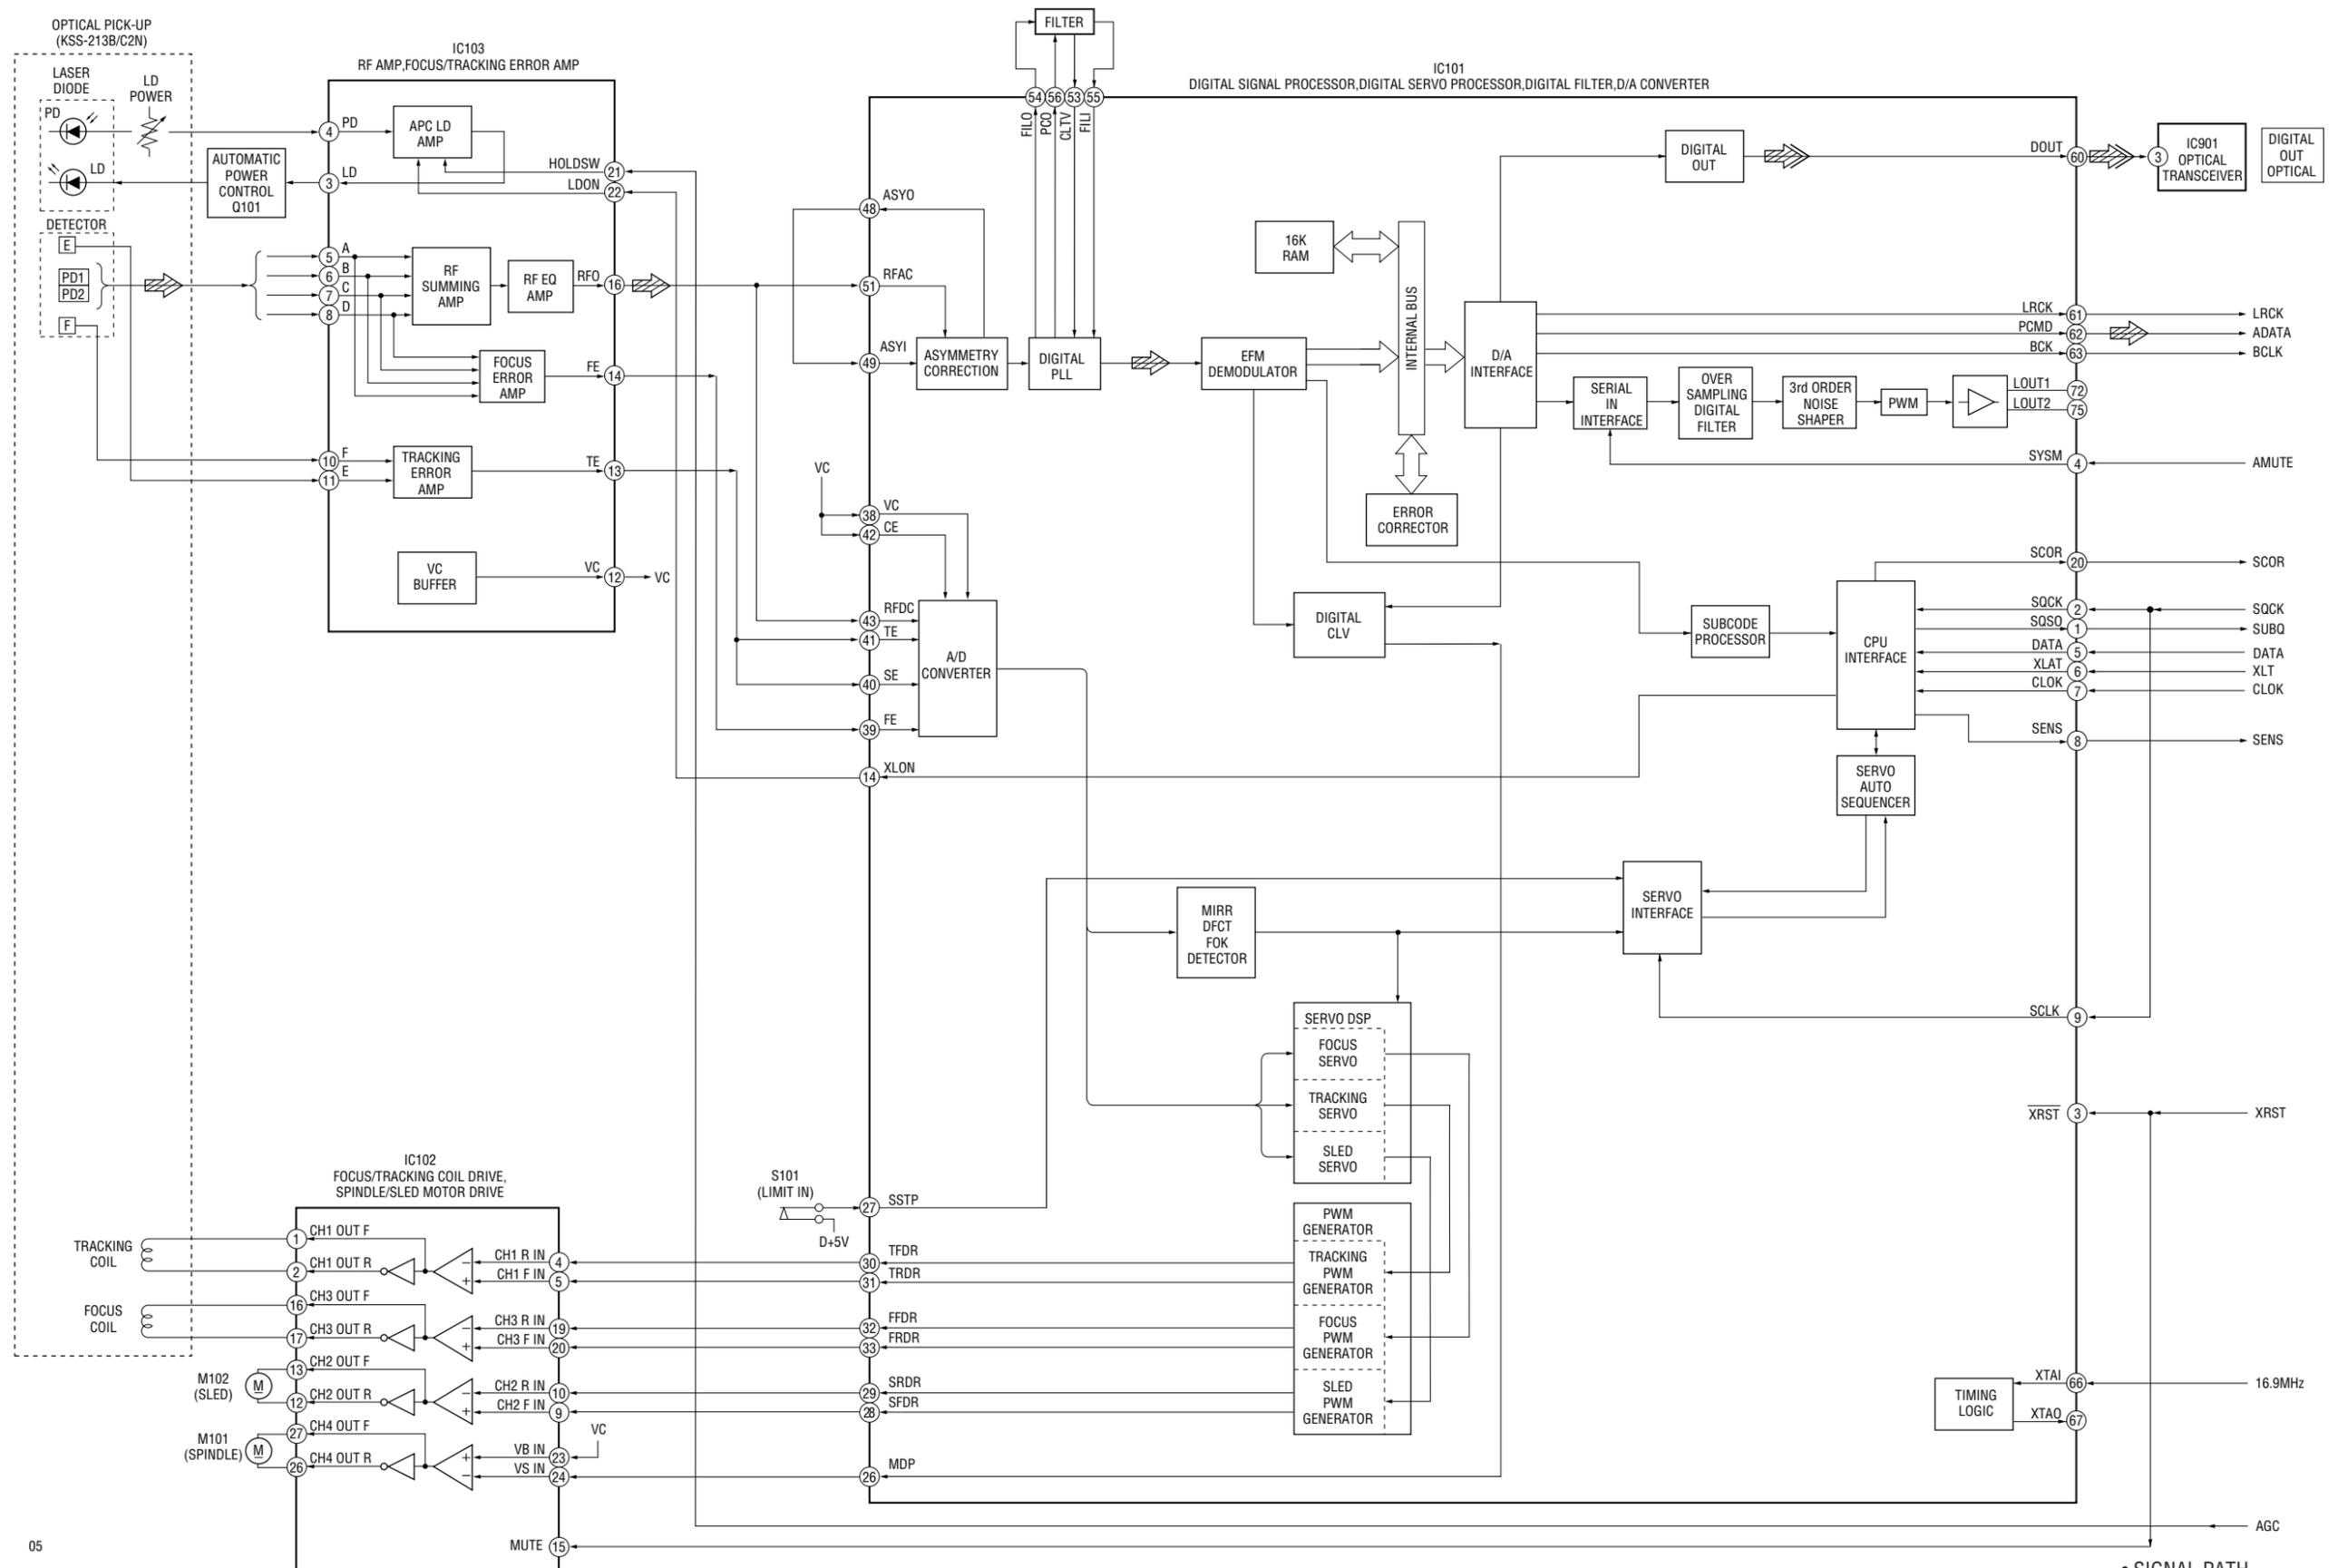

• SIGNAL PATH
 ⇨ : CD PLAY(ANALOG OUT)
 ⇨ : CD PLAY(DIGITAL OUT)

A
 MAIN SECTION
 (Page 22)

8-2. BLOCK DIAGRAM - MAIN Section -

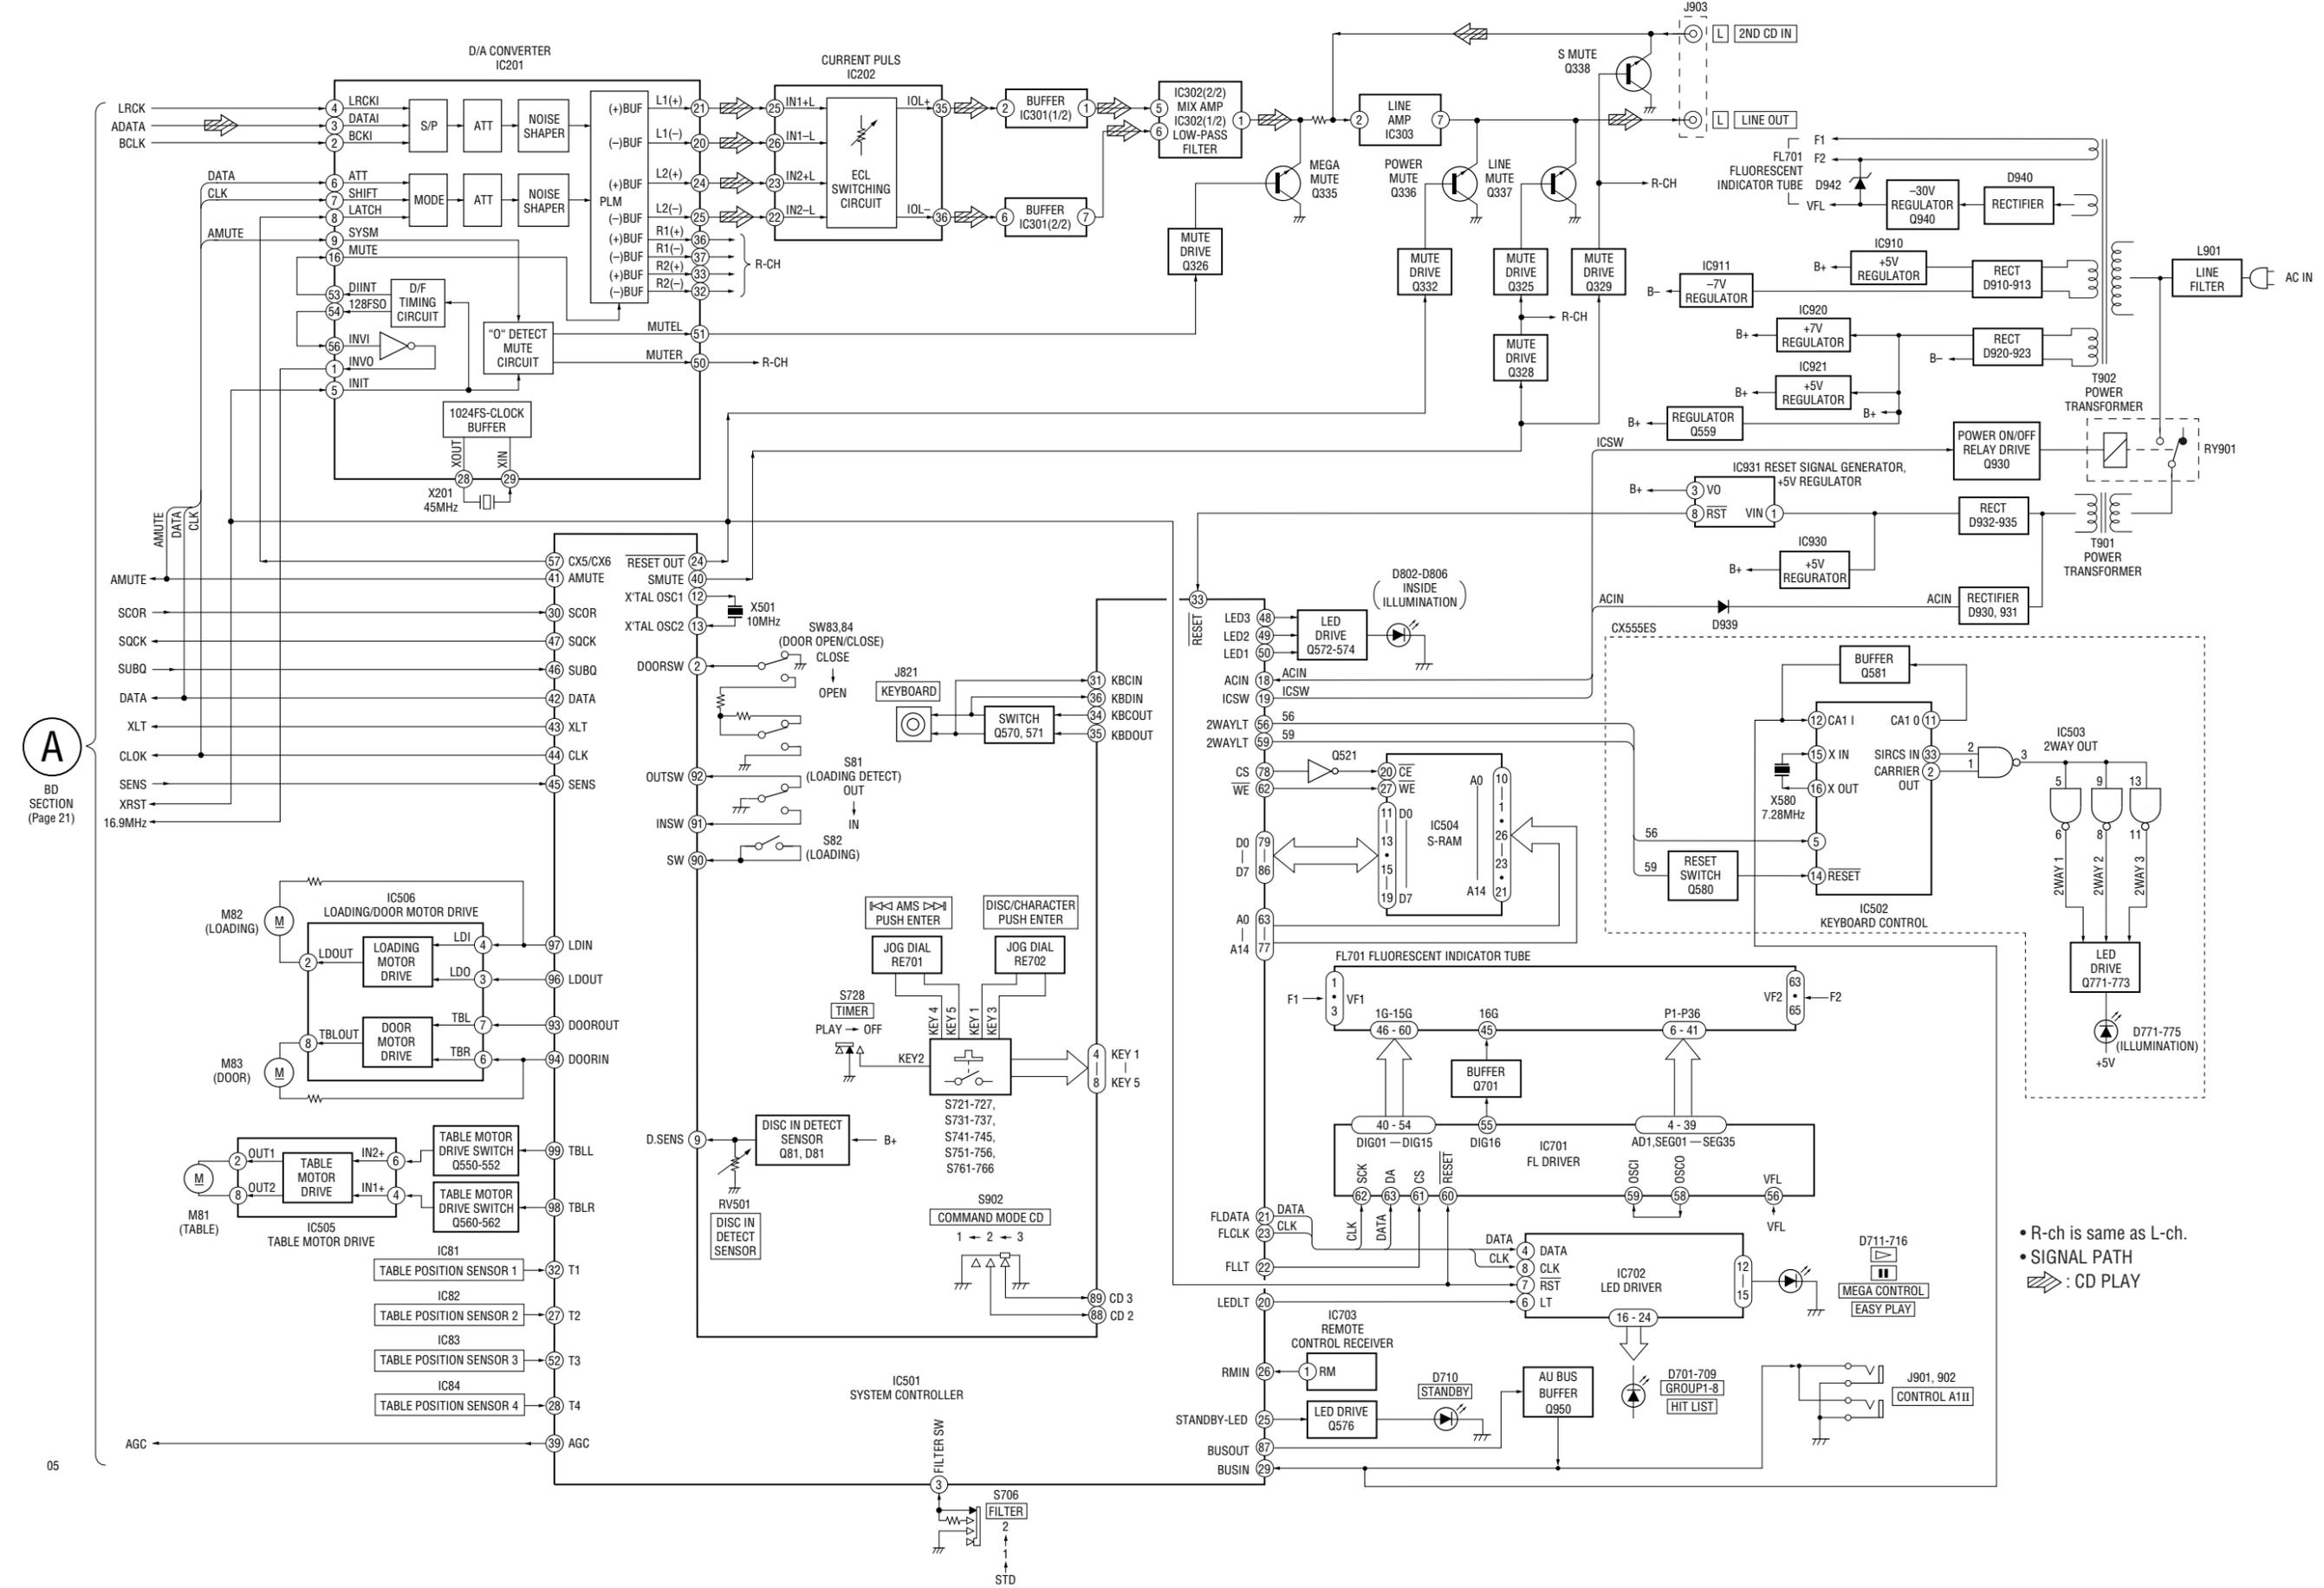

A
BD SECTION
(Page 21)

- R-ch is same as L-ch.
- SIGNAL PATH
- ▬ : CD PLAY

8-3. NOTE FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS


Note on Printed Wiring Board:

- : parts extracted from the component side.
- : parts extracted from the conductor side.
- : parts mounted on the conductor side.
- ▨ : Pattern from the side which enables seeing. (The other layers' patterns are not indicated.)

Caution:

Pattern face side: Parts on the pattern face side seen from the pattern face are indicated.
 (Conductor Side)
 Parts face side: Parts on the parts face side seen from the parts face are indicated.
 (Component Side)

- Indication of transistor.

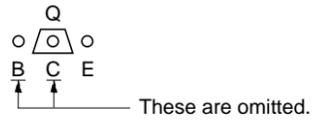

Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF: μF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4\text{W}$ or less unless otherwise specified.
- Δ : internal component.
- \square : panel designation.

Note:



The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Note:

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


- \square : B+ Line.
- \square : B- Line.
- \square : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal conditions. no mark : CD PLAY
- Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
 - ⇒ : CD PLAY (ANALOG OUT)
 - ⇒ : CD PLAY (DIGITAL OUT)

• Circuit Boards Location

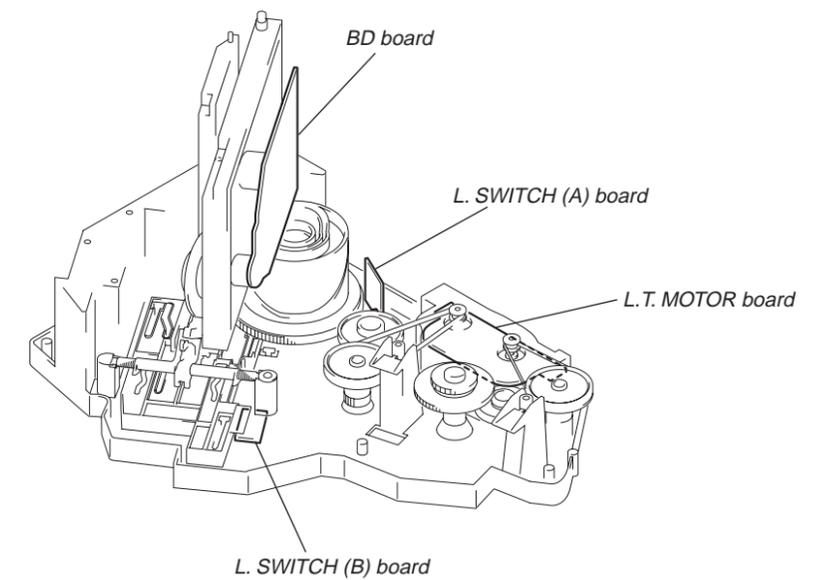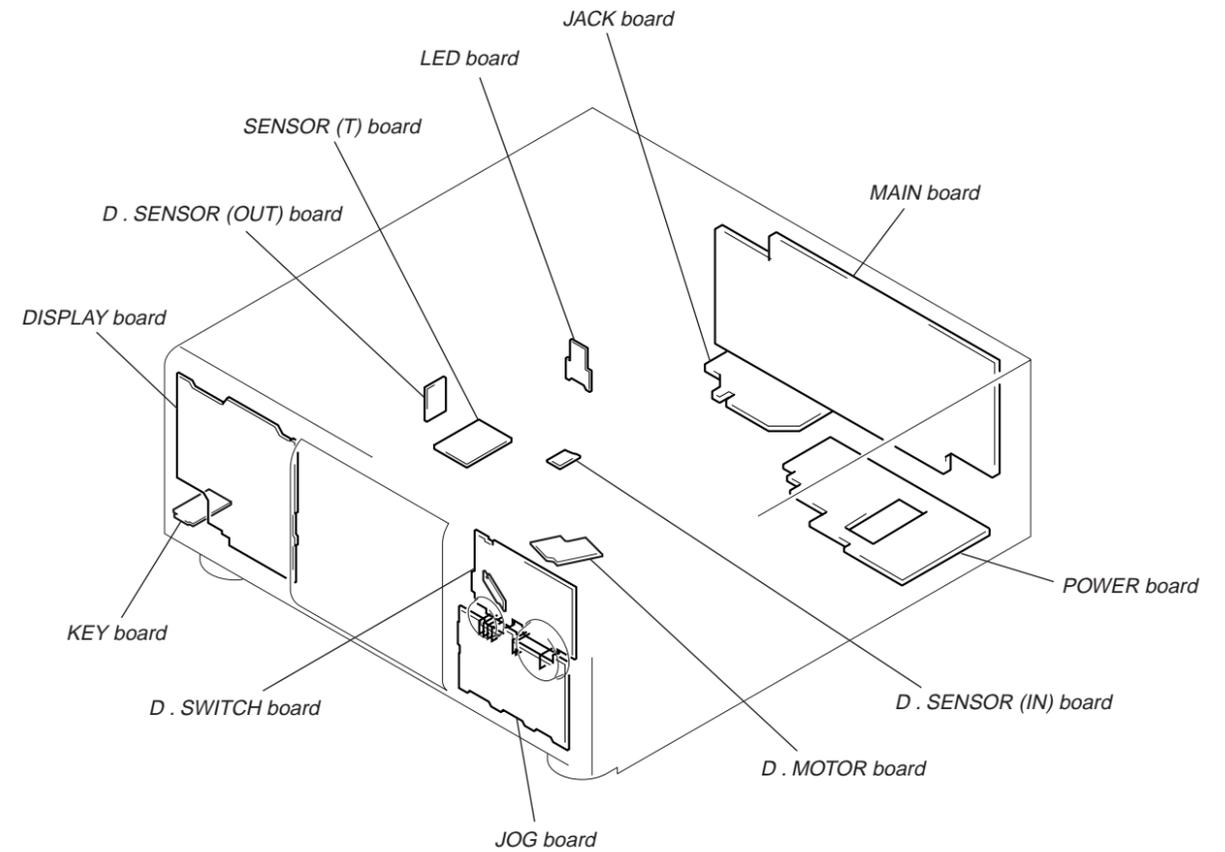


8-4. PRINTED WIRING BOARD – BD Board – • See page 23 for Circuit Boards Location.


【BD BOARD】(COMPONENT SIDE)

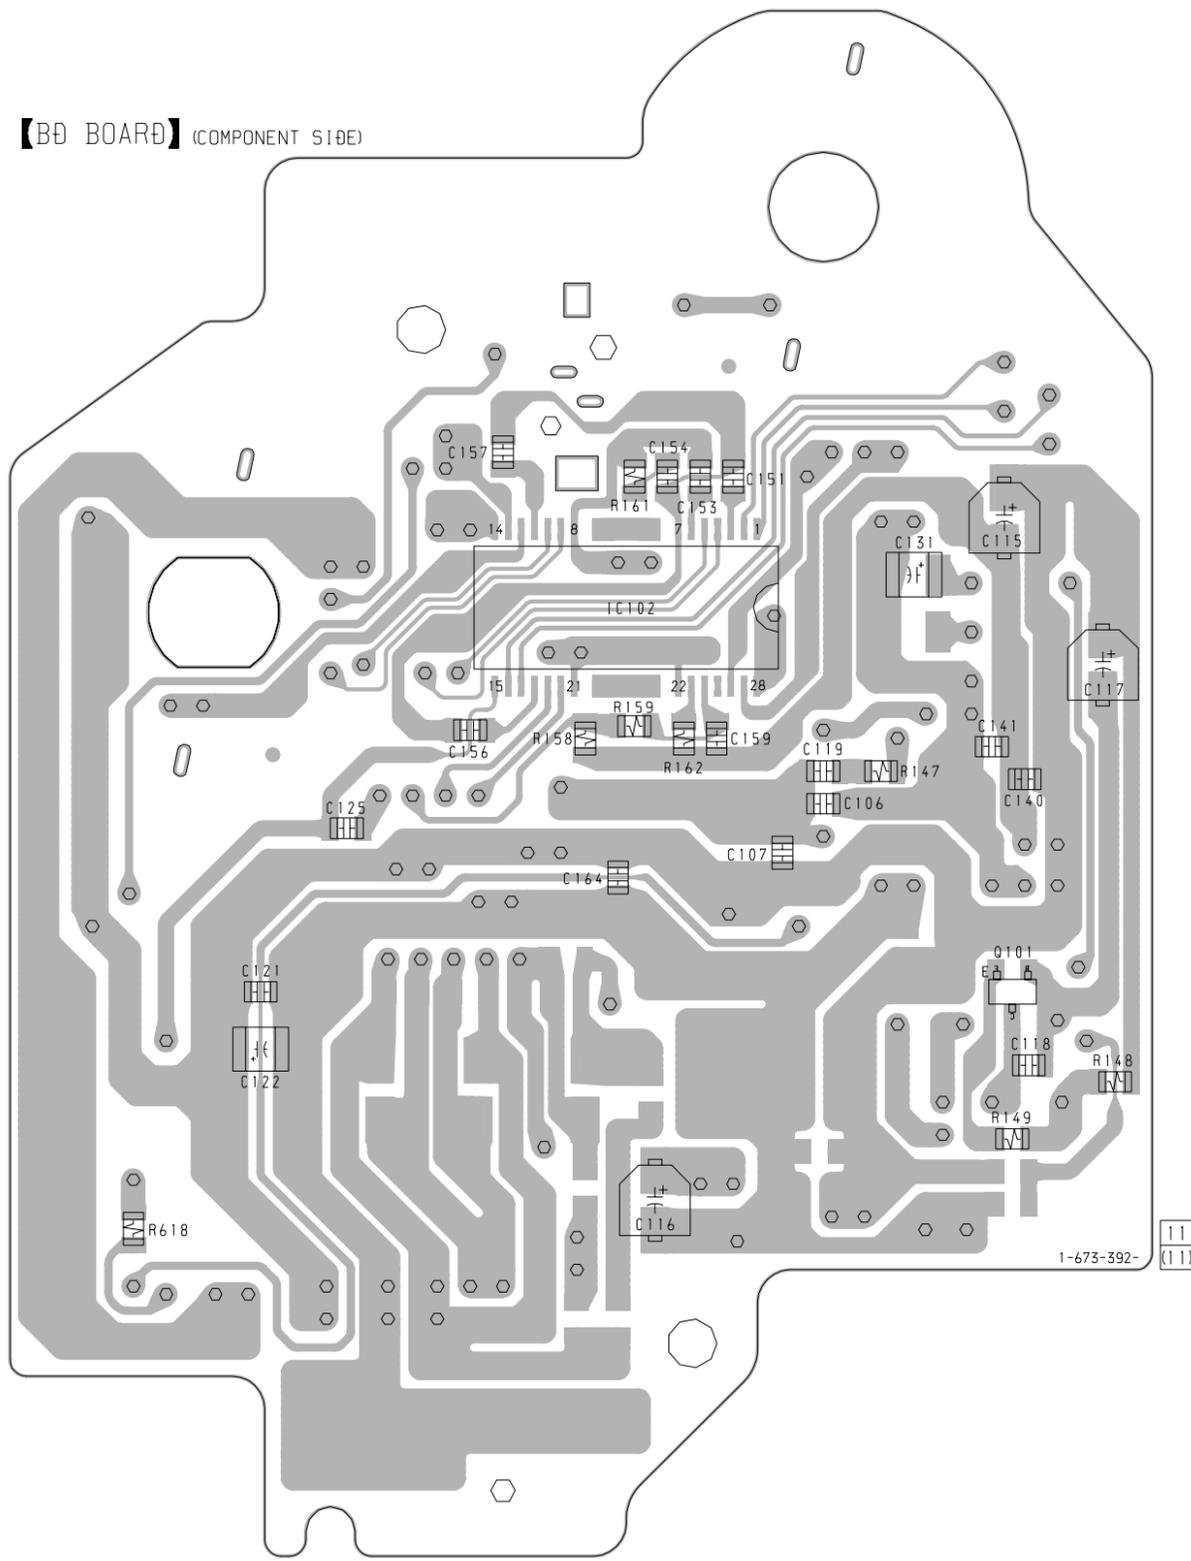

【BD BOARD】(CONDUCTOR SIDE)

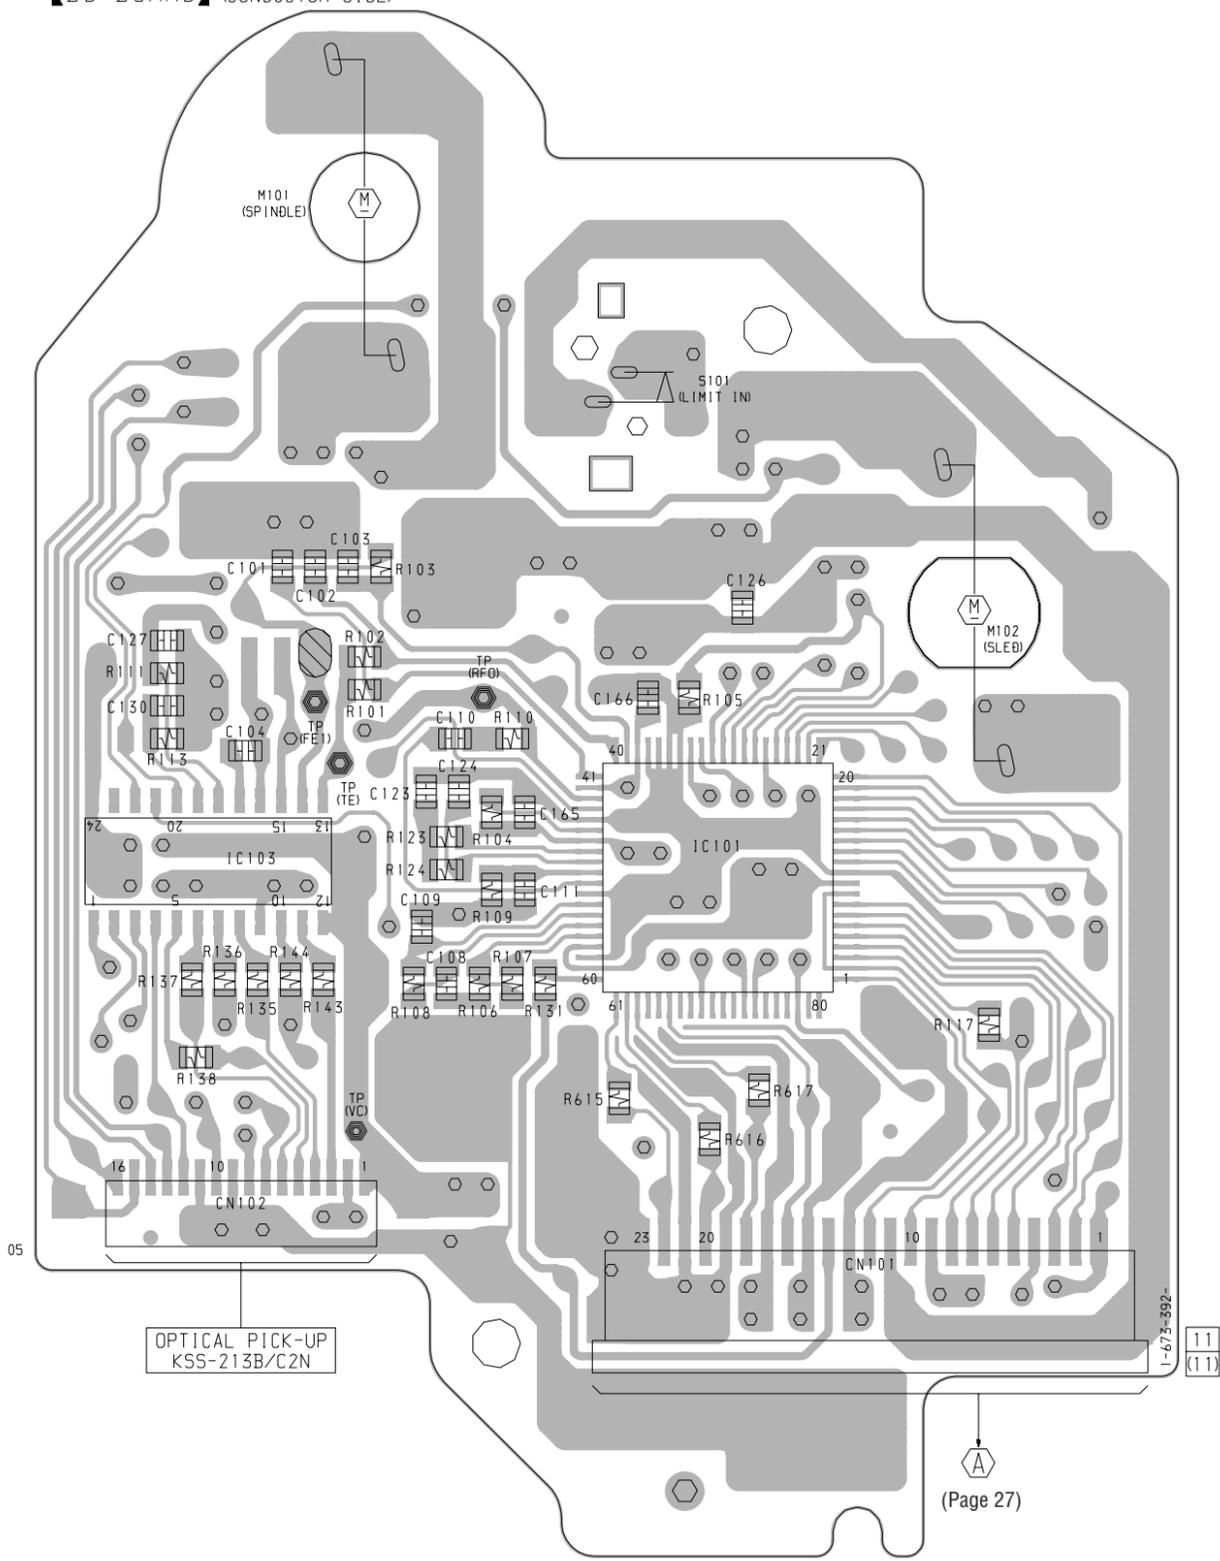

8-5. SCHEMATIC DIAGRAM – BD Board – • See page 42 for Waveforms. • See page 44 for IC Block Diagrams.

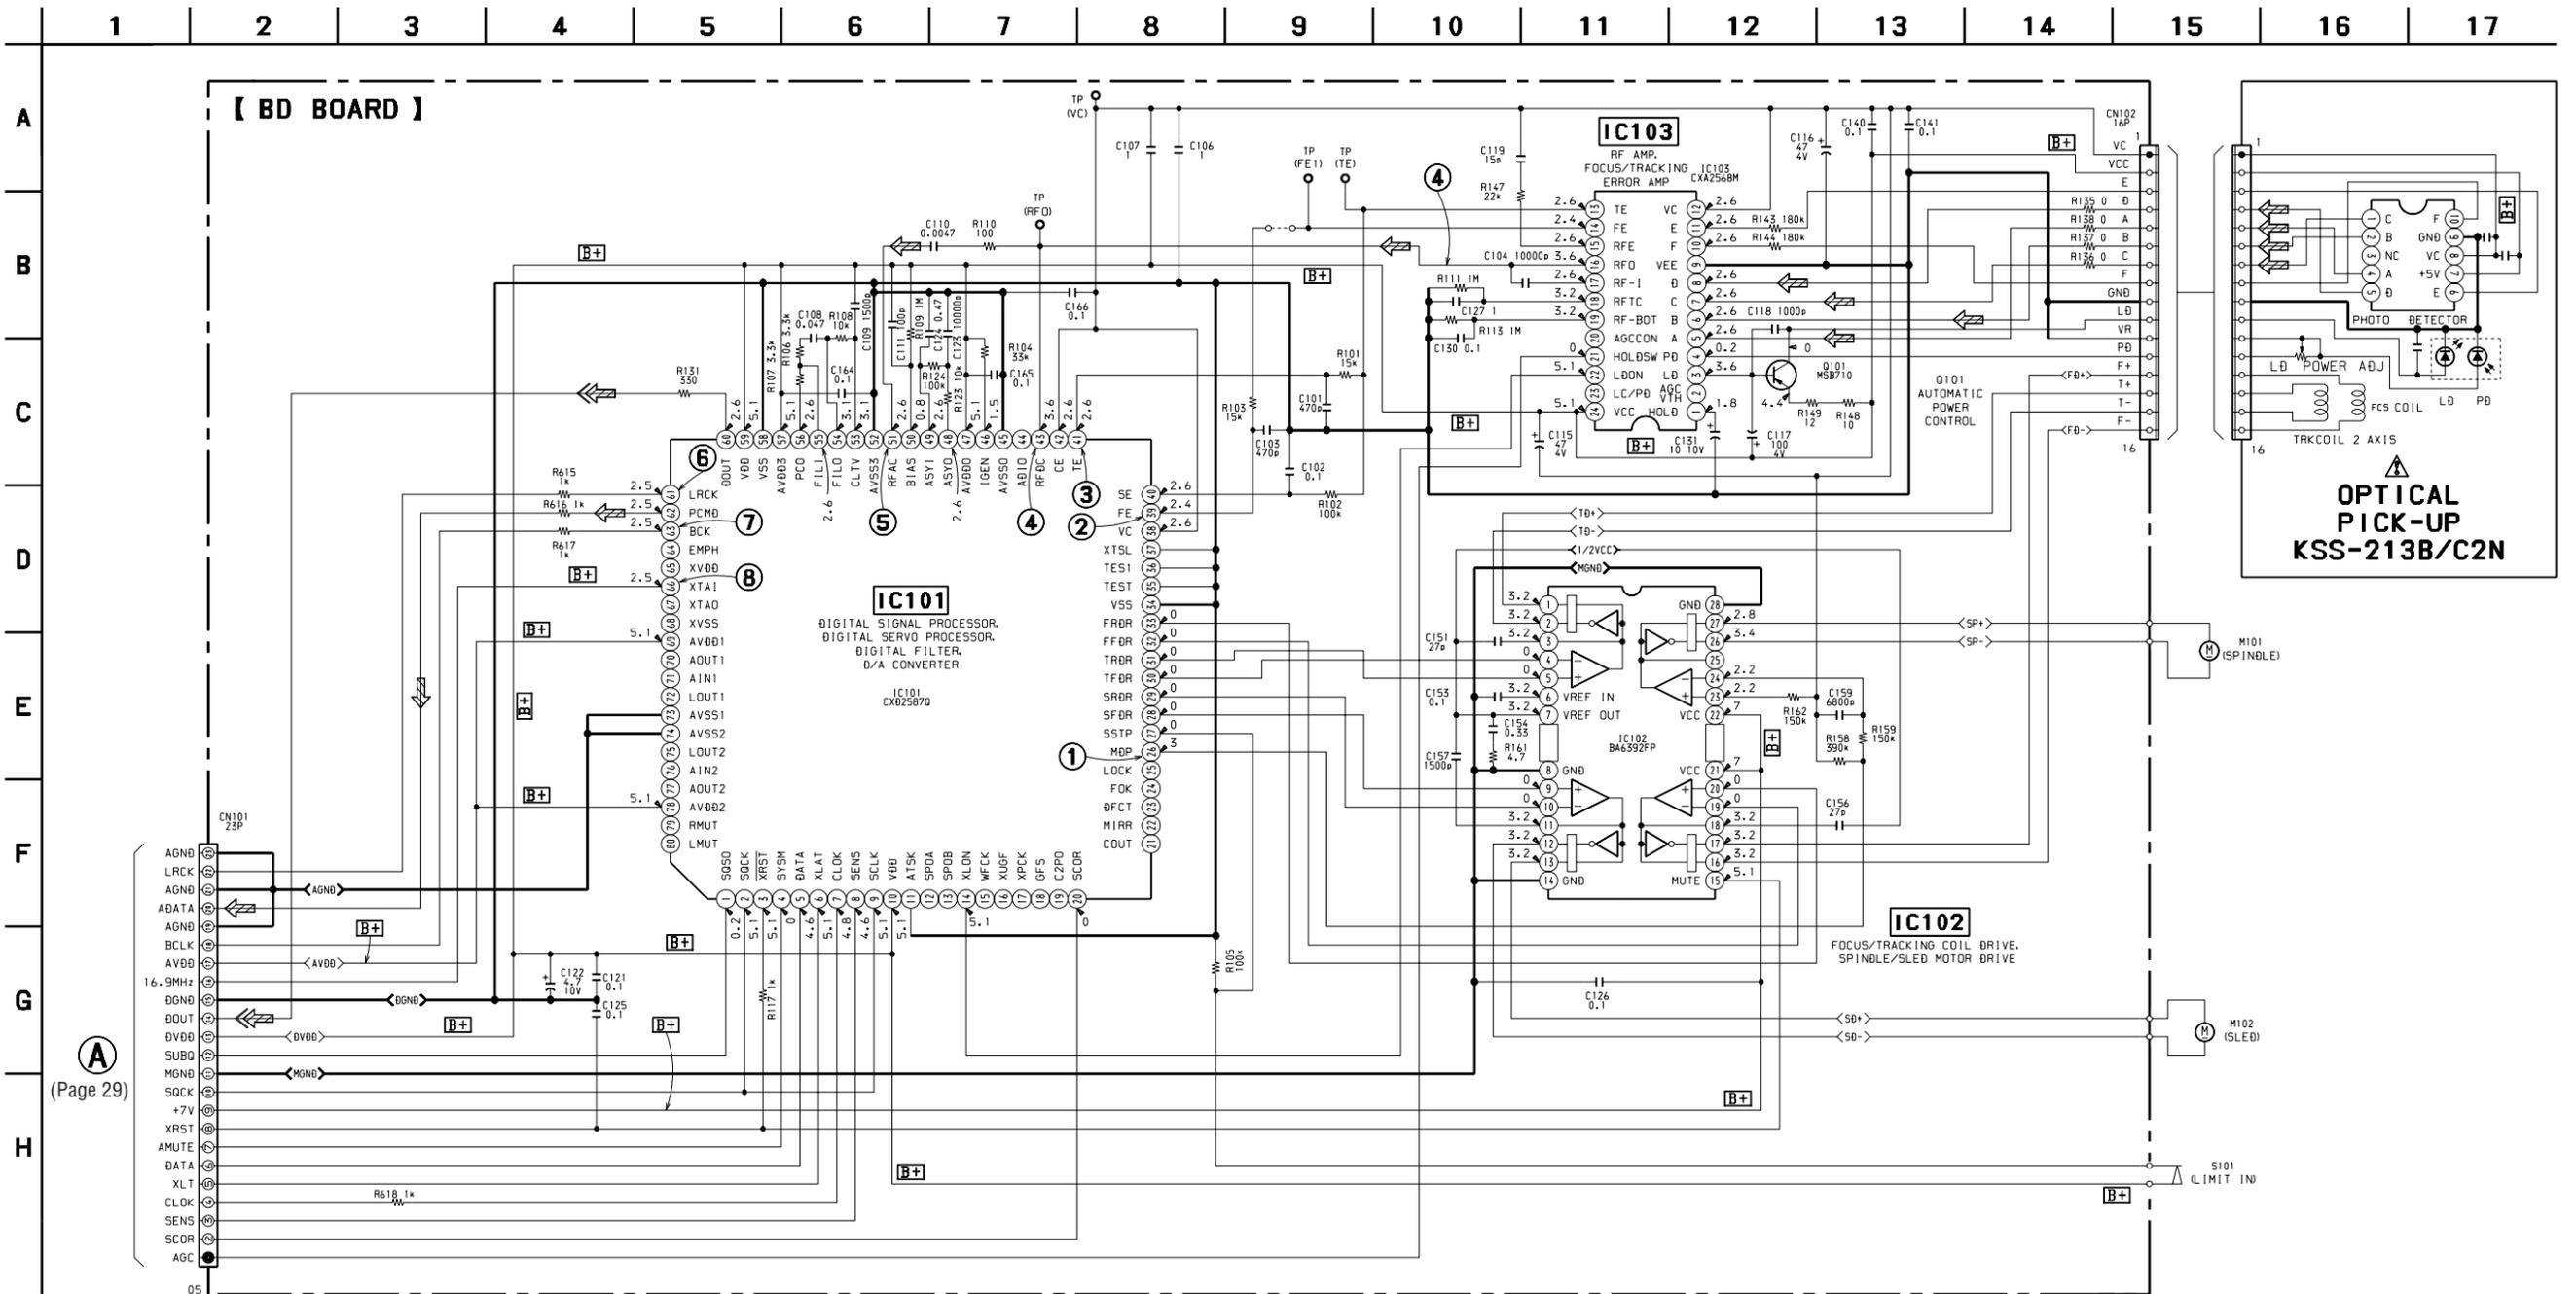


(Page 29)


The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

8-6. PRINTED WIRING BOARD – MAIN Board – • See page 23 for Circuit Boards Location.

【MAIN BOARD】(COMPONENT SIDE)

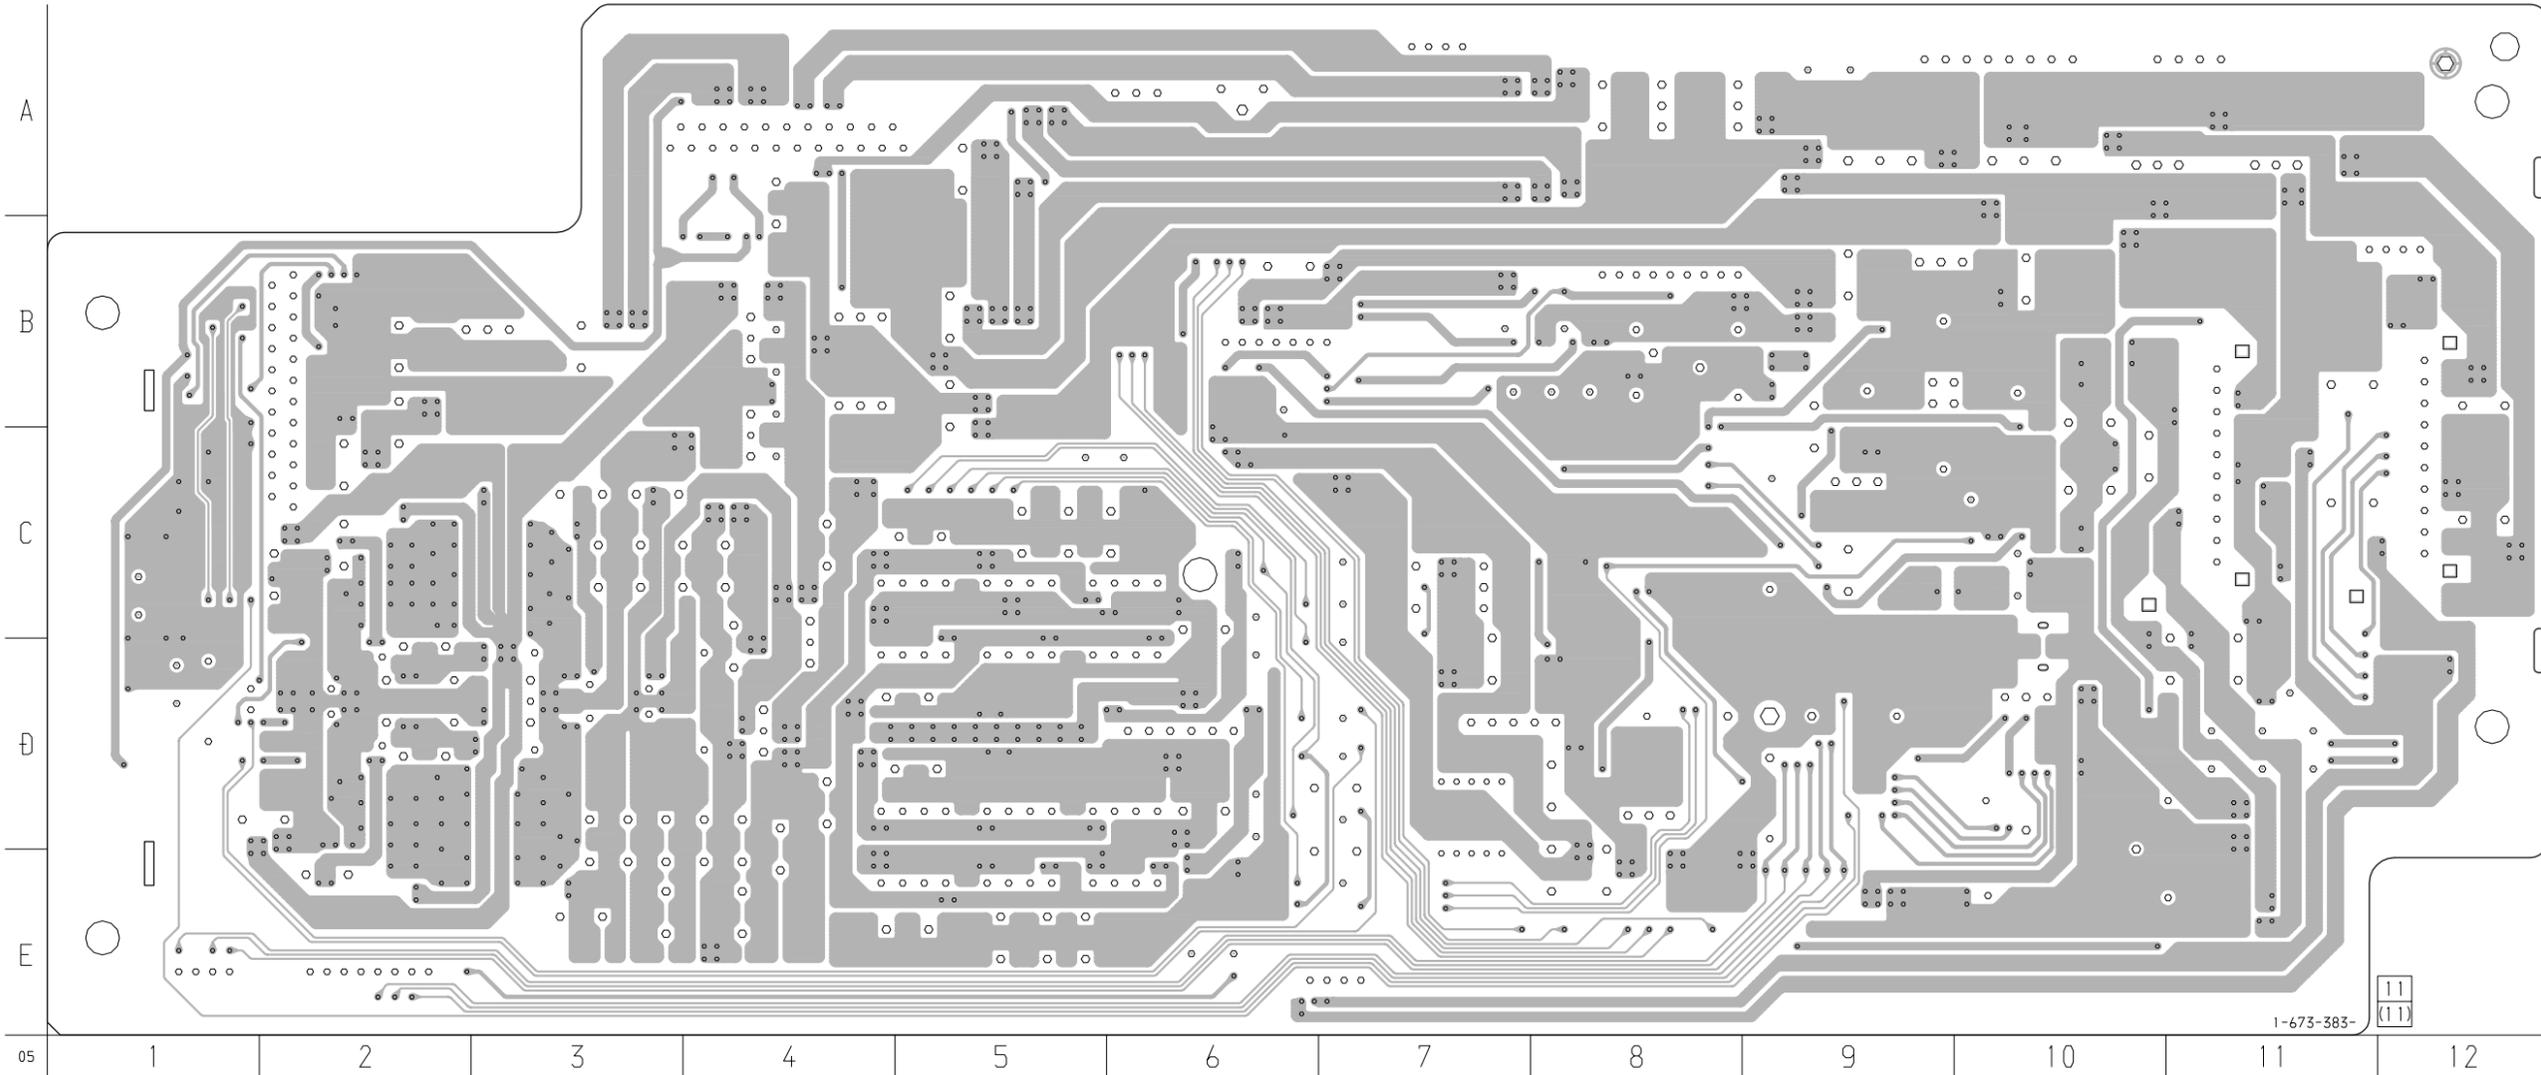


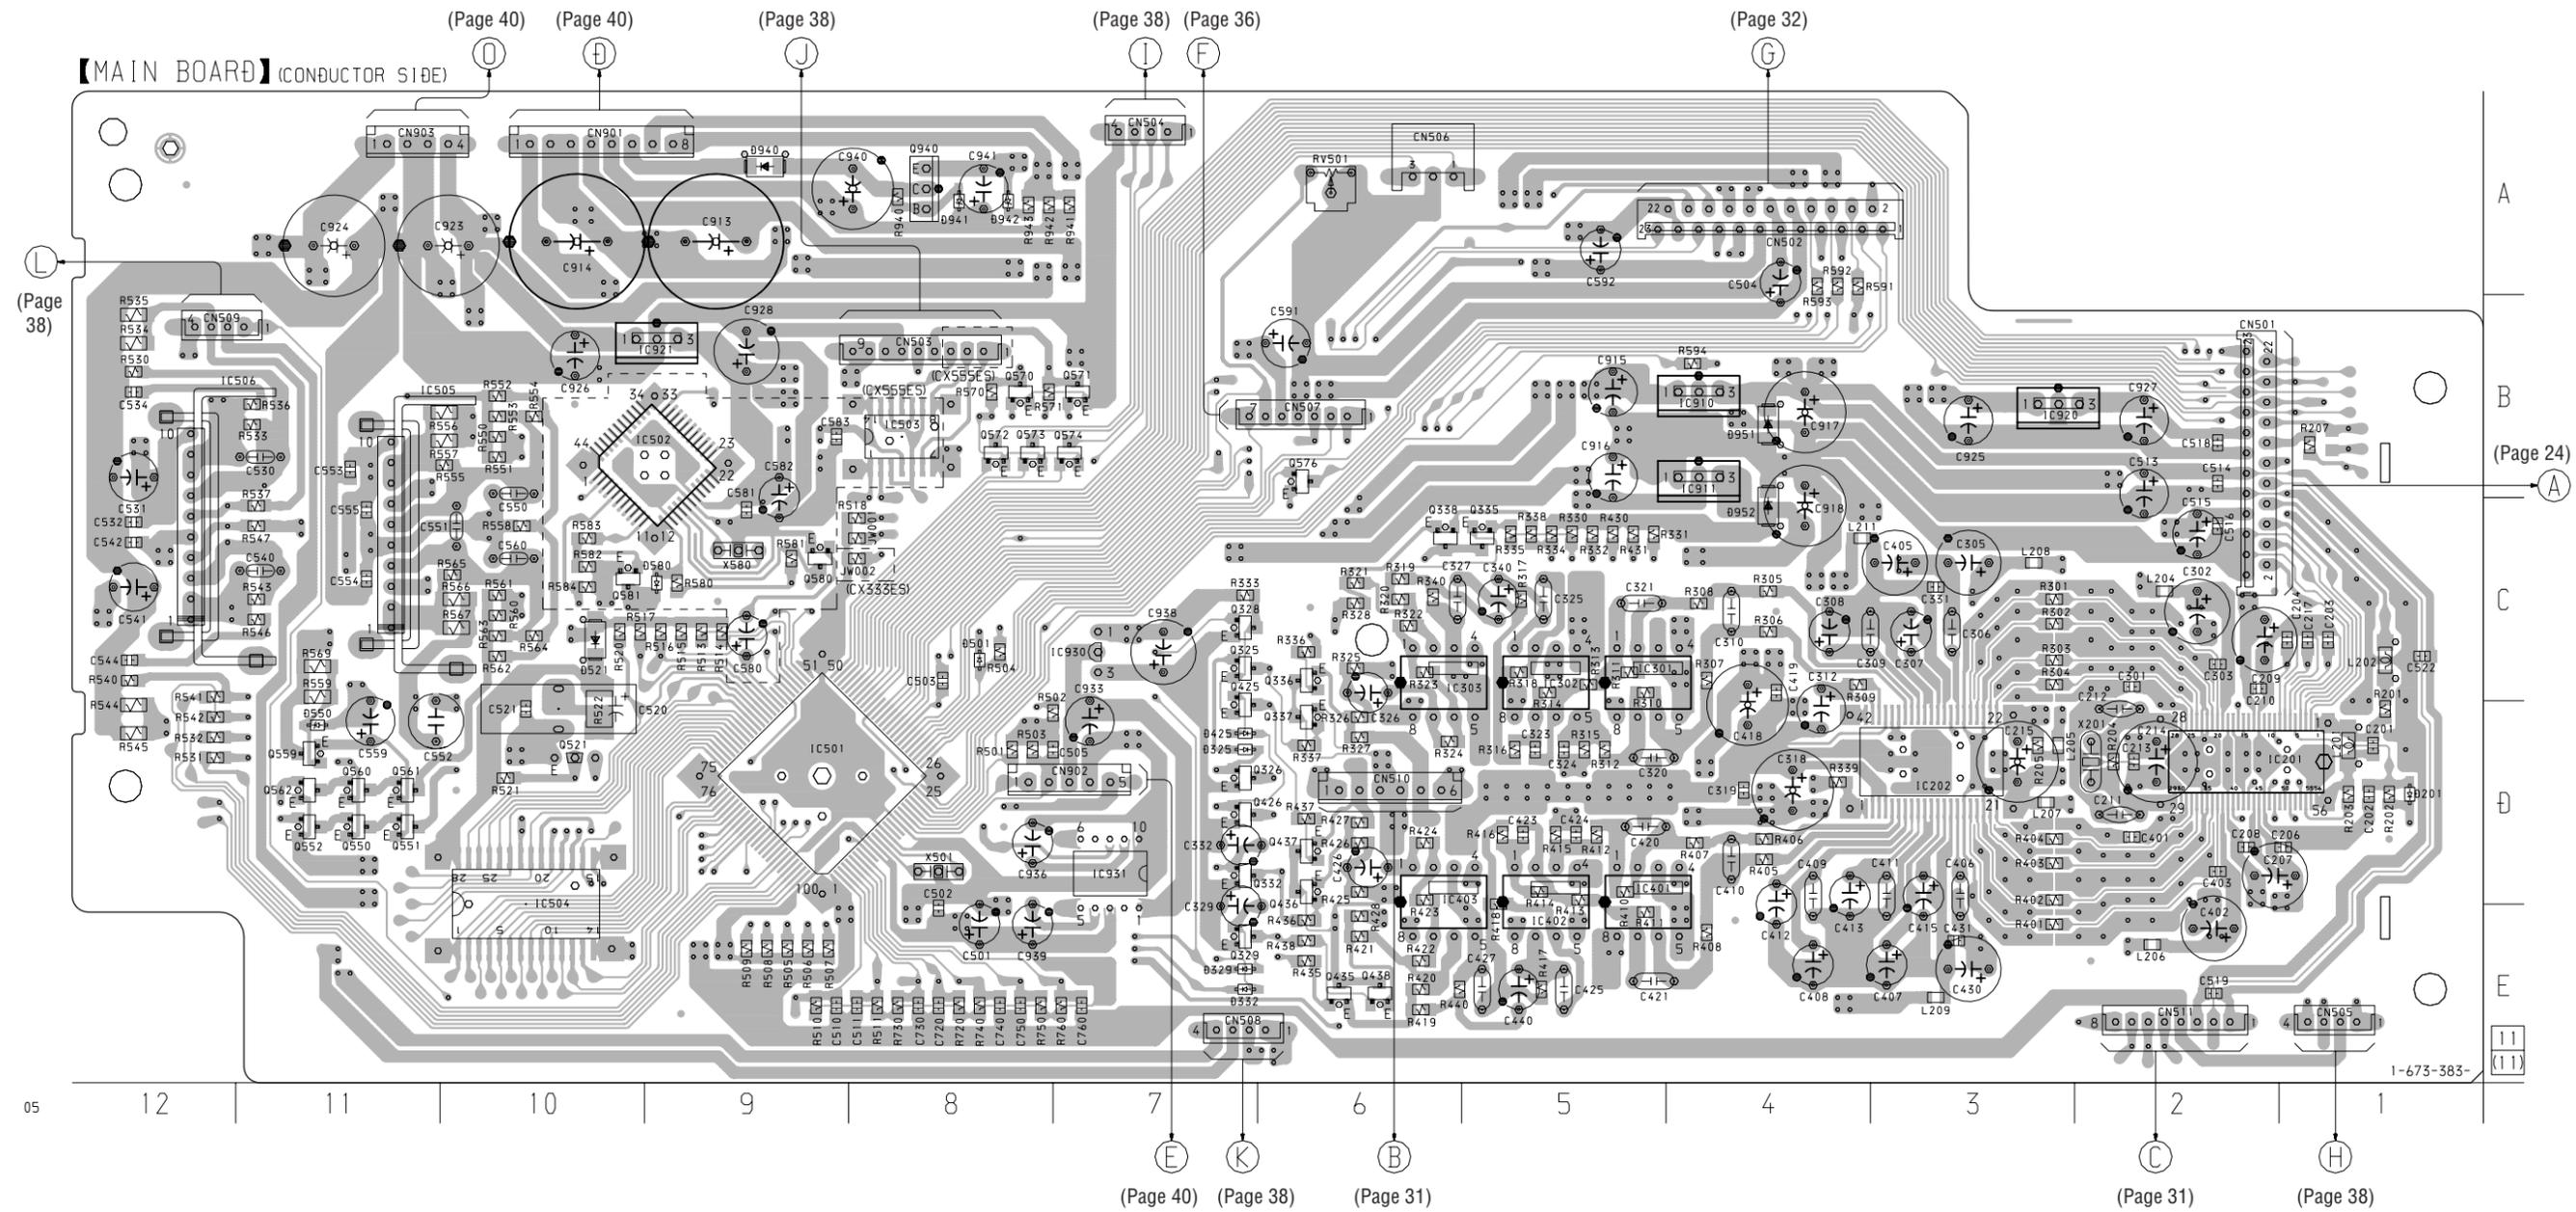


• Semiconductor Location

| Ref. No. | Location | Ref. No. | Location | Ref. No. | Location | Ref. No. | Location | Ref. No. | Location |
|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|
| D201 | D-1 | IC201 | D-2 | IC910 | B-4 | Q337 | D-6 | Q561 | D-11 |
| D325 | D-7 | IC202 | D-3 | IC911 | B-4 | Q338 | C-6 | Q562 | D-11 |
| D329 | E-7 | IC301 | C-5 | IC920 | B-3 | Q425 | D-7 | Q570 | B-8 |
| D332 | E-7 | IC302 | C-5 | IC921 | B-9 | Q426 | D-7 | Q571 | B-7 |
| D425 | D-7 | IC303 | C-6 | IC930 | C-7 | Q435 | E-6 | Q572 | B-8 |
| D501 | C-8 | IC401 | D-5 | IC931 | D-7 | Q436 | D-6 | Q573 | B-8 |
| D521 | C-10 | IC402 | D-5 | | | Q437 | D-6 | Q574 | B-7 |
| D550 | D-11 | IC403 | D-6 | Q325 | C-7 | Q438 | E-6 | Q576 | B-6 |
| D580 | C-9 | IC501 | D-9 | Q326 | D-7 | Q521 | D-10 | Q580 | C-9 |
| D940 | A-9 | IC502 | B-9 | Q328 | C-7 | Q550 | D-11 | Q581 | C-10 |
| D941 | A-8 | IC503 | B-8 | Q329 | E-7 | Q551 | D-11 | Q940 | A-8 |
| D942 | A-8 | IC504 | D-10 | Q332 | D-7 | Q552 | D-11 | | |
| D951 | B-4 | IC505 | C-11 | Q335 | C-5 | Q559 | D-11 | | |
| D952 | C-4 | IC506 | C-12 | Q336 | C-6 | Q560 | D-11 | | |

8-8. SCHEMATIC DIAGRAM – MAIN Board (2/3) – • See page 42 for Waveforms. • See page 46 for IC Block Diagrams.

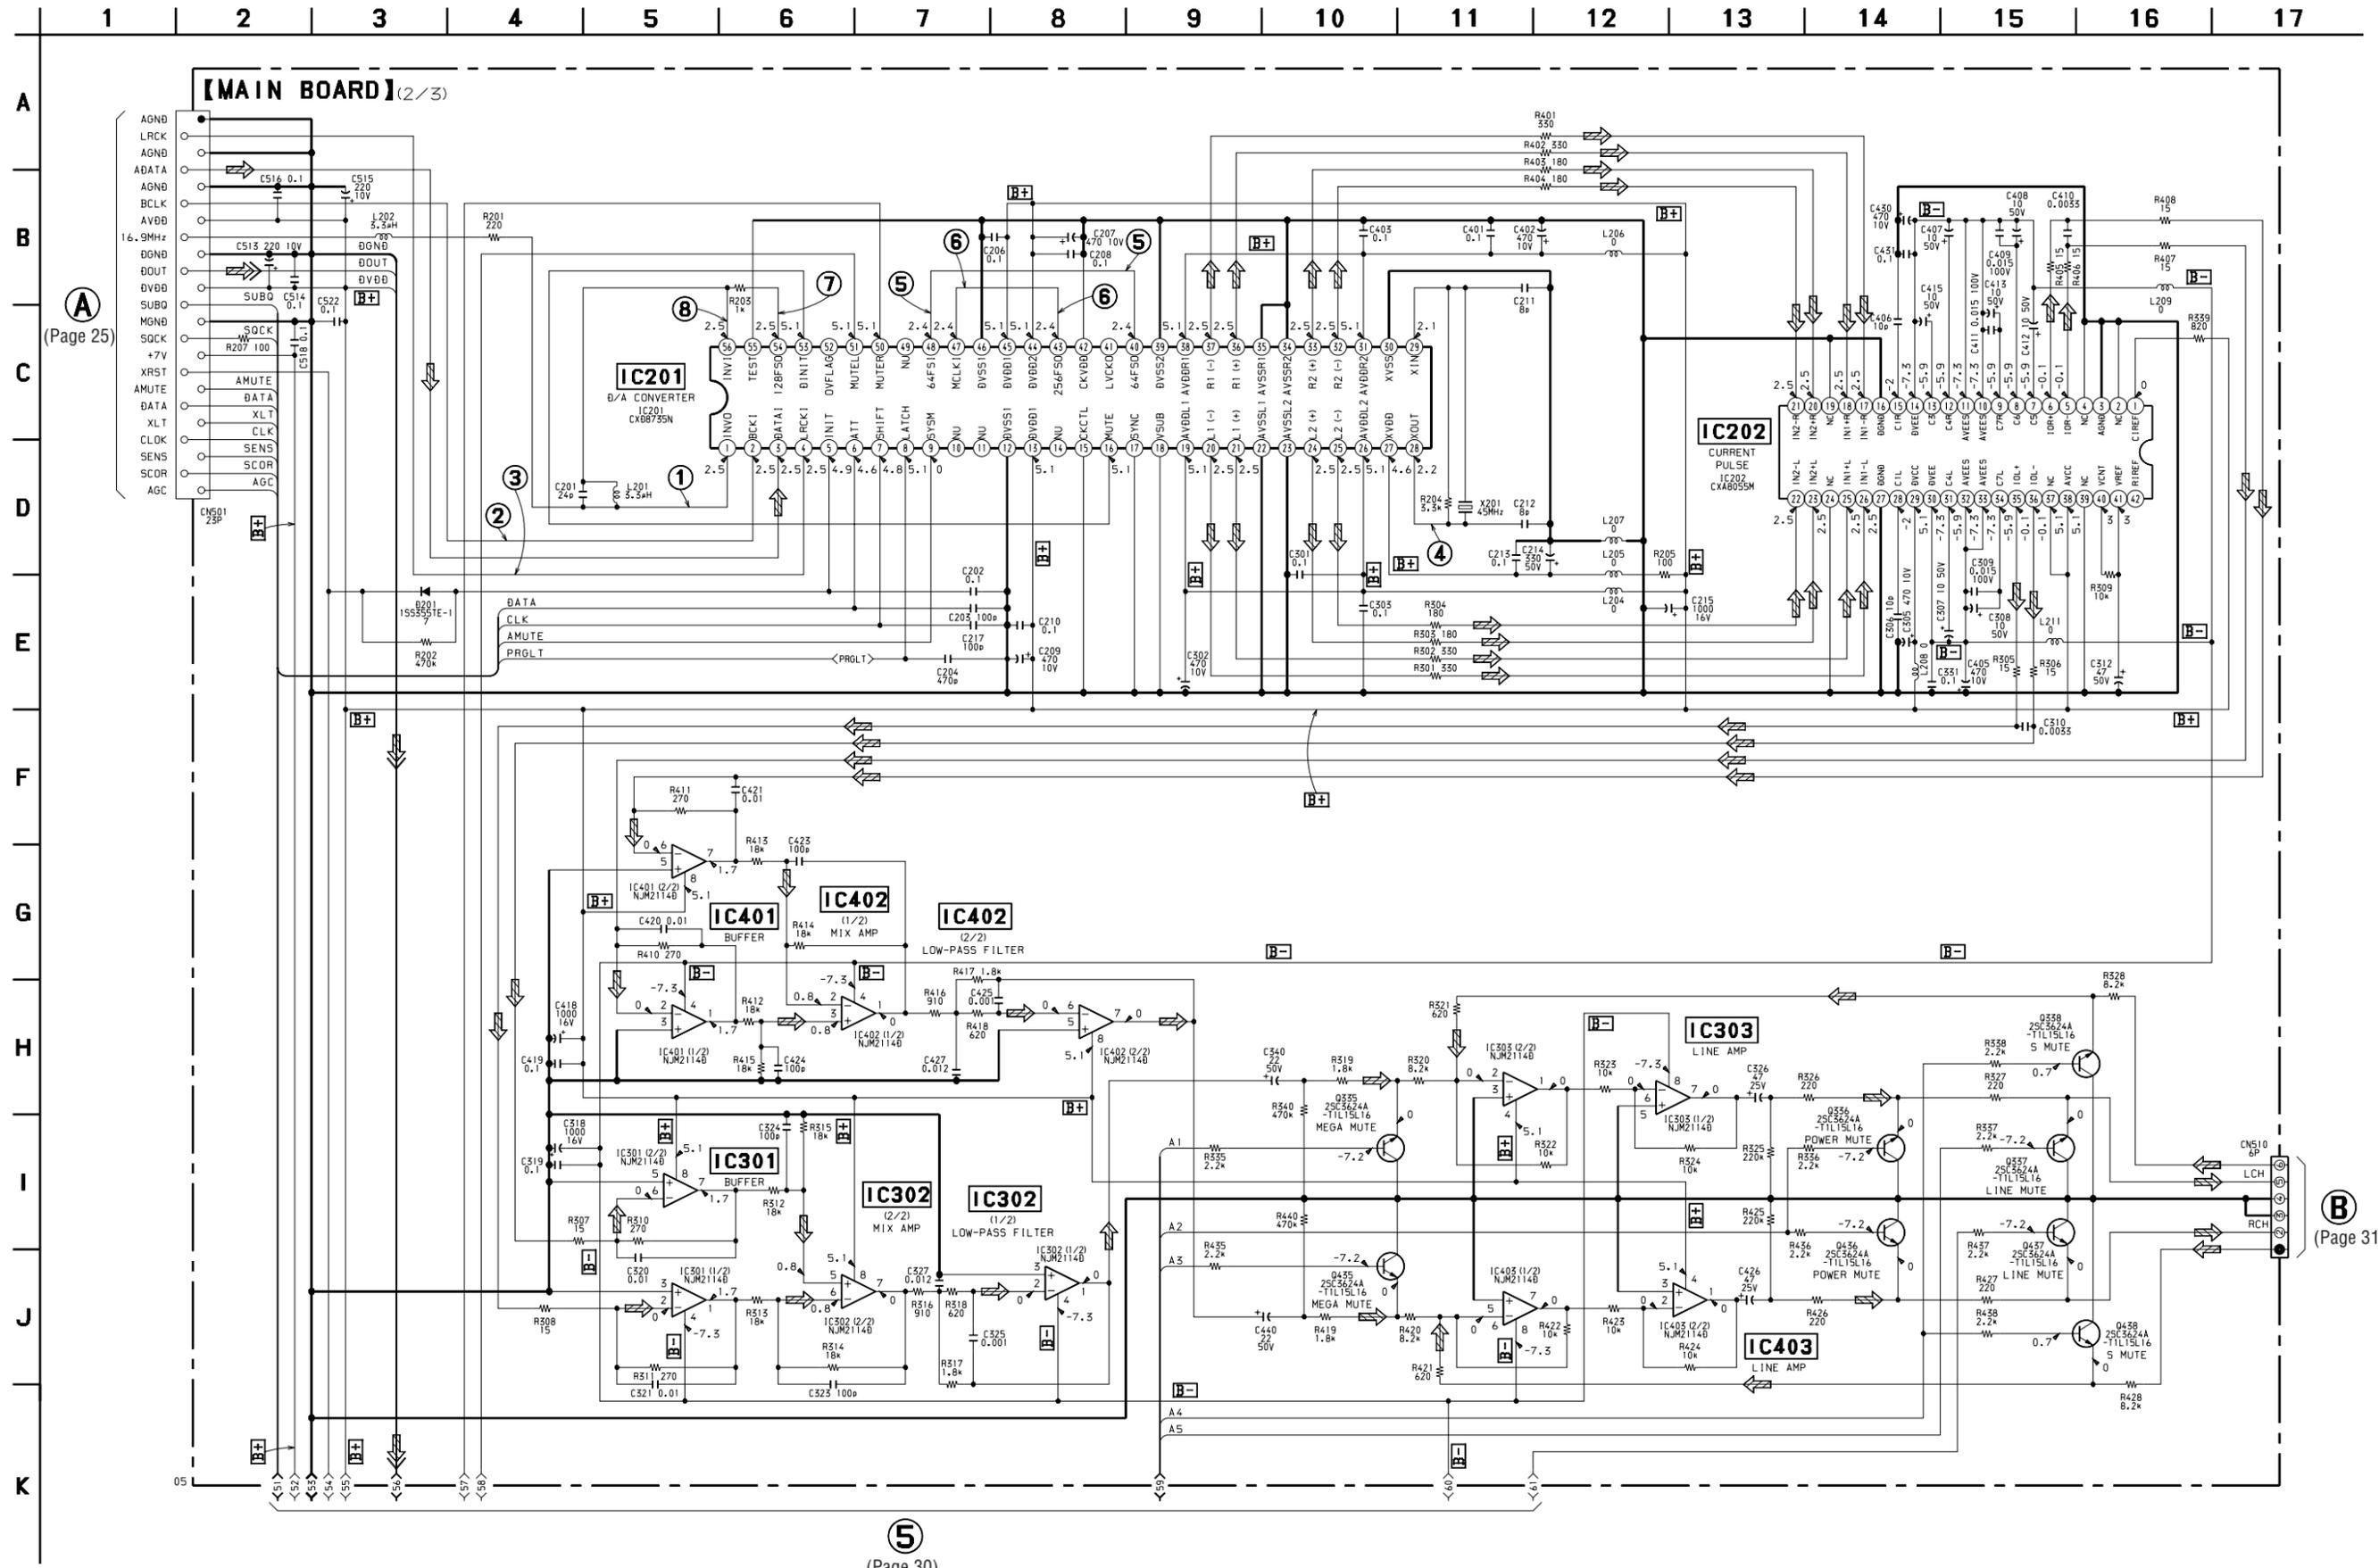

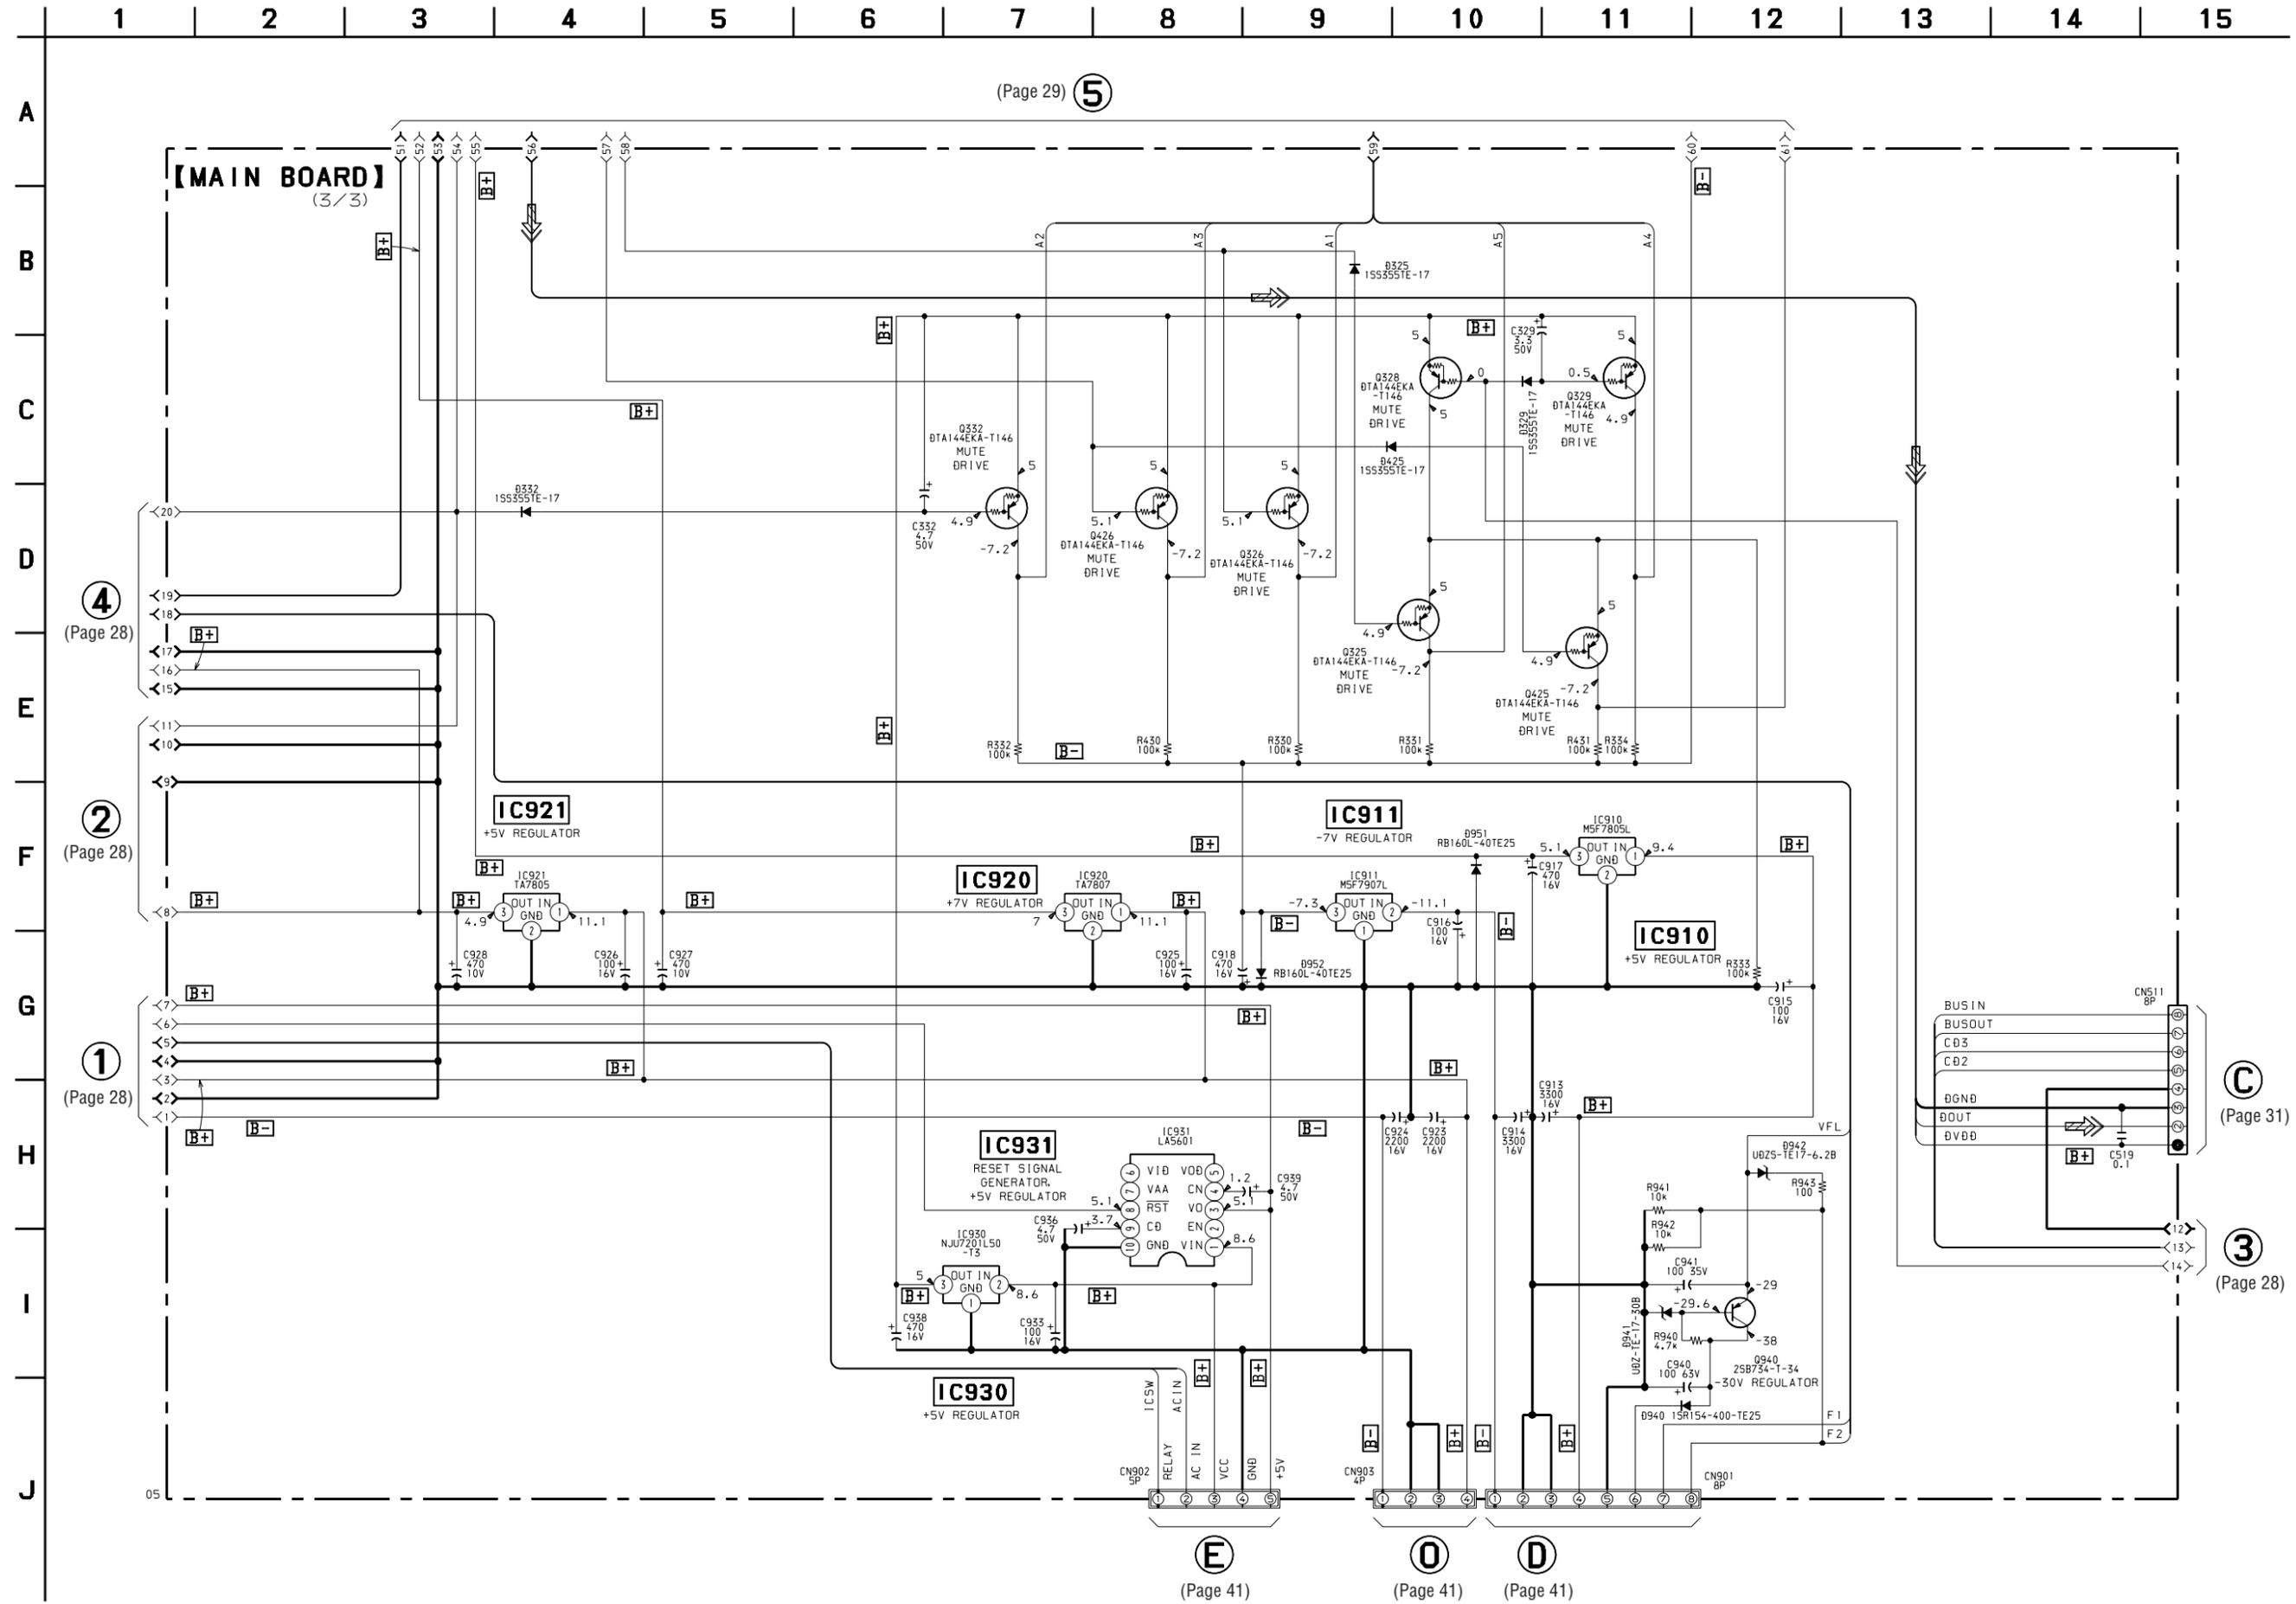

(Page 29) 5

[MAIN BOARD]
(3/3)

4
(Page 28)

2
(Page 28)

1
(Page 28)

C
(Page 31)

3
(Page 28)

E
(Page 41)



O
(Page 41)

D
(Page 41)

8-10. PRINTED WIRING BOARD – JACK Board – • See page 23 for Circuit Boards Location.

8-11. SCHEMATIC DIAGRAM – JACK Board –

【 JACK BOARD 】

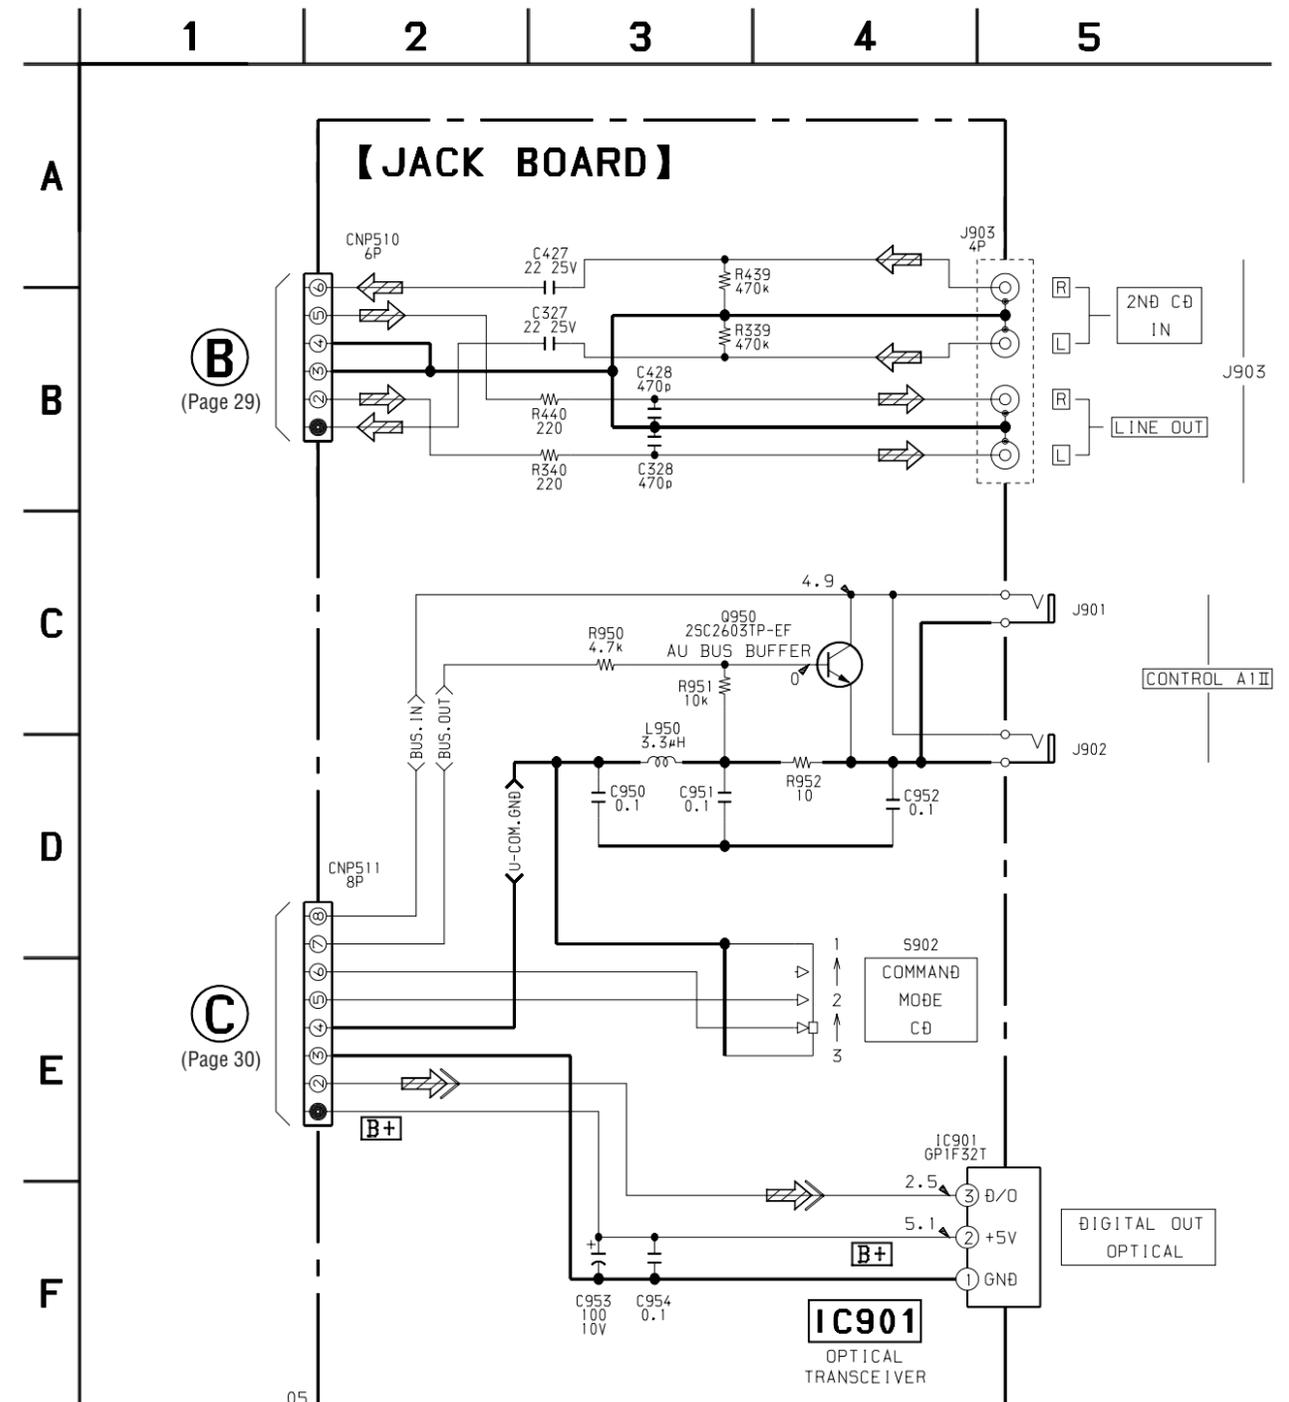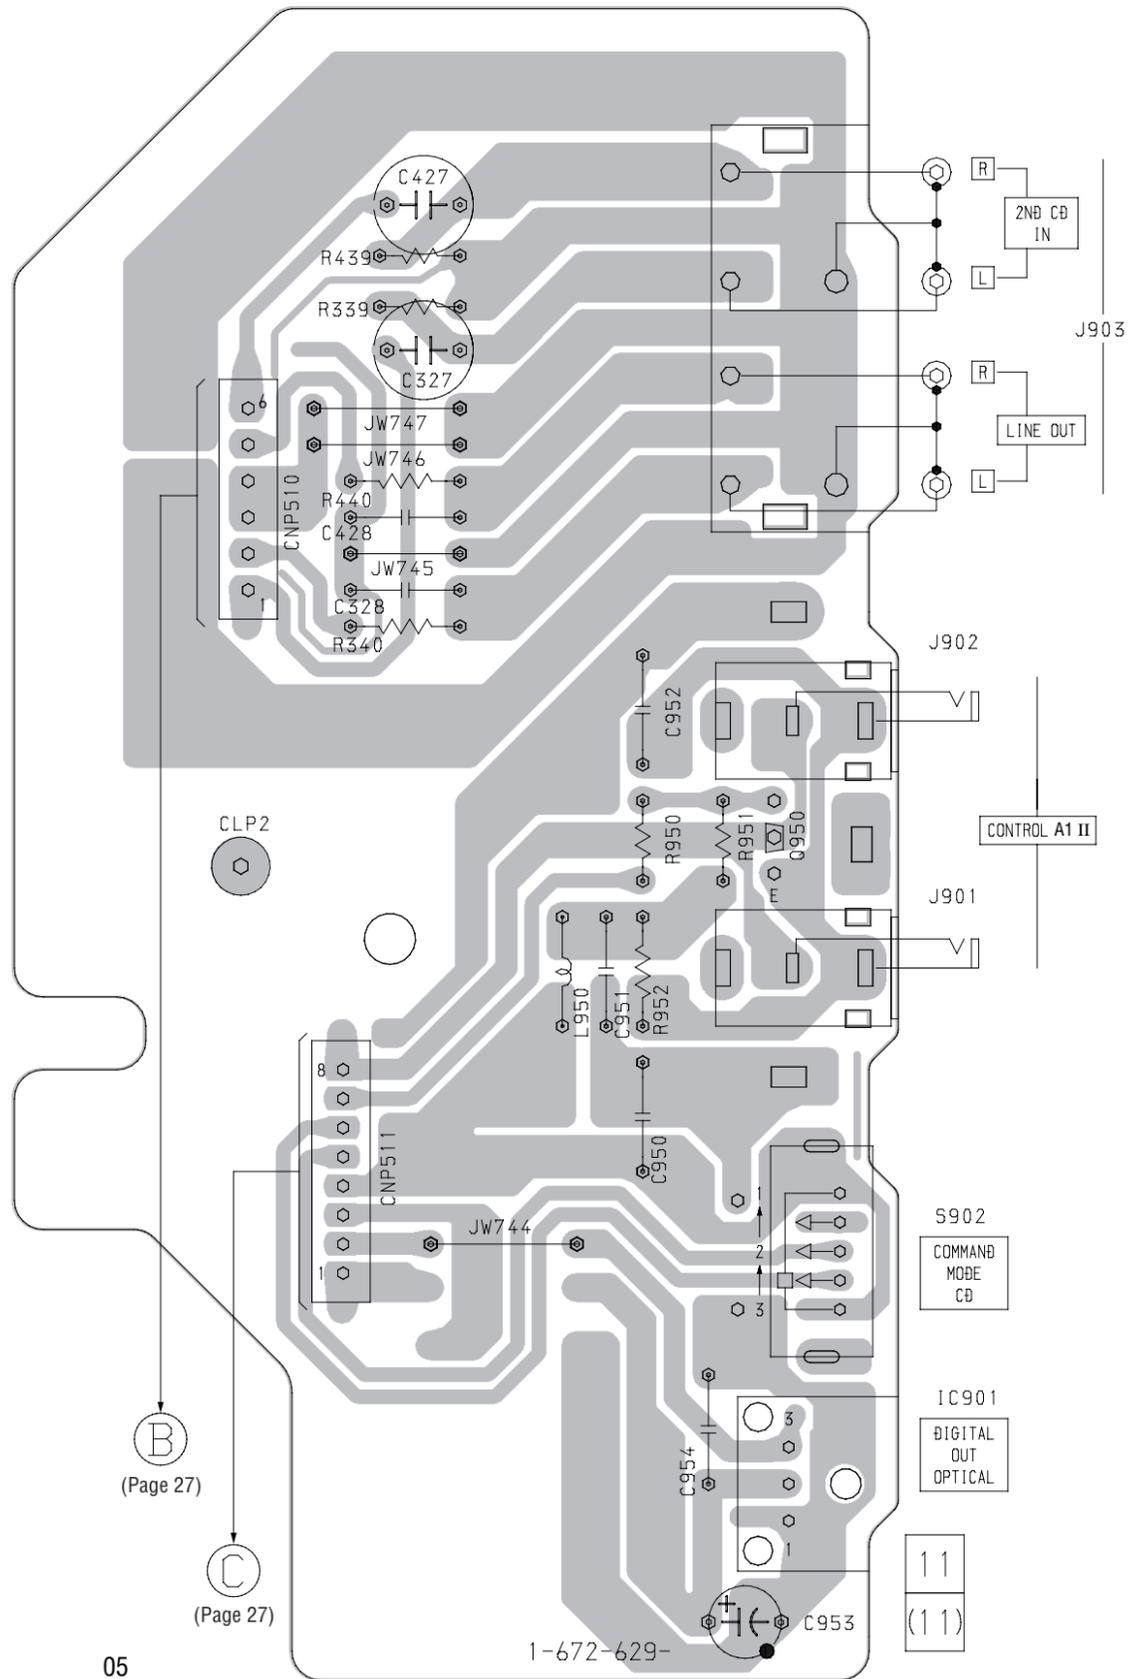

8-12. PRINTED WIRING BOARD – DISPLAY Board – • See page 23 for Circuit Boards Location.


(Page 34)

(Page 27)

【 DISPLAY BOARD 】

• Semiconductor Location


| Ref. No. | Location |
|----------|----------|
| D701 | D-4 |
| D702 | D-3 |
| D703 | D-2 |
| D704 | D-1 |
| D705 | E-4 |
| D707 | E-3 |
| D708 | E-2 |
| D709 | E-2 |
| D710 | C-5 |
| D771 | E-1 |
| D772 | E-2 |
| D773 | E-3 |
| D774 | E-4 |
| D775 | E-2 |
| D780 | F-1 |
| D781 | F-3 |
| D782 | F-2 |
| IC701 | B-2 |
| IC702 | C-1 |
| IC703 | A-2 |
| Q701 | C-3 |
| Q771 | F-2 |
| Q772 | F-3 |
| Q773 | F-2 |

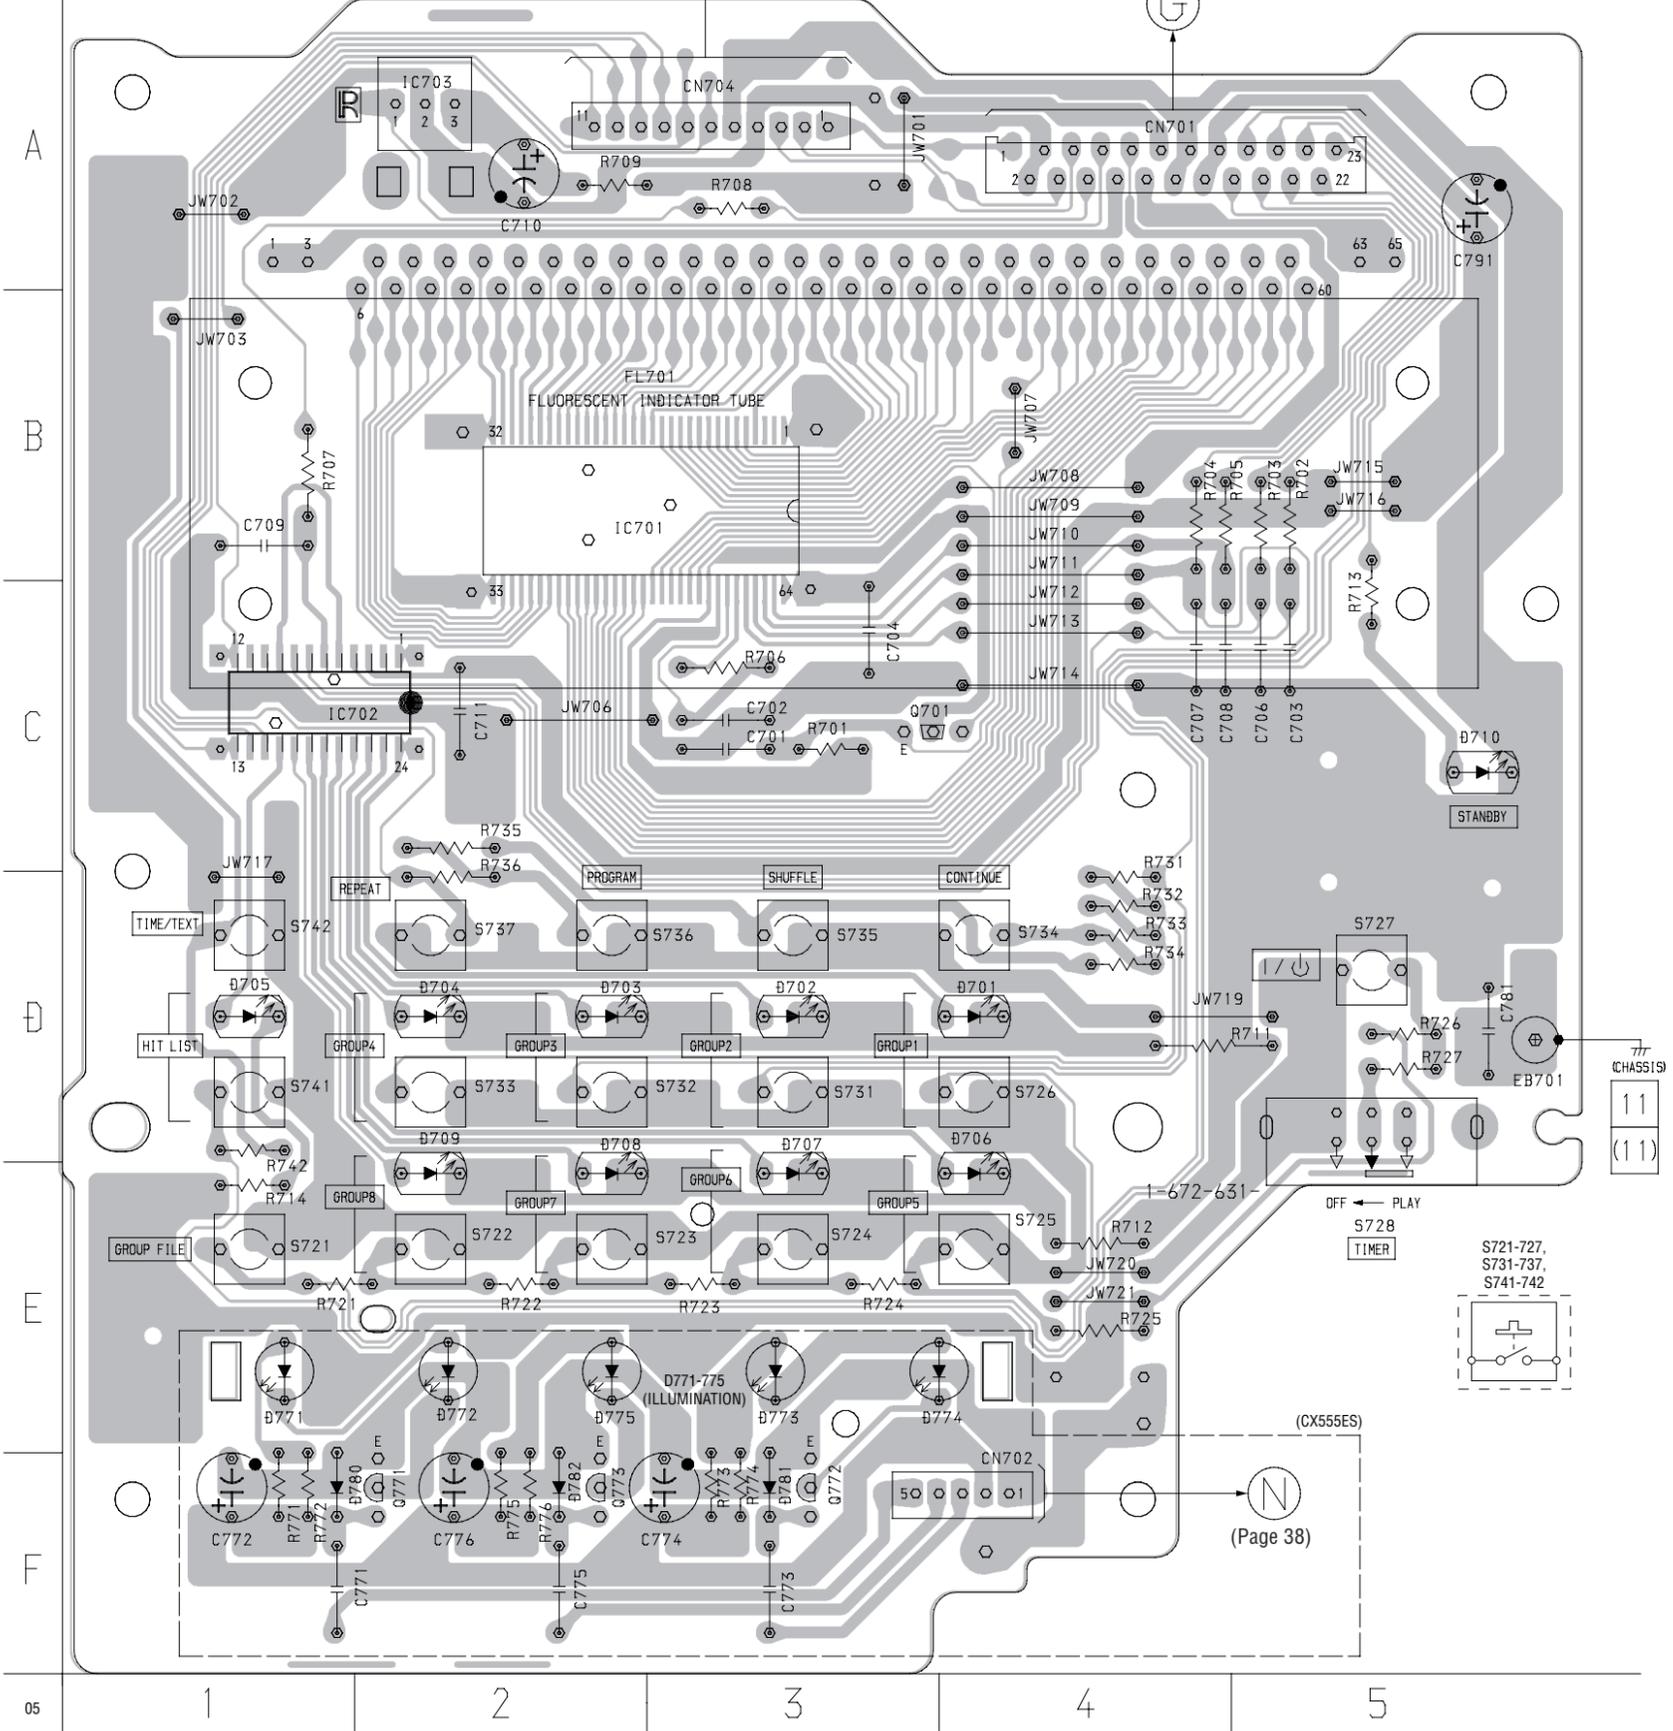

【 JOG BOARD 】


• Semiconductor Location

| Ref. No. | Location |
|----------|----------|
| D711 | E-4 |
| D712 | E-2 |
| D713 | D-4 |
| D714 | D-4 |
| D715 | D-4 |
| D716 | D-4 |

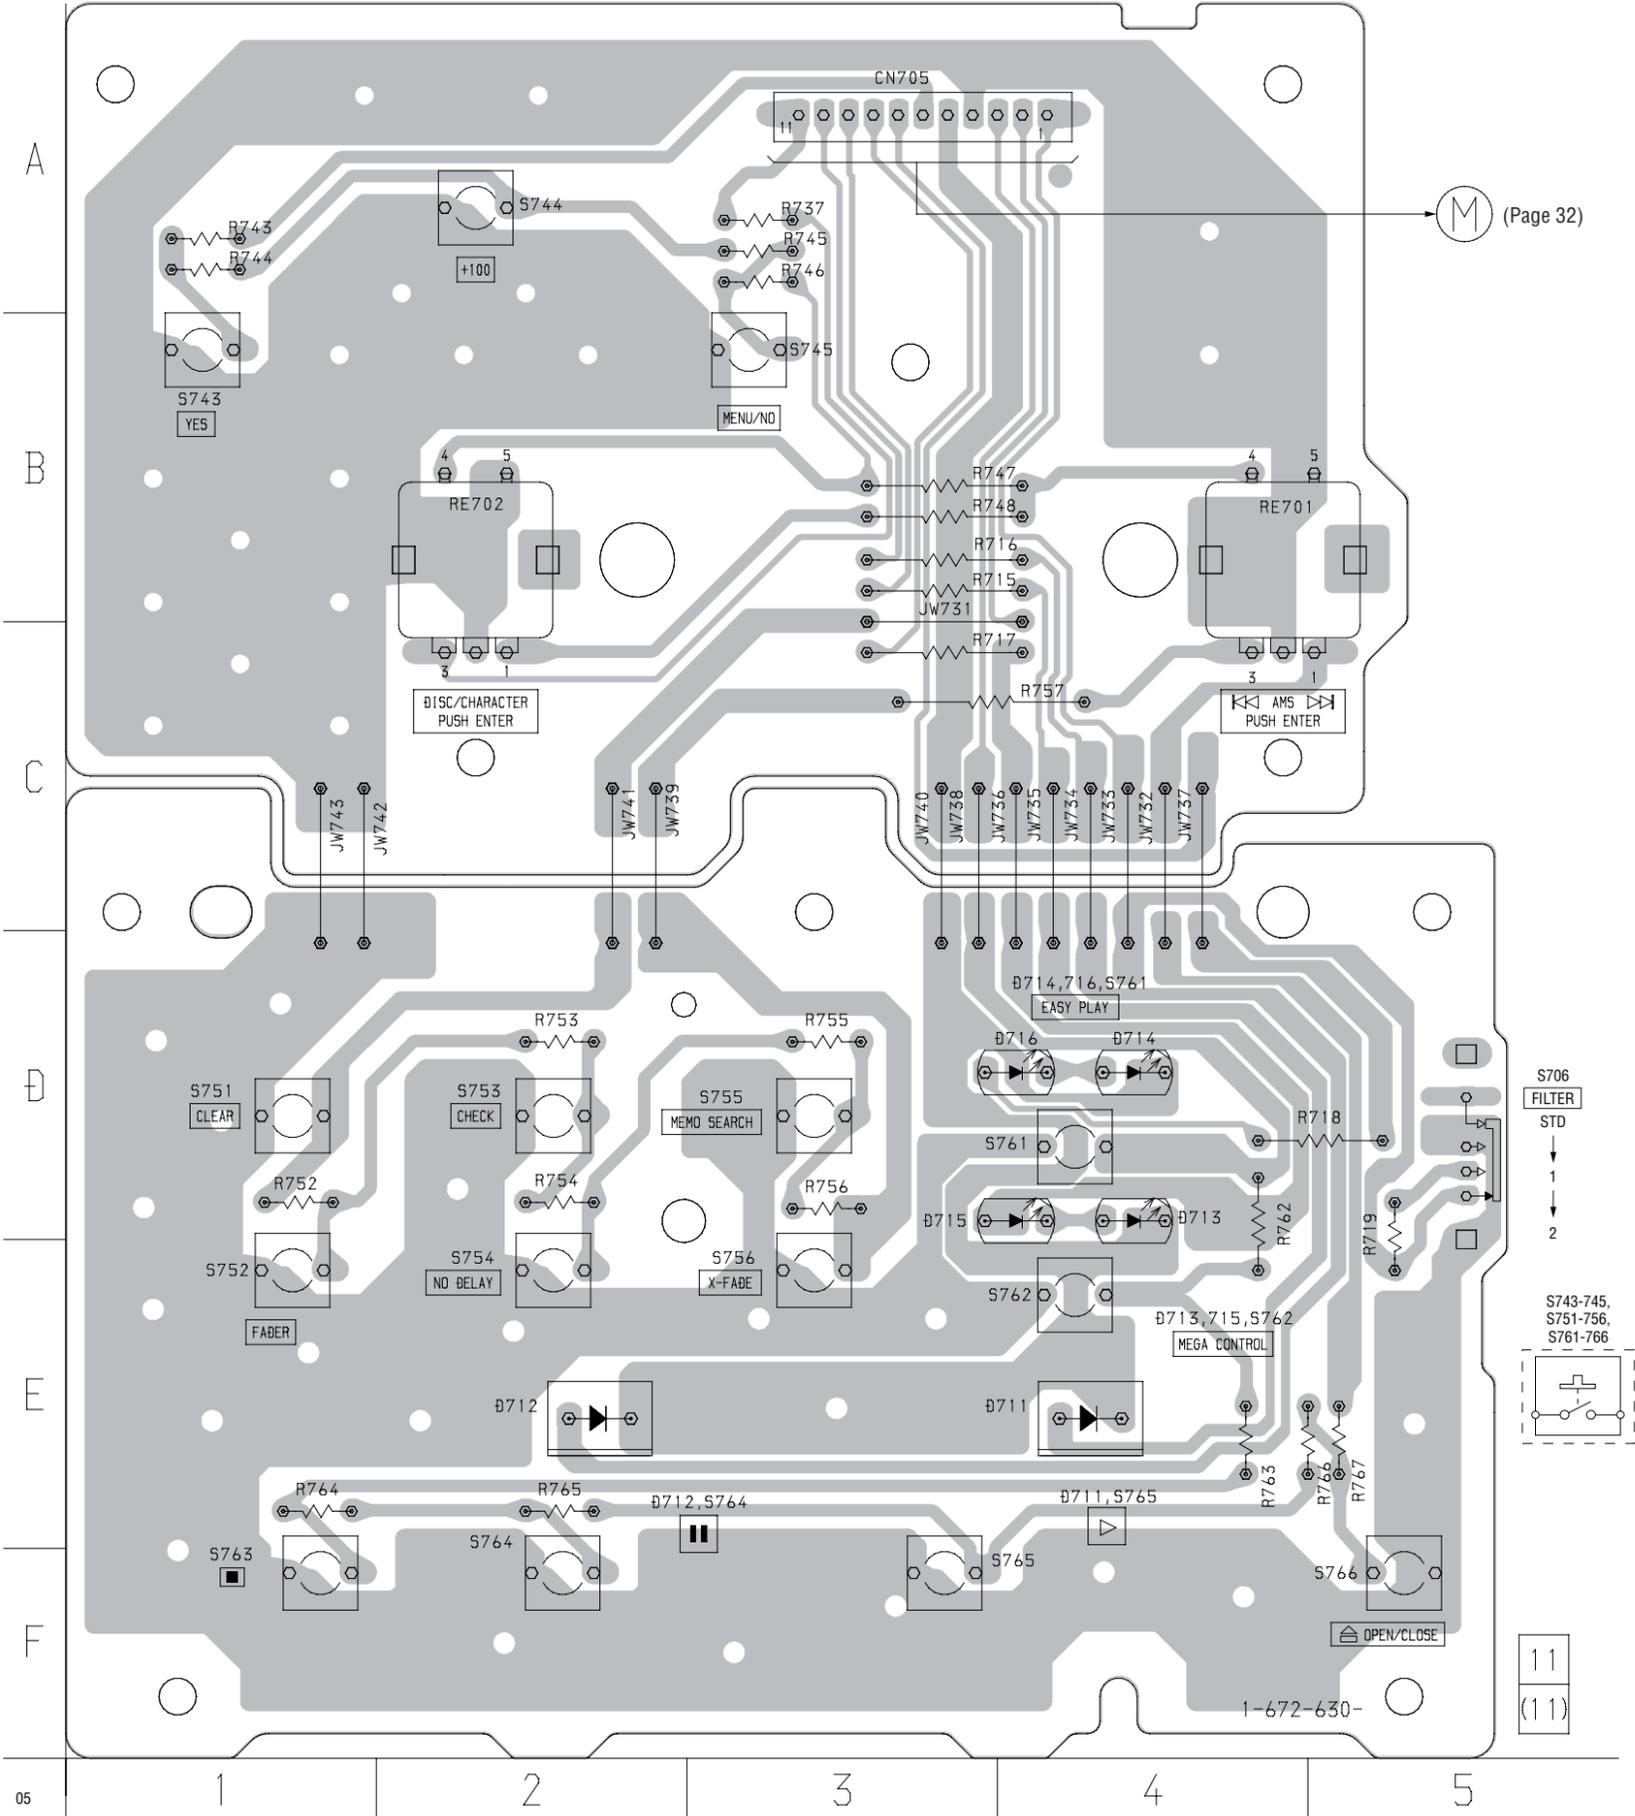

05


8-15. SCHEMATIC DIAGRAM – JOG Board –

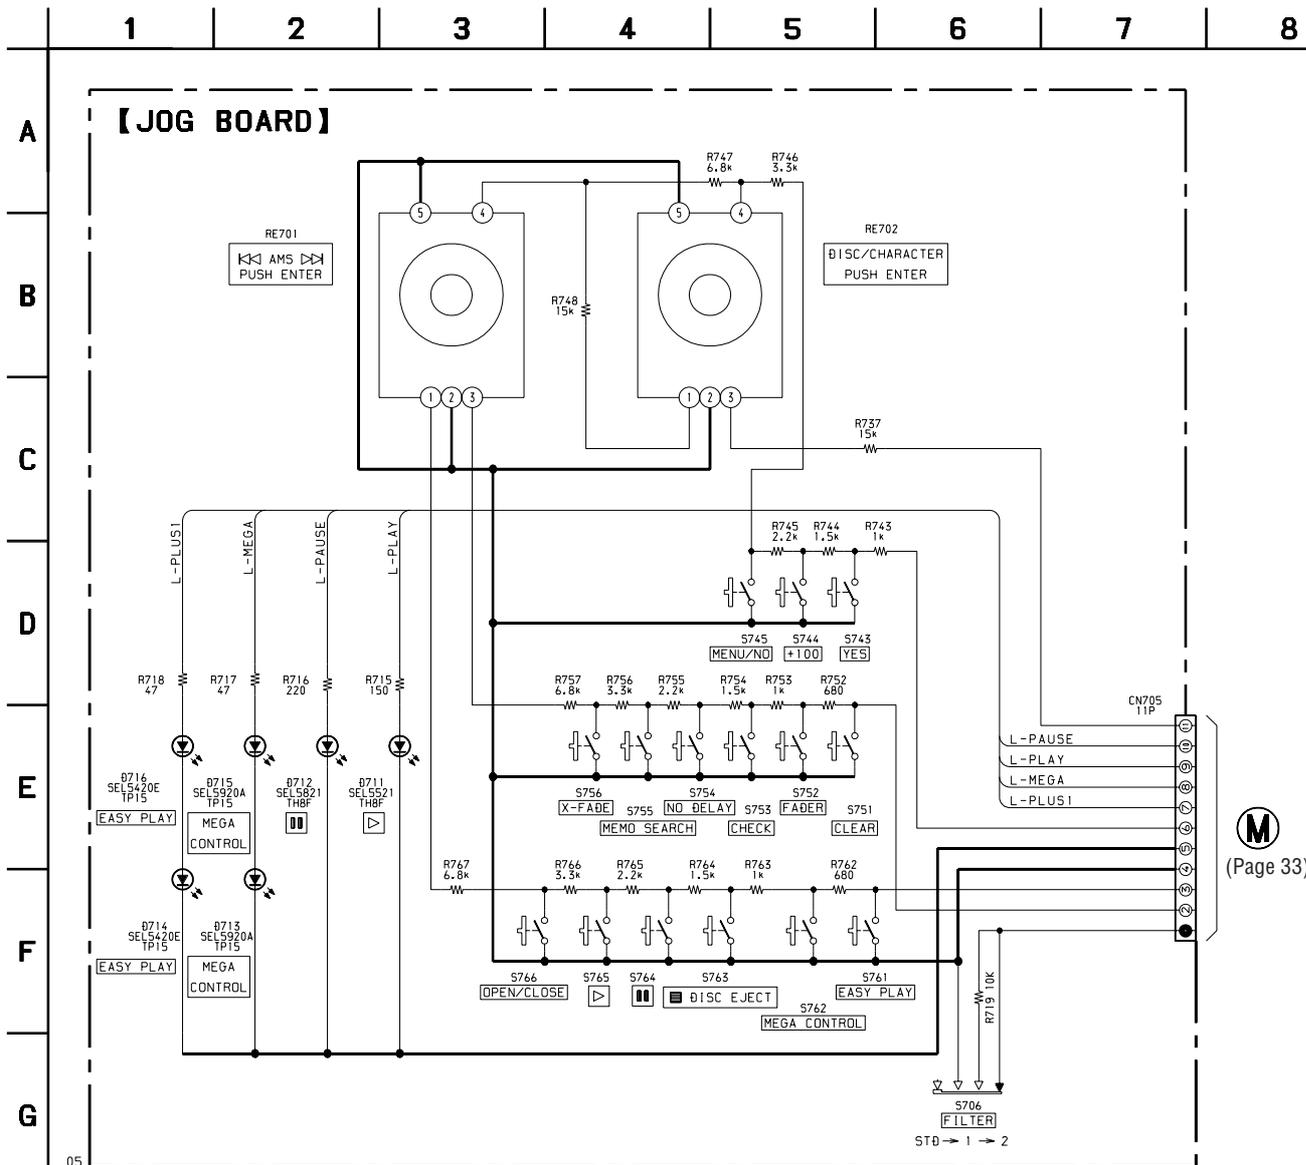

(Page 33)


8-16. PRINTED WIRING BOARDS – D.SENSOR (IN)/D.SENSOR (OUT)/SENSOR (T) Boards –
 • See page 23 for Circuit Boards Location.

【D.SENSOR(IN) BOARD】

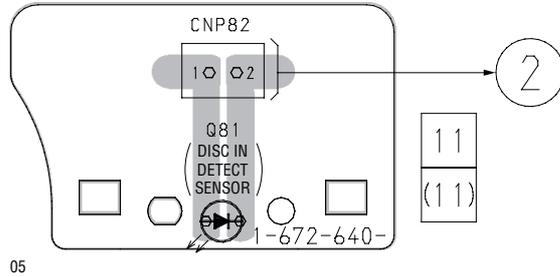


05

【D.SENSOR(OUT) BOARD】

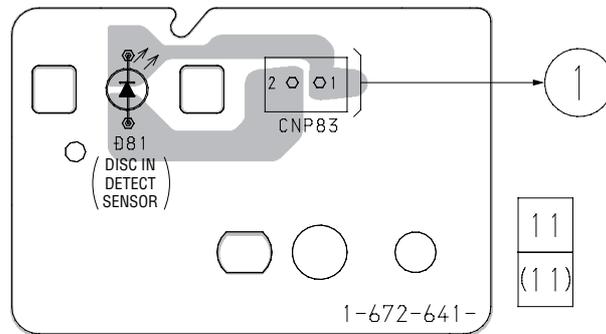

05


【SENSOR(T) BOARD】

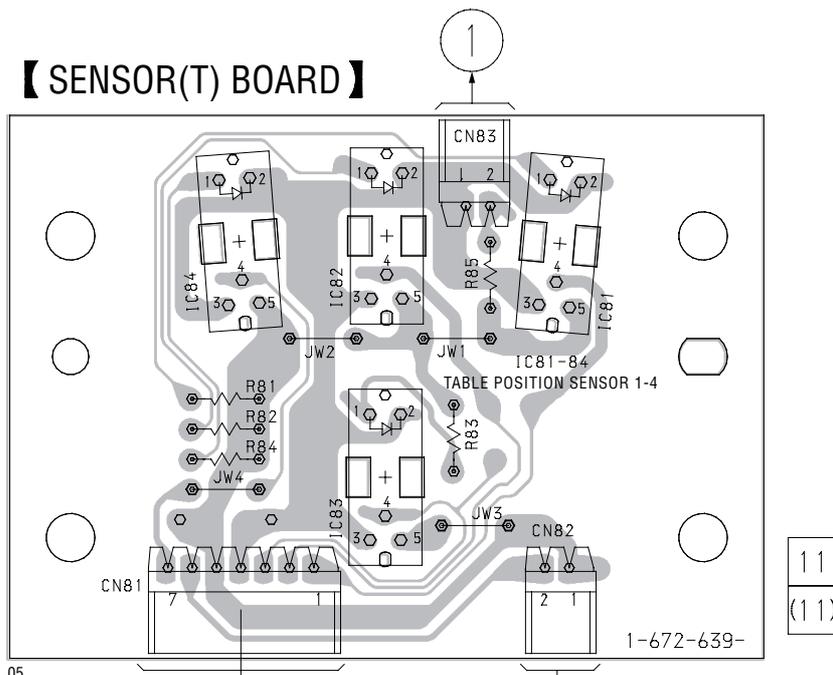

05

(Page 27)

8-17. SCHEMATIC DIAGRAM – D.SENSOR (IN)/D.SENSOR (OUT)/SENSOR (T) Boards –

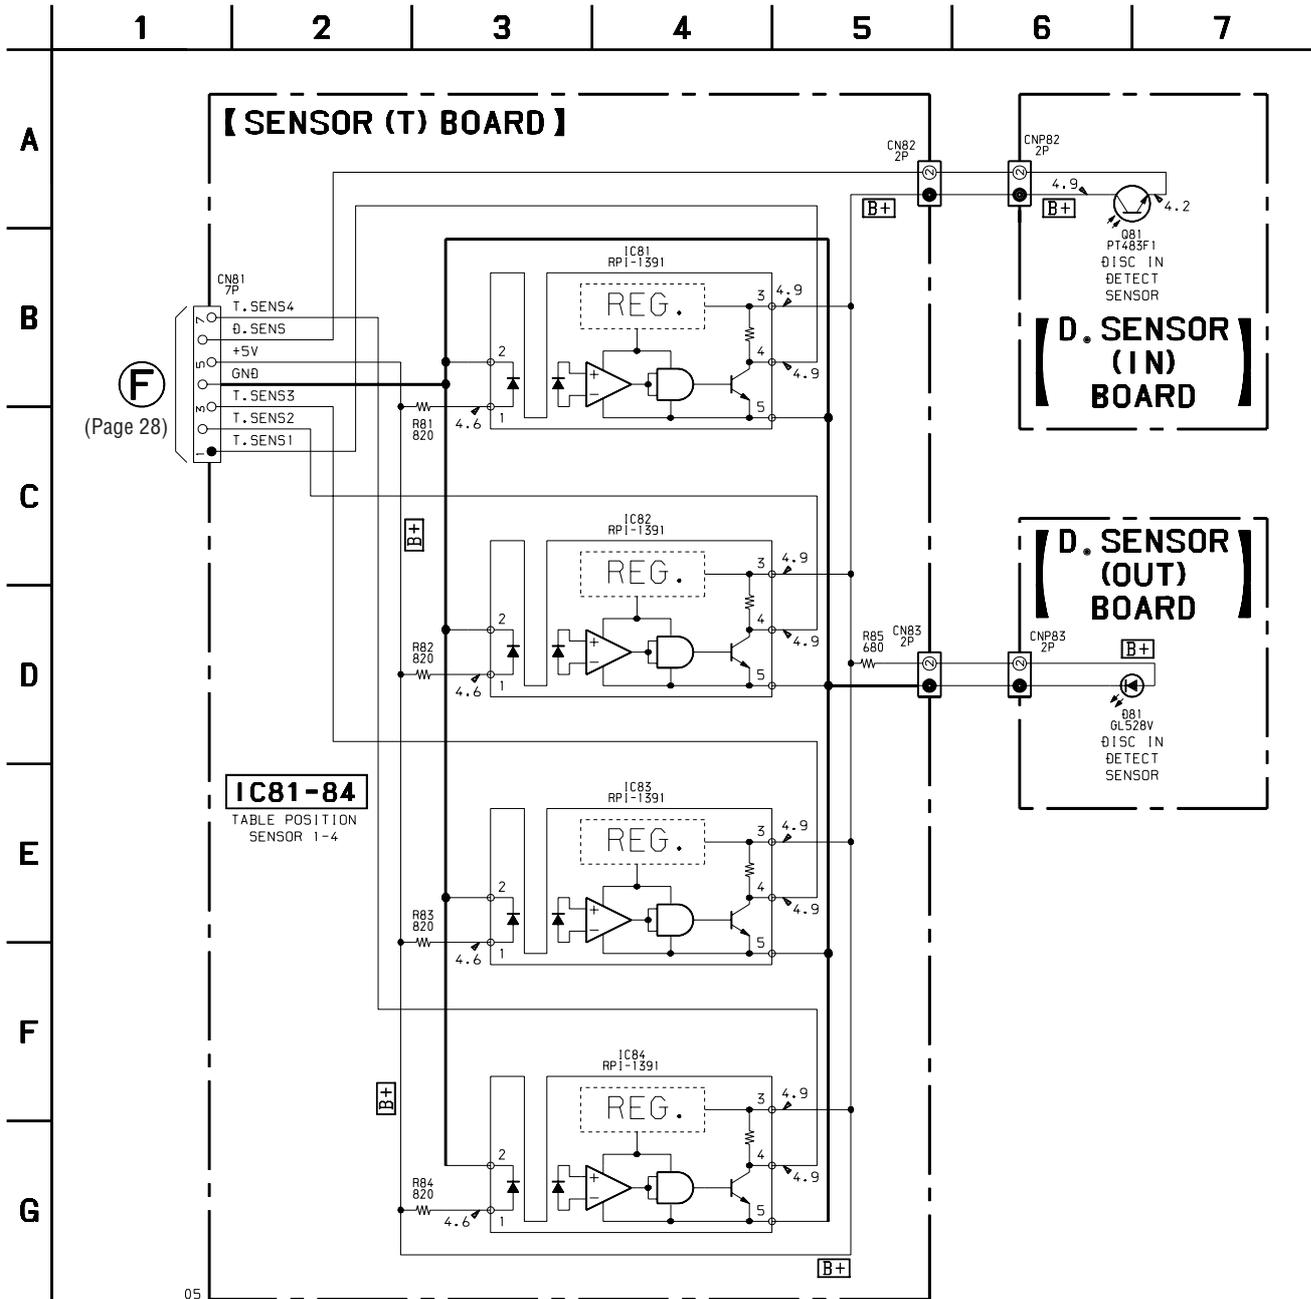


8-18. PRINTED WIRING BOARDS


- D.MOTOR/D.SWITCH/KEY/LED/L.T.MOTOR/L.SWITCH (A)/L.SWITCH (B) Boards -

• See page 23 for Circuit Boards Location.


【LED BOARD】

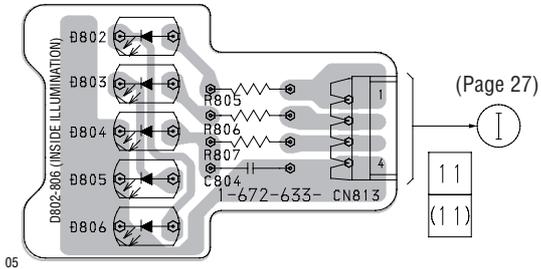


【KEY BOARD】

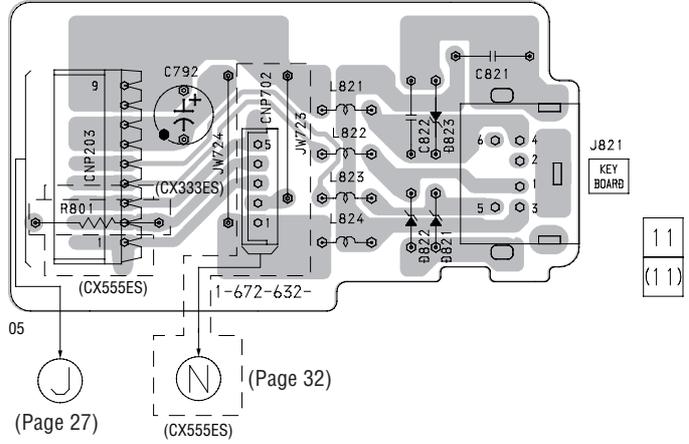


【D.SWITCH BOARD】

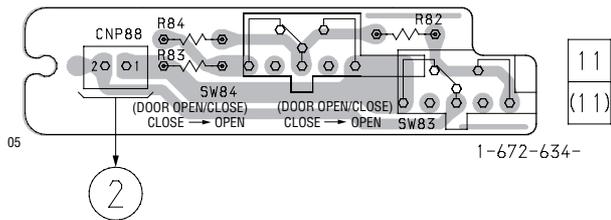


【L.T.MOTOR BOARD】

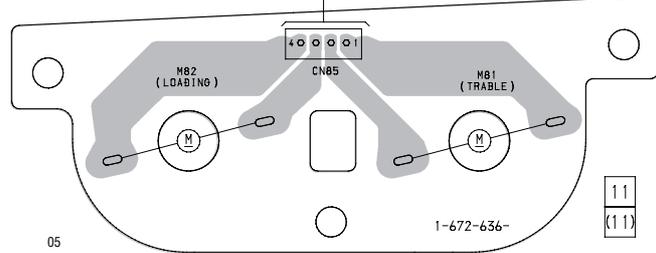


【D.MOTOR BOARD】

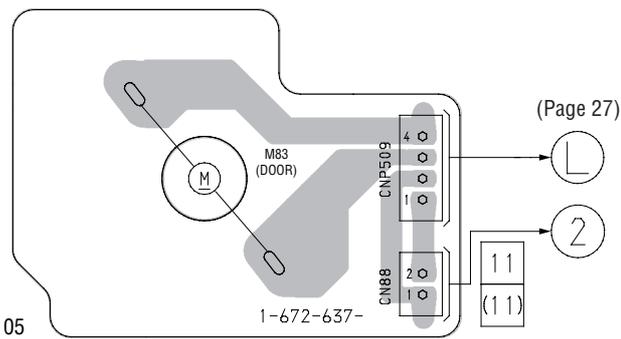

【L.SWITCH(A) BOARD】

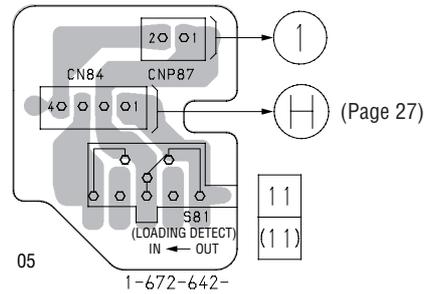


【L.SWITCH(B) BOARD】

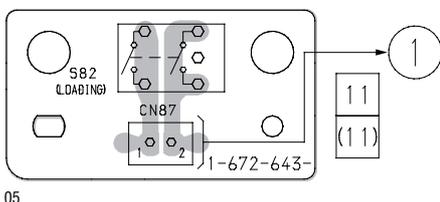

8-19. SCHEMATIC DIAGRAM


- D.MOTOR/D.SWITCH/KEY/LED/L.T.MOTOR/L.SWITCH (A)/L.SWITCH (B) Boards -

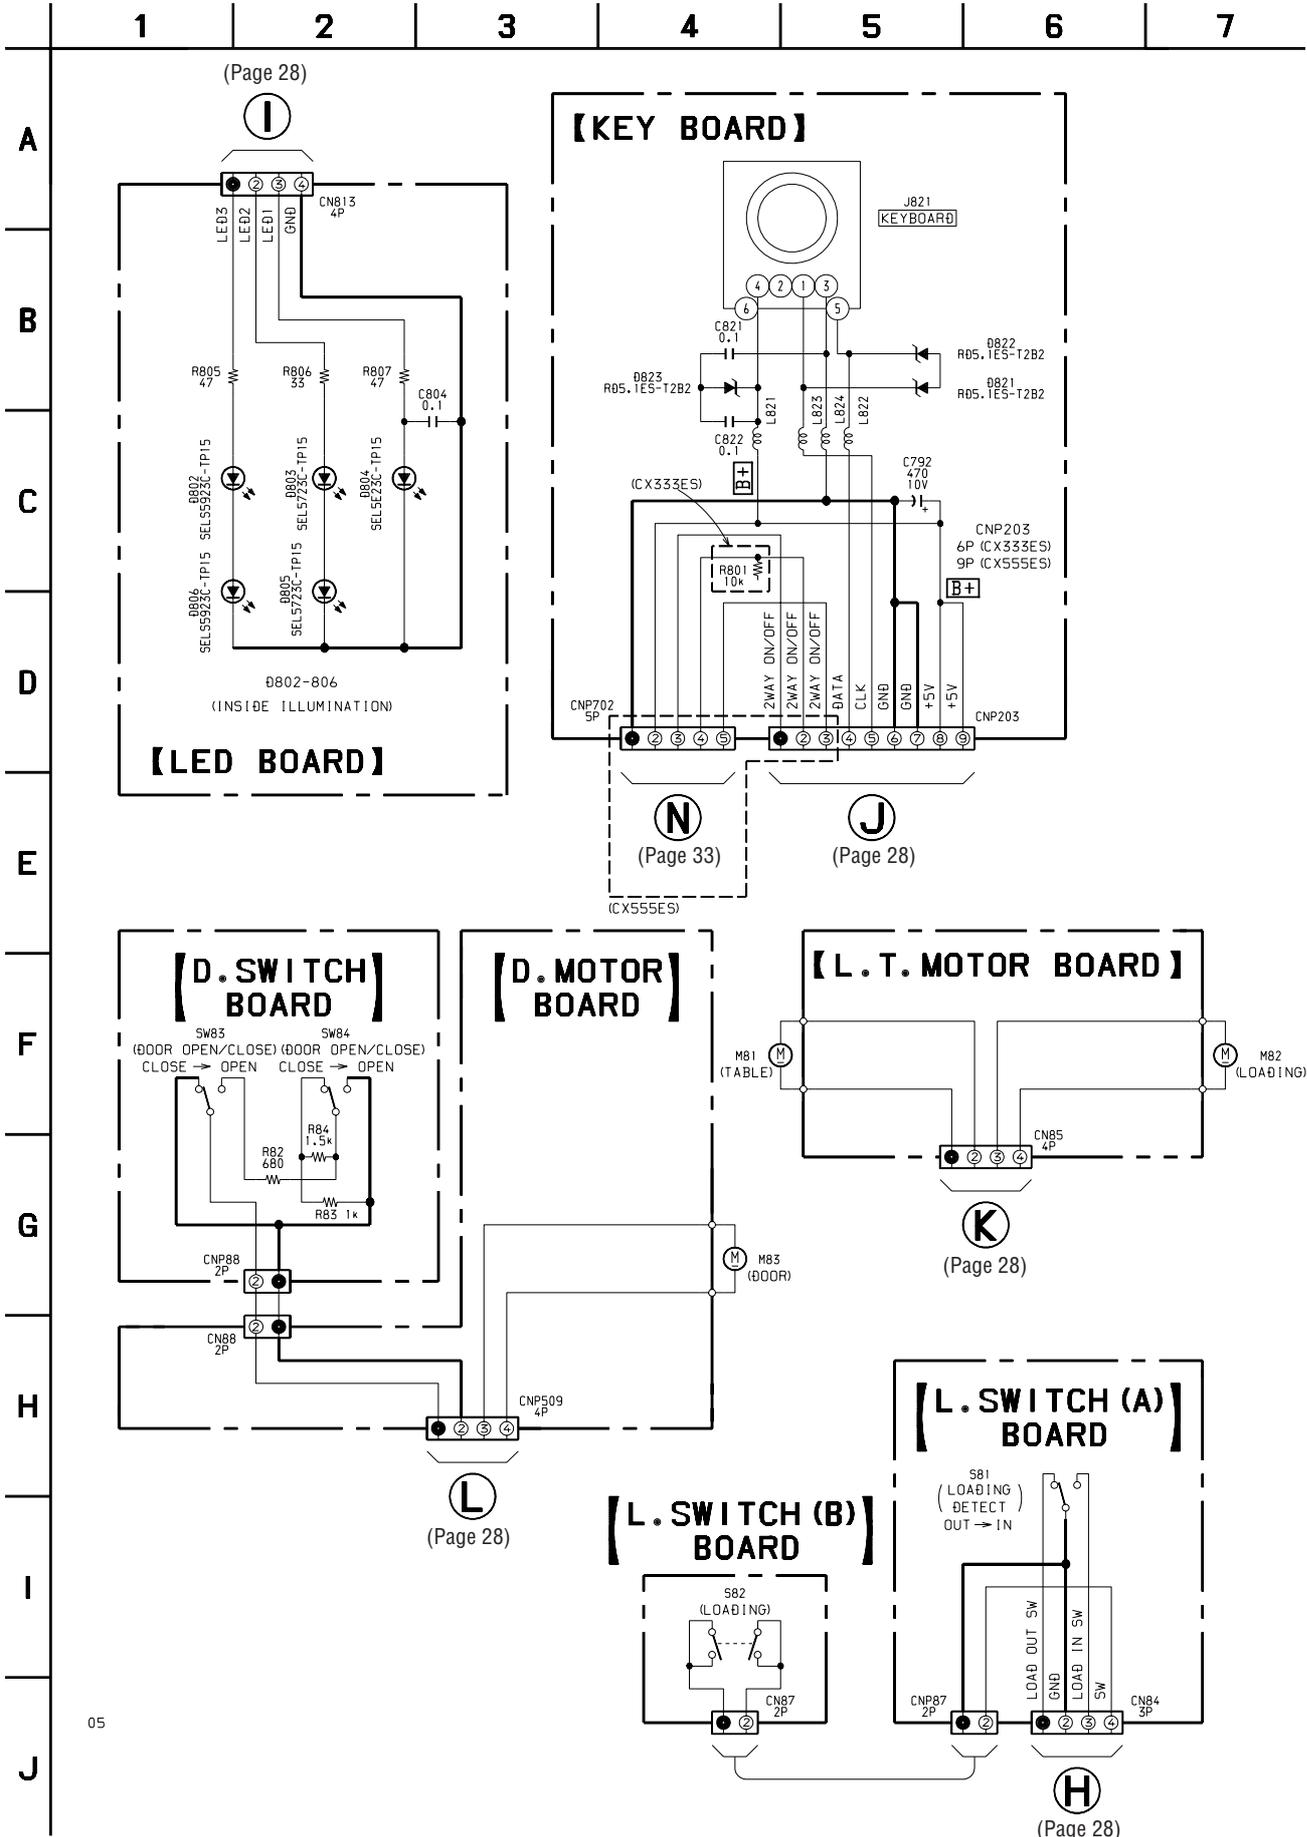

05

8-20. PRINTED WIRING BOARD – POWER Board – • See page 23 for Circuit Boards Location.


【POWER BOARD】

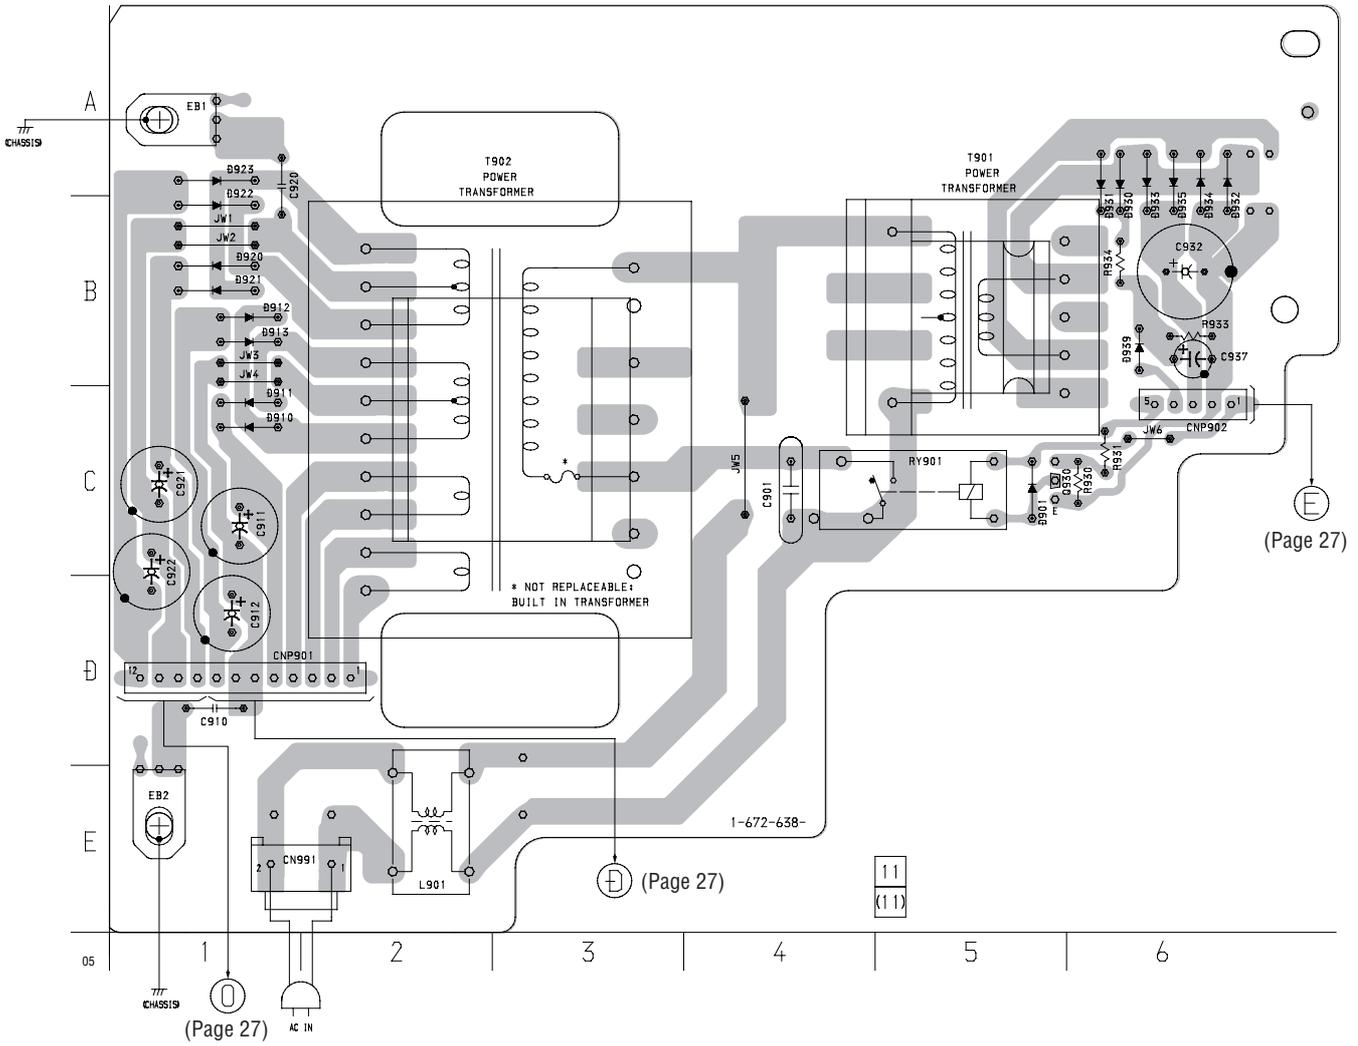

• Semiconductor Location

| Ref. No. | Location | Ref. No. | Location |
|----------|----------|----------|----------|
| D901 | C-5 | D930 | B-6 |
| D910 | C-1 | D931 | B-6 |
| D911 | C-1 | D932 | B-6 |
| D912 | B-1 | D933 | B-6 |
| D913 | B-1 | D934 | B-6 |
| D920 | B-1 | D935 | B-6 |
| D921 | B-1 | D939 | B-6 |
| D922 | B-1 | Q930 | C-5 |
| D923 | A-1 | | |


8-21. SCHEMATIC DIAGRAM – POWER Board –

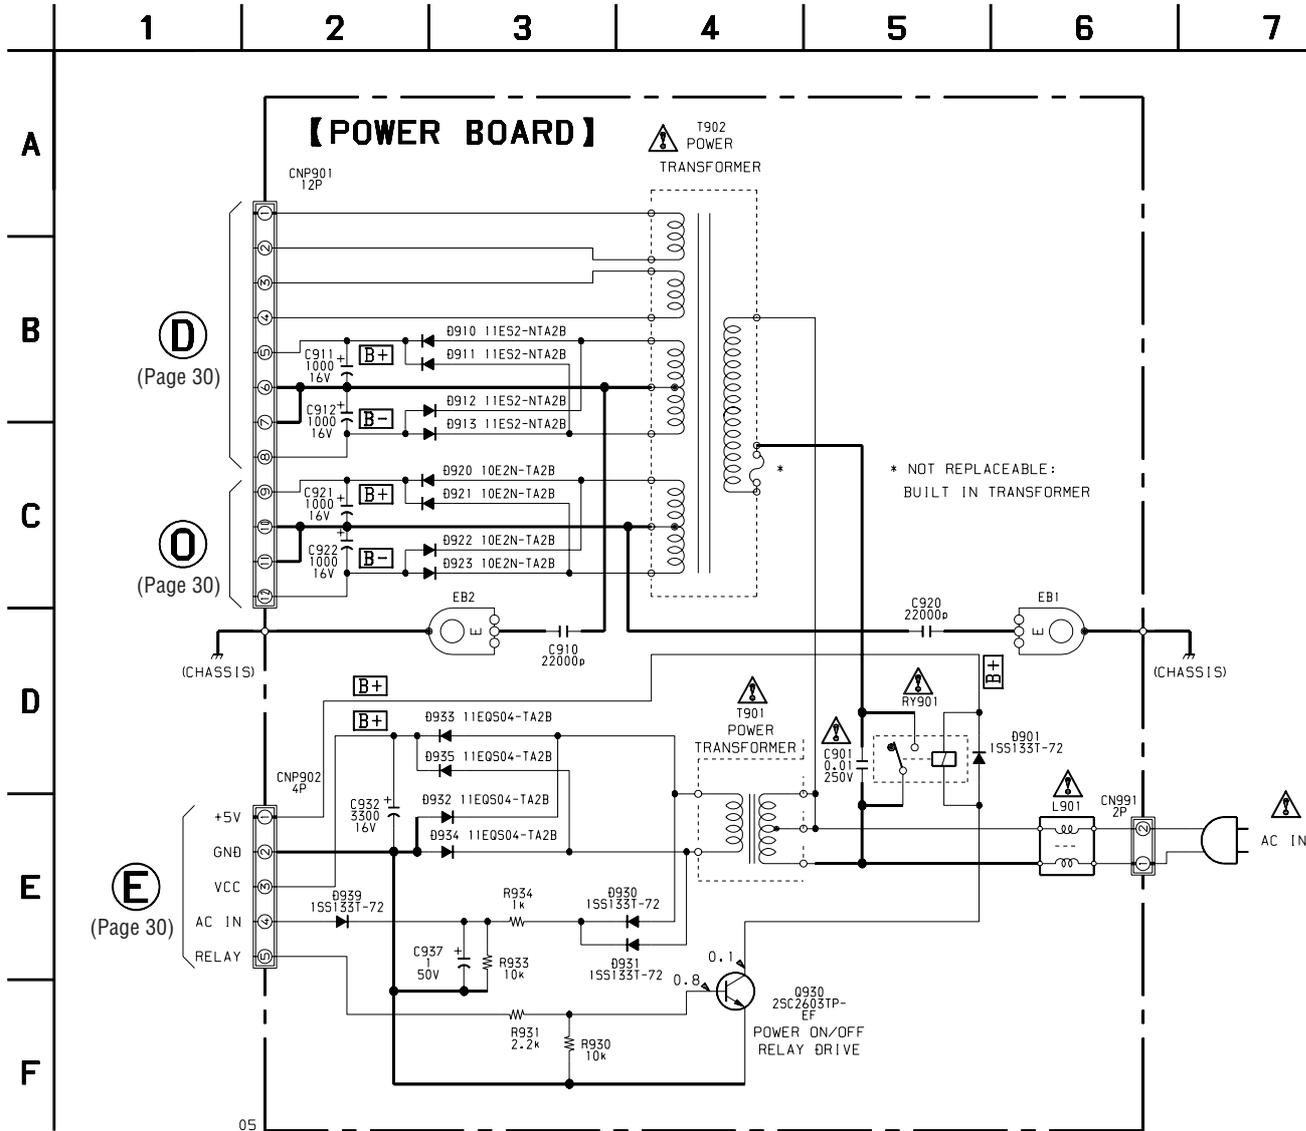


| | |
|---|--|
| <p>The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.</p> | <p>Les composants identifiés par une marque \triangle sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p> |
|---|--|

• Waveforms
– BD Board –


1 IC101 26 (MDP)

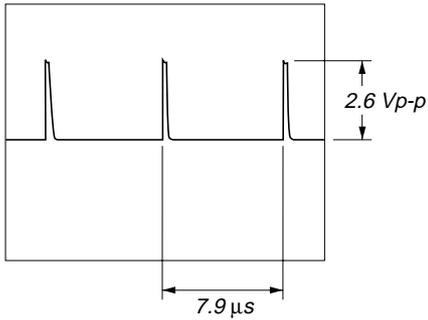


6 IC101 61 (LRCK)

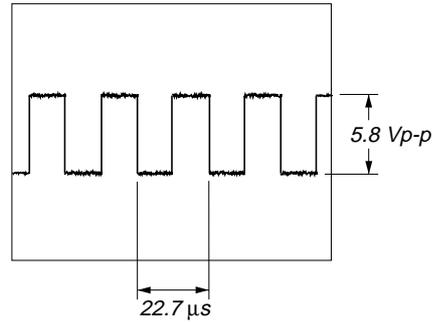


2 IC101 39 (FE)

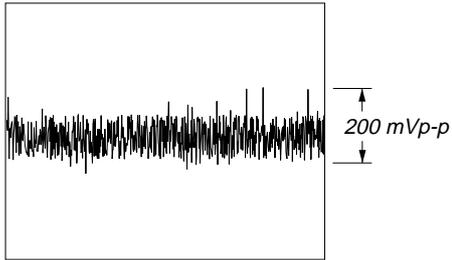


7 IC101 62 (BCK)

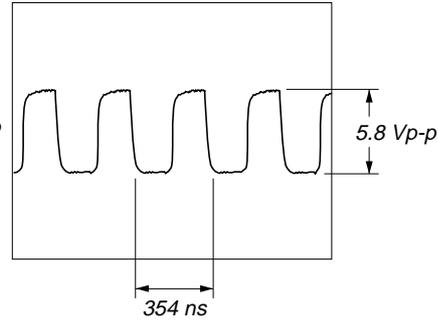


3 IC101 41 (TE)

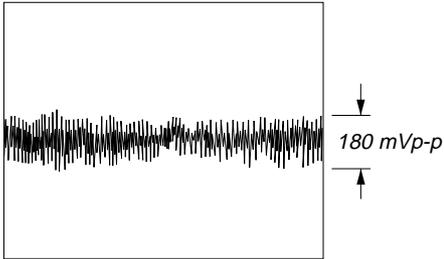


8 IC101 66 (XTAL)

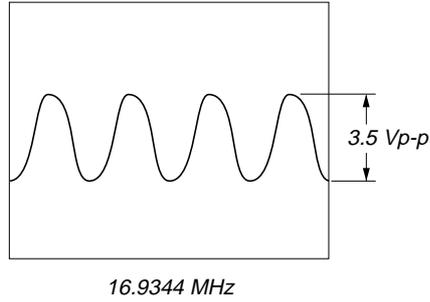

4 IC101 43 (RFDC), IC103 16 (RFO)

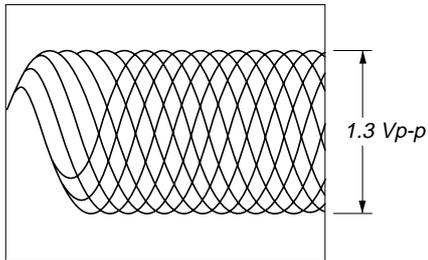


5 IC101 51 (RFAC)

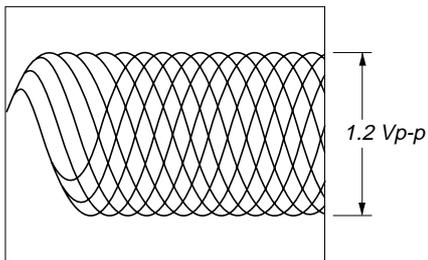


– MAIN Board –


1 IC201 1 (INVO)

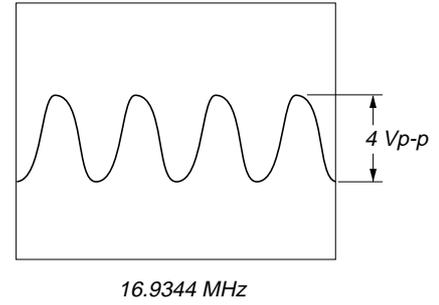


2 IC201 2 (BCKI)

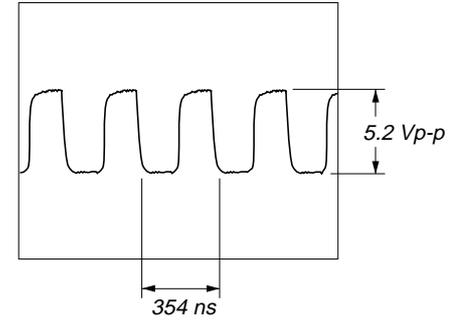


3 IC201 3 (LRCKI)

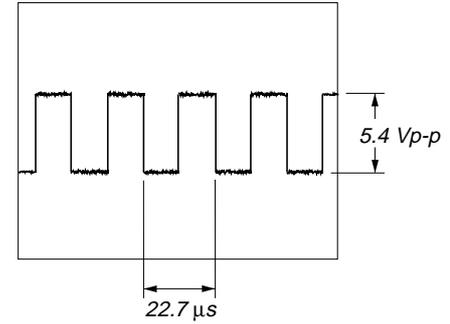

4 IC201 28 (XOUT)

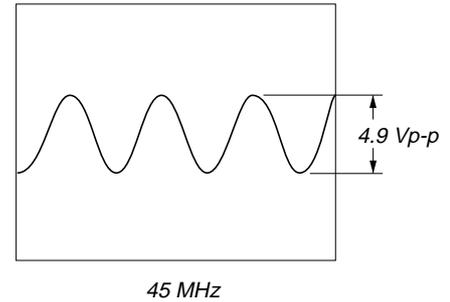


5 IC201 40, 48 (64FSO, 64FSI)

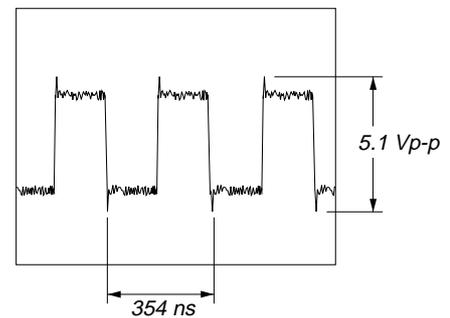


- DISPLAY Board -


6 IC201 ④③, ④⑦ (256FSO, MCLKI)

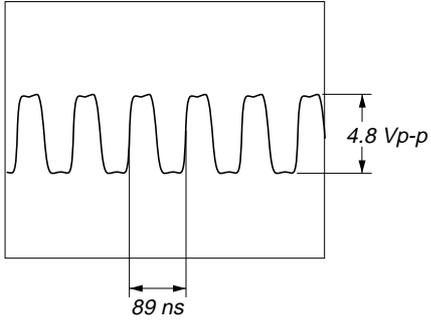


1 IC701 ③⑧ (OSCO)

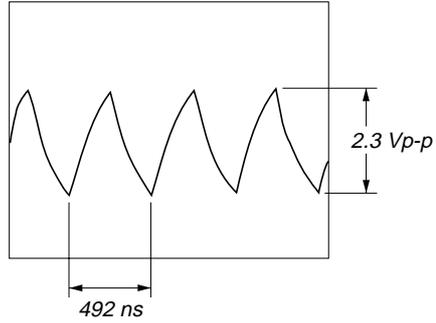


7 IC201 ⑤④ (128FSO)

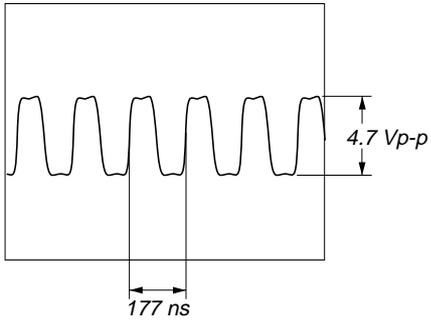


2 IC701 ⑤⑨ (OSCI)

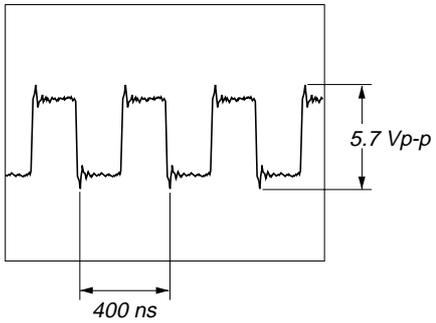


8 IC201 ⑤⑥ (INVI)

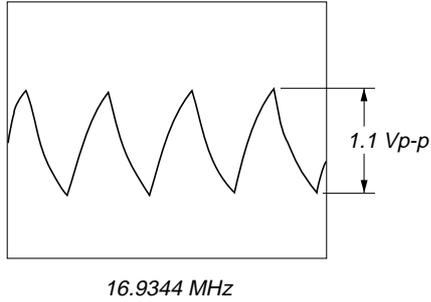

9 IC501 ①② (X'TAL OSC2)

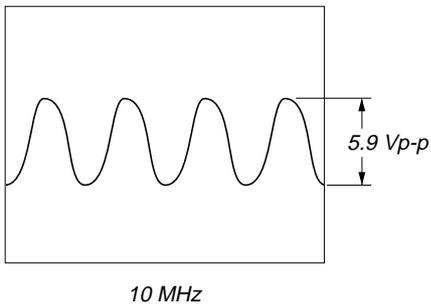


10 IC501 ①⑤ (X IN)

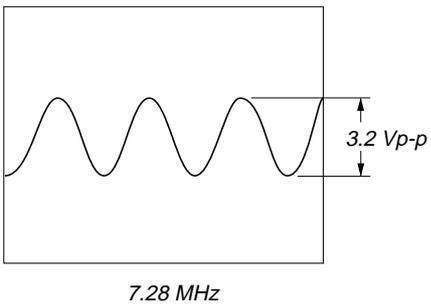


• IC Block Diagrams
– BD Board –

IC101 CXD2587Q

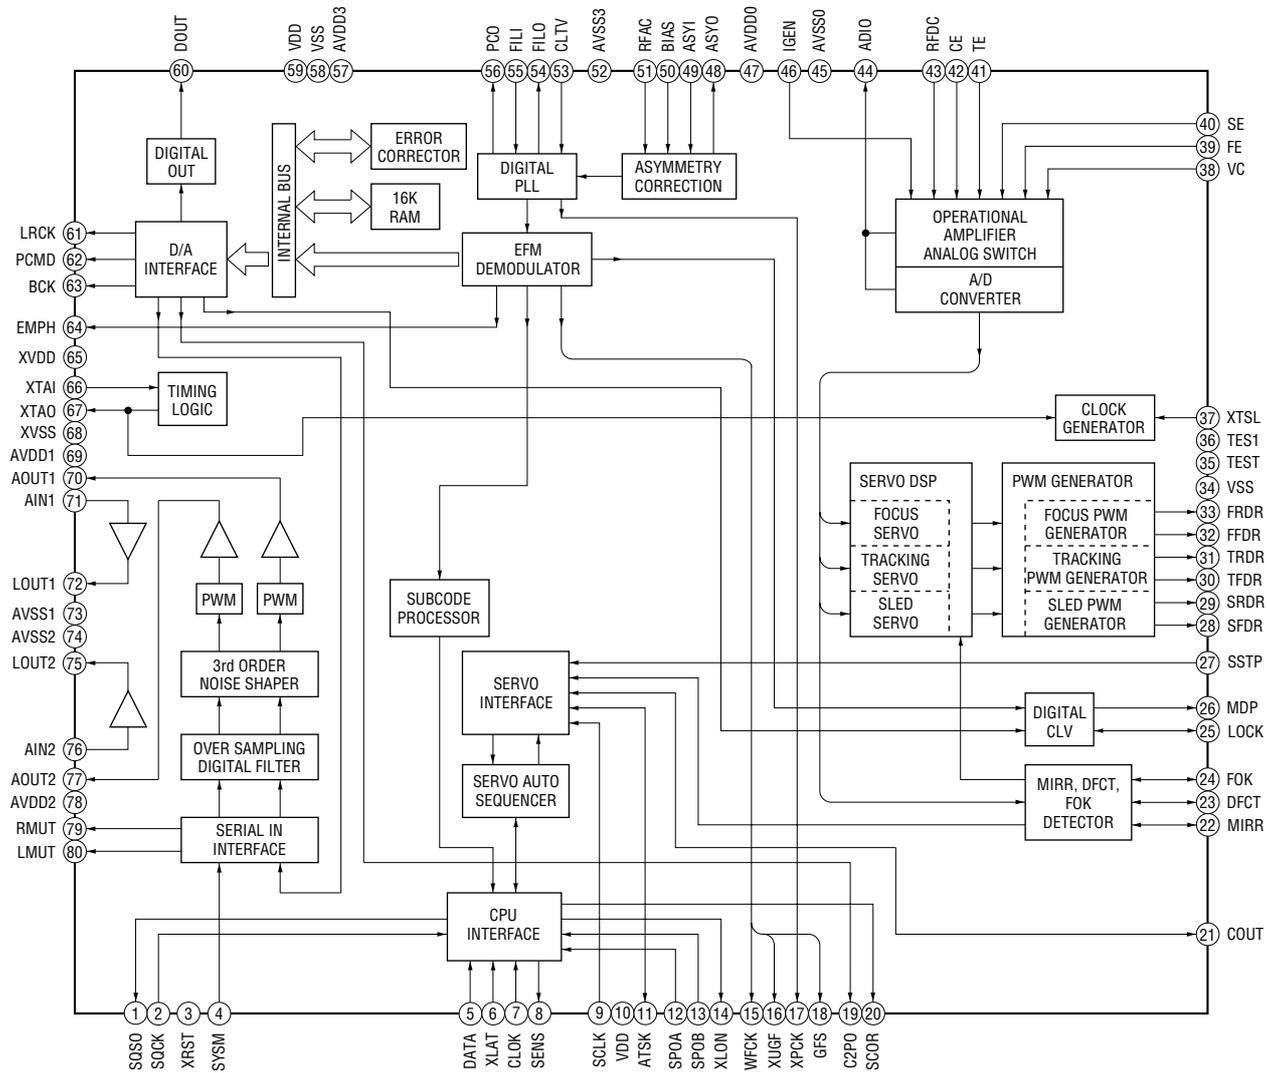


IC103 CXA2568M-T6

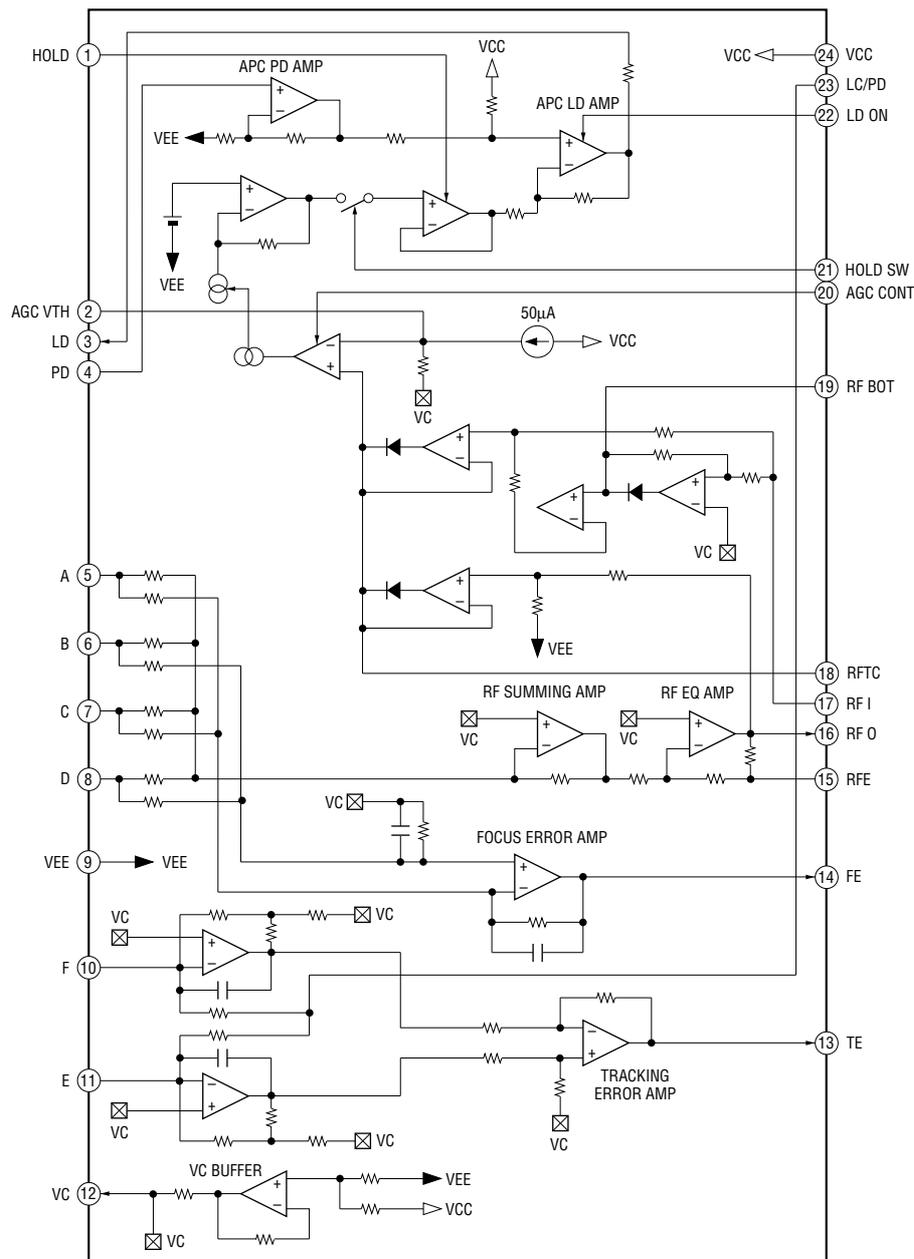


– MAIN Board –


IC201 CXD8735N-TP

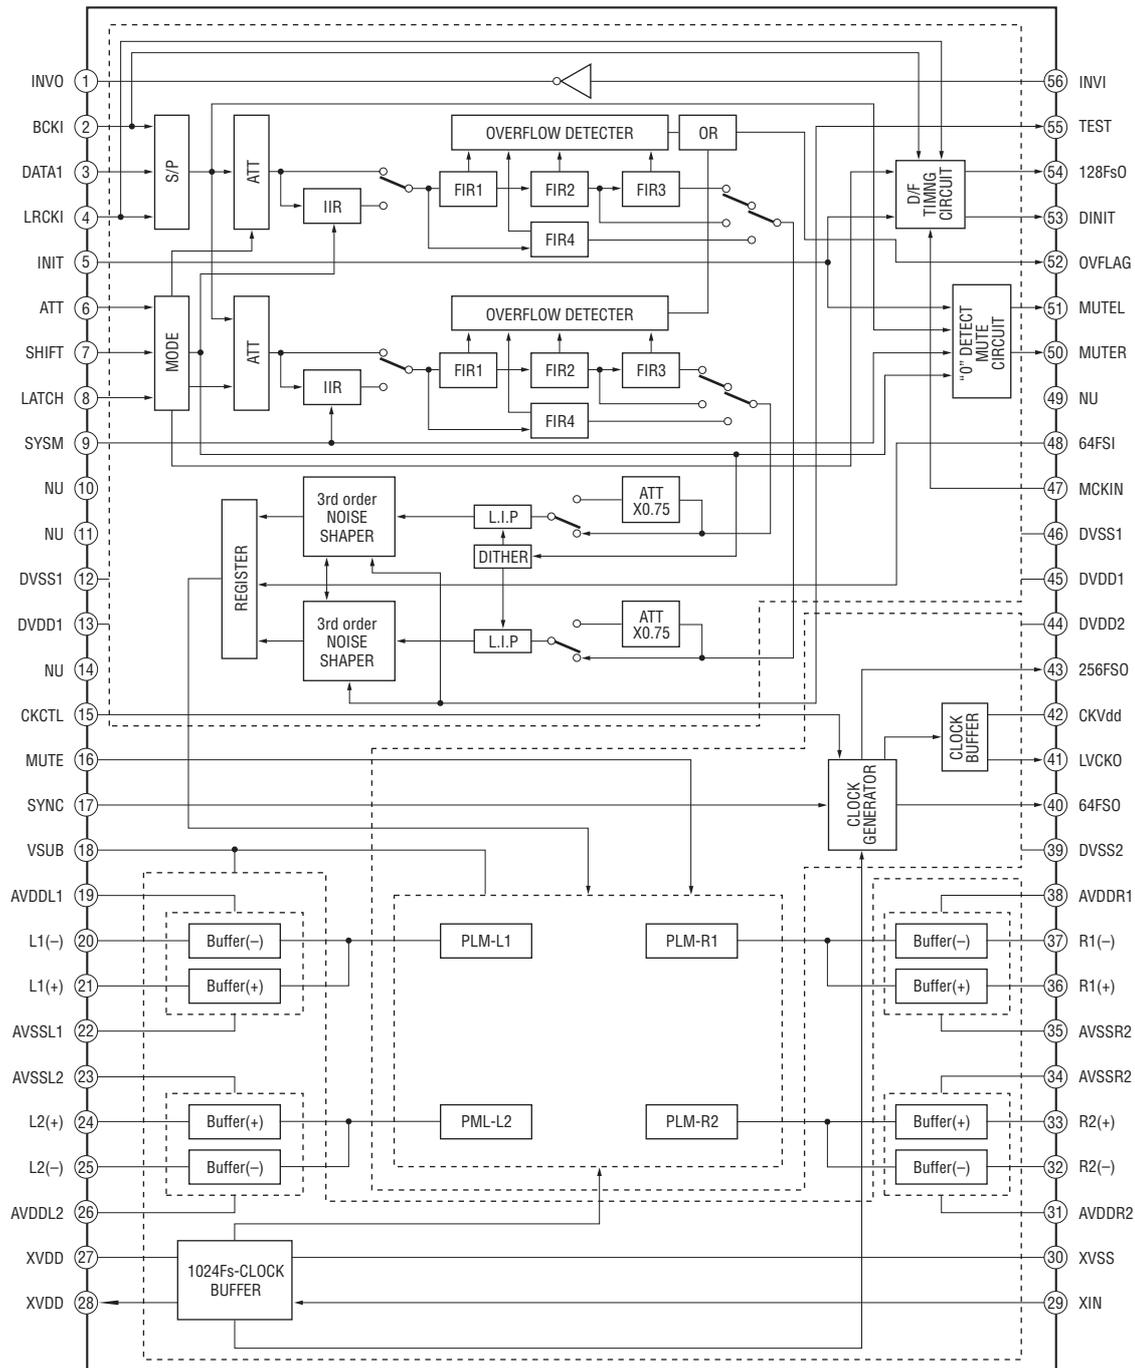


IC202 CXA8055M

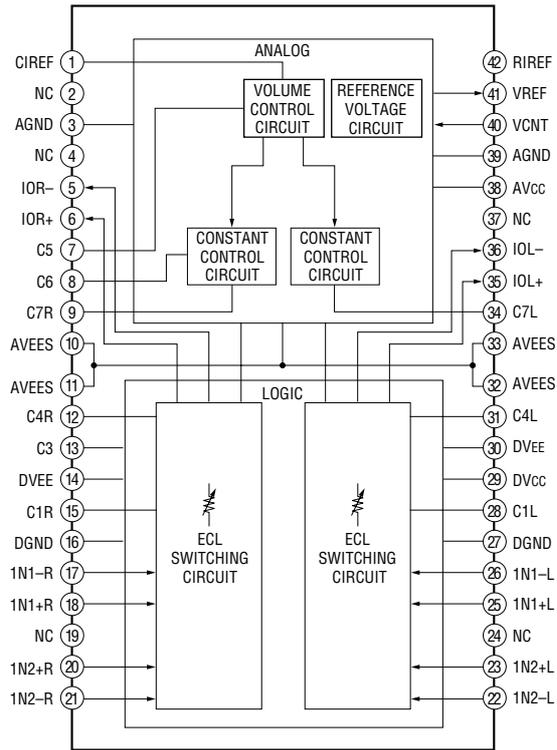


IC505, 560 LA6510

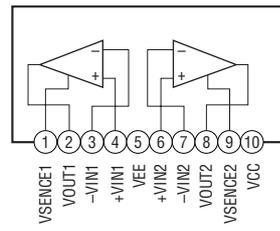

IC931 LA5601

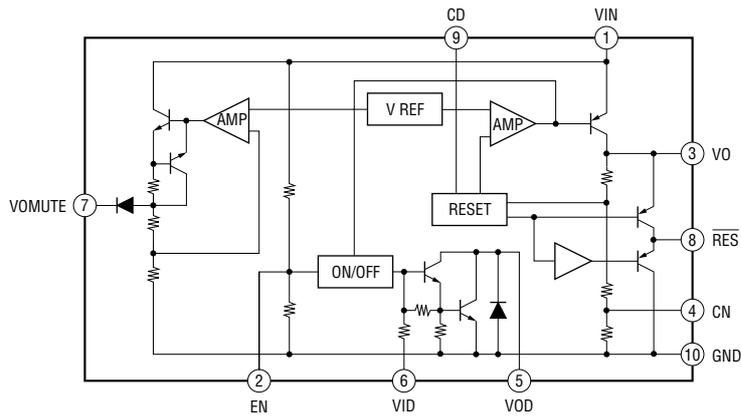

– DISPLAY Board –
 IC702 M66310FP

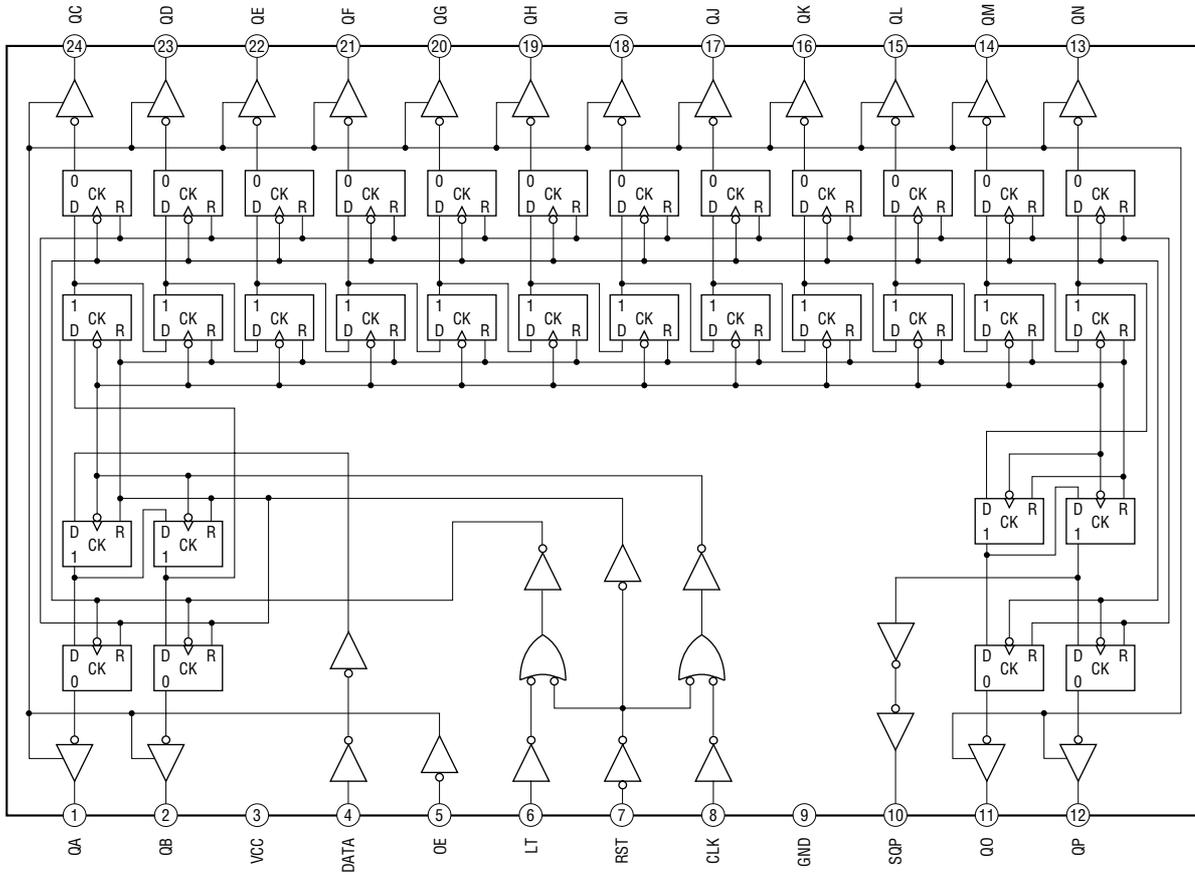

8-22. IC PIN FUNCTION DESCRIPTION

- BD BOARD IC101 CXD2587Q (DIGITAL SIGNAL PROCESSOR, DIGITAL SERVO PROCESSOR, DIGITAL FILTER, D/A CONVERTER)

| Pin No. | Pin Name | I/O | Description |
|---------|----------|-----|--|
| 1 | SQSO | O | Subcode Q data output to the system controller (IC501) |
| 2 | SQCK | I | Subcode Q data reading clock signal input from the system controller (IC501) |
| 3 | XRST | I | System reset signal input from the system controller (IC501) “L”: reset |
| 4 | SYSM | I | Analog line muting on/off control signal input from the system controller (IC501) “H”: line muting on |
| 5 | DATA | I | Command serial data input from the system controller (IC501) |
| 6 | XLAT | I | Command latch pulse input from the system controller (IC501) |
| 7 | CLOK | I | Command serial data transfer clock signal input from the system controller (IC501) |
| 8 | SENS | O | Internal status monitor output to the system controller (IC501) |
| 9 | SCLK | I | SENSE serial data reading clock input from the system controller (IC501) |
| 10 | VDD | — | Power supply terminal (+5V) (digital system) |
| 11 | ATSK | I/O | Input pin for anti-shock (fixed at “L”) |
| 12 | SPOA | I | Microcomputer escape interface input A terminal Not used (open) |
| 13 | SPOB | I | Microcomputer escape interface input B terminal Not used (open) |
| 14 | XLON | O | Microcomputer escape interface output to the CXA2568M (IC103) |
| 15 | WFCK | O | WFCK output terminal Not used (open) |
| 16 | XUGF | O | Not used (open) |
| 17 | XPCK | O | Not used (open) |
| 18 | GFS | O | Not used (open) |
| 19 | C2PO | O | Not used (open) |
| 20 | SCOR | O | Subcode sync (S0+S1) detection signal output to the system controller (IC501) |
| 21 | COUT | I/O | Numbers of track counted signal input/output terminal Not used (open) |
| 22 | MIRR | I/O | Mirror signal input/output terminal Not used (open) |
| 23 | DFCT | I/O | Defect signal input/output terminal Not used (open) |
| 24 | FOK | I/O | Focus OK input/output terminal Not used (open) |
| 25 | LOCK | I/O | GFS is sampled by 460 Hz “H” when GFS is “H” Not used (open) |
| 26 | MDP | O | Spindle motor (M101) servo drive signal output to the BA6392FP (IC102) |
| 27 | SSTP | I | Limit in detect switch (S101) input terminal |
| 28 | SFDR | O | Sled servo drive PWM signal (+) output to the BA6392FP (IC102) |
| 29 | SRDR | O | Sled servo drive PWM signal (-) output to the BA6392FP (IC102) |
| 30 | TFDR | O | Tracking servo drive PWM signal (+) output to the BA6392FP (IC102) |
| 31 | TRDR | O | Tracking servo drive PWM signal (-) output to the BA6392FP (IC102) |
| 32 | FFDR | O | Focus servo drive PWM signal (+) output to the BA6392FP (IC102) |
| 33 | FRDR | O | Focus servo drive PWM signal (-) output to the BA6392FP (IC102) |
| 34 | VSS | — | Ground terminal (digital system) |
| 35 | TEST | I | Input terminal for the test (fixed at “L”) |
| 36 | TES1 | I | Input terminal for the test (fixed at “L”) |
| 37 | XTSL | I | Input terminal for the system clock frequency setting “L”: 45.1584 MHz, “H”: 22.5792 MHz (fixed at “L” in this set) |
| 38 | VC | I | Middle point voltage (+2.5V) input from the CXA2568M (IC103) |
| 39 | FE | I | Focus error signal input from the CXA2568M (IC103) |
| 40 | SE | I | Sled error signal input from the CXA2568M (IC103) |
| 41 | TE | I | Tracking error signal input from the CXA2568M (IC103) |
| 42 | CE | I | Command chip enable signal input from the CXA2568M (IC103) |
| 43 | RFDC | I | RF signal input from the CXA2568M (IC103) |

| Pin No. | Pin Name | I/O | Description |
|---------|----------|-----|--|
| 44 | ADIO | O | Monitor output of the A/D converter input signal Not used (open) |
| 45 | AVSS0 | — | Ground terminal (digital system) |
| 46 | IGEN | I | Stabilized current input for operational amplifiers |
| 47 | AVDD0 | — | Power supply terminal (+5V) (digital system) |
| 48 | ASYO | O | Playback EFM full-swing output terminal |
| 49 | ASYI | I | Playback EFM asymmetry comparator voltage input terminal |
| 50 | BIAS | I | Playback EFM asymmetry circuit constant current input terminal |
| 51 | RFAC | I | EFM signal input from the CXA2568M (IC103) |
| 52 | AVSS3 | — | Ground terminal (digital system) |
| 53 | CLTV | I | Internal VCO control voltage input of the playback master PLL |
| 54 | FILO | O | Filter output for master clock of the playback master PLL |
| 55 | FILI | I | Filter input for master clock of the playback master PLL |
| 56 | PCO | O | Phase comparison output for master clock of the playback EFM master PLL |
| 57 | AVDD3 | — | Power supply terminal (+5V) (digital system) |
| 58 | VSS | — | Ground terminal (digital system) |
| 59 | VDD | — | Power supply terminal (+5V) (digital system) |
| 60 | DOUT | O | Digital audio signal output to the DIGITAL OUT OPTICAL (IC901) |
| 61 | LRCK | O | L/R sampling clock signal (44.1 kHz) output to the D/A converter (IC201) |
| 62 | PCMD | O | D/A interface serial data output to the D/A converter (IC201) |
| 63 | BCK | O | Bit clock signal (2.8224 MHz) output to the D/A converter (IC201) |
| 64 | EMPH | O | De-emphasis control signal output terminal Not used (open) |
| 65 | XVDD | — | Power supply terminal (+5V) (crystal oscillator system) Not used (open) |
| 66 | XTAI | I | System clock input terminal (16.9344 MHz) |
| 67 | XTAO | O | System clock output terminal (16.9344 MHz) Not used (open) |
| 68 | XVSS | — | Ground terminal (crystal oscillator system) Not used (open) |
| 69 | AVDD1 | — | Power supply terminal (+5V) (analog system) |
| 70 | AOUT1 | O | L-ch analog audio signal output terminal Not used (open) |
| 71 | AIN1 | I | L-ch operational amplifiers input terminal Not used (open) |
| 72 | LOUT1 | O | L-ch line output terminal Not used (open) |
| 73 | AVSS1 | — | Ground terminal (analog system) |
| 74 | AVSS2 | — | Ground terminal (analog system) |
| 75 | LOUT2 | O | R-ch line output terminal Not used (open) |
| 76 | AIN2 | I | R-ch operational amplifiers input terminal Not used (open) |
| 77 | AOUT2 | O | R-ch analog audio signal output terminal Not used (open) |
| 78 | AVDD2 | — | Power supply terminal (+5V) (analog system) |
| 79 | RMUT | O | R-ch line muting on/off control signal output terminal Not used (open) |
| 80 | LMUT | O | L-ch line muting on/off control signal output terminal Not used (open) |

• MAIN BOARD IC501 MN101C12GSA1 (SYSTEM CONTROLLER)

| Pin No. | Pin Name | I/O | Description |
|---------|---------------------|-----|---|
| 1 | GND | — | Ground terminal |
| 2 | DOOR SW | I | Door open/close switch (SW83, SW84) input (A/D input) “H”: open |
| 3 | FILTER SW | I | FILTER switch (S706) input (A/D input) “H”: STD, “L”: 1 (2: center voltage input) |
| 4 | KEY1 | I | Key input terminal (A/D input) GROUP2/3/4, CONTINUE, SHUFFLE, PROGRAM, REPEAT keys input and rotary encoder jog dial pulse input (S731 to 737 and RE702) |
| 5 | KEY2 | I | Key input terminal (A/D input) GROUP FILE, GROUP8/7/6/5/1, I/C, TIMER keys input (S721 to 728) |
| 6 | KEY3 | I | Key input terminal (A/D input) HIT LIST, TIME TEXT, YES, +100, MENU/NO keys input and rotary encoder jog dial pulse input (S741 to 745 and RE702) |
| 7 | KEY4 | I | Key input terminal (A/D input) CLEAR, FADER, CHECK, NO DELAY, MEMO SEARCH, X-FADE keys input and rotary encoder jog dial pulse input (S751 to 756 and RE701) |
| 8 | KEY5 | I | Key input terminal (A/D input) EASY PLAY, MEGA CONTROL, ■, ■■, ▷, ≡ OPEN/CLOSE keys input and rotary encoder jog dial pulse input (S761 to 766 and RE701) |
| 9 | D.SENS | I | Disc in detect sensor (D81, Q81) input (A/D input) |
| 10 | VREF | I | Reference voltage (+5V) input terminal (for A/D converter) |
| 11 | VDD | — | Power supply terminal (+5V) |
| 12 | X'TAL OSC1 | O | Main system clock output terminal (10 MHz) |
| 13 | X'TAL OSC2 | I | Main system clock input terminal (10 MHz) |
| 14 | VSS | — | Ground terminal |
| 15 | XI | I | Sub system clock input terminal Not used (open) |
| 16 | XO | O | Sub system clock output terminal Not used (open) |
| 17 | GND | — | Ground terminal |
| 18 | AC IN | I | Power monitor input terminal |
| 19 | ICSW (RELAY ON/OFF) | O | Relay drive signal output for the power on/off control “H”: relay on |
| 20 | LEDLT | O | Serial data latch pulse output to the LED driver (IC702) |
| 21 | FLDATA | O | Serial data output to the FL driver (IC701) and LED driver (IC702) |
| 22 | FLLT | O | Serial data latch pulse output to the FL driver (IC701) |
| 23 | FLCLK | O | Serial data transfer clock signal output to the FL driver (IC701) and LED driver (IC702) |
| 24 | RESET OUT | O | System reset signal output to the CXD2587Q (IC101) and BA6392FP (IC102) on the CD block and FL driver (IC701) “L”: reset |
| 25 | STANDBY-LED | O | LED drive signal output of the STANDBY indicator (D710) “H”: LED on (standby mode) |
| 26 | RMIN | I | Remote control signal input from remote control receiver (IC703) |
| 27 | T2 | I | Table position sensor (IC82) input terminal |
| 28 | T4 | I | Table position sensor (IC84) input terminal |
| 29 | BUSIN | I | Sircs remote control signal input for the CONTROL A1II (J901, 902) |
| 30 | SCOR | I | Subcode sync (S0+S1) detection signal input from the CXD2587Q (IC101) |
| 31 | KBCIN | I | Serial data transfer clock signal input from the KEYBOARD (J821) |
| 32 | T1 | I | Table position sensor (IC81) input terminal |
| 33 | RESET | I | System reset signal input from the reset signal generator (IC931) “L”: reset For several hundreds msec. after the power supply rises, “L” is input, then it change to “H” |
| 34 | KBCOUT | O | Serial data transfer clock signal output to the KEYBOARD (J821) |
| 35 | KBDOUT | O | Serial data output to the KEYBOARD (J821) |
| 36 | KBDIN | I | Serial data input from the KEYBOARD (J821) |
| 37 | TEST-PULSE2 | O | Disc in detect sensor test output terminal |
| 38 | TEST PULSE | O | Disc in detect sensor test output terminal |


| Pin No. | Pin Name | I/O | Description |
|----------|--|-----|--|
| 39 | AGC | O | Laser power control signal output to the CXA2568M (IC103) on the CD block |
| 40 | SMUTE | O | Muting on/off control signal output terminal "H" active |
| 41 | AMUTE | O | Analog line muting on/off control signal output to the CXD2587Q (IC101) "H": line muting on |
| 42 | DATA | O | Command serial data output to the CXD2587Q (IC101) |
| 43 | XLT | O | Command latch pulse output to the CXD2587Q (IC101) |
| 44 | CLK | O | Command serial data transfer clock signal output to the CXD2587Q (IC101) |
| 45 | SENS | I | Internal status monitor input from the CXD2587Q (IC101) |
| 46 | SUBQ | I | Subcode Q data input from the CXD2587Q (IC101) |
| 47 | SQCK | O | SENSE serial data reading clock and subcode Q data reading clock signal output to the CXD2587Q (IC101) |
| 48 | LED3 | O | LED drive signal output of the inside illumination indicator (D802, 806) "L": LED on |
| 49 | LED2 | O | LED drive signal output of the inside illumination indicator (D803, 805) "L": LED on |
| 50 | LED1 | O | LED drive signal output of the inside illumination indicator (D804) "L": LED on |
| 51 | SELECT | I | Setting terminal for the model (fixed at "L") |
| 52 | T3 | I | Table position sensor (IC83) input terminal |
| 53 | SELECT | I | Setting terminal for the model "H": J model, "L": other models |
| 54 | SELECT | I | Setting terminal for the model "H": ES model, "L": HiFi model (fixed at "H") |
| 55 | SELECT | I | Setting terminal for the model "H": 2 way model, "L": 1 way model |
| 56 | 2WAY-LT | O | Microcomputer chip enable output to the keyboard control (IC502) |
| 57 | CX5/CX6 | O | Serial data latch pulse signal output to the D/A converter (IC201) |
| 58 | CX3/CX4 | O | Not used (open) |
| 59 | 2WAYLT | O | Reset signal output terminal |
| 60 | AFADJ | I | Setting terminal for the test mode "L": AFADJ mode, Normally: fixed at "H" |
| 61 | ADJ | I | Setting terminal for the test mode "L": ADJ mode, Normally: fixed at "H" |
| 62 | <u>WE</u> | O | Data write enable signal output to the static RAM (IC504) "L" active |
| 63 to 77 | A13, A8, A9 to A11, A14, A12, A7 to A0 | O | Address signal output to the static RAM (IC504) |
| 78 | CS | O | Chip enable signal output to the static RAM (IC504) "H" active |
| 79 to 86 | D2, D1, D0, D3 to D7 | I/O | Two-way data bus with the static RAM (IC504) |
| 87 | BUSOUT | O | Sires remote control signal output for the CONTROL A1II (J901, 902) |
| 88 | CD2 | I | COMMAND MODE CD switch (S902) input terminal (A/D input) *1 |
| 89 | CD3 | I | COMMAND MODE CD switch (S902) input terminal (A/D input) *1 |
| 90 | SW | I | Loading switch (S82) input (A/D input) |
| 91 | INSW | I | Loading (in) detect switch (S81) input (A/D input) |
| 92 | OUTSW | I | Loading (out) detect switch (S81) input (A/D input) |
| 93 | DOOROUT | O | Door motor drive signal (door open) output to the LA6510 (IC506) |
| 94 | DOORIN | O | Door motor drive signal (door close) output to the LA6510 (IC506) |
| 95 | GND | — | Ground terminal |
| 96 | LDOOUT | O | Loading motor drive signal (load-out direction) output to the LA6510 (IC506) |
| 97 | LDIN | O | Loading motor drive signal (load-in direction) output to the LA6510 (IC506) |

*1 COMMAND MODE CD switch (S902) position

| Terminal | Mode | | |
|-------------|------|-----|-----|
| | 1 | 2 | 3 |
| CD2 (pin ⑧) | "H" | "L" | "H" |
| CD3 (pin ⑨) | "H" | "H" | "L" |


| Pin No. | Pin Name | I/O | Description |
|---------|----------|-----|--|
| 98 | TBLR | O | Table motor drive signal (clockwise) output to the LA6510 (IC505) |
| 99 | TBLL | O | Table motor drive signal (counterclockwise) output to the LA6510 (IC505) |
| 100 | DVDD | — | Power supply terminal (+5V) (digital system) |

(2) CHASSIS SECTION

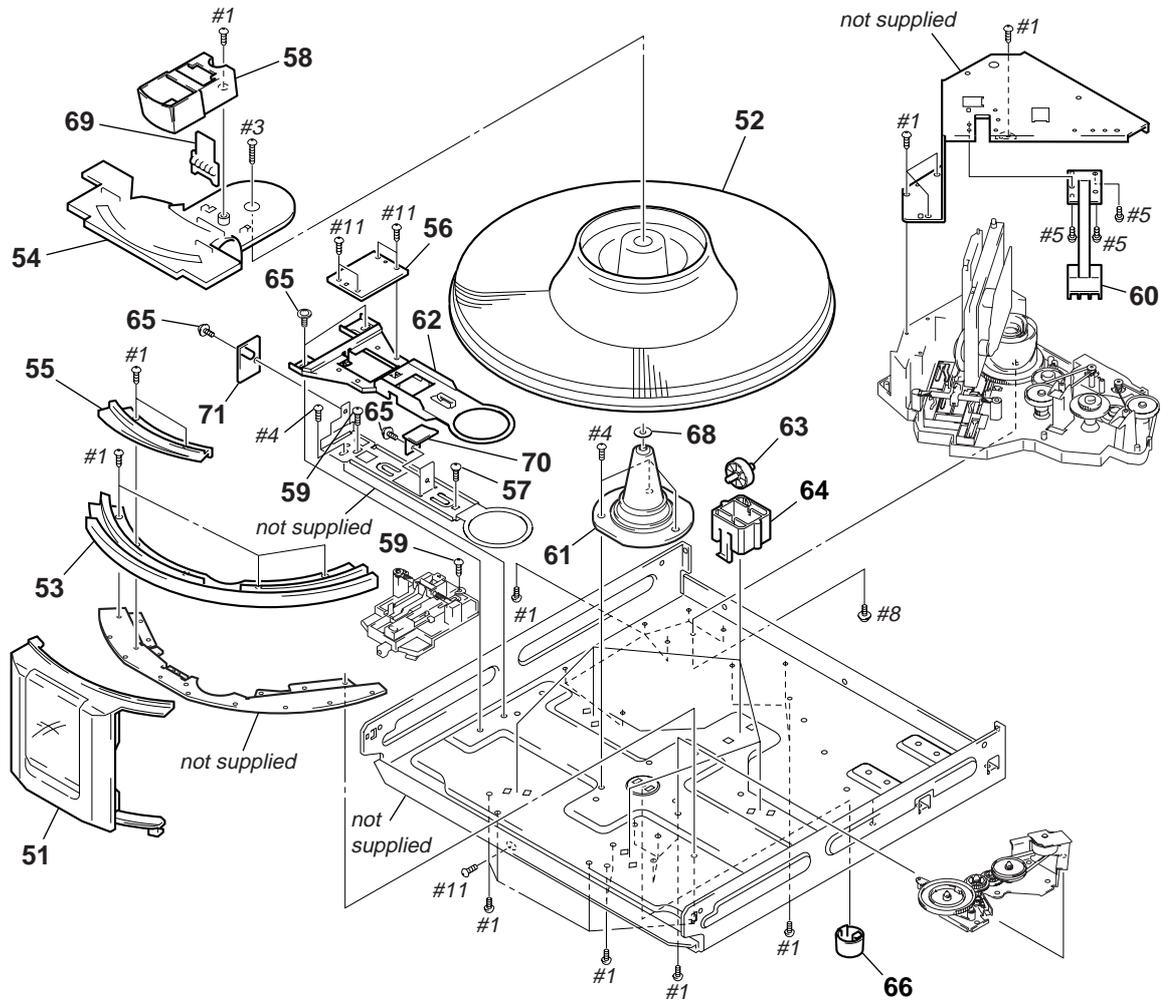


| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|---------------------------------|--------|----------|--------------|----------------------------|--------|
| 51 | X-4951-295-1 | DOOR (CD. 333ES) ASSY (CX333ES) | | 61 | 4-216-089-01 | SHAFT (CENTER) | |
| 51 | X-4951-534-1 | DOOR (CD. 555ES) ASSY (CX555ES) | | 62 | 4-216-091-01 | HOLDER (TABLE SENSOR) | |
| 52 | X-4951-312-1 | TABLE (300) ASSY | | 63 | 4-216-093-01 | ROLLER | |
| 53 | 4-215-952-01 | GUIDE (DOOR.B) | | 64 | 4-216-092-01 | HOLDER (ROLLER) | |
| 54 | 4-215-953-01 | GUIDE (DOOR.T) | | 65 | 3-703-249-01 | SCREW, S TIGHT, +PTTWH 3X6 | |
| 55 | 4-215-954-01 | COVER (FRONT) | | 66 | 4-931-169-01 | FOOT | |
| 56 | 1-672-639-11 | SENSOR (T) BOARD | | 68 | 3-701-447-21 | WASHER, 10 | |
| 57 | 4-216-096-01 | SCREW (T1), STEP | | 69 | 1-672-633-11 | LED BOARD | |
| 58 | 4-215-968-01 | WINDOW (INTERNAL ILLUMINATION) | | 70 | 1-672-640-11 | D. SENSOR (IN) BOARD | |
| 59 | 3-356-601-11 | SCREW, STEP | | 71 | 1-672-641-11 | D. SENSOR (OUT) BOARD | |
| 60 | 4-216-088-02 | GUIDE (DISC) | | | | | |

(3) FRONT PANEL SECTION

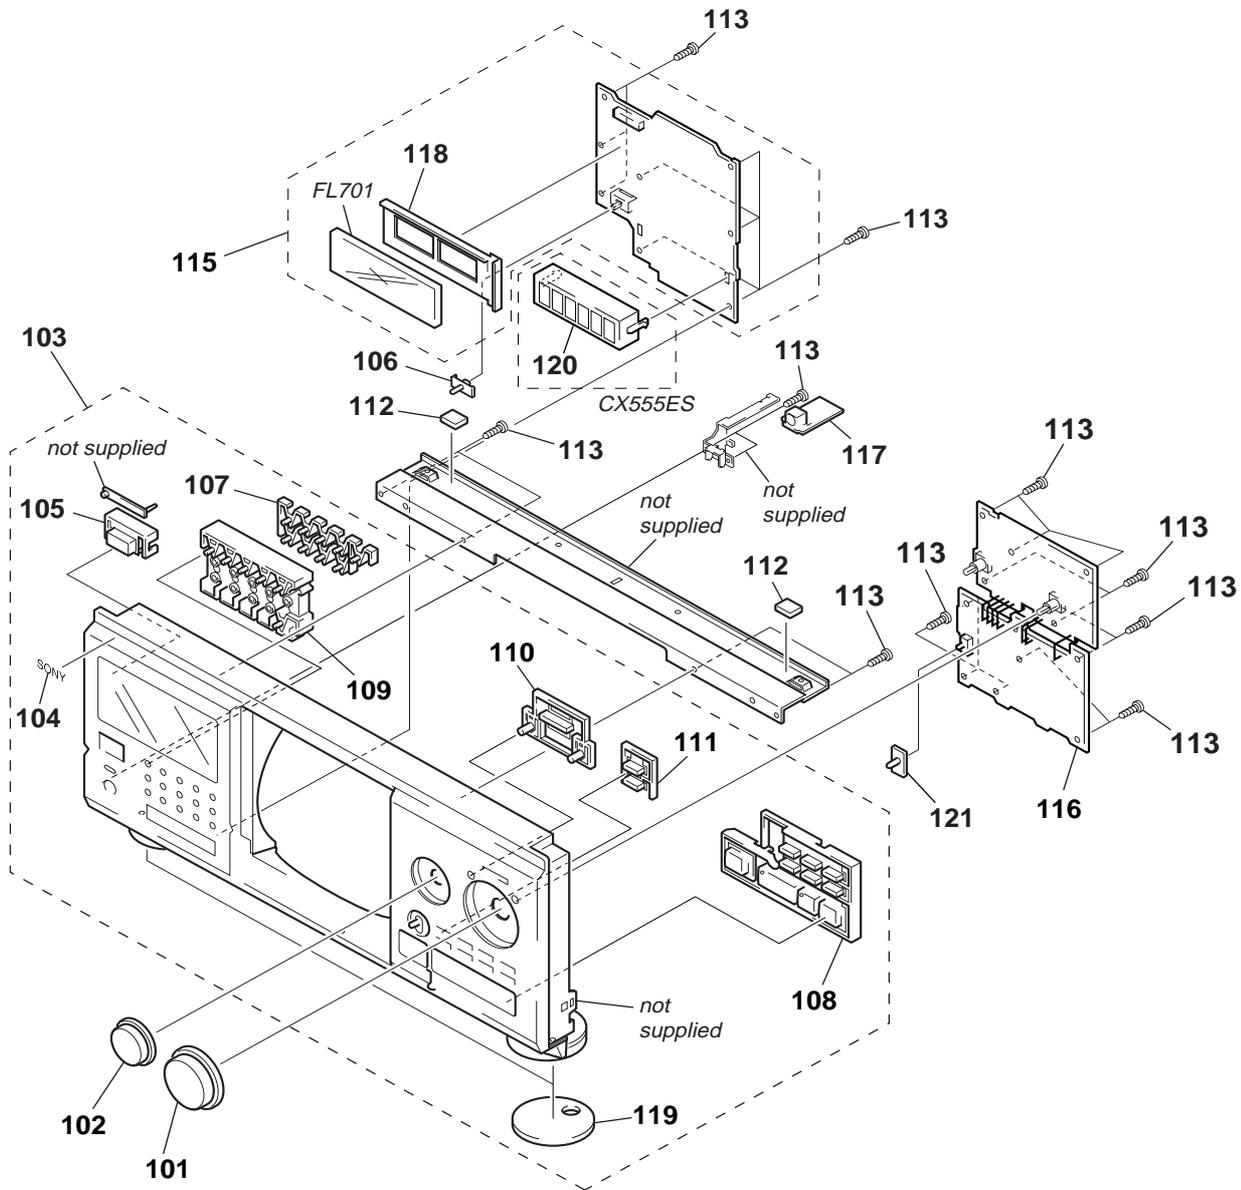


| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|----------------------------------|--------|----------|--------------|-----------------------------------|--------|
| 101 | 4-217-637-01 | KNOB (DISC-ES) | | 112 | 4-985-553-21 | CUSHION | |
| 102 | 4-217-638-01 | KNOB (AMS-ES) | | 113 | 4-951-620-01 | SCREW (2.6X8), +BVTP | |
| 103 | X-4951-157-1 | PANEL (ES) ASSY, FRONT (CX333ES) | | 115 | A-4724-647-A | DISPLAY BOARD, COMPLETE (CX333ES) | |
| 103 | X-4951-158-1 | PANEL (ES) ASSY, FRONT (CX555ES) | | 115 | A-4724-651-A | DISPLAY BOARD, COMPLETE (CX555ES) | |
| 104 | 4-963-404-21 | EMBLEM (5-A), SONY | | 116 | A-4724-646-A | JOG BOARD, COMPLETE (CX333ES) | |
| 105 | 4-215-928-01 | BUTTON (POWER) | | 116 | A-4724-650-A | JOG BOARD, COMPLETE (CX555ES) | |
| 106 | 3-917-216-21 | KNOB (TIMER) | | 117 | 1-672-632-11 | KEY BOARD | |
| 107 | 4-215-816-01 | BUTTON (GROUP) | | 118 | 4-982-811-11 | HOLDER (FL) | |
| 108 | X-4950-856-1 | BUTTON (PLAY) ASSY | | 119 | 4-219-325-01 | CUSHION (FOOT-L) | |
| 109 | 4-215-815-01 | BUTTON (MODE) | | 120 | 4-215-969-01 | HOLDER (LED.RM) (CX555ES) | |
| 110 | 4-215-817-01 | BUTTON (MENU) | | 121 | 4-217-639-01 | KNOB (SLIDE) | |
| 111 | 4-215-814-01 | BUTTON (MEGA-CON) | | FL701 | 1-517-861-11 | INDICATOR TUBE, FLUORESCENT | |

**(4) MECHANISM DECK SECTION-1
(CDM54-K1BD35B)**

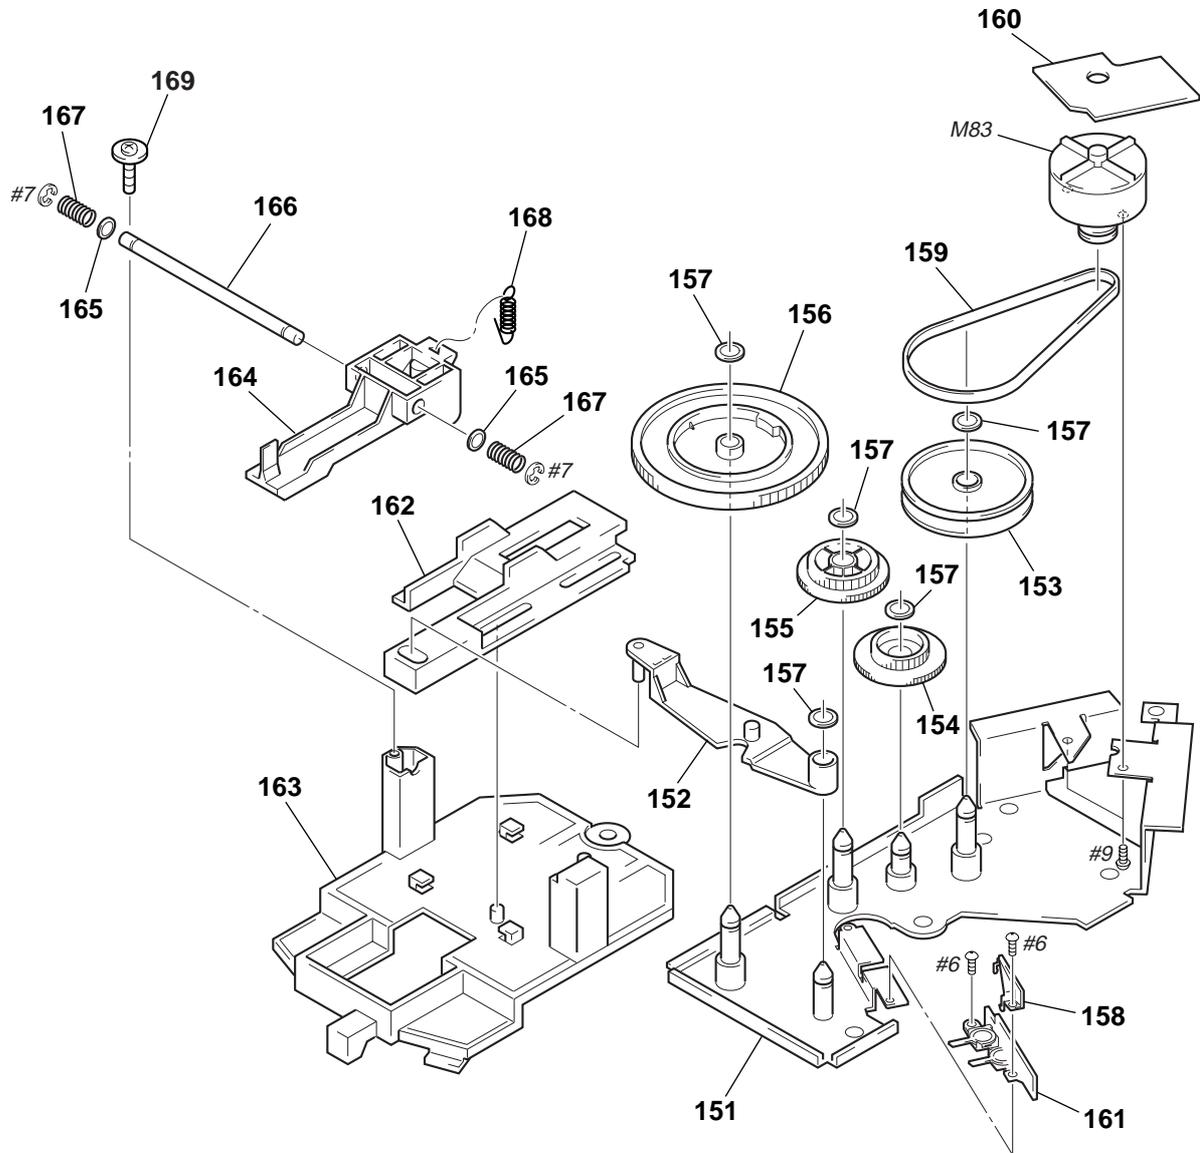


| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|--------------------------|--------|----------|--------------|------------------------------|--------|
| 151 | X-4950-888-1 | BRACKET (DOOR.GEAR) ASSY | | 161 | 1-672-634-11 | D. SWITCH BOARD | |
| 152 | 4-215-959-01 | LEVER (CAM.PU) | | 162 | 4-216-099-01 | SLIDER (POP-UP) | |
| 153 | 4-215-955-01 | GEAR (DOOR.PULLEY) | | 163 | 4-216-100-01 | HOLDER (POP-UP) | |
| 154 | 4-215-956-01 | GEAR (DOOR.CENTER) | | 164 | 4-216-098-01 | LEVER (POP-UP) | |
| 155 | 4-215-957-01 | GEAR (DOOR.DRIVE) | | 165 | 3-701-441-21 | WASHER | |
| 156 | 4-215-958-01 | GEAR (DOOR.CAM) | | 166 | 4-216-102-01 | SHAFT (POP-UP FULCRUM) | |
| 157 | 3-325-697-21 | WASHER | | 167 | 4-216-103-01 | SPRING (POP-UP), COMPRESSION | |
| 158 | 4-219-324-01 | HOLDER (L-SW) | | 168 | 4-216-104-01 | SPRING (POP-UP), TENSION | |
| 159 | 4-219-326-01 | BELT (DIA. 42X1.2) | | 169 | 4-998-716-01 | SCREW, BU FITTING | |
| 160 | 1-672-637-11 | D. MOTOR BOARD | | M83 | X-4950-062-3 | DOOR MOTOR ASSY | |

(5) MECHANISM DECK SECTION-2
(CDM54-K1BD35B)

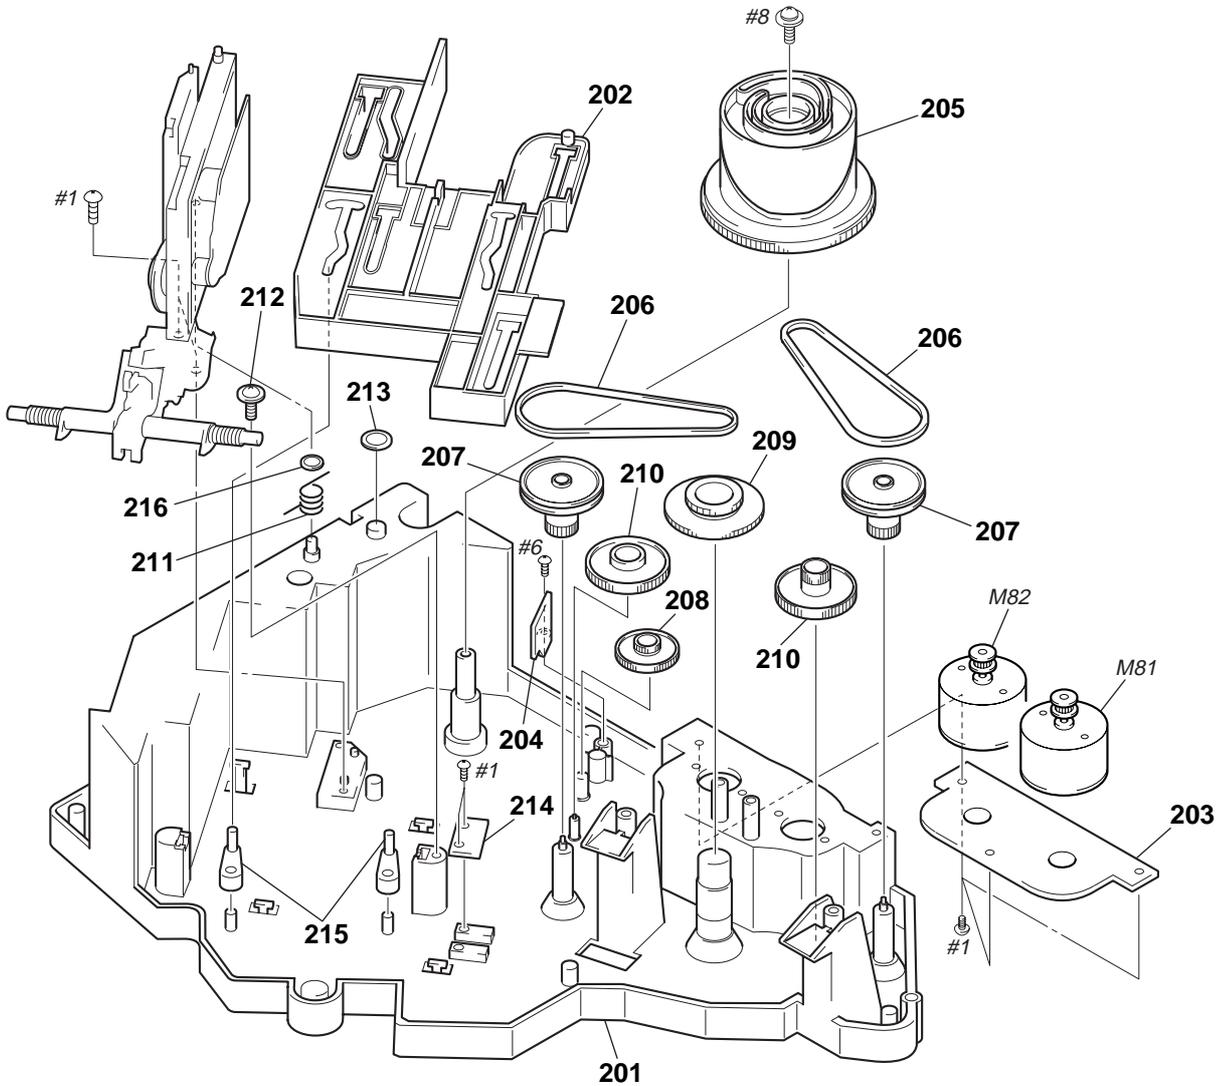


| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|---------------------|--------|----------|--------------|----------------------|--------|
| 201 | 4-216-054-02 | BASE (CDM) | | 210 | 4-216-058-01 | GEAR (CENTER) | |
| 202 | 4-216-063-01 | SLIDER | | 211 | 4-216-081-01 | SPRING (MG), TORSION | |
| 203 | 1-672-636-11 | L.T. MOTOR BOARD | | 212 | 4-998-716-01 | SCREW, BU FITTING | |
| 204 | 1-672-642-11 | L. SWITCH (A) BOARD | | 213 | 3-701-446-21 | WASHER, 8 | |
| 205 | A-4672-676-A | CAM ASSY | | 214 | 1-672-643-11 | L. SWITCH (B) BOARD | |
| 206 | 4-216-061-01 | BELT | | 215 | 4-216-062-01 | LEVER (FULCRUM) | |
| 207 | 4-216-060-01 | PULLEY (1) | | 216 | 3-701-441-21 | WASHER | |
| 208 | 4-216-057-01 | GEAR (CENTER 2) | | M81 | A-4672-675-A | MOTOR ASSY (TABLE) | |
| 209 | 4-216-059-01 | GEAR (TABLE) | | M82 | A-4672-675-A | MOTOR ASSY (LOADING) | |

(6) MECHANISM DECK SECTION-3
(CDM54-K1BD35B)

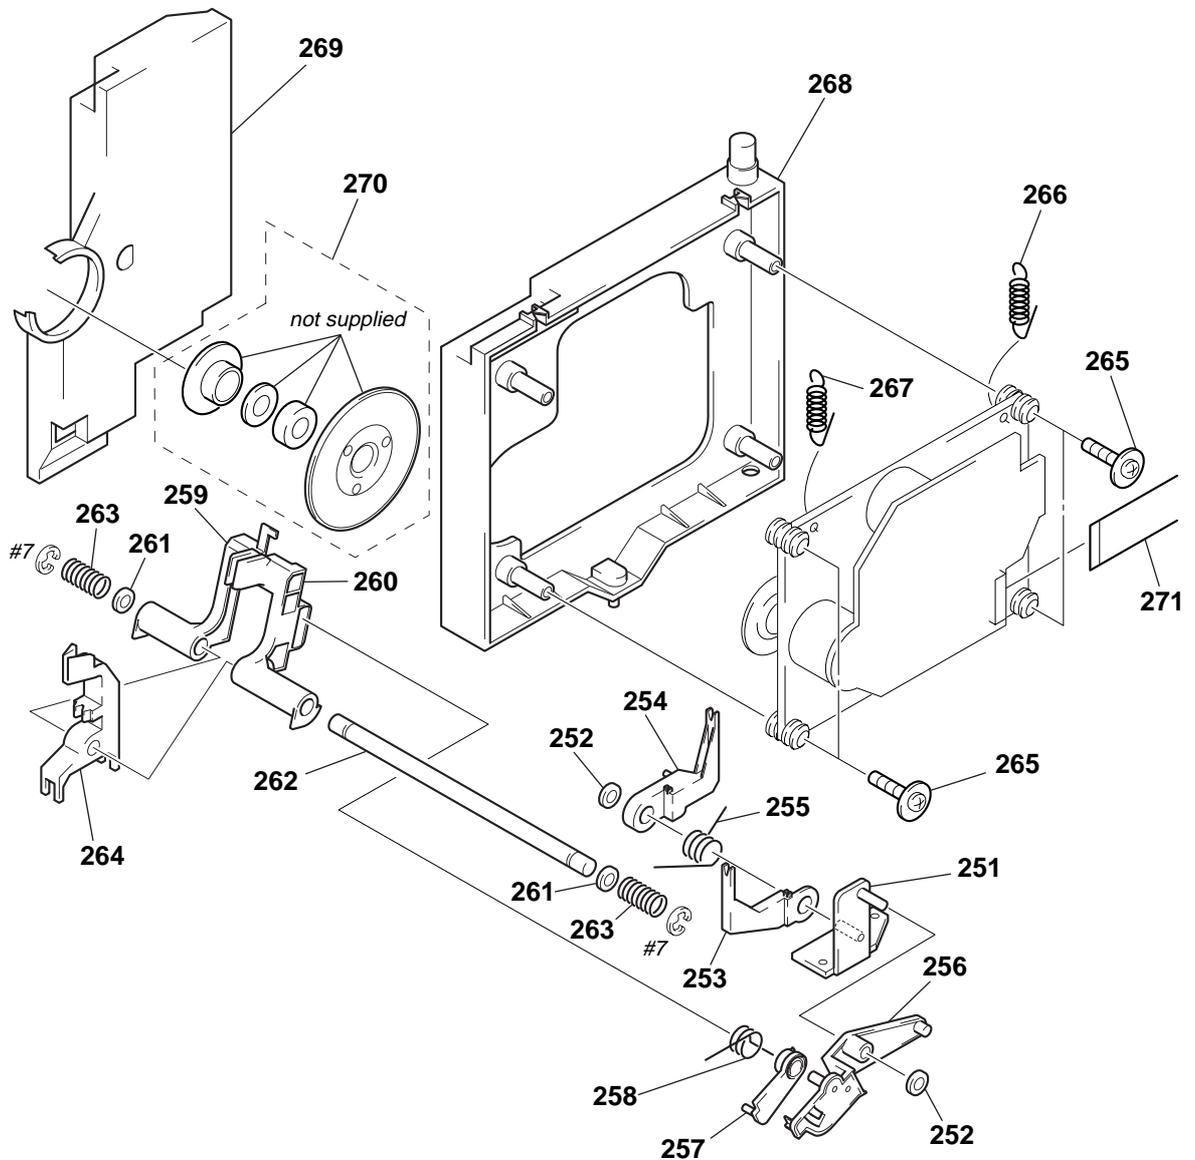

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|-----------------------------|--------|----------|--------------|--------------------------------|--------|
| 251 | X-4950-900-1 | BRACKET (LEVER) ASSY | | 262 | 4-216-066-01 | SHAFT (CLAMP) | |
| 252 | 3-325-697-21 | WASHER | | 263 | 4-216-067-01 | SPRING (CLAMP), COMPRESSION | |
| 253 | 4-216-075-01 | HOLDER (F) | | 264 | 4-216-070-01 | LEVER (LOCK) | |
| 254 | 4-216-076-01 | HOLDER (R) | | 265 | 4-957-577-01 | SCREW PTP WH (2.6X8) (DIA. 10) | |
| 255 | 4-216-077-01 | SPRING (HOLDER FR), TORSION | | 266 | 4-216-086-01 | SPRING (F-2), TENSION | |
| 256 | 4-216-078-01 | LEVER (LOADING) | | 267 | 4-216-085-01 | SPRING (F-1), TENSION | |
| 257 | 4-216-079-02 | LIMITTER (LEVER) | | 268 | X-4950-901-2 | HOLDER ASSY, BU | |
| 258 | 4-216-080-01 | SPRING (LIMITTER), TORSION | | 269 | 4-216-082-01 | HOLDER (MAGNET), TORSION | |
| 259 | X-4950-885-1 | HOLDER (DISC L) ASSY | | 270 | A-4672-768-A | MAGNET ASSY | |
| 260 | X-4950-886-1 | HOLDER (DISC R) ASSY | | 271 | 1-769-069-11 | WIRE (FLAT TYPE) (16 CORE) | |
| 261 | 3-701-441-21 | WASHER | | | | | |

(7) OPTICAL PICK-UP SECTION (KSM-213BFN/C2NP)

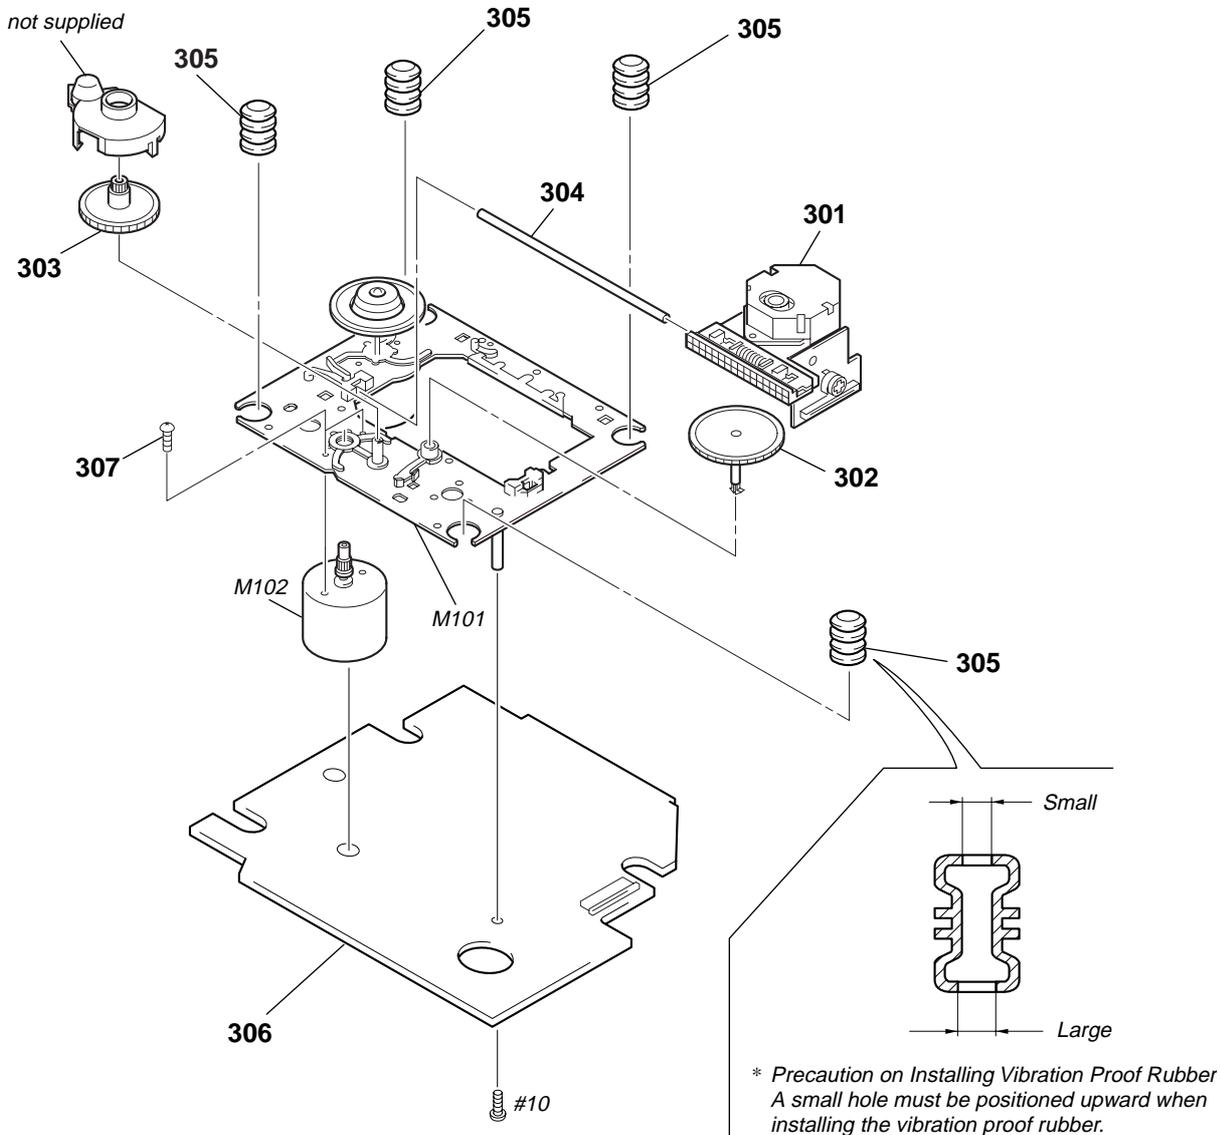

| | |
|---|---|
| <p>The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.</p> | <p>Les composants identifiés par marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p> |
|---|---|

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|--------------|--------------|---------------------------------|--------|----------|--------------|---------------------------------------|--------|
| Δ 301 | 8-820-026-03 | OPTICAL PICK-UP KSM-213BFN/C2NP | | 306 | A-4724-642-A | BD BOARD, COMPLETE | |
| 302 | 2-626-907-01 | GEAR (A) (S) | | 307 | 3-713-786-51 | SCREW +P 2X3 | |
| 303 | 2-627-003-02 | GEAR (B) (RP) | | M101 | X-2646-110-3 | T. T CHASSIS ASSY (MB) (FD) (SPINDLE) | |
| 304 | 2-626-908-01 | SHAFT, SLED | | M102 | X-2625-769-1 | MOTIR GEAR ASSY (MB) (RP) (SLED) | |
| * 305 | 4-992-054-01 | RUBBER, VIBRATION PROOF | | | | | |

SECTION 10 ELECTRICAL PARTS LIST

BD

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA. . . : μ A. . . uPA. . . : μ PA. . .
uPB. . . : μ PB. . . uPC. . . : μ PC. . .
uPD. . . : μ PD. . .
- CAPACITORS
uF: μ F
- COILS
uH: μ H

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|------------------------------------|--------|----------|--------------|-----------------------|----------|
| | A-4724-642-A | BD BOARD, COMPLETE ***** | | | | < IC > | |
| | | < CAPACITOR > | | | | | |
| C101 | 1-163-005-11 | CERAMIC CHIP 470PF | 10% | IC101 | 8-752-386-85 | IC CXD2587Q | |
| C102 | 1-163-038-00 | CERAMIC CHIP 0.1uF | | * IC102 | 8-759-455-91 | IC BA6392FP-E2 | |
| C103 | 1-163-005-11 | CERAMIC CHIP 470PF | 10% | IC103 | 8-752-085-51 | IC CXA2568M-T6 | |
| C104 | 1-163-021-11 | CERAMIC CHIP 0.01uF | 10% | | | < TRANSISTOR > | |
| C106 | 1-164-346-11 | CERAMIC CHIP 1uF | | Q101 | 8-729-010-08 | TRANSISTOR MSB710-RT1 | |
| | | < RESISTOR > | | | | | |
| C107 | 1-164-346-11 | CERAMIC CHIP 1uF | | R101 | 1-216-077-00 | METAL CHIP 15K | 5% 1/10W |
| C108 | 1-163-035-00 | CERAMIC CHIP 0.047uF | | R102 | 1-216-097-00 | RES, CHIP 100K | 5% 1/10W |
| C109 | 1-163-145-00 | CERAMIC CHIP 0.0015uF | 5% | R103 | 1-216-077-00 | METAL CHIP 15K | 5% 1/10W |
| C110 | 1-163-017-00 | CERAMIC CHIP 0.0047uF | 5% | R104 | 1-216-085-00 | METAL CHIP 33K | 5% 1/10W |
| C111 | 1-163-251-11 | CERAMIC CHIP 100PF | 5% | R105 | 1-216-097-00 | RES, CHIP 100K | 5% 1/10W |
| C115 | 1-126-607-11 | ELECT CHIP 47uF | 20% | R106 | 1-216-061-00 | METAL CHIP 3.3K | 5% 1/10W |
| C116 | 1-126-607-11 | ELECT CHIP 47uF | 20% | R107 | 1-216-061-00 | METAL CHIP 3.3K | 5% 1/10W |
| C117 | 1-126-209-11 | ELECT CHIP 100uF | 20% | R108 | 1-216-073-00 | METAL CHIP 10K | 5% 1/10W |
| C118 | 1-163-275-11 | CERAMIC CHIP 0.001uF | 5% | R109 | 1-216-121-00 | RES, CHIP 1M | 5% 1/10W |
| C119 | 1-163-231-11 | CERAMIC CHIP 15PF | 5% | R110 | 1-216-025-00 | RES, CHIP 100 | 5% 1/10W |
| C121 | 1-163-038-00 | CERAMIC CHIP 0.1uF | | R111 | 1-216-121-00 | RES, CHIP 1M | 5% 1/10W |
| C122 | 1-135-155-21 | TANTALUM CHIP 4.7uF | 10% | R113 | 1-216-121-00 | RES, CHIP 1M | 5% 1/10W |
| C123 | 1-163-021-11 | CERAMIC CHIP 0.01uF | 10% | R117 | 1-216-049-11 | RES, CHIP 1K | 5% 1/10W |
| C124 | 1-164-005-11 | CERAMIC CHIP 0.47uF | | R123 | 1-216-073-00 | METAL CHIP 10K | 5% 1/10W |
| C125 | 1-163-038-00 | CERAMIC CHIP 0.1uF | | R124 | 1-216-097-00 | RES, CHIP 100K | 5% 1/10W |
| C126 | 1-163-038-00 | CERAMIC CHIP 0.1uF | | R131 | 1-216-037-00 | METAL CHIP 330 | 5% 1/10W |
| C127 | 1-109-982-11 | CERAMIC CHIP 1uF | 10% | R135 | 1-216-295-00 | SHORT 0 | |
| C130 | 1-164-004-11 | CERAMIC CHIP 0.1uF | 10% | R136 | 1-216-295-00 | SHORT 0 | |
| C131 | 1-135-216-11 | TANTALUM CHIP 10uF | 20% | R137 | 1-216-295-00 | SHORT 0 | |
| C140 | 1-163-038-00 | CERAMIC CHIP 0.1uF | | R138 | 1-216-295-00 | SHORT 0 | |
| C141 | 1-163-038-00 | CERAMIC CHIP 0.1uF | | R143 | 1-216-103-00 | METAL CHIP 180K | 5% 1/10W |
| C151 | 1-163-237-11 | CERAMIC CHIP 27PF | 5% | R144 | 1-216-103-00 | METAL CHIP 180K | 5% 1/10W |
| C153 | 1-163-038-00 | CERAMIC CHIP 0.1uF | | R147 | 1-216-081-00 | METAL CHIP 22K | 5% 1/10W |
| C154 | 1-164-336-11 | CERAMIC CHIP 0.33uF | | R148 | 1-216-001-00 | METAL CHIP 10 | 5% 1/10W |
| C156 | 1-163-237-11 | CERAMIC CHIP 27PF | 5% | R149 | 1-216-003-11 | RES, CHIP 12 | 5% 1/10W |
| C157 | 1-163-145-00 | CERAMIC CHIP 0.0015uF | 5% | R158 | 1-216-111-00 | METAL CHIP 390K | 5% 1/10W |
| C159 | 1-163-019-00 | CERAMIC CHIP 0.0068uF | 10% | R159 | 1-216-101-00 | METAL CHIP 150K | 5% 1/10W |
| C164 | 1-163-038-00 | CERAMIC CHIP 0.1uF | | R161 | 1-216-308-00 | METAL CHIP 4.7 | 5% 1/10W |
| C165 | 1-163-038-00 | CERAMIC CHIP 0.1uF | | R162 | 1-216-101-00 | METAL CHIP 150K | 5% 1/10W |
| C166 | 1-163-038-00 | CERAMIC CHIP 0.1uF | | R615 | 1-216-049-11 | RES, CHIP 1K | 5% 1/10W |
| | | < CONNECTOR > | | R616 | 1-216-049-11 | RES, CHIP 1K | 5% 1/10W |
| CN101 | 1-770-072-11 | CONNECTOR, (LIF (NON-ZIF)) FFC 23P | | R617 | 1-216-049-11 | RES, CHIP 1K | 5% 1/10W |
| CN102 | 1-777-937-11 | CONNECTOR, FFC/FPC 16P | | R618 | 1-216-049-11 | RES, CHIP 1K | 5% 1/10W |

| | |
|-----------|----------------|
| BD | DISPLAY |
|-----------|----------------|

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|---|-----------------------------|
| | | < SWITCH > | |
| S101 | 1-572-085-11 | SWITCH, LEAF (LIMIT IN) | |
| ***** | | | |
| | A-4724-647-A | DISPLAY BOARD, COMPLETE (CX333ES) | |
| | A-4724-651-A | DISPLAY BOARD, COMPLETE (CX555ES) | |
| ***** | | | |
| | 4-982-811-11 | HOLDER (FL) | |
| | | < CAPACITOR > | |
| C701 | 1-162-294-31 | CERAMIC | 0.001uF 10% 50V |
| C702 | 1-162-215-31 | CERAMIC | 47PF 5% 50V |
| C703 | 1-162-306-11 | CERAMIC | 0.01uF 20% 16V |
| C704 | 1-164-159-11 | CERAMIC | 0.1uF 50V |
| C706 | 1-162-282-31 | CERAMIC | 100PF 10% 50V |
| C707 | 1-162-282-31 | CERAMIC | 100PF 10% 50V |
| C708 | 1-162-282-31 | CERAMIC | 100PF 10% 50V |
| C709 | 1-162-288-31 | CERAMIC | 330PF 10% 50V |
| C710 | 1-124-584-00 | ELECT | 100uF 20% 10V |
| C711 | 1-164-159-11 | CERAMIC | 0.1uF 50V |
| C771 | 1-162-306-11 | CERAMIC | 0.01uF 20% 16V (CX555ES) |
| C772 | 1-126-924-11 | ELECT | 330uF 20% 6.3V (CX555ES) |
| C773 | 1-162-306-11 | CERAMIC | 0.01uF 20% 16V (CX555ES) |
| C774 | 1-126-924-11 | ELECT | 330uF 20% 6.3V (CX555ES) |
| C775 | 1-162-306-11 | CERAMIC | 0.01uF 20% 16V (CX555ES) |
| C776 | 1-126-924-11 | ELECT | 330uF 20% 6.3V (CX555ES) |
| C781 | 1-164-159-11 | CERAMIC | 0.1uF 50V |
| C791 | 1-124-584-00 | ELECT | 100uF 20% 10V |
| | | < CONNECTOR > | |
| * CN701 | 1-568-839-11 | SOCKET, CONNECTOR 23P | |
| | | < DIODE > | |
| D701 | 8-719-046-39 | LED SEL5821A-TP15 (GROUP1) | |
| D702 | 8-719-046-39 | LED SEL5821A-TP15 (GROUP2) | |
| D703 | 8-719-046-39 | LED SEL5821A-TP15 (GROUP3) | |
| D704 | 8-719-046-39 | LED SEL5821A-TP15 (GROUP4) | |
| D705 | 8-719-046-39 | LED SEL5821A-TP15 (HIT LIST) | |
| D706 | 8-719-046-39 | LED SEL5821A-TP15 (GROUP5) | |
| D707 | 8-719-046-39 | LED SEL5821A-TP15 (GROUP6) | |
| D708 | 8-719-046-39 | LED SEL5821A-TP15 (GROUP7) | |
| D709 | 8-719-046-39 | LED SEL5821A-TP15 (GROUP8) | |
| D710 | 8-719-046-44 | LED SEL5221S-TP15 (STANDBY) | |
| D771 | 8-719-059-14 | LED SID313BP-TP19 (ILLUMINATION) (CX555ES) | |
| D772 | 8-719-059-14 | LED SID313BP-TP19 (ILLUMINATION) (CX555ES) | |
| D773 | 8-719-059-14 | LED SID313BP-TP19 (ILLUMINATION) (CX555ES) | |
| D774 | 8-719-059-14 | LED SID313BP-TP19 (ILLUMINATION) (CX555ES) | |
| D775 | 8-719-059-14 | LED SID313BP-TP19 (ILLUMINATION) (CX555ES) | |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|--|--------|
| D780 | 8-719-911-19 | DIODE 1SS133T-72 (CX555ES) | |
| D781 | 8-719-911-19 | DIODE 1SS133T-72 (CX555ES) | |
| D782 | 8-719-911-19 | DIODE 1SS133T-72 (CX555ES) | |
| | | < LEAD > | |
| EB701 | 1-690-880-41 | LEAD (WITH CONNECTOR) | |
| | | < FLUORESCENT INDICATOR TUBE > | |
| FL701 | 1-517-861-11 | INDICATOR TUBE, FLUORESCENT | |
| | | < IC > | |
| IC701 | 8-759-498-92 | IC MSM9202-03GS-K | |
| IC702 | 8-759-183-47 | IC M66310FP | |
| IC703 | 8-749-014-66 | IC NJL56H400A (REMOTE CONTROL RECEIVER) | |
| | | < TRANSISTOR > | |
| Q701 | 8-729-900-80 | TRANSISTOR BA1A4M-TP | |
| Q771 | 8-729-801-93 | TRANSISTOR 2SD1387-34-TP (CX555ES) | |
| Q772 | 8-729-801-93 | TRANSISTOR 2SD1387-34-TP (CX555ES) | |
| Q773 | 8-729-801-93 | TRANSISTOR 2SD1387-34-TP (CX555ES) | |
| | | < RESISTOR > | |
| R701 | 1-249-441-11 | CARBON 100K 5% 1/4W | |
| R702 | 1-247-807-31 | CARBON 100 5% 1/4W | |
| R703 | 1-247-807-31 | CARBON 100 5% 1/4W | |
| R704 | 1-247-807-31 | CARBON 100 5% 1/4W | |
| R705 | 1-247-807-31 | CARBON 100 5% 1/4W | |
| R706 | 1-247-843-11 | CARBON 3.3K 5% 1/4W | |
| R707 | 1-247-807-31 | CARBON 100 5% 1/4W | |
| R708 | 1-247-807-31 | CARBON 100 5% 1/4W | |
| R709 | 1-247-807-31 | CARBON 100 5% 1/4W | |
| R711 | 1-249-411-11 | CARBON 330 5% 1/4W | |
| R712 | 1-249-411-11 | CARBON 330 5% 1/4W | |
| R713 | 1-249-413-11 | CARBON 470 5% 1/4W | |
| R714 | 1-249-413-11 | CARBON 470 5% 1/4W | |
| R721 | 1-249-415-11 | CARBON 680 5% 1/4W | |
| R722 | 1-249-417-11 | CARBON 1K 5% 1/4W | |
| R723 | 1-249-419-11 | CARBON 1.5K 5% 1/4W | |
| R724 | 1-249-421-11 | CARBON 2.2K 5% 1/4W | |
| R725 | 1-247-843-11 | CARBON 3.3K 5% 1/4W | |
| R726 | 1-249-427-11 | CARBON 6.8K 5% 1/4W | |
| R727 | 1-249-431-11 | CARBON 15K 5% 1/4W | |
| R731 | 1-249-415-11 | CARBON 680 5% 1/4W | |
| R732 | 1-249-417-11 | CARBON 1K 5% 1/4W | |
| R733 | 1-249-419-11 | CARBON 1.5K 5% 1/4W | |
| R734 | 1-249-421-11 | CARBON 2.2K 5% 1/4W | |
| R735 | 1-247-843-11 | CARBON 3.3K 5% 1/4W | |
| R736 | 1-249-427-11 | CARBON 6.8K 5% 1/4W | |
| R742 | 1-249-415-11 | CARBON 680 5% 1/4W | |
| R771 | 1-249-383-11 | CARBON 1.5 5% 1/6W (CX555ES) | |
| R772 | 1-249-383-11 | CARBON 1.5 5% 1/6W (CX555ES) | |
| R773 | 1-249-383-11 | CARBON 1.5 5% 1/6W (CX555ES) | |
| R774 | 1-249-383-11 | CARBON 1.5 5% 1/6W (CX555ES) | |

DISPLAY**D. MOTOR****D. SENSOR (IN)****D. SENSOR (OUT)****D. SWITCH****JACK****JOG**

| Ref. No. | Part No. | Description | Remark |
|------------|--------------|--|----------------|
| R775 | 1-247-772-00 | CARBON 3.6 5% | 1/4W (CX555ES) |
| R776 | 1-247-772-00 | CARBON 3.6 5% | 1/4W (CX555ES) |
| < SWITCH > | | | |
| S721 | 1-572-184-11 | SWITCH, KEYBOARD (GROUP FILE) | |
| S722 | 1-572-184-11 | SWITCH, KEYBOARD (GROUP8) | |
| S723 | 1-572-184-11 | SWITCH, KEYBOARD (GROUP7) | |
| S724 | 1-572-184-11 | SWITCH, KEYBOARD (GROUP6) | |
| S725 | 1-572-184-11 | SWITCH, KEYBOARD (GROUP5) | |
| S726 | 1-572-184-11 | SWITCH, KEYBOARD (GROUP1) | |
| S727 | 1-572-184-11 | SWITCH, KEYBOARD (I/⏻) | |
| S728 | 1-570-157-51 | SWITCH, SLIDE (TIMER) | |
| S731 | 1-572-184-11 | SWITCH, KEYBOARD (GROUP2) | |
| S732 | 1-572-184-11 | SWITCH, KEYBOARD (GROUP3) | |
| S733 | 1-572-184-11 | SWITCH, KEYBOARD (GROUP4) | |
| S734 | 1-572-184-11 | SWITCH, KEYBOARD (CONTINUE) | |
| S735 | 1-572-184-11 | SWITCH, KEYBOARD (SHUFFLE) | |
| S736 | 1-572-184-11 | SWITCH, KEYBOARD (PROGRAM) | |
| S737 | 1-572-184-11 | SWITCH, KEYBOARD (REPEAT) | |
| S741 | 1-572-184-11 | SWITCH, KEYBOARD (HIT LIST) | |
| S742 | 1-572-184-11 | SWITCH, KEYBOARD (TIME/TEXT) | |
| ***** | | | |
| | 1-672-637-11 | D. MOTOR BOARD ***** | |
| ***** | | | |
| | 1-672-640-11 | D. SENSOR (IN) BOARD ***** | |
| ***** | | | |
| * | 4-985-300-01 | HOLDER (P-T) < PHOTO TRANSISTOR > | |
| Q81 | 8-729-926-31 | PHOTO TRANSISTOR PT483F1 | |
| ***** | | | |
| | 1-672-641-11 | D. SENSOR (OUT) BOARD ***** | |
| ***** | | | |
| < LED> | | | |
| D81 | 8-719-055-84 | LED GL528VS1 (DISC IN DETECT SENSOR) | |
| ***** | | | |
| | 1-672-634-11 | D. SWITCH BOARD ***** | |
| ***** | | | |
| R82 | 1-249-415-11 | CARBON 680 5% | 1/4W |
| R83 | 1-249-417-11 | CARBON 1K 5% | 1/4W |
| R84 | 1-249-419-11 | CARBON 1.5K 5% | 1/4W |
| < SWITCH > | | | |
| SW83 | 1-571-300-21 | SWITCH, ROTARY (DOOR OPEN/CLOSE) | |
| SW84 | 1-571-300-21 | SWITCH, ROTARY (DOOR OPEN/CLOSE) | |
| ***** | | | |

| Ref. No. | Part No. | Description | Remark |
|----------------|--------------|--|---------|
| | 1-672-629-11 | JACK BOARD ***** | |
| < CAPACITOR > | | | |
| C327 | 1-124-282-00 | ELECT 22uF | 20% 25V |
| C328 | 1-162-290-31 | CERAMIC 470PF | 10% 50V |
| C427 | 1-124-282-00 | ELECT 22uF | 20% 25V |
| C428 | 1-162-290-31 | CERAMIC 470PF | 10% 50V |
| C950 | 1-164-159-11 | CERAMIC 0.1uF | 50V |
| C951 | 1-164-159-11 | CERAMIC 0.1uF | 50V |
| C952 | 1-164-159-11 | CERAMIC 0.1uF | 50V |
| C953 | 1-104-665-11 | ELECT 100uF | 20% 10V |
| C954 | 1-164-159-11 | CERAMIC 0.1uF | 50V |
| < IC > | | | |
| IC901 | 8-749-921-12 | IC GP1F32T (DIGITAL OUT OPTICAL) | |
| < JACK > | | | |
| * J901 | 1-764-188-11 | JACK (SMALL TYPE) (DIA. 3.5) (CONTROL A1II) | |
| * J902 | 1-764-188-11 | JACK (SMALL TYPE) (DIA. 3.5) (CONTROL A1II) | |
| J903 | 1-778-064-11 | JACK, PIN 4P (2ND CD IN, LINE OUT) | |
| < COIL > | | | |
| L950 | 1-410-503-11 | INDUCTOR 3.3uH | |
| < TRANSISTOR > | | | |
| Q950 | 8-729-620-05 | TRANSISTOR 2SC2603TP-EF | |
| < RESISTOR > | | | |
| R339 | 1-215-485-00 | METAL 470K | 1% 1/4W |
| R340 | 1-215-405-00 | METAL 220 | 1% 1/4W |
| R439 | 1-215-485-00 | METAL 470K | 1% 1/4W |
| R440 | 1-215-405-00 | METAL 220 | 1% 1/4W |
| R950 | 1-249-425-11 | CARBON 4.7K | 5% 1/4W |
| R951 | 1-249-429-11 | CARBON 10K | 5% 1/4W |
| R952 | 1-249-393-11 | CARBON 10 | 5% 1/4W |
| < SWITCH > | | | |
| S902 | 1-762-910-11 | SWITCH, SLIDE (COMMAND MODE CD) | |
| ***** | | | |
| | | A-4724-646-A JOG BOARD, COMPLETE (CX333ES) | |
| | | A-4724-650-A JOG BOARD, COMPLETE (CX555ES) | |
| ***** | | | |
| < LED > | | | |
| D711 | 8-719-046-40 | LED SEL5521C-TH8F (▷) | |
| D712 | 8-719-046-38 | LED SEL5821A-TH8F (■) | |
| D713 | 8-719-033-06 | LED SEL5920A-TP15 (MEGA CONTROL) | |
| D714 | 8-719-032-86 | LED SEL5420E-TP15 (EASY PLAY) | |
| D715 | 8-719-033-06 | LED SEL5920A-TP15 (MEGA CONTROL) | |
| D716 | 8-719-032-86 | LED SEL5420E-TP15 (EASY PLAY) | |
| < RESISTOR > | | | |
| R715 | 1-249-407-11 | CARBON 150 | 5% 1/4W |

| | | | |
|-----|-----|-----|---------------|
| JOG | KEY | LED | L. SWITCH (A) |
|-----|-----|-----|---------------|

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|----------------|--------|
| R716 | 1-249-409-11 | CARBON 220 5% | 1/4W |
| R717 | 1-249-401-11 | CARBON 47 5% | 1/4W |
| R718 | 1-249-401-11 | CARBON 47 5% | 1/4W |
| R719 | 1-249-429-11 | CARBON 10K 5% | 1/4W |
| R737 | 1-249-431-11 | CARBON 15K 5% | 1/4W |
| R743 | 1-249-417-11 | CARBON 1K 5% | 1/4W |
| R744 | 1-249-419-11 | CARBON 1.5K 5% | 1/4W |
| R745 | 1-249-421-11 | CARBON 2.2K 5% | 1/4W |
| R746 | 1-247-843-11 | CARBON 3.3K 5% | 1/4W |
| R747 | 1-249-427-11 | CARBON 6.8K 5% | 1/4W |
| R748 | 1-249-431-11 | CARBON 15K 5% | 1/4W |
| R752 | 1-249-415-11 | CARBON 680 5% | 1/4W |
| R753 | 1-249-417-11 | CARBON 1K 5% | 1/4W |
| R754 | 1-249-419-11 | CARBON 1.5K 5% | 1/4W |
| R755 | 1-249-421-11 | CARBON 2.2K 5% | 1/4W |
| R756 | 1-247-843-11 | CARBON 3.3K 5% | 1/4W |
| R757 | 1-249-427-11 | CARBON 6.8K 5% | 1/4W |
| R762 | 1-249-415-11 | CARBON 680 5% | 1/4W |
| R763 | 1-249-417-11 | CARBON 1K 5% | 1/4W |
| R764 | 1-249-419-11 | CARBON 1.5K 5% | 1/4W |
| R765 | 1-249-421-11 | CARBON 2.2K 5% | 1/4W |
| R766 | 1-247-843-11 | CARBON 3.3K 5% | 1/4W |
| R767 | 1-249-427-11 | CARBON 6.8K 5% | 1/4W |

< ROTARY ENCODER >

| | | |
|-------|--------------|---|
| RE701 | 1-475-543-11 | ENCODER, ROTARY (⏪⏩ AMS ⏪⏩, PUSH ENTER) |
| RE702 | 1-475-543-11 | ENCODER, ROTARY (DISC/CHARACTER, PUSH ENTER) |

< SWITCH >

| | | |
|------|--------------|---------------------------------|
| S706 | 1-570-855-11 | SWITCH, SLIDE (FILTER) |
| S743 | 1-762-875-21 | SWITCH, KEYBOARD (YES) |
| S744 | 1-762-875-21 | SWITCH, KEYBOARD (+100) |
| S745 | 1-762-875-21 | SWITCH, KEYBOARD (MENU/NO) |
| S751 | 1-762-875-21 | SWITCH, KEYBOARD (CLEAR) |
| S752 | 1-762-875-21 | SWITCH, KEYBOARD (FADER) |
| S753 | 1-762-875-21 | SWITCH, KEYBOARD (CHECK) |
| S754 | 1-762-875-21 | SWITCH, KEYBOARD (NO DELAY) |
| S755 | 1-762-875-21 | SWITCH, KEYBOARD (MEMO SEARCH) |
| S756 | 1-762-875-21 | SWITCH, KEYBOARD (X-FADE) |
| S761 | 1-762-875-21 | SWITCH, KEYBOARD (EASY PLAY) |
| S762 | 1-762-875-21 | SWITCH, KEYBOARD (MEGA CONTROL) |
| S763 | 1-762-875-21 | SWITCH, KEYBOARD (■) |
| S764 | 1-762-875-21 | SWITCH, KEYBOARD (■■) |
| S765 | 1-762-875-21 | SWITCH, KEYBOARD (▷) |

| | | |
|------|--------------|---------------------------------|
| S766 | 1-762-875-21 | SWITCH, KEYBOARD (≡ OPEN/CLOSE) |
|------|--------------|---------------------------------|

| | |
|--------------|-----------|
| 1-672-632-11 | KEY BOARD |
| | ***** |

< CAPACITOR >

| | | | |
|------|--------------|-----------------|-----|
| C792 | 1-126-925-11 | ELECT 470uF 20% | 10V |
| C821 | 1-164-159-11 | CERAMIC 0.1uF | 50V |
| C822 | 1-164-159-11 | CERAMIC 0.1uF | 50V |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|-----------------------------|----------------|
| | | < CONNECTOR > | |
| * CNP203 | 1-568-944-11 | PIN, CONNECTOR 6P (CX333ES) | |
| * CNP203 | 1-568-947-11 | PIN, CONNECTOR 9P (CX555ES) | |
| * CNP702 | 1-568-954-11 | PIN, CONNECTOR 5P (CX555ES) | |
| | | < DIODE > | |
| D821 | 8-719-109-85 | DIODE RD5.1ES-T2B2 | |
| D822 | 8-719-109-85 | DIODE RD5.1ES-T2B2 | |
| D823 | 8-719-109-85 | DIODE RD5.1ES-T2B2 | |
| | | < CONNECTOR > | |
| J821 | 1-785-945-11 | CONNECTOR, DIN (KEYBOARD) | |
| | | < NOISE FILTER > | |
| L821 | 1-424-122-11 | FILTER, NOISE | |
| L822 | 1-424-122-11 | FILTER, NOISE | |
| L823 | 1-424-122-11 | FILTER, NOISE | |
| L824 | 1-424-122-11 | FILTER, NOISE | |
| | | < RESISTOR > | |
| R801 | 1-249-429-11 | CARBON 10K 5% | 1/4W (CX333ES) |

| | |
|--------------|-----------|
| 1-672-633-11 | LED BOARD |
| | ***** |

| | |
|----------------|----------------|
| * 4-976-473-01 | HOLDER (LED-S) |
|----------------|----------------|

< CAPACITOR >

| | | | |
|------|--------------|---------------|-----|
| C804 | 1-164-159-11 | CERAMIC 0.1uF | 50V |
|------|--------------|---------------|-----|

< CONNECTOR >

| | | |
|---------|--------------|-------------------|
| * CN813 | 1-568-942-11 | PIN, CONNECTOR 4P |
|---------|--------------|-------------------|

< LED >

| | | | |
|------|--------------|--------------------|-----------------------|
| D802 | 8-719-071-41 | LED SELS5923C-TP15 | (INSIDE ILLUMINATION) |
| D803 | 8-719-071-42 | LED SEL5723C-TP15 | (INSIDE ILLUMINATION) |
| D804 | 8-719-072-76 | LED SEL5E23C-TP15 | (INSIDE ILLUMINATION) |
| D805 | 8-719-071-42 | LED SEL5723C-TP15 | (INSIDE ILLUMINATION) |
| D806 | 8-719-071-41 | LED SELS5923C-TP15 | (INSIDE ILLUMINATION) |

< RESISTOR >

| | | | |
|------|--------------|--------------|------|
| R805 | 1-249-401-11 | CARBON 47 5% | 1/4W |
| R806 | 1-249-399-11 | CARBON 33 5% | 1/4W |
| R807 | 1-249-401-11 | CARBON 47 5% | 1/4W |

| | |
|--------------|---------------------|
| 1-672-642-11 | L. SWITCH (A) BOARD |
| | ***** |

< SWITCH >

| | | |
|-----|--------------|---------------------------------|
| S81 | 1-571-300-21 | SWITCH, ROTARY (LOADING DETECT) |
|-----|--------------|---------------------------------|

L. SWITCH (B)

L.T. MOTOR

MAIN

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|--|-----------|
| | 1-672-643-11 | L. SWITCH (B) BOARD ***** | |
| S82 | 1-771-604-11 | SWITCH, DETECTION (LOADING) ***** | |
| | 1-672-636-11 | L.T. MOTOR BOARD ***** | |
| | A-4724-649-A | MAIN BOARD, COMPLETE (CX333ES) | |
| | A-4724-652-A | MAIN BOARD, COMPLETE (CX555ES) ***** | |
| | 7-685-871-01 | SCREW +BVTT 3X6 (S) < CAPACITOR > | |
| C201 | 1-163-102-00 | CERAMIC CHIP 24PF | 5% 50V |
| C202 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C203 | 1-163-251-11 | CERAMIC CHIP 100PF | 5% 50V |
| C204 | 1-163-005-11 | CERAMIC CHIP 470PF | 10% 50V |
| C206 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C207 | 1-124-997-11 | ELECT 470uF | 20% 10V |
| C208 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C209 | 1-124-997-11 | ELECT 470uF | 20% 10V |
| C210 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C211 | 1-102-945-00 | CERAMIC 8.0PF | 0.5PF 50V |
| C212 | 1-102-945-00 | CERAMIC 8.0PF | 0.5PF 50V |
| C213 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C214 | 1-128-554-11 | ELECT 330uF | 20% 50V |
| C215 | 1-126-013-11 | ELECT 1000uF | 20% 16V |
| C217 | 1-163-251-11 | CERAMIC CHIP 100PF | 5% 50V |
| C301 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C302 | 1-124-997-11 | ELECT 470uF | 20% 10V |
| C303 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C305 | 1-124-997-71 | ELECT 470uF | 20% 10V |
| C306 | 1-102-947-00 | CERAMIC 10PF | 5% 50V |
| C307 | 1-126-059-11 | ELECT 10uF | 20% 50V |
| C308 | 1-126-059-11 | ELECT 10uF | 20% 50V |
| C309 | 1-136-802-11 | FILM 0.015uF | 5% 100V |
| C310 | 1-130-477-00 | MYLAR 0.0033uF | 5% 50V |
| C312 | 1-126-051-11 | ELECT 47uF | 20% 50V |
| C318 | 1-126-013-11 | ELECT 1000uF | 20% 16V |
| C319 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C320 | 1-130-483-00 | MYLAR 0.01uF | 5% 50V |
| C321 | 1-130-483-00 | MYLAR 0.01uF | 5% 50V |
| C323 | 1-163-251-11 | CERAMIC CHIP 100PF | 5% 50V |
| C324 | 1-163-251-11 | CERAMIC CHIP 100PF | 5% 50V |
| C325 | 1-106-343-00 | MYLAR 1000PF | 5% 200V |
| C326 | 1-126-022-11 | ELECT 47uF | 20% 25V |
| C327 | 1-130-484-00 | MYLAR 0.012uF | 5% 50V |
| C329 | 1-126-962-11 | ELECT 3.3uF | 20% 50V |
| C331 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C332 | 1-126-963-11 | ELECT 4.7uF | 20% 50V |
| C340 | 1-126-049-11 | ELECT 22uF | 20% 50V |
| C401 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C402 | 1-124-997-11 | ELECT 470uF | 20% 10V |
| C403 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C405 | 1-124-997-71 | ELECT 470uF | 20% 10V |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|----------------------|----------------------|
| C406 | 1-102-947-00 | CERAMIC 10PF | 5% 50V |
| C407 | 1-126-059-11 | ELECT 10uF | 20% 50V |
| C408 | 1-126-059-11 | ELECT 10uF | 20% 50V |
| C409 | 1-136-802-11 | FILM 0.015uF | 5% 100V |
| C410 | 1-130-477-00 | MYLAR 0.0033uF | 5% 50V |
| C411 | 1-136-802-11 | FILM 0.015uF | 5% 100V |
| C412 | 1-126-059-11 | ELECT 10uF | 20% 50V |
| C413 | 1-126-059-11 | ELECT 10uF | 20% 50V |
| C415 | 1-126-059-11 | ELECT 10uF | 20% 50V |
| C418 | 1-126-013-11 | ELECT 1000uF | 20% 16V |
| C419 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C420 | 1-130-483-00 | MYLAR 0.01uF | 5% 50V |
| C421 | 1-130-483-00 | MYLAR 0.01uF | 5% 50V |
| C423 | 1-163-251-11 | CERAMIC CHIP 100PF | 5% 50V |
| C424 | 1-163-251-11 | CERAMIC CHIP 100PF | 5% 50V |
| C425 | 1-106-343-00 | MYLAR 1000PF | 5% 200V |
| C426 | 1-126-022-11 | ELECT 47uF | 20% 25V |
| C427 | 1-130-484-00 | MYLAR 0.012uF | 5% 50V |
| C430 | 1-124-997-71 | ELECT 470uF | 20% 10V |
| C431 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C440 | 1-126-049-11 | ELECT 22uF | 20% 50V |
| C501 | 1-104-665-11 | ELECT 100uF | 20% 10V |
| C502 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C503 | 1-163-033-00 | CERAMIC CHIP 0.022uF | 50V |
| C504 | 1-104-665-11 | ELECT 100uF | 20% 10V |
| C505 | 1-163-033-00 | CERAMIC CHIP 0.022uF | 50V |
| C510 | 1-163-033-00 | CERAMIC CHIP 0.022uF | 50V |
| C511 | 1-163-033-00 | CERAMIC CHIP 0.022uF | 50V |
| C513 | 1-124-995-11 | ELECT 220uF | 20% 10V |
| C514 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C515 | 1-124-995-11 | ELECT 220uF | 20% 10V |
| C516 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C518 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C519 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C520 | 1-110-489-11 | CAPACITOR 1F | 5.5V |
| C521 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C522 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C530 | 1-136-165-00 | FILM 0.1uF | 5% 50V |
| C531 | 1-126-933-11 | ELECT 100uF | 20% 16V |
| C532 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C534 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C540 | 1-136-165-00 | FILM 0.1uF | 5% 50V |
| C541 | 1-126-933-11 | ELECT 100uF | 20% 16V |
| C542 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C544 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C550 | 1-136-173-00 | FILM 0.47uF | 5% 50V |
| C551 | 1-136-173-00 | FILM 0.47uF | 5% 50V |
| C552 | 1-109-953-11 | ELECT 2.2uF | 20% 50V |
| C553 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C554 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C555 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V |
| C559 | 1-126-967-11 | ELECT 47uF | 20% 50V |
| C560 | 1-136-173-00 | FILM 0.47uF | 5% 50V |
| C580 | 1-126-960-11 | ELECT 1uF | 20% 50V (CX555ES) |
| C581 | 1-163-038-00 | CERAMIC CHIP 0.1uF | 25V (CX555ES) |

MAIN

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|---------------|--------------|-----------------------------|----------------------------|----------------|--------------|------------------------------|-------------------|
| C582 | 1-104-665-11 | ELECT | 100uF 20% 10V (CX555ES) | D941 | 8-719-056-98 | DIODE UDZ-TE-17-30B | |
| C583 | 1-163-038-00 | CERAMIC CHIP | 0.1uF | D942 | 8-719-069-56 | DIODE UDZS-TE17-6.2B | |
| C591 | 1-104-665-11 | ELECT | 100uF 20% 10V (CX555ES) | D951 | 8-719-048-98 | DIODE RB160L-40TE25 | |
| C592 | 1-104-665-11 | ELECT | 100uF 20% 10V | D952 | 8-719-048-98 | DIODE RB160L-40TE25 | |
| C720 | 1-163-033-00 | CERAMIC CHIP | 0.022uF 50V | < IC > | | | |
| C730 | 1-163-033-00 | CERAMIC CHIP | 0.022uF 50V | IC201 | 8-759-527-07 | IC CXD8735N-TP | |
| C740 | 1-163-033-00 | CERAMIC CHIP | 0.022uF 50V | IC202 | 8-759-361-58 | IC CXA8055M | |
| C750 | 1-163-033-00 | CERAMIC CHIP | 0.022uF 50V | IC301 | 8-759-712-02 | IC NJM2114D | |
| C760 | 1-163-033-00 | CERAMIC CHIP | 0.022uF 50V | IC302 | 8-759-712-02 | IC NJM2114D | |
| C913 | 1-126-015-11 | ELECT | 3300uF 20% 16V | IC303 | 8-759-712-02 | IC NJM2114D | |
| C914 | 1-126-015-11 | ELECT | 3300uF 20% 16V | IC401 | 8-759-712-02 | IC NJM2114D | |
| C915 | 1-126-023-11 | ELECT | 100uF 20% 16V | IC402 | 8-759-712-02 | IC NJM2114D | |
| C916 | 1-126-023-11 | ELECT | 100uF 20% 16V | IC403 | 8-759-712-02 | IC NJM2114D | |
| C917 | 1-126-012-11 | ELECT | 470uF 20% 16V | IC501 | 8-759-598-80 | IC MN101C12GSA1 | |
| C918 | 1-126-012-11 | ELECT | 470uF 20% 16V | IC502 | 8-759-545-07 | IC TMP87C447U-4A06 (CX555ES) | |
| C923 | 1-126-768-11 | ELECT | 2200uF 20% 16V | IC503 | 8-759-267-86 | IC SN74HC00ANS (CX555ES) | |
| C924 | 1-126-768-11 | ELECT | 2200uF 20% 16V | IC504 | 8-759-463-99 | IC M5M5256DFP-70XL | |
| C925 | 1-126-933-11 | ELECT | 100uF 20% 16V | IC505 | 8-759-822-38 | IC LA6510 | |
| C926 | 1-126-933-11 | ELECT | 100uF 20% 16V | IC506 | 8-759-822-38 | IC LA6510 | |
| C927 | 1-126-925-11 | ELECT | 470uF 20% 10V | IC910 | 8-759-231-53 | IC M5F7805L | |
| C928 | 1-126-925-11 | ELECT | 470uF 20% 10V | IC911 | 8-759-604-90 | IC M5F7907L | |
| C933 | 1-126-933-11 | ELECT | 100uF 20% 16V | IC920 | 8-759-605-00 | IC TA7807S (LBSONY) | |
| C936 | 1-126-963-11 | ELECT | 4.7uF 20% 50V | IC921 | 8-759-094-53 | IC TA7805S (LBSONY) | |
| C938 | 1-126-935-11 | ELECT | 470uF 20% 16V | IC930 | 8-759-173-39 | IC NJU7201L50-T3 | |
| C939 | 1-126-963-11 | ELECT | 4.7uF 20% 50V | IC931 | 8-759-821-93 | IC LA5601 | |
| C940 | 1-128-576-11 | ELECT | 100uF 20% 63V | < SHORT > | | | |
| C941 | 1-126-948-11 | ELECT | 100uF 20% 35V | JW001 | 1-216-295-00 | SHORT | 0 |
| < CONNECTOR > | | | | JW002 | 1-216-295-00 | SHORT | 0 (CX333ES) |
| * CN501 | 1-568-839-11 | SOCKET, CONNECTOR 23P | | < COIL > | | | |
| * CN502 | 1-568-839-11 | SOCKET, CONNECTOR 23P | | L201 | 1-410-375-11 | INDUCTOR CHIP | 3.3uH |
| * CN503 | 1-568-936-11 | PIN, CONNECTOR 9P (CX555ES) | | L202 | 1-410-375-11 | INDUCTOR CHIP | 3.3uH |
| * CN503 | 1-568-955-11 | PIN, CONNECTOR 6P (CX333ES) | | L204 | 1-414-234-22 | INDUCTOR CHIP | 0uH |
| CN504 | 1-506-469-11 | PIN, CONNECTOR 4P | | L205 | 1-414-234-22 | INDUCTOR CHIP | 0uH |
| CN505 | 1-506-469-11 | PIN, CONNECTOR 4P | | L206 | 1-414-234-22 | INDUCTOR CHIP | 0uH |
| * CN506 | 1-564-518-11 | PLUG, CONNECTOR 3P | | L207 | 1-414-234-22 | INDUCTOR CHIP | 0uH |
| * CN507 | 1-568-934-11 | PIN, CONNECTOR 7P | | L208 | 1-414-234-22 | INDUCTOR CHIP | 0uH |
| * CN508 | 1-568-953-41 | PIN, CONNECTOR 4P | | L209 | 1-414-234-22 | INDUCTOR CHIP | 0uH |
| * CN509 | 1-506-469-11 | PIN, CONNECTOR 4P | | L211 | 1-414-234-22 | INDUCTOR CHIP | 0uH |
| * CN510 | 1-564-509-11 | PLUG, CONNECTOR 6P | | < TRANSISTOR > | | | |
| * CN511 | 1-568-935-11 | PIN, CONNECTOR 8P | | Q325 | 8-729-027-38 | TRANSISTOR | DTA144EKA-T146 |
| * CN901 | 1-564-511-11 | PLUG, CONNECTOR 8P | | Q326 | 8-729-027-38 | TRANSISTOR | DTA144EKA-T146 |
| * CN902 | 1-564-508-11 | PLUG, CONNECTOR 5P | | Q328 | 8-729-027-38 | TRANSISTOR | DTA144EKA-T146 |
| * CN903 | 1-564-507-11 | PLUG, CONNECTOR 4P | | Q329 | 8-729-027-38 | TRANSISTOR | DTA144EKA-T146 |
| < DIODE > | | | | Q332 | 8-729-027-38 | TRANSISTOR | DTA144EKA-T146 |
| D201 | 8-719-988-61 | DIODE | 1SS355TE-17 | Q335 | 8-729-107-46 | TRANSISTOR | 2SC3624A-T1L15L16 |
| D325 | 8-719-988-61 | DIODE | 1SS355TE-17 | Q336 | 8-729-107-46 | TRANSISTOR | 2SC3624A-T1L15L16 |
| D329 | 8-719-988-61 | DIODE | 1SS355TE-17 | Q337 | 8-729-107-46 | TRANSISTOR | 2SC3624A-T1L15L16 |
| D332 | 8-719-988-61 | DIODE | 1SS355TE-17 | Q338 | 8-729-107-46 | TRANSISTOR | 2SC3624A-T1L15L16 |
| D425 | 8-719-988-61 | DIODE | 1SS355TE-17 | Q425 | 8-729-027-38 | TRANSISTOR | DTA144EKA-T146 |
| D501 | 8-719-988-61 | DIODE | 1SS355TE-17 | Q426 | 8-729-027-38 | TRANSISTOR | DTA144EKA-T146 |
| D521 | 8-719-053-18 | DIODE | 1SR154-400TE-25 | Q435 | 8-729-107-46 | TRANSISTOR | 2SC3624A-T1L15L16 |
| D550 | 8-719-977-40 | DIODE | UDZ-TE-17-13B | Q436 | 8-729-107-46 | TRANSISTOR | 2SC3624A-T1L15L16 |
| D580 | 8-719-988-61 | DIODE | 1SS355TE-17 (CX555ES) | Q437 | 8-729-107-46 | TRANSISTOR | 2SC3624A-T1L15L16 |
| D940 | 8-719-053-18 | DIODE | 1SR154-400TE-25 | Q438 | 8-729-107-46 | TRANSISTOR | 2SC3624A-T1L15L16 |

| Ref. No. | Part No. | Description | Remark | Ref. No. | Part No. | Description | Remark |
|----------|--------------|--|--------|----------|--------------|----------------------|--------|
| Q521 | 8-729-030-08 | TRANSISTOR DTC144VSA-TP | | R334 | 1-216-097-00 | RES, CHIP 100K 5% | 1/10W |
| Q550 | 1-801-806-11 | TRANSISTOR DTC144EKA-T146 | | R335 | 1-216-057-00 | METAL CHIP 2.2K 5% | 1/10W |
| Q551 | 8-729-027-38 | TRANSISTOR DTA144EKA-T146 | | | | | |
| Q552 | 8-729-027-38 | TRANSISTOR DTA144EKA-T146 | | R336 | 1-216-057-00 | METAL CHIP 2.2K 5% | 1/10W |
| Q559 | 8-729-120-28 | TRANSISTOR 2SC2412K-T-146-QR | | R337 | 1-216-057-00 | METAL CHIP 2.2K 5% | 1/10W |
| | | | | R338 | 1-216-057-00 | METAL CHIP 2.2K 5% | 1/10W |
| Q560 | 1-801-806-11 | TRANSISTOR DTC144EKA-T146 | | R339 | 1-216-649-11 | METAL CHIP 820 0.5% | 1/10W |
| Q561 | 8-729-027-38 | TRANSISTOR DTA144EKA-T146 | | R340 | 1-218-768-11 | METAL CHIP 470K 0.5% | 1/10W |
| Q562 | 8-729-027-38 | TRANSISTOR DTA144EKA-T146 | | | | | |
| Q570 | 8-729-900-53 | TRANSISTOR DTC114EKA-T146 | | R401 | 1-216-639-91 | METAL CHIP 330 0.5% | 1/10W |
| Q571 | 8-729-900-53 | TRANSISTOR DTC114EKA-T146 | | R402 | 1-216-639-91 | METAL CHIP 330 0.5% | 1/10W |
| | | | | R403 | 1-216-633-91 | METAL CHIP 180 0.5% | 1/10W |
| Q572 | 8-729-027-23 | TRANSISTOR DTA114EKA-T146 | | R404 | 1-216-633-91 | METAL CHIP 180 0.5% | 1/10W |
| Q573 | 8-729-027-23 | TRANSISTOR DTA114EKA-T146 | | R405 | 1-216-607-11 | METAL CHIP 15 0.5% | 1/10W |
| Q574 | 8-729-027-23 | TRANSISTOR DTA114EKA-T146 | | | | | |
| Q576 | 8-729-027-23 | TRANSISTOR DTA114EKA-T146 | | R406 | 1-216-607-11 | METAL CHIP 15 0.5% | 1/10W |
| Q580 | 8-729-900-53 | TRANSISTOR DTC114EKA-T146 (CX555ES) | | R407 | 1-216-607-11 | METAL CHIP 15 0.5% | 1/10W |
| | | | | R408 | 1-216-607-11 | METAL CHIP 15 0.5% | 1/10W |
| Q581 | 8-729-120-28 | TRANSISTOR 2SC2412K-T-146-QR (CX555ES) | | R410 | 1-216-637-11 | METAL CHIP 270 0.5% | 1/10W |
| | | | | R411 | 1-216-637-11 | METAL CHIP 270 0.5% | 1/10W |
| Q940 | 8-729-140-97 | TRANSISTOR 2SB734-T-34 | | | | | |
| | | < RESISTOR > | | R412 | 1-216-681-11 | METAL CHIP 18K 0.5% | 1/10W |
| | | | | R413 | 1-216-681-11 | METAL CHIP 18K 0.5% | 1/10W |
| R201 | 1-216-033-00 | METAL CHIP 220 5% | 1/10W | R414 | 1-216-681-11 | METAL CHIP 18K 0.5% | 1/10W |
| R202 | 1-216-113-00 | METAL CHIP 470K 5% | 1/10W | R415 | 1-216-681-11 | METAL CHIP 18K 0.5% | 1/10W |
| R203 | 1-216-049-11 | RES, CHIP 1K 5% | 1/10W | R416 | 1-216-650-11 | METAL CHIP 910 0.5% | 1/10W |
| R204 | 1-216-061-00 | METAL CHIP 3.3K 5% | 1/10W | | | | |
| R205 | 1-216-025-00 | RES, CHIP 100 5% | 1/10W | R417 | 1-216-657-11 | METAL CHIP 1.8K 0.5% | 1/10W |
| | | | | R418 | 1-216-646-11 | METAL CHIP 620 0.5% | 1/10W |
| R207 | 1-216-025-00 | RES, CHIP 100 5% | 1/10W | R419 | 1-216-657-11 | METAL CHIP 1.8K 0.5% | 1/10W |
| R301 | 1-216-639-91 | METAL CHIP 330 0.5% | 1/10W | R420 | 1-216-673-11 | METAL CHIP 8.2K 0.5% | 1/10W |
| R302 | 1-216-639-91 | METAL CHIP 330 0.5% | 1/10W | R421 | 1-216-646-11 | METAL CHIP 620 0.5% | 1/10W |
| R303 | 1-216-633-91 | METAL CHIP 180 0.5% | 1/10W | | | | |
| R304 | 1-216-633-91 | METAL CHIP 180 0.5% | 1/10W | R422 | 1-216-675-91 | METAL CHIP 10K 0.5% | 1/10W |
| | | | | R423 | 1-216-675-91 | METAL CHIP 10K 0.5% | 1/10W |
| R305 | 1-216-607-11 | METAL CHIP 15 0.5% | 1/10W | R424 | 1-216-675-91 | METAL CHIP 10K 0.5% | 1/10W |
| R306 | 1-216-607-11 | METAL CHIP 15 0.5% | 1/10W | R425 | 1-218-760-11 | METAL CHIP 220K 0.5% | 1/10W |
| R307 | 1-216-607-11 | METAL CHIP 15 0.5% | 1/10W | R426 | 1-216-635-11 | METAL CHIP 220 0.5% | 1/10W |
| R308 | 1-216-607-11 | METAL CHIP 15 0.5% | 1/10W | | | | |
| R309 | 1-216-675-91 | METAL CHIP 10K 0.5% | 1/10W | R427 | 1-216-635-11 | METAL CHIP 220 0.5% | 1/10W |
| | | | | R428 | 1-216-673-11 | METAL CHIP 8.2K 0.5% | 1/10W |
| R310 | 1-216-637-11 | METAL CHIP 270 0.5% | 1/10W | R430 | 1-216-097-00 | RES, CHIP 100K 5% | 1/10W |
| R311 | 1-216-637-11 | METAL CHIP 270 0.5% | 1/10W | R431 | 1-216-097-00 | RES, CHIP 100K 5% | 1/10W |
| R312 | 1-216-681-11 | METAL CHIP 18K 0.5% | 1/10W | R435 | 1-216-057-00 | METAL CHIP 2.2K 5% | 1/10W |
| R313 | 1-216-681-11 | METAL CHIP 18K 0.5% | 1/10W | | | | |
| R314 | 1-216-681-11 | METAL CHIP 18K 0.5% | 1/10W | R436 | 1-216-057-00 | METAL CHIP 2.2K 5% | 1/10W |
| | | | | R437 | 1-216-057-00 | METAL CHIP 2.2K 5% | 1/10W |
| R315 | 1-216-681-11 | METAL CHIP 18K 0.5% | 1/10W | R438 | 1-216-057-00 | METAL CHIP 2.2K 5% | 1/10W |
| R316 | 1-216-650-11 | METAL CHIP 910 0.5% | 1/10W | R440 | 1-218-768-11 | METAL CHIP 470K 0.5% | 1/10W |
| R317 | 1-216-657-11 | METAL CHIP 1.8K 0.5% | 1/10W | R501 | 1-216-073-00 | METAL CHIP 10K 5% | 1/10W |
| R318 | 1-216-646-11 | METAL CHIP 620 0.5% | 1/10W | | | | |
| R319 | 1-216-657-11 | METAL CHIP 1.8K 0.5% | 1/10W | R502 | 1-216-073-00 | METAL CHIP 10K 5% | 1/10W |
| | | | | R503 | 1-216-097-00 | RES, CHIP 100K 5% | 1/10W |
| R320 | 1-216-673-11 | METAL CHIP 8.2K 0.5% | 1/10W | R504 | 1-216-073-00 | METAL CHIP 10K 5% | 1/10W |
| R321 | 1-216-646-11 | METAL CHIP 620 0.5% | 1/10W | R505 | 1-216-073-00 | METAL CHIP 10K 5% | 1/10W |
| R322 | 1-216-675-91 | METAL CHIP 10K 0.5% | 1/10W | R506 | 1-216-073-00 | METAL CHIP 10K 5% | 1/10W |
| R323 | 1-216-675-91 | METAL CHIP 10K 0.5% | 1/10W | | | | |
| R324 | 1-216-675-91 | METAL CHIP 10K 0.5% | 1/10W | R507 | 1-216-073-00 | METAL CHIP 10K 5% | 1/10W |
| | | | | R508 | 1-216-073-00 | METAL CHIP 10K 5% | 1/10W |
| R325 | 1-218-760-11 | METAL CHIP 220K 0.5% | 1/10W | R509 | 1-216-073-00 | METAL CHIP 10K 5% | 1/10W |
| R326 | 1-216-635-11 | METAL CHIP 220 0.5% | 1/10W | R510 | 1-216-069-00 | METAL CHIP 6.8K 5% | 1/10W |
| R327 | 1-216-635-11 | METAL CHIP 220 0.5% | 1/10W | R511 | 1-216-069-00 | METAL CHIP 6.8K 5% | 1/10W |
| R328 | 1-216-673-11 | METAL CHIP 8.2K 0.5% | 1/10W | | | | |
| R330 | 1-216-097-00 | RES, CHIP 100K 5% | 1/10W | R513 | 1-216-073-00 | METAL CHIP 10K 5% | 1/10W |
| | | | | R514 | 1-216-073-00 | METAL CHIP 10K 5% | 1/10W |
| R331 | 1-216-097-00 | RES, CHIP 100K 5% | 1/10W | R515 | 1-216-073-00 | METAL CHIP 10K 5% | 1/10W |
| R332 | 1-216-097-00 | RES, CHIP 100K 5% | 1/10W | R516 | 1-216-073-00 | METAL CHIP 10K 5% | 1/10W |
| R333 | 1-216-097-00 | RES, CHIP 100K 5% | 1/10W | R517 | 1-216-073-00 | METAL CHIP 10K 5% | 1/10W |

MAIN

POWER

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|-------------|----------------------------|
| R518 | 1-216-089-00 | RES, CHIP | 47K 5% 1/10W |
| R520 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W |
| R521 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W |
| R522 | 1-220-251-11 | RES, CHIP | 33 5% 1/2W |
| R530 | 1-216-078-00 | RES, CHIP | 16K 5% 1/10W |
| R531 | 1-216-103-00 | METAL CHIP | 180K 5% 1/10W |
| R532 | 1-216-103-00 | METAL CHIP | 180K 5% 1/10W |
| R533 | 1-216-101-00 | METAL CHIP | 150K 5% 1/10W |
| R534 | 1-220-227-11 | RES, CHIP | 1.2 10% 1/4W |
| R535 | 1-220-227-11 | RES, CHIP | 1.2 10% 1/4W |
| R536 | 1-216-001-00 | METAL CHIP | 10 5% 1/10W |
| R537 | 1-216-077-00 | METAL CHIP | 15K 5% 1/10W |
| R540 | 1-216-078-00 | RES, CHIP | 16K 5% 1/10W |
| R541 | 1-216-103-00 | METAL CHIP | 180K 5% 1/10W |
| R542 | 1-216-103-00 | METAL CHIP | 180K 5% 1/10W |
| R543 | 1-216-101-00 | METAL CHIP | 150K 5% 1/10W |
| R544 | 1-220-227-11 | RES, CHIP | 1.2 10% 1/4W |
| R545 | 1-220-227-11 | RES, CHIP | 1.2 10% 1/4W |
| R546 | 1-216-001-00 | METAL CHIP | 10 5% 1/10W |
| R547 | 1-216-077-00 | METAL CHIP | 15K 5% 1/10W |
| R550 | 1-216-057-00 | METAL CHIP | 2.2K 5% 1/10W |
| R551 | 1-216-097-00 | RES, CHIP | 100K 5% 1/10W |
| R552 | 1-216-049-11 | RES, CHIP | 1K 5% 1/10W |
| R553 | 1-216-097-00 | RES, CHIP | 100K 5% 1/10W |
| R554 | 1-216-101-00 | METAL CHIP | 150K 5% 1/10W |
| R555 | 1-216-065-00 | RES, CHIP | 4.7K 5% 1/10W |
| R556 | 1-220-227-11 | RES, CHIP | 1.2 10% 1/4W |
| R557 | 1-220-227-11 | RES, CHIP | 1.2 10% 1/4W |
| R558 | 1-216-025-00 | RES, CHIP | 100 5% 1/10W |
| R559 | 1-220-275-11 | RES, CHIP | 1.5K 5% 1/4W |
| R560 | 1-216-057-00 | METAL CHIP | 2.2K 5% 1/10W |
| R561 | 1-216-097-00 | RES, CHIP | 100K 5% 1/10W |
| R562 | 1-216-049-11 | RES, CHIP | 1K 5% 1/10W |
| R563 | 1-216-097-00 | RES, CHIP | 100K 5% 1/10W |
| R564 | 1-216-101-00 | METAL CHIP | 150K 5% 1/10W |
| R565 | 1-216-065-00 | RES, CHIP | 4.7K 5% 1/10W |
| R566 | 1-220-227-11 | RES, CHIP | 1.2 10% 1/4W |
| R567 | 1-220-227-11 | RES, CHIP | 1.2 10% 1/4W |
| R569 | 1-220-275-11 | RES, CHIP | 1.5K 5% 1/4W |
| R570 | 1-216-065-00 | RES, CHIP | 4.7K 5% 1/10W |
| R571 | 1-216-065-00 | RES, CHIP | 4.7K 5% 1/10W |
| R580 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W (CX555ES) |
| R581 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W (CX555ES) |
| R582 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W (CX555ES) |
| R583 | 1-216-065-00 | RES, CHIP | 4.7K 5% 1/10W (CX555ES) |
| R584 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W (CX555ES) |
| R591 | 1-216-025-00 | RES, CHIP | 100 5% 1/10W |
| R592 | 1-216-025-00 | RES, CHIP | 100 5% 1/10W |
| R593 | 1-216-025-00 | RES, CHIP | 100 5% 1/10W |
| R594 | 1-216-025-00 | RES, CHIP | 100 5% 1/10W |
| R720 | 1-216-069-00 | METAL CHIP | 6.8K 5% 1/10W |
| R730 | 1-216-069-00 | METAL CHIP | 6.8K 5% 1/10W |
| R740 | 1-216-069-00 | METAL CHIP | 6.8K 5% 1/10W |
| R750 | 1-216-069-00 | METAL CHIP | 6.8K 5% 1/10W |

| Ref. No. | Part No. | Description | Remark |
|-----------------------|--------------|---------------------------------------|-----------------|
| R760 | 1-216-069-00 | METAL CHIP | 6.8K 5% 1/10W |
| R940 | 1-216-065-00 | RES, CHIP | 4.7K 5% 1/10W |
| R941 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W |
| R942 | 1-216-073-00 | METAL CHIP | 10K 5% 1/10W |
| R943 | 1-216-025-00 | RES, CHIP | 100 5% 1/10W |
| < VARIABLE RESISTOR > | | | |
| RV501 | 1-241-786-11 | RES, ADJ, CARBON 22K | |
| < VIBRATOR > | | | |
| X201 | 1-760-955-11 | VIBRATOR, CRYSTAL (45MHz) | |
| X501 | 1-579-175-11 | VIBRATOR, CERAMIC (10MHz) | |
| X580 | 1-767-938-21 | VIBRATOR, CERAMIC (7.28MHz) (CX555ES) | |
| ***** | | | |
| | 1-672-638-11 | POWER BOARD | |
| ***** | | | |
| < CAPACITOR > | | | |
| △C901 | 1-113-925-11 | CERAMIC | 0.01uF 20% 250V |
| C910 | 1-161-494-00 | CERAMIC | 0.022uF 25V |
| C911 | 1-126-767-11 | ELECT | 1000uF 20% 16V |
| C912 | 1-126-767-11 | ELECT | 1000uF 20% 16V |
| C920 | 1-161-494-00 | CERAMIC | 0.022uF 25V |
| C921 | 1-126-767-11 | ELECT | 1000uF 20% 16V |
| C922 | 1-126-767-11 | ELECT | 1000uF 20% 16V |
| C932 | 1-126-936-11 | ELECT | 3300uF 20% 16V |
| C937 | 1-126-960-11 | ELECT | 1uF 20% 50V |
| < CONNECTOR > | | | |
| * CN991 | 1-580-230-11 | PIN, CONNECTOR (PC BOARD) 2P | |
| < DIODE > | | | |
| D901 | 8-719-911-19 | DIODE | 1SS133T-72 |
| D910 | 8-719-024-99 | DIODE | 11ES2-NTA2B |
| D911 | 8-719-024-99 | DIODE | 11ES2-NTA2B |
| D912 | 8-719-024-99 | DIODE | 11ES2-NTA2B |
| D913 | 8-719-024-99 | DIODE | 11ES2-NTA2B |
| D920 | 8-719-200-77 | DIODE | 10E2N-TA2B |
| D921 | 8-719-200-77 | DIODE | 10E2N-TA2B |
| D922 | 8-719-200-77 | DIODE | 10E2N-TA2B |
| D923 | 8-719-200-77 | DIODE | 10E2N-TA2B |
| D930 | 8-719-911-19 | DIODE | 1SS133T-72 |
| D931 | 8-719-911-19 | DIODE | 1SS133T-72 |
| D932 | 8-719-210-21 | DIODE | 11EQS04-TA2B |
| D933 | 8-719-210-21 | DIODE | 11EQS04-TA2B |
| D934 | 8-719-210-21 | DIODE | 11EQS04-TA2B |
| D935 | 8-719-210-21 | DIODE | 11EQS04-TA2B |
| D939 | 8-719-911-19 | DIODE | 1SS133T-72 |
| <GROUND TERMINAL > | | | |
| EB1 | 1-537-770-21 | TERMINAL BOARD, GROUND | |
| EB2 | 1-537-770-21 | TERMINAL BOARD, GROUND | |
| < LINE FILTER > | | | |
| △L901 | 1-424-485-11 | FILTER, LINE | |

| | |
|--|--|
| The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified. | Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié. |
|--|--|

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|---------------------------------------|--------|
| | | < TRANSISTOR > | |
| Q930 | 8-729-620-05 | TRANSISTOR 2SC2603TP-EF | |
| | | < RESISTOR > | |
| R930 | 1-249-429-11 | CARBON 10K 5% 1/4W | |
| R931 | 1-249-421-11 | CARBON 2.2K 5% 1/4W | |
| R933 | 1-249-429-11 | CARBON 10K 5% 1/4W | |
| R934 | 1-249-417-11 | CARBON 1K 5% 1/4W | |
| | | < RELAY > | |
| △ RY901 | 1-755-299-11 | RELAY | |
| | | < TRANSFORMER > | |
| △ T901 | 1-433-666-11 | TRANSFORMER, POWER | |
| △ T902 | 1-433-663-11 | TRANSFORMER, POWER | |
| ***** | | | |
| | 1-672-639-11 | SENSOR (T) BOARD ***** | |
| | | < CONNECTOR > | |
| * CN81 | 1-506-486-11 | PIN, CONNECTOR 7P | |
| CN82 | 1-506-481-11 | PIN, CONNECTOR 2P | |
| CN83 | 1-506-481-11 | PIN, CONNECTOR 2P | |
| | | < PHOTO INTERRUPTER > | |
| IC81 | 8-749-924-18 | PHOTO INTERRUPTER RPI-1391 | |
| IC82 | 8-749-924-18 | PHOTO INTERRUPTER RPI-1391 | |
| IC83 | 8-749-924-18 | PHOTO INTERRUPTER RPI-1391 | |
| IC84 | 8-749-924-18 | PHOTO INTERRUPTER RPI-1391 | |
| | | < RESISTOR > | |
| R81 | 1-249-416-11 | CARBON 820 5% 1/4W | |
| R82 | 1-249-416-11 | CARBON 820 5% 1/4W | |
| R83 | 1-249-416-11 | CARBON 820 5% 1/4W | |
| R84 | 1-249-416-11 | CARBON 820 5% 1/4W | |
| R85 | 1-249-415-11 | CARBON 680 5% 1/4W | |
| ***** | | | |
| | | MISCELLANEOUS ***** | |
| 7 | 1-790-539-12 | WIRE (FLAT TYPE) (23 CORE) | |
| 8 | 1-773-183-11 | WIRE (FLAT TYPE) (23 CORE) | |
| 271 | 1-769-069-11 | WIRE (FLAT TYPE) (16 CORE) | |
| △ 301 | 8-820-026-03 | OPTICAL PICK-UP KSM-213BFN/C2NP | |
| △ CNP901 | 1-783-531-31 | CORD, POWER | |
| M101 | X-2646-110-3 | T. T CHASSIS ASSY (MB) (FD) (SPINDLE) | |
| M102 | X-2625-769-1 | MOTIR GEAR ASSY (MB) (RP) (SLED) | |
| M81 | A-4672-675-A | MOTOR ASSY (TABLE) | |
| M82 | A-4672-675-A | MOTOR ASSY (LOADING) | |
| M83 | X-4950-062-3 | DOOR MOTOR ASSY | |
| △ T901 | 1-433-666-11 | TRANSFORMER, POWER | |
| △ T902 | 1-433-663-11 | TRANSFORMER, POWER | |
| ***** | | | |

| Ref. No. | Part No. | Description | Remark |
|----------|--------------|---|--------|
| | | ***** HARDWARE LIST ***** | |
| #1 | 7-685-646-79 | SCREW +BVTP 3X8 TYPE2 N-S | |
| #2 | 7-682-548-09 | SCREW (3X8) | |
| #3 | 7-685-650-79 | SCREW +BVTP 3X16 TYPE2 N-S | |
| #4 | 7-685-871-01 | SCREW +BVTT 3X6 (S) | |
| #5 | 7-685-645-79 | SCREW +BVTP 3X6 TYPE2 N-S | |
| #6 | 7-685-533-19 | SCREW +BTP 2.6X6 TYPE2 N-S | |
| #7 | 7-624-106-04 | STOP RING 3.0, TYPE -E | |
| #8 | 7-682-948-01 | SCREW +PSW 3X8 | |
| #9 | 7-621-775-00 | SCREW +B 2.6X3 | |
| #10 | 7-621-772-21 | SCREW +B 2X5 | |
| #11 | 7-685-903-11 | SCREW +PTPWH 3X6 (TYPE2) | |
| ***** | | | |
| | | ACCESSORIES & PACKING MATERIALS ***** | |
| | 1-418-254-11 | REMOTE COMMANDER (RM-DX350) (CX555ES) | |
| | 1-418-419-11 | REMOTE COMMANDER (RM-DX300) (CX333ES) | |
| | 1-776-263-11 | CORD, CONNECTION (AUDIO) | |
| | 1-777-172-11 | CORD, CONNECTION (CONTROL A1) (Canadian) | |
| | 3-866-362-11 | MANUAL, INSTRUCTION (ENGLISH) (CX333ES) | |
| | 3-866-362-21 | MANUAL, INSTRUCTION (FRENCH) (CX333ES: Canadian) | |
| | 3-866-363-11 | MANUAL, INSTRUCTION (ENGLISH) (CX555ES: US) | |
| | 3-866-363-21 | MANUAL, INSTRUCTION (ENGLISH, FRENCH) (CX555ES: Canadian) | |
| | 3-866-670-11 | MANUAL, COMMONNESS INSTRUCTION (ENGLISH) (US) | |
| | 3-866-670-21 | MANUAL, COMMONNESS INSTRUCTION (ENGLISH, FRENCH, GERMAN, SPANISH, DUTCH, PORTUGUESE, SWEDISH, ITALIAN, CHINESE) (Canadian) | |
| | 4-210-990-01 | LID (RM-LJ301), BATTERY CASE (for RM-DX350) (CX555ES) | |
| | 4-219-390-01 | LABEL (DISC NUMBER) | |
| | 4-981-643-01 | COVER, BATTERY (for RM-DX300) (CX333ES) | |
| | 4-984-086-01 | BOOKLET (100) | |

| | |
|--|--|
| The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified. | Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié. |
|--|--|

