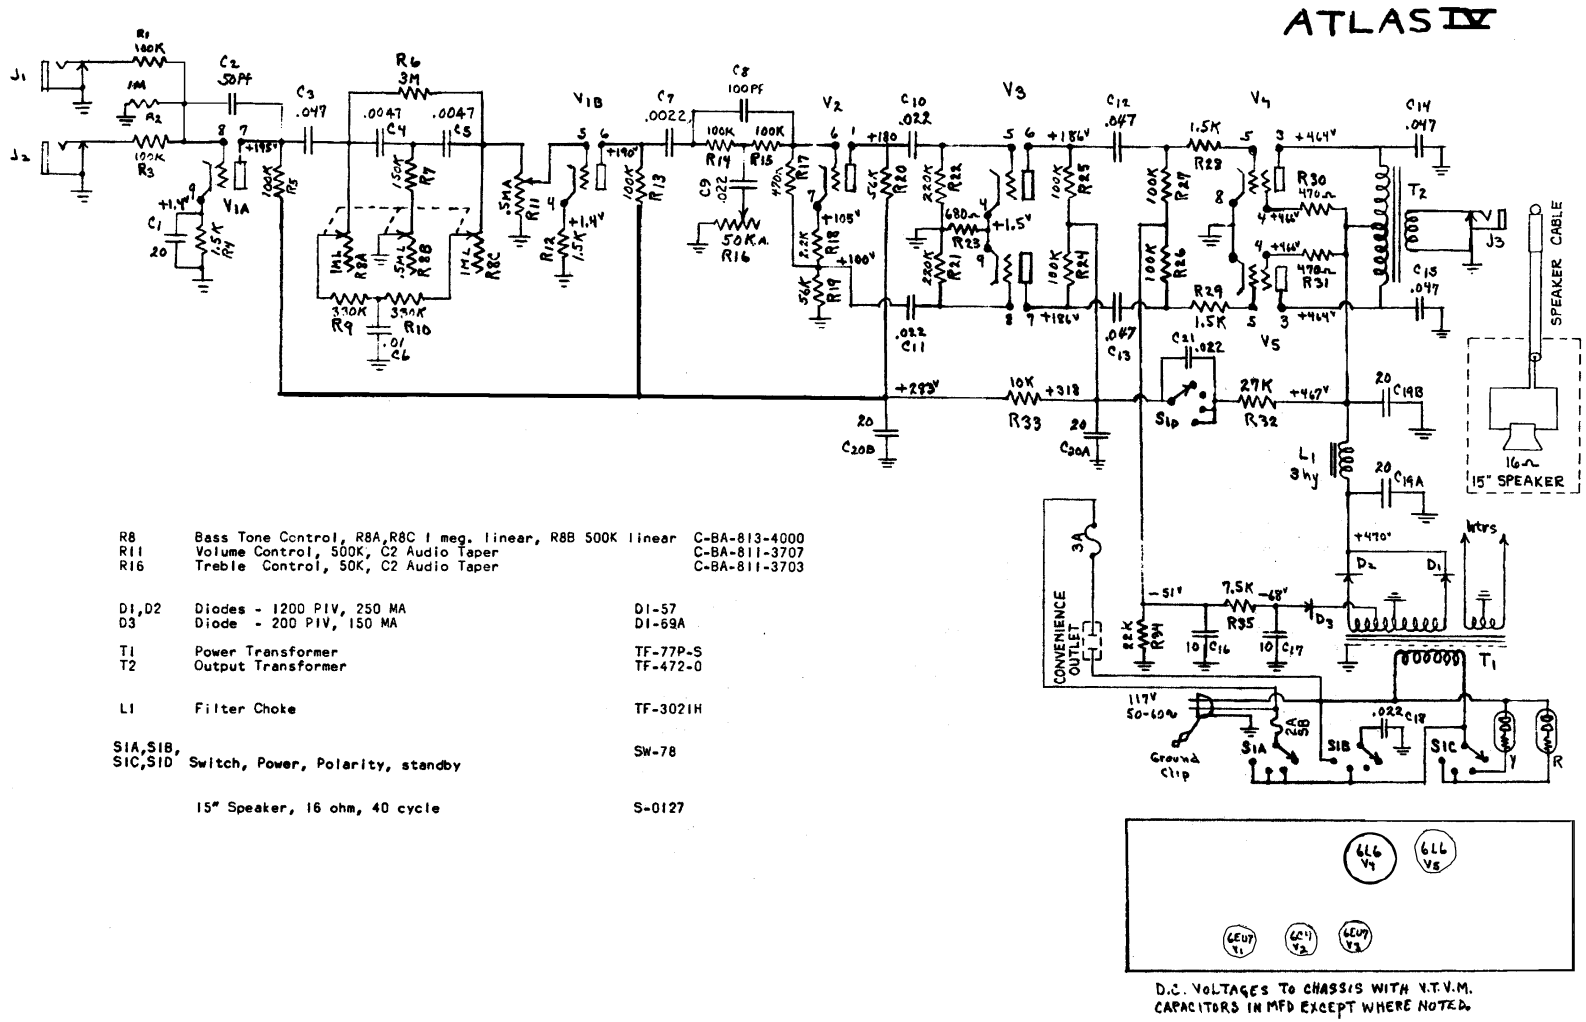


R8	Bass Tone Control, R8A,R8C 1 meg. linear, R8B 500K linear	C-BA-813-4000
R11	Volume Control, 500K, C2 Audio Taper	C-BA-811-3707
R16	Treble Control, 50K, C2 Audio Taper	C-BA-811-3703
D1,D2	Diodes - 1200 PIV, 250 MA	DI-57
D3	Diode - 200 PIV, 150 MA	DI-69A
T1	Power Transformer	TF-77P-S
T2	Output Transformer	TF-472-0
L1	Filter Choke	TF-3021H
S1A,S1B, S1C,S1D	Switch, Power, Polarity, standby	SW-78
	15" Speaker, 16 ohm, 40 cycle	S-0127

FUSE

The fuse used in this Amplifier is a type 3AG of three amperes rating

DO NOT USE FUSES OF HIGHER RATING

SERVICE

If the amplifier is in need of servicing, it should be taken to a reliable radio man. The electrical diagram in this folder should be shown the repairman to assist him in servicing the amplifier.