
EA-72

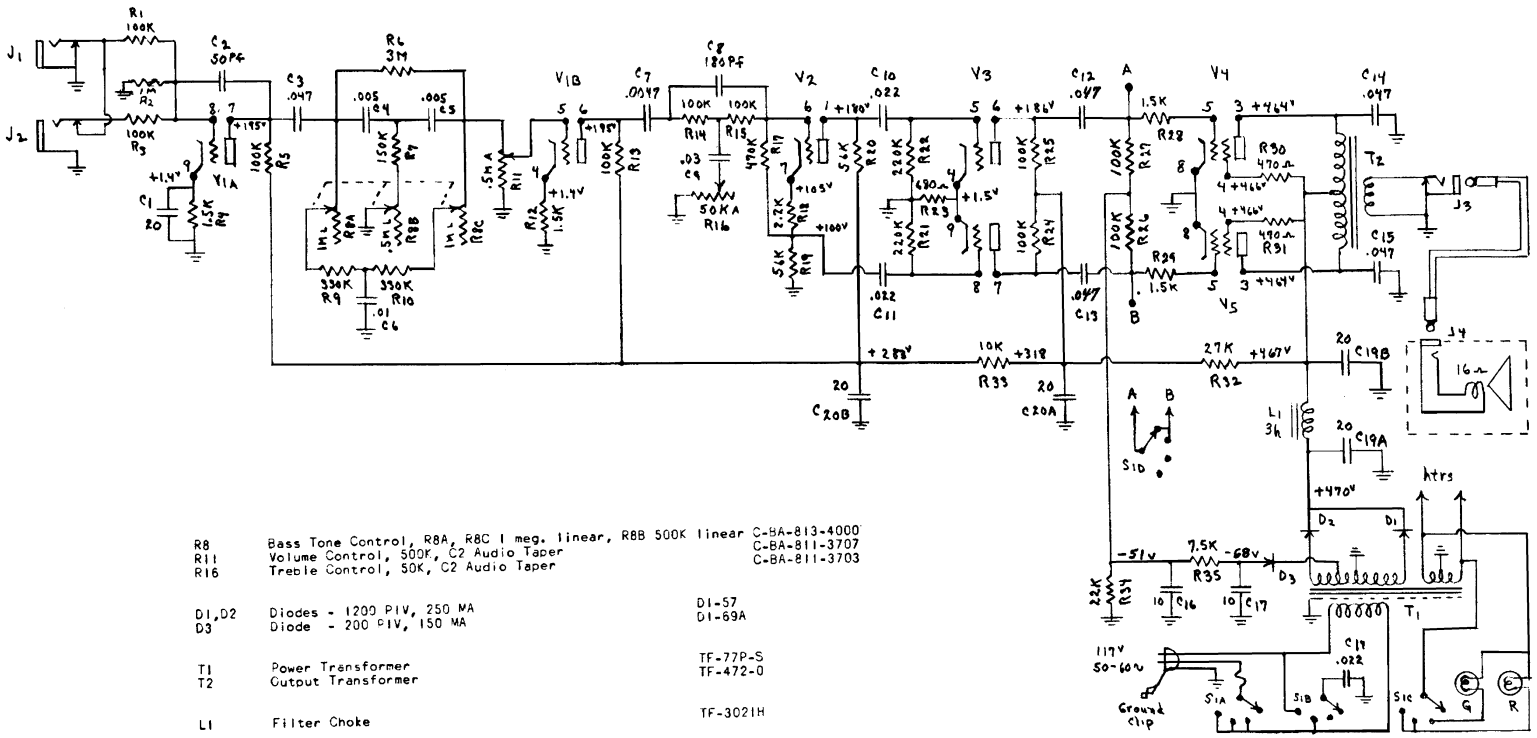

R8 R11 R16	Bass Tone Control, R8A, R8C 1 meg. linear, R8B 500K linear Volume Control, 500K, C2 Audio Taper Treble Control, 50K, C2 Audio Taper	C-BA-813-4000 C-BA-811-3707 C-BA-811-3703
D1,D2 D3	Diodes - 1200 PIV, 250 MA Diode - 200 PIV, 150 MA	D1-57 D1-69A
T1 T2	Power Transformer Output Transformer	TF-77P-S TF-472-0
L1	Filter Choke	TF-3021H
S1A,S1B,S1C	Switch, Power, Polarity, standby	SW-77
	15" Speaker, 16 ohm, 40 cycle	

DC VOLTAGES TO CHASSIS WITH VTVM

FUSE

The fuse used in this Amplifier is a type 3AG of three amperes rating.
DO NOT USE FUSES OF HIGHER RATING

SERVICE

If the amplifier is in need of servicing, it should be taken to a reliable radio man. The electrical diagram in this folder should be shown the repairman to assist him in servicing the amplifier.