Marantz 7

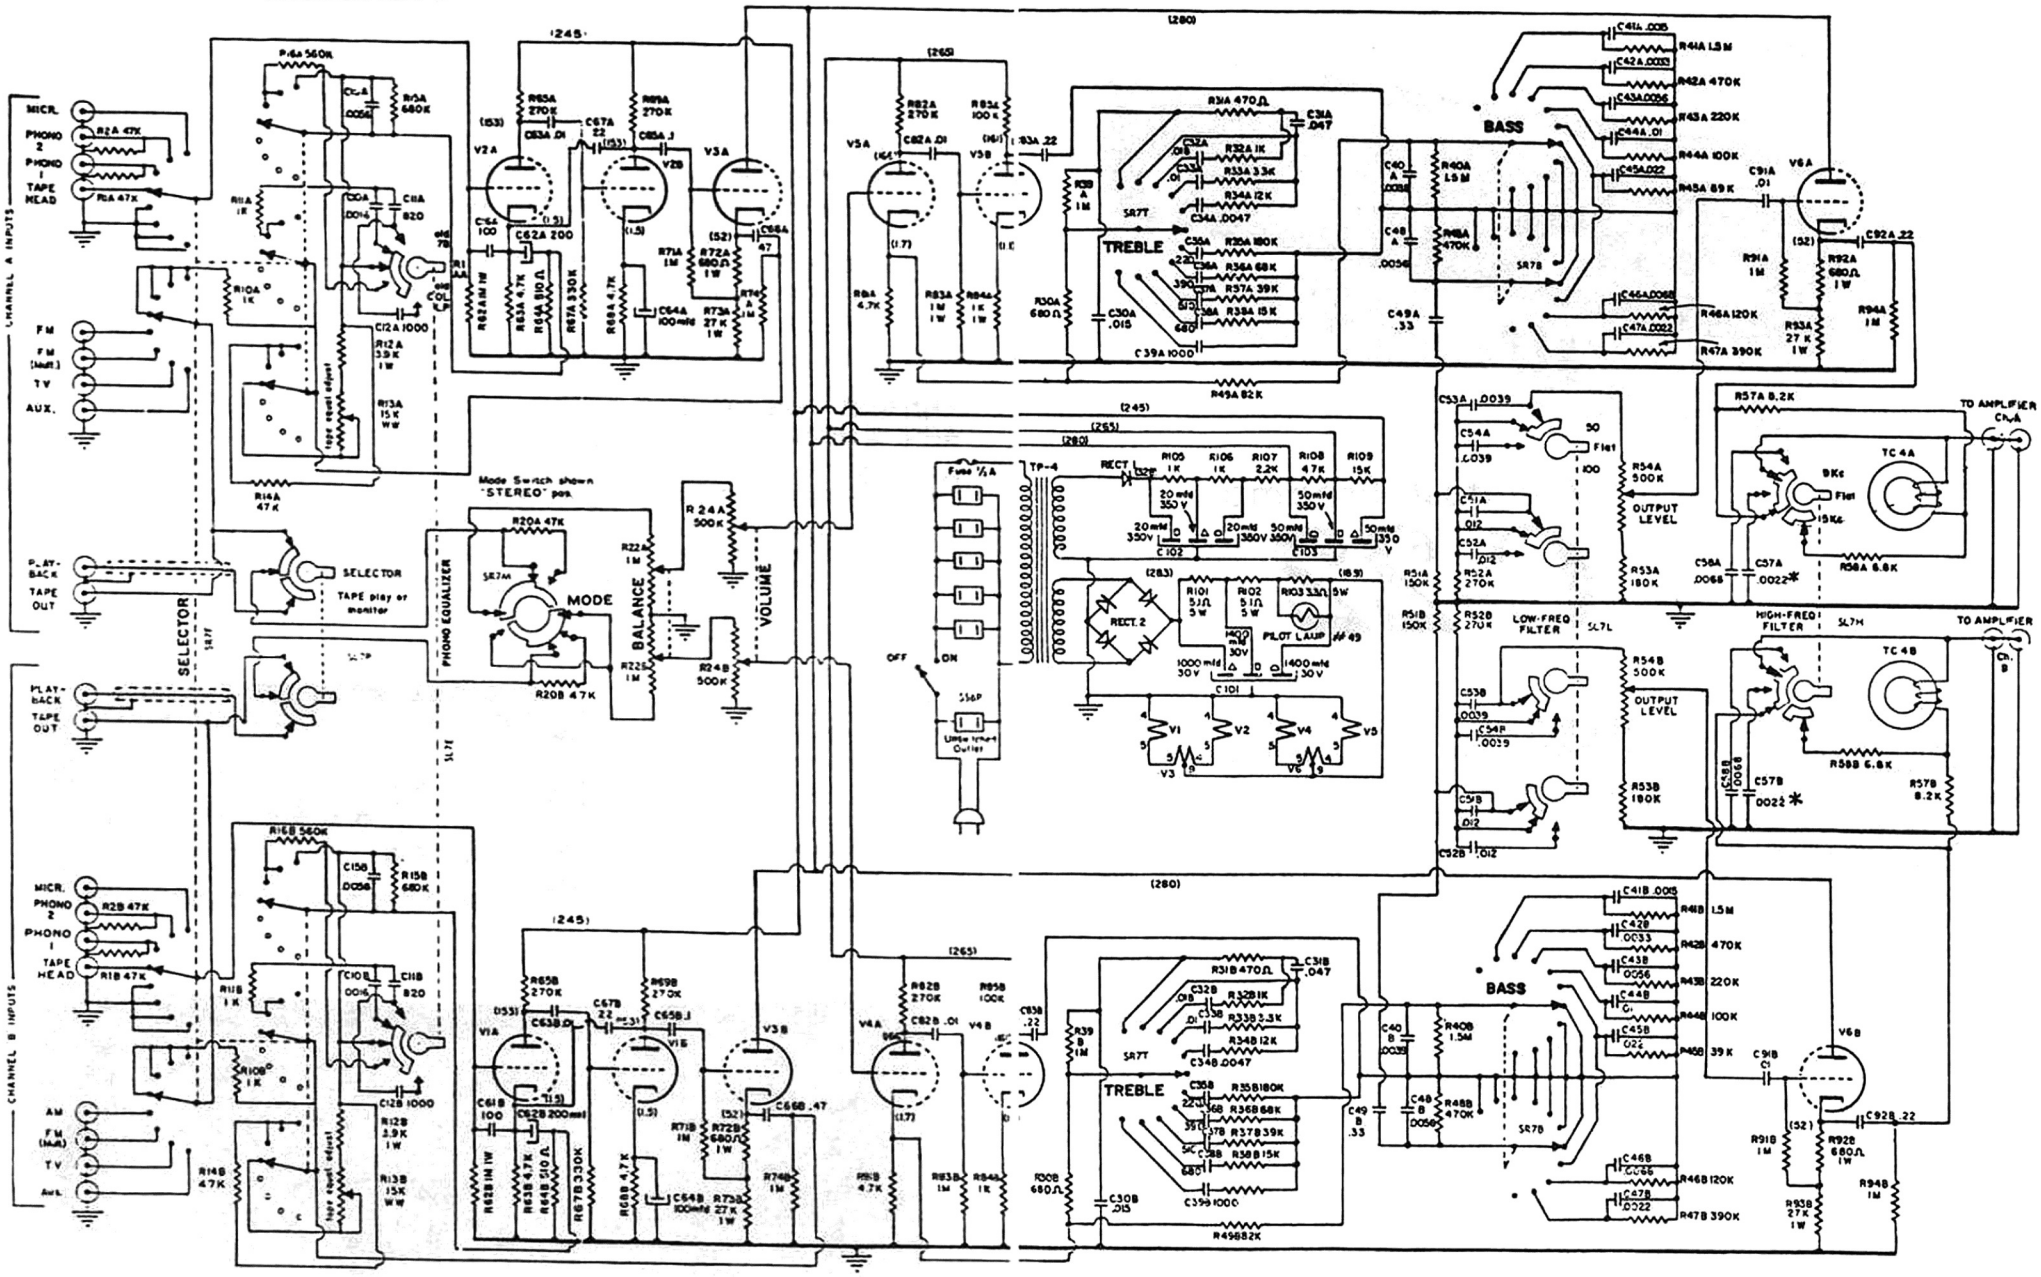

CHANNEL A INPUTS
CHANNEL B INPUTS
MICR.
PHONO 2
PHONO 1
TAPE HEAD
FM
FM (Mult.)
TV
AUX.
PLAY-BACK
TAPE OUT
SELECTOR
TAPE play or monitor
PHONO EQUALIZER
Mode Switch shown "STEREO" pos.
MODE
BALANCE
VOLUME
TREBLE
BASS
OUTPUT LEVEL
LOW-FREQ FILTER
HIGH-FREQ FILTER
TO AMPLIFIER
PILOT LAMP
RECT. 2
Unswitched Outlet