marantz

SCHEMATIC DIAGRAM FOR Model SD240

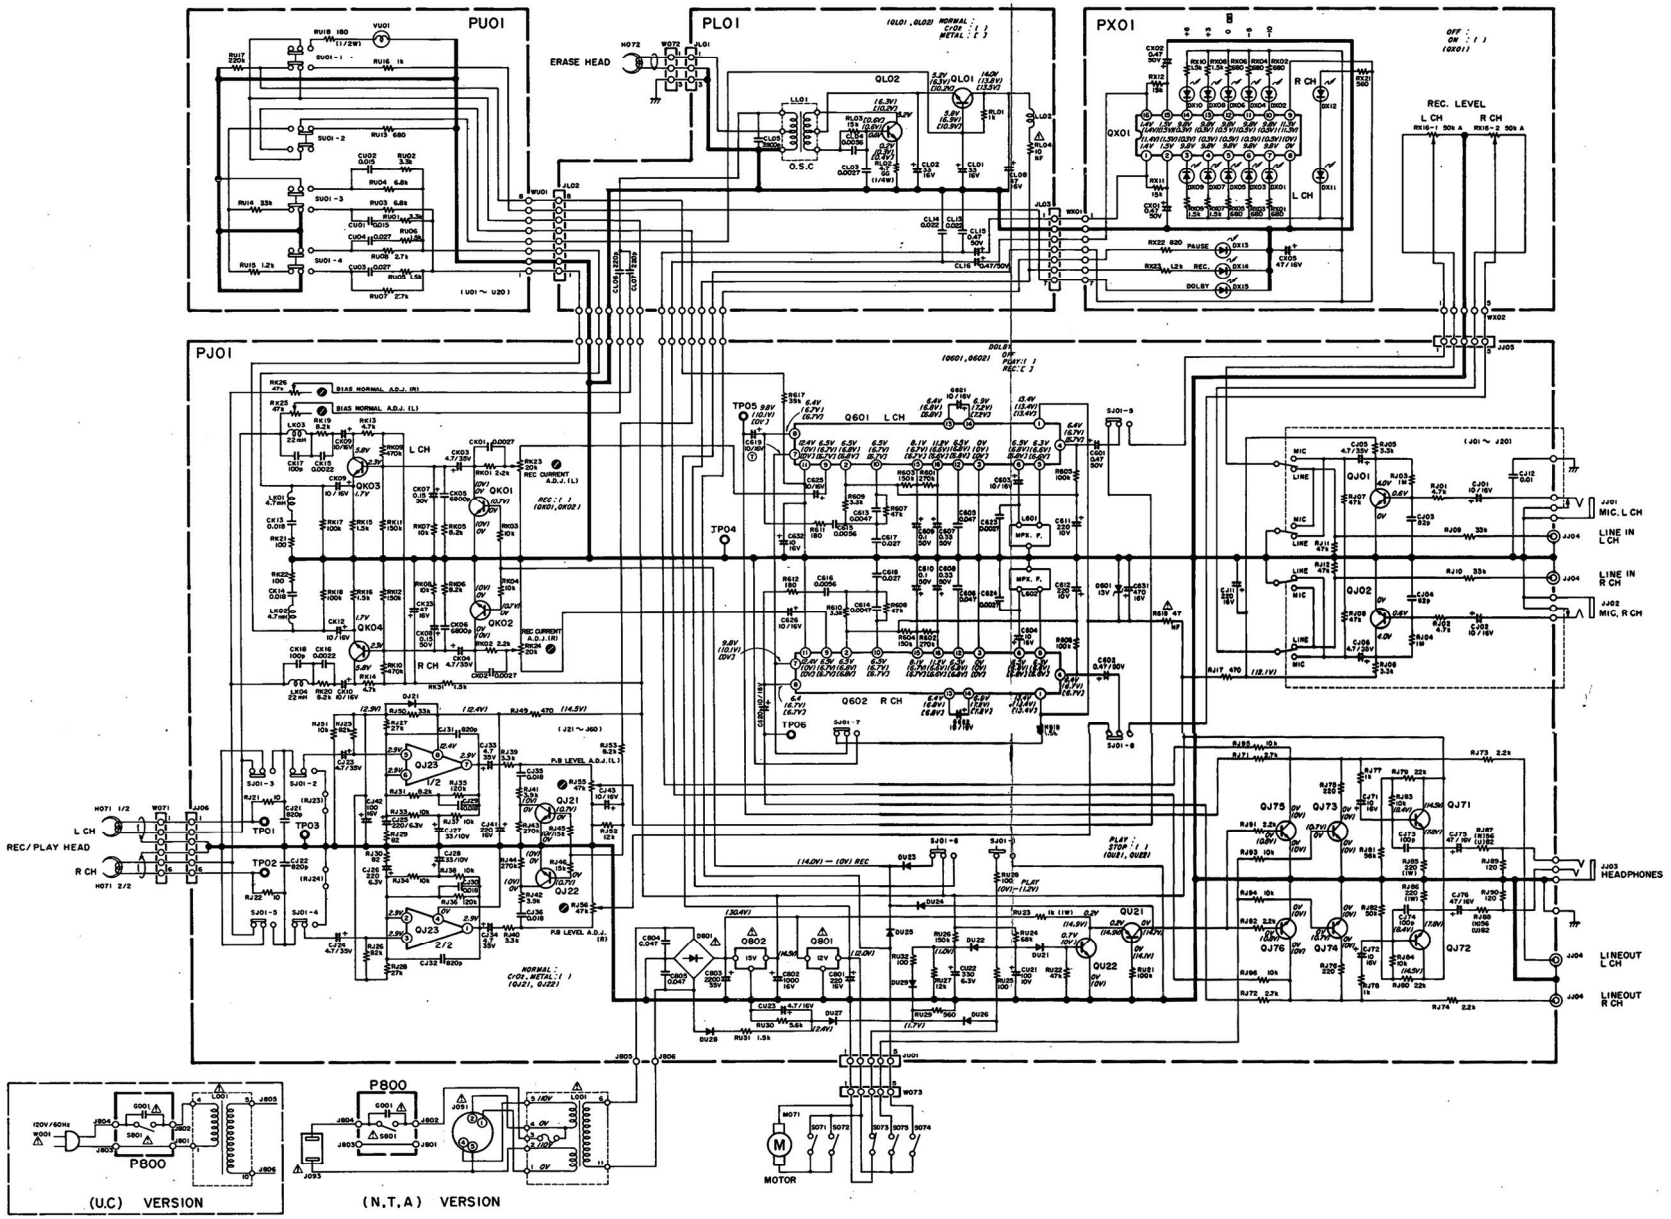

0601, 0602
HC10058050
TA7629P

0801
HC36512090
NJM78M12A

0802
HC36515090
NJM78M15A

QX01
HC10069050
TA7666P

QU21
HT107332A0
2SA733(P,Q)

QJ23
HC10017090
NJM2043DD

QL01, QL02
HT31383280
2SC1383(Q,R)

QJ01, QJ02
HT318451U0
2SC1845(U)

QJ21, QJ22
QJ71 ~ QJ76
QK01 ~ QK04, QU22
HT32634280
2SC2634(S,T)

DJ21, DU21
DU23 ~ DU25
DU27, DU28
HD20001000
MA-150

DU22, DU26
DU29
HD10004020
0A-91

DB01
HD20027080
RB-152

DB01
HD30022020
MAI130M

DX01 ~ DX06
DX11, DX12
HI10045030
SLP-256B

DX07 ~ DX10
HI10044030
SLP-156B

DX13
HI10046030
SLP-481C-50

DX14
HI10037030
SLP-981C-50

DX15
HI10038030
SLP-281F-50U

2SA733 — 2SC1317, 2SC1383, 2SC1845, 2SC2634

1. OUTPUT
2. GND
3. INPUT

NJM78M12A
NJM78M15A

TOP VIEW

NJM204300

TOP VIEW

TA7629P
TA7666P

SJ01-1~6	- REC~PB.	PB	
SU01-1	- DOLBY	OFF	
SU01-2	- TAPE SELECT NORMAL	ON	
SU01-3	- TAPE SELECT CrO2	OFF	
SU01-4	- TAPE SELECT METAL	OFF	
SB01	- POWER	OFF	
SQ71	- MOTOR MAIN	OFF	
SQ72	- MOTOR SUB	OFF	
SQ73	- PLAY	ON	
SQ74	- PAUSE	OFF	
SQ75	- F.F./REW	OFF	

NOTE ON SAFETY :
Symbol ⚠ Fire or electrical shock hazard. Only original parts should be used to replace any part marked with symbol ⚠. Any other component substitution (other than original type), may increase risk of fire or electrical shock hazard.

Components and wiring are subject to change for modification without notice.