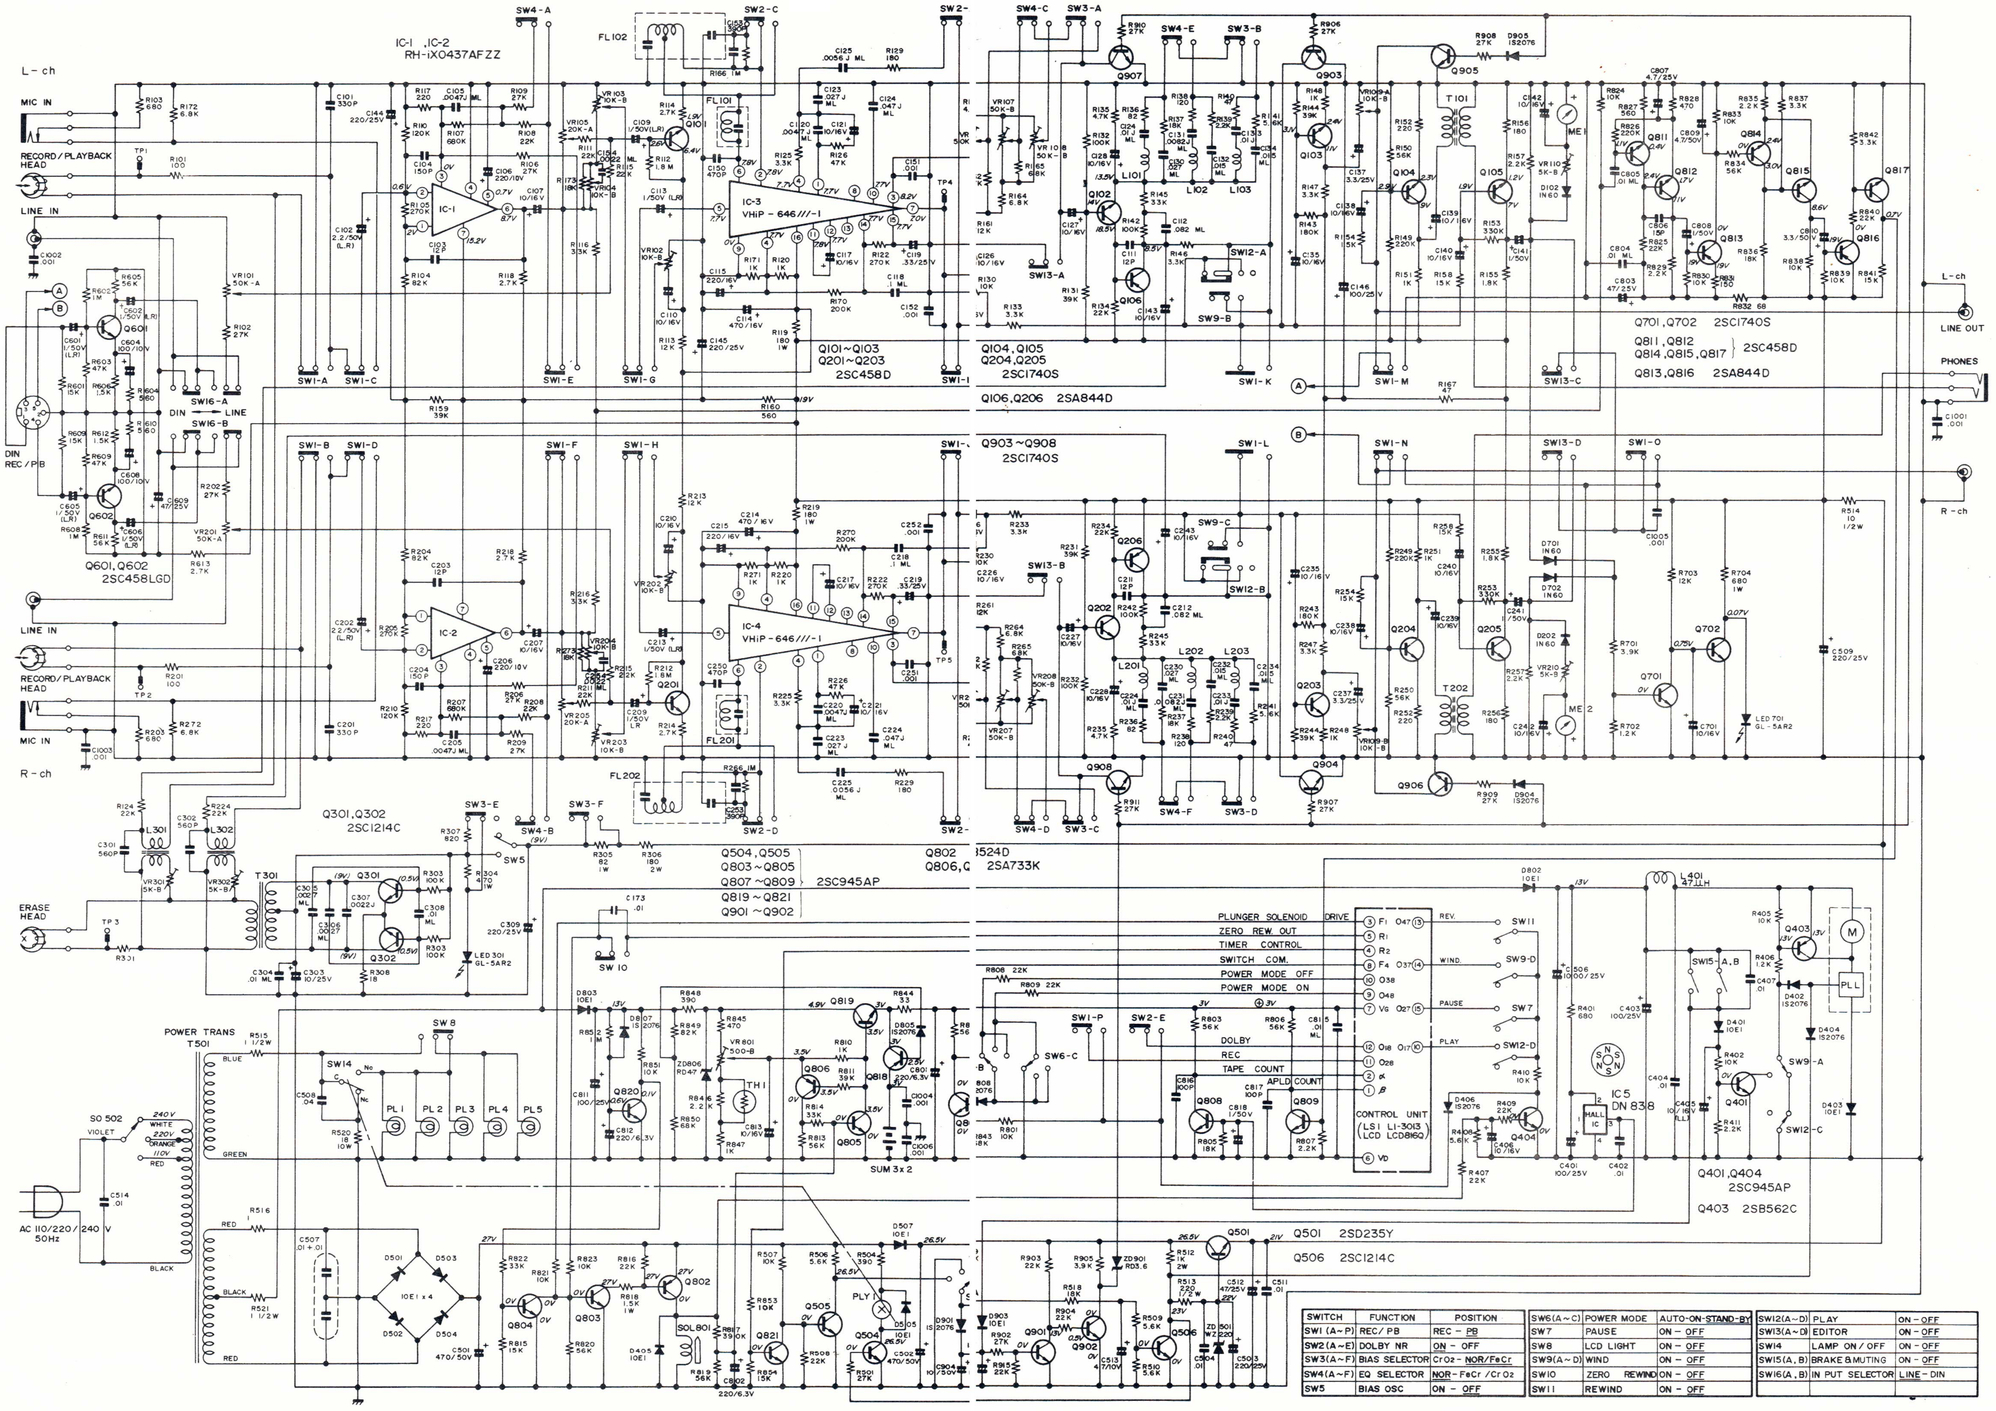

SWITCH	FUNCTION	POSITION
SW1 (A~P)	REC/PB	REC – PB
SW2 (A~E)	DOLBY NR	ON – OFF
SW3 (A~F)	BIAS SELECTOR	CrO2 – NOR/FeCr
SW4 (A~F)	EQ SELECTOR	NOR – FeCr / CrO2
SW5	BIAS OSC	ON – OFF

SW6 (A~C)	POWER MODE	AUTO-ON-STAND-BY
SW7	PAUSE	ON – OFF
SW8	LCD LIGHT	ON – OFF
SW9 (A~D)	WIND	ON – OFF
SW10	ZERO REWIND	ON – OFF
SW11	REWIND	ON – OFF

SW12 (A~D)	PLAY	ON – OFF
SW13 (A~D)	EDITOR	ON – OFF
SW14	LAMP ON / OFF	ON – OFF
SW15 (A, B)	BRAKE & MUTING	ON – OFF
SW16 (A, B)	IN PUT SELECTOR	LINE – DIN

● Specifications or wiring diagrams of this model are subject to change for the improvement without prior notice.

MODEL RT-3838HA,RT-3838HD

www.hifiengine.com