MODEL RT-7100H

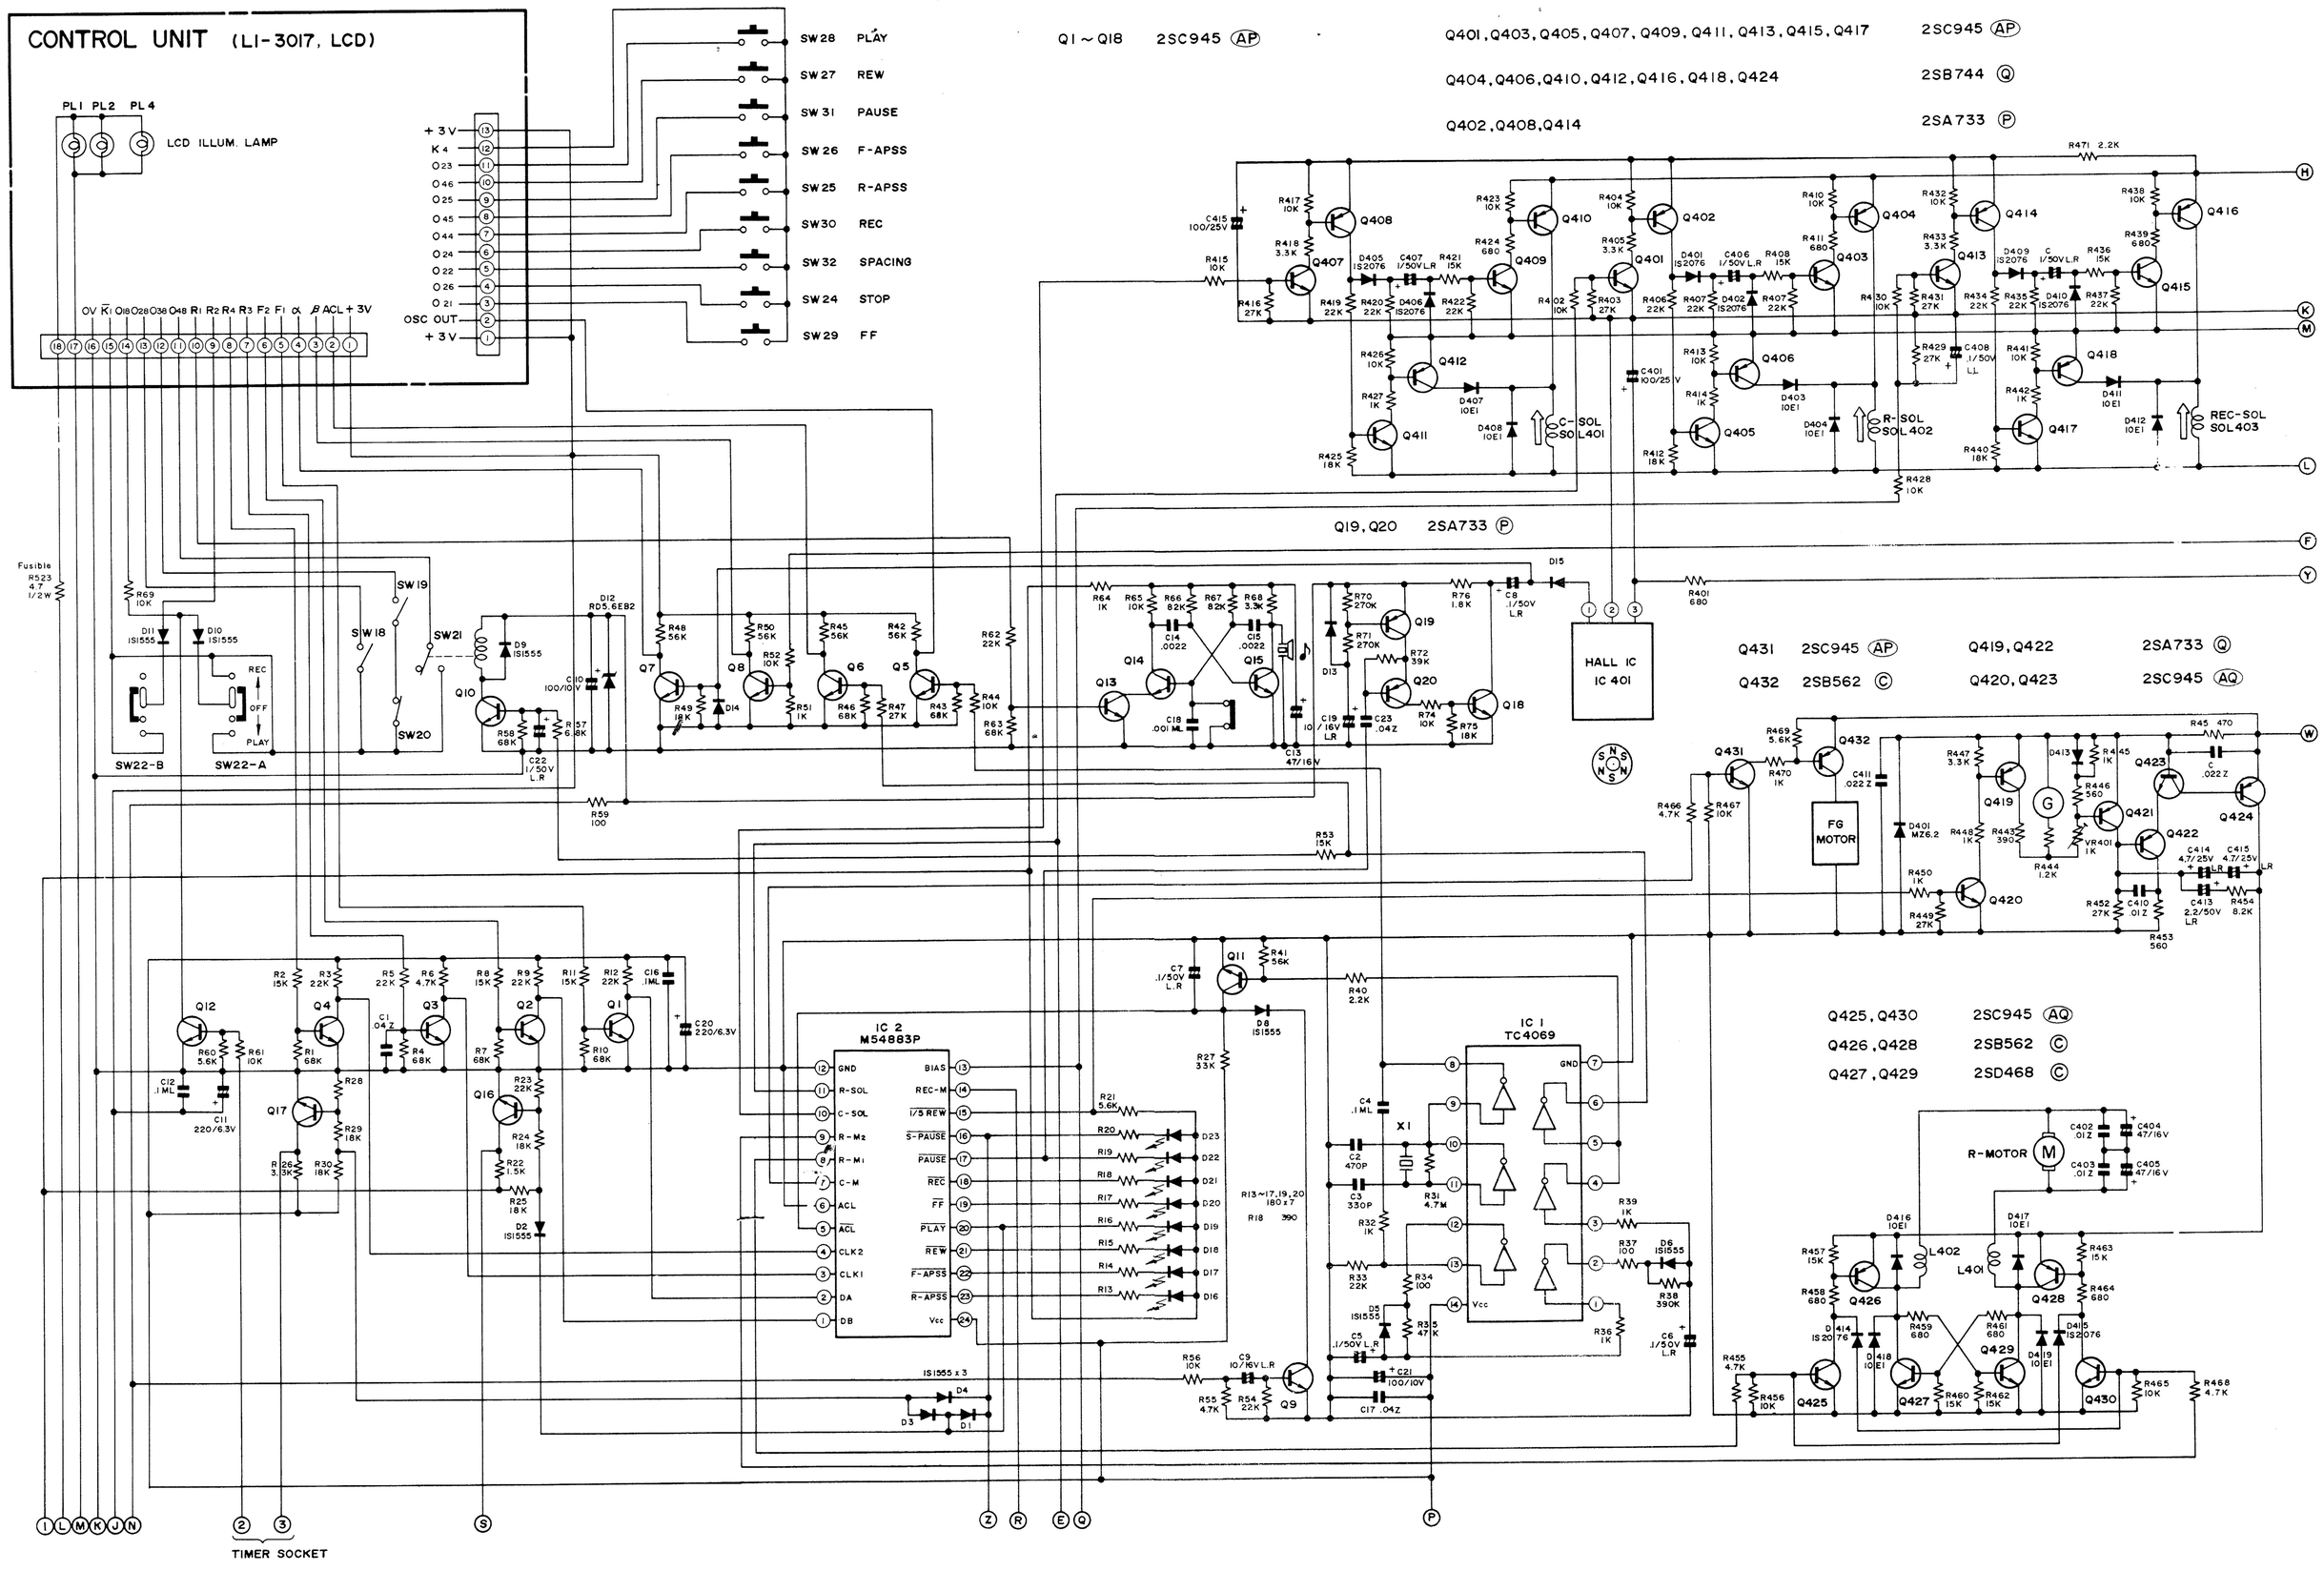

● Specifications or wiring diagrams of this model are subject to change for the improvement without prior notice.

www.hifiengine.com

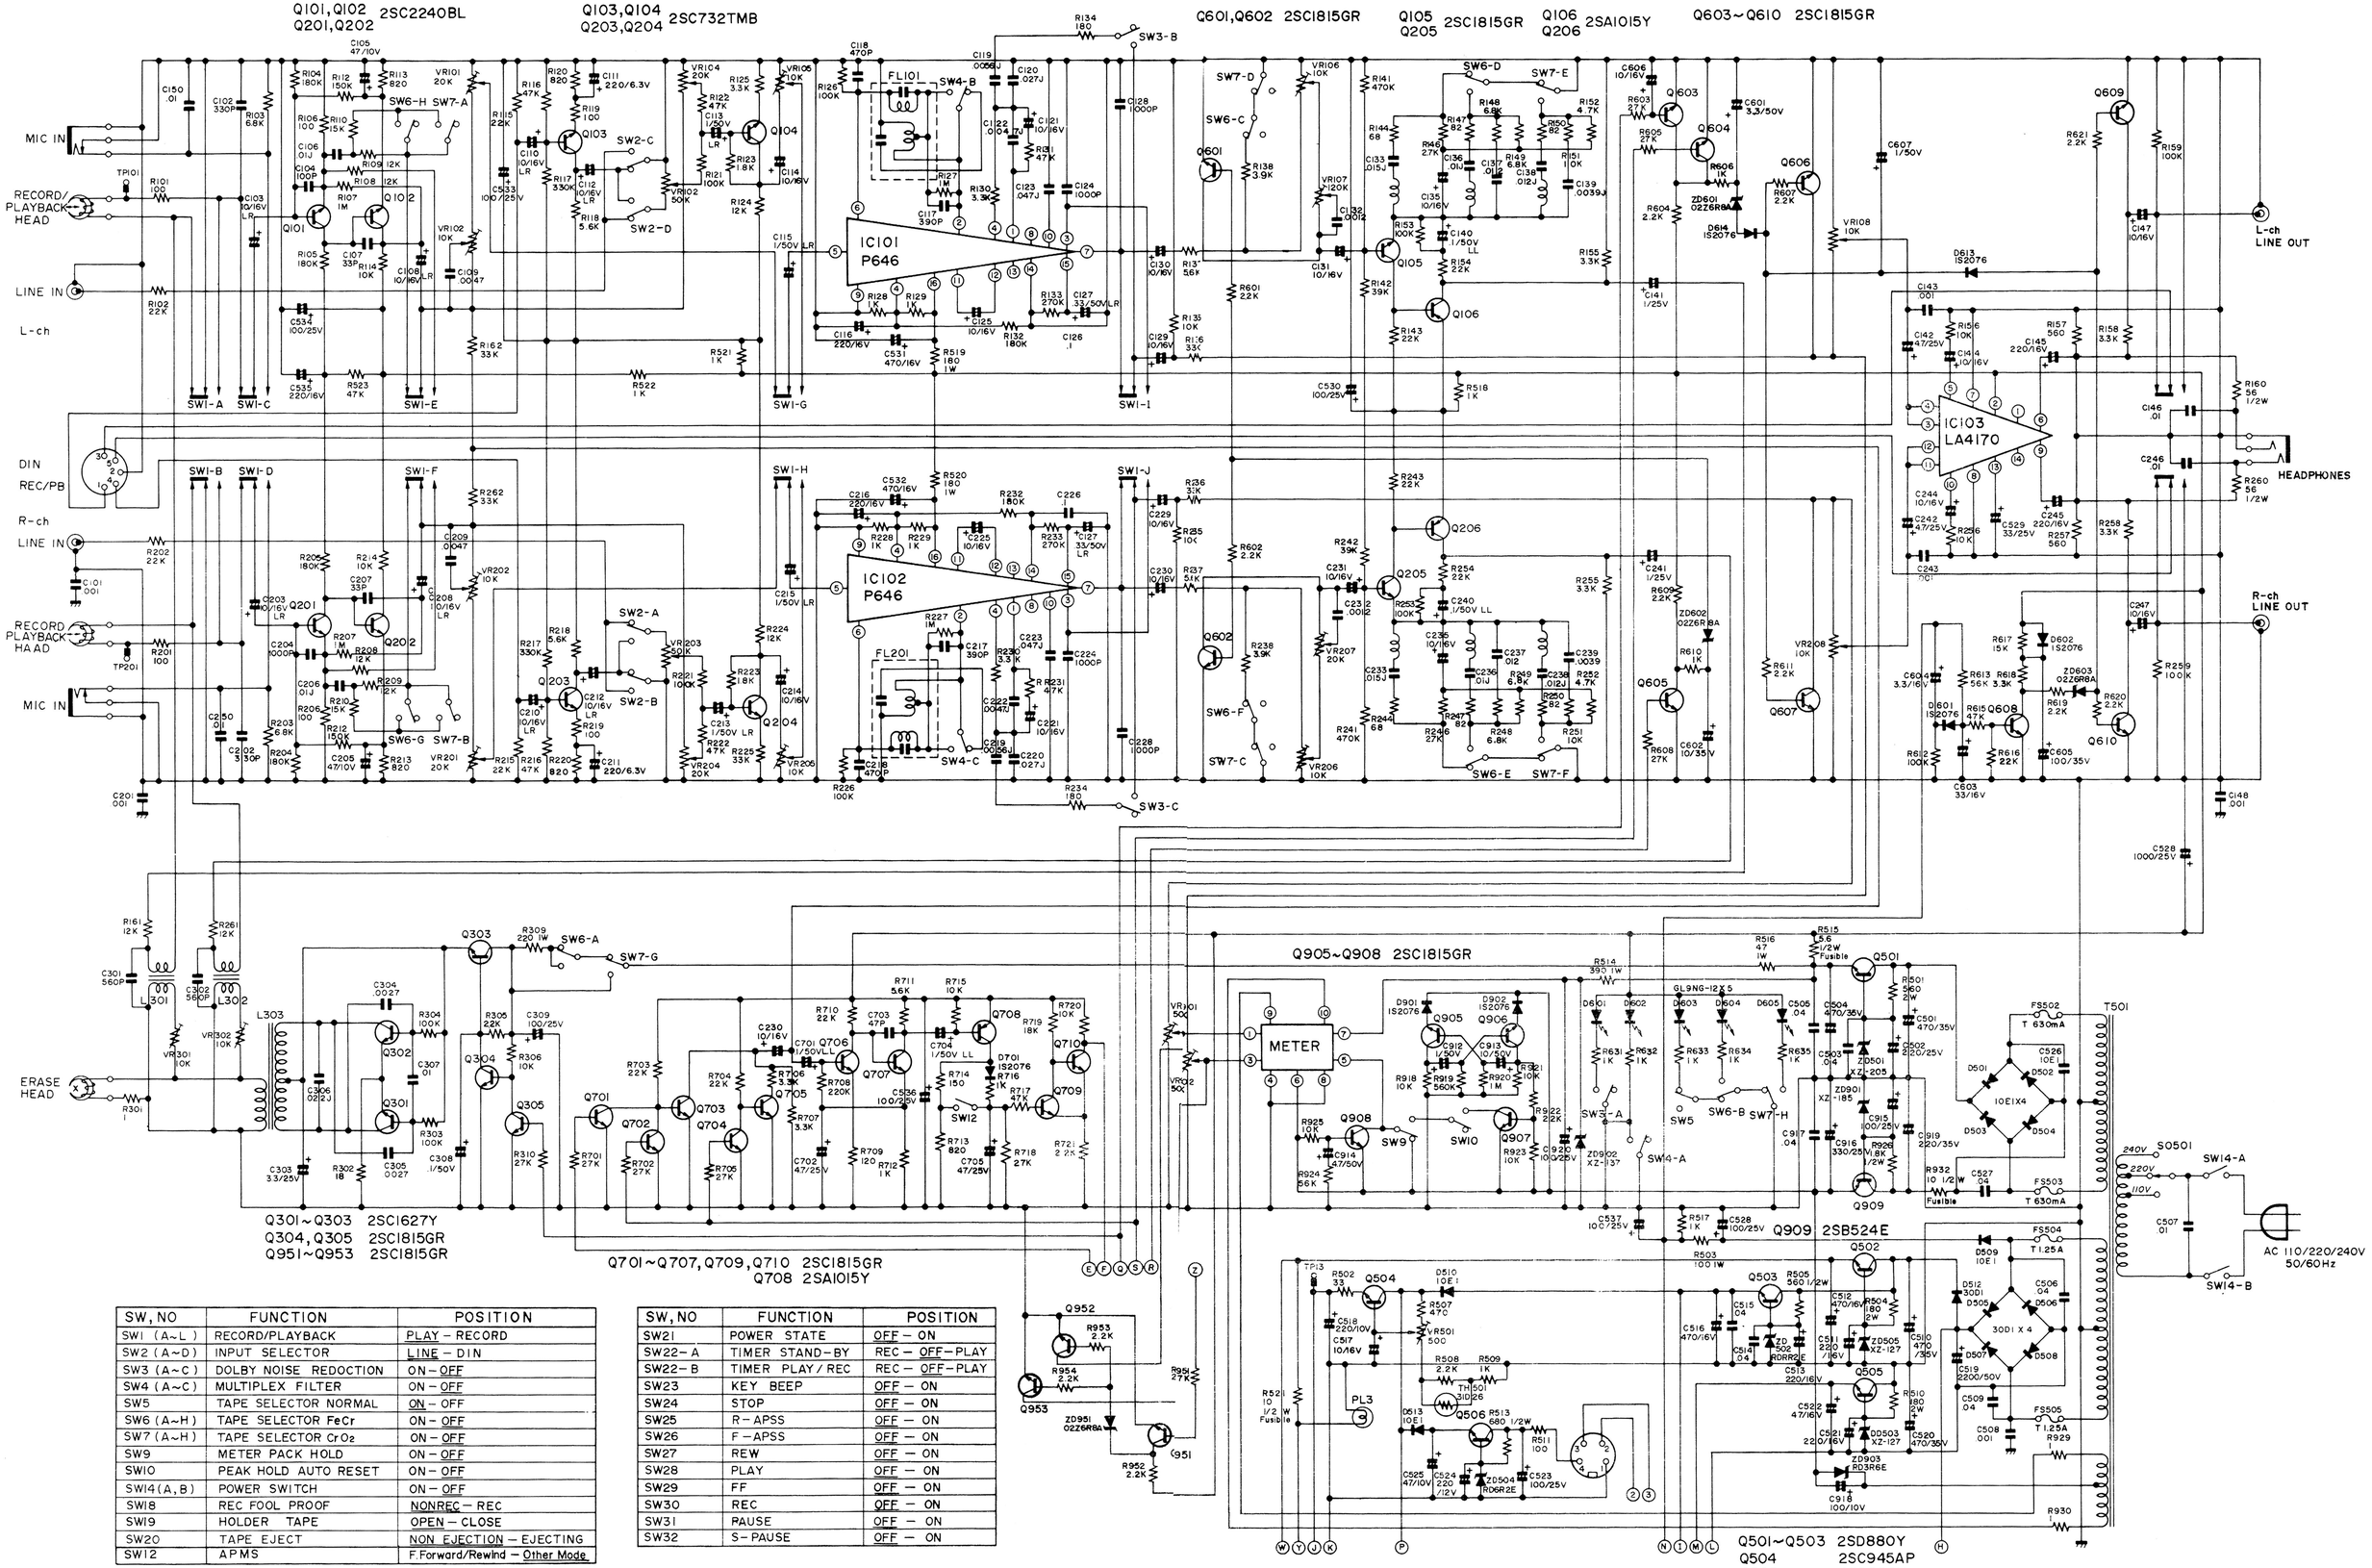

SW, NO	FUNCTION	POSITION
SW1 (A~L)	RECORD/PLAYBACK	PLAY – RECORD
SW2 (A~D)	INPUT SELECTOR	LINE – DIN
SW3 (A~C)	DOLBY NOISE REDOCTION	ON – OFF
SW4 (A~C)	MULTIPLEX FILTER	ON – OFF
SW5	TAPE SELECTOR NORMAL	ON – OFF
SW6 (A~H)	TAPE SELECTOR FeCr	ON – OFF
SW7 (A~H)	TAPE SELECTOR CrO_2	ON – OFF
SW9	METER PACK HOLD	ON – OFF
SW10	PEAK HOLD AUTO RESET	ON – OFF
SW14 (A, B)	POWER SWITCH	ON – OFF
SW18	REC FOOL PROOF	NONREC – REC
SW19	HOLDER TAPE	OPEN – CLOSE
SW20	TAPE EJECT	NON EJECTION – EJECTING
SW12	APMS	F.Forward/Rewind – Other Mode

SW, NO	FUNCTION	POSITION
SW21	POWER STATE	OFF – ON
SW22-A	TIMER STAND-BY	REC – OFF – PLAY
SW22-B	TIMER PLAY/REC	REC – OFF – PLAY
SW23	KEY BEEP	OFF – ON
SW24	STOP	OFF – ON
SW25	R-APSS	OFF – ON
SW26	F-APSS	OFF – ON
SW27	REW	OFF – ON
SW28	PLAY	OFF – ON
SW29	FF	OFF – ON
SW30	REC	OFF – ON
SW31	PAUSE	OFF – ON
SW32	S-PAUSE	OFF – ON

www.hifiengine.com